

Diagnostic List kubota_v5.04

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color.

| Vehicle menu | | | Function | | | | |
|--------------|--------------|----------|------------|-------------|-----------|-------------|------------------|
| Models | Engine Type | ECU Info | Read Codes | Erase Codes | Read Data | Active Test | Special Function |
| Kubota | KUBOTA_E3 | √ | √ | √ | √ | √ | √ |
| Kubota | KUBOTA_E4 | √ | - | - | - | - | √ |
| Kubota | DENSO_E3 | √ | √ | √ | - | - | √ |
| Kubota | DENSO_E4 | √ | √ | √ | - | - | √ |
| Kubota | BOSCHE_E3 | √ | - | - | - | - | √ |
| Kubota | BOSCHE_E4 | √ | - | - | - | - | √ |
| Kubota | BoschE415765 | √ | √ | √ | √ | √ | √ |
| Kubota | Bosch15765 | √ | √ | √ | √ | √ | √ |
| Kubota | 05Series | √ | √ | - | √ | √ | √ |