

Diagnostic List GREAT WALL MOTOR_v10.52

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color

Model Menu	System				Function						
					Read ECU information	Read DTC	Erase DTC	Live Data	Actuation Test	Read freeze frame	Remarks (Other functions)
Diesel system		GW 2.8TC_BOSCH common rail			√	√	√	√	-	-	Some self-identifying system has actuation test function
Diesel system		BOSCH Diesel engine EDC16C39		Bosch EDC16C39 engine system	√	√	√	√	√	-	Injector data
Diesel system		BOSCH Diesel engine EDC16C39		Bosch EDC16C39 read injector data		-	-	-	-	-	Injector data
Diesel system		GREAT WALL bosch-edc16 Diesel engine			-	√	√	√	√	-	Engine test,matching function
Diesel system		Bosch diesel electronic fuel injection system			-	√	√	√	√	-	Engine test
Diesel system		Changzhou diesel engine system(4L88 engine EGR			-	√	-	√	-	-	Read system parameter,calibration
Diesel system		Bosch V50 engine system			√	√	√	√	√	√	Engine test
General type				VE pump electronic control system	-	√	-	-	-	-	-
General type	Haval H3	Delphi MT20U2_EOBD electronic control system			√	√	√	√	√	√	Read historical fault code: Oxygen sensor feedback rationality diagnosis; idle catalytic converter diagnosis; CKP learning; fault code diagnosis test
General type	Haval H3	Bosch V50 engine system			√	√	√	√	√	√	Engine test, read freeze frame, write VIN, read fault code status data
General type	Haval H3	GREAT WALL bosch-edc16 Diesel engine			-	√	√	√	√	-	Engine test,matching function
General type	Haval H3	Delphi MT20U engine			-	√	√	√	√	-	System state, write VIN
General type	Haval H3	Liaoning Xinfeng electronic control system			√	√	√	√	-	√	Read freeze frame, write VIN, write injector code
General type	Haval H3	Bosch ABS system			√	√	√	√	√	-	Exhaust mode
General type	Haval H3	Jinzhou Jinheng Airbag			√	√	√	√	-	-	-
General type	Haval H3	BOSCH Airbag			√	√	√	√	-	-	-
General type	Haval H3	Continental Airbag			√	√	√	-	-	-	-
General type	Haval H3	TungThih Body control system			√	√	√	√	√	-	Network configuration; function configuration; system configuration
General type	Haval H3	Delphi Body control system			√	√	√	√	√	-	Network configuration; function configuration; system configuration
General type	Haval H3	Airbag(ABM)		TRW Airbag system	√	√	√	√	-	-	Read network configuration information; write network configuration information(manual); offline start
General type	Haval H3	Immobilizer(IMMO)		Delphi gasoline IMMO	-	√	√	√	-	-	User authorization code setting; anti-theft matching function
General type	Haval H3	Immobilizer(IMMO)		Delphi diesel(Bosch 2.8TC) IMMO	-	√	√	√	-	-	User authorization code setting; anti-theft matching function; read safty level; read engine VIN code
General type	GREAT WALL V80	Delphi MT20U2_EOBD electronic control system			√	√	√	√	√	√	Read historical fault code: read freeze frame data; Oxygen sensor feedback rationality diagnosis; idle catalytic converter diagnosis; CKP learning; fault code diagnosis test
General type	GREAT WALL V80	Delphi MT80 engine			√	√	√	√	√	√	write VIN; tooth learning; system configuration; Read freeze frame
General type	GREAT WALL V80	Anti-lock brake system		Bosch ABS	√	√	√	√	√	-	Exhaust mode
General type	GREAT WALL V80	Anti-lock brake system		Bosch ABS8 system(K)	√	√	√	√	√	√	Offline configuration, manual exhaust function
General type	GREAT WALL V80	Jinzhou Jinheng Airbag			√	√	√	√	-	-	-
General type	GREAT WALL V80	Hyundai Mobis_P4MFI_AT			√	√	√	√	√	-	-
General type	COWRY	Delphi MT20U2_EOBD electronic control			√	√	√	√	√	√	Read historical fault code: Oxygen sensor feedback rationality diagnosis; idle catalytic converter diagnosis; CKP learning; fault code diagnosis test
General type	COWRY	Delphi MT80 engine			√	√	√	√	√	√	write VIN; tooth learning; system configuration; Read freeze frame
General type	COWRY	Bosch ABS			√	√	√	√	√	-	Exhaust mode
General type	COWRY	Jinzhou Jinheng Airbag			√	√	√	√	-	-	-
General type	COWRY	Hyundai Mobis_P4MFI_AT			√	√	√	√	√	-	-
General type	COWRY, GREAT WALL V80	Anti-lock brake system		Bosch ABS8 system(K)	√	√	√	√	√	√	Read freeze frame; Offline configuration; manual exhaust function

Diagnostic List GREAT WALL MOTOR_v10.52

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color

Model Menu		System			Function						Remarks (Other functions)
					Read ECU information	Read DTC	Erase DTC	Live Data	Actuation Test	Read freeze frame	
General type	COWRY, GREAT WALL V80	IMMO		Delphi gasoline IMMO	-	√	√	√	-	-	User authorization code setting; anti-theft matching function
General type	COWRY, GREAT WALL V80	Hyundai Mobis_P4MFI_AT			√	√	√	√	√	-	-
General type	WEY	VV7c		Engine control unit(ECM)	√	√	√	√	√	√	write VIN; write network configuration information; OBD function; VVT self-learning; EBS battery ID flash
General type	WEY	VV7c		Body control system(BCM)	√	√	√	√	√	-	write VIN; write network configuration information; read final calibration parameters of the DDD fatigue driving algorithm; final calibration parameter adjustment of DDD fatigue driving algorithm; Read system configuration; write
General type	WEY	VV7c		Airbag module (ABM)	√	√	√	√	-	-	write VIN; write network configuration information; IMU static calibration; write loop configuration word
General type	WEY	VV7c		Instrument system(IP)	√	√	√	√	-	-	write VIN; write network configuration information; maintenance setting
General type	WEY	VV7c		Rear view camera(RVC)	√	√	√	√	-	-	write VIN; write network configuration information
General type	WEY	VV7c		Automatic Headlamp Leveling System(ALS)	√	√	√	√	-	-	write VIN; write network configuration information; Level zero calibration
General type	WEY	VV7c		Intelligent front camera(IFC)	√	√	√	√	-	-	write VIN; write network configuration information; IFV after-sale calibration; write calibration date
General type	WEY	VV7c		Navigation host system(HUT)	√	√	√	√	-	-	write VIN; write network configuration information
General type	WEY	VV7c		Seat memory module(DSM)	√	√	√	√	√	-	write VIN; write network configuration information
General type	WEY	VV7c		Trailer module(Trailer)	√	√	√	√	√	-	write VIN
General type	WEY	VV7c		Air conditioning control module(AC)	√	√	√	√	√	-	write VIN; write network configuration information; Stepper motor self-learning
General type	WEY	VV7c		Ambient light control module(motion) (ALCM)	√	√	√	√	-	-	write VIN; write network configuration information
General type	WEY	VV7c		Independent gateway(GW)	√	√	√	√	-	-	write VIN; write network configuration information
General type	WEY	VV7c		Transmission control unit(TCU)	√	√	√	√	-	-	write VIN; write network configuration information
General type	WEY	VV7c		Electronic stabilization program(ESP)	√	√	√	√	√	-	write VIN; write network configuration information; manual exhaust; yaw rate sensor calibration
General type	WEY	VV7c		Electric power steering system(EPS)	√	√	√	√	-	-	write VIN; write network configuration information; PDC initial torque clearing
General type	WEY	VV7c		Steering angle sensor(SAS)	√	√	√	√	-	-	write VIN; SAS calibration; SAS decalibration
General type	WEY	VV7c		Around view module(AVM)	√	√	√	√	-	-	write VIN; write network configuration information; offline calibration
General type	WEY	VV7c		Parallel line auxiliary side warning(RSDS)	√	√	√	√	-	-	write VIN; write network configuration information; after-sales calibration; read after-sale calibration result
General type	WEY	VV7c		Parallel line auxiliary side warning(RSDS)	√	√	√	√	-	-	write VIN; write network configuration information; after-sales calibration; read after-sale calibration result
General type	WEY	VV7c		Adaptive cruise control system(ACC)	√	√	√	√	-	-	write VIN; write network configuration information; after-sales calibration
General type	WEY	VV7c		Tire pressure monitoring system(TPMS)	√	√	√	√	-	-	write VIN; write network configuration information; tire pressure sensor ID learning; ABS delayed write
General type	WEY	VV7c		Parking assist system(PAS)	√	√	√	√	-	-	write VIN; write network configuration information
General type	WEY	VV7c		Automatic parking assist system(APA)	√	√	√	√	-	-	write VIN; write network configuration information
General type	WEY	VV7c		Driver side door module(DDCM)	√	√	√	√	-	-	write VIN; write network configuration information
General type	WEY	VV7c		Front passenger side door module(PDCM)	√	√	√	√	-	-	write VIN; write network configuration information
General type	WEY	VV7c		Seat ventilation heating massage signal converter(SCM)	√	√	√	√	-	-	write VIN; write network configuration information
General type	WEY	VV7c		KSTAR press key type PEPS system	√	√	√	√	√	-	After-sale function; Read network configuration information; write network configuration information(manual)
General type	WEY	VV7c		Internet of Vehicles host system(T-Box)	√	√	√	√	-	-	write VIN; write network configuration information
General type	WEY	VV7s		Engine control unit(ECM)	√	√	√	√	√	√	write VIN; write network configuration information; OBD function; VVT self-learning; EBS battery ID flash
General type	WEY	VV7s		Body control system(BCM)	√	√	√	√	√	-	write VIN; write network configuration information; read final calibration parameters of the DDD fatigue driving algorithm; final calibration parameter
General type	WEY	VV7s		Airbag module (ABM)	√	√	√	√	-	-	write VIN; write network configuration information; IMU static calibration; write loop configuration word

Diagnostic List GREAT WALL MOTOR_v10.52

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color

Model Menu		System		Function							Remarks (Other functions)
				Read ECU information	Read DTC	Erase DTC	Live Data	Actuation Test	Read freeze frame		
General type	WEY	VV7s		Instrument system(IP)	√	√	√	√	-	-	write VIN; write network configuration information; maintenance setting
General type	WEY	VV7s		Rear view camera(RVC)	√	√	√	√	-	-	write VIN; write network configuration information
General type	WEY	VV7s		Automatic Headlamp Leveling System(ALS)	√	√	√	√	-	-	write VIN; write network configuration information; Level zero calibration
General type	WEY	VV7s		Intelligent front camera(IFC)	√	√	√	√	-	-	write VIN; write network configuration information; IFV after-sale calibration; write calibration date
General type	WEY	VV7s		Navigation host system(HUT)	√	√	√	√	-	-	write VIN; write network configuration information
General type	WEY	VV7s		Seat memory module (DSM)	√	√	√	√	√	-	write VIN; write network configuration information
General type	WEY	VV7s		Trailer module(Trailer)	√	√	√	√	√	-	write VIN
General type	WEY	VV7s		Air conditioning control module(AC)	√	√	√	√	√	-	write VIN; write network configuration information; Stepper motor self-learning
General type	WEY	VV7s		Ambient light control module(motion) (ALCM)	√	√	√	√	-	-	write VIN; write network configuration information
General type	WEY	VV7s		Independent gateway(GW)	√	√	√	√	-	-	write VIN; write network configuration information
General type	WEY	VV7s		Transmission control unit(TCU)	√	√	√	√	-	-	write VIN; write network configuration information
General type	WEY	VV7s		Electronic stabilization program(ESP)	√	√	√	√	√	-	write VIN; write network configuration information; manual exhaust; yaw rate sensor calibration
General type	WEY	VV7s		Electric power steering system(EPS)	√	√	√	√	-	-	write VIN; write network configuration information; PDC initial torque clearing
General type	WEY	VV7s		Steering angle sensor(SAS)	√	√	√	√	-	-	write VIN; SAS calibration; SAS decalibration
General type	WEY	VV7s		Around view module(AVM)	√	√	√	√	-	-	write VIN; write network configuration information; offline calibration
General type	WEY	VV7s		Parallel line auxiliary side warning(RSDS)	√	√	√	√	-	-	write VIN; write network configuration information; after-sales calibration; read after-sale calibration result
General type	WEY	VV7s		Parallel line auxiliary side warning(RSDS)	√	√	√	√	-	-	write VIN; write network configuration information; after-sales calibration; read after-sale calibration result
General type	WEY	VV7s		Adaptive cruise control system(ACC)	√	√	√	√	-	-	write VIN; write network configuration information; after-sales calibration
General type	WEY	VV7s		Tire pressure monitoring system(TPMS)	√	√	√	√	-	-	write VIN; write network configuration information; tire pressure sensor ID learning; ABS delayed write
General type	WEY	VV7s		Parking assist system(PAS)	√	√	√	√	-	-	write VIN; write network configuration information
General type	WEY	VV7s		Automatic parking assist system(APA)	√	√	√	√	-	-	write VIN; write network configuration information
General type	WEY	VV7s		Driver side door module(DDCM)	√	√	√	√	-	-	write VIN; write network configuration information
General type	WEY	VV7s		Front passenger side door module(PDCM)	√	√	√	√	-	-	write VIN; write network configuration information
General type	WEY	VV7s		Seat ventilation heating massage signal converter(SCM)	√	√	√	√	-	-	write VIN; write network configuration information
General type	WEY	VV7s		KSTAR press key type PEPS system	√	√	√	√	√	-	After-sale function; Read network configuration information; write network configuration information(manual)
General type	WEY	VV7s		Internet of Vehicles host system(T-Box)	√	√	√	√	-	-	write VIN; write network configuration information
General type	Wingle	Delphi MT20U2_EOBD electronic control			√	√	√	√	√	√	Oxygen sensor feedback rationality diagnosis; idle catalytic converter diagnosis; CKP learning; fault code diagnosis test
General type	Wingle	Bosch V50 engine system			√	√	√	√	√	√	Engine test
General type	Wingle	UAES Euro IV engine system			√	√	√	√	√	√	-
General type	Wingle	4D20 Delphi electronic control system			√	√	√	√	√	-	Injector code; Network configuration information
General type	Wingle	Liaoning Xinfeng electronic control system			√	√	√	√	-	√	-
General type	Wingle	Bosch ABS			√	√	√	√	√	-	Exhaust mode
General type	Wingle	Jinzhou Jinheng Airbag			√	√	√	√	-	-	-
General type	Wingle	VE pump electronic			-	√	-	-	-	-	-

Diagnostic List GREAT WALL MOTOR_v10.52

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color

Model Menu		System			Function						
					Read ECU information	Read DTC	Erase DTC	Live Data	Actuation Test	Read freeze frame	Remarks (Other functions)
General type	Wingle	2.8TC Bosch(EDC17C63) electronic control			√	√	√	√	√	-	read fault code status data;Read and write VIN;IQA match;Read IQA code
General type	Wingle	Bosch ABS system(CAN)			√	√	√	√	√	-	steering sensor calibration(only for ESP);Read network configuration information;yaw angle sensor calibration(only for ESP)write network configuration information(only for ESP)exhaust function
General type	Wingle	49l Airbag system			√	√	√	√	√	-	-
General type	Wingle	Delphi gasoline IMMO			-	√	√	√	-	-	User authorization code setting;anti-theft matching function
General type	Wingle	Delphi diesel(Bosch 2.8TC) IMMO			-	√	√	√	-	-	User authorization code setting;anti-theft matching function;read safty level;read engine VIN code
General type	Wingle	Delphi diesel(Delphi 4D20) IMMO			√	√	-	√	-	-	-
General type	Wingle	Delphi diesel(Bosch 4D20) IMMO			√	√	-	√	-	-	-
General type	Wingle	Delphi gasoline IMMO(UAES)			-	√	√	√	-	-	User authorization code setting;anti-theft matching function
General type	Wingle	Delphi IMMO Bosch(EDC17C63) IMMO			-	√	√	√	-	-	User authorization code setting;anti-theft matching function;read safty level;read engine VIN code
General type	FLORID, Haval M4	UAES ME797 eobd engine system			√	√	√	√	√	√	System state
General type	FLORID, Haval M4	Siemens engine system			√	√	√	√	√	√	System state; start anti-theft
General type	FLORID, Haval M4	Bosch ABS			√	√	√	√	√	-	Exhaust mode
General type	FLORID, Haval M4	TIANHE ABS system			√	√	√	√	√	-	-
General type	FLORID, GREAT WALL M4	Bosch ABS(ESP) system(CAN)			√	√	√	√	√	-	steering sensor calibration(only for ESP);Read network configuration information;write network configuration information(manual);exhaust function;longitudinal acceleration calibration(only for ESP);yaw angle sensor
General type	FLORID, GREAT WALL M4	UAES engine(ME788)			√	√	√	√	√	-	Read network configuration information; write network configuration information
General type	FLORID, GREAT WALL M4	Body control system(BCM)			√	√	√	√	√	-	write VIN; write TSN code; TCU reset
General type	FLORID, GREAT WALL M4	GETRAG AMT transmission(UAES)			√	√	√	√	-	-	write VIN; write TSN code; TCU reset
General type	FLORID, Haval M4	Airbag system	AUTOLIV Airbag		√	√	√	√	-	-	ECU module lock
General type	FLORID, Haval M4	Airbag system	AUTOLIV Airbag-CH041		√	√	√	√	-	-	-
General type	FLORID, Haval M4	Tansmission system	Bunge_VT2_CVT system		√	√	√	√	-	-	-
General type	FLORID, Haval M4	Tansmission system	Automatic transmission system(AMT)		√	√	√	√	-	√	Clutch disengaged, Clutch engaged, engage neutral gear, engage R gear, engage 1st gear, engage 2nd gear, engage 3rd gear, engage 4th gear, engage 5th gear, gear engagement cycle, gear selection cycle
General type	FLORID, Haval M4	Tansmission system	TCU(Transmission system)		√	√	√	√	√	-	write VIN, write TSN code, TCU reset
General type	FLORID, Haval M4	IMMO			√	√	√	√	√	-	Special function
General type	COOLBEAR, Haval M2	UAES ME797 eobd engine system			√	√	√	√	√	√	System state
General type	COOLBEAR, Haval M2	Bosch ABS			√	√	√	√	√	-	Exhaust mode
General type	COOLBEAR, Haval M2	TIANHE ABS system			√	√	√	√	√	-	-
General type	COOLBEAR, Haval M2	Airbag system	AUTOLIV Airbag		√	√	√	√	-	-	ECU module lock
General type	COOLBEAR, Haval M2	Airbag system	AUTOLIV Airbag-CH041		√	√	√	√	-	-	-
General type	COOLBEAR, Haval M2	Tansmission system	Bunge_VT2_CVT system		√	√	√	√	-	-	-
General type	GREAT WALL C20R	UAES ME797 eobd engine system			√	√	√	√	√	√	System state
General type	GREAT WALL C20R	Siemens engine system			√	√	√	√	√	√	start anti-theft
General type	GREAT WALL C20R	Bosch ABS			√	√	√	√	√	-	Exhaust mode
General type	GREAT WALL C20R	TIANHE ABS system			√	√	√	√	√	-	-

Diagnostic List GREAT WALL MOTOR_v10.52

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color

Model Menu		System				Function						Remarks (Other functions)
						Read ECU information	Read DTC	Erase DTC	Live Data	Actuation Test	Read freeze frame	
General type	GREAT WALL C20R	AUTOLIV Airbag				√	√	√	√	-	-	ECU module lock
General type	GREAT WALL C20R	Bunge_VT2_CVT system				√	√	√	√	-	-	-
General type	GREAT WALL C20R	YUBEI EPS system				-	√	√	-	-	-	-
General type	Great Wall C10	UAES ME797 eobd engine system				√	√	√	√	√	√	System state
General type	Great Wall C10	Siemens engine system				√	√	√	√	√	√	start anti-theft
General type	Great Wall C10	Bosch ABS				√	√	√	√	√	-	Exhaust mode
General type	Great Wall C10	TIANHE ABS system				√	√	√	√	√	-	-
General type	Great Wall C10	AUTOLIV Airbag				√	√	√	√	-	-	ECU module lock
General type	Great Wall C10	Bunge_VT2_CVT system				√	√	√	√	-	-	-
General type	Great Wall C10	YUBEI EPS system				-	√	√	-	-	-	-
General type	GREAT WALL C30	UAES ME797				√	√	√	√	√	√	System state
General type	GREAT WALL C30	Siemens engine system				√	√	√	√	√	√	start anti-theft
General type	GREAT WALL C30	UAES start-stop engine system				√	√	√	√	√	√	Automatic shutdown conditions disable, read number of start-stop, read EBS information, write battery ID number, clear motor start times, battery power
General type	GREAT WALL C30	UAES engine (CAN)				√	√	√	√	√	-	Read network configuration information; write network configuration information
General type	GREAT WALL C30	UAES engine(New Version)				√	√	√	√	√	-	Read network configuration information; write network configuration information
General type	GREAT WALL C30	Bosch ABS				√	√	√	√	√	-	Exhaust mode
General type	GREAT WALL C30	Bosch ABS8 system(K)				√	√	√	√	-	-	-
General type	GREAT WALL C30	Bosch ABS (ESP) system (CAN)				√	√	√	√	√	-	Read network configuration information; write network configuration information; steering sensor calibration; longitudinal acceleration calibration; yaw angle sensor calibration
General type	GREAT WALL C30	AUTOLIV Airbag-CHO41				√	√	√	√	-	-	Write VIN; write Airbag part number; write Airbag information 1, 2 and 3; write configuration information
General type	GREAT WALL C30	TIANHE ABS system				√	√	√	√	√	-	-
General type	GREAT WALL C30	Bunge_VT2_CVT system				√	√	√	√	-	-	-
General type	GREAT WALL C30	Instrument system	Delco			√	√	√	-	-	-	Read network configuration information; write network configuration information
General type	GREAT WALL C30	Instrument system	SICC			√	√	√	√	√	-	Read network configuration information; write network configuration information
General type	GREAT WALL C30	IMMO				√	√	√	√	-	-	Safe operation, key matching
General type	Haval H4	ECM(engine system)	engine system(4B13)			√	√	√	√	√	√	write VIN, write network configuration information, OBD function, VVT self-learning
General type	Haval H4	ECM(engine system)	engine system(4C20)			-	√	√	√	√	-	write VIN, CKP learning
General type	Haval H4	ECM(engine system)	engine system(4B15)			√	√	√	√	√	√	write VIN, write network configuration information, OBD function, VVT self-learning
General type	Haval H4	ABM (Airbag system)				√	√	√	√	-	-	write VIN, write network configuration information
General type	Haval H4	BCM (Body control system)				√	√	√	√	√	-	write VIN, write network configuration information, read final calibration parameters of the DDD fatigue driving algorithm, write final calibration parameter adjustment of DDD fatigue driving algorithm, Read system configuration, write system configuration, power tailgate self-learning
General type	Haval H4	HUT(Navigation host system)				√	√	√	√	-	-	write VIN, write network configuration
General type	Haval H4	GW(Gateway)				√	√	√	√	-	-	write VIN, write network configuration information
General type	Haval H4	AC(A/C control system)				√	√	√	√	√	-	Writing function, write network configuration information
General type	Haval H4	AVM(Around View Module)				-	√	√	√	-	-	write VIN, write network configuration information
General type	Haval H4	EPS(Electric power steering system)				√	√	√	√	-	-	Writing function, EPS component calibration, write network configuration information

Diagnostic List GREAT WALL MOTOR_v10.52

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color

Model Menu		System				Function							
						Read ECU information	Read DTC	Erase DTC	Live Data	Actuation Test	Read freeze frame	Remarks (Other functions)	
General type	Haval H4	ESCL(Electronic steering column lock)				√	√	√	√	-	-	Writing function, write network configuration information	
General type	Haval H4	ESP(Electronic stabilization program)				√	√	√	√	√	-	write VIN, write network configuration information, manual exhaust, yaw rate sensor calibration	
General type	Haval H4	IFC(Intelligence front camera control module)				√	√	√	√	-	-	write VIN, write network configuration information, IFV after-sale calibration, write calibration date	
General type	Haval H4	IP(Instrument system)		IP(full color instrument system)		√	√	√	√	√	-	write VIN, write network configuration information, maintenance setting	
General type	Haval H4	IP(Instrument system)		Non-full color instrument system(IP)		√	√	√	√	√	-	write VIN, write network configuration information, maintenance setting	
General type	Haval H4	PAS(Parking assist system)				√	√	√	√	-	-	write VIN, write network configuration information	
General type	Haval H4	PEPS(Passive entry passive start system)				√	√	√	√	-	-	write VIN, write network configuration information	
General type	Haval H4	RSDS(Parallel line assisted reverse side warning)		left radar detection system (RSDS_L)		√	√	√	√	-	-	write VIN, write network configuration information, after-sales calibration	
General type	Haval H4	RSDS(Parallel line assisted reverse side warning)		right radar detection system(RSDS_R)		√	√	√	√	-	-	write VIN, write network configuration information, after-sales calibration	
General type	Haval H4	RVC(Rear-view camera)				√	√	√	√	-	-	write VIN, write network configuration information	
General type	Haval H4	SAS(Steering angle sensor)				√	√	√	√	-	-	Writing function, SAS (steering angle calibration)	
General type	Haval H4	SBWM(Electronic shifter)				√	√	√	√	-	-	write VIN	
General type	Haval H4	SHM(Seat heating module)				√	√	√	√	-	-	write VIN	
General type	Haval H4	T-BOX(Internet of Vehicles host system)				√	√	√	√	-	-	write VIN, write network configuration information	
General type	Haval H4	Trailer Module (Trailer module)				√	√	√	√	√	-	write VIN	
General type	Haval H5	4D20 Delphi electronic control system				√	√	√	√	√	-	Injector code; Network configuration information	
General type	Haval H5	Delphi MT20U2_EOBD electronic control				√	√	√	√	√	√	Read historical fault code; Oxygen sensor feedback rationality diagnosis; idle catalytic converter diagnosis; CKP learning; fault code diagnosis test	
General type	Haval H5	Bosch V50 engine system				√	√	√	√	√	√	Engine test	
General type	Haval H5	4D20 Bosch diesel engine system				√	√	√	√	√	-	Injector code; Network configuration information	
General type	Haval H5	4G63T engine system				√	√	√	√	√	-	Routine control	
General type	Haval H5	Bosch ABS (CAN network)				√	√	√	√	√	-	steering sensor calibration, Network configuration information	
General type	Haval H5	Bosch ABS				√	√	√	√	√	-	Exhaust mode	
General type	Haval H5	Bosch ABS9 ESP system				√	√	√	√	√	-	steering sensor calibration, Network configuration information, longitudinal	
General type	Haval H5	Bosch Airbag (CAN)				√	√	√	√	-	-	Network configuration information	
General type	Haval H5	BOSCH Airbag				√	√	√	√	-	-	-	
General type	Haval H5	Continental Airbag				√	√	√	√	-	-	-	
General type	Haval H5	TRW Airbag system				√	√	√	√	-	-	Read network configuration information; write network configuration	
General type	Haval H5	Delphi Body control				√	√	√	√	√	-	Network configuration; function configuration; system configuration	
General type	Haval H5	Delphi Body control system (CAN network)				√	√	√	√	√	-	Network configuration information; system configuration	
General type	Haval H5	TungThih Body control				√	√	√	√	√	-	Network configuration; function configuration; system configuration	
General type	Haval H5	Continental Instrument				√	√	√	√	√	-	Network configuration information	
General type	Haval H5	Hyundai Mobis_PAMFI_AT				√	√	√	√	√	-	-	
General type	Haval H5	BorgWarner TOD system(Intelligent 4-				√	√	√	√	√	-	-	
General type	Haval H5	Delphi gasoline(4G63 MT20) IMMO					√	√	√	√	-	-	Authorization code setting; enter user authorization code
General type	Haval H5	Delphi gasoline(4G63T MT80) IMMO					√	√	√	√	-	-	Authorization code setting, enter user authorization code
General type	Haval H5	Delphi diesel(Bosch 2.8TC) IMMO				-	√	√	√	-	-	User authorization code setting	
General type	Haval H5	Delphi diesel(Delphi 4D20) IMMO				√	√	√	√	-	-	Authorization code setting, enter user authorization code, matching function	
General type	Haval H5	Delphi diesel(Bosch 4D20) IMMO				√	√	√	√	-	-	Authorization code setting; enter user authorization code, matching function	

Diagnostic List GREAT WALL MOTOR_v10.52

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color

Model Menu		System			Function						Remarks (Other functions)
					Read ECU information	Read DTC	Erase DTC	Live Data	Actuation Test	Read freeze frame	
General type	Haval H5 Classic Version	engine system(ECM)		4G63T engine system	√	√	√	√	√	-	write VIN, write maintenance station code, write flash date, Write vehicle network configuration, CKP learning, IUPR function
General type	Haval H5 Classic Version	engine system(ECM)		4D20 Bosch diesel engine system	√	√	√	√	√	√	Read network configuration information, write network configuration information(manual), write network configuration information(automatic), EGR
General type	Haval H5 Classic Version	engine system(ECM)		4D20 Delphi Euro V engine system	√	√	√	√	√	-	DPF(Diesel Particulate Filter), EGR clear self-learning, IUPR function, write injector code, write VIN, Routine control, write injector code, write network configuration information(manual), write network configuration information(automatic), OBD diagnostic function
General type	Haval H5 Classic Version	Electronic stability system			√	√	√	√	√	-	stamping status of the hydraulic module, offline test state, steering angle sensor calibration:(for ESP), vehicle network configuration, longitudinal acceleration calibration(for ESP)
General type	Haval H5 Classic Version	Body control module			√	√	√	√	√	-	write VIN, write system configuration word#1, write system configuration word#2, Write vehicle network configuration, key learning
General type	Haval H5 Classic Version	Tire pressure monitoring system			√	√	√	√	-	-	Tire pressure learning, Writing function
General type	Haval H5 Classic Version	Instrument system			√	√	√	√	√	-	Write vehicle network configuration
General type	Haval H5 Classic Version	Rear-view camera system			√	√	√	√	-	-	Writing function
General type	Haval H5 Classic Version	Intelligent 4-wheel drive system			√	√	√	√	√	-	Writing function
General type	Haval H5 Classic Version	BorgWarner 4WD system			√	√	√	√	√	-	Writing function
General type	Haval H5 Classic Version	ABM(Airbag system)		TRW Airbag system	√	√	√	√	-	-	Read network configuration information, write network configuration information(manual)
General type	Haval H5 Classic Version	IMMO		Delphi gasoline(4G63T MT80) IMMO	-	√	√	√	-	-	User authorization code setting, anti-theft matching function
General type	Haval H5 Classic Version	IMMO		Delphi diesel(Bosch 4D20) IMMO	√	√	-	√	-	-	Enter codes, matching function
General	DEER series	MM single point engine			-	√	√	√	-	-	Perform component control
General	DEER series	Delphi engine system			√	√	√	√	√	-	System state
General	DEER series	UAES electronic control			-	√	√	-	-	-	System parameters; self-adjusting parameter adjustment; system reset
General	DEER series	UAES II electronic			√	√	√	√	√	-	System state
General	DEER series	Delphi MT20U engine			-	√	√	√	√	-	System state
General	DEER series	4L88 engine EGR system			-	√	-	√	-	-	Read system parameter; calibration
General type	DEER series	GREAT WALL bosch-edc16 Diesel engine			-	√	√	√	-	-	Component test; Engine test; matching function
General	DEER series	Bosch V50 engine system			√	√	√	√	√	√	Engine test
General	DEER series	JM491Q-ME			-	√	√	√	√	-	-
General	DEER series	491Q (BOSCH M154)			-	√	√	-	-	-	System parameters; self-adjusting parameter adjustment; system reset
General	DEER series	Delphi MT80 engine			√	√	√	√	√	√	write VIN; tooth learning; system configuration
General	DEER series	UAES Euro IV engine			√	√	√	√	√	√	-
General type	DEER series	AEROSPACE MITSUBISHI system-Delphi Euro III			√	√	√	√	-	-	System state; static actuation test; dynamic actuation test
General	DEER series	Liaoning Xinfeng			√	√	√	√	-	√	-
General type	DEER series	Delphi MT20U2_EOBD electronic control			√	√	√	√	√	√	Read historical fault code; Oxygen sensor feedback rationality diagnosis; idle catalytic converter diagnosis; CKP learning; fault code diagnosis test
General	SAILOR	MM single point engine			-	√	√	√	-	-	Perform component control
General	SAILOR	Delphi engine system			√	√	√	√	√	-	System state
General	SAILOR	UAES electronic control			-	√	√	-	-	-	System parameters; self-adjusting parameter adjustment; system reset
General	SAILOR	UAES II electronic			√	√	√	√	√	-	System state
General	SAILOR	Delphi MT20U engine			-	√	√	√	√	-	System state
General	SAILOR	4L88 engine EGR system			-	√	-	√	-	-	Read system parameter; calibration

Diagnostic List GREAT WALL MOTOR_v10.52

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color

Model Menu		System				Function						
						Read ECU information	Read DTC	Erase DTC	Live Data	Actuation Test	Read freeze frame	Remarks (Other functions)
General type	SAILOR	GREAT WALL bosch-edc16 Diesel engine				-	√	√	√	-	-	Component test; Engine test; matching function
General	SAILOR	Bosch V50 engine system				√	√	√	√	√	√	Engine test
General	SAILOR	JM491Q-ME				-	√	√	√	√	-	-
General	SAILOR	491Q (BOSCH M154)				-	√	√	-	-	-	System parameters; self-adjusting parameter adjustment; system reset
General	SAILOR	Delphi MT80 engine				√	√	√	√	√	√	write VIN; tooth learning; system configuration
General	SAILOR	UAES Euro IV engine				√	√	√	√	√	√	-
General type	SAILOR	AEROSPACE MITSUBISHI system-Delphi Euro III				√	√	√	√	-	-	System state; static actuation test; dynamic actuation test
General	SAILOR	Liaoning Xinfeng				√	√	√	√	-	√	-
General type	SAILOR	Delphi MT20U2_EOBD electronic control system				√	√	√	√	√	√	Read historical fault code; Oxygen sensor feedback rationality diagnosis; idle catalytic converter diagnosis; CKP learning; fault code diagnosis test
General	SAFE	MM single point engine				-	√	√	√	-	-	Perform component control
General	SAFE	Delphi engine system				√	√	√	√	√	-	System state
General	SAFE	UAES electronic control				-	√	√	-	-	-	System parameters; self-adjusting parameter adjustment; system reset
General	SAFE	UAES II electronic				√	√	√	√	√	-	System state
General	SAFE	Delphi MT20U engine				-	√	√	√	√	-	System state
General	SAFE	4L88 engine EGR system				-	√	-	√	-	-	Read system parameter; calibration
General type	SAFE	GREAT WALL bosch-edc16 Diesel engine				-	√	√	√	-	-	Component test; Engine test; matching function
General	SAFE	Bosch V50 engine system				√	√	√	√	√	√	Engine test
General	SAFE	JM491Q-ME				-	√	√	√	√	-	-
General	SAFE	491Q (BOSCH M154)				-	√	√	-	-	-	System parameters; self-adjusting parameter adjustment; system reset
General	SAFE	Delphi MT80 engine				√	√	√	√	√	√	write VIN; tooth learning; system configuration
General	SAFE	UAES Euro IV engine				√	√	√	√	√	√	-
General type	SAFE	AEROSPACE MITSUBISHI system-Delphi Euro III				√	√	√	√	-	-	System state; static actuation test; dynamic actuation test
General	SAFE	Liaoning Xinfeng				√	√	√	√	-	√	-
General type	SAFE	Delphi MT20U2_EOBD electronic control system				√	√	√	√	√	√	Read historical fault code; Oxygen sensor feedback rationality diagnosis; idle catalytic converter diagnosis; CKP learning; fault code diagnosis test
General	SING	MM single point engine				-	√	√	√	-	-	Perform component control
General	SING	Delphi engine system				√	√	√	√	√	-	System state
General	SING	UAES electronic control				-	√	√	-	-	-	System parameters; self-adjusting parameter adjustment; system reset
General	SING	UAES II electronic				√	√	√	√	√	-	System state
General	SING	Delphi MT20U engine				-	√	√	√	√	-	System state
General	SING	4L88 engine EGR system				-	√	-	√	-	-	Read system parameter; calibration
General	SING	GREAT WALL bosch-edc16 Diesel engine				-	√	√	√	-	-	Component test; Engine test; matching function
General	SING	Bosch V50 engine system				√	√	√	√	√	√	Engine test
General	SING	JM491Q-ME				-	√	√	√	√	-	-
General	SING	491Q (BOSCH M154)				-	√	√	-	-	-	System parameters; self-adjusting parameter adjustment; system reset
General	SING	Delphi MT80 engine				√	√	√	√	√	√	write VIN; tooth learning; system configuration
General	SING	UAES Euro IV engine system				√	√	√	√	√	√	-
General	SING	AEROSPACE MITSUBISHI system-Delphi Euro III engine system				√	√	√	√	-	-	System state; static actuation test; dynamic actuation test
General	SING	Liaoning Xinfeng electronic control system				√	√	√	√	-	√	-
General type	SING	Delphi MT20U2_EOBD electronic control system				√	√	√	√	√	√	Read historical fault code; Oxygen sensor feedback rationality diagnosis; idle catalytic converter diagnosis; CKP learning; fault code diagnosis test
General	SOCOOL	MM single point engine				-	√	√	√	-	-	Perform component control
General	SOCOOL	Delphi engine system				√	√	√	√	√	-	System state
General	SOCOOL	UAES electronic control unit				-	√	√	-	-	-	System parameters; self-adjusting parameter adjustment; system reset
General	SOCOOL	UAES II electronic control unit				√	√	√	√	√	-	System state
General	SOCOOL	Delphi MT20U engine				-	√	√	√	√	-	System state
General	SOCOOL	4L88 engine EGR system				-	√	-	√	-	-	Read system parameter; calibration
General	SOCOOL	GREAT WALL bosch-edc16 Diesel engine				-	√	√	√	-	-	Component test; Engine test; matching function
General	SOCOOL	Bosch V50 engine system				√	√	√	√	√	√	Engine test

Diagnostic List GREAT WALL MOTOR_v10.52

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color

Model Menu		System		Function						Remarks (Other functions)
				Read ECU information	Read DTC	Erase DTC	Live Data	Actuation Test	Read freeze frame	
General	SOCOOL		JM491Q-ME	-	√	√	√	√	-	-
General	SOCOOL		491Q (BOSCH M154)	-	√	√	-	-	-	System parameters; self-adjusting parameter adjustment; system reset
General	SOCOOL		Delphi MT80 engine	√	√	√	√	√	√	write VIN; tooth learning; system configuration
General	SOCOOL		UAES Euro IV engine system	√	√	√	√	√	√	-
General	SOCOOL		AEROSPACE MITSUBISHI system-Delphi Euro III engine system	√	√	√	√	-	-	System state; static actuation test; dynamic actuation test
General	SOCOOL		Liaoning Xinfeng electronic control system	√	√	√	√	-	√	-
General type	SOCOOL		Delphi MT20U2_EOBD electronic control system	√	√	√	√	√	√	Read historical fault code; Oxygen sensor feedback rationality diagnosis; idle catalytic converter diagnosis; CKP learning; fault code diagnosis test
General	Pegasus		MM single point engine	-	√	√	√	-	-	Perform component control
General	Pegasus		Delphi engine system	√	√	√	√	√	-	System state
General	Pegasus		UAES electronic control unit	-	√	√	-	-	-	System parameters; self-adjusting parameter adjustment; system reset
General	Pegasus		UAES II electronic control unit	√	√	√	√	√	-	System state
General	Pegasus		Delphi MT20U engine	-	√	√	√	√	-	System state
General	Pegasus		4L88 engine EGR system	-	√	-	√	-	-	Read system parameter; calibration
General	Pegasus		GREAT WALL bosch-edc16 Diesel engine	-	√	√	√	-	-	Component test; Engine test; matching function
General	Pegasus		Bosch V50 engine system	√	√	√	√	√	√	Engine test
General	Pegasus		JM491Q-ME	-	√	√	√	√	-	-
General	Pegasus		491Q (BOSCH M154)	-	√	√	-	-	-	System parameters; self-adjusting parameter adjustment; system reset
General	Pegasus		Delphi MT80 engine	√	√	√	√	√	√	write VIN; tooth learning; system configuration
General	Pegasus		UAES Euro IV engine system	√	√	√	√	√	√	-
General	Pegasus		AEROSPACE MITSUBISHI system-Delphi Euro III engine system	√	√	√	√	-	-	System state; static actuation test; dynamic actuation test
General	Pegasus		Liaoning Xinfeng electronic control system	√	√	√	√	-	√	-
General type	Pegasus		Delphi MT20U2_EOBD electronic control system	√	√	√	√	√	√	Read historical fault code; Oxygen sensor feedback rationality diagnosis; idle catalytic converter diagnosis; CKP learning; fault code diagnosis test
General	Haval H6	2012 MY	4D20 Delphi electronic	√	√	√	√	√	-	Injector code; Read network configuration information; write network
General type	Haval H6	2012 MY	Delphi MT20U2_EOBD electronic control system	√	√	√	√	√	√	Read historical fault code; Oxygen sensor feedback rationality diagnosis; idle catalytic converter diagnosis; CKP learning; fault code diagnosis test
General	Haval H6	2012 MY	Delphi MT80 engine	√	√	√	√	√	√	Write VIN; CKP learning
General type	Haval H6	2012 MY	4D20 Bosch diesel engine system	√	√	√	√	√	-	Network configuration information; Injector code; OBD function module
General type	Haval H6	2012 MY	4D20 Delphi Euro V engine system	√	√	√	√	√	-	Network configuration information, Injector code, OBD diagnostic function, Routine control, EGR clear self-learning, IUPR function
General	Haval H6	2012 MY	4G15T engine electronic	√	√	√	√	√	-	Read network configuration information; write network configuration
General	Haval H6	2012 MY	UAES Body control system	√	√	√	√	√	-	Read network configuration information; write network configuration
General	Haval H6	2012 MY	Bosch ABS (CAN network)	√	√	√	√	√	-	steering sensor calibration, Network configuration information
General	Haval H6	2012 MY	Bosch ABS9 ESP system	√	√	√	√	√	-	steering sensor calibration, Network configuration information, longitudinal
General	Haval H6	2012 MY	Airbag	√	√	√	√	-	-	Read network configuration information; write network configuration
General	Haval H6	2012 MY	Delphi Body control	-	√	√	√	√	-	Read network configuration information; write network configuration
General	Haval H6	2012 MY	UAES Body control system	√	√	√	√	√	-	Read network configuration information; write network configuration
General	Haval H6	2012 MY	Instrument system	-	√	√	-	√	-	Read network configuration information; write network configuration
General	Haval H6	2012 MY	BorgWarner TOD system	√	√	√	√	-	-	Read network configuration information; write network configuration
General	Haval H6	2012 MY	Hyundai Mobis_P4MFI_AT	√	√	√	√	√	-	-
General	Haval H6	2012 MY	Headlamp Leveling System	√	√	√	√	√	-	-
General type	Haval H6	2012 MY	A/C control system(CHB021)	√	√	√	-	√	-	Read network configuration information; write network configuration information
General type	Haval H6	2012 MY	A/C control system(CHB022)	√	√	√	√	√	-	Read network configuration information; write network configuration information
General	Haval H6	2012 MY	Parking Services system	√	√	√	-	-	-	Read network configuration information; write network configuration
General	Haval H6	2012 MY	Keyless start system	√	√	√	√	√	-	Read network configuration information; write network configuration
General	Haval H6	2012 MY	Gateway system	√	√	√	-	-	-	Read network configuration information; write network configuration
General	Haval H6	2012 MY	Xiamen TungThih Anti-	√	√	√	√	-	-	-
General	Haval H6	2012 MY	SICC traffic anti-theft	√	√	√	√	√	-	-
General	Haval H6	2012 MY	Instrument system	-	√	√	-	√	-	Read network configuration information; write network configuration
General	Haval H6	2012 MY	Instrument system	√	√	√	-	-	-	Read network configuration information; write network configuration
General	Haval H6	2012 MY	Entertainment system	√	√	√	-	-	-	Read network configuration information; write network configuration

Diagnostic List GREAT WALL MOTOR_v10.52

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color

Model Menu	System		Function					Remarks (Other functions)			
			Read ECU information	Read DTC	Erase DTC	Live Data	Actuation Test		Read freeze frame		
General	Haval H6	2012 MY	Entertainment system	HSAE CD system	√	√	√	-	-	-	Read network configuration information; write network configuration
General	Haval H6	2013 MY	engine system(ECM)	Delphi MT20U2_EOBD electronic	√	√	√	√	√	√	Oxygen sensor feedback rationality diagnosis, idle catalytic converter
General	Haval H6	2013 MY	engine system(ECM)	Delphi MT80 engine	√	√	√	√	√	√	write VIN, tooth learning, Read VIN, write VIN(new)
General type	Haval H6	2013 MY	engine system(ECM)	4D20 Delphi Euro V engine system(2013 MY)	√	√	√	√	√	-	Read network configuration information, write network configuration information, Injector code, Routine control, EGR clear self-learning, OBD diagnostic function
General type	Haval H6	2013 MY	engine system(ECM)	4D20 Bosch diesel engine system(2013 MY)	√	√	√	√	√	√	write network configuration information(automatic), Network configuration(manual), write injector code, write injector code(write all), write injector code(separate), EGR self-learning function, Engine test
General type	Haval H6	2013 MY	engine system(ECM)	4G15T engine electronic control system	√	√	√	√	√	-	Read network configuration information, write network configuration information, IUPR, Read and write VIN
General type	Haval H6	2013 MY	engine system(ECM)	4G15B engine electronic control system(ME1788)	√	√	√	√	√	√	Network configuration(manual), Read and write VIN, IUPR, VVT self-learning
General	Haval H6	2013 MY	engine system(ECM)	4G15E engine electronic control	√	√	√	√	√	√	write network configuration information(handwrite), Read and write VIN, VVT
General type	Haval H6	2013 MY	engine system(ECM)	4D20D Delphi Euro IV engine system	√	√	√	√	√	-	Routine control; write injector code; write injector code; Read network configuration information; write network configuration information(manual); OBD diagnostic function; IUPR function; DPF(Diesel Particulate Filter); EGR clear self-learning; Read and write VIN
General type	Haval H6	2013 MY	ABS	Bosch ABS9 ESP system	√	√	√	√	√	-	steering sensor calibration(only for ESP), Read network configuration information, write network configuration information(manual), longitudinal acceleration calibration(only for ESP), yaw angle sensor calibration(HDC function vehicle module), write network configuration information(automatic)
General type	Haval H6	2013 MY	Airbag system		-	√	√	√	-	-	Read network configuration, write network configuration(manual), write network configuration information(automatic)
General type	Haval H6	2013 MY	Body control system	Delphi body controller(2013 MY)	-	√	√	√	√	-	Read network configuration information, write network configuration information(manual), system configuration, tire pressure sensor learning
General	Haval H6	2013 MY	KSTAR press key type PEPS system		√	√	√	√	√	-	After-sale function; Read network configuration information; write network
General	Haval H6	2013 MY	KSTAR knob type PEPS system		√	√	√	√	√	-	After-sale function; Read network configuration information; write network
General	Haval H6	2013 MY	Transmission electronic control system (TCU)		√	√	√	√	√	-	write network configuration information
General	Haval H6	2013 MY	TOD (Intelligent 4-wheel		√	√	√	√	-	-	Read network configuration information, write network configuration
General	Haval H6	2013 MY	CD/MP5 (CD host)	ADAYO CD system	√	√	√	-	-	-	Read network configuration information, write network configuration
General	Haval H6	2013 MY	CD/MP5 (CD host)	HSAE CD system	√	√	√	-	-	-	Read network configuration information, write network configuration
General	Haval H6	Brand new H6	engine system(ECM)	engine system(4C13)	√	√	√	√	√	-	write VIN; write network configuration information; Read freeze frame; OBD
General	Haval H6	Brand new H6	engine system(ECM)	engine system(4C20)	√	√	√	√	√	√	write VIN; write network configuration information; CKP learning; IUPR
General	Haval H6	Brand new H6	Body control system(BCM)		√	√	√	√	√	-	write VIN; write network configuration information; Special function
General	Haval H6	Brand new H6	Airbag module(ABM)		√	√	√	√	-	-	write VIN; write network configuration information; write loop configuration
General	Haval H6	Brand new H6	Instrument system(IP)	Full color instrument	√	√	√	√	√	-	write VIN; write network configuration information; maintenance mileage
General	Haval H6	Brand new H6	Instrument system(IP)	Non-full color instrument	√	√	√	√	√	-	write VIN; write network configuration information; Special function
General	Haval H6	Brand new H6	Adaptive cruise control		√	√	√	√	-	-	write VIN; write network configuration information; after-sales calibration
General	Haval H6	Brand new H6	Electric power steering		√	√	√	√	√	-	write VIN; write network configuration information; PDC initial torque
General	Haval H6	Brand new H6	Electronic stabilization		√	√	√	√	√	-	write VIN; write network configuration information; manual exhaust; yaw rate
General	Haval H6	Brand new H6	Intelligent front view		√	√	√	√	-	-	write VIN; write network configuration information; IFV after-sale
General	Haval H6	Brand new H6	Keyless start		√	√	√	√	-	-	write VIN; write network configuration information; after-sale learning
General	Haval H6	Brand new H6	Parallel line assisted	left radar detection	√	√	√	√	-	-	write VIN; write network configuration information; after-sales calibration
General	Haval H6	Brand new H6	Parallel line assisted	right radar detection	√	√	√	√	-	-	write VIN; write network configuration information; after-sales calibration
General	Haval H6	Brand new H6	Transmission control	Transmission control	√	√	√	√	-	-	Writing function; write network configuration information
General	Haval H6	Brand new H6	Transmission control	Transmission control	√	√	√	√	-	-	write VIN; write network configuration information
General	Haval H6	Brand new H6	Electronic shifter(SBWM)		√	√	√	√	-	-	write VIN; write classification code
General	Haval H6	Brand new H6	Tire pressure monitoring		√	√	√	√	-	-	write VIN; write network configuration information; tire pressure sensor ID
General	Haval H6	Brand new H6	A/C control system(AC)		√	√	√	√	√	-	write VIN; write network configuration information; Stepper motor self-
General	Haval H6	Brand new H6	Driver seat memory		√	√	√	√	√	-	write VIN; write network configuration information
General	Haval H6	Brand new H6	Driver side door		√	√	√	√	-	-	write VIN; write network configuration information
General	Haval H6	Brand new H6	Front passenger side door		√	√	√	√	-	-	write VIN; write network configuration information
General	Haval H6	Brand new H6	Rear-view camera		√	√	√	√	-	-	write VIN; write network configuration information
General	Haval H6	Brand new H6	Seat heating module(SHM)		√	√	√	√	-	-	write VIN
General	Haval H6	Brand new H6	Automatic parking assist		√	√	√	√	-	-	write VIN; write network configuration information
General	Haval H6	Brand new H6	Around view module(AVM)		√	√	√	√	-	-	write VIN; write network configuration information; after-sales calibration
General	Haval H6	Brand new H6	Electronic steering		√	√	√	√	-	-	write VIN; write network configuration information
General	Haval H6	Brand new H6	Independent gateway(GW)		√	√	√	√	-	-	write VIN; write network configuration information

Diagnostic List GREAT WALL MOTOR_v10.52

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color

Model Menu		System		Function						Remarks (Other functions)	
				Read ECU information	Read DTC	Erase DTC	Live Data	Actuation Test	Read freeze frame		
General	Haval H6	Brand new H6		Parking assist	√	√	√	√	-	-	write VIN; write network configuration information
General	Haval H6	Brand new H6		Internet of Vehicles host	√	√	√	√	-	-	write VIN; write network configuration information
General	Haval H6	Brand new H6		Navigation host	√	√	√	√	-	-	write VIN; write network configuration information
General	Haval H6	Brand new H6		Steering angle	√	√	√	√	-	-	write VIN; write network configuration information; SASsteering angle
General	Haval H6	Brand new H6		GLO-NASS emergency call	√	√	√	-	-	-	-
General	Haval H6	Brand new H6		engine system(ECM)	√	√	√	√	√	-	write VIN; write network configuration information; VVT self-learning
General	Haval H6	Brand new H6		engine system(ECM)	√	√	√	√	√	-	write VIN; write network configuration information; VVT self-learning
General	Haval H6	Brand new H6		Continuously variable	√	-	-	√	-	-	write VIN; write network configuration information
General	Haval H6	2018 MY		engine system(ECM)	√	√	√	√	√	-	Read network configuration information; write network configuration
General	Haval H6	2018 MY		Body control system	√	√	√	√	√	-	Writing function; tire pressure sensor learning; Tire pressure learning
General	Haval H6	2018 MY		Instrument system(IP)	√	√	√	√	√	-	Writing function
General type	Haval H6	2018 MY		Electronic stability system (ESP)	√	√	√	√	√	-	steering sensor calibration (only for ESP); Read network configuration information; write network configuration information(automatic); write network configuration information(manual); exhaust function; yaw angle sensor
General	Haval H6	2018 MY		Independent gateway(GW)	√	√	√	√	-	-	Writing function
General	Haval H6	2018 MY		Electronic parking	√	√	√	√	√	-	Writing function;slope sensor calibration
General	Haval H6	2018 MY		Parking assist	√	√	√	√	-	-	Writing function
General	Haval H6	2018 MY		Passive entry passive	√	√	√	√	√	-	Writing function;after-sale learning
General	Haval H6	2018 MY		Airbag system (ABM)	-	√	√	√	-	-	write network configuration information(automatic);write network
General	Haval H6	2018 MY		A/C control system (AC)	√	√	√	√	√	-	write network configuration information
General	Haval H6	2018 MY		A/C control system (AC)	√	√	√	√	√	-	write network configuration information(manual)
General	Haval H6	2018 MY		Transmission control unit	√	√	√	√	-	-	write network configuration information; write VIN; shift drum self-
General	Haval H6	2018 MY		Transmission control unit	√	√	√	√	-	-	write network configuration information; write VIN; transmission self-
General	Haval H6	2018 MY		Electronic shifter	√	√	√	√	-	-	Writing function,write classification code
General	Haval H6	2013-2014 MY	CC6460RM/CC6461RM	ECM(engine system)	√	√	√	√	√	-	-
General	Haval H6	2013-2014 MY	CC6460RM/CC6461RM	ECM(engine system)	√	√	√	√	√	√	-
General	Haval H6	2013-2014 MY	CC6460RM/CC6461RM	ECM(engine system)	√	√	√	√	√	√	-
General	Haval H6	2013-2014 MY	CC6460RM/CC6461RM	ECM(engine system)	√	√	√	√	√	√	-
General	Haval H6	2013-2014 MY	CC6460RM/CC6461RM	ECM(engine system)	√	√	√	√	√	-	-
General	Haval H6	2013-2014 MY	CC6460RM/CC6461RM	ECM(engine system)	√	√	√	√	√	-	-
General	Haval H6	2013-2014 MY	CC6460RM/CC6461RM	ECM(engine system)	√	√	√	√	√	-	-
General	Haval H6	2013-2014 MY	CC6460RM/CC6461RM	ECM(engine system)	√	√	√	√	√	-	-
General	Haval H6	2013-2014 MY	CC6460RM/CC6461RM	AT(Automatic transmission)	√	√	√	√	√	-	-
General	Haval H6	2013-2014 MY	CC6460RM/CC6461RM	ABS(Anti-lock brake)	√	√	√	√	√	-	-
General	Haval H6	2013-2014 MY	CC6460RM/CC6461RM	SRS(Airbag system)	√	√	√	√	-	-	-
General	Haval H6	2013-2014 MY	CC6460RM/CC6461RM	ICM/IP(Instrument panel)	√	√	√	-	√	-	Maintenance interval setting
General	Haval H6	2013-2014 MY	CC6460RM/CC6461RM	ICM/IP(Instrument panel)	√	√	√	-	-	-	Maintenance interval setting
General	Haval H6	2013-2014 MY	CC6460RM/CC6461RM	BCM(Body control system)	√	√	√	√	√	-	-
General	Haval H6	2013-2014 MY	CC6460RM/CC6461RM	BCM(Body control system)	√	√	√	√	√	-	-
General	Haval H6	2013-2014 MY	CC6460RM/CC6461RM	AC(Auto A/C system)	√	√	√	√	√	-	-
General	Haval H6	2013-2014 MY	CC6460RM/CC6461RM	AC(Auto A/C system)	√	√	√	-	√	-	-
General	Haval H6	2013-2014 MY	CC6460RM/CC6461RM	PEPS(Passive entry)	√	√	√	√	√	-	-
General	Haval H6	2013-2014 MY	CC6460RM/CC6461RM	PEPS(Passive entry)	√	√	√	√	√	-	-
General	Haval H6	2013-2014 MY	CC6460RM/CC6461RM	TOD(4WD system)	√	√	√	√	-	-	-
General	Haval H6	2013-2014 MY	CC6460RM/CC6461RM	CD(Entertainment system)	√	√	√	√	-	-	-
General	Haval H6	2013-2014 MY	CC6460RM/CC6461RM	CD(Entertainment system)	√	√	√	√	-	-	-
General	Haval H6	2013-2014 MY	CC6460RM/CC6461RM	ALS(Headlamp Leveling)	√	√	√	√	√	-	-
General	Haval H6	2013-2014 MY	CC6460RM/CC6461RM	PAS(Parking assist)	√	√	√	-	-	-	-
General	Haval H6	2013-2014 MY	CC6460RM/CC6461RM	GW(Gateway system)	√	√	√	√	-	-	-
General	Haval H6	2015-2016 MY	CC6460RM/CC6461RM/CC6472RM	ECM(engine system)	√	√	√	√	√	-	-
General	Haval H6	2015-2016 MY	CC6460RM/CC6461RM/CC6472RM	ECM(engine system)	√	√	√	√	√	√	-
General	Haval H6	2015-2016 MY	CC6460RM/CC6461RM/CC6472RM	ECM(engine system)	√	√	√	√	√	√	-
General	Haval H6	2015-2016 MY	CC6460RM/CC6461RM/CC6472RM	ECM(engine system)	√	√	√	√	√	√	-
General	Haval H6	2015-2016 MY	CC6460RM/CC6461RM/CC6472RM	ECM(engine system)	√	√	√	√	√	-	-

Diagnostic List GREAT WALL MOTOR_v10.52

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color

Model Menu		System				Function						Remarks (Other functions)
						Read ECU information	Read DTC	Erase DTC	Live Data	Actuation Test	Read freeze frame	
General	Haval H6	2015-2016 MY	CC6460RM/CC6461RM/CC6472RM	ECM(engine system)	4D20D Delphi Euro IV engine	√	√	√	√	√	-	-
General	Haval H6	2015-2016 MY	CC6460RM/CC6461RM/CC6472RM	ECM(engine system)	Delphi MT80 engine system	√	√	√	√	√	-	-
General	Haval H6	2015-2016 MY	CC6460RM/CC6461RM/CC6472RM	ECM(engine system)	Delphi MT20U2_EOBD engine	√	√	√	√	√	-	-
General	Haval H6	2015-2016 MY	CC6460RM/CC6461RM/CC6472RM	AT(Automatic transmission)		√	√	√	√	√	-	-
General	Haval H6	2015-2016 MY	CC6460RM/CC6461RM/CC6472RM	ABS(Anti-lock brake)		√	√	√	√	√	-	-
General	Haval H6	2015-2016 MY	CC6460RM/CC6461RM/CC6472RM	SRS(Airbag system)		√	√	√	√	-	-	-
General	Haval H6	2015-2016 MY	CC6460RM/CC6461RM/CC6472RM	ICM/IP(Instrument panel)	Delco Instrument control system	√	√	√	-	√	-	Maintenance interval setting
General	Haval H6	2015-2016 MY	CC6460RM/CC6461RM/CC6472RM	ICM/IP(Instrument panel)	YAZAKI Instrument control	√	√	√	-	-	-	Maintenance interval setting
General	Haval H6	2015-2016 MY	CC6460RM/CC6461RM/CC6472RM	BCM(Body control system)	UAES body controller	√	√	√	√	√	-	-
General	Haval H6	2015-2016 MY	CC6460RM/CC6461RM/CC6472RM	BCM(Body control system)	Delphi body controller	√	√	√	√	√	-	-
General	Haval H6	2015-2016 MY	CC6460RM/CC6461RM/CC6472RM	AC(Auto A/C system)	A/C control system(CHB022)	√	√	√	√	√	-	-
General	Haval H6	2015-2016 MY	CC6460RM/CC6461RM/CC6472RM	AC(Auto A/C system)	A/C control system(CHB021)	√	√	√	-	√	-	-
General	Haval H6	2015-2016 MY	CC6460RM/CC6461RM/CC6472RM	PEPS(Passive entry)	KSTAR knob type PEPS system	√	√	√	√	√	-	-
General	Haval H6	2015-2016 MY	CC6460RM/CC6461RM/CC6472RM	PEPS(Passive entry)	KSTAR press key type PEPS	√	√	√	√	√	-	-
General	Haval H6	2015-2016 MY	CC6460RM/CC6461RM/CC6472RM	TOD(4WD system)		√	√	√	√	-	-	-
General	Haval H6	2015-2016 MY	CC6460RM/CC6461RM/CC6472RM	CD(Entertainment system)	ADAYO CD system	√	√	√	√	-	-	-
General	Haval H6	2015-2016 MY	CC6460RM/CC6461RM/CC6472RM	CD(Entertainment system)	HSAE CD system	√	√	√	√	-	-	-
General	Haval H6	2015-2016 MY	CC6460RM/CC6461RM/CC6472RM	ALS(Headlamp Leveling)		√	√	√	√	√	-	-
General	Haval H6	2015-2016 MY	CC6460RM/CC6461RM/CC6472RM	PAS(Parking assist)		√	√	√	√	-	-	-
General	Haval H6	2015-2016 MY	CC6460RM/CC6461RM/CC6472RM	GW(Gateway system)		√	√	√	√	-	-	-
General	Haval H6	2015-2016 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	ECM(engine system)	4C20-MT92 engine system	√	√	√	√	√	√	-
General	Haval H6	2015-2016 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	ECM(engine system)	4D20Bosch diesel engine system	√	√	√	√	√	√	-
General	Haval H6	2015-2016 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	ECM(engine system)	engine system(4G15B)	√	√	√	√	√	√	-
General	Haval H6	2015-2016 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	ECM(engine system)	engine system(4B15)	√	√	√	√	√	-	-
General	Haval H6	2015-2016 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	ECM(engine system)	4D20 Delphi Euro V engine	√	√	√	√	√	-	-
General	Haval H6	2015-2016 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	AT(Automatic transmission)	Transmission control	√	√	√	√	-	-	-
General	Haval H6	2015-2016 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	AT(Automatic transmission)	Transmission control	√	√	√	√	-	-	-
General	Haval H6	2015-2016 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	AT(Automatic transmission)	Transmission control	√	√	√	√	-	-	-
General	Haval H6	2015-2016 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	AT(Automatic transmission)	Transmission control system6AT	√	√	√	√	√	-	-
General	Haval H6	2015-2016 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	SRS(Airbag system)		√	√	√	√	-	-	-
General	Haval H6	2015-2016 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	TCP/IP(Instrument panel)		√	√	√	-	√	-	Read and write maintenance mileage default value, Read and write maintenance
General	Haval H6	2015-2016 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	EPB(Electronic parking)		√	√	√	√	√	-	-
General	Haval H6	2015-2016 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	ESP(Electronic stability)		√	√	√	√	√	-	-
General	Haval H6	2015-2016 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	BCM(Body control system)		√	√	√	√	√	-	-
General	Haval H6	2015-2016 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	AC(A/C control system)		√	√	√	√	√	-	-
General	Haval H6	2015-2016 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	PEPS(Keyless start system)		√	√	√	√	√	-	-
General	Haval H6	2015-2016 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	EPS(Electric steering)		√	√	√	√	-	-	-
General	Haval H6	2015-2016 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	CVVL(Continuously)		√	-	-	√	-	-	Write VIN, Network configuration(manual)
General	Haval H6	2015-2016 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	SBWM(Electronic shifter)		√	√	√	√	-	-	-
General	Haval H6	2015-2016 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	AFS(Adaptive Headlight)		√	√	√	√	-	-	-
General	Haval H6	2015-2016 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	AVM(Around view module)		√	√	√	√	-	-	-
General	Haval H6	2015-2016 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	RVC(Rear-view camera)		√	√	√	√	-	-	-
General	Haval H6	2015-2016 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	PAS(Parking assist)	APA(Automatic parking assist)	√	√	√	√	-	-	-
General	Haval H6	2015-2016 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	PAS(Parking assist)	PAS(Parking assist system)	√	√	√	√	-	-	-
General	Haval H6	2015-2016 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	NEXTRAC(Intelligent FWD)		√	√	√	√	-	-	-
General	Haval H6	2015-2016 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	CD(Entertainment system)	CD(Delphi CD)	√	√	√	√	-	-	-
General	Haval H6	2015-2016 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	CD(Entertainment system)	ADAYO CD(CD host_19 MY)	√	√	√	√	√	-	-
General	Haval H6	2015-2016 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	CD(Entertainment system)	CD(Desay SV CD)	√	√	√	√	-	-	-
General	Haval H6	2015-2016 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	ESCL(Electronic steering)		√	√	√	√	-	-	-
General	Haval H6	2015-2016 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	GW(Gateway system)		√	√	√	√	-	-	-
General	Haval H6	2015-2016 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	SAS(Steering wheel)		√	√	√	√	-	-	-
General	Haval H6	2015-2016 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	SCM(Seat heating massage)		√	√	√	√	-	-	-
General	Haval H6	2015-2016 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	CMS(CAN signal conversion)		√	√	√	√	√	-	-

Diagnostic List GREAT WALL MOTOR_v10.52

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color

Model Menu		System				Function						Remarks (Other functions)
						Read ECU information	Read DTC	Erase DTC	Live Data	Actuation Test	Read freeze frame	
General	Haval H6	2017 MY	CC6460RM/CC6461RM/CC6472RM	ECM(engine system)	4G15T engine electronic control	√	√	√	√	√	-	-
General	Haval H6	2017 MY	CC6460RM/CC6461RM/CC6472RM	ECM(engine system)	4D20Bosch diesel engine system	√	√	√	√	√	√	-
General	Haval H6	2017 MY	CC6460RM/CC6461RM/CC6472RM	ECM(engine system)	4G15E engine electronic control	√	√	√	√	√	√	-
General	Haval H6	2017 MY	CC6460RM/CC6461RM/CC6472RM	ECM(engine system)	4G15B engine electronic control	√	√	√	√	√	√	-
General	Haval H6	2017 MY	CC6460RM/CC6461RM/CC6472RM	ECM(engine system)	4D20 Delphi Euro V engine	√	√	√	√	√	-	-
General	Haval H6	2017 MY	CC6460RM/CC6461RM/CC6472RM	ECM(engine system)	4D20D Delphi Euro IV engine	√	√	√	√	√	-	-
General	Haval H6	2017 MY	CC6460RM/CC6461RM/CC6472RM	ECM(engine system)	Delphi MT80 engine system	√	√	√	√	√	-	-
General	Haval H6	2017 MY	CC6460RM/CC6461RM/CC6472RM	ECM(engine system)	Delphi MT20U2_EOBD engine	√	√	√	√	√	-	-
General	Haval H6	2017 MY	CC6460RM/CC6461RM/CC6472RM	AT(Automatic transmission)		√	√	√	√	√	-	-
General	Haval H6	2017 MY	CC6460RM/CC6461RM/CC6472RM	ABS(Anti-lock brake)		√	√	√	√	√	-	-
General	Haval H6	2017 MY	CC6460RM/CC6461RM/CC6472RM	SRS(Airbag system)		√	√	√	√	-	-	-
General	Haval H6	2017 MY	CC6460RM/CC6461RM/CC6472RM	ICM/IP(Instrument panel)	Delco Instrument control system	√	√	√	-	√	-	Maintenance interval setting
General	Haval H6	2017 MY	CC6460RM/CC6461RM/CC6472RM	ICM/IP(Instrument panel)	YAZAKI Instrument control	√	√	√	-	-	-	Maintenance interval setting
General	Haval H6	2017 MY	CC6460RM/CC6461RM/CC6472RM	BCM(Body control system)	UAES body controller	√	√	√	√	√	-	-
General	Haval H6	2017 MY	CC6460RM/CC6461RM/CC6472RM	BCM(Body control system)	Delphi body controller	√	√	√	√	√	-	-
General	Haval H6	2017 MY	CC6460RM/CC6461RM/CC6472RM	AC(Auto A/C system)	A/C control system(CHB022)	√	√	√	√	√	-	-
General	Haval H6	2017 MY	CC6460RM/CC6461RM/CC6472RM	AC(Auto A/C system)	A/C control system(CHB021)	√	√	√	-	√	-	-
General	Haval H6	2017 MY	CC6460RM/CC6461RM/CC6472RM	PEPS(Passive entry)	KSTAR knob type PEPS system	√	√	√	√	√	-	-
General	Haval H6	2017 MY	CC6460RM/CC6461RM/CC6472RM	PEPS(Passive entry)	KSTAR press key type PEPS	√	√	√	√	√	-	-
General	Haval H6	2017 MY	CC6460RM/CC6461RM/CC6472RM	TOD(4WD system)		√	√	√	√	-	-	-
General	Haval H6	2017 MY	CC6460RM/CC6461RM/CC6472RM	CD(Entertainment system)	ADAYO CD system	√	√	√	√	-	-	-
General	Haval H6	2017 MY	CC6460RM/CC6461RM/CC6472RM	CD(Entertainment system)	HSAE CD system	√	√	√	√	-	-	-
General	Haval H6	2017 MY	CC6460RM/CC6461RM/CC6472RM	ALS(Headlamp Leveling)		√	√	√	√	√	-	-
General	Haval H6	2017 MY	CC6460RM/CC6461RM/CC6472RM	PAS(Parking assist)		√	√	√	-	-	-	-
General	Haval H6	2017 MY	CC6460RM/CC6461RM/CC6472RM	GW(Gateway system)		√	√	√	√	-	-	-
General	Haval H6	2017 MY	CC6461UM/CC6463UM/CC6464RM	ECM(engine system)	engine system(4B15)	√	√	√	√	√	-	-
General	Haval H6	2017 MY	CC6461UM/CC6463UM/CC6464RM	ECM(engine system)	engine system(4B13)	√	√	√	√	√	-	-
General	Haval H6	2017 MY	CC6461UM/CC6463UM/CC6464RM	ECM(engine system)	engine system(4C20)	√	√	√	√	√	√	-
General	Haval H6	2017 MY	CC6461UM/CC6463UM/CC6464RM	ECM(engine system)	UAES GDI China VI(4B15A+4C20B)	√	√	√	√	√	-	-
General	Haval H6	2017 MY	CC6461UM/CC6463UM/CC6464RM	AT(Automatic transmission)	Transmission control	√	√	√	√	-	-	-
General	Haval H6	2017 MY	CC6461UM/CC6463UM/CC6464RM	AT(Automatic transmission)	Transmission control	√	√	√	√	-	-	-
General	Haval H6	2017 MY	CC6461UM/CC6463UM/CC6464RM	SRS(Airbag system)		√	√	√	√	-	-	-
General	Haval H6	2017 MY	CC6461UM/CC6463UM/CC6464RM	ICM/IP(Instrument panel)	IP(full color instrument	√	√	√	√	√	-	maintenance setting
General	Haval H6	2017 MY	CC6461UM/CC6463UM/CC6464RM	ICM/IP(Instrument panel)	IP(Non-full color instrument	√	√	√	√	√	-	maintenance setting
General	Haval H6	2017 MY	CC6461UM/CC6463UM/CC6464RM	TPMS(Tire pressure)		√	√	√	√	-	-	-
General	Haval H6	2017 MY	CC6461UM/CC6463UM/CC6464RM	ESP(Electronic stability)		√	√	√	√	√	-	Write VIN, Network configuration(manual), yaw rate sensor calibration, manual
General	Haval H6	2017 MY	CC6461UM/CC6463UM/CC6464RM	BCM(Body control system)		√	√	√	√	√	-	-
General	Haval H6	2017 MY	CC6461UM/CC6463UM/CC6464RM	AC(Auto A/C system)		√	√	√	√	√	-	-
General	Haval H6	2017 MY	CC6461UM/CC6463UM/CC6464RM	PEPS(Passive entry)		√	√	√	√	-	-	-
General	Haval H6	2017 MY	CC6461UM/CC6463UM/CC6464RM	ESCL(Electronic steering)		√	√	√	√	-	-	-
General	Haval H6	2017 MY	CC6461UM/CC6463UM/CC6464RM	SBWM(Electronic shifter)	SBWM(Electronic shifter)	√	√	√	√	-	-	-
General	Haval H6	2017 MY	CC6461UM/CC6463UM/CC6464RM	SBWM(Electronic shifter)	SBWM(Electronic shifter)(MAX)	√	√	√	-	-	-	-
General	Haval H6	2017 MY	CC6461UM/CC6463UM/CC6464RM	EPS(Electric steering)		√	√	√	√	√	-	-
General	Haval H6	2017 MY	CC6461UM/CC6463UM/CC6464RM	SAS(Steering wheel)		√	√	√	√	-	-	Write VIN, calibration
General	Haval H6	2017 MY	CC6461UM/CC6463UM/CC6464RM	CVVL(Continuously		√	-	-	√	-	-	Write VIN, Network configuration(manual)
General	Haval H6	2017 MY	CC6461UM/CC6463UM/CC6464RM	GW(Gateway system)	GW(Independent Gateway system)	√	√	√	√	-	-	-
General	Haval H6	2017 MY	CC6461UM/CC6463UM/CC6464RM	GW(Gateway system)	GW(Independent gateway)(include	√	√	√	√	-	-	-
General	Haval H6	2017 MY	CC6461UM/CC6463UM/CC6464RM	AVM(Around view module)		√	√	√	√	-	-	Write VIN, Network configuration(manual), Electronic control unit serial
General	Haval H6	2017 MY	CC6461UM/CC6463UM/CC6464RM	RVC(Rear-view camera)		√	√	√	√	-	-	-
General	Haval H6	2017 MY	CC6461UM/CC6463UM/CC6464RM	PAS(Parking assist)	PAS(Parking assist system)	√	√	√	√	-	-	Write VIN, Network configuration(manual)
General	Haval H6	2017 MY	CC6461UM/CC6463UM/CC6464RM	PAS(Parking assist)	APA(Automatic parking assist	√	√	√	√	-	-	Write VIN, Network configuration(manual)
General	Haval H6	2017 MY	CC6461UM/CC6463UM/CC6464RM	IFC(Intelligent front		√	√	√	√	-	-	-
General	Haval H6	2017 MY	CC6461UM/CC6463UM/CC6464RM	SHM(Seat heating module)		√	√	√	√	-	-	-

Diagnostic List GREAT WALL MOTOR_v10.52

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color

Model Menu		System				Function						Remarks (Other functions)
						Read ECU information	Read DTC	Erase DTC	Live Data	Actuation Test	Read freeze frame	
General	Haval H6	2017 MY	CC6461UM/CC6463UM/CC6464RM	RSDS_L(left radar)	√	√	√	√	-	-	-	
General	Haval H6	2017 MY	CC6461UM/CC6463UM/CC6464RM	RSDS_R(right radar)	√	√	√	√	-	-	-	
General	Haval H6	2017 MY	CC6461UM/CC6463UM/CC6464RM	T-BOX(Internet of	√	√	√	√	-	-	-	
General	Haval H6	2017 MY	CC6461UM/CC6463UM/CC6464RM	T-BOX(Internet of	√	√	√	√	-	-	-	
General	Haval H6	2017 MY	CC6461UM/CC6463UM/CC6464RM	HUT(Navigation System)	√	√	√	√	-	-	-	
General	Haval H6	2017 MY	CC6461UM/CC6463UM/CC6464RM	ACC(Automatic cruise	√	√	√	√	-	-	-	
General	Haval H6	2017 MY	CC6461UM/CC6463UM/CC6464RM	DSM(Driver side seat	√	√	√	√	√	-	-	
General	Haval H6	2017 MY	CC6461UM/CC6463UM/CC6464RM	DDCM(Driver side door	√	√	√	√	-	-	Write VIN, Network configuration(manual)	
General	Haval H6	2017 MY	CC6461UM/CC6463UM/CC6464RM	PDCM(Front driver side	√	√	√	√	-	-	Write VIN, Network configuration(manual)	
General	Haval H6	2017 MY	CC6461UM/CC6463UM/CC6464RM	GLO-NASS(GLO-NASS	√	√	√	-	-	-	-	
General	Haval H6	2017 MY	CC6460UM/CC6450UM/CC6463UM/CC6465UM	ECM(engine system)	√	√	√	√	√	√	-	
General	Haval H6	2017 MY	CC6460UM/CC6450UM/CC6463UM/CC6465UM	ECM(engine system)	√	√	√	√	√	√	-	
General	Haval H6	2017 MY	CC6460UM/CC6450UM/CC6463UM/CC6465UM	ECM(engine system)	√	√	√	√	√	√	-	
General	Haval H6	2017 MY	CC6460UM/CC6450UM/CC6463UM/CC6465UM	ECM(engine system)	√	√	√	√	√	-	-	
General	Haval H6	2017 MY	CC6460UM/CC6450UM/CC6463UM/CC6465UM	ECM(engine system)	√	√	√	√	√	-	-	
General	Haval H6	2017 MY	CC6460UM/CC6450UM/CC6463UM/CC6465UM	ECM(engine system)	√	√	√	√	√	-	-	
General	Haval H6	2017 MY	CC6460UM/CC6450UM/CC6463UM/CC6465UM	AT(Automatic transmission	√	√	√	√	-	-	-	
General	Haval H6	2017 MY	CC6460UM/CC6450UM/CC6463UM/CC6465UM	AT(Automatic transmission	√	√	√	√	-	-	-	
General	Haval H6	2017 MY	CC6460UM/CC6450UM/CC6463UM/CC6465UM	AT(Automatic transmission	√	√	√	√	-	-	-	
General	Haval H6	2017 MY	CC6460UM/CC6450UM/CC6463UM/CC6465UM	AT(Automatic transmission	√	√	√	√	√	-	-	
General	Haval H6	2017 MY	CC6460UM/CC6450UM/CC6463UM/CC6465UM	SRS(Airbag system)	√	√	√	√	-	-	-	
General	Haval H6	2017 MY	CC6460UM/CC6450UM/CC6463UM/CC6465UM	TCP/IP(Instrument panel	√	√	√	-	√	-	Read and write maintenance mileage default value, Read and write maintenance	
General	Haval H6	2017 MY	CC6460UM/CC6450UM/CC6463UM/CC6465UM	EPB(Electronic parking	√	√	√	√	√	-	-	
General	Haval H6	2017 MY	CC6460UM/CC6450UM/CC6463UM/CC6465UM	ESP(Electronic stability	√	√	√	√	√	-	-	
General	Haval H6	2017 MY	CC6460UM/CC6450UM/CC6463UM/CC6465UM	BCM(Body control system)	√	√	√	√	√	-	-	
General	Haval H6	2017 MY	CC6460UM/CC6450UM/CC6463UM/CC6465UM	AC(A/C control system)	√	√	√	√	√	-	-	
General	Haval H6	2017 MY	CC6460UM/CC6450UM/CC6463UM/CC6465UM	PEPS(Keyless start system	√	√	√	√	√	-	-	
General	Haval H6	2017 MY	CC6460UM/CC6450UM/CC6463UM/CC6465UM	EPS(Electric steering	√	√	√	√	-	-	-	
General	Haval H6	2017 MY	CC6460UM/CC6450UM/CC6463UM/CC6465UM	CVVL(Continuously	√	-	-	√	-	-	Write VIN, Network configuration(manual)	
General	Haval H6	2017 MY	CC6460UM/CC6450UM/CC6463UM/CC6465UM	SBWM(Electronic shifter)	√	√	√	√	-	-	-	
General	Haval H6	2017 MY	CC6460UM/CC6450UM/CC6463UM/CC6465UM	AFS(Adaptive Headlight	√	√	√	√	-	-	-	
General	Haval H6	2017 MY	CC6460UM/CC6450UM/CC6463UM/CC6465UM	AVM(Around view module)	√	√	√	√	-	-	-	
General	Haval H6	2017 MY	CC6460UM/CC6450UM/CC6463UM/CC6465UM	RVC(Rear-view camera)	√	√	√	√	-	-	-	
General	Haval H6	2017 MY	CC6460UM/CC6450UM/CC6463UM/CC6465UM	PAS(Parking assist	√	√	√	√	-	-	-	
General	Haval H6	2017 MY	CC6460UM/CC6450UM/CC6463UM/CC6465UM	PAS(Parking assist	√	√	√	√	-	-	-	
General	Haval H6	2017 MY	CC6460UM/CC6450UM/CC6463UM/CC6465UM	NEXTRAC(Intelligent FWD)	√	√	√	√	-	-	-	
General	Haval H6	2017 MY	CC6460UM/CC6450UM/CC6463UM/CC6465UM	CD(Entertainment system)	√	√	√	√	-	-	-	
General	Haval H6	2017 MY	CC6460UM/CC6450UM/CC6463UM/CC6465UM	CD(Entertainment system)	√	√	√	√	√	-	-	
General	Haval H6	2017 MY	CC6460UM/CC6450UM/CC6463UM/CC6465UM	CD(Entertainment system)	√	√	√	√	-	-	-	
General	Haval H6	2017 MY	CC6460UM/CC6450UM/CC6463UM/CC6465UM	ESCL(Electronic steering	√	√	√	√	-	-	-	
General	Haval H6	2017 MY	CC6460UM/CC6450UM/CC6463UM/CC6465UM	GW(Gateway system)	√	√	√	√	-	-	-	
General	Haval H6	2017 MY	CC6460UM/CC6450UM/CC6463UM/CC6465UM	SAS(Steering wheel	√	√	√	√	-	-	-	
General	Haval H6	2017 MY	CC6460UM/CC6450UM/CC6463UM/CC6465UM	SCM(Seat heating massage	√	√	√	√	-	-	-	
General	Haval H6	2017 MY	CC6460UM/CC6450UM/CC6463UM/CC6465UM	CMS(CAN signal conversion	√	√	√	√	√	-	-	
General	Haval H6	2019 MY	CC6461RM/CC6472RM	ECM(engine system)	√	√	√	√	√	√	-	
General	Haval H6	2019 MY	CC6461RM/CC6472RM	AT(Automatic transmission	√	√	√	√	-	-	-	
General	Haval H6	2019 MY	CC6461RM/CC6472RM	AT(Automatic transmission	√	√	√	√	-	-	-	
General	Haval H6	2019 MY	CC6461RM/CC6472RM	SRS(Airbag system)	√	√	√	√	-	-	-	
General	Haval H6	2019 MY	CC6461RM/CC6472RM	ICM/IP(Instrument panel	√	√	√	√	√	-	Reset service mileage, Total mileage reset	
General	Haval H6	2019 MY	CC6461RM/CC6472RM	EPB(Electronic parking	√	√	√	√	√	-	-	
General	Haval H6	2019 MY	CC6461RM/CC6472RM	ESP(Electronic stability	√	√	√	√	√	-	-	
General	Haval H6	2019 MY	CC6461RM/CC6472RM	BCM(Body control system)	√	√	√	√	√	-	-	
General	Haval H6	2019 MY	CC6461RM/CC6472RM	AC(Auto A/C system)	√	√	√	-	√	-	-	
General	Haval H6	2019 MY	CC6461RM/CC6472RM	AC(Auto A/C system)	√	√	√	√	√	-	-	

Diagnostic List GREAT WALL MOTOR_v10.52

Remark:

- 1. √ : means that the system has this function
- 2. - : means that the system does not have this function
- 3. compared with the last version, the new added function is marked in red color

Model Menu		System				Function						Remarks (Other functions)
						Read ECU information	Read DTC	Erase DTC	Live Data	Actuation Test	Read freeze frame	
General	Haval H6	2019 MY	CC6461RM/CC6472RM	PEPS(Passive entry)	√	√	√	√	√	-	-	
General	Haval H6	2019 MY	CC6461RM/CC6472RM	SBWM(Electronic shifter)	√	√	√	√	-	-	-	
General	Haval H6	2019 MY	CC6461RM/CC6472RM	PAS(Parking Service)	√	√	√	√	-	-	-	
General	Haval H6	2019 MY	CC6461RM/CC6472RM	GW(Gateway system)	√	√	√	√	-	-	-	
General	Haval H6	2019 MY	CC6461RM/CC6472RM	CD(Entertainment system)	√	√	√	√	-	-	-	
General	Haval H6	2019 MY	CC6461RM/CC6472RM	ACC(Automatic cruise)	√	√	√	√	-	-	-	
General	Haval H6	2019 MY	CC6461RM/CC6472RM	IFC(Intelligent front	√	√	√	√	-	-	-	
General	Haval H6	2019 MY	CC6461RM/CC6472RM	RSDS_L(left radar)	√	√	√	√	-	-	-	
General	Haval H6	2019 MY	CC6461RM/CC6472RM	RSDS_R(right radar)	√	√	√	√	-	-	-	
General	Haval H6	2019 MY	CC6464RM	ECM(engine system)	engine system(4B15)	√	√	√	√	√	-	-
General	Haval H6	2019 MY	CC6464RM	ECM(engine system)	engine system(4B13)	√	√	√	√	√	-	-
General	Haval H6	2019 MY	CC6464RM	ECM(engine system)	engine system(4C20)	√	√	√	√	√	√	-
General	Haval H6	2019 MY	CC6464RM	ECM(engine system)	UAES GDI China VI (4B15A+4C20B)	√	√	√	√	√	-	-
General	Haval H6	2019 MY	CC6464RM	AT(Automatic transmission	Transmission control	√	√	√	√	-	-	-
General	Haval H6	2019 MY	CC6464RM	AT(Automatic transmission	Transmission control	√	√	√	√	-	-	-
General	Haval H6	2019 MY	CC6464RM	SRS(Airbag system)		√	√	√	√	-	-	-
General	Haval H6	2019 MY	CC6464RM	ICM/IP(Instrument panel	IP(full color instrument	√	√	√	√	√	-	maintenance setting
General	Haval H6	2019 MY	CC6464RM	ICM/IP(Instrument panel	IP(Non-full color instrument	√	√	√	√	√	-	maintenance setting
General	Haval H6	2019 MY	CC6464RM	TPMS(Tire pressure		√	√	√	√	-	-	-
General	Haval H6	2019 MY	CC6464RM	ESP(Electronic stability		√	√	√	√	√	-	Write VIN, Network configuration(manual), yaw rate sensor calibration, manual
General	Haval H6	2019 MY	CC6464RM	BCM(Body control system)		√	√	√	√	√	-	-
General	Haval H6	2019 MY	CC6464RM	AC(Auto A/C system)		√	√	√	√	√	-	-
General	Haval H6	2019 MY	CC6464RM	PEPS(Passive entry)		√	√	√	√	-	-	-
General	Haval H6	2019 MY	CC6464RM	ESCL(Electronic steering		√	√	√	√	-	-	-
General	Haval H6	2019 MY	CC6464RM	SBWM(Electronic shifter)	SBWM(Electronic shifter)	√	√	√	√	-	-	-
General	Haval H6	2019 MY	CC6464RM	SBWM(Electronic shifter)	SBWM(Electronic shifter)(MAX)	√	√	√	-	-	-	-
General	Haval H6	2019 MY	CC6464RM	EPS(Electric steering		√	√	√	√	√	-	-
General	Haval H6	2019 MY	CC6464RM	SAS(Steering wheel		√	√	√	√	-	-	Write VIN, calibration
General	Haval H6	2019 MY	CC6464RM	CVVL(Continuously		√	-	-	√	-	-	Write VIN, Network configuration(manual)
General	Haval H6	2019 MY	CC6464RM	GW(Gateway system)	GW(Independent Gateway system)	√	√	√	√	-	-	-
General	Haval H6	2019 MY	CC6464RM	GW(Gateway system)	GW(Independent gateway)(include	√	√	√	√	-	-	-
General	Haval H6	2019 MY	CC6464RM	AVM(Around view module)		√	√	√	√	-	-	Write VIN, Network configuration(manual), Electronic control unit serial
General	Haval H6	2019 MY	CC6464RM	RVC(Rear-view camera)		√	√	√	√	-	-	-
General	Haval H6	2019 MY	CC6464RM	PAS(Parking assist	PAS(Parking assist system)	√	√	√	√	-	-	Write VIN, Network configuration(manual)
General	Haval H6	2019 MY	CC6464RM	PAS(Parking assist	APA(Automatic parking assist	√	√	√	√	-	-	Write VIN, Network configuration(manual)
General	Haval H6	2019 MY	CC6464RM	IFC(Intelligent front		√	√	√	√	-	-	-
General	Haval H6	2019 MY	CC6464RM	SHM(Seat heating module)		√	√	√	√	-	-	-
General	Haval H6	2019 MY	CC6464RM	RSDS_L(left radar)		√	√	√	√	-	-	-
General	Haval H6	2019 MY	CC6464RM	RSDS_R(right radar)		√	√	√	√	-	-	-
General	Haval H6	2019 MY	CC6464RM	T-BOX(Internet of	TBOX(Internet of Vehicles host	√	√	√	√	-	-	-
General	Haval H6	2019 MY	CC6464RM	T-BOX(Internet of	T-BOX(Internet of Vehicles host	√	√	√	√	-	-	-
General	Haval H6	2019 MY	CC6464RM	HUT(Navigation System)		√	√	√	√	-	-	-
General	Haval H6	2019 MY	CC6464RM	ACC(Automatic cruise		√	√	√	√	-	-	-
General	Haval H6	2019 MY	CC6464RM	DSM(Driver side seat		√	√	√	√	√	-	-
General	Haval H6	2019 MY	CC6464RM	DDCM(Driver side door		√	√	√	√	-	-	Write VIN, Network configuration(manual)
General	Haval H6	2019 MY	CC6464RM	PDCM(Front driver side		√	√	√	√	-	-	Write VIN, Network configuration(manual)
General	Haval H6	2019 MY	CC6464RM	GLO-NASS(GLO-NASS		√	√	√	-	-	-	-
General	Haval H6	2019 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	ECM(engine system)	4C20-MT92 engine system	√	√	√	√	√	√	-
General	Haval H6	2019 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	ECM(engine system)	4D20Bosch diesel engine system	√	√	√	√	√	√	-
General	Haval H6	2019 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	ECM(engine system)	engine system(4G15B)	√	√	√	√	√	√	-
General	Haval H6	2019 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	ECM(engine system)	engine system(4B15)	√	√	√	√	√	√	-
General	Haval H6	2019 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	ECM(engine system)	4D20 Delphi Euro V engine	√	√	√	√	√	√	-
General	Haval H6	2019 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	AT(Automatic transmission	Transmission control	√	√	√	√	-	-	-

Diagnostic List GREAT WALL MOTOR_v10.52

Remark:

- 1. √ : means that the system has this function
- 2. - : means that the system does not have this function
- 3. compared with the last version, the new added function is marked in red color

Model Menu		System				Function						
						Read ECU information	Read DTC	Erase DTC	Live Data	Actuation Test	Read freeze frame	Remarks (Other functions)
General	Haval H6	2019 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	AT(Automatic transmission	Transmission control	√	√	√	√	-	-	-
General	Haval H6	2019 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	AT(Automatic transmission	Transmission control	√	√	√	√	-	-	-
General	Haval H6	2019 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	AT(Automatic transmission	Transmission control system6AT	√	√	√	√	√	-	-
General	Haval H6	2019 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	SRS(Airbag system)		√	√	√	√	-	-	-
General	Haval H6	2019 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	TCP/IP(Instrument panel		√	√	√	-	√	-	Read and write maintenance mileage default value, Read and write maintenance
General	Haval H6	2019 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	EPB(Electronic parking		√	√	√	√	√	-	-
General	Haval H6	2019 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	ESP(Electronic stability		√	√	√	√	√	-	-
General	Haval H6	2019 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	BCM(Body control system)		√	√	√	√	√	-	-
General	Haval H6	2019 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	AC(A/C control system)		√	√	√	√	√	-	-
General	Haval H6	2019 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	PEPS(Keyless start system		√	√	√	√	√	-	-
General	Haval H6	2019 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	EPS(Electric steering		√	√	√	√	√	-	-
General	Haval H6	2019 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	CVVL(Continuously		√	-	-	√	-	-	Write VIN, Network configuration(manual)
General	Haval H6	2019 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	SBWM(Electronic shifter)		√	√	√	√	-	-	-
General	Haval H6	2019 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	AFS(Adaptive Headlight		√	√	√	√	-	-	-
General	Haval H6	2019 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	AVM(Around view module)		√	√	√	√	-	-	-
General	Haval H6	2019 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	RVC(Rear-view camera)		√	√	√	√	-	-	-
General	Haval H6	2019 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	PAS(Parking assist	APA(Automatic parking assist	√	√	√	√	-	-	-
General	Haval H6	2019 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	PAS(Parking assist	PAS(Parking assist system)	√	√	√	√	-	-	-
General	Haval H6	2019 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	NEXTRAC(Intelligent FWD)		√	√	√	√	-	-	-
General	Haval H6	2019 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	CD(Entertainment system)	CD(Delphi CD)	√	√	√	√	-	-	-
General	Haval H6	2019 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	CD(Entertainment system)	ADAYO CD(CD host_19 MY)	√	√	√	√	√	-	-
General	Haval H6	2019 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	CD(Entertainment system)	CD(Desay SV CD)	√	√	√	√	-	-	-
General	Haval H6	2019 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	ESCL(Electronic steering		√	√	√	√	-	-	-
General	Haval H6	2019 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	GW(Gateway system)		√	√	√	√	-	-	-
General	Haval H6	2019 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	SAS(Steering wheel		√	√	√	√	-	-	-
General	Haval H6	2019 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	SCM(Seat heating massage		√	√	√	√	-	-	-
General	Haval H6	2019 MY	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC64	CMS(CAN signal conversion		√	√	√	√	√	-	-
General	GREAT WALL		MM single point engine			-	√	√	√	-	-	Perform component control
General	GREAT WALL		Delphi engine system			√	√	√	√	√	-	System state
General	GREAT WALL		UAES electronic control unit			-	√	√	-	-	-	System parameters; self-adjusting parameter adjustment; system reset
General	GREAT WALL		UAES II electronic control unit			√	√	√	√	√	-	System state
General	GREAT WALL		Delphi MT20U engine			-	√	√	√	√	-	System state
General	GREAT WALL		4L88 engine EGR system			-	√	-	√	-	-	Read system parameter; calibration
General	GREAT WALL		GREAT WALL bosch-edc16 Diesel engine			-	√	√	√	-	-	Component test; Engine test; matching function
General	GREAT WALL		Bosch V50 engine system			√	√	√	√	√	√	Engine test
General	GREAT WALL		JM491Q-ME			-	√	√	√	√	-	-
General	GREAT WALL		491Q (BOSCH M154)			-	√	√	-	-	-	System parameters; self-adjusting parameter adjustment; system reset
General	GREAT WALL		Delphi MT80 engine			√	√	√	√	√	√	write VIN; tooth learning; system configuration
General	GREAT WALL		UAES Euro IV engine system			√	√	√	√	√	√	-
General	GREAT WALL		AEROSPACE MITSUBISHI system-Delphi Euro III engine system			√	√	√	√	-	√	System state; static actuation test; dynamic actuation test
General	GREAT WALL		Liaoning Xinfeng electronic control system			√	√	√	√	-	√	-
General	GREAT WALL type		Delphi MT20U2_EOBD electronic control system			√	√	√	√	√	√	Read historical fault code; Oxygen sensor feedback rationality diagnosis; idle catalytic converter diagnosis; CKP learning; fault code diagnosis test
General	Other models		MM single point engine			-	√	√	√	-	-	Perform component control
General	Other models		Delphi engine system			√	√	√	√	√	-	System state
General	Other models		UAES electronic control unit			-	√	√	-	-	-	System parameters; self-adjusting parameter adjustment; system reset
General	Other models		UAES II electronic control unit			√	√	√	√	√	-	System state
General	Other models		Delphi MT20U engine			-	√	√	√	√	-	System state
General	Other models		4L88 engine EGR system			-	√	-	√	-	-	Read system parameter; calibration
General	Other models		GREAT WALL bosch-edc16 Diesel engine			-	√	√	√	-	-	Component test; Engine test; matching function
General	Other models		Bosch V50 engine system			√	√	√	√	√	√	Engine test
General	Other models		JM491Q-ME			-	√	√	√	√	-	-
General	Other models		491Q (BOSCH M154)			-	√	√	-	-	-	System parameters; self-adjusting parameter adjustment; system reset

Diagnostic List GREAT WALL MOTOR_v10.52

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color

Model Menu		System		Function						Remarks (Other functions)	
				Read ECU information	Read DTC	Erase DTC	Live Data	Actuation Test	Read freeze frame		
General	Other models	Delphi MT80 engine		√	√	√	√	√	√	write VIN; tooth learning; system configuration	
General	Other models	UAES Euro IV engine system		√	√	√	√	√	√	-	
General	Other models	AEROSPACE MITSUBISHI system-Delphi Euro III engine system		√	√	√	√	-	-	System state; static actuation test; dynamic actuation test	
General	Other models	Liaoning Xinfeng electronic control system		√	√	√	√	-	√	-	
General type	Other models	Delphi MT20U2_EOBD electronic control system		√	√	√	√	√	√	Read historical fault code; Oxygen sensor feedback rationality diagnosis; idle catalytic converter diagnosis; CKP learning; fault code diagnosis test	
General	Other models	Hyundai Mobis_P4MFI_AT system		√	√	√	√	√	-	-	
General	Other models	Bunge_VT2_CVT_AT system		√	√	√	√	-	-	-	
General	Other models	YUBEI EPS system		-	√	√	-	-	-	-	
General	GREAT WALL	engine system		√	√	√	√	√	-	Read network configuration information; write network configuration	
General	GREAT WALL	Tansmission system(BungeCVI)		-	√	√	√	√	-	Read network configuration information; write network configuration	
General	GREAT WALL	Tansmission system(AMT)		√	√	√	√	-	√	Special function, Self-learning	
General	GREAT WALL	Airbag		√	√	√	√	-	-	Read network configuration information; write network configuration	
General	GREAT WALL	ABS		√	√	√	√	-	-	Read network configuration information; write network configuration	
General	GREAT WALL	Instrument control system		√	√	√	-	-	-	Read network configuration information; write network configuration	
General type	GREAT WALL C50	Body control system		√	√	√	√	√	-	Read network configuration information; write network configuration information, key matching, tire pressure sensor learning, system configuration, tire pressure sensor learning(new)	
General	GREAT WALL	SICC IMMO		√	√	√	√	√	-	-	
General	GREAT WALL	engine system		√	√	√	√	√	-	Read network configuration information; write network configuration	
General	GREAT WALL	Airbag system		√	√	√	√	-	-	Read network configuration information; write network configuration	
General	GREAT WALL	ABS		√	√	√	√	-	-	Read network configuration information; write network configuration	
General	GREAT WALL	Delphi body system		√	√	√	√	√	-	Read network configuration information; write network configuration	
General	GREAT WALL	Electronic stability system		-	√	√	√	-	-	Read network configuration information; write network configuration	
General	GREAT WALL	IP system		√	√	√	-	-	-	Read network configuration information; write network configuration	
General	GREAT WALL	A/C control system		√	√	√	-	√	-	Read network configuration information; write network configuration	
General	GREAT WALL	Keyless start		√	√	√	√	√	-	Read network configuration information; write network configuration	
General	GREAT WALL	engine system		√	√	√	√	√	-	Read network configuration information; write network configuration	
General	GREAT WALL	Airbag system		√	√	√	√	-	-	Read network configuration information; write network configuration	
General	GREAT WALL	ABS		√	√	√	√	-	-	Read network configuration information; write network configuration	
General	GREAT WALL	Body control system		√	√	√	√	√	-	Read network configuration information; write network configuration	
General	GREAT WALL	Electronic stability system		-	√	√	√	-	-	Read network configuration information; write network configuration	
General	GREAT WALL	Instrument system		√	√	√	-	-	-	Read network configuration information; write network configuration	
General	GREAT WALL	A/C control system		√	√	√	-	√	-	Read network configuration information; write network configuration	
General	GREAT WALL	Passive entry passive start system		√	√	√	√	√	-	Read network configuration information; write network configuration	
General	GREAT WALL	2013 MY		Transmission electronic control system(TCU)		√	√	√	√	-	write network configuration information
General	GREAT WALL	C50 upgrade		KSTAR press key type PEPS system		√	√	√	√	-	After-sale function; Read network configuration information; write network
General	GREAT WALL	C50 upgrade		KSTAR knob type PEPS system		√	√	√	√	-	After-sale function; Read network configuration information; write network
General	GREAT WALL			Transmission system(DSI)		√	√	√	√	-	Offline configuration function; Read network configuration information; write
General	GREAT WALL	UAES engine(New Version)		√	√	√	√	√	-	Read network configuration information; write network configuration	
General	GREAT WALL	UAES engine(ME1788)		√	√	√	√	√	-	Read network configuration information; write network configuration	
General type	GREAT WALL C30	Bosch ABS(ESP) system(CAN)		√	√	√	√	√	-	Read network configuration information; write network configuration information; steering sensor calibration; Longitudinal sensor calibration;	
General type	GREAT WALL C30	Body control system(BCM)		√	√	√	√	√	-	Read network configuration information; write network configuration information; key matching; tire pressure sensor learning; write system configuration; VIN; Write body anti-theft configuration	
General	GREAT WALL	Instrument system(IP)		√	√	√	-	-	-	Read network configuration information; write network configuration	
General	GREAT WALL	KSTAR press key type PEPS system		√	√	√	√	√	-	Read network configuration information; write network configuration	
General	GREAT WALL	2011-2014		Anti-lock brake system	Bosch ABS9 system(K)	√	√	√	√	-	Read freeze frame; Offline configuration; manual exhaust function
General	GREAT WALL	Rent Version		Drive motor control		√	√	√	√	-	Special operation; Writing function
General	GREAT WALL	Rent Version		Charge controller(OBC)		√	√	√	-	-	Read vehicle configuration information; Write vehicle network configuration
General	GREAT WALL	Rent Version		Instrument system(IP)		√	√	√	-	-	Read vehicle configuration information; Write vehicle network configuration
General	GREAT WALL	Rent Version		Vehicle controller(VCU)		√	√	√	√	√	Clear battery pack data; Writing function; Data backup and restore function
General	GREAT WALL	Rent Version		Battery Management		√	√	√	-	-	Clear function; Writing function
General	GREAT WALL	Rent Version		ABS(ABS)		√	√	√	√	-	exhaust function; Read network configuration information; write network

Diagnostic List GREAT WALL MOTOR_v10.52

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color

Model	Menu	System	Function						Remarks (Other functions)	
			Read ECU information	Read DTC	Erase DTC	Live Data	Actuation Test	Read freeze frame		
General	GREAT WALL	Rent Version	Electric power steering	√	√	√	-	-	-	steering sensor calibration
General	GREAT WALL	Rent Version	Remote monitoring	√	√	√	√	-	-	write VIN; Write vehicle network configuration
General	GREAT WALL	Rent Version	Air conditioning control	√	√	√	√	√	-	Write vehicle configuration information
General	GREAT WALL	Non-Rent Version	Drive motor control	√	√	√	√	√	-	Special operation; Writing function
General	GREAT WALL	Non-Rent Version	Vehicle controller (VCU)	√	√	√	√	√	√	Clear battery pack data; Writing function; Data backup and restore function
General	GREAT WALL	Non-Rent Version	Battery Management	√	√	√	√	√	-	Special operation; Writing function
General	GREAT WALL	Non-Rent Version	Instrument system (IP)	√	√	√	√	-	-	Writing function
General	GREAT WALL	Non-Rent Version	Air conditioning control	√	√	√	√	√	-	Writing function
General	GREAT WALL	Non-Rent Version	Electronic parking	√	√	√	√	-	-	-
General	GREAT WALL	Non-Rent Version	Charge controller (OBC)	√	√	√	-	-	-	Read vehicle configuration information; Write vehicle network configuration
General	GREAT WALL	Non-Rent Version	Remote monitoring	√	√	√	√	-	-	write VIN; Write vehicle network configuration
General	GREAT WALL	Non-Rent Version	Electric power steering	√	√	√	-	-	-	steering sensor calibration
General	GREAT WALL	Non-Rent Version	Body control module (BCM)	√	√	√	√	-	-	Writing function; key learning; Tire pressure learning
General	GREAT WALL	Non-Rent Version	Electronic stabilization	√	√	√	√	√	-	Writing function; manual exhaust; steering angle sensor calibration; internal
General	GREAT WALL	Rent Version High	Vehicle controller (VCU)	√	√	√	√	√	√	Clear battery pack data; Writing function; Data backup and restore function
General	GREAT WALL	Rent Version High	Instrument system (IP)	√	√	√	√	-	-	Writing function
General	GREAT WALL	Rent Version High	Air conditioning control	√	√	√	√	√	-	Writing function
General	GREAT WALL	Rent Version High	Electronic stabilization	√	√	√	√	√	-	Writing function; manual exhaust; steering angle sensor calibration; internal
General	GREAT WALL	Rent Version High	Electric power steering	√	√	√	-	-	-	steering sensor calibration
General	GREAT WALL	Rent Version High	Drive motor control	√	√	√	√	√	-	Special operation; Writing function
General	GREAT WALL	Rent Version High	Charge controller (OBC)	√	√	√	-	-	-	Read vehicle configuration information; Write vehicle network configuration
General	GREAT WALL	Rent Version High	Electronic parking	√	√	√	√	-	-	-
General	GREAT WALL	Rent Version High	Body control module (BCM)	√	√	√	√	-	-	Writing function; key learning; Tire pressure learning
General	GREAT WALL	Rent Version High	Remote monitoring	√	√	√	√	-	-	write VIN; Write vehicle network configuration
General	GREAT WALL	Rent Version High	Battery Management	√	√	√	√	√	-	Special operation; Writing function
General	GREAT WALL	National Version	Vehicle controller (VCU)	√	√	√	√	√	√	Clear battery pack data; Writing function; Data backup and restore function
General	GREAT WALL	National Version	Battery Management	√	√	√	√	√	-	Special operation; Writing function
General	GREAT WALL	National Version	Drive motor control	√	√	√	√	√	-	Special operation; Writing function
General	GREAT WALL	National Version	Charge controller (OBC)	√	√	√	-	-	-	Read vehicle configuration information; Write vehicle network configuration
General	GREAT WALL	National Version	Remote monitoring	√	√	√	√	-	-	write VIN; Write vehicle network configuration
General	GREAT WALL	National Version	Instrument system (IP)	√	√	√	-	-	-	Read vehicle configuration information; Write vehicle network configuration
General	GREAT WALL	National Version	Electric power steering	√	√	√	-	-	-	steering sensor calibration
General	GREAT WALL	National Version	ABS (ABS)	√	√	√	√	√	-	exhaust function; Read network configuration information; write network
General	GREAT WALL	National Version	Air conditioning control	√	√	√	√	√	-	Writing function
GWM New energy vehicle	18 MY C30EV	AC(A/C control system)		√	√	√	√	√	-	-
GWM New energy vehicle	18 MY C30EV	BCM(Body control system)		√	√	√	√	√	-	Write VIN; Network configuration(manual); OEM equipment number; Start remote key learning; tire pressure sensor learning
GWM New energy vehicle	18 MY C30EV	IP(Instrument system)		√	√	√	√	-	-	Network configuration(manual); Service reset
GWM New energy vehicle	18 MY C30EV	VCU(Vehicle controller)		√	√	√	√	√	-	Write VIN; Network configuration(manual); VCU replacement learning results; Clear battery pack data; Data backup;
GWM New energy vehicle	18 MY C30EV	ESP(Electronic stabilization program)		√	√	√	√	√	-	Write VIN; Network configuration(manual); calibration; manual exhaust function
GWM New energy vehicle	18 MY C30EV	EPS(Electric power steering system)		√	√	√	√	-	-	-
GWM New energy vehicle	18 MY C30EV	MCU(Drive motor control unit)		√	√	√	√	-	-	Steering angle sensor angle clear; Rotor offset angle calibration; Write steering angle sensor angle
GWM New energy vehicle	18 MY C30EV	BMS(Battery Management System)		√	√	√	√	√	-	Write VIN; ECU function configuration battery pack serial number; Electronic control unit CAN matrix version number; Real time; Accumulated charging Ampere hours of battery pack; Accumulated discharging Ampere hours of battery pack; Battery health status; Clear BIC ID; distribute BIC ID; Mandatory

Diagnostic List GREAT WALL MOTOR_v10.52

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color

Model Menu		System				Function						
						Read ECU information	Read DTC	Erase DTC	Live Data	Actuation Test	Read freeze frame	Remarks (Other functions)
GWM New energy vehicle	18 MY C30EV	OBC (Charge controller)				√	√	√	-	-	-	-
GWM New energy vehicle	18 MY C30EV	RMC (Remote monitoring controller)				√	√	√	√	-	-	Write VIN; Network configuration(manual)
GWM New energy vehicle	18 MY C30EV	CD/MP5 (CD host)				√	√	√	-	-	-	-
General	CHB025A	engine system(ECM)	Delphi MT20U2_EOBD engine			√	√	√	√	√	√	fault code diagnosis test; Read and write VIN; write VIN(new); Read VIN
General	CHB025A	engine system(ECM)	Delphi MT80 engine system			√	√	√	√	√	√	write VIN; CKP learning; write VIN(new); Read VIN
General type	CHB025A	engine system(ECM)	4D20 Delphi Euro V engine system(2013 MY)			√	√	√	√	√	-	Routine control; write injector code; write injector code; Read network configuration information; write network configuration information(manual); write network configuration information(automatic); OBD diagnostic function;
General type	CHB025A	engine system(ECM)	4D20 Bosch diesel engine system(2013 MY)			√	√	√	√	√	-	Read network configuration information; write network configuration information(automatic); Engine test; write network configuration information(manual); write injector code; write injector code(write all); write injector code(separate); OBD diagnostic function; ECU self-learning;
General type	CHB025A	engine system(ECM)	4G15T engine electronic control system			√	√	√	√	√	-	Read network configuration information; write network configuration information(manual); Read and write VIN; IUPR
General	CHB025A	engine system(ECM)	UAES engine(ME1788)			√	√	√	√	√	-	Read network configuration information; write network configuration
General	CHB025A	engine system(ECM)	4G15E engine electronic			√	√	√	√	√	-	Read network configuration information; write network configuration
General type	CHB025A	engine system(ECM)	Delphi Euro IV engine system			√	√	√	√	√	-	Routine control; write injector code; write injector code; Read network configuration information; write network configuration information(manual); write network configuration information(automatic); OBD diagnostic function; IUPR function; DPF(Diesel Particulate Filter); ECU self-learning; Read steering sensor calibration(only for ESP); Read network configuration information; write network configuration information(automatic); write network configuration information(manual); exhaust function; yaw angle sensor
General	CHB026A	Electronic stabilization program(ESP)				√	√	√	√	√	-	write network configuration information
General	CHB027A	Transmission electronic				√	√	√	√	√	-	Writing function; tire pressure sensor learning; Tire pressure learning
General	CHB025A	Body control system(BCM)				√	√	√	√	√	-	Vehicle configuration information; Writing function
General	CHB025A	Parking assist				√	√	√	√	√	-	Writing function; slope sensor calibration
General	CHB025A	Electronic parking				√	√	√	√	√	-	Writing function
General	CHB026A	Internet of Vehicles				√	√	√	√	√	-	Vehicle configuration information; Writing function
General	CHB027A	Airbag module(ABM)				√	√	√	√	√	-	Writing function
General	CHB025A	Air conditioning control				√	√	√	√	√	-	Vehicle configuration information; Writing function
General	CHB025A	CD host (CD)				√	√	√	√	√	-	Vehicle configuration information; Writing function
General	CHB025A	Independent gateway(GW)				√	√	√	√	√	-	Writing function
General	CHB025A	Instrument system(IP)				√	√	√	√	√	-	Vehicle configuration information; Writing function; after-sale learning
General	CHB025A	Passive entry passive				√	√	√	√	√	-	Vehicle configuration information; Writing function
General	CHB025A	Rear view camera(RVC)				√	√	√	√	√	-	Read network configuration information; write network configuration
General	CHB025A	Intelligent 4WD(TOD)				√	√	√	√	√	-	Writing function
General	CHB025A	Electronic shifter(SBWM)				√	√	√	√	√	-	Writing function; OBD function; VVT self-learning; IUPR
General	HS_8AT	engine system(ECM)	engine system(4C20A)			√	√	√	√	√	√	Writing function, write injector code, IUPR, DPF (Parking regeneration
General	HS_8AT	engine system(ECM)	engine system(ED61)			√	√	√	√	√	√	Read freeze frame; Read network configuration information; write network
General	HS_8AT	Airbag(ABM)				√	√	√	√	√	-	Read network configuration, write network configuration(manual), Write four tire pressure sensor ID, tire pressure sensor learning, tire pressure sensor learning(new), BCM initial angle detection, BCM initial angle compensation,
General type	HS_8AT	Body control system(BCM)				√	√	√	√	√	-	Read network configuration information; write network configuration
General	HS_8AT	Transmission electronic				√	√	√	√	√	-	Read network configuration information; write network configuration(manual);
General	HS_8AT	Electronic stabilization				√	√	√	√	√	-	Read network configuration information; write network configuration(manual);
General	HS_8AT	Driver side door control				√	√	√	√	√	-	Read network configuration information; write network configuration(manual)
General	HS_8AT	Front passenger side				√	√	√	√	√	-	Read network configuration information; write network configuration(manual)
General	HS_8AT	Keyless start				√	√	√	√	√	-	After-sale function, Read network configuration information, write network
General	HS_8AT	Gateway(GW)				√	√	√	√	√	-	Read network configuration information; write network configuration(manual)
General	HS_8AT	Instrument system(IP)				√	√	√	√	√	-	Read network configuration information; write network configuration(manual);
General	HS_8AT	Driver seat memory				√	√	√	√	√	-	Read network configuration information; write network configuration(manual);
General	HS_8AT	Rear-view camera				√	√	√	√	√	-	Read network configuration information; write network configuration(manual);
General	HS_8AT	Steering wheel steering				√	√	√	√	√	-	calibration; Read network configuration information; write network
General	HS_8AT	Adaptive Headlight				√	√	√	√	√	-	Level zero calibration; Read network configuration information; write network

Diagnostic List GREAT WALL MOTOR_v10.52

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color

Model Menu		System			Function						
					Read ECU information	Read DTC	Erase DTC	Live Data	Actuation Test	Read freeze frame	Remarks (Other functions)
General	HS_8AT	Entertainment system(CD)			√	√	√	-	-	-	Vehicle configuration information, Read network configuration information,
General	HS_8AT	Internet of Vehicles			√	√	√	√	-	-	write network configuration information
General	HS_8AT	Seat heating massage			√	√	√	-	-	-	Read network configuration information
General	HS_8AT	A/C control system(AC)			√	√	√	√	-	-	Read network configuration information; write network configuration(manual)
General	HS_8AT	Intelligent 4WD(TOD)			√	√	√	√	√	-	Read network configuration information; write network configuration(manual)
General	HS_8AT	Around view module(AVM)			√	√	√	-	-	-	Vehicle configuration information; after-sales calibration; write network
General	HS_8AT	Adaptive cruise control			√	√	√	√	-	-	write network configuration information; write VIN; after-sales calibration
General	HS_8AT	Intelligent Front View			√	√	√	√	-	-	IFV after-sale calibration; write calibration date; write network
General	HS_8AT	left radar detection			√	√	√	√	-	-	after-sales calibration
General	HS_8AT	right radar detection			√	√	√	√	-	-	after-sales calibration
General	HS_8AT	Electronic shifter(SBWM)			√	√	√	√	-	-	Writing function; write classification code
General	H9_8AT	engine system(ECM)	engine system(4C20A)		√	√	√	√	√	√	Writing function; OBD function; VVT self-learning; IUPR
General	H9_8AT	engine system(ECM)	engine system(ED61)		√	√	√	√	√	-	Writing function, write injector code, OBD function
General	H9_8AT	Airbag(ABM)			√	√	√	√	-	√	Read network configuration information; write network configuration
General type	H9_8AT	Body control system(BCM)			√	√	√	√	√	-	Read network configuration; write network configuration(manual); Write four tire pressure sensor ID; tire pressure sensor learning; tire pressure sensor learning(new); BCM initial angle detection; BCM initial angle compensation; Fatigue driving opening and closing; Clear tire pressure ID with one key
General	H9_8AT	Electronic stabilization			√	√	√	√	-	-	Read network configuration information; write network configuration(manual);
General	H9_8AT	Keyless start			√	√	√	√	√	-	After-sale function; Read network configuration information; write network
General	H9_8AT	Gateway(GW)			√	√	√	-	-	-	Read network configuration information; write network configuration(manual)
General	H9_8AT	Instrument system(IP)			√	√	√	-	√	-	Read network configuration information; write network configuration(manual);
General	H9_8AT	Adaptive Headlight			√	√	√	√	√	-	Level zero calibration; Read network configuration information; write network
General	H9_8AT	Entertainment system(CD)			√	√	√	-	-	-	Vehicle configuration information; write network configuration information
General	H9_8AT	Intelligent 4WD(TOD)			√	√	√	√	√	-	Read network configuration information; write network configuration(manual)
General	H9_8AT	A/C control system(HCM)			√	√	√	√	-	-	Read network configuration information; write network configuration(manual)
General	H9_8AT	Electronic parking			√	√	√	√	-	-	Read network configuration information; write network configuration(manual);
General	H9_8AT	Transmission electronic			√	√	√	√	-	-	Read network configuration information; write network configuration
General	H9_8AT	Driver side door			√	√	√	-	-	-	Read network configuration information; write network configuration(manual)
General	H9_8AT	Front passenger side			√	√	√	-	-	-	Read network configuration information; write network configuration(manual)
General	H9_8AT	Driver seat memory			√	√	√	-	√	-	Read network configuration information; write network configuration(manual)
General	H9_8AT	Rear-view camera			√	-	-	-	-	-	Read network configuration information; write network configuration(manual);
General	H9_8AT	Steering wheel steering			√	√	√	√	-	-	calibration; Read network configuration information; write network
General	H9_8AT	Internet of Vehicles			√	√	√	√	-	-	write network configuration information
General	H9_8AT	A/C control system(AC)			√	√	√	√	-	-	Read network configuration information; write network configuration(manual)
General	H9_8AT	Seat heating massage			√	√	√	-	-	-	Read network configuration information
General	H9_8AT	Electronic differential			√	√	√	√	-	-	write network configuration information
General	H9_8AT	Around view module(AVM)			√	√	√	-	-	-	Vehicle configuration information; after-sales calibration; write network
General	H9_8AT	Adaptive cruise control			√	√	√	√	-	-	write network configuration information; write VIN; after-sales calibration
General	HS_8AT	Intelligent Front View			√	√	√	√	-	-	IFV after-sale calibration; write calibration date; write network
General	HS_8AT	left radar detection			√	√	√	√	-	-	after-sales calibration
General	HS_8AT	right radar detection			√	√	√	√	-	-	after-sales calibration
General	HS_8AT	Electronic shifter(SBWM)			√	√	√	√	-	-	Writing function; write classification code
General type	HS_8AT	PAS(Parking assist system)	With spare tire---Parking Services system(front)		√	-	-	-	-	-	Radar parameter configuration
General type	HS_8AT	PAS(Parking assist system)	With spare tire---Parking Services system(rear)		√	-	-	-	-	-	Radar parameter configuration
General type	HS_8AT	PAS(Parking assist system)	Without spare tire---Parking Services system(front)		√	-	-	-	-	-	Radar parameter configuration
General type	HS_8AT	PAS(Parking assist system)	Without spare tire---Parking Services system(rear)		√	-	-	-	-	-	Radar parameter configuration
General	Wingle 5	Wingle 5(basic model)	engine system(ECM)	Delphi MT20U2_EOBD engine	√	√	√	√	√	-	Read and write VIN; write VIN(new); Read VIN
General	Wingle 5	Wingle 5(basic model)	engine system(ECM)	Bosch V50 Diesel engine system	√	√	√	√	√	-	Read and write VIN; read fault code status data; IQA match

Diagnostic List GREAT WALL MOTOR_v10.52

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color

Model Menu		System				Function						Remarks (Other functions)
						Read ECU information	Read DTC	Erase DTC	Live Data	Actuation Test	Read freeze frame	
General	Wingle 5	Wingle 5(basic model)		engine system(ECM)	VE pump electronic control	-	√	-	-	-	-	-
General type	Wingle 5	Wingle 5(basic model)		engine system(ECM)	UAES Euro IV engine system (491Q engine)	√	√	√	√	√	√	Read and write VIN; IUPR function
General type	Wingle 5	Wingle 5(basic model)		engine system(ECM)	4D20 Delphi electronic control system	√	√	√	√	√	-	write injector code; write injector code; Read network configuration information; write network configuration information(manual); write network configuration information(automatic); write injector code(write all); write injector code(separate); OBD function; EGR self-learning function
General type	Wingle 5	Wingle 5(basic model)		engine system(ECM)	Liaoning Xinfeng electronic control system	√	√	√	√	√	√	write injector code; Engine test
General type	Wingle 5	Wingle 5(basic model)		engine system(ECM)	4D20 Bosch diesel engine system	√	√	√	√	√	√	Read network configuration information; write network configuration information(manual); Engine test; write network configuration information(automatic); write injector code; write injector code(write all); write injector code(separate); OBD function; EGR self-learning function
General type	Wingle 5	Wingle 5(basic model)		engine system(ECM)	4D20 Delphi Euro V engine system	√	√	√	√	√	-	Routine control; write injector code; write injector code; Read network configuration information; write network configuration information(manual); write network configuration information(automatic); OBD diagnostic function; IUPR function; DPF(Diesel Particulate Filter); EGR clear self-learning; Read steering sensor calibration(only for ESP); exhaust function; yaw angle sensor calibration(only for ESP); Read network configuration information; write network configuration information(manual)
General	Wingle 5	Wingle 5(basic model)		engine system(ECM)	491 CNG system	√	√	√	√	-	-	-
General	Wingle 5	Wingle 5(basic model)		engine system(ECM)	CSCI-III system(CNG)	-	-	-	-	-	-	-
General	Wingle 5	Wingle 5(basic model)		engine system(ECM)	2.8TC Bosch(EDC17C63)	√	√	√	√	√	-	Engine test; read fault code status data; Read and write VIN; IQA match; Read
General	Wingle 5	Wingle 5(basic model)		engine system(ECM)	CSCI-III system(CNG)	-	-	-	-	-	-	-
General	Wingle 5	Wingle 5(basic model)		ABS(ABS)	Bosch ABS system	√	√	√	√	√	-	Exhaust mode
General type	Wingle 5	Wingle 5(basic model)		ABS(ABS)	Bosch ABS system(CAN)	√	√	√	√	√	-	steering sensor calibration(only for ESP);exhaust function;yaw angle sensor calibration(only for ESP); Read network configuration information; write network configuration information(manual)
General	Wingle 5	Wingle 5(basic model)		ABS(ABS)	Bosch ABS9 system(upgrade	√	√	√	√	√	-	Exhaust filling; Writing function
General	Wingle 5	Wingle 5(basic model)		Airbag system	Jinzhou Jinheng Airbag	√	√	√	√	-	-	-
General	Wingle 5	Wingle 5(basic model)		Airbag system	491 Airbag system	√	√	√	√	√	-	-
General	Wingle 5	Wingle 5(basic model)		IMMO	Delphi gasoline IMMO	-	√	√	√	-	-	User authorization code setting;anti-theft matching function
General	Wingle 5	Wingle 5(basic model)		IMMO	Delphi diesel(Bosch 2.8TC) IMMO	-	√	√	√	-	-	User authorization code setting;anti-theft matching function;read safty
General type	Wingle 5	Wingle 5(basic model)		IMMO	Delphi diesel(Delphi 4D20) IMMO	√	√	√	√	-	-	matching function; Authorization code setting; enter user authorization code
General	Wingle 5	Wingle 5(basic model)		IMMO	Delphi diesel(Bosch 4D20) IMMO	√	√	√	√	-	-	matching function; Authorization code setting; enter user authorization code
General	Wingle 5	Wingle 5(basic model)		IMMO	Delphi gasoline IMMO(UAES)	-	√	√	√	-	-	User authorization code setting;anti-theft matching function
General type	Wingle 5	Wingle 5(basic model)		IMMO	Delphi IMMO Bosch(EDC17C63) IMMO	-	√	√	√	-	-	User authorization code setting;anti-theft matching function;read safty level;read engine VIN code
General	Wingle 5	Wingle 5(basic model)		IMMO	Delphi diesel(Xinfeng 2.8TC) IMMO	√	√	√	√	-	-	matching function; Authorization code setting; enter user authorization code
General type	Wingle 5	Wingle 5-17 model		engine system(ECM)	4D20 Bosch diesel engine system	√	√	√	√	√	√	Read network configuration information; write network configuration information(manual); Engine test; write network configuration information(automatic); write injector code; write injector code(write all); write injector code(separate); OBD function; EGR self-learning function
General type	Wingle 5	Wingle 5-17 model		engine system(ECM)	4D20 Delphi Euro V engine system	√	√	√	√	√	-	Routine control; write injector code; write injector code; Read network configuration information; write network configuration information(manual); write network configuration information(automatic); OBD diagnostic function;
General	Wingle 5	Wingle 5-17 model		engine system(ECM)	Delphi MT80 engine system	√	√	√	√	√	√	write VIN; CKP learning; write VIN(new); Read VIN
General type	Wingle 5	Wingle 5-17 model		engine system(ECM)	2.8TC Bosch(EDC17C63) electronic control system	√	√	√	√	√	-	Routine control; write injector code; write injector code; Read network configuration information; write network configuration information(manual); write network configuration information(automatic); OBD diagnostic function; IUPR function; DPF(Diesel Particulate Filter); EGR clear self-learning; Read steering sensor calibration(only for ESP); Read network configuration information; write network configuration information(manual); exhaust function; write filling state
General type	Wingle 5	Wingle 5-17 model		ABS(ABS)		√	√	√	√	√	-	steering sensor calibration(only for ESP); Read network configuration information; write network configuration information(manual); exhaust function; write filling state
General	Wingle 5	Wingle 5-17 model		Airbag system(ABM)		√	√	√	√	√	-	Read network configuration information; write network configuration information(manual)
General type	Wingle 5	Wingle 5-17 model		Body control system(BCM)		√	√	√	√	√	-	Read network configuration; write network configuration(manual); key matching; tire pressure sensor learning; Body unlock function; system
General	Wingle 5	Wingle 5-17 model		Air conditioning control module(AC)		√	√	√	√	-	-	Read network configuration information; write network configuration(manual)
General	Wingle 5	Wingle 5-17 model		Instrument system(IP)		√	√	√	-	√	-	Read configuration information; write configuration information
General	Wingle 5	Wingle 5-17 model		Immobilizer(IMMO)	Delphi gasoline IMMO	-	√	√	√	-	-	User authorization code setting;anti-theft matching function
General	Wingle 5	Wingle 5-17 model		Immobilizer(IMMO)	Delphi diesel(Delphi 4D20) IMMO	√	√	√	√	-	-	matching function; Authorization code setting; enter user authorization code
General	Wingle 5	Wingle 5-17 model		Immobilizer(IMMO)	Delphi diesel(Bosch 4D20) IMMO	√	√	√	√	-	-	matching function; Authorization code setting; enter user authorization code
General	Wingle 5	Wingle 5-17 model		Immobilizer(IMMO)	Delphi diesel(Xinfeng 2.8TC) IMMO	√	√	√	√	-	-	matching function; Authorization code setting; enter user authorization code
General	Wingle 5	Wingle 5-17 model		BorgWarner 4WD system(ESOF)		√	√	√	√	√	-	Writing function
General	Wingle 6	Wingle 5-17 model		IMMO	Delphi gasoline IMMO	-	√	√	√	-	-	User authorization code setting;anti-theft matching function
General	Wingle 6	Wingle 5-17 model		IMMO	Delphi diesel(Delphi 4D20) IMMO	√	√	√	√	-	-	matching function; Authorization code setting; enter user authorization code

Diagnostic List GREAT WALL MOTOR_v10.52

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color

Model Menu		System		Function							Remarks (Other functions)
				Read ECU information	Read DTC	Erase DTC	Live Data	Actuation Test	Read freeze frame		
General	Wingle 6	Wingle 5-17 model	IMMO	Delphi diesel(Bosch 4D20) IMMO	√	√	√	√	-	-	matching function; Authorization code setting; enter user authorization code
General	Wingle 6	Wingle 5-17 model		Intelligent 4WD(TOD)	√	√	√	√	-	-	Read network configuration information; write network configuration
General	Wingle 6	Wingle 5-17 model	Electronic stabilization		√	√	√	√	√	-	write network configuration information; manual exhaust; yaw rate sensor
General	Haval H7	Body control system(BCM)			√	√	√	√	√	-	write VIN; write network configuration information; Special function
General	Haval H7	Electronic stabilization			√	√	√	√	√	-	write VIN; write network configuration information; manual exhaust; yaw rate
General	Haval H7	Airbag module(ABM)			√	√	√	√	-	-	write VIN; write network configuration information; IMU static calibration;
General	Haval H7	A/C system(AC)			√	√	√	√	√	-	write VIN; write network configuration information
General	Haval H7	Automatic Headlamp			√	√	√	√	√	-	write VIN, write network configuration information
General	Haval H7	Automatic parking assist			√	√	√	√	-	-	write VIN; write network configuration information
General	Haval H7	Instrument system(IP)	Delphi Instrument system		√	√	√	√	√	-	write VIN; write network configuration information; maintenance setting
General	Haval H7	Instrument system(IP)	Bosch Instrument system		√	√	√	√	√	-	write VIN; write network configuration information; Maintenance function
General	Haval H7	Lane Departure Warning			√	√	√	√	-	-	write VIN; write network configuration information; IPV after-sale
General	Haval H7	Adaptive cruise control			√	√	√	√	-	-	write VIN; write network configuration information; after-sales calibration
General	Haval H7	Parking assist			√	√	√	√	-	-	write VIN; Write vehicle configuration information
General	Haval H7	Front passenger side			√	√	√	-	-	-	write VIN; Write vehicle configuration information; Read vehicle
General	Haval H7	Steering angle			√	√	√	√	-	-	write VIN; SAS calibration; SAS decalibration
General	Haval H7	KSTAR press key type			√	√	√	√	√	-	After-sale function, Read network configuration information, write network
General	Haval H7	Independent gateway(GW)			√	√	√	-	-	-	Read network configuration information; write VIN; write network
General	Haval H7	Internet of Vehicles			√	√	√	√	-	-	write VIN; write network configuration information
General	Haval H7	Around view module(AVM)			√	√	√	-	-	-	Read network configuration information; write VIN; write network
General	Haval H7	Navigation host			√	√	√	-	-	-	Read network configuration information; write VIN; write network
General	Haval H7	CAN signal conversion			√	√	√	√	√	-	CMS model learning;write network configuration information
General	Haval H7	Driver side door control			√	√	√	-	-	-	Read network configuration information; write VIN; write network
General	Haval H7	Seat memory system(DSM)			√	√	√	-	√	-	Read network configuration information; write VIN; write network
General	Haval H7	Seat heating massage			√	√	√	-	-	-	Read network configuration information; write VIN; write network
General	Haval H7	Rear-view camera			√	-	-	-	-	-	Read network configuration information; write VIN; write network
General	Haval H7	Parallel line auxiliary	left radar detection		√	√	√	√	-	-	write network configuration information, after-sales calibration, read after-
General	Haval H7	Parallel line auxiliary	right radar detection		√	√	√	√	-	-	write network configuration information, after-sales calibration, read after-
General	Haval H7	Electric power steering			√	√	√	√	-	-	write VIN; write network configuration information
General	Haval H7	Transmission control			√	√	√	√	-	-	write network configuration information; write VIN; Transmission self-
General type	Haval H8	engine system(ECM)	MT92		√	√	√	√	√	√	Read system configuration, Read network configuration information, write network configuration information(manual), CKP learning, write VIN, IUPR, Read VIN
General	Haval H8	engine system(ECM)	MT92(6AT+ACC+T-Box)		√	√	√	√	-	-	Read network configuration information, write network configuration
General	Haval H8	ABM (Airbag system)			√	√	√	√	-	√	write network configuration information(handwrite), IMU static calibration
General type	Haval H8	BCM (Body control system)			√	√	√	√	√	-	write network configuration information(handwrite), BCM initial angle detection function, tire pressure sensor learning, Fatigue driving opening and closing, Write four tire pressure sensor ID
General type	Haval H8	TCU (Transmission system)			√	√	√	√	-	-	Read network configuration information, write network configuration information(manual), Reset adaptive value, OBD function
General type	Haval H8	ESP(Electronic stabilization program)			√	√	√	√	-	-	write network configuration information(manual), exhaust function
General type	Haval H8	PEPS(Passive entry passive start system)(Push button)			√	√	√	√	√	-	Read network configuration information, write network configuration information(manual), After-sale function
General type	Haval H8	PAS(Parking assist system)	Parking Services system(front)		√	-	-	-	-	-	Version Information, FPAS configuration(manual), FPAS configuration(automatic)
General type	Haval H8	PAS(Parking assist system)	Parking Services system(rear)		√	-	-	-	-	-	Version Information, FPAS configuration(manual), FPAS configuration(automatic)
General	Haval H8	Rain light sensor(RLS)			-	-	-	-	-	-	Rain sensor initialization routine
General	Haval H8	Entertainment system(CD)	Old style CD system		√	√	√	-	-	-	Read network configuration information; write network configuration
General	Haval H8	Entertainment system(CD)	2016 style CD system		√	√	√	-	-	-	Vehicle configuration information; write network configuration information
General	Haval H8	Adaptive cruise control			√	√	√	√	-	-	write network configuration information; write VIN; after-sales calibration
General	Haval H8	Internet of Vehicles	Old style T-BOX system		√	√	√	√	-	-	write network configuration information
General	Haval H8	Internet of Vehicles	2016 style T-BOX system		√	√	√	√	-	-	write network configuration information
General	Haval H8	Around view module(AVM)			√	√	√	-	-	-	Vehicle configuration information; after-sales calibration; write network
General	Haval H8	Seat heating massage			√	√	√	-	-	-	Read network configuration information

Diagnostic List GREAT WALL MOTOR_v10.52

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color

Model Menu		System			Function						Remarks (Other functions)
					Read ECU information	Read DTC	Erase DTC	Live Data	Actuation Test	Read freeze frame	
General	Wingle 6	4D20 Bosch diesel engine system			√	√	√	√	√	-	Network configuration information; Injector code; OBD function module
General type	Wingle 6 (V240)	4D20 Delphi Euro V engine system			√	√	√	√	√	-	Network configuration information; Injector code; OBD function module; Routine control; EGR clear self-learning; IUPR function
General	Wingle 6	ABS			√	√	√	√	√	-	Read network configuration information; write network configuration
General	Wingle 6	Body control system			√	√	√	√	√	-	Read network configuration information; write network configuration
General	Wingle 6	Airbag system			√	√	√	√	√	-	Read network configuration information; write network configuration
General	Wingle 6	A/C control system			√	√	√	√	-	-	Read network configuration information; write network configuration
General	Wingle 6	Instrument system			√	√	√	-	√	-	Read network configuration information; write network configuration
General	Wingle 6	BorgWarner TOD system			√	√	√	-	√	-	Read network configuration information; write network configuration
General	Haval H1	Engine electronic control system(ECM)			√	√	√	√	√	-	Read network configuration information; write network configuration
General type	Haval H1	ABS (ABS)			√	√	√	√	√	-	Read network configuration information; write network configuration information; steering sensor calibration; longitudinal acceleration calibration
General	Haval H1	Body control system(BCM)			√	√	√	√	√	-	Read network configuration information; write network configuration
General	Haval H1	Instrument system(IP)			-	√	√	-	-	-	Read network configuration information; write network configuration
General	Haval H1	Electric power steering system			√	√	√	-	-	-	Read network configuration information; write network configuration
General	Haval H1	SICC IMMO			√	√	√	√	√	-	Offline function, Replace engine EMS, Replace transponder, Replace the anti-
General	Haval H1	GETRAG AMT transmission(UAES)			√	√	√	√	√	-	write VIN, write TSN code, TCU reset
General	Haval H1	CHO41AUTOLIV Airbag system			√	√	√	√	-	-	write configuration information
General	Haval H2	Engine electronic control system(ECM)			√	√	√	√	√	√	Read network configuration information; write network configuration
General	Haval H2	ABS (ABS)			√	√	√	√	√	-	Read network configuration information; write network configuration
General	Haval H2	Airbag system(SRS)			√	√	√	√	√	-	Read network configuration information; write network configuration
General type	Haval H2	Body controller system(BCM)			√	√	√	√	√	-	Read network configuration information; write network configuration information;tire pressure sensor learning;tire pressure sensor learning(new);
General	Haval H2	Electric power steering system(EPS)			√	√	√	√	-	-	Read network configuration information; write network configuration
General	Haval H2	Electronic steering column lock(ESCL)			√	√	√	-	-	-	Read network configuration information; write network configuration
General	Haval H2	Gateway(GW)			√	√	√	-	-	-	Read network configuration information; write network configuration
General	Haval H2	Gateway(GW)	Gateway(Continental)		√	√	√	√	-	-	Writing function
General	Haval H2	BorgWarner TOD system			√	√	√	√	-	-	Read network configuration information; write network configuration
General	Haval H2	Keyless start system(PEPS)			√	√	√	√	√	-	Read network configuration information; write network configuration
General	Haval H2	Rear view camera(RVC)			√	√	√	-	-	-	Read network configuration information; write network configuration
General	Haval H2	Instrument system(IP)			√	√	√	√	√	-	Read network configuration information; write network configuration
General	Haval H2	A/C control system(AC)	Red tab		√	√	√	√	√	-	Read network configuration information;write network configuration
General	Haval H2	A/C control system(AC)	Blue tab		√	√	√	√	√	-	write VIN, Network configuration(manual)
General	Haval H2	Headlamp Leveling System(ALS)			√	√	√	√	√	-	Network configuration(manual), Level zero calibration
General	Haval H2	Steering wheel steering angle sensor(SAS)			√	√	√	√	-	-	Read network configuration information; write network configuration
General	Haval H2	Intelligent 4WD(TOD)			√	√	√	√	√	-	Read network configuration; write network configuration information(manual)
General	Haval H2	Electronic stabilization			√	√	√	√	√	-	write network configuration information; manual exhaust; yaw rate sensor
General	Haval H2	CAN signal conversion			√	√	√	√	-	-	CMS model learning; write network configuration information
General	Haval H2	CD host (CD/MP5)			√	-	-	√	-	-	Writing function
General	Haval H2	Transmission control		Transmission electronic	√	√	√	√	√	-	write network configuration information
General	Haval H2	Transmission control		Transmission control	√	√	√	√	-	-	Write VIN, Network configuration(manual), transmission self-learning, clutch
General	Haval H2	Electronic shifter			√	√	√	√	-	-	Writing function;write classification code
General	Haval H2s	Engine control unit(ECM)			√	√	√	√	√	√	Writing function; write network configuration information; EBS battery ID
General	Haval H2s	Body control system(BCM)			√	√	√	√	√	-	Writing function; Remote key matchinglow configuration; write network
General	Haval H2s	Airbag module(ABM)			√	√	√	√	-	-	Writing function; write network configuration information; write loop
General	Haval H2s	Instrument system(IP)			√	√	√	√	√	-	write VIN; Service reset; Total mileage reset; write network configuration
General	Haval H2s	Keyless start			√	√	√	√	-	-	Writing function; after-sale learning; write network configuration
General	Haval H2s	Electronic power			√	√	√	√	-	-	Writing function; EPS component calibration; write network configuration
General	Haval H2s	A/C system(AC)			√	√	√	√	√	-	Writing function; write network configuration information
General	Haval H2s	Rear view camera(RVC)			√	√	√	√	-	-	Writing function; write network configuration information
General	Haval H2s	Navigation host			√	√	√	√	-	-	Writing function; write network configuration information
General	Haval H2s	Independent gateway(GW)			√	√	√	√	-	-	Writing function; write network configuration information
General	Haval H2s	Electronic steering			√	√	√	√	-	-	Writing function; write network configuration information

Diagnostic List GREAT WALL MOTOR_v10.52

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color

Model Menu		System			Function						
					Read ECU information	Read DTC	Erase DTC	Live Data	Actuation Test	Read freeze frame	Remarks (Other functions)
General	Haval H2s	Steering angle			√	√	√	√	-	-	write VIN; Write vehicle configuration information; SASsteering angle
General	Haval H2s	Tire pressure monitoring			√	√	√	√	-	-	Writing function; ABS delayed write; write network configuration
General	Haval H2s	Electronic stabilization			√	√	√	√	√	-	Writing function; Special operation; manual exhaust; write network
General	Haval H2s	Transmission control			√	√	√	√	-	-	Writing function; write network configuration information
General	Haval H2s	Parking Services			-	-	-	-	-	-	Radar parameter configuration
General	Haval H2s	Electronic shifter (SBWM)			√	√	√	√	-	-	Writing function; write classification code
General	Haval H2s	SICC IMMO			√	√	√	√	√	-	Offline function; Replace engine EMS; Replace transponder; Replace the anti-
General	Haval H2s	Transmission control		Transmission control unit	√	√	√	√	√	-	Write VIN, Network configuration(manual), transmission self-learning, clutch
General type	Haval H2s	Transmission control unit (TCU)		Transmission control unit (7DCT450)	√	√	√	√	-	-	Write VIN, Network configuration(manual), turn off DEV CAN function, replace TCU, but do not replace hydraulic module(HCM), replace TCU, but do not replace
General	Haval H2s	Parking Services		4/8 probe model	-	-	-	-	-	-	Front radar parameter configuration;Rear radar parameter configuration
General	Haval H2s	Parking Services		3/5 probe model	-	-	-	-	-	-	Front radar parameter configuration;Rear radar parameter configuration
General	Haval H8	Engine electronic control system(ECM)			√	√	√	√	√	-	Read network configuration information; write network configuration
General	Haval H8	Airbag (ABM)			√	√	√	√	-	√	Read network configuration information; write network configuration
General type	Haval H8	Body controller system(BCM)			√	√	√	√	√	-	Read network configuration information; write network configuration information;Write four tire pressure sensor ID;tire pressure sensor learning;tire pressure sensor learning(new)
General	Haval H8	Transmission electronic control system(TCU)			√	√	√	√	-	-	Read network configuration information; write network configuration
General	Haval H8	Electronic stability system(ESP)			√	√	√	√	-	-	Read network configuration information; write network configuration
General	Haval H8	Driver side door system(DDCM)			√	√	√	-	-	-	Read network configuration information; write network configuration
General	Haval H8	Front driver side door system(PDCM)			√	√	√	-	-	-	Read network configuration information; write network configuration
General	Haval H8	Driver seat memory system(DSM)			√	√	√	-	√	-	Read network configuration information; write network configuration
General	Haval H8	Passive entry passive start system(PEPS)			√	√	√	√	√	-	Read network configuration information; write network configuration
General	Haval H8	Gateway (GW)			√	√	√	-	-	-	Read network configuration information; write network configuration
General	Haval H8	Instrument system(IP)			√	√	√	-	√	-	Read network configuration information; write network configuration
General	Haval H8	Parking Services		Front	√	-	-	-	-	-	-
General	Haval H8	Parking Services		Rear	√	-	-	-	-	-	-
General	Haval H8	Rear view camera (RVC)			√	-	-	-	-	-	Read network configuration information; write network configuration
General	Haval H8	Adaptive Headlight System(AFS)			√	√	√	√	√	-	Read network configuration information; write network configuration
General	Haval H8	A/C control system(AC)			√	√	√	√	-	-	Read network configuration information; write network configuration
General	Haval H8	Entertainment system(CD)			√	√	√	√	-	-	Read network configuration information; write network configuration
General	Haval H8	Steering wheel steering angle sensor(SAS)			√	√	√	√	-	-	Read network configuration information; write network configuration
General	Haval H8	Intelligent 4WD (TOD)			√	√	√	√	-	-	Read network configuration information; write network configuration
General	Haval H9	Engine electronic control system(ECM)			√	√	√	√	√	-	Read network configuration information; write network configuration
General	Haval H9	Airbag (ABM)			√	√	√	√	-	-	Read network configuration information; write network configuration
General type	Haval H9	Body controller system(BCM)			√	√	√	√	√	-	write network configuration information(handwrite), BCM initial angle detection, BCM initial angle compensation, tire pressure sensor learning
General	Haval H9	Electronic stability system(ESP)			√	√	√	√	-	-	Read network configuration information; write network configuration
General	Haval H9	KSTAR press key type PEPS system			√	√	√	√	√	-	Read network configuration information, write network configuration
General	Haval H9	Gateway (GW)			√	√	√	-	-	-	Read network configuration information; write network configuration
General type	Haval H9	Instrument system(IP)			√	√	√	-	√	-	Read network configuration information; write network configuration information; Reset the odometer; Total mileage reset, Reset service mileage (abroad), Date reset
General	Haval H9	Adaptive Headlight System(AFS)			√	√	√	√	√	-	Read network configuration information; write network configuration
General	Haval H9	Intelligent 4WD (TOD)			√	√	√	√	√	-	Read network configuration information; write network configuration
General	Haval H9	Parking Services		Front	√	-	-	-	-	-	FPAS configuration(automatic)
General	Haval H9	Parking Services		Rear	√	-	-	-	-	-	FPAS configuration(automatic)
General	Haval H9	A/C control system(HCM)			√	√	√	√	-	-	Read network configuration information; write network configuration
General	Haval H9	Electronic parking brake (EPB)			√	√	√	√	-	-	Read network configuration information; write network configuration
General	Haval H9	Transmission electronic control system(TCU)			√	√	√	√	-	-	Read network configuration information; write network configuration
General type	Haval H9	Transmission electronic control system OBD function			√	√	√	√	-	-	Current power transmission system diagnosis data; power transmission system freeze frame data; power transmission system failure codes related to emissions; clear/reset diagnosis information related to emissions; emission-
General	Haval H9	Driver side door system(DDCM)			√	√	√	-	-	-	Read network configuration information; write network configuration
General	Haval H9	Front driver side door system(PDCM)			√	√	√	-	-	-	Read network configuration information; write network configuration
General	Haval H9	Driver seat memory system(DSM)			√	√	√	-	√	-	Read network configuration information; write network configuration

Diagnostic List GREAT WALL MOTOR_v10.52

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color

Model Menu		System		Function						Remarks (Other functions)
				Read ECU information	Read DTC	Erase DTC	Live Data	Actuation Test	Read freeze frame	
General	Haval H9	Rear view camera(RVC)		√	-	-	-	-	-	Read network configuration information; write network configuration
General	Haval H9	Steering wheel steering angle sensor (SAS)		√	√	√	√	-	-	Read network configuration information; write network configuration
General	Haval H9	Rain light sensor(RLS)		-	-	-	-	-	-	Rain sensor initialization routine
General	Haval H9	Electronic differential lock(EGD)		√	√	√	√	-	-	write network configuration information
General	Haval H9	Entertainment system(CD)	Old style CD system	√	√	√	-	-	-	Read network configuration information; write network configuration
General	Haval H9	Entertainment system(CD)	2016 style CD system	√	√	√	-	-	-	Vehicle configuration information, write network configuration information,
General	Haval H9	Internet of Vehicles	Old style T-BOX system	√	√	√	√	-	-	write VIN; write network configuration information
General	Haval H9		2016 style T-BOX system	√	√	√	√	-	-	write network configuration information
General	Haval H9	Intelligent Front View		√	√	√	√	-	-	IFV after-sale calibration; write calibration date; write network
General	Haval H9	Around view module(AVM)		√	√	√	-	-	-	Vehicle configuration information; after-sales calibration; write network
General	Haval H9	Adaptive cruise control		√	√	√	√	-	-	write network configuration information; write VIN; after-sales calibration
General	Haval H9	Seat heating massage		√	√	√	-	-	-	Read network configuration information
General	Haval H6COUPE	4G15BUAES ME1788 engine		√	√	√	√	√	-	Read network configuration information; write network configuration
General	Haval H6COUPE	Delphi CD(CD)		√	√	√	√	-	-	write network configuration information
General	Haval H6COUPE	Desay SV CD(CD)		√	√	√	√	-	-	write VIN; write network configuration information
General type	Haval H6COUPE	TCU (Transmission system)	Transmission control system(6DCT)	√	√	√	√	-	-	write network configuration information; write VIN; transmission self-learning; clutch self-learning
General type	Haval H6COUPE	TCU (Transmission system)	Transmission control systemGAT	√	√	√	√	√	-	write network configuration information
General type	Haval H6COUPE	TCU (Transmission system)	Transmission control unit(7DTC300)	√	√	√	√	-	-	Writing function; write network configuration information
General type	Haval H6COUPE	TCU (Transmission system)	Transmission control system (7DTC450)	√	√	√	√	-	-	Write VIN, Network configuration(manual), turn off DEV CAN function, replace TCU, but do not replace hydraulic module(HCM), replace TCU, but do not replace clutch(PT)
General	Haval H6COUPE	Parking assist		√	√	√	√	-	-	write network configuration information
General	Haval H6COUPE	Seat ventilation heating		√	√	√	√	-	-	Writing function
General	Haval H6COUPE	Electronic shifter(SBWM)		√	√	√	√	-	-	Writing function; write classification code
General	Haval H6COUPE	Around view module(AVM)		√	√	√	√	-	-	write VIN; write network configuration information
General type	Haval H6COUPE	Rear view camera(RVC)		√	√	√	√	-	-	write VIN; write network configuration information
General type	Haval H6COUPE	4C20-MT92 engine system		√	√	√	√	√	-	Read network configuration information; write network configuration information(manual); Read system configuration; CKP learning; IUPR; write VIN
General type	Haval H6COUPE	4D20 Bosch diesel engine system		√	√	√	√	√	-	Read network configuration information; write network configuration information(manual); Injector code
General type	Haval H6COUPE	4D20 Bosch diesel engine system OBD function		-	-	-	-	-	-	Current power transmission system diagnosis data; power transmission system freeze frame data; power transmission system failure codes related to emissions; clear/reset diagnosis information related to emissions; vehicle
General type	Haval H6COUPE	4D20 Delphi Euro V engine system		√	√	√	√	√	-	Read network configuration information; write network configuration information(manual); Injector code; Routine control; EGR clear self-
General	Haval H6COUPE	4D20 Delphi Euro V engine system OBD function		-	-	-	-	-	-	OBD diagnostic function; IUPR function
General	Haval H6COUPE	engine system(4B15)		√	√	√	√	√	√	write VIN, write network configuration information, OBD function, VVT self-
General	Haval H6COUPE	Keyless start system(PEPS)		√	√	√	√	√	-	Read network configuration information; write network configuration
General	Haval H6COUPE	Instrument(IP)		√	√	√	-	√	-	Read network configuration information; write network configuration
General type	Haval H6COUPE	Body control(BCM)		√	√	√	√	√	-	write network configuration information(manual); tire pressure sensor learning; Read system configuration; write system configuration; write VIN
General	Haval H6COUPE	Airbag(ABM)		√	√	√	√	-	-	write network configuration information(manual); write VIN
General	Haval H6COUPE	A/C control system(AC)		√	√	√	√	√	-	write network configuration information(manual)
General	Haval H6COUPE	Electronic parking controller(EPB)		√	√	√	√	√	-	write network configuration information(manual); slope sensor calibration
General	Haval H6COUPE	Electric power steering system(EPS)		√	√	√	√	-	-	write network configuration information(manual); steering sensor
General	Haval H6COUPE	Electronic stability system(ESP)		√	√	√	√	√	-	write network configuration information(manual); yaw rate sensor calibration
General	Haval H6COUPE	Automatic Headlamp Leveling System(AFS)		√	√	√	√	-	-	write network configuration information(manual); Level zero calibration
General	Haval H6COUPE	Automatic parking assist system(APA)		√	√	√	√	-	-	write network configuration information(manual)
General	Haval H6COUPE	Entertainment system(CD)		√	√	√	√	-	-	write network configuration information(manual)
General	Haval H6COUPE	Electronic steering column lock(ESCL)		√	√	√	√	-	-	write network configuration information(manual)
General	Haval H6COUPE	Gateway(GW)		√	√	√	√	-	-	write network configuration information(manual)
General	Haval H6COUPE	Intelligent FWD(NEXTRAC)		√	√	√	√	-	-	write network configuration information(manual)
General	Haval H6COUPE	Steering angle sensor(SRS)		√	√	√	√	-	-	write network configuration information(manual); write VIN; SAS calibration;
General	Haval H6COUPE	Transmission control system(DTC)		√	√	√	√	-	-	write network configuration information(manual); write VIN
General	Haval H6COUPE	CAN signal conversion system(CMS)		√	√	√	√	√	-	CMS model learning

Diagnostic List GREAT WALL MOTOR_v10.52

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color

Model Menu	System		Function						Remarks (Other functions)	
			Read ECU information	Read DTC	Erase DTC	Live Data	Actuation Test	Read freeze frame		
Dedicated	Airbag		-	√	√	√	-	-	-	
Dedicated	AUTOLIV Airbag system		√	√	√	√	-	-	ECU module lock	
Dedicated	Diesel EFI system							-	-	
Dedicated	Great Wall SRS system		√	√	√	√	-	-	-	
Dedicated	Great Wall BOSCH Airbag		√	√	√	√	-	-	matching function	
Dedicated	Delphi IMMO(COWRY,Haval gasoline)		√	√	√	√	-	-	-	
Dedicated	GWPERI IMMO		√	√	√	√	√	-	Offline function;Replace engine EMS;Replace transponder;Replace the anti-	
Dedicated	Delphi IMMO(Wingle, Haval diesel)		-	√	√	√	-	-	matching function	
Dedicated	COOLBEAR IMMO(DIAS)		√	√	√	√	√	-	Offline matching function;After-sale function	
Dedicated	AUTOLIV Airbag-CH041		√	√	√	√	-	-	Write VIN;write Airbag part number;write Airbag information 1, 2 and 3;write	
Dedicated	IMMO		√	√	√	√	-	-	Safe operation,key matching	
General	H5	4G63T engine system		√	√	√	√	√	-	write VIN, write maintenance station code, write flash date, Write vehicle
General	H5	4D20 Bosch diesel engine system		√	√	√	√	√	√	Read network configuration information, write network configuration
General type	H5 commemorative version	Electronic stability system		√	√	√	√	√	-	stamping status of the hydraulic module, offline test state, steering angle sensor calibration:(for ESP), vehicle network configuration
General	H5	Body control module		√	√	√	√	√	-	write VIN, write system configuration word#1, write system configuration
General	H5	Tire pressure monitoring system		√	√	√	√	-	-	Tire pressure learning, Writing function
General	H5	Instrument system		√	√	√	√	√	-	Write vehicle network configuration
General	H5	Rear-view camera system		√	√	√	√	-	-	Writing function
General	H5	Intelligent 4-wheel drive system		√	√	√	√	√	-	Writing function
General	H5	BorgWarner 4WD system		√	√	√	√	√	-	Writing function
General	H5	TRW Airbag system		√	√	√	√	-	-	Read network configuration information, write network configuration
General	H5	Delphi gasoline(4G63T MT80) IMMO		-	√	√	√	-	-	User authorization code setting, anti-theft matching function
General type	H5 commemorative version	Bosch diesel(Bosch 4D20) IMMO		√	√	-	√	-	-	Authorization code setting
General type	Haval M6	ECM(engine system)	Delphi MT80 engine system	√	√	√	√	√	√	write VIN, CKP learning, write VIN(new), Read VIN
General type	Haval M6	ECM(engine system)	4D20 Delphi Euro V engine system	√	√	√	√	√	-	Routine control, write injector code, write injector code, Read network configuration information, write network configuration information(automatic), write network configuration information(manual), IUPR, DPF(Diesel Particulate Filter), EGR clear self-learning, Read and write
General type	Haval M6	ECM(engine system)	4D20Bosch diesel engine system (2013 MY)	√	√	√	√	√	√	Read network configuration information, write network configuration information(automatic), Engine test, write network configuration information(manual), write injector code, write injector code(write all), write injector code(separate), OBD function, EGR self-learning function
General type	Haval M6	ECM(engine system)	4G15T engine electronic control system (ME788)	√	√	√	√	√	√	Read network configuration information, write network configuration information(manual), Read and write VIN, IUPR, VVT self-learning
General type	Haval M6	ECM(engine system)	4G15B engine electronic control system (ME1788)	√	√	√	√	√	√	Read network configuration information, write network configuration information(manual), Read and write VIN, IUPR, VVT self-learning
General type	Haval M6	ECM(engine system)	4G15E engine electronic control system	√	√	√	√	√	√	Read network configuration information, write network configuration information(manual), Read and write VIN, IUPR, VVT self-learning
General type	Haval M6	ECM(engine system)	4G20DDelphi Euro IV engine system	√	√	√	√	√	-	Routine control, write injector code, write injector code, Read network configuration information, write network configuration information(manual), OBD diagnostic function, IUPR function, DPF(Diesel Particulate Filter), EGR clear self-learning, Read and write VIN
General type	Haval M6	ESP(Electronic stabilization program)		√	√	√	√	√	-	steering sensor calibration (only for ESP), Read network configuration information, write network configuration information(manual), write network configuration information(automatic), exhaust function, yaw angle sensor calibration(HDC function vehicle module)
General type	Haval M6	TCU (Transmission system)		√	√	√	√	√	-	write network configuration information, shift drum self-learning, clutch self-learning, clutch reset
General type	Haval M6	BCM (Body control system)		√	√	√	√	√	-	Writing function, Tire pressure learning, system configuration
General type	Haval M6	PAS(Parking assist system)		√	√	√	-	-	-	Vehicle configuration information, Writing function
General type	Haval M6	EPB (Electronic parking controller)		√	√	√	√	√	-	Writing function, slope sensor calibration, Read deep fault code
General type	Haval M6	T-BOX(Internet of Vehicles host system)		√	√	√	√	-	-	Writing function

Diagnostic List GREAT WALL MOTOR_v10.52

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color

Model Menu		System			Function						Remarks (Other functions)
					Read ECU information	Read DTC	Erase DTC	Live Data	Actuation Test	Read freeze frame	
General type	Haval M6	ABM (Airbag system)			√	√	√	-	-	-	Vehicle configuration information, Writing function
General type	Haval M6	AC(A/C control system)			√	√	√	√	√	-	Writing function
General type	Haval M6	CD/MP5 (CD host)			-	√	√	-	-	-	Vehicle configuration information, Writing function
General type	Haval M6	GW(Gateway)			√	√	√	√	-	√	Writing function, Data mapping function configuration
General type	Haval M6	IP(Instrument system)			√	√	√	√	√	-	Writing function
General type	Haval M6	PEPS(Passive entry passive start system)			√	√	√	-	√	-	Vehicle configuration information, Writing function, after-sale learning
General type	Haval M6	RVC(Rear-view camera)			√	√	√	-	-	-	Vehicle configuration information, Writing function
General type	Haval M6	TOD (Intelligent 4-wheel drive system)			-	-	-	-	-	-	write network configuration information(manual)
General type	Haval M6	SBWM(Electronic shifter)			√	√	√	√	-	-	Writing function
General type	Haval M6	ESCL(Electronic steering column lock)			√	√	√	√	-	-	write VIN, write network configuration information
General type	VV5	ECM(engine system)	engine system(4C20NT)		√	√	√	√	√	√	IUPR, OBD function
General type	VV5	BCM (Body control system)			√	√	√	√	√	-	write VIN, write network configuration information, read final calibration parameters of the DDD fatigue driving algorithm, write final calibration parameter adjustment of DDD fatigue driving algorithm, Read system configuration, write system configuration, power tailgate self-learning
General type	VV5	ABM (Airbag system)			√	√	√	√	-	-	write VIN, write network configuration information, write loop configuration word, yaw angle calibration
General type	VV5	GW(Gateway)			√	√	√	√	-	-	write VIN, write network configuration information
General type	VV5	IP(Instrument system)			√	√	√	√	√	-	write VIN, write network configuration information
General type	VV5	AC(A/C control system)			√	√	√	√	√	-	write VIN, write network configuration information
General type	VV5	SCM (Seat ventilation heating module)			√	√	√	√	-	-	write VIN, write network configuration information
General type	VV5	ALCM(Ambient light control module)			√	√	√	√	-	-	write VIN, write network configuration information
General type	VV5	ESP(Electronic stabilization program)			√	√	√	√	√	-	write VIN, write network configuration information, manual exhaust, yaw rate sensor calibration
General type	VV5	HUT(Navigation host system)			√	√	√	√	-	-	write VIN, write network configuration information
General type	VV5	TPMS (Tire pressure monitoring system)			√	√	√	√	-	-	Writing function, tire pressure sensor ID learning, ABS delayed write, write network configuration information
General type	VV5	DSM (Seat memory module)			√	√	√	√	√	-	write VIN, write network configuration information
General type	VV5	APA (Automatic parking assist system)			√	√	√	√	-	-	write VIN, write network configuration information
General type	VV5	PDCM(Front driver side door module)			√	√	√	√	-	-	write VIN, write network configuration information
General type	VV5	EPS(Electric power steering system)			√	√	√	√	√	-	write VIN, write network configuration information, PDC initial torque clearing
General type	VV5	SAS(Steering angle sensor)			√	√	√	√	-	-	write VIN, SASsteering angle calibration
General type	VV5	ACC(Adaptive cruise control system)			√	√	√	√	-	-	write VIN, write network configuration information, after-sales calibration
General type	VV5	2018	ECM(engine system)		√	√	√	√	√	√	Write VIN, write network configuration information(17 characters), CKP learning, IUPR(Actual test frequency) function, OBD function
General type	VV5	2018	AT(Automatic transmission system)		√	√	√	√	-	-	Write VIN, write network configuration information, after-sale learning function, replace TCU,but do not replace hydraulic module(HCM), replace TCU,but do not replace clutch(PT), turn off DEV CAN function
General type	VV5	2018	SRS(Airbag system)		√	√	√	√	-	-	Write VIN, write network configuration information, write loop configuration word, yaw angle calibration
General type	VV5	2018	ESP(Electronic stability system)		√	√	√	√	√	-	Write VIN, write network configuration information, yaw rate sensor calibration, manual exhaust
General type	VV5	2018	ICM/IP(Instrument panel system)	IP(full color instrument system)	√	√	√	√	√	-	Write VIN, write network configuration information, maintenance setting
General type	VV5	2018	ICM/IP(Instrument panel system)	IP(Non-full color instrument system)	√	√	√	√	√	-	Write VIN, write network configuration information, maintenance setting
General type	VV5	2018	TPMS(Tire pressure monitoring system)		√	√	√	√	-	-	write VIN, write network configuration information, tire pressure sensor ID learning, ABS delayed write

Diagnostic List GREAT WALL MOTOR_v10.52

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color

Model Menu		System			Function						
					Read ECU information	Read DTC	Erase DTC	Live Data	Actuation Test	Read freeze frame	Remarks (Other functions)
General type	VV5	2018	BCM(Body control system)		√	√	√	√	√	-	Write VIN, write network configuration information, Read and write final calibration parameter adjustment of DDD fatigue driving algorithm, Read and write system configuration, power tailgate self-learning(PLG)
General type	VV5	2018	AC(Auto A/C system)		√	√	√	√	√	-	Write VIN, write network configuration information
General type	VV5	2018	PEPS(Passive entry passive start system)		√	√	√	√	-	-	Write VIN, write network configuration information, After-sale function
General type	VV5	2018	GW(Gateway system)		√	√	√	√	-	-	Write VIN, write network configuration information
General type	VV5	2018	EPS(Electric steering system)		√	√	√	√	√	-	Write VIN, write network configuration information, PDC initial torque clearing
General type	VV5	2018	PAS(Parking assist system)	PAS(Parking assist system)	√	√	√	√	-	-	Write VIN, write network configuration information
General type	VV5	2018	PAS(Parking assist system)	APA(Automatic parking assist system)	√	√	√	√	-	-	Write VIN, write network configuration information
General type	VV5	2018	AVM(Around view module)		√	√	√	√	-	-	Write VIN, write network configuration information, Write electronic control unit serial number
General type	VV5	2018	IFC(Intelligent front view camera)		√	√	√	√	-	-	Write VIN, write network configuration information, IFV after-sale calibration, write calibration date
General type	VV5	2018	HUT(Navigation System)		√	√	√	√	-	-	Write VIN, write network configuration information
General type	VV5	2018	ESCL(Electronic steering column lock)		√	√	√	√	-	-	Write VIN, write network configuration information
General type	VV5	2018	SAS(Steering wheel steering angle sensor)		√	√	√	√	-	-	Write VIN, SASsteering angle calibration
General type	VV5	2018	SBWM(Electronic shifter)		√	√	√	√	-	-	Write VIN, write network configuration information
General type	VV5	2018	Nextrac(Intelligent FWD)		√	√	√	√	√	-	write network configuration information
General type	VV5	2018	ACC(Automatic cruise system)		√	√	√	√	-	-	Write VIN, write network configuration information, after-sales calibration
General type	VV5	2018	RSDS-L(left radar detection system)		√	√	√	√	-	-	Write VIN, write network configuration information, after-sales calibration
General type	VV5	2018	RSDS-R(right radar detection system)		√	√	√	√	-	-	Write VIN, write network configuration information, after-sales calibration
General type	VV5	2018	SCM(Seat heating massage system)		√	√	√	√	-	-	Write VIN, write network configuration information
General type	VV5	2018	DSM(Driver seat memory system)		√	√	√	√	√	-	Write VIN, write network configuration information
General type	VV5	2018	ALCM(Ambient light controller)		√	√	√	√	-	-	Write VIN, write network configuration information
General type	VV5	2018	DDCM(Driver side door system)		√	√	√	√	-	-	Write VIN, write network configuration information
General type	VV5	2018	PDCM(Front driver side door system)		√	√	√	√	-	-	Write VIN, write network configuration information
General type	VV5	2018	SVM(Smart inner rearview mirror)		√	√	√	√	-	-	Write VIN, write network configuration information
General type	VV5	China VI	ECM(engine system)		√	√	√	√	√	-	Write VIN, write network configuration information(31 characters), change GPF(Diesel Particulate Filter), Replace the differential pressure sensor, Replace ECU(Electronic Control Unit), VVT(Continuously Variable Timing) Self-learning
General type	VV5	China VI	AT(Automatic transmission system)		√	√	√	√	-	-	Write VIN, write network configuration information(17 characters), after-sale learning function, Read writing function, turn off DEV CAN function
General type	VV5	China VI	SRS(Airbag system)		√	√	√	√	-	-	Write VIN, write network configuration information, write loop configuration word, yaw angle calibration
General type	VV5	China VI	ESP(Electronic stability system)		√	√	√	√	√	-	Write VIN, Network configuration(manual), yaw rate sensor calibration, manual exhaust function
General type	VV5	China VI	ICM/IP(Instrument panel system)	IP(full color instrument system)	√	√	√	√	√	-	Write VIN, write network configuration information, maintenance setting
General type	VV5	China VI	ICM/IP(Instrument panel system)	ICM(Non-full color instrument system)	√	√	√	√	√	-	Write VIN, Network configuration(manual), maintenance setting
General type	VV5	China VI	TPMS(Tire pressure monitoring system)		√	√	√	√	-	-	Write data, Network configuration(manual), tire pressure sensor learning
General type	VV5	China VI	BCM(Body control system)		√	√	√	√	√	-	Write VIN, Network configuration(manual), Read and write final calibration parameter adjustment of DDD fatigue driving algorithm, Read and write system configuration, power tailgate self-learning(PLG)
General type	VV5	China VI	AC(Auto A/C system)		√	√	√	√	√	-	Write VIN, Network configuration(manual)
General type	VV5	China VI	PEPS(Passive entry passive start system)		√	√	√	√	-	-	Write VIN, write network configuration information, After-sale function

Diagnostic List GREAT WALL MOTOR_v10.52

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color

Model Menu		System			Function						
					Read ECU information	Read DTC	Erase DTC	Live Data	Actuation Test	Read freeze frame	Remarks (Other functions)
General type	VV5	China VI	GW(Gateway system)		√	√	√	√	-	-	Write VIN, write network configuration information
General type	VV5	China VI	T-BOX(Internet of Vehicles host system)		√	√	√	√	-	-	Write VIN, write network configuration information(17 characters), write network configuration information(31 characters), Single ECU configuration word, LED brightness, PEPS learning outcomes, LED brightness multiple
General type	VV5	China VI	EPS(Electric steering system)		√	√	√	√	√	-	Write VIN, write network configuration information, PDC initial torque clearing
General type	VV5	China VI	PAS(Parking assist system)	PAS(Parking assist system)	√	√	√	√	-	-	Write VIN, Network configuration(manual)
General type	VV5	China VI	PAS(Parking assist system)	APA(Automatic parking assist system)	√	√	√	√	-	-	Write VIN, Network configuration(manual)
General type	VV5	China VI	AVM(Around view module)		√	√	√	√	-	-	Write VIN, Network configuration(manual), Electronic control unit serial number
General type	VV5	China VI	IFC(Intelligent front view camera)		√	√	√	√	-	-	Write VIN, write network configuration information, IFV after-sale calibration, write calibration date
General type	VV5	China VI	HUT(Navigation System)		√	√	√	√	-	-	Write VIN, write network configuration information
General type	VV5	China VI	ESCL(Electronic steering column lock)		√	√	√	√	-	-	Write VIN, Write vehicle configuration information, Network configuration(manual)
General type	VV5	China VI	SAS(Steering wheel steering angle sensor)		√	√	√	√	-	-	Write VIN, calibration
General type	VV5	China VI	SBWM(Electronic shifter)		√	√	√	√	-	-	Write VIN, write network configuration information
General type	VV5	China VI	ACC(Automatic cruise system)		√	√	√	√	-	-	Write VIN, write network configuration information, after-sales calibration
General type	VV5	China VI	RSDS_L(left radar detection system)		√	√	√	√	-	-	Write VIN, write network configuration information, after-sales calibration
General type	VV5	China VI	RSDS_R(right radar detection system)		√	√	√	√	-	-	Write VIN, write network configuration information, after-sales calibration
General type	VV5	China VI	SCM(Seat heating massage system)		√	√	√	√	-	-	Write VIN, write network configuration information
General type	VV5	China VI	DSM(Driver seat memory system)		√	√	√	√	√	-	Write VIN, write network configuration information
General type	VV5	China VI	DDCM(Driver side door system)		√	√	√	√	-	-	Write VIN, Network configuration(manual)
General type	VV5	China VI	PDCM(Front driver side door system)		√	√	√	√	-	-	Write VIN, Network configuration(manual)
General type	VV5	China VI	SVM(Smart inner rearview mirror)		√	√	√	√	-	-	Write VIN, write network configuration information
General type	VV5	China VI	Nextrac(Intelligent FWD)		√	√	√	√	√	-	Read network configuration information(31 characters)
General type	VV5	China VI	ALCM(Ambient light controller)		√	√	√	√	-	-	Write VIN, Network configuration(manual)
General type	VV5	China VI	CVVL(Continuously variable valve lift)		√	-	-	√	-	-	Write VIN, Network configuration(manual)
General type	P8	ALS (Headlamp Leveling System)			√	√	√	√	-	-	write VIN, write network configuration information, Level zero calibration
General type	P8	ACC(Adaptive cruise control system)			√	√	√	√	-	-	write VIN, write network configuration information, after-sales calibration
General type	P8	HUT(Navigation host system)			√	√	√	√	-	-	write VIN, write network configuration information
General type	P8	ALCM(Ambient light control module)			√	√	√	√	-	-	write VIN, write network configuration information, after-sale learning
General type	P8	PEPS(Passive entry passive start system)			√	√	√	√	-	-	write VIN, write network configuration information
General type	P8	BCM (Body control system)			√	√	√	√	√	-	write VIN, write network configuration information, Read system configuration, write system configuration, read final calibration parameters of the DDD fatigue driving algorithm, final calibration parameter adjustment of DDD fatigue driving algorithm
General type	P8	AC(A/C control system)			√	√	√	√	√	-	write VIN, write network configuration information, Stepper motor self-learning
General type	P8	GW(Gateway)			√	√	√	√	-	-	Write VIN code, Write vehicle configuration information
General type	P8	OBC (Charge controller)			√	√	√	√	-	-	Write VIN code, Write vehicle configuration information
General type	P8	IP(Instrument system)			√	√	√	√	√	-	write VIN, write network configuration information, maintenance setting
General type	P8	ABM (Airbag system)			√	√	√	√	-	-	write VIN, write network configuration information, write loop configuration word, yaw angle calibration
General type	P8	ESP(Electronic stabilization program)			√	√	√	√	√	-	write VIN, write network configuration information

Diagnostic List GREAT WALL MOTOR_v10.52

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color

Model Menu		System			Function						
					Read ECU information	Read DTC	Erase DTC	Live Data	Actuation Test	Read freeze frame	Remarks (Other functions)
General type	P8	BSG(Start click control unit)			√	√	√	√	-	-	write VIN, write network configuration information
General type	P8	MCU (Drive motor control unit)			√	√	√	√	-	-	write VIN, write network configuration information
General type	P8	RSDS-L(left radar detection system)			√	√	√	√	-	-	write VIN, write network configuration information, after-sales calibration, read after-sale calibration result
General type	P8	RSDS-R(right radar detection system)			√	√	√	√	-	-	write VIN, write network configuration information, after-sales calibration, read after-sale calibration result
General type	P8	ACU (Axle shift controller)			√	√	√	√	-	-	write VIN, Self-learning routine
General type	P8	HCU (Vehicle controller)			√	√	√	√	√	-	write VIN, write network configuration information, BSG resolver position calibration, Rear-drive motor resolver position calibration, Read EBS Version Information, EBS battery ID flash
General type	P8	BMS(Battery Management System)			√	√	√	√	√	-	write VIN, write network configuration information, Insulation resistance measurement request, Cell balance control, CMC ID write request, read specified module SOH, read specified driving day detailed data
General type	P8	ECM(engine system)			√	√	√	√	√	√	Read and write VIN, write network configuration information, OBD function, VVT self-learning, EBS battery ID flash
General type	P8	TCU (Transmission system)			√	√	√	√	-	-	write VIN, write network configuration information
General type	P8	AVM(Around View Module)			√	√	√	-	-	-	write VIN, Read network configuration information, write network configuration information, offline calibration
General type	P8	DDCM(Main driver side door module)			√	√	√	-	-	-	write VIN, Read network configuration information, write network configuration information
General type	P8	SAS(Steering angle sensor)			√	√	√	√	-	-	write VIN, SAS calibration
General type	P8	EPS(Electric power steering system)			√	√	√	√	√	-	write VIN, write network configuration information, PDC initial torque clearing
General type	P8	APA (Automatic parking assist system)			√	√	√	√	-	-	write VIN, write network configuration information
General type	P8	PAS(Parking assist system)			√	√	√	√	-	-	write VIN, write network configuration information
General type	P8	SCM (Seat ventilation heating module)			√	√	√	-	-	-	write VIN, Read network configuration information, write network configuration information
General type	P8	PDCM(Front driver side door module)			√	√	√	-	-	-	write VIN, Read network configuration information, write network configuration information
General type	P8	RVC(Rear-view camera)			√	√	√	√	-	-	write VIN, write network configuration information
General type	P8	DSM (Seat memory module)			√	√	√	√	-	-	write VIN, write network configuration information
General type	Haval F5	ECM(engine system)		ECM (engine system 4B15)	√	√	√	√	√	-	-
General type	Haval F5	ECM(engine system)		ECM (engine system 4C20NT)	√	√	√	√	√	√	-
General type	Haval F5	ECM(engine system)		UAES GDI China VI (4B15A+4C20B)	√	√	√	√	√	-	Write VIN, write network configuration information(31 characters), change GPF(Diesel Particulate Filter), Replace the differential pressure sensor, Replace ECU(Electronic Control Unit), VVT(Continuously Variable Timing) Self-learning
General type	Haval F5	TCU (Automatic transmission system)			√	√	√	√	-	-	Write VIN, write network configuration information(17 characters), after-sale learning function, Read writing function, turn off DEV CAN function
General type	Haval F5	SRS (Airbag system)			√	√	√	√	-	-	-
General type	Haval F5	ICM/IP (Instrument panel system)		IP(full color instrument system)	√	√	√	√	√	-	-
General type	Haval F5	ICM/IP (Instrument panel system)		IP (Non-full color instrument system)	√	√	√	√	√	-	-
General type	Haval F5	TPMS (Tire pressure monitoring system)			√	√	√	√	-	-	-
General type	Haval F5	ESP (Electronic stability system)			√	√	√	√	√	-	-
General type	Haval F5	BCM (Body control system)			√	√	√	√	√	-	-
General type	Haval F5	AC (Auto A/C system)			√	√	√	√	√	-	-
General type	Haval F5	PEPS (Passive entry passive start system)			√	√	√	√	-	-	-
General type	Haval F5	GW (Gateway system)			√	√	√	√	-	-	-
General type	Haval F5	EPS (Electric steering system)			√	√	√	√	√	-	-

Diagnostic List GREAT WALL MOTOR_v10.52

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color

Model Menu		System			Function						
					Read ECU information	Read DTC	Erase DTC	Live Data	Actuation Test	Read freeze frame	Remarks (Other functions)
General type	Haval F5	PAS(Parking assist system)		PAS(Parking assist system)	√	√	√	√	-	-	-
General type	Haval F5	PAS(Parking assist system)		APA(Automatic parking assist system)	√	√	√	√	-	-	-
General type	Haval F5	RVC(Rear-view camera)			√	√	√	√	-	-	-
General type	Haval F5	AVM(Around view module)			√	√	√	√	-	-	-
General type	Haval F5	IFC(Intelligent front view camera)			√	√	√	√	-	-	-
General type	Haval F5	HUT(Navigation host system)		HUT(Navigation host system)(Continental)	√	√	√	√	-	-	-
General type	Haval F5	HUT(Navigation host system)		HUT(Navigation host system)(Delphi)	√	√	√	√	-	-	-
General type	Haval F5	ESCL(Electronic steering column lock)			√	√	√	√	-	-	-
General type	Haval F5	SAS(Steering wheel steering angle sensor)			√	√	√	√	-	-	-
General type	Haval F5	Trailer(Trailer module)			√	√	√	√	√	-	-
General type	Haval F5	SHM(Seat heating module)			√	√	√	√	-	-	-
General type	Haval F5	SBWM(Electronic shifter)			√	√	√	√	-	-	-
General type	Haval F7	ECM(engine system)		ECM(engine system 4C20NT)	√	√	√	√	√	√	-
General type	Haval F7	ECM(engine system)		ECM(engine system 4B15)	√	√	√	√	√	-	-
General type	Haval F7	ECM(engine system)		UAES GDI China VI (4B15A+4C20B)	√	√	√	√	√	-	Write VIN, write network configuration information(31 characters), change GPF(Diesel Particulate Filter), Replace the differential pressure sensor, Replace ECU(Electronic Control Unit), VVT(Continuously Variable Timing) Self-learning
General type	Haval F7	TCU(Automatic transmission system)			√	√	√	√	-	-	-
General type	Haval F7	ABM(Airbag system)			√	√	√	√	-	-	-
General type	Haval F7	ICM/IP(Instrument panel system)		IP(Instrument system)(Bosch)	√	√	√	√	√	-	-
General type	Haval F7	ICM/IP(Instrument panel system)		IP(Instrument system)(Continental)	√	√	√	√	√	-	-
General type	Haval F7	TPMS(Tire pressure monitoring system)			√	√	√	√	-	-	-
General type	Haval F7	ESP(Electronic stabilization program)			√	√	√	√	√	-	-
General type	Haval F7	BCM(Body control system)			√	√	√	√	√	-	-
General type	Haval F7	AC(Auto A/C system)			√	√	√	√	√	-	-
General type	Haval F7	PEPS(Passive entry passive start system)			√	√	√	√	-	-	-
General type	Haval F7	GW(Gateway system)			√	√	√	√	-	-	-
General type	Haval F7	EPS(Electric steering system)			√	√	√	√	-	-	-
General type	Haval F7	PAS(Parking assist system)			√	√	√	√	-	-	-
General type	Haval F7	RVC(Rear-view camera)			√	√	√	√	-	-	-
General type	Haval F7	AVM(Around view module)			√	√	√	√	-	-	-
General type	Haval F7	IFC(Intelligence front camera control module)			√	√	√	√	-	-	-
General type	Haval F7	HUT(Navigation System)			√	√	√	√	√	-	-
General type	Haval F7	ESCL(Electronic steering column lock)			√	√	√	√	-	-	-
General type	Haval F7	SAS(Steering wheel steering angle sensor)			√	√	√	√	-	-	-
General type	Haval F7	CVVL(Continuously variable valve lift)			√	-	-	√	-	-	-
General type	Haval F7	SBWM(Electronic shifter)			√	√	√	√	-	-	-

Diagnostic List GREAT WALL MOTOR_v10.52

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color

Model Menu		System				Function						
						Read ECU information	Read DTC	Erase DTC	Live Data	Actuation Test	Read freeze frame	Remarks (Other functions)
General type	Haval F7	Nextrac(Intelligent FWD)				√	√	√	√	√	-	-
General type	Haval F7	ACC(Automatic cruise system)				√	√	√	√	-	-	-
General type	Haval F7	RSDS-L(left radar detection system)				√	√	√	√	-	-	-
General type	Haval F7	RSDS-R(right radar detection system)				√	√	√	√	-	-	-
General type	Haval F7	SCM(Seat heating massage system)				√	√	√	√	-	-	-
General type	Haval F7	T-BOX(Internet of Vehicles host system)				√	√	√	√	-	-	-
General	Haval F7	GLO-NASS(GLO-NASS)				√	√	√	√	-	-	-
General	VV6 basic	ECM(engine system)		engine system(4B15)		√	√	√	√	√	-	-
General type	VV6 basic model	ECM(engine system)		engine system(4C20)		√	√	√	√	√	-	-
General type	VV6 basic model	AT(Automatic transmission system)				√	√	√	√	-	-	-
General type	VV6 basic model	SRS(Airbag system)				√	√	√	√	-	-	-
General type	VV6 basic model	ICM/IP(Instrument panel system)				√	√	√	√	√	-	-
General type	VV6 basic model	TPMS(Tire pressure monitoring system)				√	√	√	√	-	-	-
General type	VV6 basic model	ESP(Electronic stability system)				√	√	√	√	√	-	-
General type	VV6 basic model	BCM(Body control system)				√	√	√	√	√	-	-
General type	VV6 basic model	AC(Auto A/C system)				√	√	√	√	√	-	-
General type	VV6 basic model	PEPS(Passive entry passive start system)				√	√	√	√	-	-	-
General type	VV6 basic model	GW(Gateway system)				√	√	√	√	-	-	-
General type	VV6 basic model	EPS(Electric steering system)				√	√	√	√	√	-	-
General type	VV6 basic model	PAS(Parking assist system)		PAS(Parking assist system)		√	√	√	√	-	-	-
General type	VV6 basic model	PAS(Parking assist system)		APA(Parking Services system)		√	√	√	√	-	-	-
General type	VV6 basic model	AVM(Around view module)				√	√	√	√	-	-	-
General type	VV6 basic model	IFC(Intelligent front view camera)				√	√	√	√	-	-	-
General type	VV6 basic model	HUT(Navigation System)				√	√	√	√	-	-	-
General type	VV6 basic model	ESCL(Electronic steering column lock)				√	√	√	√	-	-	-
General type	VV6 basic model	SAS(Steering wheel steering angle sensor)				√	√	√	√	-	-	-
General type	VV6 basic model	SBWM(Electronic shifter)				√	√	√	√	-	-	-
General type	VV6 basic model	NEXTRACE(Intelligent FWD)				√	√	√	√	√	-	-
General type	VV6 basic model	ACC(Automatic cruise system)				√	√	√	√	-	-	-
General type	VV6 basic model	RSDR_L(left radar detection system)				√	√	√	√	-	-	-
General type	VV6 basic model	RSDR_R(right radar detection system)				√	√	√	√	-	-	-
General type	VV6 basic model	SCM(Seat heating massage system)				√	√	√	√	-	-	-
General type	VV6 basic model	DSM(Driver seat memory system)				√	√	√	√	√	-	-
General type	VV6 basic model	ALCM(Ambient light controller)				√	√	√	√	-	-	-
General type	VV6 basic model	DDCM(Driver side door system)				√	√	√	√	-	-	-
General type	VV6 basic model	PDCM(Front driver side door system)				√	√	√	√	-	-	-

Diagnostic List GREAT WALL MOTOR_v10.52

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color

Model Menu		System				Function						
						Read ECU information	Read DTC	Erase DTC	Live Data	Actuation Test	Read freeze frame	Remarks (Other functions)
General type	VV6 basic model	SVM(Smart inner rearview mirror)				√	√	√	√	-	-	-
General type	VV6 basic model	T-BOX(Internet of Vehicles host system)				√	√	√	√	-	-	-
General type	VV6 basic model	RVC(Rear-view camera)				√	√	√	√	-	-	-
General type	VV6 basic model	Trailer (Trailer module)				√	√	√	√	√	-	-
General type	VV6 China VI	ECM(engine system)				√	√	√	√	√	-	-
General type	VV6 China VI	AT(Automatic transmission system)				√	√	√	√	-	-	-
General type	VV6 China VI	SRS(Airbag system)				√	√	√	√	-	-	-
General type	VV6 China VI	ICM/IP(Instrument panel system)	IP(full color instrument system)			√	√	√	√	√	-	-
General type	VV6 China VI	ICM/IP(Instrument panel system)	ICM(Non-full color Instrument system)			√	√	√	√	√	-	-
General type	VV6 China VI	TPMS(Tire pressure monitoring system)				√	√	√	√	-	-	-
General type	VV6 China VI	ESP(Electronic stability system)				√	√	√	√	√	-	-
General type	VV6 China VI	BCM(Body control system)				√	√	√	√	√	-	-
General type	VV6 China VI	AC(Auto A/C system)				√	√	√	√	√	-	-
General type	VV6 China VI	PEPS(Passive entry passive start system)				√	√	√	√	-	-	-
General type	VV6 China VI	GW(Gateway system)				√	√	√	√	-	-	-
General type	VV6 China VI	T-BOX(Internet of Vehicles host system)				√	√	√	√	-	-	-
General type	VV6 China VI	EPS(Electric steering system)				√	√	√	√	√	-	-
General type	VV6 China VI	PAS(Parking assist system)	PAS(Parking assist system)			√	√	√	√	-	-	-
General type	VV6 China VI	PAS(Parking assist system)	APA(Parking Services system)			√	√	√	√	-	-	-
General type	VV6 China VI	AVM(Around view module)				√	√	√	√	-	-	-
General type	VV6 China VI	IFC(Intelligent front view camera)				√	√	√	√	-	-	-
General type	VV6 China VI	HUT(Navigation System)				√	√	√	√	-	-	-
General type	VV6 China VI	ESCL(Electronic steering column lock)				√	√	√	√	-	-	-
General type	VV6 China VI	SAS(Steering wheel steering angle sensor)				√	√	√	√	-	-	-
General type	VV6 China VI	SBWM(Electronic shifter)				√	√	√	√	-	-	-
General type	VV6 China VI	ACC(Automatic cruise system)				√	√	√	√	-	-	-
General type	VV6 China VI	RSDR_L(left radar detection system)				√	√	√	√	-	-	-
General type	VV6 China VI	RSDR_R(right radar detection system)				√	√	√	√	-	-	-
General type	VV6 China VI	SCM(Seat heating massage system)				√	√	√	√	-	-	-
General type	VV6 China VI	DSM(Driver seat memory system)				√	√	√	√	√	-	-
General type	VV6 China VI	DDCM(Driver side door system)				√	√	√	√	-	-	-
General type	VV6 China VI	PDCM(Front driver side door system)				√	√	√	√	-	-	-
General type	VV6 China VI	SVM(Smart inner rearview mirror)				√	√	√	√	-	-	-
General type	VV6 China VI	NEXTRACE(Intelligent FWD)				√	√	√	√	√	-	-
General type	VV6 China VI	ALCM(Ambient light controller)				√	√	√	√	-	-	-

Diagnostic List GREAT WALL MOTOR_v10.52

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color

Model Menu		System				Function						Remarks (Other functions)
						Read ECU information	Read DTC	Erase DTC	Live Data	Actuation Test	Read freeze frame	
General type	VV6 China VI	CVVL(Continuously variable valve lift)				√	-	-	√	-	-	-
General type	VV7	VV7 basic model	ECM(engine system)			√	√	√	√	√	√	write VIN, write network configuration information, VVT self-learning, EBS battery ID flash, IUPR function, OBD function
General type	VV7	VV7 basic model	BCM(Body control system)			√	√	√	√	√	-	write VIN, write network configuration information, read final calibration parameters of the DDD fatigue driving algorithm, write final calibration parameter adjustment of DDD fatigue driving algorithm, Read system configuration, write system configuration, power tailgate self-learning
General type	VV7	VV7 basic model	ABM(Airbag system)			√	√	√	√	-	-	write VIN, write network configuration information, IMU static calibration, write loop configuration word
General type	VV7	VV7 basic model	IP(Instrument system)			√	√	√	√	-	-	write VIN, write network configuration information, maintenance setting
General type	VV7	VV7 basic model	RVC(Rear-view camera)			√	√	√	√	-	-	Write VIN, Network configuration(manual)
General type	VV7	VV7 basic model	ALS(Headlamp Leveling System)			√	√	√	√	-	-	write VIN, write network configuration information, Level zero calibration
General type	VV7	VV7 basic model	IFC(Intelligence front camera control module)			√	√	√	√	-	-	write VIN, write network configuration information, IPV after-sale calibration, write calibration date
General type	VV7	VV7 basic model	HUT(Navigation host system)			√	√	√	√	-	-	write VIN, write network configuration information
General type	VV7	VV7 basic model	DSM(Seat memory module)			√	√	√	√	√	-	Write VIN, Network configuration(manual)
General type	VV7	VV7 basic model	Trailer Module(Trailer module)			√	√	√	√	√	-	Write VIN
General type	VV7	VV7 basic model	AC(A/C control system)			√	√	√	√	√	-	write VIN, write network configuration information, Stepper motor self-learning
General type	VV7	VV7 basic model	ALCM(Ambient light control module)			√	√	√	√	-	-	write VIN, write network configuration information
General type	VV7	VV7 basic model	GW(Independent gateway)			√	√	√	√	-	-	write VIN, write network configuration information
General type	VV7	VV7 basic model	TCU(Transmission system)			√	√	√	√	-	-	Write VIN, Network configuration(manual), turn off DEV CAN function, replace TCU, but do not replace hydraulic module(HCM), replace TCU, but do not replace clutch(PT), after-sale learning function
General type	VV7	VV7 basic model	ESP(Electronic stabilization program)			√	√	√	√	√	-	write VIN, write network configuration information, manual exhaust, yaw rate sensor calibration
General type	VV7	VV7 basic model	EPS(Electric power steering system)			√	√	√	√	√	-	write VIN, write network configuration information, PDC initial torque clearing
General type	VV7	VV7 basic model	SAS(Steering angle sensor)			√	√	√	√	-	-	write VIN, SAS calibration, SAS decalibration
General type	VV7	VV7 basic model	AVM(Around View Module)			√	√	√	√	-	-	write VIN, write network configuration information, offline calibration
General type	VV7	VV7 basic model	RSDS(Parallel line assisted reverse side warning)	left radar detection system(RSDS-L)		√	√	√	√	-	-	write VIN, write network configuration information, after-sales calibration, read after-sale calibration result
General type	VV7	VV7 basic model	RSDS(Parallel line assisted reverse side warning)	right radar detection system(RSDS-R)		√	√	√	√	-	-	write VIN, write network configuration information, after-sales calibration, read after-sale calibration result
General type	VV7	VV7 basic model	ACC(Adaptive cruise control system)			√	√	√	√	-	-	write VIN, write network configuration information, after-sales calibration
General type	VV7	VV7 basic model	TPMS(Tire pressure monitoring system)			√	√	√	√	-	-	write VIN, write network configuration information, tire pressure sensor learning, ABS delayed write
General type	VV7	VV7 basic model	PAS(Parking assist system)			√	√	√	√	-	-	write VIN, write network configuration information
General type	VV7	VV7 basic model	APA(Automatic parking assist system)			√	√	√	√	-	-	write VIN, write network configuration information
General type	VV7	VV7 basic model	DDCM(Main driver side door module)			√	√	√	√	-	-	write VIN, write network configuration information
General type	VV7	VV7 basic model	PDCM(Front driver side door module)			√	√	√	√	-	-	write VIN, write network configuration information
General type	VV7	VV7 basic model	SCM(Seat ventilation heating module)			√	√	√	√	-	-	write VIN, write network configuration information
General type	VV7	VV7 basic model	PEPS(Passive entry passive start system)(Push button)			√	√	√	√	√	-	After-sale function, write network configuration information
General type	VV7	VV7 basic model	T-BOX(Internet of Vehicles host system)			√	√	√	√	-	-	write VIN, write network configuration information
General type	VV7	VV7 upgrade model	ECM(engine system)			√	√	√	√	√	-	Write VIN, write network configuration information, IUPR function, EBS battery ID flash, VVT(Continuously Variable Timing) Self-learning, OBD
General type	VV7	VV7 upgrade model	AT(Automatic transmission system)			√	√	√	√	-	-	Write VIN, write network configuration information(31 characters), after-sale learning function, Read writing function, turn off DEV CAN function, After-sales data reading
General type	VV7	VV7 upgrade model	SRS(Airbag system)			√	√	√	√	-	-	Write VIN, write network configuration information, write loop configuration word, yaw angle calibration

Diagnostic List GREAT WALL MOTOR_v10.52

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color

Model Menu		System			Function						
					Read ECU information	Read DTC	Erase DTC	Live Data	Actuation Test	Read freeze frame	Remarks (Other functions)
General type	VV7	VV7 upgrade model	ICM/IP(Instrument panel system)		√	√	√	√	-	-	Write VIN, write network configuration information, maintenance setting
General type	VV7	VV7 upgrade model	TPMS(Tire pressure monitoring system)		√	√	√	√	-	-	write VIN, write network configuration information, tire pressure sensor learning, ABS delayed write
General type	VV7	VV7 upgrade model	ESP(Electronic stability system)		√	√	√	√	√	-	write VIN, write network configuration information(17 characters), yaw rate sensor calibration, manual exhaust
General type	VV7	VV7 upgrade model	BCM(Body control system)		√	√	√	√	√	-	Write VIN, write network configuration information(31 characters), Read and write final calibration parameter adjustment of DDD fatigue driving algorithm, Body controller configuration information, Electronic wiper angle
General type	VV7	VV7 upgrade model	AC(Auto A/C system)		√	√	√	√	√	-	Write VIN, write network configuration information
General type	VV7	VV7 upgrade model	PEPS(Passive entry passive start system)		√	√	√	√	-	-	Write VIN, write network configuration information, After-sale function
General type	VV7	VV7 upgrade model	GW(Gateway system)		√	√	√	√	-	-	Write VIN, write network configuration information, EBS battery ID flash
General type	VV7	VV7 upgrade model	EPS(Electric steering system)		√	√	√	√	-	-	Write VIN, write network configuration information, PDC enabled, CCP enable state, RES feature selection, PDC initial torque value
General type	VV7	VV7 upgrade model	PAS(Parking assist system)	PAS(Parking assist system)	√	√	√	√	-	-	Write VIN, write network configuration information
General type	VV7	VV7 upgrade model	PAS(Parking assist system)	APA(Automatic parking assist system)	√	√	√	√	-	-	Write VIN, write network configuration information
General type	VV7	VV7 upgrade model	AVM(Around view module)		√	√	√	√	-	-	Write VIN, write network configuration information, After-sales configuration camera, after-sales calibration
General type	VV7	VV7 upgrade model	IFC(Intelligent front view camera)		√	√	√	√	-	-	Write VIN, write network configuration information, IFV after-sale calibration, write calibration date
General type	VV7	VV7 upgrade model	HUT(Navigation System)		√	√	√	√	-	-	Write VIN, write network configuration information
General type	VV7	VV7 upgrade model	ESCL(Electronic steering column lock)		√	√	√	√	-	-	Write VIN, write network configuration information
General type	VV7	VV7 upgrade model	SAS(Steering wheel steering angle sensor)		√	√	√	√	-	-	Write VIN, SASsteering angle calibration
General type	VV7	VV7 upgrade model	SBWM(Electronic shifter)		√	√	√	√	-	-	Write VIN, write network configuration information
General type	VV7	VV7 upgrade model	ACC(Automatic cruise system)		√	√	√	√	-	-	Write VIN, write network configuration information, after-sales calibration
General type	VV7	VV7 upgrade model	RSDS-L(left radar detection system)		√	√	√	√	-	-	Write VIN, write network configuration information, after-sales calibration
General type	VV7	VV7 upgrade model	RSDS-R(right radar detection system)		√	√	√	√	-	-	Write VIN, write network configuration information, after-sales calibration
General type	VV7	VV7 upgrade model	SCM(Seat heating massage system)		√	√	√	√	-	-	Write VIN, write network configuration information
General type	VV7	VV7 upgrade model	DSM(Driver seat memory system)		√	√	√	√	√	-	Write VIN, write network configuration information
General type	VV7	VV7 upgrade model	DDCM(Driver side door system)		√	√	√	√	-	-	Write VIN, write network configuration information
General type	VV7	VV7 upgrade model	PDCM(Front driver side door system)		√	√	√	√	-	-	Write VIN, write network configuration information
General type	VV7	VV7 upgrade model	SVM(Smart inner rearview mirror)		√	√	√	√	-	-	Write VIN, write network configuration information
General type	VV7	VV7 upgrade model	T-BOX(Internet of Vehicles host system)		√	√	√	√	-	-	Write VIN, write network configuration information
General type	VV7	VV7 upgrade model	ALS(Headlamp Leveling System)		√	√	√	√	-	-	Write VIN, write network configuration information, Level zero calibration
General type	VV7	VV7 upgrade model	RHDS(Rear armrest display assembly)		√	√	√	√	√	-	Write VIN, write network configuration information
General type	VV7	VV7 upgrade model	ALCM(Ambient light controller)		√	√	√	√	-	-	Write VIN, Network configuration(manual)
General type	VV7	VV7 China VI	ECM(engine system)		√	√	√	√	√	-	Write VIN, write network configuration information(31 characters), change GPF(Diesel Particulate Filter), Replace the differential pressure sensor, Replace ECU(Electronic Control Unit), VVT(Continuously Variable Timing) Self-learning, OBD function
General type	VV7	VV7 China VI	AT(Automatic transmission system)		√	√	√	√	-	-	Write VIN, write network configuration information(31 characters), after-sale learning function, Read writing function, turn off DEV CAN function, After-sales data reading
General type	VV7	VV7 China VI	SRS(Airbag system)		√	√	√	√	-	-	Write VIN, write network configuration information, write loop configuration word, yaw angle calibration
General type	VV7	VV7 China VI	ICM/IP(Instrument panel system)		√	√	√	√	-	-	Write VIN, write network configuration information, maintenance setting
General type	VV7	VV7 China VI	TPMS(Tire pressure monitoring system)		√	√	√	√	-	-	write VIN, write network configuration information, tire pressure sensor learning, ABS delayed write

Diagnostic List GREAT WALL MOTOR_v10.52

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color

Model Menu		System			Function						
					Read ECU information	Read DTC	Erase DTC	Live Data	Actuation Test	Read freeze frame	Remarks (Other functions)
General type	VV7	VV7 China VI	ESP(Electronic stability system)		√	√	√	√	√	-	write VIN, write network configuration information(17 characters), yaw rate sensor calibration, manual exhaust
General type	VV7	VV7 China VI	BCM(Body control system)		√	√	√	√	√	-	Write VIN, write network configuration information(31 characters), Read and write final calibration parameter adjustment of DDD fatigue driving algorithm, Body controller configuration information, Electronic wiper angle
General type	VV7	VV7 China VI	AC(Auto A/C system)		√	√	√	√	√	-	Write VIN, write network configuration information
General type	VV7	VV7 China VI	PEPS(Passive entry passive start system)		√	√	√	√	-	-	Write VIN, write network configuration information, After-sale function
General type	VV7	VV7 China VI	GW(Gateway system)		√	√	√	√	-	-	Write VIN, write network configuration information, EBS battery ID flash
General type	VV7	VV7 China VI	T-BOX(Internet of Vehicles host system)		√	√	√	√	-	-	Write VIN, write network configuration information
General type	VV7	VV7 China VI	EPS(Electric steering system)		√	√	√	√	-	-	Write VIN, write network configuration information, PDC enabled, CCP enable state, RES feature selection, PDC initial torque value
General type	VV7	VV7 China VI	PAS(Parking assist system)	PAS(Parking assist system)	√	√	√	√	-	-	Write VIN, write network configuration information
General type	VV7	VV7 China VI	PAS(Parking assist system)	APA(Automatic parking assist system)	√	√	√	√	-	-	Write VIN, write network configuration information
General type	VV7	VV7 China VI	AVM(Around view module)		√	√	√	√	-	-	Write VIN, write network configuration information, After-sales configuration camera, after-sales calibration
General type	VV7	VV7 China VI	IFC(Intelligent front view camera)		√	√	√	√	-	-	Write VIN, write network configuration information, IPV after-sale calibration, write calibration date
General type	VV7	VV7 China VI	HUT(Navigation System)		√	√	√	√	-	-	Write VIN, write network configuration information
General type	VV7	VV7 China VI	ESCL(Electronic steering column lock)		√	√	√	√	-	-	Write VIN, write network configuration information
General type	VV7	VV7 China VI	SAS(Steering wheel steering angle sensor)		√	√	√	√	-	-	Write VIN, SASsteering angle calibration
General type	VV7	VV7 China VI	SBWM(Electronic shifter)		√	√	√	√	-	-	Write VIN, write network configuration information
General type	VV7	VV7 China VI	ACC(Automatic cruise system)		√	√	√	√	-	-	Write VIN, write network configuration information, after-sales calibration
General type	VV7	VV7 China VI	RSDS-L(left radar detection system)		√	√	√	√	-	-	Write VIN, write network configuration information, after-sales calibration
General type	VV7	VV7 China VI	RSDS-R(right radar detection system)		√	√	√	√	-	-	Write VIN, write network configuration information, after-sales calibration
General type	VV7	VV7 China VI	SCM(Seat heating massage system)		√	√	√	√	-	-	Write VIN, write network configuration information
General type	VV7	VV7 China VI	DSM(Driver seat memory system)		√	√	√	√	√	-	Write VIN, write network configuration information
General type	VV7	VV7 China VI	DDCM(Driver side door system)		√	√	√	√	-	-	Write VIN, write network configuration information
General type	VV7	VV7 China VI	PDCM(Front driver side door system)		√	√	√	√	-	-	Write VIN, write network configuration information
General type	VV7	VV7 China VI	SVM(Smart inner rearview mirror)		√	√	√	√	-	-	Write VIN, write network configuration information
General type	VV7	VV7 China VI	ALCM(Ambient light controller)		√	√	√	√	-	-	Write VIN, Network configuration(manual)
General type	VV7	VV7 China VI	ALS(Headlamp Leveling System)		√	√	√	√	-	-	Write VIN, write network configuration information, Level zero calibration
General type	VV7	VV7 China VI	RHDS(Rear armrest display assembly)		√	√	√	√	√	-	Write VIN, write network configuration information
General type	Great Wall POER		ECM(Engine Control Module)	Engine system(UAES GDI CHINA VI (4B15A+4C20B))	√	√	√	√	√	-	Replace the gasoline particulate filter(GPF), Replace the differential pressure sensor, Write configuration, Read configuration, Variable valve timing (VVT) self-learning, Write VIN code, Gasoline particulate filter (GPF) regeneration, Fuel tank leak test
General type	Great Wall POER		ECM(Engine Control Module)	Engine system(4D20M)	√	√	√	√	-	-	Write VIN code, Write configuration(20 bit), Write configuration(62 bit), Read and write injector code, Reset NVV (learning value), Diesel particulate filter (DPF) regeneration and routine test
General type	Great Wall POER		AT(Automatic Transmission)		√	√	√	√	-	-	Write VIN code, Reset self-learning data, Reset message learning data, Activate permanent fault codes
General type	Great Wall POER		ESP(Electronic Stability Program)		√	√	√	√	√	-	Write VIN code, Artificial exhaust, Pedal stroke sensor calibration, Write configuration, Caliper test
General type	Great Wall POER		SRS(Supplemental Restrgint System)		√	√	√	√	-	-	Yaw Angle Sensor calibration, Write configuration, Read configuration

Diagnostic List GREAT WALL MOTOR_v10.52

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color

Model Menu		System				Function						Remarks (Other functions)
						Read ECU information	Read DTC	Erase DTC	Live Data	Actuation Test	Read freeze frame	
General type	Great Wall POER		BCM(Body Control Module)		√	√	√	√	√	-	Write VIN code, Write body controller configuration information, Write configuration	
General type	Great Wall POER		ICM/IP(Instrument panel system)	Continental Meter(3.5)	√	√	√	√	√	-	Write VIN code, Maintenance mileage reset	
General type	Great Wall POER		ICM/IP(Instrument panel system)	Yazaki Meter(3.5)	√	√	√	√	√	-	Write VIN code, Maintenance mileage reset	
General type	Great Wall POER		ICM/IP(Instrument panel system)	Yazaki Meter(3.5 EV)	√	√	√	√	√	-	Write VIN code, Maintenance mileage reset, Total mileage reset	
General type	Great Wall POER		ICM/IP(Instrument panel system)	Yazaki Meter(7)	√	√	√	√	√	-	Write VIN code, Maintenance mileage reset	
General type	Great Wall POER		TPMS(Tire Pressure Monitoring System)		√	√	√	√	-	-	Write VIN code, Tire pressure sensor ID learning, Write configuration, ABS delayed write	
General type	Great Wall POER		AC(Automatic Air Conditioning System)		√	√	√	√	√	-	Write VIN code, Write configuration	
General type	Great Wall POER		CSA(Combination Wwitch Assembly)		√	√	√	√	-	-	Write VIN code, Calibration function, Write configuration	
General type	Great Wall POER		PEPS(Passive Entry Passive Start system)		√	√	√	√	-	-	Write VIN code, After-sales function	
General type	Great Wall POER		SBWM(Electronic Shifter)		√	√	√	√	-	-	Write VIN code, Write category classification code	
General type	Great Wall POER		HUT(Navigation System)		√	√	√	-	-	-	Write VIN code, Write vehicle model, Write configuration	
General type	Great Wall POER		LRSDS(Left Rear Radar Detection System)		√	√	√	√	-	-	Write VIN code	
General type	Great Wall POER		RRSDS(Right Rear Radar Detection System)		√	√	√	√	-	-	Write VIN code	
General type	Great Wall POER		ACC(Adaptive Cruise Control)		√	√	√	√	-	-	Write VIN code	
General type	Great Wall POER		IFC(Intelligent Front View Camera)		√	√	√	√	-	-	Write VIN code	
General type	Great Wall POER		T-box(Internet of vehicles host system)		√	√	√	√	-	-	Write VIN code	
General type	Great Wall POER		VSG(Driving Sound Generator)		√	√	√	-	-	-	Write VIN code	
General type	Great Wall POER		DCU(urea injection control unit)		√	√	√	√	-	-	-	
General type	Great Wall POER		TOD(4WD system)		√	√	√	√	√	-	Write VIN code	
General type	Great Wall POER		ELD(electronically controlled differential lock)		√	√	√	√	√	-	Write VIN code	
General type	Great Wall POER		GW(Gateway System)		√	√	√	-	-	-	Write VIN code	
General type	Great Wall POER		EPS(Electric Power Steering)		√	√	√	√	-	-	Write VIN code	
General type	Great Wall POER		ESCL(Electronic Steering Column Lock)		√	√	√	-	-	-	Write VIN code	
General type	Great Wall POER		AVM(Around View Monitor)		√	√	√	√	-	-	Write VIN code, After-sales configuration camera, After-sales calibration	
General type	Great Wall POER		PAS(Parking Assist System)		√	√	√	√	-	-	-	
General type	Wingle 5	2020 model	ECM(Engine Control Module)		√	√	√	√	√	-	Write VIN code, Gasoline particulate filter (GPF) regeneration function, Gasoline Particulate Filter (GPF) mileage reset	
General type	Wingle 5	2020 model	ESP(Electronic Stability Program)		√	√	√	√	√	-	Artificial exhaust, Yaw rate sensor calibration, Steering sensor calibration	
General type	Wingle 5	2020 model	SRS(Supplemental Restrgint System)		√	√	√	√	√	-	-	
General type	Wingle 5	2020 model	BCM(Body Control Module)		√	√	√	√	√	-	Write VIN code	
General type	Wingle 5	2020 model	ICM/IP(Instrument panel system)	IP(Instrument system)	√	√	√	-	√	-	Manually reset	
General type	Wingle 5	2020 model	ICM/IP(Instrument panel system)	IP(Instrument system) (ZHEJIANG)	√	√	√	√	√	-	Write VIN code, Manually reset	
General type	Wingle 5	2020 model	AC(air conditioning control system)		√	√	√	√	√	-	-	
General type	Wingle 5	2020 model	IMMO(Immobilizer)		√	√	√	√	-	-	-	
General type	Wingle 5	2020 model	GLO-NASS(GLONASS emergency call system)		√	√	√	√	-	-	Write VIN code	
General type	Wingle 5	2020 model	TOD(4WD system)		√	√	√	√	√	-	write data	

Diagnostic List GREAT WALL MOTOR_v10.52

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color

Model Menu		System				Function						Remarks (Other functions)
						Read ECU information	Read DTC	Erase DTC	Live Data	Actuation Test	Read freeze frame	
General type	Wingle 7	2019 model (China VI)	ECM(Engine Control Module)	Engine system(UAES GDI CHINA VI (4B15A+4C20B))	√	√	√	√	√	-	Write VIN code, Write network configuration information(31 characters), Replace car particulate filter(GPF), Replace the differential pressure sensor, Replace ECU (Electronic Control Unit), Variable valve timing (VVT) self-learning, Write configuration, Read configuration, Gasoline particulate filter (GPF) regeneration, Fuel tank leak test, OBD function	
General type	Wingle 7	2019 model (China VI)	ECM(Engine Control Module)	Engine system(4D20M)	√	√	√	√	-	-	Write VIN code, Read and write injector code, Reset NVV (learning value), Diesel particulate filter (DPF) regeneration and routine test	
General type	Wingle 7	2019 model (China VI)	ESP(Electronic Stability Program)		√	√	√	√	√	-	Artificial exhaust, Yaw rate sensor calibration, Steering sensor calibration	
General type	Wingle 7	2019 model (China VI)	SRS(Supplemental Restrgint System)		√	√	√	√	√	-	Offline mode, Write VIN code, Write ECU installation date, Write network configuration information	
General type	Wingle 7	2019 model (China VI)	BCM(Body Control Module)		√	√	√	√	√	-	Write network configuration information, Read Network Configuration, Write VIN code, Body unlock function	
General type	Wingle 7	2019 model (China VI)	ICM/IP(Instrument panel system)	IP(Instrument system)	√	√	√	-	√	-	Manually reset	
General type	Wingle 7	2019 model (China VI)	ICM/IP(Instrument panel system)	IP(Instrument system)(ZHEJIANG)	√	√	√	√	√	-	Write VIN code, Manually reset	
General type	Wingle 7	2019 model (China VI)	AC(Automatic Air Conditioning System)		√	√	√	√	√	-	-	
General type	Wingle 7	2019 model (China VI)	IMMO(Immobilizer)		√	√	√	√	-	-	-	
General type	Wingle 7	2019 model (China VI)	HUT(Navigation System)		√	√	√	√	-	-	Write VIN code	
General type	Wingle 7	2019 model (China VI)	DCU(urea injection control unit)		√	√	√	√	-	-	-	
General type	Wingle 7	2019 model (China VI)	GLO-NASS(GLONASS emergency call system)		√	√	√	√	-	-	Write VIN code	
General type	Haval H2	2019 model (China VI)	ECM(Engine Control Module)		√	√	√	√	√	-	Write VIN code, Variable valve timing (VVT) self-learning, Replace car particulate filter(GPF), Replace the oxidation catalyst (DOC) (differential pressure sensor), Gasoline particulate filter (GPF) regeneration, Fuel tank leak test	
General type	Haval H2	2019 model (China VI)	AT(Automatic Transmission)	Transmission control system 6AT	√	√	√	√	√	-	-	
General type	Haval H2	2019 model (China VI)	AT(Automatic Transmission)	Transmission control unit(7DCT300)	√	√	√	√	-	-	Write VIN code, Transmission self-learning, Clutch reset	
General type	Haval H2	2019 model (China VI)	AT(Automatic Transmission)	Transmission control unit(7DCT450)	√	√	√	√	-	-	Write VIN code, Turn off the DEV CAN function, Replace TCU, But do not replace the hydraulic module(HCM), Replace TCU, But do not replace the clutch(PT), Replace TCU, But do not replace the register module(NB), After-sales learning function, Turn off the Auto P function, After-sales data reading	
General type	Haval H2	2019 model (China VI)	ESP(Electronic Stability Program)		√	√	√	√	√	-	Yaw rate sensor calibration, APBMI initial setup, Artificial exhaust	
General type	Haval H2	2019 model (China VI)	SRS(Supplemental Restrgint System)		√	√	√	√	√	-	-	
General type	Haval H2	2019 model (China VI)	BCM(Body Control Module)		√	√	√	√	√	-	-	
General type	Haval H2	2019 model (China VI)	ICM/IP(Instrument panel system)		√	√	√	√	√	-	Reset maintenance mileage, Mileage reset(ODO)	
General type	Haval H2	2019 model (China VI)	AC(Automatic Air Conditioning System)	AC(Air conditioning control system-Red label)	√	√	√	√	√	-	-	
General type	Haval H2	2019 model (China VI)	AC(Automatic Air Conditioning System)	AC(Air conditioning control system-Blue label)	√	√	√	√	√	-	Write VIN code	
General type	Haval H2	2019 model (China VI)	PEPS(Passive Entry Passive Start system)		√	√	√	√	√	-	After-sales function	
General type	Haval H2	2019 model (China VI)	GW(Gateway System)	GW(MAILONG)	√	√	√	-	-	-	Write VIN code	
General type	Haval H2	2019 model (China VI)	GW(Gateway System)	GW(Continent)	√	√	√	√	-	-	Write VIN code	
General type	Haval H2	2019 model (China VI)	ESCL(Electronic Steering Column Lock)		√	√	√	-	-	-	-	
General type	Haval H2	2019 model (China VI)	EPS(Electric Power Steering)		√	√	√	√	-	-	Sensor calibration	
General type	Haval H2	2019 model (China VI)	SAS(steering wheel angle sensor)		√	√	√	√	-	-	Calibration	
General type	Haval H2	2019 model (China VI)	SBWM(Electronic Shifter)	SBWM(Electronic Shifter)(ZF)	√	√	√	√	-	-	Write VIN code	

Diagnostic List GREAT WALL MOTOR_v10.52

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color

Model Menu		System				Function						Remarks (Other functions)
						Read ECU information	Read DTC	Erase DTC	Live Data	Actuation Test	Read freeze frame	
General type	Haval H2	2019 model (China VI)	SBWM(Electronic Shifter)	SBWM(Electronic Shifter) (CHONGQING RUIGE)	√	√	√	√	√	-	-	Write VIN code
General type	Haval H2	2019 model (China VI)	CMS(CAN signal conversion system)		√	√	√	√	-	-	-	Write VIN code
General type	Haval H6	2019 model (China VI)	CC6461RM series/CC6472RM series	ECM(Engine Control Module)	√	√	√	√	√	-	-	Write VIN code, variable valve timing (VVT) self-learning, replacement of vehicle particulate filter (GPF), replacement of oxidation catalyst (DOC) (differential pressure sensor), regeneration of gasoline particulate filter (GPF), fuel tank leakage test
General type	Haval H6	2019 model (China VI)	CC6461RM series/CC6472RM series	AT(Automatic Transmission)	√	√	√	√	-	-	-	Write VIN code, close the dev can function, replace the TCU, but do not replace the hydraulic module (HCM), replace the TCU, but do not replace the clutch (PT), replace the TCU, but do not replace the register module (NB), after-sales learning function, close the auto P function, and read after-sales data
General type	Haval H6	2019 model (China VI)	CC6461RM series/CC6472RM series	ESP(Electronic Stability Program)	√	√	√	√	√	-	-	Write VIN code, angle sensor calibration, manual exhaust, caliper test
General type	Haval H6	2019 model (China VI)	CC6461RM series/CC6472RM series	SRS(Supplemental Restrgint System)	√	√	√	√	-	-	-	Write VIN code, calibration
General type	Haval H6	2019 model (China VI)	CC6461RM series/CC6472RM series	BCM(Body Control Module)	√	√	√	√	√	-	-	Write VIN code
General type	Haval H6	2019 model (China VI)	CC6461RM series/CC6472RM series	ICM/IP(Instrument panel system)	√	√	√	√	√	-	-	Write VIN code, service mileage reset, manual zeroing
General type	Haval H6	2019 model (China VI)	CC6461RM series/CC6472RM series	SBWM(Electronic Shifter)	SBWM(Electronic Shifter) (ZF)	√	√	√	√	-	-	Write VIN code
General type	Haval H6	2019 model (China VI)	CC6461RM series/CC6472RM series	SBWM(Electronic Shifter)	SBWM(Electronic Shifter) (CHONGQING RUIGE)	√	√	√	√	√	-	Write VIN code
General type	Haval H6	2019 model (China VI)	CC6461RM series/CC6472RM series	GW(Gateway System)	√	√	√	√	-	-	-	Write VIN code, electronic brake system (EBS) battery ID swipe
General type	Haval H6	2019 model (China VI)	CC6461RM series/CC6472RM series	AC(Automatic Air Conditioning System)	√	√	√	√	√	-	-	Write VIN code
General type	Haval H6	2019 model (China VI)	CC6461RM series/CC6472RM series	CD(entertainment system)	√	√	√	√	-	-	-	Write VIN code
General type	Haval H6	2019 model (China VI)	CC6461RM series/CC6472RM series	PAS(Parking Assist System)	√	√	√	-	-	-	-	Write VIN code
General type	Haval H6	2019 model (China VI)	CC6461RM series/CC6472RM series	PEPS(Passive Entry Passive Start system)	√	√	√	√	√	-	-	Write VIN code, after sales learning
General type	Haval H6	2020 model	ECM(Engine Control Module)	Engine system(4B15)	√	√	√	√	√	-	-	Write VIN code, VVT self-learning, network configuration (manual), OBD diagnosis function, write configuration
General type	Haval H6	2020 model	ECM(Engine Control Module)	Engine system(4B13)	√	√	√	√	√	-	-	Write VIN code, VVT self-learning, network configuration (manual), OBD diagnosis function
General type	Haval H6	2020 model	ECM(Engine Control Module)	Engine system(4C20)	√	√	√	√	√	√	√	Write VIN code, tooth information learning, network configuration (manual), iupr function
General type	Haval H6	2020 model	ECM(Engine Control Module)	Engine system(UAES GDI CHINA VI(4B15A+4C20B))	√	√	√	√	√	-	-	Write VIN code, write network configuration information (31 characters), replace vehicle particulate filter (GPF), replace differential pressure sensor, replace ECU (electronic control unit), variable valve timing (VVT) self-learning, write configuration, read configuration, regeneration of gasoline particulate filter (GPF), fuel tank leakage test, OBD function, read relevant data of old ECM gasoline particulate filter (GPF)
General type	Haval H6	2020 model	AT(Automatic transmission system)	Transmission control unit(7DCT300)	√	√	√	√	-	-	-	Write VIN code, transmission self-learning, clutch reset, write configuration, read configuration
General type	Haval H6	2020 model	AT(Automatic transmission system)	Transmission control unit(7DCT450)	√	√	√	√	-	-	-	Write VIN code, write network configuration information, turn off dev can function, replace TCU, but do not replace hydraulic module (HCM), replace TCU, but do not replace clutch (PT), replace TCU, but do not replace register module (NB), after-sales learning function, turn off auto P function, and read after-sales data
General type	Haval H6	2020 model	ESP(Electronic Stability Program)		√	√	√	√	√	-	-	Write VIN code, network configuration (manual), yaw rate sensor calibration, manual exhaust function, write configuration (34-digit), read configuration (34-digit), write configuration (62-digit), read configuration (62-digit)
General type	Haval H6	2020 model	SRS(Supplemental Restrgint System)		√	√	√	√	-	-	-	Write VIN code, calibration, network configuration (manual), write circuit configuration word
General type	Haval H6	2020 model	BCM(Body Control Module)		√	√	√	√	√	-	-	Write VIN code, network configuration (manual), reading and writing DDD fatigue driving algorithm, final calibration parameter adjustment, reading and writing system configuration, electric tailgate self-learning (PLG)
General type	Haval H6	2020 model	ICM/IP(Instrument panel system)	IP(full color instrument system)	√	√	√	√	√	-	-	Write VIN code, write network configuration information (17 characters), write network configuration information (31 characters), repair and maintenance settings, and manually reset to zero
General type	Haval H6	2020 model	ICM/IP(Instrument panel system)	IP(non full color instrument system)	√	√	√	√	√	-	-	Write VIN code, write network configuration information (17 characters), write network configuration information (31 characters), repair and maintenance settings, and manually reset to zero
General type	Haval H6	2020 model	TPMS(Tire Pressure Monitoring System)		√	√	√	√	-	-	-	Write VIN code, ABS delay writing, network configuration (manual), tire pressure sensor learning

Diagnostic List GREAT WALL MOTOR_v10.52

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color

Model Menu		System				Function						Remarks (Other functions)
						Read ECU information	Read DTC	Erase DTC	Live Data	Actuation Test	Read freeze frame	
General type	Haval H6	2020 model	AC(Automatic Air Conditioning System)			√	√	√	√	√	-	Write VIN code, network configuration (manual), self-learning
General type	Haval H6	2020 model	PEPS(Passive Entry Passive Start system)			√	√	√	√	-	-	Write VIN code, after-sales function, network configuration (manual), write configuration (34-digit), read configuration (34-digit), write configuration (62-digit)
General type	Haval H6	2020 model	ESCL(Electronic Steering Column Locks)			√	√	√	√	-	-	Write VIN code, network configuration (manual)
General type	Haval H6	2020 model	SBWM(Electronic Shifter)	SBWM(Electronic Shifter) (ZF)		√	√	√	√	-	-	Write VIN code
General type	Haval H6	2020 model	SBWM(Electronic Shifter)	SBWM(Electronic Shifter) (CHONGQING RUIGE)		√	√	√	√	√	-	Write VIN code, write category distinguishing code, write configuration (34 digits), write configuration (62 digits)
General type	Haval H6	2020 model	EPS(Electric Power Steering)			√	√	√	√	√	-	Write VIN code, PDC initial torque reset, write configuration (34-digit), read configuration (34-digit), write configuration (62-digit)
General type	Haval H6	2020 model	SAS(steering wheel angle sensor)			√	√	√	√	-	-	Write VIN code, calibration
General type	Haval H6	2020 model	CVVL(Continuously variable valve lift)			√	-	-	√	-	-	Write VIN code, network configuration (manual), cvvl (continuously variable valve lift) self-learning
General type	Haval H6	2020 model	GW(Gateway System)	GW(gateway system)		√	√	√	√	-	-	Write VIN code, network configuration (manual)
General type	Haval H6	2020 model	GW(Gateway System)	GW(Gateway) (include EBS LIN)		√	√	√	√	-	-	Write VIN code, write fingerprint information, write configuration (34-digit), read configuration (34-digit), write configuration (62-digit), read configuration (62-digit)
General type	Haval H6	2020 model	AVM(Around View Monitor)			√	√	√	√	-	-	Write VIN code, write network configuration information, ECU serial number, offline automatic calibration, write configuration (34-digit), read configuration (34-digit), write configuration (62-digit)
General type	Haval H6	2020 model	RVC(Rear View Camera)			√	√	√	√	-	-	Write VIN code, network configuration (manual), write configuration (34-digit), read configuration (34-digit), write configuration (62-digit)
General type	Haval H6	2020 model	PAS(Parking Assist System)	PAS(Parking Assist System) (TONGZHI)		√	√	√	√	-	-	Write VIN code, network configuration (manual)
General type	Haval H6	2020 model	PAS(Parking Assist System)	APA(semi automatic parking aid)		√	√	√	√	-	-	Write VIN code, network configuration (manual), write configuration (34-digit), read configuration (34-digit), write configuration (62-digit)
General type	Haval H6	2020 model	PAS(Parking Assist System)	PAS(Parking Assist System) (VALEO)		√	√	√	√	-	-	Write VIN code, write configuration, read configuration
General type	Haval H6	2020 model	IFC(Intelligent Front View Camera)			√	√	√	√	-	-	Write data, network configuration (manual)
General type	Haval H6	2020 model	SHM(Seat Heating Module)			√	√	√	√	-	-	Write VIN code
General type	Haval H6	2020 model	RSDS_L(Left side radar detection system)			√	√	√	√	-	-	Write VIN code, network configuration (manual)
General type	Haval H6	2020 model	RSDS_R(Right side radar detection system)			√	√	√	√	-	-	Write VIN code, network configuration (manual)
General type	Haval H6	2020 model	T-box(Internet of vehicles host system)	TBOX(Internet of vehicles host)		√	√	√	√	-	-	Write VIN code, network configuration (manual), write configuration (34-digit), read configuration (34-digit), write configuration (62-digit), read configuration (62-digit)
General type	Haval H6	2020 model	T-box(Internet of vehicles host system)	T-BOX (Vehicle networking host system) (4G)		√	√	√	√	-	-	Write VIN code, write network configuration information, LED brightness, T-box test
General type	Haval H6	2020 model	HUT(Navigation System)			√	√	√	√	-	-	Write VIN code, network configuration (manual), write configuration (34-digit), read configuration (34-digit), write configuration (62-digit)
General type	Haval H6	2020 model	ACC(Adaptive Cruise Control)			√	√	√	√	-	-	Write VIN code, write network configuration information, write configuration (34-digit), read configuration (34-digit), write configuration (62-digit), active calibration
General type	Haval H6	2020 model	DSM(Driver Seat Memory)			√	√	√	√	√	-	Write VIN code, network configuration (manual)
General type	Haval H6	2020 model	DDCM(Driver side door system)			√	√	√	√	-	-	Write VIN code, network configuration (manual)
General type	Haval H6	2020 model	PDCM(Passenger side door system)			√	√	√	√	-	-	Write VIN code, network configuration (manual)
General type	Haval H6	2020 model	GLO-NASS (GLONASS emergency call system)			√	√	√	-	-	-	
General type	Haval H7	2019 model (China VI)	ECM(Engine Control Module)			√	√	√	√	√	-	Write VIN code, write network configuration information (31 characters), replace vehicle particulate filter (GPF), replace differential pressure sensor, replace ECU (electronic control unit), variable valve timing (VVT) self-learning, write configuration, read configuration, regeneration of gasoline particulate filter (GPF), fuel tank leakage test, OBD function
General type	Haval H7	2019 model (China VI)	AT(Automatic Transmission)	Transmission control system(6DCT)		√	√	√	√	-	-	Write VIN code, self learning

Diagnostic List GREAT WALL MOTOR_v10.52

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color

Model Menu		System				Function						Remarks (Other functions)
						Read ECU information	Read DTC	Erase DTC	Live Data	Actuation Test	Read freeze frame	
General type	Haval H7	2019 model (China VI)	AT(Automatic Transmission)	Transmission control unit(7DCT450)	√	√	√	√	-	-	Write VIN code, close the dev can function, replace the TCU, but do not replace the hydraulic module (HCM), replace the TCU, but do not replace the clutch (PT), replace the TCU, but do not replace the register module (NB), after-sales learning function, close the auto P function, and read after-sales data	
General type	Haval H7	2019 model (China VI)	ESP(Electronic Stability Program)		√	√	√	√	√	-	Write VIN code, calibration, manual exhaust function	
General type	Haval H7	2019 model (China VI)	SRS(Supplemental Restrgint System)		√	√	√	√	-	-	Write VIN code, IMU static calibration	
General type	Haval H7	2019 model (China VI)	BCM(Body Control Module)		√	√	√	√	√	-	Write VIN code	
General type	Haval H7	2019 model (China VI)	ICM/IP(Instrument panel system)	Delphi instrument system	√	√	√	√	√	-	Write VIN code, service settings	
General type	Haval H7	2019 model (China VI)	ICM/IP(Instrument panel system)	Bosch instrument system	√	√	√	√	√	-	Write VIN code, service settings	
General type	Haval H7	2019 model (China VI)	AC(Automatic Air Conditioning System)		√	√	√	√	√	-	Write VIN code	
General type	Haval H7	2019 model (China VI)	PAS(Parking Assist System)	PAS(Parking Assist System)	√	√	√	√	-	-	Write VIN code	
General type	Haval H7	2019 model (China VI)	PAS(Parking Assist System)	APA(semi automatic parking aid)	√	√	√	√	-	-	Write VIN code	
General type	Haval H7	2019 model (China VI)	RVC(Rear View Camera)		√	√	√	√	-	-	Write VIN code	
General type	Haval H7	2019 model (China VI)	AVM(Around View Monitor)	AVM(Around View Monitor) (standard definition)	√	√	√	√	-	-	Write VIN code, network configuration (manual), ECU serial number	
General type	Haval H7	2019 model (China VI)	AVM(Around View Monitor)	AVM(Around View Monitor) (HD)	√	√	√	√	-	-	Write VIN code, after-sales camera configuration, after-sales calibration	
General type	Haval H7	2019 model (China VI)	DSM(Driver Seat Memory)		√	√	√	√	√	-	Write VIN code	
General type	Haval H7	2019 model (China VI)	SCM(Seat heating massage system)		√	√	√	√	√	-	Write VIN code	
General type	Haval H7	2019 model (China VI)	IFC(Intelligent front camera)		√	√	√	√	-	-	Write VIN code	
General type	Haval H7	2019 model (China VI)	ACC(Adaptive Cruise Control)		√	√	√	√	-	-	Write VIN code	
General type	Haval H7	2019 model (China VI)	LRSDDS(left rear radar detection system)		√	√	√	√	-	-	Write VIN code	
General type	Haval H7	2019 model (China VI)	RRSDDS(right rear radar detection system)		√	√	√	√	-	-	Write VIN code	
General type	Haval H7	2019 model (China VI)	PEPS(Passive Entry Passive Start system)		√	√	√	√	√	-	After sales learning	
General type	Haval H7	2019 model (China VI)	GW(Gateway System)		√	√	√	√	-	-	Write VIN code	
General type	Haval H7	2019 model (China VI)	EPS(Electric Power Steering)		√	√	√	√	√	-	Write VIN code, PDC initial torque cleared	
General type	Haval H7	2019 model (China VI)	SAS(steering wheel angle sensor)		√	√	√	√	-	-	Write VIN code, 标定	
General type	Haval H7	2019 model (China VI)	T-box(Internet of vehicles host system)		√	√	√	√	-	-	Write VIN code	
General type	Haval H7	2019 model (China VI)	HUT(Navigation System)		√	√	√	√	√	-	Write VIN code	
General type	Haval H9	2020 model (SAT CHINA VI)	ECM(Engine Control Module)	Engine system(UAES GDI CHINA VI (4B15A+4C20B))	√	√	√	√	√	-	Write VIN code, write network configuration information (31 characters), replace vehicle particulate filter (GPF), replace differential pressure sensor, replace ECU (electronic control unit), variable valve timing (VVT) self-learning, write configuration, read configuration, gasoline particulate filter (GPF) regeneration, fuel tank leakage test and OBD function	
General type	Haval H9	2020 model (SAT CHINA VI)	ECM(Engine Control Module)	Engine system(4D20M)	√	√	√	√	-	-	Write VIN code, read and write injector code, reset nvv (learning value), diesel particulate filter (DPF) regeneration and routine test	
General type	Haval H9	2020 model (SAT CHINA VI)	AT(Automatic Transmission)		√	√	√	√	-	-	Write VIN code, reset self-learning data, reset message learning data and activate permanent fault code	
General type	Haval H9	2020 model (SAT CHINA VI)	ESP(Electronic Stability Program)		√	√	√	√	√	-	Write VIN code, yaw rate sensor calibration, manual exhaust, caliper test	
General type	Haval H9	2020 model (SAT CHINA VI)	SRS(Supplemental Restrgint System)		√	√	√	√	-	-	Write VIN code and yaw angle calibration	
General type	Haval H9	2020 model (SAT CHINA VI)	BCM(Body Control Module)		√	√	√	√	√	-	Write VIN code	
General type	Haval H9	2020 model (SAT CHINA VI)	ICM/IP(Instrument panel system)		√	√	√	√	-	-	Write VIN code and reset maintenance mileage	
General type	Haval H9	2020 model (SAT CHINA VI)	TPMS(Tire Pressure Monitoring System)		√	√	√	√	-	-	Write data, network configuration (manual), tire pressure sensor learning	

Diagnostic List GREAT WALL MOTOR_v10.52

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color

Model Menu		System			Function						
					Read ECU information	Read DTC	Erase DTC	Live Data	Actuation Test	Read freeze frame	Remarks (Other functions)
General type	Haval H9	2020 model (SAT CHINA VI)	ALS (Headlamp Leveling System)		√	√	√	√	-	-	Write VIN code
General type	Haval H9	2020 model (SAT CHINA VI)	EPS (Electric Power Steering)		√	√	√	√	-	-	Write VIN code
General type	Haval H9	2020 model (SAT CHINA VI)	GW (Gateway System)		√	√	√	√	-	-	Write VIN code and electronic brake system (EBS) battery ID
General type	Haval H9	2020 model (SAT CHINA VI)	HUT (Navigation System)		√	√	√	√	-	-	Write VIN code
General type	Haval H9	2020 model (SAT CHINA VI)	PAS (Parking Assist System)	APS (Automatic park assist)	√	√	√	√	-	-	-
General type	Haval H9	2020 model (SAT CHINA VI)	PAS (Parking Assist System)	PAS (Parking Assist System)	√	√	√	√	-	-	Write VIN code
General type	Haval H9	2020 model (SAT CHINA VI)	DSM (Driver Seat Memory)		√	√	√	√	√	-	Write VIN code
General type	Haval H9	2020 model (SAT CHINA VI)	AVM (Around View Monitor)		√	√	√	√	-	-	Write VIN code
General type	Haval H9	2020 model (SAT CHINA VI)	T-box (Internet of vehicles host system)		√	√	√	√	-	-	Write VIN code
General type	Haval H9	2020 model (SAT CHINA VI)	SAS (steering wheel angle sensor)		√	√	√	√	-	-	Write VIN code, calibration
General type	Haval H9	2020 model (SAT CHINA VI)	SBWM (Electronic Shifter)		√	√	√	√	-	-	Write VIN code
General type	Haval H9	2020 model (SAT CHINA VI)	ESCL (Electronic Steering Column Lock)		√	√	√	√	-	-	Write VIN code
General type	Haval H9	2020 model (SAT CHINA VI)	Trailer (Trailer Module)		√	√	√	√	√	-	Write VIN code
General type	Haval H9	2020 model (SAT CHINA VI)	SCM (Seat heating massage system)		√	√	√	√	-	-	-
General type	Haval H9	2020 model (SAT CHINA VI)	TOD (4WD system)		√	√	√	√	√	-	Write VIN code
General type	Haval H9	2020 model (SAT CHINA VI)	RHDS (Rear armrest display assembly)		√	√	√	√	√	-	Write VIN code
General type	Haval H9	2020 model (SAT CHINA VI)	IFC (Intelligent Front View Camera)		√	√	√	√	-	-	Write VIN code
General type	Haval H9	2020 model (SAT CHINA VI)	LRSDS (Left Rear Radar Detection System)		√	√	√	√	-	-	Write VIN code
General type	Haval H9	2020 model (SAT CHINA VI)	RRSDS (Right Rear Radar Detection System)		√	√	√	√	-	-	Write VIN code
General type	Haval H9	2020 model (SAT CHINA VI)	ACC (Adaptive Cruise Control)		√	√	√	√	-	-	Write VIN code
General type	Haval H9	2020 model (SAT CHINA VI)	ELD (electronically controlled differential lock)		√	√	√	√	√	-	Write VIN code
General type	Haval H9	2020 model (SAT CHINA VI)	AC (Automatic Air Conditioning System)		√	√	√	√	√	-	Write VIN code
General type	Haval H9	2020 model (SAT CHINA VI)	DDCM (Driver side door system)		√	√	√	√	-	-	Write VIN code
General type	Haval H9	2020 model (SAT CHINA VI)	PDCM (Passenger side door system)		√	√	√	√	-	-	Write VIN code
General type	Haval H9	2020 model (SAT CHINA VI)	GLO-NASS (GLONASS emergency call system)		√	√	√	√	-	-	Write VIN code
General type	Haval M6	2019 model (China VI)	ECM (Engine Control Module)		√	√	√	√	√	-	Write VIN code, variable valve timing (VVT) self-learning, replacement of vehicle particulate filter (GPF), replacement of oxidation catalyst (DOC) (differential pressure sensor), regeneration of gasoline particulate filter (GPF), fuel tank leakage test
General type	Haval M6	2019 model (China VI)	AT (Automatic Transmission)		√	√	√	√	-	-	Write VIN code, close the dev can function, replace the TCU, but do not replace the hydraulic module (HCM), replace the TCU, but do not replace the clutch (PT), replace the TCU, but do not replace the register module (NB), after-sales learning function, close the auto P function, and read after-sales data
General type	Haval M6	2019 model (China VI)	ESP (Electronic Stability Program)		√	√	√	√	√	-	Write VIN code, angle sensor calibration, manual exhaust, caliper test
General type	Haval M6	2019 model (China VI)	SRS (Supplemental Restrgint System)		√	√	√	√	-	-	Write VIN code, calibration
General type	Haval M6	2019 model (China VI)	BCM (Body Control Module)		√	√	√	√	√	-	Write VIN code
General type	Haval M6	2019 model (China VI)	ICM/IP (Instrument panel system)		√	√	√	√	-	-	Write VIN code, total mileage reset, manual reset
General type	Haval M6	2019 model (China VI)	AC (Automatic Air Conditioning System)		√	√	√	√	√	-	Write VIN code
General type	Haval M6	2019 model (China VI)	GW (Gateway)		√	√	√	√	-	-	Write VIN code

Diagnostic List GREAT WALL MOTOR_v10.52

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color

Model Menu		System				Function						Remarks (Other functions)
						Read ECU information	Read DTC	Erase DTC	Live Data	Actuation Test	Read freeze frame	
General type	Haval M6	2019 model (China VI)	PEPS (Passive Entry Passive Start system)		√	√	√	√	√	-	-	Write VIN code, after sales learning
General type	Haval M6	2019 model (China VI)	PAS (Parking Assist System)		√	√	√	√	-	-	-	Write VIN code
General type	Haval M6	2019 model (China VI)	CD (entertainment system)		√	√	√	√	-	-	-	Write VIN code
General type	Haval F7	2020 model	ECM (Engine Control Module)		√	√	√	√	√	-	-	Write VIN code, write network configuration information (31 characters), replace vehicle particulate filter (GPF), replace differential pressure sensor, replace ECU (electronic control unit), variable valve timing (VVT) self-learning, write configuration, read configuration, regeneration of gasoline particulate filter (GPF), fuel tank leakage test, OBD function
General type	Haval F7	2020 model	AT (Automatic Transmission)		√	√	√	√	-	-	-	Write VIN code, close the dev can function, replace the TCU, but do not replace the hydraulic module (HCM), replace the TCU, but do not replace the clutch (PT), replace the TCU, but do not replace the register module (NB), after-sales learning function, close the auto P function, and read after-sales data
General type	Haval F7	2020 model	ESP (Electronic Stability Program)		√	√	√	√	√	-	-	Write VIN code, manual exhaust
General type	Haval F7	2020 model	SRS (Supplemental Restrgint System)		√	√	√	√	-	-	-	Write VIN code, yaw angle calibration
General type	Haval F7	2020 model	BCM (Body Control Module)		√	√	√	√	√	-	-	Write VIN code
General type	Haval F7	2020 model	ICM/IP (Instrument panel system)	IP (Instrument system) (Bosch)	√	√	√	√	√	-	-	Write maintenance information manually
General type	Haval F7	2020 model	ICM/IP (Instrument panel system)	IP (Instrument system) (Continent)	√	√	√	√	√	-	-	Write VIN code, write the network configuration information, reset the maintenance mileage, reset the total mileage, and reset it manually
General type	Haval F7	2020 model	ICM/IP (Instrument panel system)	IP (Instrument system) (Marielli)	√	√	√	√	√	-	-	Write VIN code, service mileage reset
General type	Haval F7	2020 model	TPMS (Tire pressure monitoring system)		√	√	√	√	-	-	-	Write VIN code, tire pressure sensor learning, ABS delay writing
General type	Haval F7	2020 model	SAS (steering wheel angle sensor)		√	√	√	√	-	-	-	Write VIN code, SAS steering angle calibration
General type	Haval F7	2020 model	EPS (Electric Power Steering)		√	√	√	√	-	-	-	Write VIN code, corner calibration
General type	Haval F7	2020 model	SBWM (Electronic Shifter)	SBWM (Electronic Shifter) (ZF)	√	√	√	√	-	-	-	Write VIN code
General type	Haval F7	2020 model	SBWM (Electronic Shifter)	SBWM (Electronic Shifter) (NINGBO GAOFA)	√	√	√	√	√	-	-	Write VIN code
General type	Haval F7	2020 model	GW (Gateway System)		√	√	√	√	-	-	-	Write VIN code, electronic brake system (EBS) battery ID swipe
General type	Haval F7	2020 model	AC (Automatic Air Conditioning System)	AC (air conditioning control system) (Belhella)	√	√	√	√	√	-	-	Write VIN code
General type	Haval F7	2020 model	AC (Automatic Air Conditioning System)	AC (air conditioning control system) (FENG TIAN)	√	√	√	√	√	-	-	Write VIN code
General type	Haval F7	2020 model	HUT (Navigation System)		√	√	√	√	√	-	-	Write VIN code
General type	Haval F7	2020 model	RVC (Rear View Camera)		√	√	√	√	-	-	-	Write VIN code
General type	Haval F7	2020 model	AVM (Around View Monitor)	AVM (Around View Monitor) (standard definition)	√	√	√	√	-	-	-	Write VIN code
General type	Haval F7	2020 model	AVM (Around View Monitor)	AVM (Around View Monitor) (HD)	√	√	√	√	-	-	-	Write VIN code, After sales camera configuration, after-sales calibration
General type	Haval F7	2020 model	ACC (Adaptive Cruise Control)		√	√	√	√	-	-	-	Write VIN code
General type	Haval F7	2020 model	RSDS-L (left radar detection system)		√	√	√	√	-	-	-	Write VIN code
General type	Haval F7	2020 model	RSDS-R (right radar detection system)		√	√	√	√	-	-	-	Write VIN code
General type	Haval F7	2020 model	IFC (Intelligent Front View Camera)		√	√	√	√	-	-	-	Write VIN code
General type	Haval F7	2020 model	PAS (Parking Assist System)	PAS (Parking Assist System) (TONGZHI)	√	√	√	√	-	-	-	Write VIN code, Network configuration (manual)
General type	Haval F7	2020 model	PAS (Parking Assist System)	APS (Automatic park assist)	√	√	√	√	-	-	-	-
General type	Haval F7	2020 model	SCM (Seat heating massage system)		√	√	√	√	-	-	-	Write VIN code
General type	Haval F7	2020 model	NEXTRAC (Intelligent FWD)		√	√	√	√	√	-	-	-
General type	Haval F7	2020 model	PEPS (Passive Entry Passive Start system)		√	√	√	√	-	-	-	Write VIN code, after sales learning

Diagnostic List GREAT WALL MOTOR_v10.52

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color

Model Menu		System				Function					
						Read ECU information	Read DTC	Erase DTC	Live Data	Actuation Test	Read freeze frame
General type	Haval F7	2020 model	T-box(Internet of vehicles host system)	T-BOX(Vehicle networking host system) (Bosch)	√	√	√	√	-	-	Write VIN code
General type	Haval F7	2020 model	T-box(Internet of vehicles host system)	T-BOX(Vehicle networking host system) (VALEO)	√	√	√	√	-	-	Write VIN code
General type	Haval F7	2020 model	GLO-NASS (GLONASS emergency call system)		√	√	√	√	-	-	Write VIN code
General type	Haval F7	2020 model	CVVL(Continuously variable valve lift)		√	√	√	-	-	-	Write VIN code
General type	Haval F7X		ECM(Engine Control Module)	ECM(Engine system4C20NT)	√	√	√	√	√	-	Write VIN code, IUPR function
General type	Haval F7X		ECM(Engine Control Module)	ECM(Engine system4B15)	√	√	√	√	√	-	Write VIN code, variable valve timing (VVT) self-learning
General type	Haval F7X		ECM(Engine Control Module)	Engine system(UAES GDI CHINA VI(4B15A+4C20B))	√	√	√	√	√	-	Write VIN code, write network configuration information (31 characters), replace vehicle particulate filter (GPF), replace differential pressure sensor, replace ECU (electronic control unit), variable valve timing (VVT) self-learning, write configuration, read configuration, regeneration of gasoline particulate filter (GPF), fuel tank leakage test, OBD function
General type	Haval F7X		AT(Automatic Transmission)		√	√	√	√	-	-	Write VIN code, turn off dev can function, after-sales learning function, read and write function, after-sales data reading, turn off auto P function
General type	Haval F7X		ESP(Electronic Stability Program)		√	√	√	√	√	-	Write VIN code, manual exhaust
General type	Haval F7X		SRS(Supplemental Restrgint System)		√	√	√	√	-	-	Write VIN code, yaw angle calibration
General type	Haval F7X		BCM(Body Control Module)		√	√	√	√	√	-	Write VIN code
General type	Haval F7X		ICM/IP(Instrument panel system)		√	√	√	√	-	-	Write VIN code, write network configuration information, repair and maintenance settings, and manually reset to zero
General type	Haval F7X		TPMS(Tire Pressure Monitoring System)		√	√	√	√	-	-	Write VIN code, tire pressure sensor learning, ABS delay writing
General type	Haval F7X		PEPS(Passive Entry Passive Start system)		√	√	√	√	-	-	Write VIN code, after sales learning
General type	Haval F7X		AC(Automatic Air Conditioning System)	AC(air conditioning control system) (Belhella)	√	√	√	√	√	-	Write VIN code
General type	Haval F7X		AC(Automatic Air Conditioning System)	AC(air conditioning control system) (FENG TIAN)	√	√	√	√	√	-	Write VIN code
General type	Haval F7X		GW(Gateway System)		√	√	√	√	-	-	Write VIN code, EBS (electronic braking system) battery ID flash
General type	Haval F7X		SAS(steering wheel angle sensor)		√	√	√	√	-	-	Write VIN code, SAS steering angle calibration
General type	Haval F7X		CVVL(Continuously variable valve lift)		√	-	-	√	-	-	Write VIN code
General type	Haval F7X		SBWM(Electronic Shifter)	SBWM(Electronic Shifter) (ZF)	√	√	√	√	-	-	Write VIN code
General type	Haval F7X		SBWM(Electronic Shifter)	SBWM(Electronic Shifter) (NINGBO GAOFA)	√	√	√	√	√	-	Write VIN code
General type	Haval F7X		NEXTRAC(Intelligent FWD)		√	√	√	√	√	-	-
General type	Haval F7X		EPS(Electric Power Steering)		√	√	√	√	-	-	Write VIN code, angle calibration
General type	Haval F7X		RVC(Rear View Camera)		√	√	√	√	-	-	Write VIN code
General type	Haval F7X		AVM(Around View Monitor)		√	√	√	√	-	-	Write VIN code, after sales camera configuration, after-sales calibration
General type	Haval F7X		PAS(Parking Assist System)	PAS(Parking Assist System)	√	√	√	√	-	-	Write VIN code
General type	Haval F7X		PAS(Parking Assist System)	APS(Automatic park assist)	√	√	√	√	-	-	-
General type	Haval F7X		ACC(Adaptive Cruise Control)		√	√	√	√	-	-	Write VIN code
General type	Haval F7X		RSDS_L(left radar detection system)		√	√	√	√	-	-	Write VIN code
General type	Haval F7X		RSDS_R(Right radar detection system)		√	√	√	√	-	-	Write VIN code
General type	Haval F7X		IFC(Intelligent Front View Camera)		√	√	√	√	-	-	Write VIN code, write network configuration information, after-sales camera configuration, after-sales calibration
General type	Haval F7X		HUT(Navigation System)		√	√	√	√	-	-	Write VIN code
General type	Haval F7X		SCM(Seat heating massage system)		√	√	√	√	-	-	Write VIN code
General type	Haval F7X		ESCL(Electronic Steering Column Lock)		√	√	√	√	-	-	Write VIN code

Diagnostic List GREAT WALL MOTOR_v10.52

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color

Model Menu		System				Function						Remarks (Other functions)
						Read ECU information	Read DTC	Erase DTC	Live Data	Actuation Test	Read freeze frame	
General type	Haval F7X		T-box(Internet of vehicles host system)		√	√	√	√	-	-	Write VIN code, write network configuration information (17 characters), write network configuration information (31 characters), single ECU configuration word, LED brightness, keyless entry and start system (peps) learning results, LED brightness multiple	
General type	Haval F7X		GLO-NASS (GLONASS emergency call system)	GLO-NASS (GLONASS emergency call system 1)	√	√	√	√	-	-	-	
General type	Haval F7X		GLO-NASS (GLONASS emergency call system)	GLO-NASS (GLONASS emergency call system 2)	√	√	√	√	-	-	Write VIN code	
General type	VV5	2020 model	ECM(Engine Control Module)		√	√	√	√	√	-	Write VIN code, write network configuration information (31 characters), replace vehicle particulate filter (GPF), replace differential pressure sensor, replace ECU (electronic control unit), variable valve timing (VVT) self-learning, write configuration, read configuration, regeneration of gasoline particulate filter (GPF), fuel tank leakage test, OBD function	
General type	VV5	2020 model	AT(Automatic Transmission)		√	√	√	√	-	-	Write VIN code, turn off dev can function, after-sales learning function, read and write function, after-sales data reading, turn off auto P function	
General type	VV5	2020 model	ESP(Electronic Stability Program)		√	√	√	√	√	-	Write VIN code, write configuration, read configuration, yaw rate sensor calibration, manual exhaust, caliper test	
General type	VV5	2020 model	SRS(Supplemental Restrgint System)		√	√	√	√	-	-	Write VIN code, write network configuration information, write circuit configuration word, yaw angle calibration	
General type	VV5	2020 model	BCM(Body Control Module)		√	√	√	√	√	-	Write VIN code, write configuration, final calibration parameter adjustment of read-write fatigue driving detection (DDD), read-write system configuration, self-learning of electric tailgate (PLG)	
General type	VV5	2020 model	ICM/IP(Instrument panel system)	IP(full color instrument system)	√	√	√	√	√	-	Write maintenance information manually	
General type	VV5	2020 model	ICM/IP(Instrument panel system)	IP(non full color instrument system)	√	√	√	√	√	-	Write VIN code, write the network configuration information, reset the maintenance mileage, reset the total mileage, and reset it manually	
General type	VV5	2020 model	TPMS(Tire pressure monitoring system)		√	√	√	√	-	-	Write data, network configuration (manual), tire pressure sensor learning	
General type	VV5	2020 model	AC(Automatic Air Conditioning System)		√	√	√	√	√	-	Write VIN code, network configuration (manual)	
General type	VV5	2020 model	DVR(Digital Video Recorder)		√	√	√	√	-	-	Write VIN code	
General type	VV5	2020 model	AMP(Power amplifier system)		√	√	√	-	-	-	-	
General type	VV5	2020 model	HUT(Navigation System)		√	√	√	√	-	-	Write VIN code	
General type	VV5	2020 model	NEXTRAC(Intelligent FWD)		√	√	√	√	√	-	Write VIN code	
General type	VV5	2020 model	T-box(Internet of vehicles host system)		√	√	√	√	-	-	Write VIN code	
General type	VV5	2020 model	DDCM(driver side door module)		√	√	√	√	-	-	Write VIN code, network configuration (manual)	
General type	VV5	2020 model	PDCM(Front driver side door system)		√	√	√	√	-	-	Write VIN code, network configuration (manual)	
General type	VV5	2020 model	DSM(Driver Seat Memory)	DSM(Driver Seat Memory) (KSTAR)	√	√	√	√	√	-	Write VIN code	
General type	VV5	2020 model	DSM(Driver Seat Memory)	DSM(Driver Seat Memory) (OUFEI)	√	√	√	√	√	-	Write VIN code	
General type	VV5	2020 model	PAS(Parking Assist System)	APS(Automatic park assist)	√	√	√	√	-	-	-	
General type	VV5	2020 model	PAS(Parking Assist System)	PAS(Parking Assist System)	√	√	√	√	-	-	Write VIN code	
General type	VV5	2020 model	SVM(Smart inner rearview mirror)		√	√	√	√	-	-	Write VIN code to write network configuration information	
General type	VV5	2020 model	ALCM(Ambient light control module)		√	√	√	√	-	-	Write VIN code	
General type	VV5	2020 model	SCM(Seat heating massage system)		√	√	√	√	-	-	Write VIN code	
General type	VV5	2020 model	PEPS(Passive entry passive start system)		√	√	√	√	-	-	Write VIN code, after sales function	
General type	VV5	2020 model	GW(Gateway System)		√	√	√	√	-	-	Write VIN code, EBS battery ID	
General type	VV5	2020 model	SBWM(Electronic Shifter)		√	√	√	√	-	-	Write VIN code to write network configuration information	
General type	VV5	2020 model	SAS(steering wheel angle sensor)		√	√	√	√	-	-	Write VIN code, calibration	
General type	VV5	2020 model	EPS(Electric Power Steering)		√	√	√	√	√	-	Write VIN code, write configuration, read configuration, PDC initial torque reset	
General type	VV5	2020 model	RSDS-L(left radar detection system)		√	√	√	√	-	-	Write VIN code	

Diagnostic List GREAT WALL MOTOR_v10.52

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color

Model Menu		System			Function						
					Read ECU information	Read DTC	Erase DTC	Live Data	Actuation Test	Read freeze frame	Remarks (Other functions)
General type	VV5	2020 model	RSDS-R(right radar detection system)		√	√	√	√	-	-	Write VIN code
General type	VV5	2020 model	ACC(Adaptive Cruise Control)		√	√	√	√	-	-	Write VIN code
General type	VV5	2020 model	IFC(Intelligent Front View Camera)		√	√	√	√	-	-	Write VIN code, write network configuration information, IFV after-sales calibration, and write calibration date
General type	VV5	2020 model	DMS(Intelligent recognition system)		√	√	√	√	-	-	Write VIN code
General type	VV5	2020 model	HC(Headlamp controller)		√	√	√	√	-	-	Write VIN code
General type	VV6	2020 model	ECM(Engine Control Module)		√	√	√	√	√	-	Write VIN code, write network configuration information (31 characters), replace vehicle particulate filter (GPF), replace differential pressure sensor, replace ECU (electronic control unit), variable valve timing (VVT) self-learning, write configuration, read configuration, regeneration of gasoline particulate filter (GPF), fuel tank leakage test, OBD function
General type	VV6	2020 model	AT(automatic transmission system)		√	√	√	√	-	-	Write VIN code, close the dev can function, replace the TCU, but do not replace the hydraulic module (HCM), replace the TCU, but do not replace the clutch (PT), replace the TCU, but do not replace the register module (NB), after-sales learning function, close the auto P function, and read after-sales data
General type	VV6	2020 model	ESP(Electronic Stability Program)		√	√	√	√	√	-	Write VIN code, write configuration, read configuration, yaw rate sensor calibration, manual exhaust, caliper test
General type	VV6	2020 model	SRS(Supplemental Restrgint System)		√	√	√	√	-	-	Write VIN code, yaw angle calibration
General type	VV6	2020 model	BCM(Body Control Module)		√	√	√	√	√	-	Write VIN code
General type	VV6	2020 model	ICM/IP(Instrument panel system)		√	√	√	√	√	-	Write maintenance information manually
General type	VV6	2020 model	TPMS(Tire pressure monitoring system)		√	√	√	√	-	-	Write data, network configuration (manual), tire pressure sensor learning
General type	VV6	2020 model	AC(air conditioning control system)		√	√	√	√	√	-	Write VIN code
General type	VV6	2020 model	DVR(Digital Video Recorder)		√	√	√	√	-	-	Write VIN code
General type	VV6	2020 model	GW(Gateway System)		√	√	√	√	-	-	Write VIN code, EBS battery ID
General type	VV6	2020 model	HUT(Navigation System)		√	√	√	√	-	-	Write VIN code
General type	VV6	2020 model	PEPS(Passive Entry Passive Start system)		√	√	√	√	-	-	Write VIN code, after sales function
General type	VV6	2020 model	ACC(Adaptive Cruise Control)		√	√	√	√	-	-	Write VIN code
General type	VV6	2020 model	RSDS-L(left radar detection system)		√	√	√	√	-	-	Write VIN code
General type	VV6	2020 model	RSDS-R(right radar detection system)		√	√	√	√	-	-	Write VIN code
General type	VV6	2020 model	IFC(Intelligent front view camera)		√	√	√	√	-	-	Write VIN code, write network configuration information, IFV after-sales calibration, and write calibration date
General type	VV6	2020 model	DDCM(Driver side door system)		√	√	√	√	-	-	Write VIN code
General type	VV6	2020 model	PDCM(Passenger side door system)		√	√	√	√	-	-	Write VIN code
General type	VV6	2020 model	ALCM(Ambient light control module)		√	√	√	√	-	-	Write VIN code
General type	VV6	2020 model	DSM(Driver Seat Memory)	DSM(Driver Seat Memory) (KSTAR)	√	√	√	√	√	-	Write VIN code
General type	VV6	2020 model	DSM(Driver Seat Memory)	DSM(Driver Seat Memory) (OUFEI)	√	√	√	√	√	-	Write VIN code
General type	VV6	2020 model	SCM(Seat heating massage system)		√	√	√	√	-	-	Write VIN code
General type	VV6	2020 model	SVM(Smart inner rearview mirror)		√	√	√	√	-	-	Write VIN code to write network configuration information
General type	VV6	2020 model	PAS(Parking Assist System)	APS(Automatic park assist)	√	√	√	√	-	-	-
General type	VV6	2020 model	PAS(Parking Assist System)	PAS(Parking Assist System)	√	√	√	√	-	-	Write VIN code
General type	VV6	2020 model	DMS(Intelligent recognition system)		√	√	√	√	-	-	Write VIN code
General type	VV6	2020 model	CVVL(Continuously variable valve lift)		√	-	-	√	-	-	Write VIN code, network configuration (manual)

Diagnostic List GREAT WALL MOTOR_v10.52

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color

Model Menu		System			Function						
					Read ECU information	Read DTC	Erase DTC	Live Data	Actuation Test	Read freeze frame	Remarks (Other functions)
General type	VV6	2020 model	SBWM(Electronic Shifter)		√	√	√	√	-	-	Write VIN code to write network configuration information
General type	VV6	2020 model	EPS(Electric Power Steering)		√	√	√	√	√	-	Write VIN code, write configuration, read configuration, PDC initial torque reset
General type	VV6	2020 model	SAS(steering wheel angle sensor)		√	√	√	√	-	-	Write VIN code, calibration
General type	VV6	2020 model	NEXTRAC(Intelligent FWD)		√	√	√	√	√	-	Write VIN code
General type	VV6	2020 model	HC(Headlamp controller)		√	√	√	√	-	-	Write VIN code
General type	VV6	2020 model	T-box(Internet of vehicles host system)		√	√	√	√	-	-	Write VIN code
General type	VV6	2020 model	AMP(Power amplifier system)		√	√	√	√	-	-	-
General type	VV7	2020 model	ECM(Engine Control Module)		√	√	√	√	-	-	Write VIN code, write network configuration information (31 characters), replace vehicle particulate filter (GPF), replace differential pressure sensor, replace ECU (electronic control unit), variable valve timing (VVT) self-learning, write configuration, read configuration, regeneration of gasoline particulate filter (GPF), fuel tank leakage test, OBD function
General type	VV7	2020 model	AT(Automatic Transmission)		√	√	√	√	-	-	Write VIN code, turn off dev can function, after-sales learning function, read and write function, after-sales data reading, turn off auto P function
General type	VV7	2020 model	ESP(Electronic Stability Program)		√	√	√	√	√	-	Write VIN code, pedal travel sensor calibration, manual exhaust, caliper test
General type	VV7	2020 model	SRS(Supplemental Restrgint System)		√	√	√	√	-	-	Write VIN code, write network configuration information, write circuit configuration word, yaw angle calibration
General type	VV7	2020 model	BCM(Body Control Module)		√	√	√	√	√	-	Write VIN code, write network configuration information (31 characters), read and write DDD fatigue driving algorithm, final calibration parameter adjustment, body controller configuration information, electronic wiper angle adjustment
General type	VV7	2020 model	ICM/IP(Instrument panel system)		√	√	√	√	-	-	Write VIN code, service mileage reset, total mileage reset
General type	VV7	2020 model	TPMS(Tire Pressure Monitoring System)		√	√	√	√	-	-	Write VIN code, write network configuration information, tire pressure sensor learning, ABS delay writing
General type	VV7	2020 model	GW(Gateway System)		√	√	√	√	-	-	Write VIN code
General type	VV7	2020 model	EPS(Electric Power Steering)		√	√	√	√	-	-	Write VIN code, PDC initial torque reset
General type	VV7	2020 model	ALS (Headlamp Leveling System)		√	√	√	√	-	-	Write VIN code
General type	VV7	2020 model	PAS(Parking Assist System)	APS (Automatic park assist)	√	√	√	√	-	-	-
General type	VV7	2020 model	PAS(Parking Assist System)	PAS(Parking Assist System)	√	√	√	√	-	-	Write VIN code
General type	VV7	2020 model	SVM(Smart inner rearview mirror)		√	√	√	√	-	-	Write VIN code
General type	VV7	2020 model	AC(Automatic Air Conditioning System)		√	√	√	√	√	-	Write VIN code to write network configuration information
General type	VV7	2020 model	IFC(Intelligent Front View Camera)		√	√	√	√	-	-	Write VIN code
General type	VV7	2020 model	RSDS-L(left radar detection system)		√	√	√	√	-	-	Write VIN code
General type	VV7	2020 model	RSDS-R(right radar detection system)		√	√	√	√	-	-	Write VIN code
General type	VV7	2020 model	HUT(Navigation System)		√	√	√	√	-	-	Write VIN code
General type	VV7	2020 model	ALCM(Ambient light control module)		√	√	√	√	-	-	Write VIN code
General type	VV7	2020 model	DVR(Digital Video Recorder)		√	√	√	√	-	-	Write VIN code
General type	VV7	2020 model	DMS(Intelligent recognition system)		√	√	√	√	-	-	Write VIN code
General type	VV7	2020 model	AMP(Power amplifier system)		√	√	√	√	-	-	-
General type	VV7	2020 model	HC(Headlamp controller)		√	√	√	√	-	-	Write VIN code
General type	VV7	2020 model	SAS(steering wheel angle sensor)		√	√	√	√	-	-	Write VIN code, SAS steering angle calibration
General type	VV7	2020 model	SBWM(Electronic Shifter)		√	√	√	√	-	-	Write VIN code to write network configuration information
General type	VV7	2020 model	DDCM(Driver side door system)		√	√	√	√	-	-	Write VIN code to write network configuration information

Diagnostic List GREAT WALL MOTOR_v10.52

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color

Model Menu		System			Function						
					Read ECU information	Read DTC	Erase DTC	Live Data	Actuation Test	Read freeze frame	Remarks (Other functions)
General type	VV7	2020 model	PDCM(Passenger side door system)		√	√	√	√	-	-	Write VIN code to write network configuration information
General type	VV7	2020 model	ACC(Adaptive Cruise Control)		√	√	√	√	-	-	Write VIN code
General type	VV7	2020 model	T-box(Internet of vehicles host system)		√	√	√	√	-	-	Write VIN code
General type	VV7	2020 model	SCM(Seat heating massage system)		√	√	√	√	-	-	Write VIN code
General type	VV7	2020 model	PEPS(Passive Entry Passive Start system)		√	√	√	√	-	-	Write VIN code, after sales learning
General type	VV7	2020 model	DSM(Driver Seat Memory)		√	√	√	√	√	-	Write VIN code to write network configuration information
General type	VV7-GT		ECM(Engine Control Module)		√	√	√	√	√	-	Write VIN code, write network configuration information (31 characters), replace vehicle particulate filter (GPF), replace differential pressure sensor, replace ECU (electronic control unit), variable valve timing (VVT) self-learning, write configuration, read configuration, regeneration of gasoline particulate filter (GPF), fuel tank leakage test, OBD function
General type	VV7-GT		AT(Automatic Transmission)		√	√	√	√	-	-	Write VIN code, turn off dev can function, after-sales learning function, read and write function, after-sales data reading, turn off auto P function
General type	VV7-GT		ESP(Electronic Stability Program)		√	√	√	√	√	-	Write VIN code, pedal travel sensor calibration, manual exhaust, caliper test
General type	VV7-GT		SRS(Supplemental Restrgint System)		√	√	√	√	-	-	Write VIN code, yaw angle calibration
General type	VV7-GT		BCM(Body Control Module)		√	√	√	√	√	-	Write VIN code, write network configuration information (31 characters), read and write DDD fatigue driving algorithm, final calibration parameter adjustment, body controller configuration information, electronic wiper angle adjustment
General type	VV7-GT		ICM/IP(Instrument panel system)		√	√	√	√	-	-	Write VIN code, service mileage reset, total mileage reset
General type	VV7-GT		TPMS(tire pressure monitoring system)		√	√	√	√	-	-	Write VIN code, write network configuration information, tire pressure sensor learning, ABS delay writing
General type	VV7-GT		DVR(Digital Video Recorder)		√	√	√	√	-	-	Write VIN code
General type	VV7-GT		DMS(Intelligent recognition system)		√	√	√	√	-	-	Write VIN code
General type	VV7-GT		EPS(Electric Power Steering)		√	√	√	√	-	-	Write VIN code, PDC initial torque reset
General type	VV7-GT		GW(Gateway System)		√	√	√	√	-	-	Write VIN code
General type	VV7-GT		ALS (Headlamp Leveling System)		√	√	√	√	-	-	Write VIN code
General type	VV7-GT		PAS (Parking Assist System)	APS(Automatic park assist)	√	√	√	√	-	-	-
General type	VV7-GT		PAS (Parking Assist System)	PAS(Parking Assist System)	√	√	√	√	-	-	Write VIN code
General type	VV7-GT		SVM(Smart inner rearview mirror)		√	√	√	√	-	-	Write VIN code
General type	VV7-GT		AC(air conditioning control system)		√	√	√	√	√	-	Write VIN code to write network configuration information
General type	VV7-GT		IFC(Intelligent Front View Camera)		√	√	√	√	-	-	Write VIN code
General type	VV7-GT		RSDS-L(left radar detection system)		√	√	√	√	-	-	Write VIN code
General type	VV7-GT		RSDS-R(right radar detection system)		√	√	√	√	-	-	Write VIN code
General type	VV7-GT		HUT (Navigation System)		√	√	√	√	-	-	Write VIN code
General type	VV7-GT		HC(Headlamp controller)		√	√	√	√	-	-	Write VIN code
General type	VV7-GT		DDCM(Driver side door system)		√	√	√	√	-	-	Write VIN code to write network configuration information
General type	VV7-GT		PDCM(Passenger side door system)		√	√	√	√	-	-	Write VIN code to write network configuration information
General type	VV7-GT		ALCM(Ambient light control module)		√	√	√	√	√	-	Write VIN code
General type	VV7-GT		SAS(steering wheel angle sensor)		√	√	√	√	-	-	Write VIN code, SAS steering angle calibration
General type	VV7-GT		SBWM(Electronic Shifter)		√	√	√	√	-	-	Write VIN code to write network configuration information
General type	VV7-GT		ACC(Adaptive Cruise Control)		√	√	√	√	-	-	Write VIN code

Diagnostic List GREAT WALL MOTOR_v10.52

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color

Model Menu		System			Function						
					Read ECU information	Read DTC	Erase DTC	Live Data	Actuation Test	Read freeze frame	Remarks (Other functions)
General type	VV7-GT		DSM(Driver Seat Memory)		√	√	√	√	√	-	Write VIN code to write network configuration information
General type	VV7-GT		T-box(Internet of vehicles host system)		√	√	√	√	-	-	Write VIN code
General type	VV7-GT		SCM(Seat heating massage system)		√	√	√	√	-	-	Write VIN code
General type	VV7-GT		PEPS(Passive Entry Passive Start system)		√	√	√	√	-	-	Write VIN code, after sales learning
General type	VV7-GT		RHDS(Rear armrest display assembly)		√	√	√	√	√	-	Write VIN code to write network configuration information
General type	VV7-GT		AMP(Power amplifier system)		√	√	√	√	-	-	-
General type	VV7-PHEV		ECM(Engine Control Module)		√	√	√	√	√	-	Write VIN code, write network configuration information (31 characters), replace vehicle particulate filter (GPF), replace differential pressure sensor, replace ECU (electronic control unit), variable valve timing (VVT) self-learning, write configuration, read configuration, regeneration of gasoline particulate filter (GPF), fuel tank leakage test, OBD function
General type	VV7-PHEV		VCU(Vehicle controller)		√	√	√	√	√	-	Write VIN code
General type	VV7-PHEV		AT(Automatic Transmission)		√	√	√	√	-	-	Write VIN code, turn off dev can function, after-sales learning function, read and write function, after-sales data reading, turn off auto P function
General type	VV7-PHEV		ESP(Electronic Stability Program)		√	√	√	√	√	-	Write VIN code, pedal travel sensor calibration, manual exhaust, caliper test
General type	VV7-PHEV		SRS(Supplemental Restrgint System)		√	√	√	√	-	-	Write VIN code, yaw angle calibration
General type	VV7-PHEV		BCM(Body Control Module)		√	√	√	√	√	-	Write VIN code
General type	VV7-PHEV		ICM/IP(Instrument panel system)		√	√	√	√	-	-	Write VIN code, service mileage reset, total mileage reset
General type	VV7-PHEV		TPMS(Tire pressure monitoring system)		√	√	√	√	-	-	Write VIN code, write network configuration information, tire pressure sensor learning, ABS delay writing
General type	VV7-PHEV		ACU(Electric bridge shift controller)		√	√	√	√	-	√	Write VIN code
General type	VV7-PHEV		AC(air conditioning control system)		√	√	√	√	√	-	Write VIN code
General type	VV7-PHEV		IFC(Intelligent front view camera)		√	√	√	√	-	-	Write VIN code
General type	VV7-PHEV		RSDS-L(left radar detection system)		√	√	√	√	-	-	Write VIN code
General type	VV7-PHEV		RSDS-R(right radar detection system)		√	√	√	√	-	-	Write VIN code
General type	VV7-PHEV		PAS(Parking Assist System)	APS(Automatic park assist)	√	√	√	√	-	-	-
General type	VV7-PHEV		PAS(Parking Assist System)	PAS(Parking Assist System)	√	√	√	√	-	-	Write VIN code
General type	VV7-PHEV		PEPS(Passive Entry Passive Start system)		√	√	√	√	-	-	Write VIN code, after sales learning
General type	VV7-PHEV		VSG(Driving Sound Generator)		√	√	√	√	-	-	Write VIN code
General type	VV7-PHEV		HUT(Navigation System)		√	√	√	√	-	-	Write VIN code
General type	VV7-PHEV		OBC(On board Charger)		√	√	√	√	-	-	Write VIN code
General type	VV7-PHEV		ALS(Headlamp Leveling System)		√	√	√	√	-	-	Write VIN code
General type	VV7-PHEV		EPS(Electric Power Steering)		√	√	√	√	-	-	Write VIN code, PDC initial torque reset
General type	VV7-PHEV		SVM(Smart inner rearview mirror)		√	√	√	√	-	-	Write VIN code
General type	VV7-PHEV		ACC(Adaptive Cruise Control)		√	√	√	√	-	-	Write VIN code
General type	VV7-PHEV		ALCM(Ambient light control module)		√	√	√	√	-	-	Write VIN code
General type	VV7-PHEV		DVR(Digital Video Recorder)		√	√	√	√	-	-	Write VIN code
General type	VV7-PHEV		GW(Gateway System)		√	√	√	√	-	-	Write VIN code
General type	VV7-PHEV		BPH(Battery pack heater assembly)		√	√	√	√	-	-	-
General type	VV7-PHEV		DMS(Intelligent recognition system)		√	√	√	√	-	-	Write VIN code

Diagnostic List GREAT WALL MOTOR_v10.52

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color

Model Menu		System				Function						Remarks (Other functions)
						Read ECU information	Read DTC	Erase DTC	Live Data	Actuation Test	Read freeze frame	
General type	VV7-PHEV		SAS(steering wheel angle sensor)			√	√	√	√	-	-	Write VIN code, SAS steering angle calibration
General type	VV7-PHEV		DDCM(Driver side door system)			√	√	√	√	-	-	Write VIN code to write network configuration information
General type	VV7-PHEV		PDCM(Passenger side door system)			√	√	√	√	-	-	Write VIN code to write network configuration information
General type	VV7-PHEV		SCM(Seat heating massage system)			√	√	√	√	-	-	Write VIN code
General type	VV7-PHEV		SBWM(Electronic Shifter)			√	√	√	√	-	-	Write VIN code to write network configuration information
General type	VV7-PHEV		T-box(Internet of vehicles host system)			√	√	√	√	-	-	Write VIN code
General type	VV7-PHEV		BSG(starting motor control unit)			√	√	√	√	-	-	Write VIN code
General type	VV7-PHEV		MCU(Drive motor control unit)			√	√	√	√	-	-	Write VIN code
General type	VV7-PHEV		DSM(Driver side seat memory module)			√	√	√	√	√	-	Write VIN code to write network configuration information
General type	VV7-PHEV		HC(Headlamp controller)			√	√	√	√	-	-	Write VIN code
General type	VV7-PHEV		AMP(Power amplifier system)			√	√	√	√	-	-	-
General type	VV7-PHEV		IBooster(Intelligent brake booster pump)			√	√	√	√	-	-	Write VIN code
General type	VV7-PHEV		BMS(Battery Management System)			√	√	√	-	√	-	Write VIN code, write configuration
General type	VV7-GT (PHEV)		ECM(Engine Control Module)			√	√	√	√	√	-	Write VIN code, write network configuration information (31 characters), replace vehicle particulate filter (GPF), replace differential pressure sensor, replace ECU (electronic control unit), variable valve timing (VVT) self-learning, write configuration, read configuration, regeneration of gasoline particulate filter (GPF), fuel tank leakage test, OBD function
General type	VV7-GT (PHEV)		VCU(Vehicle controller)			√	√	√	√	√	-	Write VIN code
General type	VV7-GT (PHEV)		AT(Automatic Transmission)			√	√	√	√	-	-	Write VIN code, turn off dev can function, after-sales learning function, read and write function, after-sales data reading, turn off auto P function
General type	VV7-GT (PHEV)		ESP(Electronic Stability Program)			√	√	√	√	√	-	Write VIN code, pedal travel sensor calibration, manual exhaust, caliper test
General type	VV7-GT (PHEV)		SRS(Supplemental Restrgint System)			√	√	√	√	-	-	Write VIN code, yaw angle calibration
General type	VV7-GT (PHEV)		BCM(Body Control Module)			√	√	√	√	√	-	Write VIN code
General type	VV7-GT (PHEV)		ICM/IP(Instrument panel system)			√	√	√	√	-	-	Write VIN code, service mileage reset, total mileage reset
General type	VV7-GT (PHEV)		TPMS(Tire pressure monitoring system)			√	√	√	√	-	-	Write VIN code, write network configuration information, tire pressure sensor learning, ABS delay writing
General type	VV7-GT (PHEV)		ACU(Electric bridge shift controller)			√	√	√	√	-	√	Write VIN code
General type	VV7-GT (PHEV)		AC(air conditioning control system)			√	√	√	√	√	-	Write VIN code
General type	VV7-GT (PHEV)		IFC(Intelligent front view camera)			√	√	√	√	-	-	Write VIN code
General type	VV7-GT (PHEV)		RSDS-L(left radar detection system)			√	√	√	√	-	-	Write VIN code
General type	VV7-GT (PHEV)		RSDS-R(right radar detection system)			√	√	√	√	-	-	Write VIN code
General type	VV7-GT (PHEV)		PAS (Parking Assist System)	APS (Automatic park assist)		√	√	√	√	-	-	-
General type	VV7-GT (PHEV)		PAS (Parking Assist System)	PAS (Parking Assist System)		√	√	√	√	-	-	Write VIN code
General type	VV7-GT (PHEV)		PEPS(Passive Entry Passive Start system)			√	√	√	√	-	-	Write VIN code, after sales learning
General type	VV7-GT (PHEV)		VSG(Driving Sound Generator)			√	√	√	√	-	-	Write VIN code
General type	VV7-GT (PHEV)		HUT (Navigation System)			√	√	√	√	-	-	Write VIN code
General type	VV7-GT (PHEV)		OBC(On board Charger)			√	√	√	√	-	-	Write VIN code
General type	VV7-GT (PHEV)		ALS (Headlamp Leveling System)			√	√	√	√	-	-	Write VIN code
General type	VV7-GT (PHEV)		EPS(Electric Power Steering)			√	√	√	√	-	-	Write VIN code, PDC initial torque reset

Diagnostic List GREAT WALL MOTOR_v10.52

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color

Model Menu		System				Function						
						Read ECU information	Read DTC	Erase DTC	Live Data	Actuation Test	Read freeze frame	Remarks (Other functions)
General type	VV7-GT (PHEV)		SVM(Smart inner rearview mirror)			√	√	√	√	-	-	Write VIN code
General type	VV7-GT (PHEV)		ACC(Adaptive Cruise Control)			√	√	√	√	-	-	Write VIN code
General type	VV7-GT (PHEV)		ALCM(Ambient light control module)			√	√	√	√	√	-	Write VIN code
General type	VV7-GT (PHEV)		DVR(Digital Video Recorder)			√	√	√	√	-	-	Write VIN code
General type	VV7-GT (PHEV)		GW(Gateway System)			√	√	√	√	-	-	Write VIN code
General type	VV7-GT (PHEV)		BPH(Battery pack heater assembly)			√	√	√	√	-	-	-
General type	VV7-GT (PHEV)		DMS(Intelligent recognition system)			√	√	√	√	-	-	Write VIN code
General type	VV7-GT (PHEV)		SAS(steering wheel angle sensor)			√	√	√	√	-	-	Write VIN code, SAS steering angle calibration
General type	VV7-GT (PHEV)		DDCM(Driver side door system)			√	√	√	√	-	-	Write VIN code to write network configuration information
General type	VV7-GT (PHEV)		PDCM(Passenger side door system)			√	√	√	√	-	-	Write VIN code to write network configuration information
General type	VV7-GT (PHEV)		SCM(Seat heating massage system)			√	√	√	√	-	-	Write VIN code
General type	VV7-GT (PHEV)		SBWM(Electronic Shifter)			√	√	√	√	-	-	Write VIN code to write network configuration information
General type	VV7-GT (PHEV)		T-box(Internet of vehicles host system)			√	√	√	√	-	-	Write VIN code
General type	VV7-GT (PHEV)		BSG(starting motor control unit)			√	√	√	√	-	-	Write VIN code
General type	VV7-GT (PHEV)		MCU(Drive motor control unit)			√	√	√	√	-	-	Write VIN code
General type	VV7-GT (PHEV)		DSM(Driver Seat Memory)			√	√	√	√	√	-	Write VIN code to write network configuration information
General type	VV7-GT (PHEV)		HC(Headlamp controller)			√	√	√	√	-	-	Write VIN code
General type	VV7-GT (PHEV)		AMP(Power amplifier system)			√	√	√	√	-	-	-
General type	VV7-GT (PHEV)		RHDS(Rear armrest display assembly)			√	√	√	√	√	-	Write VIN code to write network configuration information
General type	VV7-GT (PHEV)		IBooster(Intelligent brake booster pump)			√	√	√	√	-	-	Write VIN code
General type	VV7-GT (PHEV)		BMS(Battery Management System)			√	√	√	-	√	-	Write VIN code, write configuration
General type	Haval H4			ECM(Engine Control Module)	Engine system(UAES GDI CHINA VI(4B15A+4C20B))	√	√	√	√	√	-	Write VIN code, write network configuration information (31 characters), replace vehicle particulate filter (GPF), replace differential pressure sensor, replace ECU (electronic control unit), variable valve timing (VVT) self-learning, OBD diagnosis function, write configuration, read configuration, gasoline particulate filter (GPF) regeneration, fuel tank leakage test, read relevant data of gasoline particulate filter (GPF) of old ECM
General type	Haval H4			ECM(Engine Control Module)	Engine system(UAES CHINA VI(4G15F))	√	√	√	√	√	-	Write VIN code, variable valve timing (VVT) self-learning, replacement of vehicle particulate filter (GPF), replacement of oxidation catalyst (DOC) (differential pressure sensor), regeneration of gasoline particulate filter (GPF), fuel tank leakage test, write configuration, read configuration, OBD diagnosis function
General type	Haval H4			ESP(Electronic Stability Program)	ESP(Electronic Stability Program)CHINA VI	√	√	√	√	√	-	Write VIN code, network configuration (manual), yaw rate sensor calibration, manual exhaust function, write configuration (34-digit), read configuration (34-digit), write configuration (62-digit), read configuration (62-digit)
General type	Haval H4			SBWM(Electronic shifter)	SBWM(Electronic shifter)(NINGBO GAOFA)	√	√	√	√	√	-	Write VIN code, write configuration
General type	Haval H4			EPS(Electrical Power Steering)	SMART (by reading the version information system, the supplier identification number is gaglc)	√	√	√	√	-	-	Write VIN code, write configuration, write end protection angle (left end and right end), PDC initial value
General type	Haval H4			GW(Gateway System)	GW(Gateway System)(include EBS LIN)	√	√	√	√	-	-	Write VIN code, write fingerprint information, write configuration (34-digit), read configuration (34-digit), write configuration (62-digit), read configuration (62-digit)
General type	Haval H4			PAS(Park Assist System)	PAS(Park Assist System)(VALEO)	√	√	√	√	-	-	Write VIN code, write configuration, read configuration
General type	Haval H4			T-BOX (Vehicle networking host system)	T-BOX (Vehicle networking host system)(4G)	√	√	√	√	-	-	Write VIN code, write network configuration information, LED brightness, T-box test

Diagnostic List GREAT WALL MOTOR_v10.52

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color

Model Menu		System				Function						Remarks (Other functions)
						Read ECU information	Read DTC	Erase DTC	Live Data	Actuation Test	Read freeze frame	
General type	Haval H4			CCVL(continuously variable valve lift)		√	-	-	√	-	-	Write network configuration information, write VIN code, cvvl (continuously variable valve lift) self-learning
General type	Haval H5 Classic Version			IMMO		√	√	-	√	-	-	Anti theft device matching
General type	Haval H6	2018 model	CC6472RM	ECM(Engine Control Module)	Delphi diesel(Delphi 4D20) IMMO	√	√	√	√	√	√	Write VIN code, iupr function, VVT self-learning, write configuration, read configuration
General type	Haval H6	2018 model	CC6472RM	AT(automatic transmission system)	Transmission control unit(7DCT300)	√	√	√	√	-	-	Write VIN code, transmission self-learning, clutch reset, write configuration, read configuration
			CC6472RM	AT(automatic transmission system)	Transmission control systemTCU	√	√	√	√	-	-	Write data, network configuration (manual), self-learning
General type	Haval H6	2018 model	CC6472RM	ESP(Electronic Stability Program)		√	√	√	√	√	-	Steering sensor calibration (ESP only), network configuration (automatic), network configuration (manual), exhaust function, yaw angle sensor calibration (models with hill descent function)
General type	Haval H6	2018 model	CC6472RM	SRS(Supplemental Restrgint System)		√	√	√	√	-	-	Write network configuration information (automatic), network configuration (manual)
General type	Haval H6	2018 model	CC6472RM	BCM(Body Control Module)		√	√	√	√	√	-	Key learning, write VIN code, write system configuration, tire pressure learning (standby)
General type	Haval H6	2018 model	CC6472RM	ICM/IP(Instrument panel system)		√	√	√	√	√	-	Write the vehicle configuration information, reset the maintenance mileage, clear the total mileage and reset it manually
General type	Haval H6	2018 model	CC6472RM	EPB(Electronic Parking Brake)		√	√	√	√	√	-	Replace the brake pad, network configuration (manual), write VIN code, calibrate the slope sensor, and read the deep fault code
General type	Haval H6	2018 model	CC6472RM	AC(automatic air conditioning system)	Air conditioning control system(CHB021)	√	√	√	√	√	-	Network configuration (manual)
General type	Haval H6	2018 model	CC6472RM	AC(automatic air conditioning system)	Air conditioning control system(CHB022)	√	√	√	√	√	-	Network configuration (manual)
General type	Haval H6	2018 model	CC6472RM	PEPS(Passive entry passive start system)		√	√	√	√	√	-	After sales learning (New), write VIN code, network configuration (manual)
General type	Haval H6	2018 model	CC6472RM	SBWM(Electronic shifter)		√	√	√	√	-	-	Write VIN code
General type	Haval H6	2018 model	CC6472RM	PAS(Park Assist System)		√	√	√	√	-	-	Network configuration (manual)
General type	Haval H6	2018 model	CC6472RM	GW(gateway system)		√	√	√	√	-	-	Network configuration (manual), write VIN code
General type	Haval H6	2018 model	CC6472RM	CD (CD host)		√	√	√	√	-	-	Network configuration (manual), write VIN code
General type	Haval H6	2018 model	CC6472RM	ACC(adaptive cruise control)		√	√	√	√	-	-	Write VIN code, write network configuration information (17 characters)
General type	Haval H6	2018 model	CC6472RM	IPC(Intelligent front view camera)		√	√	√	√	-	-	Write data, network configuration (manual)
General type	Haval H6	2018 model	CC6472RM	RSDS_L(left radar detection system)		√	√	√	√	-	-	Write VIN code, network configuration (manual)
General type	Haval H6	2018 model	CC6472RM	RSDS_R(Right radar detection system)		√	√	√	√	-	-	Write VIN code, network configuration (manual)
General type	Haval H6	2018 model	CC6461UM/CC6463UM/CC6464RM	ECM(Engine Control Module)	Engine system(4B15)	√	√	√	√	√	-	Write VIN code, VVT self-learning, network configuration (manual), OBD diagnosis function, write configuration
General type	Haval H6	2018 model	CC6461UM/CC6463UM/CC6464RM	ECM(Engine Control Module)	Engine system(4B13)	√	√	√	√	√	-	Write VIN code, VVT self-learning, network configuration (manual), OBD diagnosis function
General type	Haval H6	2018 model	CC6461UM/CC6463UM/CC6464RM	ECM(Engine Control Module)	Engine system(4C20)	√	√	√	√	√	√	Write VIN code, tooth information learning, network configuration (manual), iupr function
General type	Haval H6	2018 model	CC6461UM/CC6463UM/CC6464RM	ECM(Engine Control Module)	Engine system(UAES GDI CHINA VI (4B15A+4C20B))	√	√	√	√	√	-	Write VIN code, write network configuration information (31 characters), replace vehicle particulate filter (GPF), replace differential pressure sensor, replace ECU (electronic control unit), variable valve timing (VVT) self-learning, OBD diagnosis function, write configuration, read configuration, gasoline particulate filter (GPF) regeneration, fuel tank leakage test, read relevant data of gasoline particulate filter (GPF) of old ECM
General type	Haval H6	2018 model	CC6461UM/CC6463UM/CC6464RM	AT(automatic transmission system)	Transmission control unit(7DCT300)	√	√	√	√	-	-	Write VIN code, transmission self-learning, clutch reset, write configuration, read configuration
General type	Haval H6	2018 model	CC6461UM/CC6463UM/CC6464RM	AT(automatic transmission system)	Transmission control unit(7DCT450)	√	√	√	√	-	-	Write VIN code, write network configuration information, turn off dev can function, replace TCU, but do not replace hydraulic module (HCM), replace TCU, but do not replace clutch (PT), replace TCU, but do not replace register module (NB), after-sales learning function, turn off auto P function, and read after-sales data
General type	Haval H6	2018 model	CC6461UM/CC6463UM/CC6464RM	ESP(Electronic stabilization program)		√	√	√	√	√	-	Write VIN code, network configuration (manual), yaw rate sensor calibration, manual exhaust function, write configuration (34-digit), read configuration (34-digit), write configuration (62-digit), read configuration (62-digit)
General type	Haval H6	2018 model	CC6461UM/CC6463UM/CC6464RM	SRS(Supplemental Restrgint System)		√	√	√	√	-	-	Write VIN code, calibration, network configuration (manual), write circuit configuration word

Diagnostic List GREAT WALL MOTOR_v10.52

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color

Model Menu		System				Function						Remarks (Other functions)
						Read ECU information	Read DTC	Erase DTC	Live Data	Actuation Test	Read freeze frame	
General type	Haval H6	2018 model	CC6461UM/CC6463UM/CC6464RM	BCM(Body Control Module)	√	√	√	√	√	-	Write VIN code, network configuration (manual), reading and writing DDD fatigue driving algorithm, final calibration parameter adjustment, reading and writing system configuration, electric tailgate self-learning (PLG)	
General type	Haval H6	2018 model	CC6461UM/CC6463UM/CC6464RM	ICM/IP(Instrument panel system)	√	√	√	√	√	-	Write VIN code, write network configuration information (17 characters), write network configuration information (31 characters), repair and maintenance settings, and manually reset to zero	
General type	Haval H6	2018 model	CC6461UM/CC6463UM/CC6464RM	ICM/IP(Instrument panel system)	√	√	√	√	√	-	Write VIN code, write network configuration information (17 characters), write network configuration information (31 characters), repair and maintenance settings, and manually reset to zero	
General type	Haval H6	2018 model	CC6461UM/CC6463UM/CC6464RM	TPMS(tire pressure monitoring system)	√	√	√	√	-	-	Write VIN code, ABS delay writing, network configuration (manual), tire pressure sensor learning	
General type	Haval H6	2018 model	CC6461UM/CC6463UM/CC6464RM	AC(air conditioning control module)	√	√	√	√	√	-	Write VIN code, network configuration (manual), self-learning	
General type	Haval H6	2018 model	CC6461UM/CC6463UM/CC6464RM	PEPS(Passive entry passive start system)	√	√	√	√	-	-	Write VIN code, after-sales function, network configuration (manual), write configuration (34-digit), read configuration (34-digit), write configuration (62-digit)	
General type	Haval H6	2018 model	CC6461UM/CC6463UM/CC6464RM	ESCL(electronic steering column lock)	√	√	√	√	-	-	Write VIN code, network configuration (manual)	
General type	Haval H6	2018 model	CC6461UM/CC6463UM/CC6464RM	SBWM(Electronic shifter)	√	√	√	√	-	-	Write VIN code	
General type	Haval H6	2018 model	CC6461UM/CC6463UM/CC6464RM	SBWM(Electronic shifter)	√	√	√	√	√	-	Write VIN code, write category distinguishing code, write configuration (34 digits), write configuration (62 digits)	
General type	Haval H6	2018 model	CC6461UM/CC6463UM/CC6464RM	EPS(Electric power steering)	√	√	√	√	√	-	Write VIN code, PDC initial torque reset, write configuration (34-digit), read configuration (34-digit), write configuration (62-digit)	
General type	Haval H6	2018 model	CC6461UM/CC6463UM/CC6464RM	SAS(Steering Angle Sensor)	√	√	√	√	-	-	Write VIN code, calibration	
General type	Haval H6	2018 model	CC6461UM/CC6463UM/CC6464RM	CVVL(continuously variable valve lift)	√	-	-	√	-	-	Write VIN code, network configuration (manual), cvvl (continuously variable valve lift) self-learning	
General type	Haval H6	2018 model	CC6461UM/CC6463UM/CC6464RM	GW(gateway system)	√	√	√	√	-	-	Write VIN code, network configuration (manual)	
General type	Haval H6	2018 model	CC6461UM/CC6463UM/CC6464RM	GW(gateway system)	√	√	√	√	-	-	Write VIN code, write fingerprint information, write configuration (34-digit), read configuration (34-digit), write configuration (62-digit), read configuration (62-digit)	
General type	Haval H6	2018 model	CC6461UM/CC6463UM/CC6464RM	AVM(Around View Monitor)	√	√	√	√	-	-	Write VIN code, write network configuration information, ECU serial number, offline automatic calibration, write configuration (34-digit), read configuration (34-digit), write configuration (62-digit)	
General type	Haval H6	2018 model	CC6461UM/CC6463UM/CC6464RM	RVC(rear view camera)	√	√	√	√	-	-	Write VIN code, network configuration (manual), write configuration (34-digit), read configuration (34-digit), write configuration (62-digit)	
General type	Haval H6	2018 model	CC6461UM/CC6463UM/CC6464RM	PAS(Park Assist System)	√	√	√	√	-	-	Write VIN code, network configuration (manual)	
General type	Haval H6	2018 model	CC6461UM/CC6463UM/CC6464RM	PAS(Park Assist System)	√	√	√	√	-	-	Write VIN code, network configuration (manual), write configuration (34-digit), read configuration (34-digit), write configuration (62-digit)	
General type	Haval H6	2018 model	CC6461UM/CC6463UM/CC6464RM	PAS(Park Assist System)	√	√	√	√	-	-	Write VIN code, write configuration, read configuration	
General type	Haval H6	2018 model	CC6461UM/CC6463UM/CC6464RM	IFC(Intelligent front view camera)	√	√	√	√	-	-	Write data, network configuration (manual)	
General type	Haval H6	2018 model	CC6461UM/CC6463UM/CC6464RM	SHM(Seat Heating Module)	√	√	√	√	-	-	Write VIN code	
General type	Haval H6	2018 model	CC6461UM/CC6463UM/CC6464RM	RSDS_L(left radar detection system)	√	√	√	√	-	-	Write VIN code, network configuration (manual)	
General type	Haval H6	2018 model	CC6461UM/CC6463UM/CC6464RM	RSDS_R(Right radar detection system)	√	√	√	√	-	-	Write VIN code, network configuration (manual)	
General type	Haval H6	2018 model	CC6461UM/CC6463UM/CC6464RM	T-BOX(Vehicle networking host system)	√	√	√	√	-	-	Write VIN code, network configuration (manual), write configuration (34-digit), read configuration (34-digit), write configuration (62-digit), read configuration (62-digit)	
General type	Haval H6	2018 model	CC6461UM/CC6463UM/CC6464RM	T-BOX(Vehicle networking host system)	√	√	√	√	-	-	Write VIN code, write network configuration information, LED brightness, T-box test	
General type	Haval H6	2018 model	CC6461UM/CC6463UM/CC6464RM	HUT(navigation host system)	√	√	√	√	-	-	Write VIN code, network configuration (manual), write configuration (34-digit), read configuration (34-digit), write configuration (62-digit)	
General type	Haval H6	2018 model	CC6461UM/CC6463UM/CC6464RM	ACC(adaptive cruise control)	√	√	√	√	-	-	Write VIN code, write network configuration information, write configuration (34-digit), read configuration (34-digit), write configuration (62-digit), active calibration	
General type	Haval H6	2018 model	CC6461UM/CC6463UM/CC6464RM	DSM(Driver Seat Memory)	√	√	√	√	√	-	Write VIN code, network configuration (manual)	
General type	Haval H6	2018 model	CC6461UM/CC6463UM/CC6464RM	DDCM(driver side door module)	√	√	√	√	-	-	Write VIN code, network configuration (manual)	
General type	Haval H6	2018 model	CC6461UM/CC6463UM/CC6464RM	PDCM(front passenger side door module)	√	√	√	√	-	-	Write VIN code, network configuration (manual)	
General type	Haval H6	2018 model	CC6461UM/CC6463UM/CC6464RM	GLO-NASS (GLONASS emergency call system)	√	√	√	-	-	-	-	

Diagnostic List GREAT WALL MOTOR_v10.52

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color

Model Menu		System				Function						Remarks (Other functions)
						Read ECU information	Read DTC	Erase DTC	Live Data	Actuation Test	Read freeze frame	
General type	Haval H6	2018 model	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC6465UM	ECM(Engine Control Module)	4C20-MT92Engine system	√	√	√	√	√	√	Tooth information learning, read write VIN code, iupr function, network configuration (manual)
General type	Haval H6	2018 model	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC6465UM	ECM(Engine Control Module)	4D20 Bosch diesel engine system	√	√	√	√	√	√	Write network configuration information (manual), write network configuration information (automatic), EGR self-learning function, read injector code, write injector code (full write), write injector code (separate), compression test, start fault information, injection shutdown test, empty and add air drift compensation value, OBD diagnosis function
General type	Haval H6	2018 model	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC6465UM	ECM(Engine Control Module)	Engine system(4G15B)	√	√	√	√	√	√	Write VIN code, iupr function, VVT self-learning, write configuration, read configuration
General type	Haval H6	2018 model	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC6465UM	ECM(Engine Control Module)	Engine system(4B15)	√	√	√	√	√	-	Write VIN code, OBD diagnosis function, VVT self-learning, network configuration (manual)
General type	Haval H6	2018 model	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC6465UM	ECM(Engine Control Module)	4D20 Delphi EURO V Engine system	√	√	√	√	√	-	Routine control, injector matching, write VIN code, DPF (particle trap), iupr function, write network configuration information (manual), write network configuration information (automatic), EGR emptying self-learning, OBD diagnosis function, emptying and adding air drift compensation value, tooth information learning
General type	Haval H6	2018 model	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC6465UM	ECM(Engine Control Module)	Engine system(UAES GDI CHINA VI (4B15A+4C20B))	√	√	√	√	√	-	Write VIN code, write network configuration information (31 characters), replace vehicle particulate filter (GPF), replace differential pressure sensor, replace ECU (electronic control unit), variable valve timing (VVT) self-learning, OBD diagnosis function, write configuration, read configuration, gasoline particulate filter (GPF) regeneration, fuel tank leakage test, read relevant data of gasoline particulate filter (GPF) of old ECM
General type	Haval H6	2018 model	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC6465UM	ECM(Engine Control Module)	Engine system(UAES CHINA VI (4G15F))	√	√	√	√	√	-	Write VIN code, variable valve timing (VVT) self-learning, replacement of vehicle particulate filter (GPF), replacement of oxidation catalyst (DOC) (differential pressure sensor), regeneration of gasoline particulate filter (GPF), fuel tank leakage test, write configuration, read configuration, OBD diagnosis function
General type	Haval H6	2018 model	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC6465UM	AT(automatic transmission system)	Transmission control system(6DCT)	√	√	√	√	-	-	Write VIN code, self-learning, write network configuration information
General type	Haval H6	2018 model	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC6465UM	AT(automatic transmission system)	Transmission control unit(7DCT300)	√	√	√	√	-	-	Write VIN code, transmission self-learning, clutch reset, write configuration, read configuration
General type	Haval H6	2018 model	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC6465UM	AT(automatic transmission system)	Transmission control unit(7DCT450)	√	√	√	√	-	-	Write VIN code, write network configuration information, turn off dev can function, replace TCU, but do not replace hydraulic module (HCM), replace TCU, but do not replace clutch (PT), replace TCU, but do not replace register module (NB), after-sales learning function, turn off auto P function, and read after-sales data
General type	Haval H6	2018 model	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC6465UM	AT(automatic transmission system)	Transmission control system 6AT	√	√	√	√	√	-	Write configuration
General type	Haval H6	2018 model	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC6465UM	ESP(Electronic Stability Program)	ESP(Electronic Stability Program)CHINA V	√	√	√	√	√	-	Yaw rate sensor calibration, network configuration (manual), manual exhaust function
General type	Haval H6	2018 model	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC6465UM	ESP(Electronic Stability Program)	ESP(Electronic Stability Program)CHINA VI	√	√	√	√	√	-	Write network configuration information, write VIN code, manual exhaust
General type	Haval H6	2018 model	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC6465UM	SRS(Supplemental Restrgint System)	Airbag module (ABM) (Ottoliv CHINA V)	√	√	√	√	√	-	Write VIN code, network configuration (manual)
General type	Haval H6	2018 model	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC6465UM	SRS(Supplemental Restrgint System)	Airbag module (ABM) (Ottoliv CHINA VI)	√	√	√	√	√	-	Write VIN code, calibration, network configuration (manual), write circuit configuration word
General type	Haval H6	2018 model	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC6465UM	BCM(Body Control Module)		√	√	√	√	√	-	Write system configuration, tire pressure sensor learning, read write VIN code, network configuration (manual), write configuration (62-digit), read configuration (20-digit), write configuration (20-digit)
General type	Haval H6	2018 model	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC6465UM	ICM/IP(Instrument panel system)	IP(Instrument system)CHINA V	√	√	√	-	√	-	Read and write the default value of maintenance mileage, read and write the default value of maintenance mileage (China VI), clear the total mileage, reset it manually, reset the date, and configure the network (manually)
General type	Haval H6	2018 model	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC6465UM	ICM/IP(Instrument panel system)	IP(Instrument system)CHINA VI	√	√	√	√	√	-	Write VIN code, write the network configuration information, reset the maintenance mileage, reset the total mileage, and reset it manually
General type	Haval H6	2018 model	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC6465UM	EPB(Electronic Parking Brake)		√	√	√	√	√	-	Replace the brake pad, calibrate the slope sensor, configure the network (manually), and read the deep fault code
General type	Haval H6	2018 model	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC6465UM	Air conditioning control system(AC)		√	√	√	-	√	-	Network configuration (manual)
General type	Haval H6	2018 model	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC6465UM	PEPS(Passive entry passive start system)	PEPS(Haila)	√	√	√	√	√	-	Network configuration (manual)
General type	Haval H6	2018 model	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC6465UM	PEPS(Passive entry passive start system)	PEPS(KSTAR BUTTON)	√	√	√	√	-	-	Write network configuration information, write VIN code, write configuration (62-digit), read configuration (62-digit)
General type	Haval H6	2018 model	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC6465UM	EPS(Electric Power Steering)	EPS(Electric Power Steering) (ZF)	√	√	√	√	-	-	Steering sensor calibration, write VIN code, network configuration (manual)
General type	Haval H6	2018 model	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC6465UM	EPS(Electric Power Steering)	EPS(Electric Power Steering) (Bosch)	√	√	√	√	-	-	Write VIN code, angle calibration, limit learning, data elimination, write configuration, read configuration
General type	Haval H6	2018 model	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC6465UM	CVVL(continuously variable valve lift)		√	-	-	√	-	-	Write VIN code, network configuration (manual), cvvl (continuously variable valve lift) self-learning
General type	Haval H6	2018 model	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC6465UM	SBWM(Electronic shifter)	SBWM(Electronic shifter) (ZF)	√	√	√	√	-	-	Write VIN code

Diagnostic List GREAT WALL MOTOR_v10.52

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color

Model Menu		System				Function						Remarks (Other functions)
						Read ECU information	Read DTC	Erase DTC	Live Data	Actuation Test	Read freeze frame	
General type	Haval H6	2018 model	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC6465UM	SBWM(Electronic shifter)	SBWM(Electronic shifter) (CHONGQING RUIGE)	√	√	√	√	√	-	Write VIN code, write category distinguishing code, write configuration (34 digits), write configuration (62 digits)
General type	Haval H6	2018 model	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC6465UM	AFS (automatic headlamp leveling system)		√	√	√	√	-	-	Horizontal zero calibration, network configuration (manual)
General type	Haval H6	2018 model	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC6465UM	AVM(Around View Monitor)		√	√	√	√	-	-	Write VIN code, ECU serial number, network configuration (manual), write configuration
General type	Haval H6	2018 model	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC6465UM	RVC(rear view camera system)		√	√	√	√	-	-	Write VIN code, network configuration (manual), write configuration
General type	Haval H6	2018 model	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC6465UM	PAS(Park Assist System)	APA(semi automatic parking aid)	√	√	√	√	-	-	Network configuration (manual)
General type	Haval H6	2018 model	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC6465UM	PAS(Park Assist System)	PAS(Park Assist System)	√	√	√	√	-	-	Network configuration (manual), write configuration (62-digit), write configuration (20-digit), read configuration (20-digit)
General type	Haval H6	2018 model	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC6465UM	NEXTRAC(smart precursor)		√	√	√	√	-	-	Network configuration (manual)
General type	Haval H6	2018 model	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC6465UM	CD (entertainment system)	CD(Delphi CD)	√	√	√	√	-	-	Network configuration (manual)
General type	Haval H6	2018 model	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC6465UM	CD (entertainment system)	HUAYANG CD (CD host system)	√	√	√	√	√	-	Write VIN code, write configuration (20-digit), read configuration (20-digit), write configuration (62-digit)
General type	Haval H6	2018 model	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC6465UM	CD (entertainment system)	CD/MP5(CD host)	√	√	√	√	-	-	Write VIN code, network configuration (manual)
General type	Haval H6	2018 model	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC6465UM	ESCL(electronic steering column lock)	ESCL(electronic steering column lock) (Haila)	√	√	√	√	-	-	Network configuration (manual)
General type	Haval H6	2018 model	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC6465UM	ESCL(electronic steering column lock)	ESCL(electronic steering column lock) (KSTAR)	√	√	√	√	-	-	Write network configuration information, write VIN code
General type	Haval H6	2018 model	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC6465UM	GW(Gateway System)		√	√	√	√	-	-	Write VIN code, network configuration (manual), write configuration (62-digit), read configuration (20-digit), write configuration (20-digit)
General type	Haval H6	2018 model	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC6465UM	SAS(Steering Angle Sensor)		√	√	√	√	-	-	Calibration, write VIN code, network configuration (manual)
General type	Haval H6	2018 model	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC6465UM	SCM(seat ventilation and heating module)		√	√	√	√	-	-	Write VIN code
General type	Haval H6	2018 model	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC6465UM	CMS(CAN signal conversion system)		√	√	√	√	√	-	CMS model learning, network configuration (manual)
General type	Haval H6	2018 model	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC6465UM	HUT(navigation host system)		√	√	√	√	√	-	Write VIN code, write configuration, read configuration
General type	Haval H6	2018 model	CC6460UM/CC6450UM/CC6463UM/CC6461UM/CC6465UM	T-BOX (Vehicle networking host system)		√	√	√	√	-	-	Write network configuration information, write VIN code
General type	Haval H7	2017-2019(Basic module CHINA V)	ECM(Engine Control Module)	Engine system(UAES GDI CHINA VI (4B15A+4C20B))		√	√	√	√	√	-	Write VIN code, write network configuration information (31 characters), replace vehicle particulate filter (GPF), replace differential pressure sensor, replace ECU (electronic control unit), variable valve timing (VVT) self-learning, OBD diagnosis function, write configuration, read configuration, gasoline particulate filter (GPF) regeneration, fuel tank leakage test, read relevant data of gasoline particulate filter (GPF) of old ECM
General type	Haval H7	2017-2019(Basic module CHINA V)	AT(automatic transmission system)	Transmission control unit(7DCT450)		√	√	√	√	-	-	Write VIN code, write network configuration information, turn off dev can function, replace TCU, but do not replace hydraulic module (HCM), replace TCU, but do not replace clutch (PT), replace TCU, but do not replace register module (NB), after-sales learning function, turn off auto P function, and read after-sales data
General type	Haval H8	2015-2016 model(6AT)	IFV(Intelligent Front View Control Module)			√	√	√	√	-	-	Write calibration date
General type	Haval M6	2017-2019(Basic module CHINA V)	ECM(Engine Control Module)	Engine system(4G15B)		√	√	√	√	√	√	Write VIN code, iupr function, VVT self-learning, write configuration, read configuration
General type	Haval F5		ECM(Engine Control Module)	Engine system(UAES CHINA VI (4G15F))		√	√	√	√	√	-	Write VIN code, variable valve timing (VVT) self-learning, replacement of vehicle particulate filter (GPF), replacement of oxidation catalyst (DOC) (differential pressure sensor), regeneration of gasoline particulate filter (GPF), fuel tank leakage test, write configuration, read configuration, OBD diagnosis function
General type	Haval F5		HUT(Navigation System)	HUT(navigation host system) (YUANFENG)		√	√	√	√	-	-	Write VIN code, write configuration
General type	Haval F5		PAS(Parking assist system)	PAS(Parking Assist System) (VALEO)		√	√	√	√	-	-	Read / write configuration
General type	VV5	2018-2019 model(updated module CHINA V)	TBOX(Internet of vehicles host)			√	√	√	√	-	-	Write VIN code, network configuration (manual), write configuration (34-digit), read configuration (34-digit), write configuration (62-digit), read configuration (62-digit)
General type	Wingle 5	2020 model	DCU(urea injection control unit)			√	√	√	√	-	-	-
General type	Great Wall POER		TPC(anti theft controller)			√	√	√	√	-	-	-
General type	Great Wall POER		GLONASS(GLONASS emergency call system)			-	√	√	-	-	-	-

Diagnostic List GREAT WALL MOTOR_v10.52

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color

Model Menu		System			Function						
					Read ECU information	Read DTC	Erase DTC	Live Data	Actuation Test	Read freeze frame	Remarks (Other functions)
General type	Great Wall POER		Trailer(Trailer Module)		√	√	√	√	√	-	-
General type	Great Wall POER		WPC(wireless charging assembly)		√	√	√	√	-	-	-
General type	Great Wall POER		DVR(Digital Video Recorder)		√	√	√	√	-	-	-
General type	Great Wall POER		CP (electric sidestep module)		√	√	√	-	-	-	-
General type	Great Wall POER		MCU(Drive motor control unit)		√	√	√	√	-	-	-
General type	Great Wall POER		EVCC(electric vehicle communication controller)		√	√	√	√	-	-	-
General type	Great Wall POER		BMS(Battery Management System)		√	√	√	√	√	-	-
General type	Haval H2	2019 model(China VI)	EPS(Electric Power Steering)	EPS(YUBEI Electric Power Steering)	√	√	√	√	-	-	-
General type	Haval H4		ICM/IP(Instrument panel system)	Instrument system(xintongda)	√	√	√	√	√	-	-
General type	Haval H4		HUT-TBOX(integrated machine)		√	√	√	-	-	-	-
General type	Haval H5	2021 model(Russian version)	ECM(Engine Control Module)		√	√	√	√	√	-	-
General type	Haval H5	2021 model(Russian version)	ESP(Electronic Stability Program)		√	√	√	√	√	-	-
General type	Haval H5	2021 model(Russian version)	SRS(Supplemental Restrgint System)		√	√	√	√	-	-	-
General type	Haval H5	2021 model(Russian version)	BCM(Body Control Module)		√	√	√	√	√	-	-
General type	Haval H5	2021 model(Russian version)	ICM/IP(Instrument panel system)		√	√	√	√	√	-	-
General type	Haval H5	2021 model(Russian version)	TPMS(Tire Pressure Monitoring System)		√	√	√	√	-	-	-
General type	Haval H5	2021 model(Russian version)	IMMO		-	√	√	√	-	-	-
General type	Haval H5	2021 model(Russian version)	TOD(4WD system)	TOD (Intelligent 4WD)	√	√	√	√	√	-	-
General type	Haval H5	2021 model(Russian version)	TOD(4WD system)	ESOF(BorgWarner 4WD system)	√	√	√	√	√	-	-
General type	Haval H5	2021 model(Russian version)	RVC(Rear View Camera)		√	√	√	√	-	-	-
General type	Haval H6	Third generation Haval H6	ECM(engine control module)		√	√	√	√	√	-	-
General type	Haval H6	Third generation Haval H6	TCU(Transmission control unit)		√	√	√	√	-	-	-
General type	Haval H6	Third generation Haval H6	ESP(Electronic Stability Program)		√	√	√	√	√	-	-
General type	Haval H6	Third generation Haval H6	ABM(airbag module)		√	√	√	√	√	-	-
General type	Haval H6	Third generation Haval H6	KBCM(body electronic domain control unit)	KBCM(UAES body electronic domain control unit)	√	√	√	√	√	-	-
General type	Haval H6	Third generation Haval H6	KBCM(body electronic domain control unit)	KBCM(KSTAR body electronic domain control unit)	√	√	√	√	√	-	-
General type	Haval H6	Third generation Haval H6	AC(air conditioning control module)		√	√	√	√	√	-	-
General type	Haval H6	Third generation Haval H6	AMP (Amplifier)		√	√	√	-	-	-	-
General type	Haval H6	Third generation Haval H6	AWD(All Wheel Drive)		√	√	√	√	-	-	-
General type	Haval H6	Third generation Haval H6	BLE(Bluetooth module)		√	√	√	√	-	-	-
General type	Haval H6	Third generation Haval H6	CP (electric sidestep module)		√	√	√	-	-	-	-
General type	Haval H6	Third generation Haval H6	CSA(combination switch assembly)		√	√	√	√	-	-	-
General type	Haval H6	Third generation Haval H6	CVVL(continuously variable valve lift)		√	-	-	-	-	-	-
General type	Haval H6	Third generation Haval H6	DDCM(driver side door module)		√	√	√	-	-	-	-
General type	Haval H6	Third generation Haval H6	DVR(Digital Video Recorder)		√	√	√	√	-	-	-

Diagnostic List GREAT WALL MOTOR_v10.52

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color

Model Menu		System				Function						Remarks (Other functions)
						Read ECU information	Read DTC	Erase DTC	Live Data	Actuation Test	Read freeze frame	
General type	Haval H6	Third generation Haval H6	F-PBOX(front fuse box module)		√	√	√	√	√	-	-	-
General type	Haval H6	Third generation Haval H6	GW(Gateway System)	GW(Aptiv gateway)	√	√	√	√	-	-	-	-
General type	Haval H6	Third generation Haval H6	GW(Gateway System)	GW(UAES gateway)	√	√	√	√	-	-	-	-
General type	Haval H6	Third generation Haval H6	HAP(advanced automatic parking)		√	√	√	√	-	-	-	-
General type	Haval H6	Third generation Haval H6	IFC(Intelligent front view module)		√	√	√	√	-	-	-	-
General type	Haval H6	Third generation Haval H6	TPMS(tire pressure monitoring module)		√	√	√	√	-	-	-	-
General type	Haval H6	Third generation Haval H6	HUD(head up display)		√	√	√	-	-	-	-	-
General type	Haval H6	Third generation Haval H6	HUT(multimedia player assembly)		√	√	√	√	-	-	-	-
General type	Haval H6	Third generation Haval H6	HVSM(seat heating ventilation module)	HVSM(ANWEN seat heating and ventilation module)	√	√	√	√	-	-	-	-
General type	Haval H6	Third generation Haval H6	HVSM(seat heating ventilation module)	HVSM(GENTHERM seat heating and ventilation module)	√	√	√	√	-	-	-	-
General type	Haval H6	Third generation Haval H6	IPAS(integrated Parking Aid System)		√	√	√	√	-	-	-	-
General type	Haval H6	Third generation Haval H6	PDCM(passenger side door module)		√	√	√	-	-	-	-	-
General type	Haval H6	Third generation Haval H6	PLG(Power Lift Gate)		√	√	√	√	-	-	-	-
General type	Haval H6	Third generation Haval H6	RPAS(rear radar Parking Aid)		√	√	√	√	-	-	-	-
General type	Haval H6	Third generation Haval H6	R-PBOX(rear fuse box module)		√	√	√	√	√	-	-	-
General type	Haval H6	Third generation Haval H6	RSDS_L(left radar detection system)		√	√	√	√	-	-	-	-
General type	Haval H6	Third generation Haval H6	RSDS_R(Right radar detection system)		√	√	√	√	-	-	-	-
General type	Haval H6	Third generation Haval H6	SBWM(Electronic shifter)	SBWM(Mander electronic shifter assembly)	√	√	√	√	-	-	-	-
General type	Haval H6	Third generation Haval H6	SBWM(Electronic shifter)	SBWM(Searle electronic shifter assembly)	√	√	√	√	-	-	-	-
General type	Haval H6	Third generation Haval H6	T-BOX(Vehicle networking host system)	T-box(Lear on-board wireless terminal)	√	√	√	√	-	-	-	-
General type	Haval H6	Third generation Haval H6	T-BOX(Vehicle networking host system)	T-BOX(Neusoft on-board wireless terminal)	√	√	√	√	-	-	-	-
General type	Haval H6	Third generation Haval H6	WPC(wireless charging assembly)		√	√	√	√	-	-	-	-
General type	Haval H6	Third generation Haval H6	EPS(Electric Power Steering)		√	√	√	√	-	-	-	-
General type	Haval H6 COLPE		HUT-TBOX(integrated machine)		√	√	√	-	-	-	-	-
General type	Haval H7	2019 model(China VI)	SBWM(Electronic Shifter)		√	√	√	-	-	-	-	-
General type	Haval H9	2020 model(SAT CHINA VI)	VBC(reversing image system)		√	√	√	√	-	-	-	-
General type	Haval M6	2021 model(M6 PLUS)	ECM(Engine Control Module)		√	√	√	√	√	-	-	Write VIN code, variable valve timing (VVT) self-learning, replacement of vehicle particulate filter (GPF), replacement of oxidation catalyst (DOC) (differential pressure sensor), regeneration of gasoline particulate filter (GPF), fuel tank leakage test, write configuration, read configuration, OBD diagnosis function
General type	Haval M6	2021 model(M6 PLUS)	AT(automatic transmission system)	Transmission control unit(7DCT450)	√	√	√	√	-	-	-	Write VIN code, write network configuration information, turn off dev can function, replace TCU, but do not replace hydraulic module (HCM), replace TCU, but do not replace clutch (PT), replace TCU, but do not replace register module (NB), after-sales learning function, turn off auto P function, and read after-sales data
General type	Haval M6	2021 model(M6 PLUS)	AT(automatic transmission system)	TCU(Transmission control unit 7DCT-300S)	√	√	√	√	-	-	-	-
General type	Haval M6	2021 model(M6 PLUS)	ESP(Electronic Stability Program)		√	√	√	√	√	-	-	Write VIN code, angle sensor calibration, manual exhaust, caliper test
General type	Haval M6	2021 model(M6 PLUS)	SRS(Supplemental Restrgint System)		√	√	√	√	-	-	-	Write VIN code, calibration, network configuration (manual), write circuit configuration word
General type	Haval M6	2021 model(M6 PLUS)	BCM(Body Control Module)		√	√	√	√	√	-	-	Write VIN code

Diagnostic List GREAT WALL MOTOR_v10.52

Remark:

- 1. √ : means that the system has this function
- 2. - : means that the system does not have this function
- 3. compared with the last version, the new added function is marked in red color

Model Menu		System			Function						
					Read ECU information	Read DTC	Erase DTC	Live Data	Actuation Test	Read freeze frame	Remarks (Other functions)
General type	Haval M6	2021 model (M6 PLUS)	ICM/IP(Instrument panel system)		√	√	√	√	-	-	Write VIN code, total mileage reset, manual reset
General type	Haval M6	2021 model (M6 PLUS)	PEPS(Passive Entry Passive Start system)		√	√	√	√	√	-	-
General type	Haval M6	2021 model (M6 PLUS)	AC(Automatic Air Conditioning System)	AC(air conditioning control system) (Belhella)	√	√	√	√	√	-	Write VIN code
General type	Haval M6	2021 model (M6 PLUS)	AC(Automatic Air Conditioning System)	AC(air conditioning control system) (FENGtian)	√	√	√	√	√	-	Write VIN code
General type	Haval M6	2021 model (M6 PLUS)	GW(Gateway)		√	√	√	√	-	-	Write VIN code
General type	Haval M6	2021 model (M6 PLUS)	PAS(Parking Assist System)		√	√	√	-	-	-	-
General type	Haval M6	2021 model (M6 PLUS)	HUT(navigation system)		√	√	√	-	√	-	-
General type	Haval M6	2021 model (M6 PLUS)	SBWM(Electronic Shifter)	SBWM(Electronic shifter) (ZF)	√	√	√	√	-	-	Write VIN code,write category distinguishing code
General type	Haval M6	2021 model (M6 PLUS)	SBWM(Electronic Shifter)	SBWM(Electronic Shifter) (NINGBO GAOFA)	√	√	√	√	√	-	Write VIN code,write configuration
General type	Haval M6	2021 model (M6 PLUS)	AVM(Around View Monitor)		√	√	√	√	-	-	-
General type	Haval M6	2021 model (M6 PLUS)	DVR(Digital Video Recorder)		√	√	√	√	-	-	-
General type	Haval F5		Instrument system(xintongda)		√	√	√	√	√	-	-
General type	Haval F5		IP(3.5吋_Continental Meter)		√	√	√	√	√	-	-
General type	Haval F5		IP (7-inch DSV instrument)		√	√	√	√	√	-	-
General type	Haval F5		APS (fully automatic parking system)		√	√	√	√	-	-	-
General type	Haval F5		RPAS (anti collision radar system (rear four configurations))		√	√	√	√	-	-	-
General type	Haval F5		AVM (panoramic view controller - HD)		√	√	√	√	-	-	-
General type	Haval F5		Tbox (Valeo on-board wireless terminal)		√	√	√	√	-	-	-
General type	Haval F7	2021 model	ECM(Engine Control Module)	Engine system(UAES GDI CHINA VI (4B15A & 4C20B & 4N20))	√	√	√	√	√	-	-
General type	Haval F7	2021 model	TCU(Transmission Control Unit)		√	√	√	√	-	-	-
General type	Haval F7	2021 model	ESP(Electronic Stability Program)		√	√	√	√	√	-	-
General type	Haval F7	2021 model	ABM(airbag module)		√	√	√	√	-	-	-
General type	Haval F7	2021 model	BCM(Body Control Module)		√	√	√	√	√	-	-
General type	Haval F7	2021 model	PEPS(Passive entry passive start system)		√	√	√	√	-	-	-
General type	Haval F7	2021 model	AC(air conditioning control system)	AC(air conditioning control system) (Belhella)	√	√	√	√	√	-	-
General type	Haval F7	2021 model	AC(air conditioning control system)	AC(air conditioning control system) (FENGtian)	√	√	√	√	√	-	-
General type	Haval F7	2021 model	GW(Gateway)		√	√	√	√	-	-	-
General type	Haval F7	2021 model	SAS(Steering Angle Sensor)		√	√	√	√	-	-	-
General type	Haval F7	2021 model	CVVL(Continuously variable valve lift)		√	-	-	√	-	-	-
General type	Haval F7	2021 model	SBWM(Electronic Shifter)	SBWM(Electronic shifter) (ZF)	√	√	√	√	-	-	-
General type	Haval F7	2021 model	SBWM(Electronic Shifter)	SBWM(Electronic shifter) (NINGBO GAOFA)	√	√	√	√	-	-	-
General type	Haval F7	2021 model	NEXTRAC(Intelligent FWD)		√	√	√	√	√	-	-
General type	Haval F7	2021 model	EPS(Electric power steering)		√	√	√	√	-	-	-
General type	Haval F7	2021 model	IP(Instrument system)	3.5 inches_Continental Meter	√	√	√	√	√	-	-
General type	Haval F7	2021 model	IP(Instrument system)	7 inches_Bertek instrument	√	√	√	√	√	-	-

Diagnostic List GREAT WALL MOTOR_v10.52

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color

Model Menu		System				Function						Remarks (Other functions)
						Read ECU information	Read DTC	Erase DTC	Live Data	Actuation Test	Read freeze frame	
General type	Haval F7	2021 model	IP(Instrument system)	12.3 inches_ Marelli instrument	√	√	√	√	√	-	-	-
General type	Haval F7	2021 model	TPMS(Tire pressure monitoring system)		√	√	√	√	-	-	-	-
General type	Haval F7	2021 model	PAS(Parking Assist System)		√	√	√	√	-	-	-	-
General type	Haval F7	2021 model	ACC(Adaptive Cruise Control)		√	√	√	√	-	-	-	-
General type	Haval F7	2021 model	RSDS (reversing radar)	RSDS-L(Left side radar detection system)	√	√	√	√	-	-	-	-
General type	Haval F7	2021 model	RSDS (reversing radar)	RSDS-R(Right side radar detection system)	√	√	√	√	-	-	-	-
General type	Haval F7	2021 model	IFC(Intelligent front view camera)		√	√	√	√	-	-	-	-
General type	Haval F7	2021 model	HUT(Navigation System)	HUT(Huayang navigation host system)	√	√	√	√	√	-	-	-
General type	Haval F7	2021 model	HUT(Navigation System)	HUT(Desai navigation host system)	√	√	√	√	-	-	-	-
General type	Haval F7	2021 model	SCM(seat ventilation and heating module)		√	√	√	√	-	-	-	-
General type	Haval F7	2021 model	T-box(Internet of vehicles host system)		√	√	√	√	-	-	-	-
General type	Haval F7	2021 model	DSM(seat memory module)		√	√	√	√	√	-	-	-
General type	Haval F7	2021 model	DMS(Intelligent recognition system)		√	√	√	√	-	-	-	-
General type	Haval F7	2021 model	DDCM(driver side door module)		√	√	√	√	-	-	-	-
General type	Haval F7	2021 model	PDCM(passenger side door module)		√	√	√	√	-	-	-	-
General type	Haval F7	2021 model	ALCM(atmosphere lamp control module)		√	√	√	√	√	-	-	-
General type	Haval F7	2021 model	HAP(advanced automatic parking)		√	√	√	√	-	-	-	-
General type	Haval F7	2021 model	IPAS(integrated Parking Aid System)		√	√	√	√	-	-	-	-
General type	Haval F7	2021 model	RPAS(rear radar Parking Aid)		√	√	√	√	-	-	-	-
General type	Haval F7	2021 model	DVR(Digital Video Recorder)		√	√	√	√	-	-	-	-
General type	Haval F7X	F7X-2021 model	ECM(Engine Control Module)		√	√	√	√	-	-	-	-
General type	Haval F7X	F7X-2021 model	TCU(Transmission Control Unit)		√	√	√	√	-	-	-	-
General type	Haval F7X	F7X-2021 model	ESP(Electronic Stability Program)		√	√	√	√	√	-	-	-
General type	Haval F7X	F7X-2021 model	ABM(airbag module)		√	√	√	√	-	-	-	-
General type	Haval F7X	F7X-2021 model	BCM(Body Control Module)		√	√	√	√	√	-	-	-
General type	Haval F7X	F7X-2021 model	PEPS(Passive entry passive start system)		√	√	√	√	-	-	-	-
General type	Haval F7X	F7X-2021 model	AC(air conditioning control system)	AC(air conditioning control system)(Belhella)	√	√	√	√	√	-	-	-
General type	Haval F7X	F7X-2021 model	AC(air conditioning control system)	AC(air conditioning control system)(FENGTIAN)	√	√	√	√	√	-	-	-
General type	Haval F7X	F7X-2021 model	GW(Gateway)		√	√	√	√	-	-	-	-
General type	Haval F7X	F7X-2021 model	SAS(Steering Angle Sensor)		√	√	√	√	-	-	-	-
General type	Haval F7X	F7X-2021 model	CVVL(Continuously variable valve lift)		√	-	-	√	-	-	-	-
General type	Haval F7X	F7X-2021 model	SBWM(Electronic Shifter)	SBWM(Electronic Shifter)(ZF)	√	√	√	√	-	-	-	-
General type	Haval F7X	F7X-2021 model	SBWM(Electronic Shifter)	SBWM(Electronic Shifter)(NINGBO GAOFA)	√	√	√	√	√	-	-	-
General type	Haval F7X	F7X-2021 model	NEXTRAC(Intelligent FWD)		√	√	√	√	√	-	-	-
General type	Haval F7X	F7X-2021 model	EPS(Electric power steering)		√	√	√	√	-	-	-	-

Diagnostic List GREAT WALL MOTOR_v10.52

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color

Model Menu		System				Function					
						Read ECU information	Read DTC	Erase DTC	Live Data	Actuation Test	Read freeze frame
General type	Haval F7X	F7X-2021 model	7 inches+12.3 inches_ Bertek instrument		√	√	√	√	√	-	-
General type	Haval F7X	F7X-2021 model	TPMS(Tire pressure monitoring system)		√	√	√	√	-	-	-
General type	Haval F7X	F7X-2021 model	ACC(Adaptive Cruise Control)		√	√	√	√	-	-	-
General type	Haval F7X	F7X-2021 model	RSDS (reversing radar)	RSDS-L(Left side radar detection system)	√	√	√	√	-	-	-
General type	Haval F7X	F7X-2021 model	RSDS (reversing radar)	RSDS-R(Right side radar detection system)	√	√	√	√	-	-	-
General type	Haval F7X	F7X-2021 model	IFC(Intelligent front view camera)		√	√	√	√	-	-	-
General type	Haval F7X	F7X-2021 model	HUT(Navigation System)	HUT(Huayang navigation host system)	√	√	√	√	√	-	-
General type	Haval F7X	F7X-2021 model	HUT(Navigation System)	HUT(Desai navigation host system)	√	√	√	√	-	-	-
General type	Haval F7X	F7X-2021 model	SCM(seat ventilation and heating module)		√	√	√	√	-	-	-
General type	Haval F7X	F7X-2021 model	T-box(Internet of vehicles host system)	TBOX(low configuration of vehicle networking controller)	√	√	√	√	-	-	-
General type	Haval F7X	F7X-2021 model	T-box(Internet of vehicles host system)	TBOX(high configuration of vehicle networking controller)	√	√	√	√	-	-	-
General type	Haval F7X	F7X-2021 model	DSM(seat memory module)		√	√	√	√	√	-	-
General type	Haval F7X	F7X-2021 model	DMS(Intelligent recognition system)		√	√	√	√	-	-	-
General type	Haval F7X	F7X-2021 model	DDCM(driver side door module)		√	√	√	√	-	-	-
General type	Haval F7X	F7X-2021 model	PDCM(passenger side door module)		√	√	√	√	-	-	-
General type	Haval F7X	F7X-2021 model	ALCM(atmosphere lamp control module)		√	√	√	√	√	-	-
General type	Haval F7X	F7X-2021 model	HAP(advanced automatic parking)		√	√	√	√	-	-	-
General type	Haval F7X	F7X-2021 model	IPAS(integrated Parking Aid System)		√	√	√	√	-	-	-
General type	Haval F7X	F7X-2021 model	RPAS(rear radar Parking Aid)		√	√	√	√	-	-	-
General type	Haval F7X	F7X-2021 model	DVR(Digital Video Recorder)		√	√	√	√	-	-	-
General type	Haval DARGO		ECM(engine control module)		√	√	√	√	√	-	-
General type	Haval DARGO		TCU(Transmission control unit)		√	√	√	√	-	-	-
General type	Haval DARGO		ESP(Electronic Stability Program)		√	√	√	√	√	-	-
General type	Haval DARGO		ABM(airbag module)		√	√	√	√	√	-	-
General type	Haval DARGO		KBCM(body electronic domain control unit)	KBCM(UAES body electronic domain control unit)	√	√	√	√	√	-	-
General type	Haval DARGO		KBCM(body electronic domain control unit)	KBCM(KSTAR body electronic domain control unit)	√	√	√	√	√	-	-
General type	Haval DARGO		AC(air conditioning control module)		√	√	√	√	√	-	-
General type	Haval DARGO		AMP (Amplifier)		√	√	√	-	-	-	-
General type	Haval DARGO		AWD(All Wheel Drive)		√	√	√	√	-	-	-
General type	Haval DARGO		BLE(Bluetooth module)		√	√	√	√	-	-	-
General type	Haval DARGO		CP (electric sidestep module)		√	√	√	-	-	-	-
General type	Haval DARGO		CSA(combination switch assembly)		√	√	√	√	-	-	-
General type	Haval DARGO		CVVL(continuously variable valve lift)		√	-	-	-	-	-	-
General type	Haval DARGO		DDCM(driver side door module)		√	√	√	-	-	-	-

Diagnostic List GREAT WALL MOTOR_v10.52

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color

Model Menu		System			Function						
					Read ECU information	Read DTC	Erase DTC	Live Data	Actuation Test	Read freeze frame	Remarks (Other functions)
General type	Haval DARGO		DVR(Digital Video Recorder)		√	√	√	√	-	-	-
General type	Haval DARGO		ELD(electronic differential lock control unit)		√	√	√	-	√	-	-
General type	Haval DARGO		F-PBOX(front fuse box module)		√	√	√	√	√	-	-
General type	Haval DARGO		GW(Gateway)	GW(Aptiv gateway)	√	√	√	√	-	-	-
General type	Haval DARGO		GW(Gateway)	GW(UAES gateway)	√	√	√	√	-	-	-
General type	Haval DARGO		HAP(advanced automatic parking)		√	√	√	√	-	-	-
General type	Haval DARGO		IFC(Intelligent front view module)		√	√	√	√	-	-	-
General type	Haval DARGO		TPMS (tire pressure monitoring module)		√	√	√	√	-	-	-
General type	Haval DARGO		HUD(head up display)		√	√	√	-	-	-	-
General type	Haval DARGO		HUT(multimedia player assembly)		√	√	√	√	-	-	Maintenance mileage setting
General type	Haval DARGO		HVSM(seat heating ventilation module)	HVSM(ANWEN seat heating and ventilation module)	√	√	√	√	-	-	-
General type	Haval DARGO		HVSM(seat heating ventilation module)	HVSM(GENTHERM seat heating and ventilation module)	√	√	√	√	-	-	-
General type	Haval DARGO		IPAS(integrated Parking Aid System)		√	√	√	√	-	-	-
General type	Haval DARGO		PDCM(passenger side door module)		√	√	√	-	-	-	-
General type	Haval DARGO		PLG(Power Lift Gate)		√	√	√	√	-	-	-
General type	Haval DARGO		RPAS(rear radar Parking Aid)		√	√	√	√	-	-	-
General type	Haval DARGO		R-PBOX(rear fuse box module)		√	√	√	√	√	-	-
General type	Haval DARGO		RSDS_L(left radar detection system)		√	√	√	√	-	-	-
General type	Haval DARGO		RSDS_R(Right radar detection system)		√	√	√	√	-	-	-
General type	Haval DARGO		SBWM(Electronic Shifter)	SBWM(Mander electronic shifter assembly)	√	√	√	√	-	-	-
General type	Haval DARGO		SBWM(Electronic Shifter)	SBWM(Searle electronic shifter assembly)	√	√	√	√	-	-	-
General type	Haval DARGO		STBS(screen touch key switch controller)		√	√	√	√	-	-	-
General type	Haval DARGO		T-box(Internet of vehicles host system)	T-box(Lear on-board wireless terminal)	√	√	√	√	-	-	-
General type	Haval DARGO		T-box(Internet of vehicles host system)	T-BOX(Neusoft on-board wireless terminal)	√	√	√	√	-	-	-
General type	Haval DARGO		WPC(wireless charging assembly)		√	√	√	√	-	-	-
General type	Haval DARGO		EPS(Electric Power Steering)		√	√	√	√	-	-	-
General type	Haval JOLION		ECM(Engine Control Module)	Engine system(UAES CHINA VI (4G15F))	√	√	√	√	√	-	-
General type	Haval JOLION		TCU(Transmission control unit)		√	√	√	√	-	-	-
General type	Haval JOLION		ESP(Electronic Stability Program)		√	√	√	√	√	-	-
General type	Haval JOLION		ABM(airbag module)		√	√	√	√	-	-	-
General type	Haval JOLION		KBCM(body electronic domain control unit)	KBCM(UAES body electronic domain control unit)	√	√	√	√	√	-	-
General type	Haval JOLION		KBCM(body electronic domain control unit)	KBCM(KSTAR body electronic domain control unit)	√	√	√	√	√	-	-
General type	Haval JOLION		IP(Instrument system)	IP (instrument system 3.5 inches)	√	√	√	√	√	-	-
General type	Haval JOLION		IP(Instrument system)	IP (instrument system 7-inch Yazaki)	√	√	√	√	-	-	-

Diagnostic List GREAT WALL MOTOR_v10.52

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color

Model Menu		System			Function						
					Read ECU information	Read DTC	Erase DTC	Live Data	Actuation Test	Read freeze frame	Remarks (Other functions)
General type	Haval JOLION		IP(Instrument system)	IP (instrument system 7-inch xintongda)	√	√	√	√	-	-	-
General type	Haval JOLION		GW(UAES gateway)		√	√	√	-	-	-	-
General type	Haval JOLION		AC(air conditioning control module)		√	√	√	√	√	-	-
General type	Haval JOLION		ALCM(atmosphere lamp control module)		√	√	√	√	-	-	-
General type	Haval JOLION		APS(Automatic parking system)		√	√	√	√	-	-	-
General type	Haval JOLION		AWD(All Wheel Drive)		√	√	√	√	-	-	-
General type	Haval JOLION		CSA(combination switch assembly)		√	√	√	√	-	-	-
General type	Haval JOLION		DMS(intelligent identification system)		√	√	√	√	-	-	-
General type	Haval JOLION		DVR(Digital Video Recorder)		√	√	√	√	-	-	-
General type	Haval JOLION		ECALL(emergency call system)		√	√	√	-	-	-	-
General type	Haval JOLION		EPS(Electric power steering)	EPS (Bosch Power Steering System)	√	√	√	√	-	-	-
General type	Haval JOLION		EPS(Electric power steering)	EPS (Henglong power steering system)	√	√	√	√	-	-	-
General type	Haval JOLION		ESCL(electronic steering column lock)		√	√	√	-	-	-	-
General type	Haval JOLION		F-PBOX(front fuse box module)		√	√	√	√	√	-	-
General type	Haval JOLION		R-PBOX(rear fuse box module)		√	√	√	√	√	-	-
General type	Haval JOLION		GLO-NASS(GLONASS emergency call system)		√	√	√	√	-	-	-
General type	Haval JOLION		HUD(head up display)		√	√	√	-	-	-	-
General type	Haval JOLION		HUT(multimedia player assembly)		√	√	√	√	-	-	-
General type	Haval JOLION		HVSM(seat heating ventilation module)	HVSM(ANWEN seat heating and ventilation module)	√	√	√	√	-	-	-
General type	Haval JOLION		HVSM(seat heating ventilation module)	HVSM(GENTHERM seat heating and ventilation module)	√	√	√	√	-	-	-
General type	Haval JOLION		IFC(Intelligent front view module)		√	√	√	√	-	-	-
General type	Haval JOLION		RPAS(rear radar Parking Aid)		√	√	√	√	-	-	-
General type	Haval JOLION		RSDS_L(left radar detection system)		√	√	√	√	-	-	-
General type	Haval JOLION		RSDS_R(Right radar detection system)		√	√	√	√	-	-	-
General type	Haval JOLION		SBWM(Electronic shifter)	SBWM(Mander electronic shifter assembly)	√	√	√	√	-	-	-
General type	Haval JOLION		SBWM(Electronic shifter)	SBWM(Searle electronic shifter assembly)	√	√	√	√	-	-	-
General type	Haval JOLION		TPMS (tire pressure monitoring module)		√	√	√	√	-	-	-
General type	Haval JOLION		VMDR (Interior occupant detection radar)		√	√	√	-	-	-	-
General type	Haval JOLION		WPC(wireless charging assembly)		√	√	√	√	-	-	-
General type	Haval JOLION		T-BOX(Vehicle networking host system)		√	√	√	√	-	-	-
General type	VV5	2021 model	ECM(Engine Control Module)	Engine system(UAES GDI CHINA VI (4B15A & 4C20B & 4N20))	√	√	√	√	√	-	-
General type	VV5	2021 model	ESP(Electronic Stability Program)		√	√	√	√	√	-	-
General type	VV5	2021 model	ABM(airbag module)		√	√	√	√	-	-	-
General type	VV5	2021 model	TCU(Transmission Control Unit)		√	√	√	√	-	-	-

Diagnostic List GREAT WALL MOTOR_v10.52

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color

Model Menu		System			Function						
					Read ECU information	Read DTC	Erase DTC	Live Data	Actuation Test	Read freeze frame	Remarks (Other functions)
General type	VV5	2021 model	BCM(Body Control Module)		√	√	√	√	√	-	-
General type	VV5	2021 model	PEPS(Passive entry passive start system)		√	√	√	√	-	-	-
General type	VV5	2021 model	IP(Instrument system)	IP(full color instrument system)	√	√	√	√	√	-	-
General type	VV5	2021 model	IP(Instrument system)	Instrument system (IP)	√	√	√	√	√	-	-
General type	VV5	2021 model	EPS(Electric power steering)		√	√	√	√	√	-	-
General type	VV5	2021 model	GW(Gateway)		√	√	√	√	-	-	-
General type	VV5	2021 model	AC(air conditioning control system)	AC(air conditioning control system) (Belhella)	√	√	√	√	√	-	-
General type	VV5	2021 model	AC(air conditioning control system)	AC(air conditioning control system) (FENG TIAN)	√	√	√	√	√	-	-
General type	VV5	2021 model	TPMS(Tire pressure monitoring system)		√	√	√	√	-	-	-
General type	VV5	2021 model	DVR(Digital Video Recorder)		√	√	√	√	-	-	-
General type	VV5	2021 model	AMP(Power amplifier system)		√	√	√	-	-	-	-
General type	VV5	2021 model	HUT(Navigation System)		√	√	√	√	-	-	-
General type	VV5	2021 model	NEXTRAC(Intelligent FWD)		√	√	√	√	√	-	-
General type	VV5	2021 model	T-box(Internet of vehicles host system)		√	√	√	√	-	-	-
General type	VV5	2021 model	DDCM(driver side door module)		√	√	√	√	-	-	-
General type	VV5	2021 model	PDCM(passenger side door module)		√	√	√	√	-	-	-
General type	VV5	2021 model	APS(Automatic park assist)		√	√	√	√	-	-	-
General type	VV5	2021 model	PAS(Parking Assist System)		√	√	√	√	-	-	-
General type	VV5	2021 model	SVM(Smart inner rearview mirror)		√	√	√	-	-	-	-
General type	VV5	2021 model	SBWM(Electronic Shifter)		√	√	√	√	-	-	-
General type	VV5	2021 model	SAS(steering wheel angle sensor)		√	√	√	√	-	-	-
General type	VV5	2021 model	ACC(Adaptive Cruise Control)		√	√	√	√	-	-	-
General type	VV5	2021 model	DMS(Intelligent recognition system)		√	√	√	√	-	-	-
General type	VV5	2021 model	CVVL(Continuously variable valve lift)		√	-	-	√	-	-	-
General type	VV6	2021 model	ECM(Engine Control Module)	Engine system(UAES GDI CHINA VI(4B15A+4C20B))	√	√	√	√	√	-	Write VIN code, write network configuration information (31 characters), replace vehicle particulate filter (GPF), replace differential pressure sensor, replace ECU (electronic control unit), variable valve timing (VVT) self-learning, OBD diagnosis function, write configuration, read configuration, gasoline particulate filter (GPF) regeneration, fuel tank leakage test, read relevant data of gasoline particulate filter (GPF) of old ECM
General type	VV6	2021 model	TCU(Transmission Control Unit)		√	√	√	√	-	-	-
General type	VV6	2021 model	ESP(Electronic Stability Program)		√	√	√	√	√	-	-
General type	VV6	2021 model	ABM(airbag module)		√	√	√	√	-	-	-
General type	VV6	2021 model	BCM(Body Control Module)		√	√	√	√	√	-	-
General type	VV6	2021 model	ICM/IP(Instrument panel system)		√	√	√	√	√	-	-
General type	VV6	2021 model	TPMS(Tire pressure monitoring system)		√	√	√	√	-	-	-
General type	VV6	2021 model	AC(air conditioning control system)		√	√	√	√	√	-	-
General type	VV6	2021 model	DVR(Digital Video Recorder)		√	√	√	√	-	-	-

Diagnostic List GREAT WALL MOTOR_v10.52

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color

Model Menu		System			Function						
					Read ECU information	Read DTC	Erase DTC	Live Data	Actuation Test	Read freeze frame	Remarks (Other functions)
General type	VV6	2021 model	GW(Gateway System)		√	√	√	√	-	-	-
General type	VV6	2021 model	HUT(Navigation System)		√	√	√	√	-	-	-
General type	VV6	2021 model	PEPS(Passive entry passive start system)		√	√	√	√	-	-	-
General type	VV6	2021 model	ACC(Adaptive Cruise Control)		√	√	√	√	-	-	-
General type	VV6	2021 model	Left side radar detection system(RSDS-L)		√	√	√	√	-	-	-
General type	VV6	2021 model	Right side radar detection system(RSDS-R)		√	√	√	√	-	-	-
General type	VV6	2021 model	IFC(Intelligent front view camera)		√	√	√	√	-	-	-
General type	VV6	2021 model	DDCM(Driver side door system)		√	√	√	√	-	-	-
General type	VV6	2021 model	PDCM(Passenger side door system)		√	√	√	√	-	-	-
General type	VV6	2021 model	DSM(Driver Seat Memory)	DSM(Driver Seat Memory)(KSTAR)	√	√	√	√	√	-	-
General type	VV6	2021 model	DSM(Driver Seat Memory)	DSM(Driver Seat Memory)(OUFEI)	√	√	√	-	√	-	-
General type	VV6	2021 model	SCM(Seat heating massage system)		√	√	√	√	-	-	-
General type	VV6	2021 model	SVM(Smart inner rearview mirror)		√	√	√	-	-	-	-
General type	VV6	2021 model	APS(Automatic park assist)		√	√	√	√	-	-	-
General type	VV6	2021 model	PAS(Parking Assist System)		√	√	√	√	-	-	-
General type	VV6	2021 model	DMS(Intelligent recognition system)		√	√	√	√	-	-	-
General type	VV6	2021 model	CVVL(Continuously variable valve lift)		√	-	-	√	-	-	-
General type	VV6	2021 model	SBWM(Electronic Shifter)		√	√	√	√	-	-	-
General type	VV6	2021 model	EPS(Electric power steering)		√	√	√	√	√	-	-
General type	VV6	2021 model	SAS(Steering Angle Sensor)		√	√	√	√	-	-	-
General type	VV6	2021 model	NEXTRAC(Intelligent FWD)		√	√	√	√	√	-	-
General type	VV6	2021 model	HC(Headlamp controller)		√	√	√	√	-	-	-
General type	VV6	2021 model	T-box(Internet of vehicles host system)		√	√	√	√	-	-	-
General type	VV6	2021 model	AMP(Power amplifier system)		√	√	√	-	-	-	-
General type	VV6	2021 model	VMDR(Interior occupant detection radar)		√	√	√	-	-	-	-
General type	VV7	2020 model	VMDR(Interior occupant detection radar)		√	√	√	-	-	-	-
General type	VV7	2020 model	RHDS(Rear armrest display assembly)		√	√	√	√	√	-	-
General type	VV7 PHEV		BMS(Battery Management System)(二)		√	√	√	√	√	-	-