

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
C-ZERO		Built-in Systems Interface				Read ECU Information		Y		
C-ZERO		Built-in Systems Interface				Read Fault Code		Y		
C-ZERO		Built-in Systems Interface				Erase Fault Code		Y		
C-ZERO		Built-in Systems Interface				Live Data		Y		
C-ZERO		Computer control of electric machines				Read ECU Information		Y		
C-ZERO		Computer control of electric machines				Read Fault Code		Y		
C-ZERO		Computer control of electric machines				Erase Fault Code		Y		
C-ZERO		Computer control of electric machines				Live Data		Y		
C-ZERO		Traction battery ECU				Read ECU Information		Y		
C-ZERO		Traction battery ECU				Read Fault Code		Y		
C-ZERO		Traction battery ECU				Erase Fault Code		Y		
C-ZERO		Traction battery ECU				Live Data		Y		
C-ZERO		Traction battery ECU				Actuation Test		Y		
C-ZERO		Electric vehicle management ECU				Read ECU Information		Y		
C-ZERO		Electric vehicle management ECU				Read Fault Code		Y		
C-ZERO		Electric vehicle management ECU				Erase Fault Code		Y		
C-ZERO		Electric vehicle management ECU				Live Data		Y		
C-ZERO		Electric vehicle management ECU				Actuation Test		Y		
C-ZERO		ESP				Read ECU Information		Y		
C-ZERO		ESP				Read Fault Code		Y		
C-ZERO		ESP				Erase Fault Code		Y		
C-ZERO		ESP				Live Data		Y		
C-ZERO		ESP				Actuation Test		Y		
C-ZERO		Power steering				Read ECU Information		Y		
C-ZERO		Power steering				Read Fault Code		Y		
C-ZERO		Power steering				Erase Fault Code		Y		
C-ZERO		Power steering				Live Data		Y		
C-ZERO		Steering wheel angle sensor				Read ECU Information		Y		
C-ZERO		Steering wheel angle sensor				Read Fault Code		Y		
C-ZERO		Steering wheel angle sensor				Erase Fault Code		Y		
C-ZERO		Steering wheel angle sensor				Live Data		Y		
C-ZERO		Steering wheel angle sensor				Special Function	Pack Repair	Y		
C-ZERO		Airbag	SRS			Read ECU Information		Y		
C-ZERO		Airbag	SRS			Read Fault Code		Y		
C-ZERO		Airbag	SRS			Erase Fault Code		Y		
C-ZERO		Airbag	SRS			Live Data		Y		
C-ZERO		Airbag	SRS			Actuation Test		Y		
C-ZERO		Airbag	ORC			Read ECU Information		Y		
C-ZERO		Airbag	ORC			Read Fault Code		Y		
C-ZERO		Airbag	ORC			Erase Fault Code		Y		
C-ZERO		Airbag	ORC			Live Data		Y		
C-ZERO		Airbag	ORC			Actuation Test		Y		
C-ZERO		Gateway wiring housing				Read ECU Information		Y		
C-ZERO		Gateway wiring housing				Read Fault Code		Y		
C-ZERO		Gateway wiring housing				Erase Fault Code		Y		
C-ZERO		Gateway wiring housing				Live Data		Y		
C-ZERO		Gateway wiring housing				Special Function	View and print all Configuration parameters	Y		
C-ZERO		Gateway wiring housing				Special Function	Configuration	Y		
C-ZERO		Independent telematic unit (BTU)				Read ECU Information		Y		
C-ZERO		Independent telematic unit (BTU)				Read Fault Code		Y		
C-ZERO		Independent telematic unit (BTU)				Erase Fault Code		Y		
C-ZERO		Independent telematic unit (BTU)				Live Data		Y		
C-ZERO		Independent telematic unit (BTU)				Actuation Test		Y		
C-ZERO		Independent telematic unit (BTU)				Special Function	Configuration	Y		
C-ZERO		Instrument panel				Read ECU Information		Y		
C-ZERO		Instrument panel				Read Fault Code		Y		
C-ZERO		Instrument panel				Erase Fault Code		Y		
C-ZERO		Instrument panel				Live Data		Y		
C-ZERO		Instrument panel				Actuation Test		Y		
C-ZERO		Radio				Read ECU Information		Y		
C-ZERO		Radio				Read Fault Code		Y		
C-ZERO		Radio				Erase Fault Code		Y		
C-ZERO		Radio				Live Data		Y		
C-ZERO		Radio				Actuation Test		Y		
C-ZERO		Radio				Special Function	Configuration	Y		
C-ZERO		Air conditioning				Read ECU Information		Y		
C-ZERO		Air conditioning				Read Fault Code		Y		
C-ZERO		Air conditioning				Erase Fault Code		Y		
C-ZERO		Air conditioning				Live Data		Y		
C-ZERO		Air conditioning				Actuation Test		Y		
C-ZERO		Air conditioning compressor and passenger compartment heating control module				Read ECU Information		Y		
C-ZERO		Air conditioning compressor and passenger compartment heating control module				Read Fault Code		Y		
C-ZERO		Air conditioning compressor and passenger compartment heating control module				Erase Fault Code		Y		
C-ZERO		Air conditioning compressor and passenger compartment heating control module				Live Data		Y		
C-ZERO		Air conditioning compressor and passenger compartment heating control module				Actuation Test		Y		
C-ZERO		Onboard charger of the traction battery				Read ECU Information		Y		
C-ZERO		Onboard charger of the traction battery				Read Fault Code		Y		
C-ZERO		Onboard charger of the traction battery				Erase Fault Code		Y		
C-ZERO		Onboard charger of the traction battery				Live Data		Y		
C-ZERO		Direct voltage (DC/DC) transformer				Read ECU Information		Y		
C-ZERO		Direct voltage (DC/DC) transformer				Read Fault Code		Y		
C-ZERO		Direct voltage (DC/DC) transformer				Erase Fault Code		Y		
C-ZERO		Direct voltage (DC/DC) transformer				Live Data		Y		
C1		Engine ECU	Diesel engine	IB1_S1805 8HT		Read ECU Information		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Models	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function reasons	Add (Y/N)	Verification (Y/N)	Remarks
C1		Engine ECU	Diesel engine	HDI_S1DB05 SHT		Read Fault Code		Y		
C1		Engine ECU	Diesel engine	HDI_S1DB05 SHT		Erase Fault Code		Y		
C1		Engine ECU	Diesel engine	HDI_S1DB05 SHT		Live Data		Y		
C1		Engine ECU	Diesel engine	CFA BOSCH ME7.9.5		Read Fault Code		Y		
C1		Engine ECU	Diesel engine	CFA BOSCH ME7.9.5		Erase Fault Code		Y		
C1		Gearbox ECU				Read Fault Code		Y		
C1		Gearbox ECU				Erase Fault Code		Y		
C1		Gearbox ECU				Live Data		Y		
C1		Gearbox ECU				Actuation Test		Y		
C1		Gearbox ECU				Special Function	Park repair	Y		
C1		Airbag				Read ECU Information		Y		
C1		Airbag				Read Fault Code		Y		
C1		Airbag				Erase Fault Code		Y		
C1		Airbag				Live Data		Y		
C1		Immobilizer control module(Immobilizer)				Read Fault Code		Y		
C1		Immobilizer control module(Immobilizer)				Erase Fault Code		Y		
C1		Immobilizer control module(Immobilizer)				Live Data		Y		
C1		Electric power steering				Read ECU Information		Y		
C1		Electric power steering				Read Fault Code		Y		
C1		Electric power steering				Erase Fault Code		Y		
C1		Electric power steering				Live Data		Y		
C1(B4)		Engine ECU	V46			Read ECU Information		Y		
C1(B4)		Engine ECU	V46			Read Fault Code		Y		
C1(B4)		Engine ECU	V46			Erase Fault Code		Y		
C1(B4)		Engine ECU	V46			Live Data		Y		
C1(B4)		Engine ECU	V46			Actuation Test		Y		
C1(B4)		Engine ECU(18K)				Read ECU Information		Y		
C1(B4)		Engine ECU(18K)				Read Fault Code		Y		
C1(B4)		Engine ECU(18K)				Erase Fault Code		Y		
C1(B4)		Engine ECU(18K)				Live Data		Y		
C1(B4)		ABS or ESP ECU				Read ECU Information		Y		
C1(B4)		ABS or ESP ECU				Read Fault Code		Y		
C1(B4)		ABS or ESP ECU				Erase Fault Code		Y		
C1(B4)		ABS or ESP ECU				Live Data		Y		
C1(B4)		Climate control				Read ECU Information		Y		
C1(B4)		Climate control				Read Fault Code		Y		
C1(B4)		Climate control				Erase Fault Code		Y		
C1(B4)		Climate control				Live Data		Y		
C1(B4)		Climate control				Actuation Test		Y		
C1(B4)		Power steering				Read ECU Information		Y		
C1(B4)		Power steering				Read Fault Code		Y		
C1(B4)		Power steering				Erase Fault Code		Y		
C1(B4)		Power steering				Live Data		Y		
C1(B4)		Gearbox ECU				Read ECU Information		Y		
C1(B4)		Gearbox ECU				Read Fault Code		Y		
C1(B4)		Gearbox ECU				Erase Fault Code		Y		
C1(B4)		Gearbox ECU				Live Data		Y		
C1(B4)		Stop and Start ECU				Read ECU Information		Y		
C1(B4)		Stop and Start ECU				Read Fault Code		Y		
C1(B4)		Stop and Start ECU				Erase Fault Code		Y		
C1(B4)		Stop and Start ECU				Live Data		Y		
C1(B4)		Hands-free control unit				Read Fault Code		Y		
C1(B4)		Hands-free control unit				Erase Fault Code		Y		
C1(B4)		Hands-free control unit				Live Data		Y		
C1(B4)		Keyless entry unit(entry and start):Automatic monitoring				Read Fault Code		Y		
C1(B4)		Keyless entry unit(entry and start):Automatic monitoring				Erase Fault Code		Y		
C1(B4)		Keyless entry unit(entry and start):Automatic monitoring				Live Data		Y		
C1(B4)		Keyless entry unit(entry and start):Allow to start				Read Fault Code		Y		
C1(B4)		Keyless entry unit(entry and start):Allow to start				Erase Fault Code		Y		
C1(B4)		Keyless entry unit(entry and start):Allow to start				Live Data		Y		
C1(B4)		Keyless entry unit(entry and start):Entry and Start				Read ECU Information		Y		
C1(B4)		Keyless entry unit(entry and start):Entry and Start				Read Fault Code		Y		
C1(B4)		Keyless entry unit(entry and start):Entry and Start				Erase Fault Code		Y		
C1(B4)		Keyless entry unit(entry and start):Entry and Start				Live Data		Y		
C1(B4)		Instrument cluster				Read ECU Information		Y		
C1(B4)		Instrument cluster				Read Fault Code		Y		
C1(B4)		Instrument cluster				Erase Fault Code		Y		
C1(B4)		Instrument cluster				Live Data		Y		
C1(B4)		Multifunction display				Read Fault Code		Y		
C1(B4)		Multifunction display				Erase Fault Code		Y		
C1(B4)		Multifunction display				Live Data		Y		
C1(B4)		Airbag ECU				Read ECU Information		Y		
C1(B4)		Airbag ECU				Read Fault Code		Y		
C1(B4)		Airbag ECU				Erase Fault Code		Y		
C1(B4)		Airbag ECU				Live Data		Y		
C2 (2003-2006)	Production date before 1 September 2005	Engine ECU	Petrol engine	HFX MM48P		Read ECU Information		Y		
C2 (2003-2006)	Production date before 1 September 2005	Engine ECU	Petrol engine	HFX MM48P		Read Fault Code		Y		
C2 (2003-2006)	Production date before 1 September 2005	Engine ECU	Petrol engine	HFX MM48P		Erase Fault Code		Y		
C2 (2003-2006)	Production date before 1 September 2005	Engine ECU	Petrol engine	HFX MM48P		Live Data		Y		
C2 (2003-2006)	Production date before 1 September 2005	Engine ECU	Petrol engine	HFX MM48P		Actuation Test		Y		
C2 (2003-2006)	Production date before 1 September 2005	Engine ECU	Petrol engine	HFX MM48P		Special Function	Initialisation of auto-adaptation	Y		
C2 (2003-2006)	Production date before 1 September 2005	Engine ECU	Petrol engine	NFU BOSCH ME744		Read ECU Information		Y		
C2 (2003-2006)	Production date before 1 September 2005	Engine ECU	Petrol engine	NFU BOSCH ME744		Read Fault Code		Y		
C2 (2003-2006)	Production date before 1 September 2005	Engine ECU	Petrol engine	NFU BOSCH ME744		Erase Fault Code		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Models	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function reasons	Add (Y/N)	Verification (Y/N)	Remarks
C2 (2003-2006)	Production date before 1 September 2005	Built-in Systems Interface				Read Fault Code		Y		
C2 (2003-2006)	Production date before 1 September 2005	Built-in Systems Interface				Erase Fault Code		Y		
C2 (2003-2006)	Production date before 1 September 2005	Built-in Systems Interface				Special Function	Maintenance/BSI operating mode	Y		
C2 (2003-2006)	Production date before 1 September 2005	Instrument panel				Read ECU Information		Y		
C2 (2003-2006)	Production date before 1 September 2005	Instrument panel				Read Fault Code		Y		
C2 (2003-2006)	Production date before 1 September 2005	Instrument panel				Erase Fault Code		Y		
C2 (2003-2006)	Production date before 1 September 2005	Instrument panel				Live Data		Y		
C2 (2003-2006)	Production date before 1 September 2005	Instrument panel				Actuation Test		Y		
C2 (2003-2006)	Production date before 1 September 2005	Radio				Read ECU Information		Y		
C2 (2003-2006)	Production date before 1 September 2005	Radio				Read Fault Code		Y		
C2 (2003-2006)	Production date before 1 September 2005	Radio				Erase Fault Code		Y		
C2 (2003-2006)	Production date before 1 September 2005	Radio				Live Data		Y		
C2 (2003-2006)	Production date before 1 September 2005	Radio				Actuation Test		Y		
C2 (2003-2006)	Production date before 1 September 2005	CD player				Read ECU Information		Y		
C2 (2003-2006)	Production date before 1 September 2005	CD player				Read Fault Code		Y		
C2 (2003-2006)	Production date before 1 September 2005	CD player				Erase Fault Code		Y		
C2 (2003-2006)	Production date before 1 September 2005	CD player				Live Data		Y		
C2 (2003-2006)	Production date before 1 September 2005	CD player				Actuation Test		Y		
C2 (2003-2006)	Production date before 1 September 2005	Parking assistance				Read ECU Information		Y		
C2 (2003-2006)	Production date before 1 September 2005	Parking assistance				Read Fault Code		Y		
C2 (2003-2006)	Production date before 1 September 2005	Parking assistance				Erase Fault Code		Y		
C2 (2003-2006)	Production date before 1 September 2005	Parking assistance				Live Data		Y		
C2 (2003-2006)	Production date before 1 September 2005	Parking assistance				Actuation Test		Y		
C2 (2003-2006)	Production date before 1 September 2005	Air conditioning				Read ECU Information		Y		
C2 (2003-2006)	Production date before 1 September 2005	Air conditioning				Read Fault Code		Y		
C2 (2003-2006)	Production date before 1 September 2005	Air conditioning				Erase Fault Code		Y		
C2 (2003-2006)	Production date before 1 September 2005	Air conditioning				Live Data		Y		
C2 (2003-2006)	Production date before 1 September 2005	Air conditioning				Actuation Test		Y		
C2 (2003-2006)	Production date before 1 September 2005	Navigation				Read ECU Information		Y		
C2 (2003-2006)	Production date before 1 September 2005	Navigation				Read Fault Code		Y		
C2 (2003-2006)	Production date before 1 September 2005	Navigation				Erase Fault Code		Y		
C2 (2003-2006)	Production date before 1 September 2005	Navigation				Live Data		Y		
C2 (2003-2006)	Production date before 1 September 2005	Alarm				Read ECU Information		Y		
C2 (2003-2006)	Production date before 1 September 2005	Alarm				Read Fault Code		Y		
C2 (2003-2006)	Production date before 1 September 2005	Alarm				Erase Fault Code		Y		
C2 (2003-2006)	Production date before 1 September 2005	Alarm				Actuation Test		Y		
C2 (2003-2006)	Production date before 1 September 2005	Switch module under the steering wheel				Read ECU Information		Y		
C2 (2003-2006)	Production date before 1 September 2005	Switch module under the steering wheel				Special Function	Parameter measurements	Y		
C2 (2003-2006)	Production date before 1 September 2005	Rain sensor/Brightness				Read ECU Information		Y		
C2 (2003-2006)	Production date before 1 September 2005	Display or Telematics	Multifunction displaySAGEM A			Read ECU Information		Y		
C2 (2003-2006)	Production date before 1 September 2005	Display or Telematics	Multifunction displaySAGEM A			Read Fault Code		Y		
C2 (2003-2006)	Production date before 1 September 2005	Display or Telematics	Multifunction displaySAGEM A			Erase Fault Code		Y		
C2 (2003-2006)	Production date before 1 September 2005	Display or Telematics	Multifunction displaySAGEM A			Live Data		Y		
C2 (2003-2006)	Production date before 1 September 2005	Display or Telematics	Multifunction displaySAGEM A			Actuation Test		Y		
C2 (2003-2006)	Production date before 1 September 2005	Display or Telematics	Multifunction displaySAGEM B			Read ECU Information		Y		
C2 (2003-2006)	Production date before 1 September 2005	Display or Telematics	Multifunction displaySAGEM B			Read Fault Code		Y		
C2 (2003-2006)	Production date before 1 September 2005	Display or Telematics	Multifunction displaySAGEM B			Erase Fault Code		Y		
C2 (2003-2006)	Production date before 1 September 2005	Display or Telematics	Multifunction displaySAGEM B			Live Data		Y		
C2 (2003-2006)	Production date before 1 September 2005	Display or Telematics	Multifunction displaySAGEM B			Actuation Test		Y		
C2 (2003-2006)	Production date before 1 September 2005	Display or Telematics	Multifunction displaySAGEM C			Read ECU Information		Y		
C2 (2003-2006)	Production date before 1 September 2005	Display or Telematics	Multifunction displaySAGEM C			Read Fault Code		Y		
C2 (2003-2006)	Production date before 1 September 2005	Display or Telematics	Multifunction displaySAGEM C			Erase Fault Code		Y		
C2 (2003-2006)	Production date before 1 September 2005	Display or Telematics	Multifunction displaySAGEM C			Live Data		Y		
C2 (2003-2006)	Production date before 1 September 2005	Display or Telematics	Multifunction displaySAGEM C			Actuation Test		Y		
C2 (2003-2006)	Production date before 1 September 2005	Display or Telematics	Telematics unit			Read ECU Information		Y		
C2 (2003-2006)	Production date before 1 September 2005	Display or Telematics	Telematics unit			Read Fault Code		Y		
C2 (2003-2006)	Production date before 1 September 2005	Display or Telematics	Telematics unit			Erase Fault Code		Y		
C2 (2003-2006)	Production date before 1 September 2005	Display or Telematics	Telematics unit			Live Data		Y		
C2 (2003-2006)	Production date before 1 September 2005	Display or Telematics	Telematics unit			Actuation Test		Y		
C2 (2003-2006)	Production date before 1 September 2005	Electric power steering ECU				Read ECU Information		Y		
C2 (2003-2006)	Production date before 1 September 2005	Electric power steering ECU				Read Fault Code		Y		
C2 (2003-2006)	Production date before 1 September 2005	Electric power steering ECU				Erase Fault Code		Y		
C2 (2003-2006)	Production date before 1 September 2005	Electric power steering ECU				Live Data		Y		
C2 (2003-2006)	Production date after 1 September 2005	Engine ECU	Petrol engine	KFU MB6LPC		Read ECU Information		Y		
C2 (2003-2006)	Production date after 1 September 2005	Engine ECU	Petrol engine	KFU MB6LPC		Read Fault Code		Y		
C2 (2003-2006)	Production date after 1 September 2005	Engine ECU	Petrol engine	KFU MB6LPC		Erase Fault Code		Y		
C2 (2003-2006)	Production date after 1 September 2005	Engine ECU	Petrol engine	KFU MB6LPC		Live Data		Y		
C2 (2003-2006)	Production date after 1 September 2005	Engine ECU	Petrol engine	KFU MB6LPC		Actuation Test		Y		
C2 (2003-2006)	Production date after 1 September 2005	Engine ECU	Petrol engine	KFU MB6LPC		Special Function	Matching	Y		
C2 (2003-2006)	Production date after 1 September 2005	Engine ECU	Petrol engine	TU1A J34P		Read ECU Information		Y		
C2 (2003-2006)	Production date after 1 September 2005	Engine ECU	Petrol engine	TU1A J34P		Read Fault Code		Y		
C2 (2003-2006)	Production date after 1 September 2005	Engine ECU	Petrol engine	TU1A J34P		Erase Fault Code		Y		
C2 (2003-2006)	Production date after 1 September 2005	Engine ECU	Petrol engine	TU1A J34P		Live Data		Y		
C2 (2003-2006)	Production date after 1 September 2005	Engine ECU	Petrol engine	TU1A J34P		Actuation Test		Y		
C2 (2003-2006)	Production date after 1 September 2005	Engine ECU	Petrol engine	TU1A J34P		Special Function	Programming / Matching	Y		
C2 (2003-2006)	Production date after 1 September 2005	Engine ECU	Petrol engine	TU3A J34P		Read ECU Information		Y		
C2 (2003-2006)	Production date after 1 September 2005	Engine ECU	Petrol engine	TU3A J34P		Read Fault Code		Y		
C2 (2003-2006)	Production date after 1 September 2005	Engine ECU	Petrol engine	TU3A J34P		Erase Fault Code		Y		
C2 (2003-2006)	Production date after 1 September 2005	Engine ECU	Petrol engine	TU3A J34P		Live Data		Y		
C2 (2003-2006)	Production date after 1 September 2005	Engine ECU	Petrol engine	TU3A J34P		Actuation Test		Y		
C2 (2003-2006)	Production date after 1 September 2005	Engine ECU	Petrol engine	TU3A J34P		Special Function	Programming / Matching	Y		
C2 (2003-2006)	Production date after 1 September 2005	Engine ECU	Petrol engine	TU3A J34P		Special Function	Initialise auto-adaptives	Y		
C2 (2003-2006)	Production date after 1 September 2005	Engine ECU	Petrol engine	N5 BOSCH ME745		Read ECU Information		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Models	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
C2 (2003-2006)	Production date after 1 September 2005	Airbag				Read ECU Information		Y		
C2 (2003-2006)	Production date after 1 September 2005	Airbag				Read Fault Code		Y		
C2 (2003-2006)	Production date after 1 September 2005	Airbag				Erase Fault Code		Y		
C2 (2003-2006)	Production date after 1 September 2005	Airbag				Live Data		Y		
C2 (2003-2006)	Production date after 1 September 2005	Built-in Systems Interface				Read ECU Information		Y		
C2 (2003-2006)	Production date after 1 September 2005	Built-in Systems Interface				Read Fault Code		Y		
C2 (2003-2006)	Production date after 1 September 2005	Built-in Systems Interface				Erase Fault Code		Y		
C2 (2003-2006)	Production date after 1 September 2005	Built-in Systems Interface				Live Data		Y		
C2 (2003-2006)	Production date after 1 September 2005	Built-in Systems Interface				Actuation Test		Y		
C2 (2003-2006)	Production date after 1 September 2005	Built-in Systems Interface				Special Function	Maintenance-BSI operating mode	Y		
C2 (2003-2006)	Production date after 1 September 2005	Instrument panel				Read ECU Information		Y		
C2 (2003-2006)	Production date after 1 September 2005	Instrument panel				Read Fault Code		Y		
C2 (2003-2006)	Production date after 1 September 2005	Instrument panel				Erase Fault Code		Y		
C2 (2003-2006)	Production date after 1 September 2005	Instrument panel				Live Data		Y		
C2 (2003-2006)	Production date after 1 September 2005	Instrument panel				Actuation Test		Y		
C2 (2003-2006)	Production date after 1 September 2005	Radio				Read ECU Information		Y		
C2 (2003-2006)	Production date after 1 September 2005	Radio				Read Fault Code		Y		
C2 (2003-2006)	Production date after 1 September 2005	Radio				Erase Fault Code		Y		
C2 (2003-2006)	Production date after 1 September 2005	Radio				Live Data		Y		
C2 (2003-2006)	Production date after 1 September 2005	Radio				Actuation Test		Y		
C2 (2003-2006)	Production date after 1 September 2005	CD player				Read ECU Information		Y		
C2 (2003-2006)	Production date after 1 September 2005	CD player				Read Fault Code		Y		
C2 (2003-2006)	Production date after 1 September 2005	CD player				Erase Fault Code		Y		
C2 (2003-2006)	Production date after 1 September 2005	CD player				Live Data		Y		
C2 (2003-2006)	Production date after 1 September 2005	CD player				Actuation Test		Y		
C2 (2003-2006)	Production date after 1 September 2005	Parking assistance				Read ECU Information		Y		
C2 (2003-2006)	Production date after 1 September 2005	Parking assistance				Read Fault Code		Y		
C2 (2003-2006)	Production date after 1 September 2005	Parking assistance				Erase Fault Code		Y		
C2 (2003-2006)	Production date after 1 September 2005	Parking assistance				Live Data		Y		
C2 (2003-2006)	Production date after 1 September 2005	Parking assistance				Actuation Test		Y		
C2 (2003-2006)	Production date after 1 September 2005	Air conditioning				Read ECU Information		Y		
C2 (2003-2006)	Production date after 1 September 2005	Air conditioning				Read Fault Code		Y		
C2 (2003-2006)	Production date after 1 September 2005	Air conditioning				Erase Fault Code		Y		
C2 (2003-2006)	Production date after 1 September 2005	Air conditioning				Live Data		Y		
C2 (2003-2006)	Production date after 1 September 2005	Air conditioning				Actuation Test		Y		
C2 (2003-2006)	Production date after 1 September 2005	Alarm				Read ECU Information		Y		
C2 (2003-2006)	Production date after 1 September 2005	Alarm				Read Fault Code		Y		
C2 (2003-2006)	Production date after 1 September 2005	Alarm				Erase Fault Code		Y		
C2 (2003-2006)	Production date after 1 September 2005	Alarm				Live Data		Y		
C2 (2003-2006)	Production date after 1 September 2005	Alarm				Actuation Test		Y		
C2 (2003-2006)	Production date after 1 September 2005	Switch module under the steering wheel				Read ECU Information		Y		
C2 (2003-2006)	Production date after 1 September 2005	Switch module under the steering wheel				Read Fault Code		Y		
C2 (2003-2006)	Production date after 1 September 2005	Switch module under the steering wheel				Erase Fault Code		Y		
C2 (2003-2006)	Production date after 1 September 2005	Switch module under the steering wheel				Live Data		Y		
C2 (2003-2006)	Production date after 1 September 2005	Switch module under the steering wheel				Actuation Test		Y		
C2 (2003-2006)	Production date after 1 September 2005	Rain sensor/Brightness				Read ECU Information		Y		
C2 (2003-2006)	Production date after 1 September 2005	Rain sensor/Brightness				Read Fault Code		Y		
C2 (2003-2006)	Production date after 1 September 2005	Rain sensor/Brightness				Erase Fault Code		Y		
C2 (2003-2006)	Production date after 1 September 2005	Multifunction screen	Multifunction screen A			Read ECU Information		Y		
C2 (2003-2006)	Production date after 1 September 2005	Multifunction screen	Multifunction screen A			Read Fault Code		Y		
C2 (2003-2006)	Production date after 1 September 2005	Multifunction screen	Multifunction screen A			Erase Fault Code		Y		
C2 (2003-2006)	Production date after 1 September 2005	Multifunction screen	Multifunction screen A			Live Data		Y		
C2 (2003-2006)	Production date after 1 September 2005	Multifunction screen	Multifunction screen A			Actuation Test		Y		
C2 (2003-2006)	Production date after 1 September 2005	Multifunction screen	Multifunction screen C			Read ECU Information		Y		
C2 (2003-2006)	Production date after 1 September 2005	Multifunction screen	Multifunction screen C			Read Fault Code		Y		
C2 (2003-2006)	Production date after 1 September 2005	Multifunction screen	Multifunction screen C			Erase Fault Code		Y		
C2 (2003-2006)	Production date after 1 September 2005	Multifunction screen	Multifunction screen C			Live Data		Y		
C2 (2003-2006)	Production date after 1 September 2005	Multifunction screen	Multifunction screen C			Actuation Test		Y		
C2 (2003-2006)	Production date after 1 September 2005	Telematic	Telematic (BT3)			Read ECU Information		Y		
C2 (2003-2006)	Production date after 1 September 2005	Telematic	Telematic (BT3)			Read Fault Code		Y		
C2 (2003-2006)	Production date after 1 September 2005	Telematic	Telematic (BT3)			Erase Fault Code		Y		
C2 (2003-2006)	Production date after 1 September 2005	Telematic	Telematic (BT3)			Live Data		Y		
C2 (2003-2006)	Production date after 1 September 2005	Telematic	Telematic (BT3)			Actuation Test		Y		
C2 (2003-2006)	Production date after 1 September 2005	Telematic	Telematic (BT4)			Special Function	Function test	Y		
C2 (2003-2006)	Production date after 1 September 2005	Telematic	Telematic (BT4)			Read ECU Information		Y		
C2 (2003-2006)	Production date after 1 September 2005	Telematic	Telematic (BT4)			Read Fault Code		Y		
C2 (2003-2006)	Production date after 1 September 2005	Telematic	Telematic (BT4)			Erase Fault Code		Y		
C2 (2003-2006)	Production date after 1 September 2005	Telematic	Telematic (BT4)			Live Data		Y		
C2 (2003-2006)	Production date after 1 September 2005	Telematic	Telematic (BT4)			Actuation Test		Y		
C2 (2003-2006)	Production date after 1 September 2005	Telematic	Telematic (BT4)			Special Function	Function test	Y		
C2 (2003-2006)	Production date after 1 September 2005	Telematic	Telematic (BT5)			Read ECU Information		Y		
C2 (2003-2006)	Production date after 1 September 2005	Telematic	Telematic (BT5)			Read Fault Code		Y		
C2 (2003-2006)	Production date after 1 September 2005	Telematic	Telematic (BT5)			Erase Fault Code		Y		
C2 (2003-2006)	Production date after 1 September 2005	Telematic	Telematic (BT5)			Live Data		Y		
C2 (2003-2006)	Production date after 1 September 2005	Telematic	Telematic (BT5)			Actuation Test		Y		
C2 (2003-2006)	Production date after 1 September 2005	Telematic	Telematic (BT5)			Special Function	Function test	Y		
C2 (2003-2006)	Production date after 1 September 2005	High frequency receiver				Read ECU Information		Y		
C2 (2003-2006)	Production date after 1 September 2005	High frequency receiver				Read Fault Code		Y		
C2 (2003-2006)	Production date after 1 September 2005	High frequency receiver				Erase Fault Code		Y		
C2 (2003-2006)	Production date after 1 September 2005	High frequency receiver				Live Data		Y		
C2 (2003-2006)	Production date after 1 September 2005	Trailer relay unit				Read ECU Information		Y		
C2 (2003-2006)	Production date after 1 September 2005	Trailer relay unit				Read Fault Code		Y		
C2 (2003-2006)	Production date after 1 September 2005	Trailer relay unit				Erase Fault Code		Y		
C2 (2003-2006)	Production date after 1 September 2005	Trailer relay unit				Live Data		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Models	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
C2 (2003-2006)	Production date after 1 September 2005	Trailer relay unit				Actuation Test		Y		
C2 (2003-2006)	Production date after 1 September 2005	Engine relay unit				Read ECU Information		Y		
C2 (2003-2006)	Production date after 1 September 2005	Engine relay unit				Read Fault Code		Y		
C2 (2003-2006)	Production date after 1 September 2005	Engine relay unit				Erase Fault Code		Y		
C2 (2003-2006)	Production date after 1 September 2005	Engine relay unit				Live Data		Y		
C2 (2003-2006)	Production date after 1 September 2005	Engine relay unit				Actuation Test		Y		
C2 (2003-2006)	Production date after 1 September 2005	Electric power steering ECU				Read ECU Information		Y		
C2 (2003-2006)	Production date after 1 September 2005	Electric power steering ECU				Read Fault Code		Y		
C2 (2003-2006)	Production date after 1 September 2005	Electric power steering ECU				Erase Fault Code		Y		
C2 (2003-2006)	Production date after 1 September 2005	Electric power steering ECU				Live Data		Y		
C2 (2003-2006)	Production date after 1 September 2005	Hands Free Kit				Read ECU Information		Y		
C2 (2003-2006)	Production date after 1 September 2005	Hands Free Kit				Read Fault Code		Y		
C2 (2003-2006)	Production date after 1 September 2005	Hands Free Kit				Erase Fault Code		Y		
C2 (2003-2006)	Production date after 1 September 2005	Hands Free Kit				Live Data		Y		
C2 (2003-2006)	Production date after 1 September 2005	Hands Free Kit				Actuation Test		Y		
C2 (2003-2006)	Production date after 1 September 2005	ECU Reversible "Stop-Start" alternator				Read ECU Information		Y		
C2 (2003-2006)	Production date after 1 September 2005	ECU Reversible "Stop-Start" alternator				Read Fault Code		Y		
C2 (2003-2006)	Production date after 1 September 2005	ECU Reversible "Stop-Start" alternator				Erase Fault Code		Y		
C2 (2003-2006)	Production date after 1 September 2005	ECU Reversible "Stop-Start" alternator				Live Data		Y		
C2 (2003-2006)	Production date after 1 September 2005	ECU Reversible "Stop-Start" alternator				Actuation Test		Y		
C2 China		Engine ECU	Petrol engine	1.6L NFU BOSCH ME745		Read ECU Information		Y		
C2 China		Engine ECU	Petrol engine	1.6L NFU BOSCH ME745		Read Fault Code		Y		
C2 China		Engine ECU	Petrol engine	1.6L NFU BOSCH ME745		Erase Fault Code		Y		
C2 China		Engine ECU	Petrol engine	1.6L NFU BOSCH ME745		Live Data		Y		
C2 China		Engine ECU	Petrol engine	1.6L NFU BOSCH ME745		Actuation Test		Y		
C2 China		Engine ECU	Petrol engine	1.6L NFU BOSCH ME745		Special Function	Initialisation of auto-adaptation	Y		
C2 China		Engine ECU	Petrol engine	1.6L NFU BOSCH ME745		Special Function	Programming / Matching	Y		
C2 China		Engine ECU	Petrol engine	J34P		Read ECU Information		Y		
C2 China		Engine ECU	Petrol engine	J34P		Read Fault Code		Y		
C2 China		Engine ECU	Petrol engine	J34P		Erase Fault Code		Y		
C2 China		Engine ECU	Petrol engine	J34P		Live Data		Y		
C2 China		Engine ECU	Petrol engine	J34P		Actuation Test		Y		
C2 China		Engine ECU	Petrol engine	J34P		Special Function	Programming / Matching	Y		
C2 China		Engine ECU	Petrol engine	J34P		Special Function	Initialise auto-adaptives	Y		
C2 China		Gearbox ECU	Auto gearbox AL4.1			Read ECU Information		Y		
C2 China		Gearbox ECU	Auto gearbox AL4.1			Read Fault Code		Y		
C2 China		Gearbox ECU	Auto gearbox AL4.1			Erase Fault Code		Y		
C2 China		Gearbox ECU	Auto gearbox AL4.1			Live Data		Y		
C2 China		Gearbox ECU	Auto gearbox AL4.1			Actuation Test		Y		
C2 China		Gearbox ECU	Auto gearbox AL4.1			Special Function	Initialisation of auto-adaptation	Y		
C2 China		Gearbox ECU	Auto gearbox AL4.1			Special Function	Oil wear counter	Y		
C2 China		Gearbox ECU	Auto gearbox AL4.2			Read ECU Information		Y		
C2 China		Gearbox ECU	Auto gearbox AL4.2			Read Fault Code		Y		
C2 China		Gearbox ECU	Auto gearbox AL4.2			Erase Fault Code		Y		
C2 China		Gearbox ECU	Auto gearbox AL4.2			Live Data		Y		
C2 China		Gearbox ECU	Auto gearbox AL4.2			Actuation Test		Y		
C2 China		Gearbox ECU	Auto gearbox AL4.2			Special Function	Pedal initialisation	Y		
C2 China		Gearbox ECU	Auto gearbox AL4.2			Special Function	Initialisation of auto-adaptation	Y		
C2 China		Gearbox ECU	Auto gearbox AL4.2			Special Function	Oil wear counter	Y		
C2 China		Gearbox ECU	Auto gearbox AL4.3			Read ECU Information		Y		
C2 China		Gearbox ECU	Auto gearbox AL4.3			Read Fault Code		Y		
C2 China		Gearbox ECU	Auto gearbox AL4.3			Erase Fault Code		Y		
C2 China		Gearbox ECU	Auto gearbox AL4.3			Live Data		Y		
C2 China		Gearbox ECU	Auto gearbox AL4.3			Actuation Test		Y		
C2 China		Gearbox ECU	Auto gearbox AL4.3			Special Function	Pedal initialisation	Y		
C2 China		Gearbox ECU	Auto gearbox AL4.3			Special Function	Initialisation of auto-adaptation	Y		
C2 China		Gearbox ECU	Auto gearbox AL4.3			Special Function	Oil wear counter	Y		
C2 China		ABS				Read ECU Information		Y		
C2 China		ABS				Read Fault Code		Y		
C2 China		ABS				Erase Fault Code		Y		
C2 China		ABS				Live Data		Y		
C2 China		ABS				Actuation Test		Y		
C2 China		ABS				Special Function	Bleeding	Y		
C2 China		Airbag				Read ECU Information		Y		
C2 China		Airbag				Read Fault Code		Y		
C2 China		Airbag				Erase Fault Code		Y		
C2 China		Airbag				Live Data		Y		
C2 China		Built-in Systems Interface				Read ECU Information		Y		
C2 China		Built-in Systems Interface				Read Fault Code		Y		
C2 China		Built-in Systems Interface				Erase Fault Code		Y		
C2 China		Built-in Systems Interface				Special Function	Maintenance-BSI operating mode	Y		
C2 China		Instrument panel				Read ECU Information		Y		
C2 China		Instrument panel				Read Fault Code		Y		
C2 China		Instrument panel				Erase Fault Code		Y		
C2 China		Instrument panel				Live Data		Y		
C2 China		Instrument panel				Actuation Test		Y		
C2 China		Air conditioning				Read ECU Information		Y		
C2 China		Air conditioning				Read Fault Code		Y		
C2 China		Air conditioning				Erase Fault Code		Y		
C2 China		Air conditioning				Live Data		Y		
C2 China		Air conditioning				Actuation Test		Y		
C2 China		Steering wheel with fixed central controls				Read ECU Information		Y		
C2 China		Steering wheel with fixed central controls				Live Data		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	BFX M48BP		Read ECU Information		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	BFX M48BP		Read Fault Code		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Models	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
C3 (2002-2006)		Engine ECU	Petrol engine	BFX MM48P		Erase Fault Code		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	BFX MM48P		Live Data		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	BFX MM48P		Actuation Test		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	BFX MM48P		Special Function	Initialisation of auto-adaptation	Y		
C3 (2002-2006)		Engine ECU	Petrol engine	KFU MM6LP		Read ECU Information		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	KFU MM6LP		Read Fault Code		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	KFU MM6LP		Erase Fault Code		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	KFU MM6LP		Live Data		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	KFU MM6LP		Actuation Test		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	KFU MM6LP		Special Function	Initialisation of auto-adaptation	Y		
C3 (2002-2006)		Engine ECU	Petrol engine	KFU MM6LP		Read ECU Information		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	KFU MM6LP		Read Fault Code		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	KFU MM6LP		Erase Fault Code		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	KFU MM6LP		Live Data		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	KFU MM6LP		Actuation Test		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	KFU MM6LP		Special Function	Initialisation of the autoadaptive values	Y		
C3 (2002-2006)		Engine ECU	Petrol engine	NFU BOSCH ME744		Read ECU Information		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	NFU BOSCH ME744		Read Fault Code		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	NFU BOSCH ME744		Erase Fault Code		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	NFU BOSCH ME744		Live Data		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	NFU BOSCH ME744		Actuation Test		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	NFU BOSCH ME744		Special Function	Initialisation of auto-adaptation	Y		
C3 (2002-2006)		Engine ECU	Petrol engine	NFU BOSCH ME744		Special Function	Matching	Y		
C3 (2002-2006)		Engine ECU	Petrol engine	NSA BOSCH ME744		Read ECU Information		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	NSA BOSCH ME744		Read Fault Code		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	NSA BOSCH ME744		Erase Fault Code		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	NSA BOSCH ME744		Live Data		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	NSA BOSCH ME744		Actuation Test		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	NSA BOSCH ME744		Special Function	Initialisation of auto-adaptation	Y		
C3 (2002-2006)		Engine ECU	Petrol engine	NSA BOSCH ME744		Special Function	Matching	Y		
C3 (2002-2006)		Engine ECU	Petrol engine	KFA BOSCH ME744		Read ECU Information		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	KFA BOSCH ME744		Read Fault Code		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	KFA BOSCH ME744		Erase Fault Code		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	KFA BOSCH ME744		Live Data		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	KFA BOSCH ME744		Actuation Test		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	KFA BOSCH ME744		Special Function	Initialisation of auto-adaptation	Y		
C3 (2002-2006)		Engine ECU	Petrol engine	KFA BOSCH ME744		Special Function	Matching	Y		
C3 (2002-2006)		Engine ECU	Petrol engine	KFY SAGEM S2000P01		Read ECU Information		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	KFY SAGEM S2000P01		Read Fault Code		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	KFY SAGEM S2000P01		Erase Fault Code		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	KFY SAGEM S2000P01		Live Data		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	KFY SAGEM S2000P01		Read ECU Information		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	KFY SAGEM S2000P01		Read Fault Code		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	KFY SAGEM S2000P01		Erase Fault Code		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	KFY SAGEM S2000P01		Live Data		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	KFY SAGEM S2000P02		Read ECU Information		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	KFY SAGEM S2000P02		Read Fault Code		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	KFY SAGEM S2000P02		Erase Fault Code		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	KFY SAGEM S2000P02		Live Data		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	NFU BOSCH ME749		Read ECU Information		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	NFU BOSCH ME749		Read Fault Code		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	NFU BOSCH ME749		Erase Fault Code		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	NFU BOSCH ME749		Live Data		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	NFU BOSCH ME749		Actuation Test		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	NFU BOSCH ME749		Special Function	Initialisation of auto-adaptation	Y		
C3 (2002-2006)		Engine ECU	Petrol engine	NSA BOSCH ME749		Read ECU Information		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	NSA BOSCH ME749		Read Fault Code		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	NSA BOSCH ME749		Erase Fault Code		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	NSA BOSCH ME749		Live Data		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	NSA BOSCH ME749		Actuation Test		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	NSA BOSCH ME749		Special Function	Initialisation of auto-adaptation	Y		
C3 (2002-2006)		Engine ECU	Petrol engine	NFS BOSCH ME749		Read ECU Information		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	NFS BOSCH ME749		Read Fault Code		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	NFS BOSCH ME749		Erase Fault Code		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	NFS BOSCH ME749		Live Data		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	NFS BOSCH ME749		Actuation Test		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	NFS BOSCH ME749		Special Function	Initialisation of auto-adaptation	Y		
C3 (2002-2006)		Engine ECU	Petrol engine	NFR BOSCH ME749		Read ECU Information		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	NFR BOSCH ME749		Read Fault Code		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	NFR BOSCH ME749		Erase Fault Code		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	NFR BOSCH ME749		Live Data		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	NFR BOSCH ME749		Actuation Test		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	NFR BOSCH ME749		Special Function	Initialisation of auto-adaptation	Y		
C3 (2002-2006)		Engine ECU	Petrol engine	KFY BOSCH ME749		Read ECU Information		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	KFY BOSCH ME749		Read Fault Code		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	KFY BOSCH ME749		Erase Fault Code		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	KFY BOSCH ME749		Live Data		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	KFY BOSCH ME749		Actuation Test		Y		
C3 (2002-2006)		Engine ECU	Petrol engine	KFY BOSCH ME749		Special Function	Initialisation of auto-adaptation	Y		
C3 (2002-2006)		Engine ECU	Diesel engine	9HX BOSCH EDC16C34 DVA8TED4		Read ECU Information		Y		
C3 (2002-2006)		Engine ECU	Diesel engine	9HX BOSCH EDC16C34 DVA8TED4		Read Fault Code		Y		
C3 (2002-2006)		Engine ECU	Diesel engine	9HX BOSCH EDC16C34 DVA8TED4		Erase Fault Code		Y		
C3 (2002-2006)		Engine ECU	Diesel engine	9HX BOSCH EDC16C34 DVA8TED4		Live Data		Y		
C3 (2002-2006)		Engine ECU	Diesel engine	9HX BOSCH EDC16C34 DVA8TED4		Actuation Test		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Models	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
C3 (2002-2006)		Engine ECU	Diesel engine	8HJ BOSCH EDC16C34 DV4TD4		Special Function	Specific operation for maintenance and part replacement	Y		
C3 (2002-2006)		Engine ECU	Diesel engine	8HJ BOSCH EDC16C34 DV4TD		Read ECU Information		Y		
C3 (2002-2006)		Engine ECU	Diesel engine	8HJ BOSCH EDC16C34 DV4TD		Read Fault Code		Y		
C3 (2002-2006)		Engine ECU	Diesel engine	8HJ BOSCH EDC16C34 DV4TD		Erase Fault Code		Y		
C3 (2002-2006)		Engine ECU	Diesel engine	8HJ BOSCH EDC16C34 DV4TD		Live Data		Y		
C3 (2002-2006)		Engine ECU	Diesel engine	8HJ BOSCH EDC16C34 DV4TD		Actuation Test		Y		
C3 (2002-2006)		Engine ECU	Diesel engine	8HJ BOSCH EDC16C34 DV4TD		Read ECU Information		Y		
C3 (2002-2006)		Engine ECU	Diesel engine	8HJ BOSCH EDC16C34 DV4TD		Read Fault Code		Y		
C3 (2002-2006)		Engine ECU	Diesel engine	8HJ BOSCH EDC16C34 DV4TD		Erase Fault Code		Y		
C3 (2002-2006)		Engine ECU	Diesel engine	8HJ BOSCH EDC16C34 DV4TD		Live Data		Y		
C3 (2002-2006)		Engine ECU	Diesel engine	8HJ BOSCH EDC16C34 DV4TD		Actuation Test		Y		
C3 (2002-2006)		Engine ECU	Diesel engine	8HJ SIEMENS SID802		Read ECU Information		Y		
C3 (2002-2006)		Engine ECU	Diesel engine	8HJ SIEMENS SID802		Read Fault Code		Y		
C3 (2002-2006)		Engine ECU	Diesel engine	8HJ SIEMENS SID802		Erase Fault Code		Y		
C3 (2002-2006)		Engine ECU	Diesel engine	8HJ SIEMENS SID802		Live Data		Y		
C3 (2002-2006)		Engine ECU	Diesel engine	8HJ SIEMENS SID802		Actuation Test		Y		
C3 (2002-2006)		Engine ECU	Diesel engine	8HJ SIEMENS SID804		Read ECU Information		Y		
C3 (2002-2006)		Engine ECU	Diesel engine	8HJ SIEMENS SID804		Read Fault Code		Y		
C3 (2002-2006)		Engine ECU	Diesel engine	8HJ SIEMENS SID804		Erase Fault Code		Y		
C3 (2002-2006)		Engine ECU	Diesel engine	8HJ SIEMENS SID804		Live Data		Y		
C3 (2002-2006)		Engine ECU	Diesel engine	8HJ SIEMENS SID804		Actuation Test		Y		
C3 (2002-2006)		Engine ECU	Diesel engine	8HJ SIEMENS SID804		Read ECU Information		Y		
C3 (2002-2006)		Engine ECU	Diesel engine	8HJ SIEMENS SID804		Read Fault Code		Y		
C3 (2002-2006)		Engine ECU	Diesel engine	8HJ SIEMENS SID804		Erase Fault Code		Y		
C3 (2002-2006)		Engine ECU	Diesel engine	8HJ SIEMENS SID804		Live Data		Y		
C3 (2002-2006)		Engine ECU	Diesel engine	8HJ SIEMENS SID804		Actuation Test		Y		
C3 (2002-2006)		Engine ECU	Diesel engine	8HJ SIEMENS SID806		Read ECU Information		Y		
C3 (2002-2006)		Engine ECU	Diesel engine	8HJ SIEMENS SID806		Read Fault Code		Y		
C3 (2002-2006)		Engine ECU	Diesel engine	8HJ SIEMENS SID806		Erase Fault Code		Y		
C3 (2002-2006)		Engine ECU	Diesel engine	8HJ SIEMENS SID806		Live Data		Y		
C3 (2002-2006)		Engine ECU	Diesel engine	8HJ SIEMENS SID806		Actuation Test		Y		
C3 (2002-2006)		Engine ECU	Diesel engine	8HJ DELPHI C6		Read ECU Information		Y		
C3 (2002-2006)		Engine ECU	Diesel engine	8HJ DELPHI C6		Read Fault Code		Y		
C3 (2002-2006)		Engine ECU	Diesel engine	8HJ DELPHI C6		Erase Fault Code		Y		
C3 (2002-2006)		Engine ECU	Diesel engine	8HJ DELPHI C6		Live Data		Y		
C3 (2002-2006)		Engine ECU	Diesel engine	8HJ DELPHI C6		Actuation Test		Y		
C3 (2002-2006)		Gearbox ECU	Auto gearbox AL4	Auto gearbox AL4.1		Read ECU Information		Y		
C3 (2002-2006)		Gearbox ECU	Auto gearbox AL4	Auto gearbox AL4.1		Read Fault Code		Y		
C3 (2002-2006)		Gearbox ECU	Auto gearbox AL4	Auto gearbox AL4.1		Erase Fault Code		Y		
C3 (2002-2006)		Gearbox ECU	Auto gearbox AL4	Auto gearbox AL4.1		Live Data		Y		
C3 (2002-2006)		Gearbox ECU	Auto gearbox AL4	Auto gearbox AL4.1		Actuation Test		Y		
C3 (2002-2006)		Gearbox ECU	Auto gearbox AL4	Auto gearbox AL4.1		Special Function	Initialisation of auto-adaptation	Y		
C3 (2002-2006)		Gearbox ECU	Auto gearbox AL4	Auto gearbox AL4.2		Read ECU Information		Y		
C3 (2002-2006)		Gearbox ECU	Auto gearbox AL4	Auto gearbox AL4.2		Read Fault Code		Y		
C3 (2002-2006)		Gearbox ECU	Auto gearbox AL4	Auto gearbox AL4.2		Erase Fault Code		Y		
C3 (2002-2006)		Gearbox ECU	Auto gearbox AL4	Auto gearbox AL4.2		Live Data		Y		
C3 (2002-2006)		Gearbox ECU	Auto gearbox AL4	Auto gearbox AL4.2		Actuation Test		Y		
C3 (2002-2006)		Gearbox ECU	Auto gearbox AL4	Auto gearbox AL4.2		Special Function	Pedal initialisation	Y		
C3 (2002-2006)		Gearbox ECU	Auto gearbox AL4	Auto gearbox AL4.2		Special Function	Initialisation of auto-adaptation	Y		
C3 (2002-2006)		Gearbox ECU	Auto gearbox AL4	Auto gearbox AL4.2		Special Function	Oil wear counter	Y		
C3 (2002-2006)		Gearbox ECU	Auto gearbox AL4	Auto gearbox AL4.3		Read ECU Information		Y		
C3 (2002-2006)		Gearbox ECU	Auto gearbox AL4	Auto gearbox AL4.3		Read Fault Code		Y		
C3 (2002-2006)		Gearbox ECU	Auto gearbox AL4	Auto gearbox AL4.3		Erase Fault Code		Y		
C3 (2002-2006)		Gearbox ECU	Auto gearbox AL4	Auto gearbox AL4.3		Live Data		Y		
C3 (2002-2006)		Gearbox ECU	Auto gearbox AL4	Auto gearbox AL4.3		Actuation Test		Y		
C3 (2002-2006)		Gearbox ECU	Auto gearbox AL4	Auto gearbox AL4.3		Special Function	Pedal initialisation	Y		
C3 (2002-2006)		Gearbox ECU	Auto gearbox AL4	Auto gearbox AL4.3		Special Function	Initialisation of auto-adaptation	Y		
C3 (2002-2006)		Gearbox ECU	Auto gearbox AL4	Auto gearbox AL4.3		Special Function	Oil wear counter	Y		
C3 (2002-2006)		Gearbox ECU	Controlled manual gearbox ECU MA			Read ECU Information		Y		
C3 (2002-2006)		Gearbox ECU	Controlled manual gearbox ECU MA			Read Fault Code		Y		
C3 (2002-2006)		Gearbox ECU	Controlled manual gearbox ECU MA			Erase Fault Code		Y		
C3 (2002-2006)		Gearbox ECU	Controlled manual gearbox ECU MA			Live Data		Y		
C3 (2002-2006)		Gearbox ECU	Controlled manual gearbox ECU MA			Special Function	Learning	Y		
C3 (2002-2006)		Anti-lock brake system	ABS M650			Read ECU Information		Y		
C3 (2002-2006)		Anti-lock brake system	ABS M650			Read Fault Code		Y		
C3 (2002-2006)		Anti-lock brake system	ABS M650			Erase Fault Code		Y		
C3 (2002-2006)		Anti-lock brake system	ABS M650			Live Data		Y		
C3 (2002-2006)		Anti-lock brake system	ABS M670			Read ECU Information		Y		
C3 (2002-2006)		Anti-lock brake system	ABS M670			Read Fault Code		Y		
C3 (2002-2006)		Anti-lock brake system	ABS M670			Erase Fault Code		Y		
C3 (2002-2006)		Anti-lock brake system	ABS M670			Live Data		Y		
C3 (2002-2006)		Anti-lock brake system	ESP			Read ECU Information		Y		
C3 (2002-2006)		Anti-lock brake system	ESP			Read Fault Code		Y		
C3 (2002-2006)		Anti-lock brake system	ESP			Erase Fault Code		Y		
C3 (2002-2006)		Anti-lock brake system	ESP			Live Data		Y		
C3 (2002-2006)		Anti-lock brake system	ESP			Actuation Test		Y		
C3 (2002-2006)		Anti-lock brake system	ESP			Special Function	Bleeding	Y		
C3 (2002-2006)		Airbag				Read ECU Information		Y		
C3 (2002-2006)		Airbag				Read Fault Code		Y		
C3 (2002-2006)		Airbag				Erase Fault Code		Y		
C3 (2002-2006)		Airbag				Live Data		Y		
C3 (2002-2006)		BSI				Read ECU Information		Y		
C3 (2002-2006)		BSI				Read Fault Code		Y		
C3 (2002-2006)		BSI				Erase Fault Code		Y		

CITROËN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Models	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
C3 (2002-2006)		BSI				Live Data		Y		
C3 (2002-2006)		BSI				Special Function	Maintenance-BSI operating mode	Y		
C3 (2002-2006)		Instrument panel				Read ECU Information		Y		
C3 (2002-2006)		Instrument panel				Read Fault Code		Y		
C3 (2002-2006)		Instrument panel				Erase Fault Code		Y		
C3 (2002-2006)		Instrument panel				Live Data		Y		
C3 (2002-2006)		Instrument panel				Actuation Test		Y		
C3 (2002-2006)		Radio	Radio post-equipment			Read ECU Information		Y		
C3 (2002-2006)		Radio	Radio post-equipment			Read Fault Code		Y		
C3 (2002-2006)		Radio	Radio post-equipment			Erase Fault Code		Y		
C3 (2002-2006)		Radio	Radio post-equipment			Live Data		Y		
C3 (2002-2006)		Radio	Radio post-equipment			Actuation Test		Y		
C3 (2002-2006)		Radio	Radio post-equipment REE Wire			Read ECU Information		Y		
C3 (2002-2006)		Radio	Radio post-equipment REE Wire			Read Fault Code		Y		
C3 (2002-2006)		Radio	Radio post-equipment REE Wire			Erase Fault Code		Y		
C3 (2002-2006)		Radio	Radio post-equipment REE Wire			Live Data		Y		
C3 (2002-2006)		CD player				Read ECU Information		Y		
C3 (2002-2006)		CD player				Read Fault Code		Y		
C3 (2002-2006)		CD player				Erase Fault Code		Y		
C3 (2002-2006)		CD player				Live Data		Y		
C3 (2002-2006)		CD player				Actuation Test		Y		
C3 (2002-2006)		Parking assistance				Read ECU Information		Y		
C3 (2002-2006)		Parking assistance				Live Data		Y		
C3 (2002-2006)		Parking assistance				Actuation Test		Y		
C3 (2002-2006)		Air conditioning				Read ECU Information		Y		
C3 (2002-2006)		Air conditioning				Read Fault Code		Y		
C3 (2002-2006)		Air conditioning				Erase Fault Code		Y		
C3 (2002-2006)		Air conditioning				Live Data		Y		
C3 (2002-2006)		Navigation				Read ECU Information		Y		
C3 (2002-2006)		Navigation				Read Fault Code		Y		
C3 (2002-2006)		Navigation				Erase Fault Code		Y		
C3 (2002-2006)		Navigation				Live Data		Y		
C3 (2002-2006)		Alarm				Read ECU Information		Y		
C3 (2002-2006)		Alarm				Actuation Test		Y		
C3 (2002-2006)		Switch module under the steering wheel				Read ECU Information		Y		
C3 (2002-2006)		Switch module under the steering wheel				Special Function	Parameter measurements	Y		
C3 (2002-2006)		Diesel additive function				Read ECU Information		Y		
C3 (2002-2006)		Diesel additive function				Read Fault Code		Y		
C3 (2002-2006)		Diesel additive function				Erase Fault Code		Y		
C3 (2002-2006)		Diesel additive function				Live Data		Y		
C3 (2002-2006)		Diesel additive function				Actuation Test		Y		
C3 (2002-2006)		Rain sensor / Brightness				Read ECU Information		Y		
C3 (2002-2006)		Driving school mode				Read ECU Information		Y		
C3 (2002-2006)		Driving school mode				Live Data		Y		
C3 (2002-2006)		Multifunction display	Multifunction display/GEN A			Read ECU Information		Y		
C3 (2002-2006)		Multifunction display	Multifunction display/GEN A			Read Fault Code		Y		
C3 (2002-2006)		Multifunction display	Multifunction display/GEN A			Erase Fault Code		Y		
C3 (2002-2006)		Multifunction display	Multifunction display/GEN A			Live Data		Y		
C3 (2002-2006)		Multifunction display	Multifunction display/GEN A			Actuation Test		Y		
C3 (2002-2006)		Multifunction display	Multifunction display/GEN B			Read ECU Information		Y		
C3 (2002-2006)		Multifunction display	Multifunction display/GEN B			Read Fault Code		Y		
C3 (2002-2006)		Multifunction display	Multifunction display/GEN B			Erase Fault Code		Y		
C3 (2002-2006)		Multifunction display	Multifunction display/GEN B			Live Data		Y		
C3 (2002-2006)		Multifunction display	Multifunction display/GEN B			Actuation Test		Y		
C3 (2002-2006)		Multifunction display	Multifunction display/GEN C			Read ECU Information		Y		
C3 (2002-2006)		Multifunction display	Multifunction display/GEN C			Read Fault Code		Y		
C3 (2002-2006)		Multifunction display	Multifunction display/GEN C			Erase Fault Code		Y		
C3 (2002-2006)		Multifunction display	Multifunction display/GEN C			Live Data		Y		
C3 (2002-2006)		Multifunction display	Multifunction display/GEN C			Actuation Test		Y		
C3 (2002-2006)		Multifunction display	Telematics unit			Read ECU Information		Y		
C3 (2002-2006)		Multifunction display	Telematics unit			Read Fault Code		Y		
C3 (2002-2006)		Multifunction display	Telematics unit			Erase Fault Code		Y		
C3 (2002-2006)		Multifunction display	Telematics unit			Live Data		Y		
C3 (2002-2006)		Multifunction display	Telematics unit			Actuation Test		Y		
C3 (2002-2006)		Service module				Read ECU Information		Y		
C3 (2002-2006)		Service module				Read Fault Code		Y		
C3 (2002-2006)		Service module				Erase Fault Code		Y		
C3 (2002-2006)		Service module				Live Data		Y		
C3 (2002-2006)		Gas injection				Read ECU Information		Y		
C3 (2002-2006)		Gas injection				Read Fault Code		Y		
C3 (2002-2006)		Gas injection				Erase Fault Code		Y		
C3 (2002-2006)		Gas injection				Live Data		Y		
C3 (2002-2006)		Electric power steering ECU				Read ECU Information		Y		
C3 (2002-2006)		Electric power steering ECU				Read Fault Code		Y		
C3 (2002-2006)		Electric power steering ECU				Erase Fault Code		Y		
C3 (2002-2006)		Electric power steering ECU				Live Data		Y		
C3 (2002-2006)		ECU Reversible "Stop-Start" alternator				Read ECU Information		Y		
C3 (2002-2006)		ECU Reversible "Stop-Start" alternator				Read Fault Code		Y		
C3 (2002-2006)		ECU Reversible "Stop-Start" alternator				Erase Fault Code		Y		
C3 (2002-2006)		ECU Reversible "Stop-Start" alternator				Live Data		Y		
C3 (2002-2006)		Learning				Special Function	Key programming	Y		
C3 R (2006-2009)		Engine ECU	Petrol engine	TUJA J34P		Read ECU Information		Y		
C3 R (2006-2009)		Engine ECU	Petrol engine	TUJA J34P		Read Fault Code		Y		
C3 R (2006-2009)		Engine ECU	Petrol engine	TUJA J34P		Erase Fault Code		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Models	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function reasons	Add (Y/N)	Verification (Y/N)	Remarks
C3 R (2006-2009)		Engine ECU	Petrol engine	TUJA J34P		Live Data		Y		
C3 R (2006-2009)		Engine ECU	Petrol engine	TUJA J34P		Actuation Test		Y		
C3 R (2006-2009)		Engine ECU	Petrol engine	TUJA J34P		Special Function	Initialisation of the adaptive values	Y		
C3 R (2006-2009)		Engine ECU	Petrol engine	TUJA J34P		Read ECU Information		Y		
C3 R (2006-2009)		Engine ECU	Petrol engine	TUJA J34P		Read Fault Code		Y		
C3 R (2006-2009)		Engine ECU	Petrol engine	TUJA J34P		Erase Fault Code		Y		
C3 R (2006-2009)		Engine ECU	Petrol engine	TUJA J34P		Live Data		Y		
C3 R (2006-2009)		Engine ECU	Petrol engine	TUJA J34P		Actuation Test		Y		
C3 R (2006-2009)		Engine ECU	Petrol engine	TUJA J34P		Special Function	Initialisation of the adaptive values	Y		
C3 R (2006-2009)		Engine ECU	Petrol engine	KFU MB6LPC		Read ECU Information		Y		
C3 R (2006-2009)		Engine ECU	Petrol engine	KFU MB6LPC		Read Fault Code		Y		
C3 R (2006-2009)		Engine ECU	Petrol engine	KFU MB6LPC		Erase Fault Code		Y		
C3 R (2006-2009)		Engine ECU	Petrol engine	KFU MB6LPC		Live Data		Y		
C3 R (2006-2009)		Engine ECU	Petrol engine	KFU MB6LPC		Actuation Test		Y		
C3 R (2006-2009)		Engine ECU	Petrol engine	KFU MB6LPC		Special Function	Initialisation of auto-adaptation	Y		
C3 R (2006-2009)		Engine ECU	Petrol engine	NFS BOSCH ME745		Read ECU Information		Y		
C3 R (2006-2009)		Engine ECU	Petrol engine	NFS BOSCH ME745		Read Fault Code		Y		
C3 R (2006-2009)		Engine ECU	Petrol engine	NFS BOSCH ME745		Erase Fault Code		Y		
C3 R (2006-2009)		Engine ECU	Petrol engine	NFS BOSCH ME745		Live Data		Y		
C3 R (2006-2009)		Engine ECU	Petrol engine	NFS BOSCH ME745		Actuation Test		Y		
C3 R (2006-2009)		Engine ECU	Petrol engine	NFS BOSCH ME745		Special Function	Initialisation of the adaptive values	Y		
C3 R (2006-2009)		Engine ECU	Petrol engine	NFU BOSCH ME745		Read ECU Information		Y		
C3 R (2006-2009)		Engine ECU	Petrol engine	NFU BOSCH ME745		Read Fault Code		Y		
C3 R (2006-2009)		Engine ECU	Petrol engine	NFU BOSCH ME745		Erase Fault Code		Y		
C3 R (2006-2009)		Engine ECU	Petrol engine	NFU BOSCH ME745		Live Data		Y		
C3 R (2006-2009)		Engine ECU	Petrol engine	NFU BOSCH ME745		Actuation Test		Y		
C3 R (2006-2009)		Engine ECU	Petrol engine	NFU BOSCH ME745		Special Function	Initialisation of the adaptive values	Y		
C3 R (2006-2009)		Engine ECU	Petrol engine	NSA BOSCH ME745		Read ECU Information		Y		
C3 R (2006-2009)		Engine ECU	Petrol engine	NSA BOSCH ME745		Read Fault Code		Y		
C3 R (2006-2009)		Engine ECU	Petrol engine	NSA BOSCH ME745		Erase Fault Code		Y		
C3 R (2006-2009)		Engine ECU	Petrol engine	NSA BOSCH ME745		Live Data		Y		
C3 R (2006-2009)		Engine ECU	Petrol engine	NSA BOSCH ME745		Actuation Test		Y		
C3 R (2006-2009)		Engine ECU	Petrol engine	NSA BOSCH ME745		Special Function	Initialisation of the adaptive values	Y		
C3 R (2006-2009)		Engine ECU	Petrol engine	NFR BOSCH ME745		Read ECU Information		Y		
C3 R (2006-2009)		Engine ECU	Petrol engine	NFR BOSCH ME745		Read Fault Code		Y		
C3 R (2006-2009)		Engine ECU	Petrol engine	NFR BOSCH ME745		Erase Fault Code		Y		
C3 R (2006-2009)		Engine ECU	Petrol engine	NFR BOSCH ME745		Live Data		Y		
C3 R (2006-2009)		Engine ECU	Petrol engine	NFR BOSCH ME745		Actuation Test		Y		
C3 R (2006-2009)		Engine ECU	Petrol engine	NFR BOSCH ME745		Special Function	Initialisation of the adaptive values	Y		
C3 R (2006-2009)		Engine ECU	Petrol engine	KFY SAGEM S2000P2		Read ECU Information		Y		
C3 R (2006-2009)		Engine ECU	Petrol engine	KFY SAGEM S2000P2		Read Fault Code		Y		
C3 R (2006-2009)		Engine ECU	Petrol engine	KFY SAGEM S2000P2		Erase Fault Code		Y		
C3 R (2006-2009)		Engine ECU	Petrol engine	KFY SAGEM S2000P2		Live Data		Y		
C3 R (2006-2009)		Engine ECU	Diesel engine	8H2 BOSCH EDC16C34 DV4TD		Read ECU Information		Y		
C3 R (2006-2009)		Engine ECU	Diesel engine	8H2 BOSCH EDC16C34 DV4TD		Read Fault Code		Y		
C3 R (2006-2009)		Engine ECU	Diesel engine	8H2 BOSCH EDC16C34 DV4TD		Erase Fault Code		Y		
C3 R (2006-2009)		Engine ECU	Diesel engine	8H2 BOSCH EDC16C34 DV4TD		Live Data		Y		
C3 R (2006-2009)		Engine ECU	Diesel engine	8H2 BOSCH EDC16C34 DV4TD		Actuation Test		Y		
C3 R (2006-2009)		Engine ECU	Diesel engine	8H2 (FAP) BOSCH EDC16C34 DV6TED4		Read ECU Information		Y		
C3 R (2006-2009)		Engine ECU	Diesel engine	8H2 (FAP) BOSCH EDC16C34 DV6TED4		Read Fault Code		Y		
C3 R (2006-2009)		Engine ECU	Diesel engine	8H2 (FAP) BOSCH EDC16C34 DV6TED4		Erase Fault Code		Y		
C3 R (2006-2009)		Engine ECU	Diesel engine	8H2 (FAP) BOSCH EDC16C34 DV6TED4		Live Data		Y		
C3 R (2006-2009)		Engine ECU	Diesel engine	8H2 (FAP) BOSCH EDC16C34 DV6TED4		Actuation Test		Y		
C3 R (2006-2009)		Engine ECU	Diesel engine	8H2 (FAP) BOSCH EDC16C34 DV6TED4		Special Function	Specific operation for maintenance and part replacement	Y		
C3 R (2006-2009)		Engine ECU	Diesel engine	8H2 BOSCH EDC16C34 DV6TED4		Read ECU Information		Y		
C3 R (2006-2009)		Engine ECU	Diesel engine	8H2 BOSCH EDC16C34 DV6TED4		Read Fault Code		Y		
C3 R (2006-2009)		Engine ECU	Diesel engine	8H2 BOSCH EDC16C34 DV6TED4		Erase Fault Code		Y		
C3 R (2006-2009)		Engine ECU	Diesel engine	8H2 BOSCH EDC16C34 DV6TED4		Live Data		Y		
C3 R (2006-2009)		Engine ECU	Diesel engine	8H2 BOSCH EDC16C34 DV6TED4		Actuation Test		Y		
C3 R (2006-2009)		Engine ECU	Diesel engine	8H2 BOSCH EDC16C34 DV6TED4		Special Function	Specific operation for maintenance and part replacement	Y		
C3 R (2006-2009)		Engine ECU	Diesel engine	8H2 SIEMENS SID806		Read ECU Information		Y		
C3 R (2006-2009)		Engine ECU	Diesel engine	8H2 SIEMENS SID806		Read Fault Code		Y		
C3 R (2006-2009)		Engine ECU	Diesel engine	8H2 SIEMENS SID806		Erase Fault Code		Y		
C3 R (2006-2009)		Engine ECU	Diesel engine	8H2 SIEMENS SID806		Live Data		Y		
C3 R (2006-2009)		Engine ECU	Diesel engine	8H2 SIEMENS SID806		Actuation Test		Y		
C3 R (2006-2009)		Gearbox ECU	Auto gearbox AL4			Read ECU Information		Y		
C3 R (2006-2009)		Gearbox ECU	Auto gearbox AL4			Read Fault Code		Y		
C3 R (2006-2009)		Gearbox ECU	Auto gearbox AL4			Erase Fault Code		Y		
C3 R (2006-2009)		Gearbox ECU	Auto gearbox AL4			Live Data		Y		
C3 R (2006-2009)		Gearbox ECU	Auto gearbox AL4			Actuation Test		Y		
C3 R (2006-2009)		Gearbox ECU	Auto gearbox AL4			Special Function	Configuration	Y		
C3 R (2006-2009)		Gearbox ECU	Auto gearbox AL4			Special Function	Pedal initialisation	Y		
C3 R (2006-2009)		Gearbox ECU	Auto gearbox AL4			Special Function	Initialisation of auto-adaptation	Y		
C3 R (2006-2009)		Gearbox ECU	Auto gearbox AL4			Special Function	Oil wear counter	Y		
C3 R (2006-2009)		Gearbox ECU	Controlled manual gearbox ECU MA			Read ECU Information		Y		
C3 R (2006-2009)		Gearbox ECU	Controlled manual gearbox ECU MA			Read Fault Code		Y		
C3 R (2006-2009)		Gearbox ECU	Controlled manual gearbox ECU MA			Erase Fault Code		Y		
C3 R (2006-2009)		Gearbox ECU	Controlled manual gearbox ECU MA			Live Data		Y		
C3 R (2006-2009)		Gearbox ECU	Controlled manual gearbox ECU MA			Actuation Test		Y		
C3 R (2006-2009)		Gearbox ECU	Controlled manual gearbox ECU MA			Special Function	Learning	Y		
C3 R (2006-2009)		Anti-lock brake system	ABS MK 70			Read ECU Information		Y		
C3 R (2006-2009)		Anti-lock brake system	ABS MK 70			Read Fault Code		Y		
C3 R (2006-2009)		Anti-lock brake system	ABS MK 70			Erase Fault Code		Y		
C3 R (2006-2009)		Anti-lock brake system	ABS MK 70			Live Data		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
C3 R (2006-2009)		Anti-lock brake system	ABS MK 70			Special Function	Bleeding	Y		
C3 R (2006-2009)		Anti-lock brake system	ABS MK 70.1			Read ECU Information		Y		
C3 R (2006-2009)		Anti-lock brake system	ABS MK 70.1			Read Fault Code		Y		
C3 R (2006-2009)		Anti-lock brake system	ABS MK 70.1			Erase Fault Code		Y		
C3 R (2006-2009)		Anti-lock brake system	ABS MK 70.1			Live Data		Y		
C3 R (2006-2009)		Anti-lock brake system	ABS MK 70.1			Special Function	Bleeding	Y		
C3 R (2006-2009)		Anti-lock brake system	ESP M050			Read ECU Information		Y		
C3 R (2006-2009)		Anti-lock brake system	ESP M050			Read Fault Code		Y		
C3 R (2006-2009)		Anti-lock brake system	ESP M050			Erase Fault Code		Y		
C3 R (2006-2009)		Anti-lock brake system	ESP M050			Live Data		Y		
C3 R (2006-2009)		Anti-lock brake system	ESP M050			Special Function	Bleeding	Y		
C3 R (2006-2009)		Anti-lock brake system	ESP M050-0			Read ECU Information		Y		
C3 R (2006-2009)		Anti-lock brake system	ESP M050-0			Read Fault Code		Y		
C3 R (2006-2009)		Anti-lock brake system	ESP M050-0			Erase Fault Code		Y		
C3 R (2006-2009)		Anti-lock brake system	ESP M050-0			Live Data		Y		
C3 R (2006-2009)		Anti-lock brake system	ESP M050-0			Actuation Test		Y		
C3 R (2006-2009)		Anti-lock brake system	ESP M050-0			Special Function	Bleeding	Y		
C3 R (2006-2009)		Airbag				Read ECU Information		Y		
C3 R (2006-2009)		Airbag				Read Fault Code		Y		
C3 R (2006-2009)		Airbag				Erase Fault Code		Y		
C3 R (2006-2009)		Airbag				Live Data		Y		
C3 R (2006-2009)		Built-in Systems Interface				Read ECU Information		Y		
C3 R (2006-2009)		Built-in Systems Interface				Read Fault Code		Y		
C3 R (2006-2009)		Built-in Systems Interface				Erase Fault Code		Y		
C3 R (2006-2009)		Built-in Systems Interface				Live Data		Y		
C3 R (2006-2009)		Built-in Systems Interface				Actuation Test		Y		
C3 R (2006-2009)		Built-in Systems Interface				Special Function	Maintenance-BSI operating mode	Y		
C3 R (2006-2009)		Instrument panel				Read ECU Information		Y		
C3 R (2006-2009)		Instrument panel				Read Fault Code		Y		
C3 R (2006-2009)		Instrument panel				Erase Fault Code		Y		
C3 R (2006-2009)		Instrument panel				Live Data		Y		
C3 R (2006-2009)		Instrument panel				Actuation Test		Y		
C3 R (2006-2009)		Radio				Read ECU Information		Y		
C3 R (2006-2009)		Radio				Read Fault Code		Y		
C3 R (2006-2009)		Radio				Erase Fault Code		Y		
C3 R (2006-2009)		Radio				Live Data		Y		
C3 R (2006-2009)		Radio				Actuation Test		Y		
C3 R (2006-2009)		CD player				Read ECU Information		Y		
C3 R (2006-2009)		CD player				Read Fault Code		Y		
C3 R (2006-2009)		CD player				Erase Fault Code		Y		
C3 R (2006-2009)		CD player				Live Data		Y		
C3 R (2006-2009)		CD player				Actuation Test		Y		
C3 R (2006-2009)		Parking assistance				Read ECU Information		Y		
C3 R (2006-2009)		Parking assistance				Read Fault Code		Y		
C3 R (2006-2009)		Parking assistance				Erase Fault Code		Y		
C3 R (2006-2009)		Parking assistance				Live Data		Y		
C3 R (2006-2009)		Parking assistance				Actuation Test		Y		
C3 R (2006-2009)		Air conditioning				Read ECU Information		Y		
C3 R (2006-2009)		Air conditioning				Read Fault Code		Y		
C3 R (2006-2009)		Air conditioning				Erase Fault Code		Y		
C3 R (2006-2009)		Air conditioning				Live Data		Y		
C3 R (2006-2009)		Alarm				Read ECU Information		Y		
C3 R (2006-2009)		Alarm				Read Fault Code		Y		
C3 R (2006-2009)		Alarm				Erase Fault Code		Y		
C3 R (2006-2009)		Alarm				Live Data		Y		
C3 R (2006-2009)		Alarm				Actuation Test		Y		
C3 R (2006-2009)		Switch module under the steering wheel				Read ECU Information		Y		
C3 R (2006-2009)		Switch module under the steering wheel				Read Fault Code		Y		
C3 R (2006-2009)		Switch module under the steering wheel				Erase Fault Code		Y		
C3 R (2006-2009)		Switch module under the steering wheel				Live Data		Y		
C3 R (2006-2009)		Switch module under the steering wheel				Actuation Test		Y		
C3 R (2006-2009)		Rain sensor / Brightness				Read ECU Information		Y		
C3 R (2006-2009)		Rain sensor / Brightness				Read Fault Code		Y		
C3 R (2006-2009)		Rain sensor / Brightness				Erase Fault Code		Y		
C3 R (2006-2009)		Driving school mode				Read ECU Information		Y		
C3 R (2006-2009)		Driving school mode				Read Fault Code		Y		
C3 R (2006-2009)		Driving school mode				Erase Fault Code		Y		
C3 R (2006-2009)		Driving school mode				Actuation Test		Y		
C3 R (2006-2009)		Multifunction screen	Multifunction screen A			Read ECU Information		Y		
C3 R (2006-2009)		Multifunction screen	Multifunction screen A			Read Fault Code		Y		
C3 R (2006-2009)		Multifunction screen	Multifunction screen A			Erase Fault Code		Y		
C3 R (2006-2009)		Multifunction screen	Multifunction screen A			Live Data		Y		
C3 R (2006-2009)		Multifunction screen	Multifunction screen A			Actuation Test		Y		
C3 R (2006-2009)		Multifunction screen	Multifunction screen C			Read ECU Information		Y		
C3 R (2006-2009)		Multifunction screen	Multifunction screen C			Read Fault Code		Y		
C3 R (2006-2009)		Multifunction screen	Multifunction screen C			Erase Fault Code		Y		
C3 R (2006-2009)		Multifunction screen	Multifunction screen C			Live Data		Y		
C3 R (2006-2009)		Multifunction screen	Multifunction screen C			Actuation Test		Y		
C3 R (2006-2009)		Telematic	Telematic (BT3)			Read ECU Information		Y		
C3 R (2006-2009)		Telematic	Telematic (BT3)			Read Fault Code		Y		
C3 R (2006-2009)		Telematic	Telematic (BT3)			Erase Fault Code		Y		
C3 R (2006-2009)		Telematic	Telematic (BT3)			Live Data		Y		
C3 R (2006-2009)		Telematic	Telematic (BT3)			Actuation Test		Y		
C3 R (2006-2009)		Telematic	Telematic (BT4)			Read ECU Information		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function reasons	Add (Y/N)	Verification (Y/N)	Remarks
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Gearbox ECU				Erase Fault Code		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Gearbox ECU				Live Data		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Gearbox ECU				Special Function	Learning	Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Anti-lock brake system	ABS			Read ECU Information		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Anti-lock brake system	ABS			Read Fault Code		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Anti-lock brake system	ABS			Erase Fault Code		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Anti-lock brake system	ABS			Live Data		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Anti-lock brake system	ESP			Read ECU Information		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Anti-lock brake system	ESP			Read Fault Code		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Anti-lock brake system	ESP			Erase Fault Code		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Anti-lock brake system	ESP			Live Data		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Anti-lock brake system	ESP			Actuation Test		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Anti-lock brake system	ESP			Special Function	Bleeding	Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Airbag				Read ECU Information		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Airbag				Read Fault Code		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Airbag				Erase Fault Code		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Airbag				Live Data		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Built-in Systems Interface				Read ECU Information		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Built-in Systems Interface				Read Fault Code		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Built-in Systems Interface				Erase Fault Code		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Built-in Systems Interface				Live Data		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Built-in Systems Interface				Special Function	Maintenance-BSI operating mode	Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Instrument panel				Read ECU Information		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Instrument panel				Read Fault Code		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Instrument panel				Erase Fault Code		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Instrument panel				Live Data		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Instrument panel				Actuation Test		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Radio				Read ECU Information		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Radio				Read Fault Code		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Radio				Erase Fault Code		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Radio				Live Data		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Radio				Actuation Test		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	CD player				Read ECU Information		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	CD player				Read Fault Code		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	CD player				Erase Fault Code		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	CD player				Live Data		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	CD player				Actuation Test		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Parking assistance				Read ECU Information		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Parking assistance				Live Data		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Parking assistance				Actuation Test		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Air conditioning				Read ECU Information		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Air conditioning				Read Fault Code		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Air conditioning				Erase Fault Code		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Air conditioning				Live Data		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Navigation				Read ECU Information		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Navigation				Read Fault Code		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Navigation				Erase Fault Code		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Navigation				Live Data		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Alarm				Read ECU Information		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Alarm				Read Fault Code		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Alarm				Actuation Test		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Switch module under the steering wheel				Read ECU Information		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Switch module under the steering wheel				Special Function	Parameter measurements	Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Rain sensor / Brightness				Read ECU Information		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Sun roof				Read ECU Information		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Sun roof				Read Fault Code		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Sun roof				Erase Fault Code		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Sun roof				Live Data		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Driving school mode				Read ECU Information		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Driving school mode				Live Data		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Display or Telematics	Multifunction display/SGEM A			Read ECU Information		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Display or Telematics	Multifunction display/SGEM A			Read Fault Code		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Display or Telematics	Multifunction display/SGEM A			Erase Fault Code		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Display or Telematics	Multifunction display/SGEM A			Live Data		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Display or Telematics	Multifunction display/SGEM A			Actuation Test		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Display or Telematics	Multifunction display/SGEM B			Read ECU Information		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Display or Telematics	Multifunction display/SGEM B			Read Fault Code		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Display or Telematics	Multifunction display/SGEM B			Erase Fault Code		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Display or Telematics	Multifunction display/SGEM B			Live Data		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Display or Telematics	Multifunction display/SGEM B			Actuation Test		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Display or Telematics	Multifunction display/SGEM C			Read ECU Information		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Display or Telematics	Multifunction display/SGEM C			Read Fault Code		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Display or Telematics	Multifunction display/SGEM C			Erase Fault Code		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Display or Telematics	Multifunction display/SGEM C			Live Data		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Display or Telematics	Multifunction display/SGEM C			Actuation Test		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Display or Telematics	Telematics unit			Read ECU Information		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Display or Telematics	Telematics unit			Read Fault Code		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Display or Telematics	Telematics unit			Erase Fault Code		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Display or Telematics	Telematics unit			Live Data		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Display or Telematics	Telematics unit			Actuation Test		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Electric power steering ECU				Read ECU Information		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Electric power steering ECU				Read Fault Code		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Electric power steering ECU				Erase Fault Code		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Electric power steering ECU				Live Data		Y		
C3 PLURIEL (2002-2009)	Production date before 1 September 2005	Learning				Special Function	Key programming	Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
C3(A51)		Engine ECU	EDC17C10_B82	9HP - DV97ED - 92 CV		Live Data		Y		
C3(A51)		Engine ECU	EDC17C10_B82	9HP - DV97ED - 92 CV		Actuation Test		Y		
C3(A51)		Engine ECU	EDC17C10_B82	9HP - DV97ED - 92 CV		Special Function	Configuration	Y		
C3(A51)		Engine ECU	EDC17C10_B82	9HP - DV97ED - 92 CV		Special Function	Pack Repair	Y		
C3(A51)		Engine ECU	EDC17C10_B82	9HU - DV97EEM - 90 CV		Read ECU Information		Y		
C3(A51)		Engine ECU	EDC17C10_B82	9HU - DV97EEM - 90 CV		Read Fault Code		Y		
C3(A51)		Engine ECU	EDC17C10_B82	9HU - DV97EEM - 90 CV		Erase Fault Code		Y		
C3(A51)		Engine ECU	EDC17C10_B82	9HU - DV97EEM - 90 CV		Live Data		Y		
C3(A51)		Engine ECU	EDC17C10_B82	9HU - DV97EEM - 90 CV		Actuation Test		Y		
C3(A51)		Engine ECU	EDC17C10_B82	9HU - DV97EEM - 90 CV		Special Function	Configuration	Y		
C3(A51)		Engine ECU	EDC17C10_B82	9HU - DV97EEM - 90 CV		Special Function	Pack Repair	Y		
C3(A51)		Engine ECU	EDC17C10_B82	9HK - DV97EEM - 75 CV		Read ECU Information		Y		
C3(A51)		Engine ECU	EDC17C10_B82	9HK - DV97EEM - 75 CV		Read Fault Code		Y		
C3(A51)		Engine ECU	EDC17C10_B82	9HK - DV97EEM - 75 CV		Erase Fault Code		Y		
C3(A51)		Engine ECU	EDC17C10_B82	9HK - DV97EEM - 75 CV		Live Data		Y		
C3(A51)		Engine ECU	EDC17C10_B82	9HK - DV97EEM - 75 CV		Actuation Test		Y		
C3(A51)		Engine ECU	EDC17C10_B82	9HK - DV97EEM - 75 CV		Special Function	Configuration	Y		
C3(A51)		Engine ECU	EDC17C10_B82	9HK - DV97EEM - 75 CV		Special Function	Pack Repair	Y		
C3(A51)		Engine ECU	EDC17C10_B82	9HR - DV4CTED - 70 CV		Read ECU Information		Y		
C3(A51)		Engine ECU	EDC17C10_B82	9HR - DV4CTED - 70 CV		Read Fault Code		Y		
C3(A51)		Engine ECU	EDC17C10_B82	9HR - DV4CTED - 70 CV		Erase Fault Code		Y		
C3(A51)		Engine ECU	EDC17C10_B82	9HR - DV4CTED - 70 CV		Live Data		Y		
C3(A51)		Engine ECU	EDC17C10_B82	9HR - DV4CTED - 70 CV		Actuation Test		Y		
C3(A51)		Engine ECU	EDC17C10_B82	9HR - DV4CTED - 70 CV		Special Function	Configuration	Y		
C3(A51)		Engine ECU	EDC17C10_B82	9HR - DV4CTED - 70 CV		Special Function	Pack Repair	Y		
C3(A51)		Engine ECU	EDC17C10_B82	9HP - DV4CTED - 70 CV		Read ECU Information		Y		
C3(A51)		Engine ECU	EDC17C10_B82	9HP - DV4CTED - 70 CV		Read Fault Code		Y		
C3(A51)		Engine ECU	EDC17C10_B82	9HP - DV4CTED - 70 CV		Erase Fault Code		Y		
C3(A51)		Engine ECU	EDC17C10_B82	9HP - DV4CTED - 70 CV		Live Data		Y		
C3(A51)		Engine ECU	EDC17C10_B82	9HP - DV4CTED - 70 CV		Actuation Test		Y		
C3(A51)		Engine ECU	EDC17C10_B82	9HP - DV4CTED - 70 CV		Special Function	Configuration	Y		
C3(A51)		Engine ECU	EDC17C10_B82	9HP - DV4CTED - 70 CV		Special Function	Pack Repair	Y		
C3(A51)		Engine ECU	EDC18C3D4	8HZ - DV4TD		Read ECU Information		Y		
C3(A51)		Engine ECU	EDC18C3D4	8HZ - DV4TD		Read Fault Code		Y		
C3(A51)		Engine ECU	EDC18C3D4	8HZ - DV4TD		Erase Fault Code		Y		
C3(A51)		Engine ECU	EDC18C3D4	8HZ - DV4TD		Live Data		Y		
C3(A51)		Engine ECU	EDC18C3D4	8HZ - DV4TD		Actuation Test		Y		
C3(A51)		Engine ECU	EDC18C3D4	8HZ - DV4TD		Special Function	Configuration	Y		
C3(A51)		Engine ECU	EDC18C3D4	8HZ - DV4TD		Special Function	Pack Repair	Y		
C3(A51)		Engine ECU	EDC18C3D4	8HZ - DV4TD		Special Function	Programming / Matching	Y		
C3(A51)		Engine ECU	V341	V341 HFV		Read ECU Information		Y		
C3(A51)		Engine ECU	V341	V341 HFV		Read Fault Code		Y		
C3(A51)		Engine ECU	V341	V341 HFV		Erase Fault Code		Y		
C3(A51)		Engine ECU	V341	V341 HFV		Live Data		Y		
C3(A51)		Engine ECU	V341	V341 HFV		Actuation Test		Y		
C3(A51)		Engine ECU	V341	V341 HFV		Special Function	Configuration	Y		
C3(A51)		Engine ECU	V341	V341 HFV		Special Function	Pack Repair	Y		
C3(A51)		Engine ECU	V341	V341 KFT		Read ECU Information		Y		
C3(A51)		Engine ECU	V341	V341 KFT		Read Fault Code		Y		
C3(A51)		Engine ECU	V341	V341 KFT		Erase Fault Code		Y		
C3(A51)		Engine ECU	V341	V341 KFT		Live Data		Y		
C3(A51)		Engine ECU	V341	V341 KFT		Actuation Test		Y		
C3(A51)		Engine ECU	V341	V341 KFT		Special Function	Configuration	Y		
C3(A51)		Engine ECU	V341	V341 KFT		Special Function	Pack Repair	Y		
C3(A51)		Engine ECU	J34P	J34P KFN		Read ECU Information		Y		
C3(A51)		Engine ECU	J34P	J34P KFN		Read Fault Code		Y		
C3(A51)		Engine ECU	J34P	J34P KFN		Erase Fault Code		Y		
C3(A51)		Engine ECU	J34P	J34P KFN		Live Data		Y		
C3(A51)		Engine ECU	J34P	J34P KFN		Actuation Test		Y		
C3(A51)		Engine ECU	J34P	J34P KFN		Special Function	Configuration	Y		
C3(A51)		Engine ECU	J34P	J34P KFN		Special Function	Pack Repair	Y		
C3(A51)		Engine ECU	J34P	J34P KFN		Read ECU Information		Y		
C3(A51)		Engine ECU	J34P	J34P KFN		Read Fault Code		Y		
C3(A51)		Engine ECU	J34P	J34P KFN		Erase Fault Code		Y		
C3(A51)		Engine ECU	J34P	J34P KFN		Live Data		Y		
C3(A51)		Engine ECU	J34P	J34P KFN		Actuation Test		Y		
C3(A51)		Engine ECU	J34P	J34P KFN		Special Function	Configuration	Y		
C3(A51)		Engine ECU	J34P	J34P KFN		Special Function	Pack Repair	Y		
C3(A51)		Engine ECU	HDI_S1D807	HDI_S1D807 9HR		Read ECU Information		Y		
C3(A51)		Engine ECU	HDI_S1D807	HDI_S1D807 9HR		Read Fault Code		Y		
C3(A51)		Engine ECU	HDI_S1D807	HDI_S1D807 9HR		Erase Fault Code		Y		
C3(A51)		Engine ECU	HDI_S1D807	HDI_S1D807 9HR		Live Data		Y		
C3(A51)		Engine ECU	HDI_S1D807	HDI_S1D807 9HR		Actuation Test		Y		
C3(A51)		Engine ECU	HDI_S1D807	HDI_S1D807 9HR		Special Function	Configuration	Y		
C3(A51)		Engine ECU	HDI_S1D807	HDI_S1D807 9HR		Special Function	Pack Repair	Y		
C3(A51)		Engine ECU	HDI_S1D807	HDI_S1D807 9HL		Read ECU Information		Y		
C3(A51)		Engine ECU	HDI_S1D807	HDI_S1D807 9HL		Read Fault Code		Y		
C3(A51)		Engine ECU	HDI_S1D807	HDI_S1D807 9HL		Erase Fault Code		Y		
C3(A51)		Engine ECU	HDI_S1D807	HDI_S1D807 9HL		Live Data		Y		
C3(A51)		Engine ECU	HDI_S1D807	HDI_S1D807 9HL		Actuation Test		Y		
C3(A51)		Engine ECU	HDI_S1D807	HDI_S1D807 9HL		Special Function	Configuration	Y		
C3(A51)		Engine ECU	HDI_S1D807	HDI_S1D807 9HL		Special Function	Pack Repair	Y		
C3(A51)		Engine ECU	HDI_S1D807_BH2	HDI_S1D807_BH2 9HR		Read ECU Information		Y		
C3(A51)		Engine ECU	HDI_S1D807_BH2	HDI_S1D807_BH2 9HR		Read Fault Code		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
C3(A51)		Engine ECU	HD1_S1D807_BR2	HD1_S1D807_BR2_9HR		Erase Fault Code		Y		
C3(A51)		Engine ECU	HD1_S1D807_BR2	HD1_S1D807_BR2_9HR		Live Data		Y		
C3(A51)		Engine ECU	HD1_S1D807_BR2	HD1_S1D807_BR2_9HR		Actuation Test		Y		
C3(A51)		Engine ECU	HD1_S1D807_BR2	HD1_S1D807_BR2_9HR		Special Function	Configuration	Y		
C3(A51)		Engine ECU	HD1_S1D807_BR2	HD1_S1D807_BR2_9HR		Special Function	Pack Repair	Y		
C3(A51)		Engine ECU	HD1_S1D807_BR2	HD1_S1D807_BR2_9HD		Read ECU Information		Y		
C3(A51)		Engine ECU	HD1_S1D807_BR2	HD1_S1D807_BR2_9HD		Read Fault Code		Y		
C3(A51)		Engine ECU	HD1_S1D807_BR2	HD1_S1D807_BR2_9HD		Erase Fault Code		Y		
C3(A51)		Engine ECU	HD1_S1D807_BR2	HD1_S1D807_BR2_9HD		Live Data		Y		
C3(A51)		Engine ECU	HD1_S1D807_BR2	HD1_S1D807_BR2_9HD		Actuation Test		Y		
C3(A51)		Engine ECU	HD1_S1D807_BR2	HD1_S1D807_BR2_9HD		Special Function	Configuration	Y		
C3(A51)		Engine ECU	HD1_S1D807_BR2	HD1_S1D807_BR2_9HD		Special Function	Pack Repair	Y		
C3(A51)		Engine ECU	V46			Read ECU Information		Y		
C3(A51)		Engine ECU	V46			Read Fault Code		Y		
C3(A51)		Engine ECU	V46			Erase Fault Code		Y		
C3(A51)		Engine ECU	V46			Live Data		Y		
C3(A51)		Engine ECU	V46			Special Function	Pack Repair	Y		
C3(A51)		Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	ABS MK70.2			Read ECU Information		Y		
C3(A51)		Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	ABS MK70.2			Read Fault Code		Y		
C3(A51)		Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	ABS MK70.2			Erase Fault Code		Y		
C3(A51)		Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	ABS MK70.2			Live Data		Y		
C3(A51)		Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	ABS MK70.2			Actuation Test		Y		
C3(A51)		Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	ABS MK70.2			Special Function	Pack Repair	Y		
C3(A51)		Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	ESP MK60.0			Special Function	Configuration	Y		
C3(A51)		Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	ESP MK60.0			Read ECU Information		Y		
C3(A51)		Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	ESP MK60.0			Read Fault Code		Y		
C3(A51)		Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	ESP MK60.0			Erase Fault Code		Y		
C3(A51)		Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	ESP MK60.0			Live Data		Y		
C3(A51)		Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	ESP MK60.0			Actuation Test		Y		
C3(A51)		Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	ESP MK60.0			Special Function	Pack Repair	Y		
C3(A51)		Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	ESP MK60.0			Special Function	Configuration	Y		
C3(A51)		Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	ABS MK100			Read ECU Information		Y		
C3(A51)		Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	ABS MK100			Read Fault Code		Y		
C3(A51)		Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	ABS MK100			Erase Fault Code		Y		
C3(A51)		Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	ABS MK100			Live Data		Y		
C3(A51)		Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	ABS MK100			Actuation Test		Y		
C3(A51)		Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	ABS MK100			Special Function	Configuration	Y		
C3(A51)		Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	ABS MK100			Special Function	Pack Repair	Y		
C3(A51)		Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	ESP MK100			Read ECU Information		Y		
C3(A51)		Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	ESP MK100			Read Fault Code		Y		
C3(A51)		Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	ESP MK100			Erase Fault Code		Y		
C3(A51)		Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	ESP MK100			Live Data		Y		
C3(A51)		Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	ESP MK100			Actuation Test		Y		
C3(A51)		Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	ESP MK100			Special Function	Configuration	Y		
C3(A51)		Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	ESP MK100			Special Function	Pack Repair	Y		
C3(A51)		Gearbox	BVA_IL4			Read ECU Information		Y		
C3(A51)		Gearbox	BVA_IL4			Read Fault Code		Y		
C3(A51)		Gearbox	BVA_IL4			Erase Fault Code		Y		
C3(A51)		Gearbox	BVA_IL4			Live Data		Y		
C3(A51)		Gearbox	BVA_IL4			Actuation Test		Y		
C3(A51)		Gearbox	BVA_IL4			Special Function	Pack Repair	Y		
C3(A51)		Gearbox	BVA_IL4			Special Function	Configuration	Y		
C3(A51)		Gearbox	BWP_MA			Read ECU Information		Y		
C3(A51)		Gearbox	BWP_MA			Read Fault Code		Y		
C3(A51)		Gearbox	BWP_MA			Erase Fault Code		Y		
C3(A51)		Gearbox	BWP_MA			Live Data		Y		
C3(A51)		Gearbox	BWP_MA			Actuation Test		Y		
C3(A51)		Gearbox	BWP_MA			Special Function	Pack Repair	Y		
C3(A51)		Gearbox	BWP_MA			Special Function	Counters	Y		
C3(A51)		Gearbox	CFC300P			Read ECU Information		Y		
C3(A51)		Gearbox	CFC300P			Read Fault Code		Y		
C3(A51)		Gearbox	CFC300P			Erase Fault Code		Y		
C3(A51)		Gearbox	CFC300P			Live Data		Y		
C3(A51)		Gearbox	CFC300P			Actuation Test		Y		
C3(A51)		Gearbox	CFC300P			Special Function	Pack Repair	Y		
C3(A51)		Gearbox	MUPS_IDS			Read ECU Information		Y		
C3(A51)		Gearbox	MUPS_IDS			Read Fault Code		Y		
C3(A51)		Gearbox	MUPS_IDS			Erase Fault Code		Y		
C3(A51)		Gearbox	MUPS_IDS			Special Function	Pack Repair	Y		
C3(A51)		Electro-hydraulic power steering (GEP)				Read ECU Information		Y		
C3(A51)		Electro-hydraulic power steering (GEP)				Read Fault Code		Y		
C3(A51)		Electro-hydraulic power steering (GEP)				Erase Fault Code		Y		
C3(A51)		Electro-hydraulic power steering (GEP)				Live Data		Y		
C3(A51)		Electro-hydraulic power steering (GEP)				Actuation Test		Y		
C3(A51)		Electro-hydraulic power steering (GEP)				Special Function	Pack Repair	Y		
C3(A51)		Multiplexed additive pump				Read ECU Information		Y		
C3(A51)		Multiplexed additive pump				Read Fault Code		Y		
C3(A51)		Multiplexed additive pump				Erase Fault Code		Y		
C3(A51)		Multiplexed additive pump				Live Data		Y		
C3(A51)		Multiplexed additive pump				Actuation Test		Y		
C3(A51)		Multiplexed additive pump				Special Function	Configuration	Y		
C3(A51)		Multiplexed additive pump				Special Function	Pack Repair	Y		
C3(A51)		Battery charge status unit	BECB			Read ECU Information		Y		
C3(A51)		Battery charge status unit	BECB			Read Fault Code		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for Citroen, NO stands for other wires)	Subsystem (YES stands for Citroen, NO stands for other wires)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
C3(A51)		Battery charge status unit	BEBC			Erase Fault Code		Y		
C3(A51)		Battery charge status unit	BEBC			Live Data		Y		
C3(A51)		Battery charge status unit	BEBC			Special Function	Configuration	Y		
C3(A51)		Battery charge status unit	BEBC, GEN2			Read ECU Information		Y		
C3(A51)		Battery charge status unit	BEBC, GEN2			Read Fault Code		Y		
C3(A51)		Battery charge status unit	BEBC, GEN2			Erase Fault Code		Y		
C3(A51)		Battery charge status unit	BEBC, GEN2			Live Data		Y		
C3(A51)		Battery charge status unit	BEBC, GEN2			Special Function	Configuration	Y		
C3(A51)		Battery charge status unit	BEBC, GEN2			Special Function	Pack Repair	Y		
C3(A51)		Trailer relay unit				Read ECU Information		Y		
C3(A51)		Trailer relay unit				Read Fault Code		Y		
C3(A51)		Trailer relay unit				Erase Fault Code		Y		
C3(A51)		Trailer relay unit				Live Data		Y		
C3(A51)		Engine relay unit				Read ECU Information		Y		
C3(A51)		Engine relay unit				Read Fault Code		Y		
C3(A51)		Engine relay unit				Erase Fault Code		Y		
C3(A51)		Engine relay unit				Live Data		Y		
C3(A51)		Air bag				Read ECU Information		Y		
C3(A51)		Air bag				Read Fault Code		Y		
C3(A51)		Air bag				Erase Fault Code		Y		
C3(A51)		Air bag				Live Data		Y		
C3(A51)		Air bag				Special Function	Configuration	Y		
C3(A51)		Air bag				Special Function	Pack Repair	Y		
C3(A51)		Switch module at the steering wheel				Read ECU Information		Y		
C3(A51)		Switch module at the steering wheel				Read Fault Code		Y		
C3(A51)		Switch module at the steering wheel				Erase Fault Code		Y		
C3(A51)		Switch module at the steering wheel				Live Data		Y		
C3(A51)		Switch module at the steering wheel				Actuation Test		Y		
C3(A51)		Switch module at the steering wheel				Special Function	Pack Repair	Y		
C3(A51)		Parking aid				Read ECU Information		Y		
C3(A51)		Parking aid				Read Fault Code		Y		
C3(A51)		Parking aid				Erase Fault Code		Y		
C3(A51)		Parking aid				Live Data		Y		
C3(A51)		Parking aid				Special Function	Configuration	Y		
C3(A51)		Parking aid				Special Function	Pack Repair	Y		
C3(A51)		Air conditioning ECU				Read ECU Information		Y		
C3(A51)		Air conditioning ECU				Read Fault Code		Y		
C3(A51)		Air conditioning ECU				Erase Fault Code		Y		
C3(A51)		Air conditioning ECU				Live Data		Y		
C3(A51)		Air conditioning ECU				Actuation Test		Y		
C3(A51)		Air conditioning ECU				Special Function	Configuration	Y		
C3(A51)		Air conditioning ECU				Special Function	Pack Repair	Y		
C3(A51)		Multifunction display	Type "A" (segments) with buttons			Read ECU Information		Y		
C3(A51)		Multifunction display	Type "A" (segments) with buttons			Read Fault Code		Y		
C3(A51)		Multifunction display	Type "A" (segments) with buttons			Erase Fault Code		Y		
C3(A51)		Multifunction display	Type "A" (segments) with buttons			Live Data		Y		
C3(A51)		Multifunction display	Type "A" (segments) with buttons			Actuation Test		Y		
C3(A51)		Multifunction display	Type "A" (segments) with buttons			Special Function	Configuration	Y		
C3(A51)		Multifunction display	Type "A" (segments) with buttons			Special Function	Pack Repair	Y		
C3(A51)		Multifunction display	Type "A" (segments) without buttons			Read ECU Information		Y		
C3(A51)		Multifunction display	Type "A" (segments) without buttons			Read Fault Code		Y		
C3(A51)		Multifunction display	Type "A" (segments) without buttons			Erase Fault Code		Y		
C3(A51)		Multifunction display	Type "A" (segments) without buttons			Live Data		Y		
C3(A51)		Multifunction display	Type "A" (segments) without buttons			Actuation Test		Y		
C3(A51)		Multifunction display	Type "A" (segments) without buttons			Special Function	Configuration	Y		
C3(A51)		Multifunction display	Type "A" (segments) without buttons			Special Function	Pack Repair	Y		
C3(A51)		Multifunction display	Type "C" (dot matrix)			Read ECU Information		Y		
C3(A51)		Multifunction display	Type "C" (dot matrix)			Read Fault Code		Y		
C3(A51)		Multifunction display	Type "C" (dot matrix)			Erase Fault Code		Y		
C3(A51)		Multifunction display	Type "C" (dot matrix)			Live Data		Y		
C3(A51)		Multifunction display	Type "C" (dot matrix)			Actuation Test		Y		
C3(A51)		Multifunction display	Type "C" (dot matrix)			Special Function	Configuration	Y		
C3(A51)		Multifunction display	Type "C" (dot matrix)			Special Function	Pack Repair	Y		
C3(A51)		Multifunction display	Type "C colour" (dot matrix)			Read ECU Information		Y		
C3(A51)		Multifunction display	Type "C colour" (dot matrix)			Read Fault Code		Y		
C3(A51)		Multifunction display	Type "C colour" (dot matrix)			Erase Fault Code		Y		
C3(A51)		Multifunction display	Type "C colour" (dot matrix)			Live Data		Y		
C3(A51)		Multifunction display	Type "C colour" (dot matrix)			Actuation Test		Y		
C3(A51)		Multifunction display	Type "C colour" (dot matrix)			Special Function	Configuration	Y		
C3(A51)		Multifunction display	Type "C colour" (dot matrix)			Special Function	Pack Repair	Y		
C3(A51)		Instrument panel				Read ECU Information		Y		
C3(A51)		Instrument panel				Read Fault Code		Y		
C3(A51)		Instrument panel				Erase Fault Code		Y		
C3(A51)		Instrument panel				Live Data		Y		
C3(A51)		Instrument panel				Actuation Test		Y		
C3(A51)		Instrument panel				Special Function	Configuration	Y		
C3(A51)		Instrument panel				Special Function	Pack Repair	Y		
C3(A51)		Hands-free kit (Telephone)				Read ECU Information		Y		
C3(A51)		Hands-free kit (Telephone)				Read Fault Code		Y		
C3(A51)		Hands-free kit (Telephone)				Erase Fault Code		Y		
C3(A51)		Hands-free kit (Telephone)				Live Data		Y		
C3(A51)		Hands-free kit (Telephone)				Actuation Test		Y		
C3(A51)		Hands-free kit (Telephone)				Special Function	Configuration	Y		
C3(A51)		Hands-free kit (Telephone)				Special Function	Pack Repair	Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
C3(A51)		Telematics	RADIONAV_ENEGC			Read ECU Information		Y		
C3(A51)		Telematics	RADIONAV_ENEGC			Read Fault Code		Y		
C3(A51)		Telematics	RADIONAV_ENEGC			Erase Fault Code		Y		
C3(A51)		Telematics	RADIONAV_ENEGC			Live Data		Y		
C3(A51)		Telematics	RADIONAV_ENEGC			Actuation Test		Y		
C3(A51)		Telematics	RADIONAV_ENEGC			Special Function	Configuration	Y		
C3(A51)		Telematics	ENEG2010			Read ECU Information		Y		
C3(A51)		Telematics	ENEG2010			Read Fault Code		Y		
C3(A51)		Telematics	ENEG2010			Erase Fault Code		Y		
C3(A51)		Telematics	ENEG2010			Live Data		Y		
C3(A51)		Telematics	ENEG2010			Actuation Test		Y		
C3(A51)		Telematics	ENEG2010			Special Function	Configuration	Y		
C3(A51)		Telematics	ENEG2010			Special Function	Pack Repair	Y		
C3(A51)		Radio	RD4			Read ECU Information		Y		
C3(A51)		Radio	RD4			Read Fault Code		Y		
C3(A51)		Radio	RD4			Erase Fault Code		Y		
C3(A51)		Radio	RD4			Live Data		Y		
C3(A51)		Radio	RD4			Actuation Test		Y		
C3(A51)		Radio	RD4			Special Function	Configuration	Y		
C3(A51)		Radio	RD4			Special Function	Pack Repair	Y		
C3(A51)		Radio	RD45			Read ECU Information		Y		
C3(A51)		Radio	RD45			Read Fault Code		Y		
C3(A51)		Radio	RD45			Erase Fault Code		Y		
C3(A51)		Radio	RD45			Live Data		Y		
C3(A51)		Radio	RD45			Actuation Test		Y		
C3(A51)		Radio	RD45			Special Function	Configuration	Y		
C3(A51)		Radio	RD45			Special Function	Pack Repair	Y		
C3(A51)		Alarm	Alarm with anti-lift module			Read ECU Information		Y		
C3(A51)		Alarm	Alarm with anti-lift module			Read Fault Code		Y		
C3(A51)		Alarm	Alarm with anti-lift module			Erase Fault Code		Y		
C3(A51)		Alarm	Alarm with anti-lift module			Live Data		Y		
C3(A51)		Alarm	Alarm with anti-lift module			Actuation Test		Y		
C3(A51)		Alarm	Alarm with anti-lift module			Special Function	Pack Repair	Y		
C3(A51)		Driver's door module				Read ECU Information		Y		
C3(A51)		Driver's door module				Read Fault Code		Y		
C3(A51)		Driver's door module				Erase Fault Code		Y		
C3(A51)		Driver's door module				Live Data		Y		
C3(A51)		Driver's door module				Actuation Test		Y		
C3(A51)		Seat belts not fastened LED unit				Read ECU Information		Y		
C3(A51)		Seat belts not fastened LED unit				Actuation Test		Y		
C3(A51)		Driving school module				Read ECU Information		Y		
C3(A51)		Rain sensor				Read ECU Information		Y		
C3(A51)		Rain sensor				Read Fault Code		Y		
C3(A51)		Rain sensor				Erase Fault Code		Y		
C3(A51)		High frequency receiver				Read ECU Information		Y		
C3(A51)		High frequency receiver				Read Fault Code		Y		
C3(A51)		High frequency receiver				Erase Fault Code		Y		
C3(A51)		High frequency receiver				Live Data		Y		
C3(A51)		Service module				Read ECU Information		Y		
C3(A51)		Service module				Read Fault Code		Y		
C3(A51)		Service module				Erase Fault Code		Y		
C3(A51)		Service module				Live Data		Y		
C3(A51)		Service module				Actuation Test		Y		
C3(A51)		Service module				Special Function	Configuration	Y		
C3(A51)		Service module				Special Function	Pack Repair	Y		
C3(A51)		Central voltage retention device	DMTR			Read ECU Information		Y		
C3(A51)		Central voltage retention device	DMTR			Read Fault Code		Y		
C3(A51)		Central voltage retention device	DMTR			Erase Fault Code		Y		
C3(A51)		Built-in Systems Interface				Read ECU Information		Y		
C3(A51)		Built-in Systems Interface				Read Fault Code		Y		
C3(A51)		Built-in Systems Interface				Erase Fault Code		Y		
C3(A51)		Built-in Systems Interface				Live Data		Y		
C3(A51)		Built-in Systems Interface				Special Function	Maintenance-BSI operating mode	Y		
C3(A51)		Engine management ECU	ME749	ME749 NSA	ME749 No Flex Fuel	Read ECU Information		Y		
C3(A51)		Engine management ECU	ME749	ME749 NSA	ME749 No Flex Fuel	Read Fault Code		Y		
C3(A51)		Engine management ECU	ME749	ME749 NSA	ME749 No Flex Fuel	Erase Fault Code		Y		
C3(A51)		Engine management ECU	ME749	ME749 NSA	ME749 No Flex Fuel	Live Data		Y		
C3(A51)		Engine management ECU	ME749	ME749 NSA	ME749 No Flex Fuel	Actuation Test		Y		
C3(A51)		Engine management ECU	ME749	ME749 NSA	ME749 No Flex Fuel	Special Function	Configuration	Y		
C3(A51)		Engine management ECU	ME749	ME749 NSA	ME749 No Flex Fuel	Special Function	Pack Repair	Y		
C3(A51)		Engine management ECU	ME749	ME749 NSA	ME749 Flex Fuel	Read ECU Information		Y		
C3(A51)		Engine management ECU	ME749	ME749 NSA	ME749 Flex Fuel	Read Fault Code		Y		
C3(A51)		Engine management ECU	ME749	ME749 NSA	ME749 Flex Fuel	Erase Fault Code		Y		
C3(A51)		Engine management ECU	ME749	ME749 NSA	ME749 Flex Fuel	Live Data		Y		
C3(A51)		Engine management ECU	ME749	ME749 NSA	ME749 Flex Fuel	Actuation Test		Y		
C3(A51)		Engine management ECU	ME749	ME749 NSA	ME749 Flex Fuel	Special Function	Configuration	Y		
C3(A51)		Engine management ECU	ME749	ME749 NSA	ME749 Flex Fuel	Special Function	Pack Repair	Y		
C3(A51)		Engine management ECU	ME749	ME749 NSB	ME749 No Flex Fuel	Read ECU Information		Y		
C3(A51)		Engine management ECU	ME749	ME749 NSB	ME749 No Flex Fuel	Read Fault Code		Y		
C3(A51)		Engine management ECU	ME749	ME749 NSB	ME749 No Flex Fuel	Erase Fault Code		Y		
C3(A51)		Engine management ECU	ME749	ME749 NSB	ME749 No Flex Fuel	Live Data		Y		
C3(A51)		Engine management ECU	ME749	ME749 NSB	ME749 No Flex Fuel	Actuation Test		Y		
C3(A51)		Engine management ECU	ME749	ME749 NSB	ME749 No Flex Fuel	Special Function	Configuration	Y		
C3(A51)		Engine management ECU	ME749	ME749 NSB	ME749 No Flex Fuel	Special Function	Pack Repair	Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
C3(A151)		Air bags and pre-tensioners control unit				Read ECU Information		Y		
C3(A151)		Air bags and pre-tensioners control unit				Read Fault Code		Y		
C3(A151)		Air bags and pre-tensioners control unit				Erase Fault Code		Y		
C3(A151)		Air bags and pre-tensioners control unit				Live Data		Y		
C3(A151)		Air bags and pre-tensioners control unit				Special Function	Configuration	Y		
C3(A151)		Air bags and pre-tensioners control unit				Special Function	Pack Repair	Y		
C3(A151)		Power steering				Read ECU Information		Y		
C3(A151)		Power steering				Read Fault Code		Y		
C3(A151)		Power steering				Erase Fault Code		Y		
C3(A151)		Power steering				Live Data		Y		
C3(A151)		Power steering				Actuation Test		Y		
C3(A151)		Power steering				Special Function	Configuration	Y		
C3(A151)		Trailer relay unit				Read ECU Information		Y		
C3(A151)		Trailer relay unit				Read Fault Code		Y		
C3(A151)		Trailer relay unit				Erase Fault Code		Y		
C3(A151)		Trailer relay unit				Live Data		Y		
C3(A151)		Trailer relay unit				Actuation Test		Y		
C3(A151)		Telematic unit (OTA) or audio-navigation	RADIONAV, RNSE, ECD			Read ECU Information		Y		
C3(A151)		Telematic unit (OTA) or audio-navigation	RADIONAV, RNSE, ECD			Read Fault Code		Y		
C3(A151)		Telematic unit (OTA) or audio-navigation	RADIONAV, RNSE, ECD			Erase Fault Code		Y		
C3(A151)		Telematic unit (OTA) or audio-navigation	RADIONAV, RNSE, ECD			Live Data		Y		
C3(A151)		Telematic unit (OTA) or audio-navigation	RADIONAV, RNSE, ECD			Actuation Test		Y		
C3(A151)		Telematic unit (OTA) or audio-navigation	RADIONAV, RNSE, ECD			Special Function	Configuration	Y		
C3(A151)		Telematic unit (OTA) or audio-navigation	SMES, PLUS			Read ECU Information		Y		
C3(A151)		Telematic unit (OTA) or audio-navigation	SMES, PLUS			Read Fault Code		Y		
C3(A151)		Telematic unit (OTA) or audio-navigation	SMES, PLUS			Erase Fault Code		Y		
C3(A151)		Telematic unit (OTA) or audio-navigation	SMES, PLUS			Live Data		Y		
C3(A151)		Telematic unit (OTA) or audio-navigation	SMES, PLUS			Actuation Test		Y		
C3(A151)		Telematic unit (OTA) or audio-navigation	SMES, PLUS			Special Function	Configuration	Y		
C3(A151)		Instrument panel				Read ECU Information		Y		
C3(A151)		Instrument panel				Read Fault Code		Y		
C3(A151)		Instrument panel				Erase Fault Code		Y		
C3(A151)		Instrument panel				Live Data		Y		
C3(A151)		Instrument panel				Actuation Test		Y		
C3(A151)		Radio	RD6			Read ECU Information		Y		
C3(A151)		Radio	RD6			Read Fault Code		Y		
C3(A151)		Radio	RD6			Erase Fault Code		Y		
C3(A151)		Radio	RD6			Live Data		Y		
C3(A151)		Radio	RD6			Actuation Test		Y		
C3(A151)		Radio	RD6			Special Function	Configuration	Y		
C3(A151)		Radio	RD6			Read ECU Information		Y		
C3(A151)		Radio	RD6			Read Fault Code		Y		
C3(A151)		Radio	RD6			Erase Fault Code		Y		
C3(A151)		Radio	RD6			Live Data		Y		
C3(A151)		Radio	RD6			Actuation Test		Y		
C3(A151)		Radio	RD6			Special Function	Configuration	Y		
C3(A151)		Anti-theft alarm				Read ECU Information		Y		
C3(A151)		Anti-theft alarm				Read Fault Code		Y		
C3(A151)		Anti-theft alarm				Erase Fault Code		Y		
C3(A151)		Anti-theft alarm				Live Data		Y		
C3(A151)		Anti-theft alarm				Actuation Test		Y		
C3(A151)		Anti-theft alarm				Special Function	Configuration	Y		
C3(A151)		Air conditioning				Read ECU Information		Y		
C3(A151)		Air conditioning				Read Fault Code		Y		
C3(A151)		Air conditioning				Erase Fault Code		Y		
C3(A151)		Air conditioning				Live Data		Y		
C3(A151)		Air conditioning				Actuation Test		Y		
C3(A151)		Air conditioning				Special Function	Configuration	Y		
C3(A151)		Air conditioning				Special Function	Pack Repair	Y		
C3(A151)		Parking assistance	AAS			Read ECU Information		Y		
C3(A151)		Parking assistance	AAS			Read Fault Code		Y		
C3(A151)		Parking assistance	AAS			Erase Fault Code		Y		
C3(A151)		Parking assistance	AAS			Live Data		Y		
C3(A151)		Parking assistance	AAS, IDS			Read ECU Information		Y		
C3(A151)		Parking assistance	AAS, IDS			Read Fault Code		Y		
C3(A151)		Parking assistance	AAS, IDS			Erase Fault Code		Y		
C3(A151)		Parking assistance	AAS, IDS			Live Data		Y		
C3(A151)		Parking assistance	AAS, IDS			Actuation Test		Y		
C3(A151)		Controls under the steering wheel				Read ECU Information		Y		
C3(A151)		Controls under the steering wheel				Read Fault Code		Y		
C3(A151)		Controls under the steering wheel				Erase Fault Code		Y		
C3(A151)		Controls under the steering wheel				Live Data		Y		
C3(A151)		Controls under the steering wheel				Actuation Test		Y		
C3(A151)		Controls under the steering wheel				Special Function	Pack Repair	Y		
C3(A151)		Rain and light sensor				Read ECU Information		Y		
C3(A151)		Rain and light sensor				Read Fault Code		Y		
C3(A151)		Rain and light sensor				Erase Fault Code		Y		
C3(A151)		Service module / Independent telematic unit				Read ECU Information		Y		
C3(A151)		Service module / Independent telematic unit				Read Fault Code		Y		
C3(A151)		Service module / Independent telematic unit				Erase Fault Code		Y		
C3(A151)		Service module / Independent telematic unit				Live Data		Y		
C3(A151)		Service module / Independent telematic unit				Actuation Test		Y		
C3(A151)		Service module / Independent telematic unit				Special Function	Configuration	Y		
C3(B618)		Built-in Systems Interface				Read ECU Information		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function reasons	Add (Y/N)	Verification (Y/N)	Remarks
C3(D618)		Built-in Systems Interface				Read Fault Code		Y		
C3(D618)		Built-in Systems Interface				Erase Fault Code		Y		
C3(D618)		Built-in Systems Interface				Special Function	Maintenance-BSI operating mode	Y		
C3(D618)		Built-in Systems Interface				Special Function	Pack repair	Y		
C3(D618)		Engine management ECU	VD46			Read ECU Information		Y		
C3(D618)		Engine management ECU	VD46			Read Fault Code		Y		
C3(D618)		Engine management ECU	VD46			Erase Fault Code		Y		
C3(D618)		Engine management ECU	VD46			Live Data		Y		
C3(D618)		Engine management ECU	VD46			Actuation Test		Y		
C3(D618)		Engine management ECU	VD46			Special Function	Pack repair	Y		
C3(D618)		Engine management ECU	EDC17C00			Read ECU Information		Y		
C3(D618)		Engine management ECU	EDC17C00			Read Fault Code		Y		
C3(D618)		Engine management ECU	EDC17C00			Erase Fault Code		Y		
C3(D618)		Engine management ECU	EDC17C00			Live Data		Y		
C3(D618)		Engine management ECU	EDC17C00			Actuation Test		Y		
C3(D618)		Engine management ECU	EDC17C00			Special Function	Pack repair	Y		
C3(D618)		Engine management ECU	V46			Read ECU Information		Y		
C3(D618)		Engine management ECU	V46			Read Fault Code		Y		
C3(D618)		Engine management ECU	V46			Erase Fault Code		Y		
C3(D618)		Engine management ECU	V46			Live Data		Y		
C3(D618)		Engine management ECU	V46			Actuation Test		Y		
C3(D618)		Engine management ECU	V46			Special Function	Pack repair	Y		
C3(D618)		Engine management ECU	V46_21			Read ECU Information		Y		
C3(D618)		Engine management ECU	V46_21			Read Fault Code		Y		
C3(D618)		Engine management ECU	V46_21			Erase Fault Code		Y		
C3(D618)		Engine management ECU	V46_21			Live Data		Y		
C3(D618)		Engine management ECU	V46_21			Actuation Test		Y		
C3(D618)		Engine management ECU	V46_21			Special Function	Pack repair	Y		
C3(D618)		Engine management ECU	EDC17C10_B82			Read ECU Information		Y		
C3(D618)		Engine management ECU	EDC17C10_B82			Read Fault Code		Y		
C3(D618)		Engine management ECU	EDC17C10_B82			Erase Fault Code		Y		
C3(D618)		Engine management ECU	EDC17C10_B82			Live Data		Y		
C3(D618)		Engine management ECU	EDC17C10_B82			Actuation Test		Y		
C3(D618)		Engine management ECU	EDC17C10_B82			Special Function	Pack repair	Y		
C3(D618)		Engine management ECU	EDC17C10_B82			Special Function	Configuration	Y		
C3(D618)		Engine management ECU	OMI_V56			Read ECU Information		Y		
C3(D618)		Engine management ECU	OMI_V56			Read Fault Code		Y		
C3(D618)		Engine management ECU	OMI_V56			Erase Fault Code		Y		
C3(D618)		Engine management ECU	OMI_V56			Live Data		Y		
C3(D618)		Engine management ECU	OMI_V56			Special Function	Pack repair	Y		
C3(D618)		Engine management ECU	OMI_ME1CS003			Read ECU Information		Y		
C3(D618)		Engine management ECU	OMI_ME1CS003			Read Fault Code		Y		
C3(D618)		Engine management ECU	OMI_ME1CS003			Erase Fault Code		Y		
C3(D618)		Engine management ECU	OMI_ME1CS003			Live Data		Y		
C3(D618)		Engine management ECU	OMI_ME1CS003			Special Function	Pack repair	Y		
C3(D618)		Engine management ECU	ME017_4_4			Read ECU Information		Y		
C3(D618)		Engine management ECU	ME017_4_4			Read Fault Code		Y		
C3(D618)		Engine management ECU	ME017_4_4			Erase Fault Code		Y		
C3(D618)		Engine management ECU	ME017_4_4			Live Data		Y		
C3(D618)		Engine management ECU	ME017_4_4			Actuation Test		Y		
C3(D618)		Engine management ECU	ME017_4_4			Special Function	Pack Repair	Y		
C3(D618)		Engine management ECU	OMI_V056			Read ECU Information		Y		
C3(D618)		Engine management ECU	OMI_V056			Read Fault Code		Y		
C3(D618)		Engine management ECU	OMI_V056			Erase Fault Code		Y		
C3(D618)		Engine management ECU	OMI_V056			Live Data		Y		
C3(D618)		Engine management ECU	OMI_V056			Special Function	Pack repair	Y		
C3(D618)		Diesel additive pump				Read ECU Information		Y		
C3(D618)		Diesel additive pump				Read Fault Code		Y		
C3(D618)		Diesel additive pump				Erase Fault Code		Y		
C3(D618)		Diesel additive pump				Live Data		Y		
C3(D618)		Diesel additive pump				Actuation Test		Y		
C3(D618)		Voltage retaining device				Read ECU Information		Y		
C3(D618)		Voltage retaining device				Read Fault Code		Y		
C3(D618)		Voltage retaining device				Erase Fault Code		Y		
C3(D618)		Automatic gearbox or controlled manual gearbox				Read ECU Information		Y		
C3(D618)		Automatic gearbox or controlled manual gearbox				Read Fault Code		Y		
C3(D618)		Automatic gearbox or controlled manual gearbox				Erase Fault Code		Y		
C3(D618)		Automatic gearbox or controlled manual gearbox				Live Data		Y		
C3(D618)		Automatic gearbox or controlled manual gearbox				Actuation Test		Y		
C3(D618)		Power steering				Read ECU Information		Y		
C3(D618)		Power steering				Read Fault Code		Y		
C3(D618)		Power steering				Erase Fault Code		Y		
C3(D618)		Power steering				Live Data		Y		
C3(D618)		Power steering				Actuation Test		Y		
C3(D618)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)				Read ECU Information		Y		
C3(D618)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)				Read Fault Code		Y		
C3(D618)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)				Erase Fault Code		Y		
C3(D618)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)				Live Data		Y		
C3(D618)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)				Actuation Test		Y		
C3(D618)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)				Special Function	Pack repair	Y		
C3(D618)		Trailer relay unit				Read ECU Information		Y		
C3(D618)		Trailer relay unit				Read Fault Code		Y		
C3(D618)		Trailer relay unit				Erase Fault Code		Y		
C3(D618)		Trailer relay unit				Live Data		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
C3(D618)		Trailer relay unit				Actuation Test		Y		
C3(D618)		Battery charge status unit				Read ECU Information		Y		
C3(D618)		Battery charge status unit				Read Fault Code		Y		
C3(D618)		Battery charge status unit				Erase Fault Code		Y		
C3(D618)		Battery charge status unit				Live Data		Y		
C3(D618)		Electric steering lock				Read ECU Information		Y		
C3(D618)		Electric steering lock				Read Fault Code		Y		
C3(D618)		Electric steering lock				Erase Fault Code		Y		
C3(D618)		Electric steering lock				Live Data		Y		
C3(D618)		Instrument panel				Read ECU Information		Y		
C3(D618)		Instrument panel				Read Fault Code		Y		
C3(D618)		Instrument panel				Erase Fault Code		Y		
C3(D618)		Instrument panel				Live Data		Y		
C3(D618)		Instrument panel				Actuation Test		Y		
C3(D618)		Controls under the steering wheel				Read ECU Information		Y		
C3(D618)		Controls under the steering wheel				Read Fault Code		Y		
C3(D618)		Controls under the steering wheel				Erase Fault Code		Y		
C3(D618)		Controls under the steering wheel				Live Data		Y		
C3(D618)		Controls under the steering wheel				Actuation Test		Y		
C3(D618)		Controls under the steering wheel				Special Function	Pack repair	Y		
C3(D618)		Control on the steering wheel / integral controls steering wheel				Read ECU Information		Y		
C3(D618)		Control on the steering wheel / integral controls steering wheel				Read Fault Code		Y		
C3(D618)		Control on the steering wheel / integral controls steering wheel				Erase Fault Code		Y		
C3(D618)		Control on the steering wheel / integral controls steering wheel				Live Data		Y		
C3(D618)		Multiplexed control panel	Radio/MAC			Read ECU Information		Y		
C3(D618)		Multiplexed control panel	Radio/MAC			Read Fault Code		Y		
C3(D618)		Multiplexed control panel	Radio/MAC			Erase Fault Code		Y		
C3(D618)		Multiplexed control panel	Radio/MAC			Live Data		Y		
C3(D618)		Air bags and pre-tensioners control unit				Read ECU Information		Y		
C3(D618)		Air bags and pre-tensioners control unit				Read Fault Code		Y		
C3(D618)		Air bags and pre-tensioners control unit				Erase Fault Code		Y		
C3(D618)		Air bags and pre-tensioners control unit				Live Data		Y		
C3(D618)		Seat belt not fastened warning lights unit				Read ECU Information		Y		
C3(D618)		Seat belt not fastened warning lights unit				Actuation Test		Y		
C3(D618)		Rain and brightness sensor				Read ECU Information		Y		
C3(D618)		Rain and brightness sensor				Read Fault Code		Y		
C3(D618)		Rain and brightness sensor				Erase Fault Code		Y		
C3(D618)		Rain and brightness sensor				Live Data		Y		
C3(D618)		Multifunction video camera(MF)				Read ECU Information		Y		
C3(D618)		Multifunction video camera(MF)				Read Fault Code		Y		
C3(D618)		Multifunction video camera(MF)				Erase Fault Code		Y		
C3(D618)		Multifunction video camera(MF)				Live Data		Y		
C3(D618)		Multifunction video camera(MF)				Actuation Test		Y		
C3(D618)		Parking assistance				Read ECU Information		Y		
C3(D618)		Parking assistance				Read Fault Code		Y		
C3(D618)		Parking assistance				Erase Fault Code		Y		
C3(D618)		Parking assistance				Live Data		Y		
C3(D618)		Parking assistance				Actuation Test		Y		
C3(D618)		Multifunction screen				Read ECU Information		Y		
C3(D618)		Multifunction screen				Read Fault Code		Y		
C3(D618)		Multifunction screen				Erase Fault Code		Y		
C3(D618)		Multifunction screen				Actuation Test		Y		
C3(D618)		Touch screen				Read ECU Information		Y		
C3(D618)		Touch screen				Read Fault Code		Y		
C3(D618)		Touch screen				Erase Fault Code		Y		
C3(D618)		Touch screen				Live Data		Y		
C3(D618)		Touch screen				Actuation Test		Y		
C3(D618)		Audio-navigation/telematic unit/connected audio system	MAC			Read ECU Information		Y		
C3(D618)		Audio-navigation/telematic unit/connected audio system	MAC			Read Fault Code		Y		
C3(D618)		Audio-navigation/telematic unit/connected audio system	MAC			Erase Fault Code		Y		
C3(D618)		Audio-navigation/telematic unit/connected audio system	MAC			Live Data		Y		
C3(D618)		Audio-navigation/telematic unit/connected audio system	MAC			Actuation Test		Y		
C3(D618)		Audio-navigation/telematic unit/connected audio system	ECU			Read ECU Information		Y		
C3(D618)		Audio-navigation/telematic unit/connected audio system	ECU			Read Fault Code		Y		
C3(D618)		Audio-navigation/telematic unit/connected audio system	ECU			Erase Fault Code		Y		
C3(D618)		Audio-navigation/telematic unit/connected audio system	ECU			Live Data		Y		
C3(D618)		Audio-navigation/telematic unit/connected audio system	ECU			Actuation Test		Y		
C3(D618)		Audio-navigation/telematic unit/connected audio system	ECU			Read ECU Information		Y		
C3(D618)		Audio-navigation/telematic unit/connected audio system	ECU			Read Fault Code		Y		
C3(D618)		Audio-navigation/telematic unit/connected audio system	ECU			Erase Fault Code		Y		
C3(D618)		Audio-navigation/telematic unit/connected audio system	ECU			Live Data		Y		
C3(D618)		Audio-navigation/telematic unit/connected audio system	ECU			Actuation Test		Y		
C3(D618)		Radio				Read ECU Information		Y		
C3(D618)		Radio				Read Fault Code		Y		
C3(D618)		Radio				Erase Fault Code		Y		
C3(D618)		Radio				Live Data		Y		
C3(D618)		Radio				Actuation Test		Y		
C3(D618)		Audio system control panel				Read ECU Information		Y		
C3(D618)		Audio system control panel				Read Fault Code		Y		
C3(D618)		Audio system control panel				Erase Fault Code		Y		
C3(D618)		Audio system control panel				Live Data		Y		
C3(D618)		Audio system control panel				Actuation Test		Y		
C3(D618)		Service module / Independent telematic unit	BFA 2			Read ECU Information		Y		
C3(D618)		Service module / Independent telematic unit	BFA 2			Read Fault Code		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
C3(D618)		Service module / Independent telematic unit	BTA_2			Erase Fault Code		Y		
C3(D618)		Service module / Independent telematic unit	BTA_2			Live Data		Y		
C3(D618)		Service module / Independent telematic unit	BTA_2			Actuation Test		Y		
C3(D618)		Service module / Independent telematic unit	BTA_3S			Read ECU Information		Y		
C3(D618)		Service module / Independent telematic unit	BTA_3S			Read Fault Code		Y		
C3(D618)		Service module / Independent telematic unit	BTA_3S			Erase Fault Code		Y		
C3(D618)		Service module / Independent telematic unit	BTA_3S			Live Data		Y		
C3(D618)		External CD player				Read ECU Information		Y		
C3(D618)		External CD player				Read Fault Code		Y		
C3(D618)		External CD player				Erase Fault Code		Y		
C3(D618)		External CD player				Live Data		Y		
C3(D618)		External CD player				Actuation Test		Y		
C3(D618)		Intrusion alarm siren				Read ECU Information		Y		
C3(D618)		Intrusion alarm siren				Read Fault Code		Y		
C3(D618)		Intrusion alarm siren				Erase Fault Code		Y		
C3(D618)		Intrusion alarm siren				Live Data		Y		
C3(D618)		Intrusion alarm siren				Actuation Test		Y		
C3(D618)		Air conditioning	BCC			Read ECU Information		Y		
C3(D618)		Air conditioning	BCC			Read Fault Code		Y		
C3(D618)		Air conditioning	BCC			Erase Fault Code		Y		
C3(D618)		Air conditioning	BCC			Live Data		Y		
C3(D618)		Air conditioning	BCC			Actuation Test		Y		
C3(D618)		Air conditioning	CH_MUX			Read ECU Information		Y		
C3(D618)		Air conditioning	CH_MUX			Read Fault Code		Y		
C3(D618)		Air conditioning	CH_MUX			Erase Fault Code		Y		
C3(D618)		Air conditioning	CH_MUX			Live Data		Y		
C3(D618)		Air conditioning	CH_MUX			Actuation Test		Y		
C3(D618)		Air conditioning	RF_MUX			Read ECU Information		Y		
C3(D618)		Air conditioning	RF_MUX			Read Fault Code		Y		
C3(D618)		Air conditioning	RF_MUX			Erase Fault Code		Y		
C3(D618)		Air conditioning	RF_MUX			Live Data		Y		
C3(D618)		Air conditioning	RF_MUX			Actuation Test		Y		
C3 PICASSO		Engine ECU	Petrol engine	SPW MEV17.4		Read ECU Information		Y		
C3 PICASSO		Engine ECU	Petrol engine	SPW MEV17.4		Read Fault Code		Y		
C3 PICASSO		Engine ECU	Petrol engine	SPW MEV17.4		Erase Fault Code		Y		
C3 PICASSO		Engine ECU	Petrol engine	SPW MEV17.4		Live Data		Y		
C3 PICASSO		Engine ECU	Petrol engine	SPW MEV17.4		Actuation Test		Y		
C3 PICASSO		Engine ECU	Petrol engine	SPW MEV17.4		Special Function	Initialisation of the autoadaptive values	Y		
C3 PICASSO		Engine ECU	Petrol engine	SPW MEV17.4		Special Function	Replacement parts	Y		
C3 PICASSO		Engine ECU	Petrol engine	SPW MEV17.4		Special Function	Configuration	Y		
C3 PICASSO		Engine ECU	Petrol engine	SFS MEV17.4		Read ECU Information		Y		
C3 PICASSO		Engine ECU	Petrol engine	SFS MEV17.4		Read Fault Code		Y		
C3 PICASSO		Engine ECU	Petrol engine	SFS MEV17.4		Erase Fault Code		Y		
C3 PICASSO		Engine ECU	Petrol engine	SFS MEV17.4		Live Data		Y		
C3 PICASSO		Engine ECU	Petrol engine	SFS MEV17.4		Actuation Test		Y		
C3 PICASSO		Engine ECU	Petrol engine	SFS MEV17.4		Special Function	Initialisation of the autoadaptive values	Y		
C3 PICASSO		Engine ECU	Petrol engine	SFS MEV17.4		Special Function	Replacement parts	Y		
C3 PICASSO		Engine ECU	Petrol engine	SFS MEV17.4		Special Function	Configuration	Y		
C3 PICASSO		Engine ECU	Petrol engine	SFP MEV17.4		Read ECU Information		Y		
C3 PICASSO		Engine ECU	Petrol engine	SFP MEV17.4		Read Fault Code		Y		
C3 PICASSO		Engine ECU	Petrol engine	SFP MEV17.4		Erase Fault Code		Y		
C3 PICASSO		Engine ECU	Petrol engine	SFP MEV17.4		Live Data		Y		
C3 PICASSO		Engine ECU	Petrol engine	SFP MEV17.4		Actuation Test		Y		
C3 PICASSO		Engine ECU	Petrol engine	SFP MEV17.4		Special Function	Initialisation of the autoadaptive values	Y		
C3 PICASSO		Engine ECU	Petrol engine	SFP MEV17.4		Special Function	Replacement parts	Y		
C3 PICASSO		Engine ECU	Petrol engine	SFP MEV17.4		Special Function	Configuration	Y		
C3 PICASSO		Engine ECU	Petrol engine	SFS MEV17.4		Read ECU Information		Y		
C3 PICASSO		Engine ECU	Petrol engine	SFS MEV17.4		Read Fault Code		Y		
C3 PICASSO		Engine ECU	Petrol engine	SFS MEV17.4		Erase Fault Code		Y		
C3 PICASSO		Engine ECU	Petrol engine	SFS MEV17.4		Live Data		Y		
C3 PICASSO		Engine ECU	Petrol engine	SFS MEV17.4		Actuation Test		Y		
C3 PICASSO		Engine ECU	Petrol engine	SFS MEV17.4		Special Function	Initialisation of the autoadaptive values	Y		
C3 PICASSO		Engine ECU	Petrol engine	SFS MEV17.4		Special Function	Replacement parts	Y		
C3 PICASSO		Engine ECU	Petrol engine	SFS MEV17.4		Special Function	Configuration	Y		
C3 PICASSO		Engine ECU	Petrol engine	EP9C SFS MEV17.4_2		Read ECU Information		Y		
C3 PICASSO		Engine ECU	Petrol engine	EP9C SFS MEV17.4_2		Read Fault Code		Y		
C3 PICASSO		Engine ECU	Petrol engine	EP9C SFS MEV17.4_2		Erase Fault Code		Y		
C3 PICASSO		Engine ECU	Petrol engine	EP9C SFS MEV17.4_2		Live Data		Y		
C3 PICASSO		Engine ECU	Petrol engine	EP9C SFS MEV17.4_2		Actuation Test		Y		
C3 PICASSO		Engine ECU	Petrol engine	EP9C SFS MEV17.4_2		Special Function	Initialisation of the autoadaptive values	Y		
C3 PICASSO		Engine ECU	Petrol engine	EP9C SFS MEV17.4_2		Special Function	Replacement parts	Y		
C3 PICASSO		Engine ECU	Petrol engine	EP9C SFS MEV17.4_2		Special Function	Configuration	Y		
C3 PICASSO		Engine ECU	Petrol engine	EP3C SFP MEV17.4_2		Read ECU Information		Y		
C3 PICASSO		Engine ECU	Petrol engine	EP3C SFP MEV17.4_2		Read Fault Code		Y		
C3 PICASSO		Engine ECU	Petrol engine	EP3C SFP MEV17.4_2		Erase Fault Code		Y		
C3 PICASSO		Engine ECU	Petrol engine	EP3C SFP MEV17.4_2		Live Data		Y		
C3 PICASSO		Engine ECU	Petrol engine	EP3C SFP MEV17.4_2		Actuation Test		Y		
C3 PICASSO		Engine ECU	Petrol engine	EP3C SFP MEV17.4_2		Special Function	Initialisation of the autoadaptive values	Y		
C3 PICASSO		Engine ECU	Petrol engine	EP3C SFP MEV17.4_2		Special Function	Replacement parts	Y		
C3 PICASSO		Engine ECU	Petrol engine	EP3C SFP MEV17.4_2		Special Function	Configuration	Y		
C3 PICASSO		Engine ECU	Petrol engine	EP9CGAZ 8FN MEV17.4_2		Read ECU Information		Y		
C3 PICASSO		Engine ECU	Petrol engine	EP9CGAZ 8FN MEV17.4_2		Read Fault Code		Y		
C3 PICASSO		Engine ECU	Petrol engine	EP9CGAZ 8FN MEV17.4_2		Erase Fault Code		Y		
C3 PICASSO		Engine ECU	Petrol engine	EP9CGAZ 8FN MEV17.4_2		Live Data		Y		

CITROËN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
C3 PICASSO		Airbag				Special Function	Configuration	Y		
C3 PICASSO		Airbag				Special Function	Pack Repair	Y		
C3 PICASSO		BSI				Read ECU Information		Y		
C3 PICASSO		BSI				Read Fault Code		Y		
C3 PICASSO		BSI				Erase Fault Code		Y		
C3 PICASSO		BSI				Live Data		Y		
C3 PICASSO		BSI				Actuation Test		Y		
C3 PICASSO		BSI				Special Function	Maintenance-BSI operating mode	Y		
C3 PICASSO		Seat belt reminder LED				Read ECU Information		Y		
C3 PICASSO		Seat belt reminder LED				Actuation Test		Y		
C3 PICASSO		Instrument panel				Read ECU Information		Y		
C3 PICASSO		Instrument panel				Read Fault Code		Y		
C3 PICASSO		Instrument panel				Erase Fault Code		Y		
C3 PICASSO		Instrument panel				Live Data		Y		
C3 PICASSO		Instrument panel				Actuation Test		Y		
C3 PICASSO		Radio				Read ECU Information		Y		
C3 PICASSO		Radio				Read Fault Code		Y		
C3 PICASSO		Radio				Erase Fault Code		Y		
C3 PICASSO		Radio				Live Data		Y		
C3 PICASSO		Radio				Actuation Test		Y		
C3 PICASSO		Radio				Special Function	Configuration	Y		
C3 PICASSO		Radio				Special Function	Pack Repair	Y		
C3 PICASSO		Parking assistance				Read ECU Information		Y		
C3 PICASSO		Parking assistance				Read Fault Code		Y		
C3 PICASSO		Parking assistance				Erase Fault Code		Y		
C3 PICASSO		Parking assistance				Live Data		Y		
C3 PICASSO		Parking assistance				Actuation Test		Y		
C3 PICASSO		Parking assistance				Special Function	Configuration	Y		
C3 PICASSO		Parking assistance				Special Function	Pack Repair	Y		
C3 PICASSO		Air conditioning				Read ECU Information		Y		
C3 PICASSO		Air conditioning				Read Fault Code		Y		
C3 PICASSO		Air conditioning				Erase Fault Code		Y		
C3 PICASSO		Air conditioning				Live Data		Y		
C3 PICASSO		Air conditioning				Special Function	Learning	Y		
C3 PICASSO		Air conditioning				Special Function	Configuration	Y		
C3 PICASSO		Air conditioning				Special Function	Pack Repair	Y		
C3 PICASSO		Alarm				Read ECU Information		Y		
C3 PICASSO		Alarm				Read Fault Code		Y		
C3 PICASSO		Alarm				Erase Fault Code		Y		
C3 PICASSO		Alarm				Live Data		Y		
C3 PICASSO		Alarm				Actuation Test		Y		
C3 PICASSO		Alarm				Special Function	Configuration	Y		
C3 PICASSO		Alarm				Special Function	Pack Repair	Y		
C3 PICASSO		Switch module under the steering wheel				Read ECU Information		Y		
C3 PICASSO		Switch module under the steering wheel				Read Fault Code		Y		
C3 PICASSO		Switch module under the steering wheel				Erase Fault Code		Y		
C3 PICASSO		Switch module under the steering wheel				Live Data		Y		
C3 PICASSO		Switch module under the steering wheel				Actuation Test		Y		
C3 PICASSO		Rain sensor/Brightness				Read ECU Information		Y		
C3 PICASSO		Rain sensor/Brightness				Read Fault Code		Y		
C3 PICASSO		Rain sensor/Brightness				Erase Fault Code		Y		
C3 PICASSO		Multifunction screen (EMF)	Type "A" (segments)			Read ECU Information		Y		
C3 PICASSO		Multifunction screen (EMF)	Type "A" (segments)			Read Fault Code		Y		
C3 PICASSO		Multifunction screen (EMF)	Type "A" (segments)			Erase Fault Code		Y		
C3 PICASSO		Multifunction screen (EMF)	Type "A" (segments)			Live Data		Y		
C3 PICASSO		Multifunction screen (EMF)	Type "A" (segments)			Actuation Test		Y		
C3 PICASSO		Multifunction screen (EMF)	Type "A" (segments)			Special Function	Configuration	Y		
C3 PICASSO		Multifunction screen (EMF)	Type "A" (segments)			Special Function	Pack Repair	Y		
C3 PICASSO		Multifunction screen (EMF)	Type "C" (dot matrix)			Read ECU Information		Y		
C3 PICASSO		Multifunction screen (EMF)	Type "C" (dot matrix)			Read Fault Code		Y		
C3 PICASSO		Multifunction screen (EMF)	Type "C" (dot matrix)			Erase Fault Code		Y		
C3 PICASSO		Multifunction screen (EMF)	Type "C" (dot matrix)			Live Data		Y		
C3 PICASSO		Multifunction screen (EMF)	Type "C" (dot matrix)			Actuation Test		Y		
C3 PICASSO		Multifunction screen (EMF)	Type "C" (dot matrix)			Special Function	Configuration	Y		
C3 PICASSO		Multifunction screen (EMF)	Type "C" (dot matrix)			Special Function	Pack Repair	Y		
C3 PICASSO		Telematic	RNDS navigation radio			Read ECU Information		Y		
C3 PICASSO		Telematic	RNDS navigation radio			Read Fault Code		Y		
C3 PICASSO		Telematic	RNDS navigation radio			Erase Fault Code		Y		
C3 PICASSO		Telematic	RNDS navigation radio			Live Data		Y		
C3 PICASSO		Telematic	RNDS navigation radio			Actuation Test		Y		
C3 PICASSO		Telematic	RNDS navigation radio			Special Function	Configuration	Y		
C3 PICASSO		Multiplexed diesel additive pump				Read ECU Information		Y		
C3 PICASSO		Multiplexed diesel additive pump				Read Fault Code		Y		
C3 PICASSO		Multiplexed diesel additive pump				Erase Fault Code		Y		
C3 PICASSO		Multiplexed diesel additive pump				Live Data		Y		
C3 PICASSO		Multiplexed diesel additive pump				Actuation Test		Y		
C3 PICASSO		Multiplexed diesel additive pump				Special Function	Configuration	Y		
C3 PICASSO		Engine relay unit				Read ECU Information		Y		
C3 PICASSO		Engine relay unit				Read Fault Code		Y		
C3 PICASSO		Engine relay unit				Erase Fault Code		Y		
C3 PICASSO		Engine relay unit				Live Data		Y		
C3 PICASSO		Engine relay unit				Actuation Test		Y		
C3 PICASSO		Trailer relay unit				Read ECU Information		Y		
C3 PICASSO		Trailer relay unit				Read Fault Code		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
C3 PICASSO		Trailer relay unit				Erase Fault Code		Y		
C3 PICASSO		Trailer relay unit				Live Data		Y		
C3 PICASSO		Trailer relay unit				Actuation Test		Y		
C3 PICASSO		Power steering				Read ECU Information		Y		
C3 PICASSO		Power steering				Read Fault Code		Y		
C3 PICASSO		Power steering				Erase Fault Code		Y		
C3 PICASSO		Power steering				Live Data		Y		
C3 PICASSO		Hands Free Kit				Read ECU Information		Y		
C3 PICASSO		Hands Free Kit				Read Fault Code		Y		
C3 PICASSO		Hands Free Kit				Erase Fault Code		Y		
C3 PICASSO		Hands Free Kit				Live Data		Y		
C3 PICASSO		Hands Free Kit				Actuation Test		Y		
C3 PICASSO		Hands Free Kit				Special Function	Configuration	Y		
C3 PICASSO		Hands Free Kit				Special Function	Pack Repair	Y		
C3 PICASSO		Driver's door control panel				Read ECU Information		Y		
C3 PICASSO		Driver's door control panel				Read Fault Code		Y		
C3 PICASSO		Driver's door control panel				Erase Fault Code		Y		
C3 PICASSO		Driver's door control panel				Live Data		Y		
C3 PICASSO		Driver's door control panel				Actuation Test		Y		
C3 PICASSO		Services module				Read ECU Information		Y		
C3 PICASSO		Services module				Read Fault Code		Y		
C3 PICASSO		Services module				Erase Fault Code		Y		
C3 PICASSO		Services module				Live Data		Y		
C3 PICASSO		Services module				Actuation Test		Y		
C3 PICASSO		Services module				Special Function	Configuration	Y		
C3 PICASSO		Services module				Special Function	Pack Repair	Y		
C3 PICASSO		Battery charge status unit				Read ECU Information		Y		
C3 PICASSO		Battery charge status unit				Read Fault Code		Y		
C3 PICASSO		Battery charge status unit				Erase Fault Code		Y		
C3 PICASSO		Battery charge status unit				Live Data		Y		
C3 PICASSO		Battery charge status unit				Special Function	Configuration	Y		
C3 PICASSO		Learning				Special Function	Key programming	Y		
C3 PICASSO(04/80)		Built-in Systems Interface				Read ECU Information		Y		
C3 PICASSO(04/80)		Built-in Systems Interface				Read Fault Code		Y		
C3 PICASSO(04/80)		Built-in Systems Interface				Erase Fault Code		Y		
C3 PICASSO(04/80)		Built-in Systems Interface				Live Data		Y		
C3 PICASSO(04/80)		Built-in Systems Interface				Special Function	Maintenance-BSI operating mode	Y		
C3 PICASSO(04/80)		Engine management ECU	ME749	ME749 NSA	ME749 No Flex Fuel	Read ECU Information		Y		
C3 PICASSO(04/80)		Engine management ECU	ME749	ME749 NSA	ME749 No Flex Fuel	Read Fault Code		Y		
C3 PICASSO(04/80)		Engine management ECU	ME749	ME749 NSA	ME749 No Flex Fuel	Erase Fault Code		Y		
C3 PICASSO(04/80)		Engine management ECU	ME749	ME749 NSA	ME749 No Flex Fuel	Live Data		Y		
C3 PICASSO(04/80)		Engine management ECU	ME749	ME749 NSA	ME749 No Flex Fuel	Actuation Test		Y		
C3 PICASSO(04/80)		Engine management ECU	ME749	ME749 NSA	ME749 No Flex Fuel	Special Function	Configuration	Y		
C3 PICASSO(04/80)		Engine management ECU	ME749	ME749 NSA	ME749 No Flex Fuel	Special Function	Pack Repair	Y		
C3 PICASSO(04/80)		Engine management ECU	ME749	ME749 NSA	ME749 Flex Fuel	Read ECU Information		Y		
C3 PICASSO(04/80)		Engine management ECU	ME749	ME749 NSA	ME749 Flex Fuel	Read Fault Code		Y		
C3 PICASSO(04/80)		Engine management ECU	ME749	ME749 NSA	ME749 Flex Fuel	Erase Fault Code		Y		
C3 PICASSO(04/80)		Engine management ECU	ME749	ME749 NSA	ME749 Flex Fuel	Live Data		Y		
C3 PICASSO(04/80)		Engine management ECU	ME749	ME749 NSA	ME749 Flex Fuel	Actuation Test		Y		
C3 PICASSO(04/80)		Engine management ECU	ME749	ME749 NSA	ME749 Flex Fuel	Special Function	Configuration	Y		
C3 PICASSO(04/80)		Engine management ECU	ME749	ME749 NSA	ME749 Flex Fuel	Special Function	Pack Repair	Y		
C3 PICASSO(04/80)		Engine management ECU	ME749	ME749 NSA	ME749 No Flex Fuel	Read ECU Information		Y		
C3 PICASSO(04/80)		Engine management ECU	ME749	ME749 NSB	ME749 No Flex Fuel	Read Fault Code		Y		
C3 PICASSO(04/80)		Engine management ECU	ME749	ME749 NSB	ME749 No Flex Fuel	Erase Fault Code		Y		
C3 PICASSO(04/80)		Engine management ECU	ME749	ME749 NSB	ME749 No Flex Fuel	Live Data		Y		
C3 PICASSO(04/80)		Engine management ECU	ME749	ME749 NSB	ME749 Flex Fuel	Actuation Test		Y		
C3 PICASSO(04/80)		Engine management ECU	ME749	ME749 NSB	ME749 No Flex Fuel	Special Function	Configuration	Y		
C3 PICASSO(04/80)		Engine management ECU	ME749	ME749 NSB	ME749 No Flex Fuel	Special Function	Pack Repair	Y		
C3 PICASSO(04/80)		Engine management ECU	ME749	ME749 NSB	ME749 Flex Fuel	Read ECU Information		Y		
C3 PICASSO(04/80)		Engine management ECU	ME749	ME749 NSB	ME749 Flex Fuel	Read Fault Code		Y		
C3 PICASSO(04/80)		Engine management ECU	ME749	ME749 NSB	ME749 Flex Fuel	Erase Fault Code		Y		
C3 PICASSO(04/80)		Engine management ECU	ME749	ME749 NSB	ME749 Flex Fuel	Live Data		Y		
C3 PICASSO(04/80)		Engine management ECU	ME749	ME749 NSB	ME749 Flex Fuel	Actuation Test		Y		
C3 PICASSO(04/80)		Engine management ECU	ME749	ME749 NSB	ME749 Flex Fuel	Special Function	Configuration	Y		
C3 PICASSO(04/80)		Engine management ECU	ME749	ME749 NSB	ME749 Flex Fuel	Special Function	Pack Repair	Y		
C3 PICASSO(04/80)		Engine management ECU	ME749	ME749 NPU	ME749 No Flex Fuel	Read ECU Information		Y		
C3 PICASSO(04/80)		Engine management ECU	ME749	ME749 NPU	ME749 No Flex Fuel	Read Fault Code		Y		
C3 PICASSO(04/80)		Engine management ECU	ME749	ME749 NPU	ME749 No Flex Fuel	Erase Fault Code		Y		
C3 PICASSO(04/80)		Engine management ECU	ME749	ME749 NPU	ME749 No Flex Fuel	Live Data		Y		
C3 PICASSO(04/80)		Engine management ECU	ME749	ME749 NPU	ME749 No Flex Fuel	Actuation Test		Y		
C3 PICASSO(04/80)		Engine management ECU	ME749	ME749 NPU	ME749 No Flex Fuel	Special Function	Configuration	Y		
C3 PICASSO(04/80)		Engine management ECU	ME749	ME749 NPU	ME749 No Flex Fuel	Special Function	Pack Repair	Y		
C3 PICASSO(04/80)		Engine management ECU	ME749	ME749 NPU	ME749 Flex Fuel	Read ECU Information		Y		
C3 PICASSO(04/80)		Engine management ECU	ME749	ME749 NPU	ME749 Flex Fuel	Read Fault Code		Y		
C3 PICASSO(04/80)		Engine management ECU	ME749	ME749 NPU	ME749 Flex Fuel	Erase Fault Code		Y		
C3 PICASSO(04/80)		Engine management ECU	ME749	ME749 NPU	ME749 Flex Fuel	Live Data		Y		
C3 PICASSO(04/80)		Engine management ECU	ME749	ME749 NPU	ME749 Flex Fuel	Actuation Test		Y		
C3 PICASSO(04/80)		Engine management ECU	ME749	ME749 NPU	ME749 Flex Fuel	Special Function	Configuration	Y		
C3 PICASSO(04/80)		Engine management ECU	ME749	ME749 NPU	ME749 Flex Fuel	Special Function	Pack Repair	Y		
C3 PICASSO(04/80)		Engine management ECU	ME749_ECS	ME749_ECS NPP	ME749 ECS	Read ECU Information		Y		
C3 PICASSO(04/80)		Engine management ECU	ME749_ECS	ME749_ECS NPP	ME749 ECS	Read Fault Code		Y		
C3 PICASSO(04/80)		Engine management ECU	ME749_ECS	ME749_ECS NPP	ME749 ECS	Erase Fault Code		Y		
C3 PICASSO(04/80)		Engine management ECU	ME749_ECS	ME749_ECS NPP	ME749 ECS	Live Data		Y		
C3 PICASSO(04/80)		Engine management ECU	ME749_ECS	ME749_ECS NPP	ME749 ECS	Actuation Test		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function reasons	Add (Y/N)	Verification (Y/N)	Remarks
C3 PICASSO(04180)		Engine management ECU	ME749_ECS	ME749_ECS NPN		Special Function	Pack Repair	Y		
C3 PICASSO(04180)		Engine management ECU	ME749_ECS	ME749_ECS NPN		Read ECU Information		Y		
C3 PICASSO(04180)		Engine management ECU	ME749_ECS	ME749_ECS NPN		Read Fault Code		Y		
C3 PICASSO(04180)		Engine management ECU	ME749_ECS	ME749_ECS NPN		Erase Fault Code		Y		
C3 PICASSO(04180)		Engine management ECU	ME749_ECS	ME749_ECS NPN		Live Data		Y		
C3 PICASSO(04180)		Engine management ECU	ME749_ECS	ME749_ECS NPN		Actuation Test		Y		
C3 PICASSO(04180)		Engine management ECU	ME749_ECS	ME749_ECS NPN		Special Function	Pack Repair	Y		
C3 PICASSO(04180)		Engine management ECU	V34.4	V34.4 ESSENCE		Read ECU Information		Y		
C3 PICASSO(04180)		Engine management ECU	V34.4	V34.4 ESSENCE		Read Fault Code		Y		
C3 PICASSO(04180)		Engine management ECU	V34.4	V34.4 ESSENCE		Erase Fault Code		Y		
C3 PICASSO(04180)		Engine management ECU	V34.4	V34.4 ESSENCE		Live Data		Y		
C3 PICASSO(04180)		Engine management ECU	V34.4	V34.4 ESSENCE		Actuation Test		Y		
C3 PICASSO(04180)		Engine management ECU	V34.4	V34.4 ESSENCE		Special Function	Pack Repair	Y		
C3 PICASSO(04180)		Engine management ECU	V34.4	V34.4 FLEX FUEL		Read ECU Information		Y		
C3 PICASSO(04180)		Engine management ECU	V34.4	V34.4 FLEX FUEL		Read Fault Code		Y		
C3 PICASSO(04180)		Engine management ECU	V34.4	V34.4 FLEX FUEL		Erase Fault Code		Y		
C3 PICASSO(04180)		Engine management ECU	V34.4	V34.4 FLEX FUEL		Live Data		Y		
C3 PICASSO(04180)		Engine management ECU	V34.4	V34.4 FLEX FUEL		Actuation Test		Y		
C3 PICASSO(04180)		Engine management ECU	V34.4	V34.4 FLEX FUEL		Special Function	Pack Repair	Y		
C3 PICASSO(04180)		Engine management ECU	V34.5	V34.5 ESSENCE		Read ECU Information		Y		
C3 PICASSO(04180)		Engine management ECU	V34.5	V34.5 ESSENCE		Read Fault Code		Y		
C3 PICASSO(04180)		Engine management ECU	V34.5	V34.5 ESSENCE		Erase Fault Code		Y		
C3 PICASSO(04180)		Engine management ECU	V34.5	V34.5 ESSENCE		Live Data		Y		
C3 PICASSO(04180)		Engine management ECU	V34.5	V34.5 ESSENCE		Actuation Test		Y		
C3 PICASSO(04180)		Engine management ECU	V34.5	V34.5 ESSENCE		Special Function	Pack Repair	Y		
C3 PICASSO(04180)		Engine management ECU	V34.5	V34.5 FLEX FUEL		Read ECU Information		Y		
C3 PICASSO(04180)		Engine management ECU	V34.5	V34.5 FLEX FUEL		Read Fault Code		Y		
C3 PICASSO(04180)		Engine management ECU	V34.5	V34.5 FLEX FUEL		Erase Fault Code		Y		
C3 PICASSO(04180)		Engine management ECU	V34.5	V34.5 FLEX FUEL		Live Data		Y		
C3 PICASSO(04180)		Engine management ECU	V34.5	V34.5 FLEX FUEL		Actuation Test		Y		
C3 PICASSO(04180)		Engine management ECU	V34.5	V34.5 FLEX FUEL		Special Function	Pack Repair	Y		
C3 PICASSO(04180)		Engine management ECU	V46	Yes		Read ECU Information		Y		
C3 PICASSO(04180)		Engine management ECU	V46	Yes		Read Fault Code		Y		
C3 PICASSO(04180)		Engine management ECU	V46	Yes		Erase Fault Code		Y		
C3 PICASSO(04180)		Engine management ECU	V46	Yes		Live Data		Y		
C3 PICASSO(04180)		Engine management ECU	V46	Yes		Actuation Test		Y		
C3 PICASSO(04180)		Engine management ECU	V46	Yes		Special Function	Pack Repair	Y		
C3 PICASSO(04180)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ABS/MS70.1			Read ECU Information		Y		
C3 PICASSO(04180)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ABS/MS70.1			Read Fault Code		Y		
C3 PICASSO(04180)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ABS/MS70.1			Erase Fault Code		Y		
C3 PICASSO(04180)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ABS/MS70.1			Live Data		Y		
C3 PICASSO(04180)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ABS/MS70.1			Actuation Test		Y		
C3 PICASSO(04180)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ABS/MS70.1			Special Function	Configuration	Y		
C3 PICASSO(04180)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ABS/MS70.1			Special Function	Pack Repair	Y		
C3 PICASSO(04180)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP/MS60.0			Read ECU Information		Y		
C3 PICASSO(04180)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP/MS60.0			Read Fault Code		Y		
C3 PICASSO(04180)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP/MS60.0			Erase Fault Code		Y		
C3 PICASSO(04180)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP/MS60.0			Live Data		Y		
C3 PICASSO(04180)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP/MS60.0			Actuation Test		Y		
C3 PICASSO(04180)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP/MS60.0			Special Function	Configuration	Y		
C3 PICASSO(04180)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP/MS60.0			Special Function	Pack Repair	Y		
C3 PICASSO(04180)		Automatic gearbox or controlled manual gearbox				Read ECU Information		Y		
C3 PICASSO(04180)		Automatic gearbox or controlled manual gearbox				Read Fault Code		Y		
C3 PICASSO(04180)		Automatic gearbox or controlled manual gearbox				Erase Fault Code		Y		
C3 PICASSO(04180)		Automatic gearbox or controlled manual gearbox				Live Data		Y		
C3 PICASSO(04180)		Automatic gearbox or controlled manual gearbox				Actuation Test		Y		
C3 PICASSO(04180)		Automatic gearbox or controlled manual gearbox				Special Function	Configuration	Y		
C3 PICASSO(04180)		Automatic gearbox or controlled manual gearbox				Special Function	Pack Repair	Y		
C3 PICASSO(04180)		Air bags and pre-tensioners control unit				Read ECU Information		Y		
C3 PICASSO(04180)		Air bags and pre-tensioners control unit				Read Fault Code		Y		
C3 PICASSO(04180)		Air bags and pre-tensioners control unit				Erase Fault Code		Y		
C3 PICASSO(04180)		Air bags and pre-tensioners control unit				Live Data		Y		
C3 PICASSO(04180)		Air bags and pre-tensioners control unit				Special Function	Configuration	Y		
C3 PICASSO(04180)		Air bags and pre-tensioners control unit				Special Function	Pack Repair	Y		
C3 PICASSO(04180)		Power steering				Read ECU Information		Y		
C3 PICASSO(04180)		Power steering				Read Fault Code		Y		
C3 PICASSO(04180)		Power steering				Erase Fault Code		Y		
C3 PICASSO(04180)		Power steering				Live Data		Y		
C3 PICASSO(04180)		Power steering				Actuation Test		Y		
C3 PICASSO(04180)		Power steering				Special Function	Configuration	Y		
C3 PICASSO(04180)		Trailer relay unit				Read ECU Information		Y		
C3 PICASSO(04180)		Trailer relay unit				Read Fault Code		Y		
C3 PICASSO(04180)		Trailer relay unit				Erase Fault Code		Y		
C3 PICASSO(04180)		Trailer relay unit				Live Data		Y		
C3 PICASSO(04180)		Trailer relay unit				Actuation Test		Y		
C3 PICASSO(04180)		Telematic unit(OTA) or audio-navigation	RADIO/NAV_RN6G_ECO			Read ECU Information		Y		
C3 PICASSO(04180)		Telematic unit(OTA) or audio-navigation	RADIO/NAV_RN6G_ECO			Read Fault Code		Y		
C3 PICASSO(04180)		Telematic unit(OTA) or audio-navigation	RADIO/NAV_RN6G_ECO			Erase Fault Code		Y		
C3 PICASSO(04180)		Telematic unit(OTA) or audio-navigation	RADIO/NAV_RN6G_ECO			Live Data		Y		
C3 PICASSO(04180)		Telematic unit(OTA) or audio-navigation	RADIO/NAV_RN6G_ECO			Actuation Test		Y		
C3 PICASSO(04180)		Telematic unit(OTA) or audio-navigation	RADIO/NAV_RN6G_ECO			Special Function	Configuration	Y		
C3 PICASSO(04180)		Telematic unit(OTA) or audio-navigation	SM65_PLUS			Read ECU Information		Y		
C3 PICASSO(04180)		Telematic unit(OTA) or audio-navigation	SM65_PLUS			Read Fault Code		Y		
C3 PICASSO(04180)		Telematic unit(OTA) or audio-navigation	SM65_PLUS			Erase Fault Code		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
C3 PICASSO(04188)		Telematic unit (RTX) or audio/navigation	SME6 PLUS			Live Data		Y		
C3 PICASSO(04188)		Telematic unit (RTX) or audio/navigation	SME6 PLUS			Actuation Test		Y		
C3 PICASSO(04188)		Telematic unit (RTX) or audio/navigation	SME6 PLUS			Special Function	Configuration	Y		
C3 PICASSO(04188)		Instrument panel				Read ECU Information		Y		
C3 PICASSO(04188)		Instrument panel				Read Fault Code		Y		
C3 PICASSO(04188)		Instrument panel				Erase Fault Code		Y		
C3 PICASSO(04188)		Instrument panel				Live Data		Y		
C3 PICASSO(04188)		Instrument panel				Actuation Test		Y		
C3 PICASSO(04188)		Radio	RD6			Read ECU Information		Y		
C3 PICASSO(04188)		Radio	RD6			Read Fault Code		Y		
C3 PICASSO(04188)		Radio	RD6			Erase Fault Code		Y		
C3 PICASSO(04188)		Radio	RD6			Live Data		Y		
C3 PICASSO(04188)		Radio	RD6			Actuation Test		Y		
C3 PICASSO(04188)		Radio	RD6			Special Function	Configuration	Y		
C3 PICASSO(04188)		Radio	RD6			Read ECU Information		Y		
C3 PICASSO(04188)		Radio	RD6			Read Fault Code		Y		
C3 PICASSO(04188)		Radio	RD6			Erase Fault Code		Y		
C3 PICASSO(04188)		Radio	RD6			Live Data		Y		
C3 PICASSO(04188)		Radio	RD6			Actuation Test		Y		
C3 PICASSO(04188)		Radio	RD6			Special Function	Configuration	Y		
C3 PICASSO(04188)		Anti-theft alarm				Read ECU Information		Y		
C3 PICASSO(04188)		Anti-theft alarm				Read Fault Code		Y		
C3 PICASSO(04188)		Anti-theft alarm				Erase Fault Code		Y		
C3 PICASSO(04188)		Anti-theft alarm				Live Data		Y		
C3 PICASSO(04188)		Anti-theft alarm				Actuation Test		Y		
C3 PICASSO(04188)		Anti-theft alarm				Special Function	Configuration	Y		
C3 PICASSO(04188)		Air conditioning				Read ECU Information		Y		
C3 PICASSO(04188)		Air conditioning				Read Fault Code		Y		
C3 PICASSO(04188)		Air conditioning				Erase Fault Code		Y		
C3 PICASSO(04188)		Air conditioning				Live Data		Y		
C3 PICASSO(04188)		Air conditioning				Actuation Test		Y		
C3 PICASSO(04188)		Air conditioning				Special Function	Configuration	Y		
C3 PICASSO(04188)		Air conditioning				Special Function	Pack Repair	Y		
C3 PICASSO(04188)		Parking assistance	AAS			Read ECU Information		Y		
C3 PICASSO(04188)		Parking assistance	AAS			Read Fault Code		Y		
C3 PICASSO(04188)		Parking assistance	AAS			Erase Fault Code		Y		
C3 PICASSO(04188)		Parking assistance	AAS			Live Data		Y		
C3 PICASSO(04188)		Parking assistance	AAS IDS			Read ECU Information		Y		
C3 PICASSO(04188)		Parking assistance	AAS IDS			Read Fault Code		Y		
C3 PICASSO(04188)		Parking assistance	AAS IDS			Erase Fault Code		Y		
C3 PICASSO(04188)		Parking assistance	AAS IDS			Live Data		Y		
C3 PICASSO(04188)		Parking assistance	AAS IDS			Actuation Test		Y		
C3 PICASSO(04188)		Controls under the steering wheel				Read ECU Information		Y		
C3 PICASSO(04188)		Controls under the steering wheel				Read Fault Code		Y		
C3 PICASSO(04188)		Controls under the steering wheel				Erase Fault Code		Y		
C3 PICASSO(04188)		Controls under the steering wheel				Live Data		Y		
C3 PICASSO(04188)		Controls under the steering wheel				Actuation Test		Y		
C3 PICASSO(04188)		Controls under the steering wheel				Special Function	Pack Repair	Y		
C3 PICASSO(04188)		Rain and light sensor				Read ECU Information		Y		
C3 PICASSO(04188)		Rain and light sensor				Read Fault Code		Y		
C3 PICASSO(04188)		Rain and light sensor				Erase Fault Code		Y		
C3 PICASSO(04188)		Service module / Independent telematic unit				Read ECU Information		Y		
C3 PICASSO(04188)		Service module / Independent telematic unit				Read Fault Code		Y		
C3 PICASSO(04188)		Service module / Independent telematic unit				Erase Fault Code		Y		
C3 PICASSO(04188)		Service module / Independent telematic unit				Live Data		Y		
C3 PICASSO(04188)		Service module / Independent telematic unit				Actuation Test		Y		
C3 PICASSO(04188)		Service module / Independent telematic unit				Special Function	Configuration	Y		
C3 Aircross		Built-in Systems Interface				Read ECU Information		Y		
C3 Aircross		Built-in Systems Interface				Read Fault Code		Y		
C3 Aircross		Built-in Systems Interface				Erase Fault Code		Y		
C3 Aircross		Built-in Systems Interface				Live Data		Y		
C3 Aircross		Built-in Systems Interface				Special Function	Maintenance-BSI operating mode	Y		
C3 Aircross		Engine management ECU	ME749	ME749 N6A	ME749 No Flex Fuel	Read ECU Information		Y		
C3 Aircross		Engine management ECU	ME749	ME749 N6A	ME749 No Flex Fuel	Read Fault Code		Y		
C3 Aircross		Engine management ECU	ME749	ME749 N6A	ME749 No Flex Fuel	Erase Fault Code		Y		
C3 Aircross		Engine management ECU	ME749	ME749 N6A	ME749 No Flex Fuel	Live Data		Y		
C3 Aircross		Engine management ECU	ME749	ME749 N6A	ME749 No Flex Fuel	Actuation Test		Y		
C3 Aircross		Engine management ECU	ME749	ME749 N6A	ME749 No Flex Fuel	Special Function	Configuration	Y		
C3 Aircross		Engine management ECU	ME749	ME749 N6A	ME749 No Flex Fuel	Special Function	Pack Repair	Y		
C3 Aircross		Engine management ECU	ME749	ME749 N6A	ME749 Flex Fuel	Read ECU Information		Y		
C3 Aircross		Engine management ECU	ME749	ME749 N6A	ME749 Flex Fuel	Read Fault Code		Y		
C3 Aircross		Engine management ECU	ME749	ME749 N6A	ME749 Flex Fuel	Erase Fault Code		Y		
C3 Aircross		Engine management ECU	ME749	ME749 N6A	ME749 Flex Fuel	Live Data		Y		
C3 Aircross		Engine management ECU	ME749	ME749 N6A	ME749 Flex Fuel	Actuation Test		Y		
C3 Aircross		Engine management ECU	ME749	ME749 N6A	ME749 Flex Fuel	Special Function	Configuration	Y		
C3 Aircross		Engine management ECU	ME749	ME749 N6A	ME749 Flex Fuel	Special Function	Pack Repair	Y		
C3 Aircross		Engine management ECU	ME749	ME749 N6B	ME749 No Flex Fuel	Read ECU Information		Y		
C3 Aircross		Engine management ECU	ME749	ME749 N6B	ME749 No Flex Fuel	Read Fault Code		Y		
C3 Aircross		Engine management ECU	ME749	ME749 N6B	ME749 No Flex Fuel	Erase Fault Code		Y		
C3 Aircross		Engine management ECU	ME749	ME749 N6B	ME749 No Flex Fuel	Live Data		Y		
C3 Aircross		Engine management ECU	ME749	ME749 N6B	ME749 No Flex Fuel	Actuation Test		Y		
C3 Aircross		Engine management ECU	ME749	ME749 N6B	ME749 No Flex Fuel	Special Function	Configuration	Y		
C3 Aircross		Engine management ECU	ME749	ME749 N6B	ME749 No Flex Fuel	Special Function	Pack Repair	Y		
C3 Aircross		Engine management ECU	ME749	ME749 N6B	ME749 Flex Fuel	Read ECU Information		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Models	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function reasons	Add (Y/N)	Verification (Y/N)	Remarks
C3 Aircross		Engine management ECU	ME749	ME749 NNB	ME749 Flex Fuel	Read Fault Code		Y		
C3 Aircross		Engine management ECU	ME749	ME749 NNB	ME749 Flex Fuel	Erase Fault Code		Y		
C3 Aircross		Engine management ECU	ME749	ME749 NNB	ME749 Flex Fuel	Live Data		Y		
C3 Aircross		Engine management ECU	ME749	ME749 NNB	ME749 Flex Fuel	Actuation Test		Y		
C3 Aircross		Engine management ECU	ME749	ME749 NNB	ME749 Flex Fuel	Special Function	Configuration	Y		
C3 Aircross		Engine management ECU	ME749	ME749 NNB	ME749 Flex Fuel	Special Function	Pack Repair	Y		
C3 Aircross		Engine management ECU	ME749	ME749 NFI	ME749 No Flex Fuel	Read ECU Information		Y		
C3 Aircross		Engine management ECU	ME749	ME749 NFI	ME749 No Flex Fuel	Read Fault Code		Y		
C3 Aircross		Engine management ECU	ME749	ME749 NFI	ME749 No Flex Fuel	Erase Fault Code		Y		
C3 Aircross		Engine management ECU	ME749	ME749 NFI	ME749 No Flex Fuel	Live Data		Y		
C3 Aircross		Engine management ECU	ME749	ME749 NFI	ME749 No Flex Fuel	Actuation Test		Y		
C3 Aircross		Engine management ECU	ME749	ME749 NFI	ME749 No Flex Fuel	Special Function	Configuration	Y		
C3 Aircross		Engine management ECU	ME749	ME749 NFI	ME749 No Flex Fuel	Special Function	Pack Repair	Y		
C3 Aircross		Engine management ECU	ME749	ME749 NFI	ME749 Flex Fuel	Read ECU Information		Y		
C3 Aircross		Engine management ECU	ME749	ME749 NFI	ME749 Flex Fuel	Read Fault Code		Y		
C3 Aircross		Engine management ECU	ME749	ME749 NFI	ME749 Flex Fuel	Erase Fault Code		Y		
C3 Aircross		Engine management ECU	ME749	ME749 NFI	ME749 Flex Fuel	Live Data		Y		
C3 Aircross		Engine management ECU	ME749	ME749 NFI	ME749 Flex Fuel	Actuation Test		Y		
C3 Aircross		Engine management ECU	ME749	ME749 NFI	ME749 Flex Fuel	Special Function	Configuration	Y		
C3 Aircross		Engine management ECU	ME749	ME749 NFI	ME749 Flex Fuel	Special Function	Pack Repair	Y		
C3 Aircross		Engine management ECU	ME749_ECS	ME749_ECS NFP		Read ECU Information		Y		
C3 Aircross		Engine management ECU	ME749_ECS	ME749_ECS NFP		Read Fault Code		Y		
C3 Aircross		Engine management ECU	ME749_ECS	ME749_ECS NFP		Erase Fault Code		Y		
C3 Aircross		Engine management ECU	ME749_ECS	ME749_ECS NFP		Live Data		Y		
C3 Aircross		Engine management ECU	ME749_ECS	ME749_ECS NFP		Actuation Test		Y		
C3 Aircross		Engine management ECU	ME749_ECS	ME749_ECS NFP		Special Function	Pack Repair	Y		
C3 Aircross		Engine management ECU	ME749_ECS	ME749_ECS NFN		Read ECU Information		Y		
C3 Aircross		Engine management ECU	ME749_ECS	ME749_ECS NFN		Read Fault Code		Y		
C3 Aircross		Engine management ECU	ME749_ECS	ME749_ECS NFN		Erase Fault Code		Y		
C3 Aircross		Engine management ECU	ME749_ECS	ME749_ECS NFN		Live Data		Y		
C3 Aircross		Engine management ECU	ME749_ECS	ME749_ECS NFN		Actuation Test		Y		
C3 Aircross		Engine management ECU	ME749_ECS	ME749_ECS NFN		Special Function	Pack Repair	Y		
C3 Aircross		Engine management ECU	V34.4	V34.4 ESSENCE		Read ECU Information		Y		
C3 Aircross		Engine management ECU	V34.4	V34.4 ESSENCE		Read Fault Code		Y		
C3 Aircross		Engine management ECU	V34.4	V34.4 ESSENCE		Erase Fault Code		Y		
C3 Aircross		Engine management ECU	V34.4	V34.4 ESSENCE		Live Data		Y		
C3 Aircross		Engine management ECU	V34.4	V34.4 ESSENCE		Actuation Test		Y		
C3 Aircross		Engine management ECU	V34.4	V34.4 ESSENCE		Special Function	Pack Repair	Y		
C3 Aircross		Engine management ECU	V34.4	V34.4 FLEX FUEL		Read ECU Information		Y		
C3 Aircross		Engine management ECU	V34.4	V34.4 FLEX FUEL		Read Fault Code		Y		
C3 Aircross		Engine management ECU	V34.4	V34.4 FLEX FUEL		Erase Fault Code		Y		
C3 Aircross		Engine management ECU	V34.4	V34.4 FLEX FUEL		Live Data		Y		
C3 Aircross		Engine management ECU	V34.4	V34.4 FLEX FUEL		Actuation Test		Y		
C3 Aircross		Engine management ECU	V34.4	V34.4 FLEX FUEL		Special Function	Pack Repair	Y		
C3 Aircross		Engine management ECU	V34.4	V34.4 FLEX FUEL		Read ECU Information		Y		
C3 Aircross		Engine management ECU	V34.4	V34.4 FLEX FUEL		Read Fault Code		Y		
C3 Aircross		Engine management ECU	V34.4	V34.4 FLEX FUEL		Erase Fault Code		Y		
C3 Aircross		Engine management ECU	V34.4	V34.4 FLEX FUEL		Live Data		Y		
C3 Aircross		Engine management ECU	V34.4	V34.4 FLEX FUEL		Actuation Test		Y		
C3 Aircross		Engine management ECU	V34.4	V34.4 FLEX FUEL		Special Function	Pack Repair	Y		
C3 Aircross		Engine management ECU	V46	Yes		Read ECU Information		Y		
C3 Aircross		Engine management ECU	V46	Yes		Read Fault Code		Y		
C3 Aircross		Engine management ECU	V46	Yes		Erase Fault Code		Y		
C3 Aircross		Engine management ECU	V46	Yes		Live Data		Y		
C3 Aircross		Engine management ECU	V46	Yes		Actuation Test		Y		
C3 Aircross		Engine management ECU	V46	Yes		Special Function	Pack Repair	Y		
C3 Aircross		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ABS/MS70_1			Read ECU Information		Y		
C3 Aircross		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ABS/MS70_1			Read Fault Code		Y		
C3 Aircross		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ABS/MS70_1			Erase Fault Code		Y		
C3 Aircross		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ABS/MS70_1			Live Data		Y		
C3 Aircross		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ABS/MS70_1			Actuation Test		Y		
C3 Aircross		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ABS/MS70_1			Special Function	Configuration	Y		
C3 Aircross		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ABS/MS70_1			Special Function	Pack Repair	Y		
C3 Aircross		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP/MS60_0			Read ECU Information		Y		
C3 Aircross		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP/MS60_0			Read Fault Code		Y		
C3 Aircross		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP/MS60_0			Erase Fault Code		Y		
C3 Aircross		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP/MS60_0			Live Data		Y		
C3 Aircross		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP/MS60_0			Actuation Test		Y		
C3 Aircross		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP/MS60_0			Special Function	Configuration	Y		
C3 Aircross		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP/MS60_0			Special Function	Pack Repair	Y		
C3 Aircross		Automatic gearbox or controlled manual gearbox				Read ECU Information		Y		
C3 Aircross		Automatic gearbox or controlled manual gearbox				Read Fault Code		Y		
C3 Aircross		Automatic gearbox or controlled manual gearbox				Erase Fault Code		Y		
C3 Aircross		Automatic gearbox or controlled manual gearbox				Live Data		Y		
C3 Aircross		Automatic gearbox or controlled manual gearbox				Actuation Test		Y		
C3 Aircross		Automatic gearbox or controlled manual gearbox				Special Function	Configuration	Y		
C3 Aircross		Automatic gearbox or controlled manual gearbox				Special Function	Pack Repair	Y		
C3 Aircross		Air bags and pretensioners control unit				Read ECU Information		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Models	Year classification	System	Subsystem or system type (YES stands for Citroen, NO stands for other ones)	Subsystem (YES stands for Citroen, NO stands for other ones)	Subsystem or system type	Function type	Special function subitems	Add (Y/N)	Verification (Y/N)	Remarks
C3 Aircross		Air bags and pre-tensioners control unit				Read Fault Code		Y		
C3 Aircross		Air bags and pre-tensioners control unit				Erase Fault Code		Y		
C3 Aircross		Air bags and pre-tensioners control unit				Live Data		Y		
C3 Aircross		Air bags and pre-tensioners control unit				Special Function	Configuration	Y		
C3 Aircross		Air bags and pre-tensioners control unit				Special Function	Pack Repair	Y		
C3 Aircross		Power steering				Read ECU Information		Y		
C3 Aircross		Power steering				Read Fault Code		Y		
C3 Aircross		Power steering				Erase Fault Code		Y		
C3 Aircross		Power steering				Live Data		Y		
C3 Aircross		Power steering				Actuation Test		Y		
C3 Aircross		Power steering				Special Function	Configuration	Y		
C3 Aircross		Trailer relay unit				Read ECU Information		Y		
C3 Aircross		Trailer relay unit				Read Fault Code		Y		
C3 Aircross		Trailer relay unit				Erase Fault Code		Y		
C3 Aircross		Trailer relay unit				Live Data		Y		
C3 Aircross		Trailer relay unit				Actuation Test		Y		
C3 Aircross		Telematic unit (OTA) or audio-navigation	RADIONAV_INSG_ECO			Read ECU Information		Y		
C3 Aircross		Telematic unit (OTA) or audio-navigation	RADIONAV_INSG_ECO			Read Fault Code		Y		
C3 Aircross		Telematic unit (OTA) or audio-navigation	RADIONAV_INSG_ECO			Erase Fault Code		Y		
C3 Aircross		Telematic unit (OTA) or audio-navigation	RADIONAV_INSG_ECO			Live Data		Y		
C3 Aircross		Telematic unit (OTA) or audio-navigation	RADIONAV_INSG_ECO			Actuation Test		Y		
C3 Aircross		Telematic unit (OTA) or audio-navigation	RADIONAV_INSG_ECO			Special Function	Configuration	Y		
C3 Aircross		Telematic unit (OTA) or audio-navigation	SMES_PLUS			Read ECU Information		Y		
C3 Aircross		Telematic unit (OTA) or audio-navigation	SMES_PLUS			Read Fault Code		Y		
C3 Aircross		Telematic unit (OTA) or audio-navigation	SMES_PLUS			Erase Fault Code		Y		
C3 Aircross		Telematic unit (OTA) or audio-navigation	SMES_PLUS			Live Data		Y		
C3 Aircross		Telematic unit (OTA) or audio-navigation	SMES_PLUS			Actuation Test		Y		
C3 Aircross		Telematic unit (OTA) or audio-navigation	SMES_PLUS			Special Function	Configuration	Y		
C3 Aircross		Instrument panel				Read ECU Information		Y		
C3 Aircross		Instrument panel				Read Fault Code		Y		
C3 Aircross		Instrument panel				Erase Fault Code		Y		
C3 Aircross		Instrument panel				Live Data		Y		
C3 Aircross		Instrument panel				Actuation Test		Y		
C3 Aircross		Radio	RD6			Read ECU Information		Y		
C3 Aircross		Radio	RD6			Read Fault Code		Y		
C3 Aircross		Radio	RD6			Erase Fault Code		Y		
C3 Aircross		Radio	RD6			Live Data		Y		
C3 Aircross		Radio	RD6			Actuation Test		Y		
C3 Aircross		Radio	RD6			Special Function	Configuration	Y		
C3 Aircross		Radio	RD6			Read ECU Information		Y		
C3 Aircross		Radio	RD6			Read Fault Code		Y		
C3 Aircross		Radio	RD6			Erase Fault Code		Y		
C3 Aircross		Radio	RD6			Live Data		Y		
C3 Aircross		Radio	RD6			Actuation Test		Y		
C3 Aircross		Radio	RD6			Special Function	Configuration	Y		
C3 Aircross		Anti-theft alarm				Read ECU Information		Y		
C3 Aircross		Anti-theft alarm				Read Fault Code		Y		
C3 Aircross		Anti-theft alarm				Erase Fault Code		Y		
C3 Aircross		Anti-theft alarm				Live Data		Y		
C3 Aircross		Anti-theft alarm				Actuation Test		Y		
C3 Aircross		Anti-theft alarm				Special Function	Configuration	Y		
C3 Aircross		Air conditioning				Read ECU Information		Y		
C3 Aircross		Air conditioning				Read Fault Code		Y		
C3 Aircross		Air conditioning				Erase Fault Code		Y		
C3 Aircross		Air conditioning				Live Data		Y		
C3 Aircross		Air conditioning				Actuation Test		Y		
C3 Aircross		Air conditioning				Special Function	Configuration	Y		
C3 Aircross		Air conditioning				Special Function	Pack Repair	Y		
C3 Aircross		Parking assistance	AAS			Read ECU Information		Y		
C3 Aircross		Parking assistance	AAS			Read Fault Code		Y		
C3 Aircross		Parking assistance	AAS			Erase Fault Code		Y		
C3 Aircross		Parking assistance	AAS			Live Data		Y		
C3 Aircross		Parking assistance	AAS_IDS			Read ECU Information		Y		
C3 Aircross		Parking assistance	AAS_IDS			Read Fault Code		Y		
C3 Aircross		Parking assistance	AAS_IDS			Erase Fault Code		Y		
C3 Aircross		Parking assistance	AAS_IDS			Live Data		Y		
C3 Aircross		Parking assistance	AAS_IDS			Actuation Test		Y		
C3 Aircross		Controls under the steering wheel				Read ECU Information		Y		
C3 Aircross		Controls under the steering wheel				Read Fault Code		Y		
C3 Aircross		Controls under the steering wheel				Erase Fault Code		Y		
C3 Aircross		Controls under the steering wheel				Live Data		Y		
C3 Aircross		Controls under the steering wheel				Actuation Test		Y		
C3 Aircross		Controls under the steering wheel				Special Function	Pack Repair	Y		
C3 Aircross		Rain and light sensor				Read ECU Information		Y		
C3 Aircross		Rain and light sensor				Read Fault Code		Y		
C3 Aircross		Rain and light sensor				Erase Fault Code		Y		
C3 Aircross		Service module / Independent telematic unit				Read ECU Information		Y		
C3 Aircross		Service module / Independent telematic unit				Read Fault Code		Y		
C3 Aircross		Service module / Independent telematic unit				Erase Fault Code		Y		
C3 Aircross		Service module / Independent telematic unit				Live Data		Y		
C3 Aircross		Service module / Independent telematic unit				Actuation Test		Y		
C3 Aircross		Service module / Independent telematic unit				Special Function	Configuration	Y		
C3 Aircross		Learning				Special Function	Key programming	Y		
C3 Aircross (48V)		Built-in Systems Interface				Read ECU Information		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
C3 Aircross(488)		Built-in Systems Interface				Read Fault Code		Y		
C3 Aircross(488)		Built-in Systems Interface				Erase Fault Code		Y		
C3 Aircross(488)		Built-in Systems Interface				Special Function	Maintenance-BSI operating mode	Y		
C3 Aircross(488)		Built-in Systems Interface				Special Function	Pack repair	Y		
C3 Aircross(488)		Engine management ECU	EDC17C10_B82			Read ECU Information		Y		
C3 Aircross(488)		Engine management ECU	EDC17C10_B82			Read Fault Code		Y		
C3 Aircross(488)		Engine management ECU	EDC17C10_B82			Erase Fault Code		Y		
C3 Aircross(488)		Engine management ECU	EDC17C10_B82			Live Data		Y		
C3 Aircross(488)		Engine management ECU	EDC17C10_B82			Actuation Test		Y		
C3 Aircross(488)		Engine management ECU	EDC17C10_B82			Special Function	Configuration	Y		
C3 Aircross(488)		Engine management ECU	EDC17C10_B82			Special Function	Pack repair	Y		
C3 Aircross(488)		Engine management ECU	EDC17C00			Read ECU Information		Y		
C3 Aircross(488)		Engine management ECU	EDC17C00			Read Fault Code		Y		
C3 Aircross(488)		Engine management ECU	EDC17C00			Erase Fault Code		Y		
C3 Aircross(488)		Engine management ECU	EDC17C00			Live Data		Y		
C3 Aircross(488)		Engine management ECU	EDC17C00			Actuation Test		Y		
C3 Aircross(488)		Engine management ECU	EDC17C00			Special Function	Pack repair	Y		
C3 Aircross(488)		Engine management ECU	V46			Read ECU Information		Y		
C3 Aircross(488)		Engine management ECU	V46			Read Fault Code		Y		
C3 Aircross(488)		Engine management ECU	V46			Erase Fault Code		Y		
C3 Aircross(488)		Engine management ECU	V46			Live Data		Y		
C3 Aircross(488)		Engine management ECU	V46			Actuation Test		Y		
C3 Aircross(488)		Engine management ECU	V46			Special Function	Pack repair	Y		
C3 Aircross(488)		Engine management ECU	VD46			Read ECU Information		Y		
C3 Aircross(488)		Engine management ECU	VD46			Read Fault Code		Y		
C3 Aircross(488)		Engine management ECU	VD46			Erase Fault Code		Y		
C3 Aircross(488)		Engine management ECU	VD46			Live Data		Y		
C3 Aircross(488)		Engine management ECU	VD46			Actuation Test		Y		
C3 Aircross(488)		Engine management ECU	VD46			Special Function	Pack repair	Y		
C3 Aircross(488)		Engine management ECU	OMV_M61CS003			Read ECU Information		Y		
C3 Aircross(488)		Engine management ECU	OMV_M61CS003			Read Fault Code		Y		
C3 Aircross(488)		Engine management ECU	OMV_M61CS003			Erase Fault Code		Y		
C3 Aircross(488)		Engine management ECU	OMV_M61CS003			Live Data		Y		
C3 Aircross(488)		Engine management ECU	OMV_M61CS003			Special Function	Pack repair	Y		
C3 Aircross(488)		Engine management ECU	OMV_V56			Read ECU Information		Y		
C3 Aircross(488)		Engine management ECU	OMV_V56			Read Fault Code		Y		
C3 Aircross(488)		Engine management ECU	OMV_V56			Erase Fault Code		Y		
C3 Aircross(488)		Engine management ECU	OMV_V56			Live Data		Y		
C3 Aircross(488)		Engine management ECU	OMV_V56			Special Function	Pack repair	Y		
C3 Aircross(488)		Engine management ECU	OMV_V156			Read ECU Information		Y		
C3 Aircross(488)		Engine management ECU	OMV_V156			Read Fault Code		Y		
C3 Aircross(488)		Engine management ECU	OMV_V156			Erase Fault Code		Y		
C3 Aircross(488)		Engine management ECU	OMV_V156			Live Data		Y		
C3 Aircross(488)		Engine management ECU	OMV_V156			Special Function	Pack repair	Y		
C3 Aircross(488)		Automatic gearbox or controlled manual gearbox				Read ECU Information		Y		
C3 Aircross(488)		Automatic gearbox or controlled manual gearbox				Read Fault Code		Y		
C3 Aircross(488)		Automatic gearbox or controlled manual gearbox				Erase Fault Code		Y		
C3 Aircross(488)		Automatic gearbox or controlled manual gearbox				Live Data		Y		
C3 Aircross(488)		Automatic gearbox or controlled manual gearbox				Actuation Test		Y		
C3 Aircross(488)		Traction control mode selector				Read ECU Information		Y		
C3 Aircross(488)		Traction control mode selector				Read Fault Code		Y		
C3 Aircross(488)		Traction control mode selector				Live Data		Y		
C3 Aircross(488)		Traction control mode selector				Actuation Test		Y		
C3 Aircross(488)		Seat belt not fastened warning lights unit				Read ECU Information		Y		
C3 Aircross(488)		Seat belt not fastened warning lights unit				Actuation Test		Y		
C3 Aircross(488)		Battery charge status unit				Read ECU Information		Y		
C3 Aircross(488)		Battery charge status unit				Read Fault Code		Y		
C3 Aircross(488)		Battery charge status unit				Erase Fault Code		Y		
C3 Aircross(488)		Battery charge status unit				Live Data		Y		
C3 Aircross(488)		Control on the steering wheel / integral controls steering wheel				Read ECU Information		Y		
C3 Aircross(488)		Control on the steering wheel / integral controls steering wheel				Read Fault Code		Y		
C3 Aircross(488)		Control on the steering wheel / integral controls steering wheel				Erase Fault Code		Y		
C3 Aircross(488)		Control on the steering wheel / integral controls steering wheel				Live Data		Y		
C3 Aircross(488)		Voltage retaining device				Read ECU Information		Y		
C3 Aircross(488)		Voltage retaining device				Read Fault Code		Y		
C3 Aircross(488)		Voltage retaining device				Erase Fault Code		Y		
C3 Aircross(488)		Driver's door module				Read ECU Information		Y		
C3 Aircross(488)		Driver's door module				Read Fault Code		Y		
C3 Aircross(488)		Driver's door module				Erase Fault Code		Y		
C3 Aircross(488)		Driver's door module				Live Data		Y		
C3 Aircross(488)		Driver's door module				Actuation Test		Y		
C3 Aircross(488)		Audio system control panel				Read ECU Information		Y		
C3 Aircross(488)		Audio system control panel				Read Fault Code		Y		
C3 Aircross(488)		Audio system control panel				Erase Fault Code		Y		
C3 Aircross(488)		Audio system control panel				Live Data		Y		
C3 Aircross(488)		Audio system control panel				Actuation Test		Y		
C3 Aircross(488)		Controls under the steering wheel				Read ECU Information		Y		
C3 Aircross(488)		Controls under the steering wheel				Read Fault Code		Y		
C3 Aircross(488)		Controls under the steering wheel				Erase Fault Code		Y		
C3 Aircross(488)		Controls under the steering wheel				Live Data		Y		
C3 Aircross(488)		Controls under the steering wheel				Actuation Test		Y		
C3 Aircross(488)		Controls under the steering wheel				Special Function	Pack repair	Y		
C3 Aircross(488)		Electric steering lock				Read ECU Information		Y		
C3 Aircross(488)		Electric steering lock				Read Fault Code		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
C3 Aircross (A88)		Electric steering lock				Erase Fault Code		Y		
C3 Aircross (A88)		Electric steering lock				Live Data		Y		
C3 Aircross (A88)		Telematic unit (OTA) or audio-navigation	NAC			Read ECU Information		Y		
C3 Aircross (A88)		Telematic unit (OTA) or audio-navigation	NAC			Read Fault Code		Y		
C3 Aircross (A88)		Telematic unit (OTA) or audio-navigation	NAC			Erase Fault Code		Y		
C3 Aircross (A88)		Telematic unit (OTA) or audio-navigation	NAC			Live Data		Y		
C3 Aircross (A88)		Telematic unit (OTA) or audio-navigation	NAC			Actuation Test		Y		
C3 Aircross (A88)		Telematic unit (OTA) or audio-navigation	RC			Read ECU Information		Y		
C3 Aircross (A88)		Telematic unit (OTA) or audio-navigation	RC			Read Fault Code		Y		
C3 Aircross (A88)		Telematic unit (OTA) or audio-navigation	RC			Erase Fault Code		Y		
C3 Aircross (A88)		Telematic unit (OTA) or audio-navigation	RC			Live Data		Y		
C3 Aircross (A88)		Telematic unit (OTA) or audio-navigation	RC			Actuation Test		Y		
C3 Aircross (A88)		Instrument panel				Read ECU Information		Y		
C3 Aircross (A88)		Instrument panel				Read Fault Code		Y		
C3 Aircross (A88)		Instrument panel				Erase Fault Code		Y		
C3 Aircross (A88)		Instrument panel				Live Data		Y		
C3 Aircross (A88)		Instrument panel				Actuation Test		Y		
C3 Aircross (A88)		Air conditioning				Read ECU Information		Y		
C3 Aircross (A88)		Air conditioning				Read Fault Code		Y		
C3 Aircross (A88)		Air conditioning				Erase Fault Code		Y		
C3 Aircross (A88)		Air conditioning				Live Data		Y		
C3 Aircross (A88)		Air conditioning				Actuation Test		Y		
C3 Aircross (A88)		Trailer relay unit				Read ECU Information		Y		
C3 Aircross (A88)		Trailer relay unit				Read Fault Code		Y		
C3 Aircross (A88)		Trailer relay unit				Erase Fault Code		Y		
C3 Aircross (A88)		Trailer relay unit				Live Data		Y		
C3 Aircross (A88)		Trailer relay unit				Actuation Test		Y		
C3 Aircross (A88)		Rain and brightness sensor				Read ECU Information		Y		
C3 Aircross (A88)		Rain and brightness sensor				Read Fault Code		Y		
C3 Aircross (A88)		Rain and brightness sensor				Erase Fault Code		Y		
C3 Aircross (A88)		Rain and brightness sensor				Live Data		Y		
C3 Aircross (A88)		Multifunction screen				Read ECU Information		Y		
C3 Aircross (A88)		Multifunction screen				Read Fault Code		Y		
C3 Aircross (A88)		Multifunction screen				Erase Fault Code		Y		
C3 Aircross (A88)		Multifunction screen				Live Data		Y		
C3 Aircross (A88)		Multifunction screen				Actuation Test		Y		
C3 Aircross (A88)		Touch screen				Read ECU Information		Y		
C3 Aircross (A88)		Touch screen				Read Fault Code		Y		
C3 Aircross (A88)		Touch screen				Erase Fault Code		Y		
C3 Aircross (A88)		Touch screen				Live Data		Y		
C3 Aircross (A88)		Touch screen				Actuation Test		Y		
C3 Aircross (A88)		Anti-theft alarm				Read ECU Information		Y		
C3 Aircross (A88)		Anti-theft alarm				Read Fault Code		Y		
C3 Aircross (A88)		Anti-theft alarm				Erase Fault Code		Y		
C3 Aircross (A88)		Anti-theft alarm				Live Data		Y		
C3 Aircross (A88)		Diesel additive pump	PADEGO			Read ECU Information		Y		
C3 Aircross (A88)		Diesel additive pump	PADEGO			Read Fault Code		Y		
C3 Aircross (A88)		Diesel additive pump	PADEGO			Erase Fault Code		Y		
C3 Aircross (A88)		Diesel additive pump	PADEGO			Live Data		Y		
C3 Aircross (A88)		Diesel additive pump	PADEGO			Actuation Test		Y		
C3 Aircross (A88)		Diesel additive pump	PADEGO_TI_E6			Read ECU Information		Y		
C3 Aircross (A88)		Diesel additive pump	PADEGO_TI_E6			Read Fault Code		Y		
C3 Aircross (A88)		Diesel additive pump	PADEGO_TI_E6			Erase Fault Code		Y		
C3 Aircross (A88)		Diesel additive pump	PADEGO_TI_E6			Live Data		Y		
C3 Aircross (A88)		Diesel additive pump	PADEGO_TI_E6			Actuation Test		Y		
C3 Aircross (A88)		Intrusion alarm siren				Read ECU Information		Y		
C3 Aircross (A88)		Intrusion alarm siren				Read Fault Code		Y		
C3 Aircross (A88)		Intrusion alarm siren				Erase Fault Code		Y		
C3 Aircross (A88)		Intrusion alarm siren				Live Data		Y		
C3 Aircross (A88)		Intrusion alarm siren				Actuation Test		Y		
C3 Aircross (A88)		Parking assistance	4 parking assistance sensors			Read ECU Information		Y		
C3 Aircross (A88)		Parking assistance	4 parking assistance sensors			Read Fault Code		Y		
C3 Aircross (A88)		Parking assistance	4 parking assistance sensors			Erase Fault Code		Y		
C3 Aircross (A88)		Parking assistance	4 parking assistance sensors			Live Data		Y		
C3 Aircross (A88)		Parking assistance	4 parking assistance sensors			Actuation Test		Y		
C3 Aircross (A88)		Parking assistance	8 parking assistance sensors			Read ECU Information		Y		
C3 Aircross (A88)		Parking assistance	8 parking assistance sensors			Read Fault Code		Y		
C3 Aircross (A88)		Parking assistance	8 parking assistance sensors			Erase Fault Code		Y		
C3 Aircross (A88)		Parking assistance	8 parking assistance sensors			Live Data		Y		
C3 Aircross (A88)		Parking assistance	8 parking assistance sensors			Actuation Test		Y		
C3 Aircross (A88)		Service module / Independent telematic unit	BTA_2			Read ECU Information		Y		
C3 Aircross (A88)		Service module / Independent telematic unit	BTA_2			Read Fault Code		Y		
C3 Aircross (A88)		Service module / Independent telematic unit	BTA_2			Erase Fault Code		Y		
C3 Aircross (A88)		Service module / Independent telematic unit	BTA_2			Live Data		Y		
C3 Aircross (A88)		Service module / Independent telematic unit	BTA_2			Actuation Test		Y		
C3 Aircross (A88)		Service module / Independent telematic unit	BTA_3R			Read ECU Information		Y		
C3 Aircross (A88)		Service module / Independent telematic unit	BTA_3R			Read Fault Code		Y		
C3 Aircross (A88)		Service module / Independent telematic unit	BTA_3R			Erase Fault Code		Y		
C3 Aircross (A88)		Service module / Independent telematic unit	BTA_3R			Live Data		Y		
C3 Aircross (A88)		Service module / Independent telematic unit	BTA_3R			Actuation Test		Y		
C3 Aircross (A88)		Service module / Independent telematic unit	BTA_3S			Read ECU Information		Y		
C3 Aircross (A88)		Service module / Independent telematic unit	BTA_3S			Read Fault Code		Y		
C3 Aircross (A88)		Service module / Independent telematic unit	BTA_3S			Erase Fault Code		Y		
C3 Aircross (A88)		Service module / Independent telematic unit	BTA_3S			Live Data		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
C3 Aircross(488)		Service module / Independent telematic unit	BTA_35			Actuation Test		Y		
C3 Aircross(488)		Multifunction video camera(CMF)				Read ECU Information		Y		
C3 Aircross(488)		Multifunction video camera(CMF)				Read Fault Code		Y		
C3 Aircross(488)		Multifunction video camera(CMF)				Erase Fault Code		Y		
C3 Aircross(488)		Multifunction video camera(CMF)				Live Data		Y		
C3 Aircross(488)		Multifunction video camera(CMF)				Actuation Test		Y		
C3 Aircross(488)		Power steering				Read ECU Information		Y		
C3 Aircross(488)		Power steering				Read Fault Code		Y		
C3 Aircross(488)		Power steering				Erase Fault Code		Y		
C3 Aircross(488)		Power steering				Live Data		Y		
C3 Aircross(488)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)				Read ECU Information		Y		
C3 Aircross(488)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)				Read Fault Code		Y		
C3 Aircross(488)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)				Erase Fault Code		Y		
C3 Aircross(488)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)				Live Data		Y		
C3 Aircross(488)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)				Actuation Test		Y		
C3 Aircross(488)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)				Special Function	Pack repair	Y		
C3 Aircross(488)		Air bags and pre-tensioners control unit				Read ECU Information		Y		
C3 Aircross(488)		Air bags and pre-tensioners control unit				Read Fault Code		Y		
C3 Aircross(488)		Air bags and pre-tensioners control unit				Erase Fault Code		Y		
C3 Aircross(488)		Air bags and pre-tensioners control unit				Live Data		Y		
C3 Aircross(488)		Head-Up Display				Read ECU Information		Y		
C3 Aircross(488)		Head-Up Display				Read Fault Code		Y		
C3 Aircross(488)		Head-Up Display				Erase Fault Code		Y		
C3 Aircross(488)		Head-Up Display				Live Data		Y		
C3 Aircross(488)		Head-Up Display				Actuation Test		Y		
C3 Aircross(488)		External CD player				Read ECU Information		Y		
C3 Aircross(488)		External CD player				Read Fault Code		Y		
C3 Aircross(488)		External CD player				Erase Fault Code		Y		
C3 Aircross(488)		External CD player				Live Data		Y		
C3 Aircross(488)		External CD player				Actuation Test		Y		
C3 Aircross(488)		Multiplexed control panel				Read ECU Information		Y		
C3 Aircross(488)		Multiplexed control panel				Read Fault Code		Y		
C3 Aircross(488)		Multiplexed control panel				Erase Fault Code		Y		
C3 Aircross(488)		Multiplexed control panel				Live Data		Y		
C3 Aircross(488)		Multiplexed control panel				Actuation Test		Y		
C3 Aircross(488)		Radio				Read ECU Information		Y		
C3 Aircross(488)		Radio				Read Fault Code		Y		
C3 Aircross(488)		Radio				Erase Fault Code		Y		
C3 Aircross(488)		Radio				Live Data		Y		
C3 Aircross(488)		Radio				Actuation Test		Y		
C3-XR		Built-in Systems Interface				Read ECU Information		Y		
C3-XR		Built-in Systems Interface				Read Fault Code		Y		
C3-XR		Built-in Systems Interface				Erase Fault Code		Y		
C3-XR		Built-in Systems Interface				Live Data		Y		
C3-XR		Built-in Systems Interface				Actuation Test		Y		
C3-XR		Built-in Systems Interface				Special Function	Maintenance-BSI operating mode	Y		
C3-XR		Built-in Systems Interface				Special Function	Learning	Y		
C3-XR		Engine management ECU	ME745_BCS			Read ECU Information		Y		
C3-XR		Engine management ECU	ME745_BCS			Read Fault Code		Y		
C3-XR		Engine management ECU	ME745_BCS			Erase Fault Code		Y		
C3-XR		Engine management ECU	ME745_BCS			Live Data		Y		
C3-XR		Engine management ECU	ME745_BCS			Actuation Test		Y		
C3-XR		Engine management ECU	ME745_BCS			Special Function	Configuration	Y		
C3-XR		Engine management ECU	ME745_BCS			Special Function	Pack Repair	Y		
C3-XR		Engine management ECU	ME017_4_4			Read ECU Information		Y		
C3-XR		Engine management ECU	ME017_4_4			Read Fault Code		Y		
C3-XR		Engine management ECU	ME017_4_4			Erase Fault Code		Y		
C3-XR		Engine management ECU	ME017_4_4			Live Data		Y		
C3-XR		Engine management ECU	ME017_4_4			Actuation Test		Y		
C3-XR		Engine management ECU	ME017_4_4			Special Function	Pack reparation	Y		
C3-XR		Engine management ECU	VD46			Read ECU Information		Y		
C3-XR		Engine management ECU	VD46			Read Fault Code		Y		
C3-XR		Engine management ECU	VD46			Erase Fault Code		Y		
C3-XR		Engine management ECU	VD46			Live Data		Y		
C3-XR		Engine management ECU	VD46			Actuation Test		Y		
C3-XR		Engine management ECU	VD46			Special Function	Pack Repair	Y		
C3-XR		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ABS_M0100			Read ECU Information		Y		
C3-XR		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ABS_M0100			Read Fault Code		Y		
C3-XR		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ABS_M0100			Erase Fault Code		Y		
C3-XR		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ABS_M0100			Live Data		Y		
C3-XR		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ABS_M0100			Actuation Test		Y		
C3-XR		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ABS_M0100			Special Function		Y		
C3-XR		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP_M0100			Read ECU Information		Y		
C3-XR		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP_M0100			Read Fault Code		Y		
C3-XR		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP_M0100			Erase Fault Code		Y		
C3-XR		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP_M0100			Live Data		Y		
C3-XR		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP_M0100			Actuation Test		Y		
C3-XR		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP_M0100			Special Function		Y		
C3-XR		Automatic gearbox or controlled manual gearbox	BVA_A18			Read ECU Information		Y		
C3-XR		Automatic gearbox or controlled manual gearbox	BVA_A18			Read Fault Code		Y		
C3-XR		Automatic gearbox or controlled manual gearbox	BVA_A18			Erase Fault Code		Y		
C3-XR		Automatic gearbox or controlled manual gearbox	BVA_A18			Live Data		Y		
C3-XR		Automatic gearbox or controlled manual gearbox	BVA_A18			Actuation Test		Y		
C3-XR		Automatic gearbox or controlled manual gearbox	BVA_A18			Special Function	Configuration	Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
C3-XR		Automatic gearbox or controlled manual gearbox	EVA_AT8			Special Function	Pack Repair	Y		
C3-XR		Automatic gearbox or controlled manual gearbox	MUPS_IDS			Read ECU Information		Y		
C3-XR		Automatic gearbox or controlled manual gearbox	MUPS_IDS			Read Fault Code		Y		
C3-XR		Automatic gearbox or controlled manual gearbox	MUPS_IDS			Erase Fault Code		Y		
C3-XR		Automatic gearbox or controlled manual gearbox	MUPS_IDS			Live Data		Y		
C3-XR		Automatic gearbox or controlled manual gearbox	MUPS_IDS			Actuation Test		Y		
C3-XR		Automatic gearbox or controlled manual gearbox	MUPS_IDS			Special Function	Setting of the actuator	Y		
C3-XR		Automatic gearbox or controlled manual gearbox	MUPS_IDS			Special Function	Counters	Y		
C3-XR		Automatic gearbox or controlled manual gearbox	MUPS_IDS			Special Function	Programming	Y		
C3-XR		Automatic gearbox or controlled manual gearbox	MUPS_IDS			Special Function	Replacement parts	Y		
C3-XR		Automatic gearbox or controlled manual gearbox	EVA_AM6_AT6_IDS			Read ECU Information		Y		
C3-XR		Automatic gearbox or controlled manual gearbox	EVA_AM6_AT6_IDS			Read Fault Code		Y		
C3-XR		Automatic gearbox or controlled manual gearbox	EVA_AM6_AT6_IDS			Erase Fault Code		Y		
C3-XR		Automatic gearbox or controlled manual gearbox	EVA_AM6_AT6_IDS			Live Data		Y		
C3-XR		Automatic gearbox or controlled manual gearbox	EVA_AM6_AT6_IDS			Actuation Test		Y		
C3-XR		Automatic gearbox or controlled manual gearbox	EVA_AM6_AT6_IDS			Special Function	Pack Repair	Y		
C3-XR		Air bags and pre-tensioners control unit				Read ECU Information		Y		
C3-XR		Air bags and pre-tensioners control unit				Read Fault Code		Y		
C3-XR		Air bags and pre-tensioners control unit				Erase Fault Code		Y		
C3-XR		Air bags and pre-tensioners control unit				Live Data		Y		
C3-XR		Air bags and pre-tensioners control unit				Special Function	Pack Repair	Y		
C3-XR		Controls under the steering wheel	Yes			Read ECU Information		Y		
C3-XR		Controls under the steering wheel	Yes			Read Fault Code		Y		
C3-XR		Controls under the steering wheel	Yes			Erase Fault Code		Y		
C3-XR		Controls under the steering wheel	Yes			Live Data		Y		
C3-XR		Controls under the steering wheel	Yes			Actuation Test		Y		
C3-XR		Controls under the steering wheel	No			Read ECU Information		Y		
C3-XR		Controls under the steering wheel	No			Read Fault Code		Y		
C3-XR		Controls under the steering wheel	No			Erase Fault Code		Y		
C3-XR		Controls under the steering wheel	No			Live Data		Y		
C3-XR		Controls under the steering wheel	No			Actuation Test		Y		
C3-XR		Service module / Independent telematic unit				Read ECU Information		Y		
C3-XR		Service module / Independent telematic unit				Read Fault Code		Y		
C3-XR		Service module / Independent telematic unit				Erase Fault Code		Y		
C3-XR		Service module / Independent telematic unit				Live Data		Y		
C3-XR		Service module / Independent telematic unit				Actuation Test		Y		
C3-XR		Service module / Independent telematic unit				Special Function	Configuration	Y		
C3-XR		Service module / Independent telematic unit				Special Function	Pack Repair	Y		
C3-XR		Radio	BE6			Read ECU Information		Y		
C3-XR		Radio	BE6			Read Fault Code		Y		
C3-XR		Radio	BE6			Erase Fault Code		Y		
C3-XR		Radio	BE6			Live Data		Y		
C3-XR		Radio	BE6			Actuation Test		Y		
C3-XR		Radio	BE6			Special Function	Configuration	Y		
C3-XR		Radio	BD45			Read ECU Information		Y		
C3-XR		Radio	BD45			Read Fault Code		Y		
C3-XR		Radio	BD45			Erase Fault Code		Y		
C3-XR		Radio	BD45			Live Data		Y		
C3-XR		Radio	BD45			Actuation Test		Y		
C3-XR		Radio	BD45			Special Function	Configuration	Y		
C3-XR		Radio	BD45			Special Function	Pack Repair	Y		
C3-XR		Hands-free control unit				Read ECU Information		Y		
C3-XR		Hands-free control unit				Read Fault Code		Y		
C3-XR		Hands-free control unit				Erase Fault Code		Y		
C3-XR		Hands-free control unit				Live Data		Y		
C3-XR		Hands-free control unit				Special Function	Configuration	Y		
C3-XR		Hands-free control unit				Special Function	Pack Repair	Y		
C3-XR		Power steering				Read ECU Information		Y		
C3-XR		Power steering				Read Fault Code		Y		
C3-XR		Power steering				Erase Fault Code		Y		
C3-XR		Power steering				Live Data		Y		
C3-XR		Power steering				Actuation Test		Y		
C3-XR		Power steering				Special Function	Configuration	Y		
C3-XR		Multifunction screen				Read ECU Information		Y		
C3-XR		Multifunction screen				Read Fault Code		Y		
C3-XR		Multifunction screen				Erase Fault Code		Y		
C3-XR		Multifunction screen				Actuation Test		Y		
C3-XR		Multifunction screen				Special Function	Configuration	Y		
C3-XR		Control on the steering wheel / integral controls steering wheel				Read ECU Information		Y		
C3-XR		Control on the steering wheel / integral controls steering wheel				Read Fault Code		Y		
C3-XR		Control on the steering wheel / integral controls steering wheel				Erase Fault Code		Y		
C3-XR		Control on the steering wheel / integral controls steering wheel				Live Data		Y		
C3-XR		Traction control mode selector				Read ECU Information		Y		
C3-XR		Traction control mode selector				Read Fault Code		Y		
C3-XR		Traction control mode selector				Live Data		Y		
C3-XR		Traction control mode selector				Actuation Test		Y		
C3-XR		Telematic unit (BTX) or audio-navigation				Read ECU Information		Y		
C3-XR		Telematic unit (BTX) or audio-navigation				Read Fault Code		Y		
C3-XR		Telematic unit (BTX) or audio-navigation				Erase Fault Code		Y		
C3-XR		Telematic unit (BTX) or audio-navigation				Live Data		Y		
C3-XR		Telematic unit (BTX) or audio-navigation				Actuation Test		Y		
C3-XR		Telematic unit (BTX) or audio-navigation				Special Function	Configuration	Y		
C3-XR		Voltage retaining device	DMTR			Read ECU Information		Y		
C3-XR		Voltage retaining device	DMTR			Read Fault Code		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
C3-XR		Voltage retaining device		DMTR		Erase Fault Code		Y		
C3-XR		Voltage retaining device		DMTR DFC3B		Read ECU Information		Y		
C3-XR		Voltage retaining device		DMTR DFC3B		Read Fault Code		Y		
C3-XR		Voltage retaining device		DMTR DFC3B		Erase Fault Code		Y		
C3-XR		Multiplexed control panel				Read ECU Information		Y		
C3-XR		Multiplexed control panel				Read Fault Code		Y		
C3-XR		Multiplexed control panel				Erase Fault Code		Y		
C3-XR		Multiplexed control panel				Live Data		Y		
C3-XR		Multiplexed control panel				Actuation Test		Y		
C3-XR		Battery charge status unit				Read ECU Information		Y		
C3-XR		Battery charge status unit				Read Fault Code		Y		
C3-XR		Battery charge status unit				Erase Fault Code		Y		
C3-XR		Battery charge status unit				Live Data		Y		
C3-XR		Battery charge status unit				Special Function	Configuration	Y		
C3-XR		Battery charge status unit				Special Function	Pack Repair	Y		
C3-XR		Parking assistance				Read ECU Information		Y		
C3-XR		Parking assistance				Read Fault Code		Y		
C3-XR		Parking assistance				Erase Fault Code		Y		
C3-XR		Parking assistance				Live Data		Y		
C3-XR		Parking assistance				Actuation Test		Y		
C3-XR		Parking assistance				Special Function	Configuration	Y		
C3-XR		Parking assistance				Special Function	Pack Repair	Y		
C3-XR		Electric steering lock				Read ECU Information		Y		
C3-XR		Electric steering lock				Read Fault Code		Y		
C3-XR		Electric steering lock				Erase Fault Code		Y		
C3-XR		Electric steering lock				Live Data		Y		
C3-XR		Electric steering lock				Actuation Test		Y		
C3-XR		Electronic key reader				Read ECU Information		Y		
C3-XR		Electronic key reader				Read Fault Code		Y		
C3-XR		Electronic key reader				Erase Fault Code		Y		
C3-XR		Electronic key reader				Live Data		Y		
CITROEN C4 (2004-2010)		Built-in Systems Interface				Read ECU Information		Y		
CITROEN C4 (2004-2010)		Built-in Systems Interface				Read Fault Code		Y		
CITROEN C4 (2004-2010)		Built-in Systems Interface				Erase Fault Code		Y		
CITROEN C4 (2004-2010)		Built-in Systems Interface				Live Data		Y		
CITROEN C4 (2004-2010)		Built-in Systems Interface				Special Function	Pack Repair	Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	HD1_S1803	HD1_S1803 RHR	Read ECU Information		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	HD1_S1803	HD1_S1803 RHR	Read Fault Code		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	HD1_S1803	HD1_S1803 RHR	Erase Fault Code		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	HD1_S1803	HD1_S1803 RHR	Live Data		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	HD1_S1803	HD1_S1803 RHR	Actuation Test		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	HD1_S1803	HD1_S1803 RHR	Special Function	Configuration	Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	HD1_S1803	HD1_S1803 RHR	Special Function	Special Function	Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	MMSLP	KFU MMSLP	Read ECU Information		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	MMSLP	KFU MMSLP	Read Fault Code		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	MMSLP	KFU MMSLP	Erase Fault Code		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	MMSLP	KFU MMSLP	Live Data		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	MMSLP	KFU MMSLP	Actuation Test		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	MMSLP	KFU MMSLP	Special Function	Configuration	Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	MMSLP	KFU MMSLP	Special Function	Pack Repair	Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	MMSLP	RFK MMSLP	Read ECU Information		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	MMSLP	RFK MMSLP	Read Fault Code		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	MMSLP	RFK MMSLP	Erase Fault Code		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	MMSLP	RFK MMSLP	Live Data		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	MMSLP	RFK MMSLP	Actuation Test		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	MMSLP	RFK MMSLP	Special Function	Configuration	Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	MMSLP	RFK MMSLP	Special Function	Pack Repair	Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	MMSLP	RFN MMSLP	Read ECU Information		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	MMSLP	RFN MMSLP	Read Fault Code		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	MMSLP	RFN MMSLP	Erase Fault Code		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	MMSLP	RFN MMSLP	Live Data		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	MMSLP	RFN MMSLP	Actuation Test		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	MMSLP	RFN MMSLP	Special Function	Configuration	Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	MMSLP	RFN MMSLP	Special Function	Pack Repair	Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	MMSLPB	RFJ MMSLPB	Read ECU Information		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	MMSLPB	RFJ MMSLPB	Read Fault Code		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	MMSLPB	RFJ MMSLPB	Erase Fault Code		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	MMSLPB	RFJ MMSLPB	Live Data		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	MMSLPB	RFJ MMSLPB	Actuation Test		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	MMSLPB	RFJ MMSLPB	Special Function	Configuration	Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	MMSLPB	RFJ MMSLPB	Special Function	Pack Repair	Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	MMSLPB	GFY MMSLPB	Read ECU Information		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	MMSLPB	GFY MMSLPB	Read Fault Code		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	MMSLPB	GFY MMSLPB	Erase Fault Code		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	MMSLPB	GFY MMSLPB	Live Data		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	MMSLPB	GFY MMSLPB	Actuation Test		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	MMSLPB	GFY MMSLPB	Special Function	Configuration	Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	MMSLPB	GFY MMSLPB	Special Function	Pack Repair	Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	MMSLPC	KFU MMSLPC	Read ECU Information		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	MMSLPC	KFU MMSLPC	Read Fault Code		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	MMSLPC	KFU MMSLPC	Erase Fault Code		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	MMSLPC	KFU MMSLPC	Live Data		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	MMSLPC	KFU MMSLPC	Actuation Test		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	MMSLPC	KFU MMSLPC	Special Function	Configuration	Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Models	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
CITROEN C4 (2004-2010)		Engine management ECU	Yes	DCM3.4	DCM3.4 RBP	Special Function	Pack Repair	Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	DCM3.4	DCM3.4 RBP	Read ECU Information		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	DCM3.4	DCM3.4 RBP	Read Fault Code		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	DCM3.4	DCM3.4 RBP	Erase Fault Code		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	DCM3.4	DCM3.4 RBP	Live Data		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	DCM3.4	DCM3.4 RBP	Actuation Test		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	DCM3.4	DCM3.4 RBP	Special Function	Configuration	Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	DCM3.4	DCM3.4 RBP	Special Function	Pack Repair	Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	MEV17.4_EURO4	MEV17.4_EURO4_SFW	Read ECU Information		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	MEV17.4_EURO4	MEV17.4_EURO4_SFW	Read Fault Code		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	MEV17.4_EURO4	MEV17.4_EURO4_SFW	Erase Fault Code		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	MEV17.4_EURO4	MEV17.4_EURO4_SFW	Live Data		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	MEV17.4_EURO4	MEV17.4_EURO4_SFW	Actuation Test		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	MEV17.4_EURO4	MEV17.4_EURO4_SFW	Special Function	Configuration	Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	MEV17.4_EURO4	MEV17.4_EURO4_SFW	Special Function	Pack Repair	Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	ME749	ME749 NFU	Read ECU Information		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	ME749	ME749 NFU	Read Fault Code		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	ME749	ME749 NFU	Erase Fault Code		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	ME749	ME749 NFU	Live Data		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	ME749	ME749 NFU	Actuation Test		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	ME749	ME749 NFU	Special Function	Configuration	Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	ME749	ME749 NFU	Special Function	Pack Repair	Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	ME749	ME749 NGA	Read ECU Information		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	ME749	ME749 NGA	Read Fault Code		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	ME749	ME749 NGA	Erase Fault Code		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	ME749	ME749 NGA	Live Data		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	ME749	ME749 NGA	Actuation Test		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	ME749	ME749 NGA	Special Function	Configuration	Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	ME749	ME749 NGA	Special Function	Pack Repair	Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	ME749	ME749 NGB	Read ECU Information		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	ME749	ME749 NGB	Read Fault Code		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	ME749	ME749 NGB	Erase Fault Code		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	ME749	ME749 NGB	Live Data		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	ME749	ME749 NGB	Actuation Test		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	ME749	ME749 NGB	Special Function	Configuration	Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	ME749	ME749 NGB	Special Function	Pack Repair	Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	EDC15C2		Read ECU Information		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	EDC15C2		Read Fault Code		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	EDC15C2		Erase Fault Code		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	EDC15C2		Live Data		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	EDC15C2		Actuation Test		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	EDC15C2		Special Function	Configuration	Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	MM8KP	MM8KP RFJ	Read ECU Information		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	MM8KP	MM8KP RFJ	Read Fault Code		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	MM8KP	MM8KP RFJ	Erase Fault Code		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	MM8KP	MM8KP RFJ	Live Data		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	MM8KP	MM8KP RFJ	Actuation Test		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	MM8KP	MM8KP RFJ	Special Function	Configuration	Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	MM8KP	MM8KP RFJ	Special Function	Pack Repair	Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	DCM3.5		Read ECU Information		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	DCM3.5		Read Fault Code		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	DCM3.5		Erase Fault Code		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	DCM3.5		Live Data		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	DCM3.5		Actuation Test		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	DCM3.5		Special Function	Configuration	Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	DCM3.5		Special Function	Pack Repair	Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	HD1_S1807_BR2	985 - DV6C M	Read ECU Information		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	HD1_S1807_BR2	985 - DV6C M	Read Fault Code		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	HD1_S1807_BR2	985 - DV6C M	Erase Fault Code		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	HD1_S1807_BR2	985 - DV6C M	Live Data		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	HD1_S1807_BR2	985 - DV6C M	Actuation Test		Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	HD1_S1807_BR2	985 - DV6C M	Special Function	Configuration	Y		
CITROEN C4 (2004-2010)		Engine management ECU	Yes	HD1_S1807_BR2	985 - DV6C M	Special Function	Pack Repair	Y		
CITROEN C4 (2004-2010)		Engine management ECU	No	HD1_S1803	HD1_S1803 RHR	Read ECU Information		Y		
CITROEN C4 (2004-2010)		Engine management ECU	No	HD1_S1803	HD1_S1803 RHR	Read Fault Code		Y		
CITROEN C4 (2004-2010)		Engine management ECU	No	HD1_S1803	HD1_S1803 RHR	Erase Fault Code		Y		
CITROEN C4 (2004-2010)		Engine management ECU	No	HD1_S1803	HD1_S1803 RHR	Live Data		Y		
CITROEN C4 (2004-2010)		Engine management ECU	No	HD1_S1803	HD1_S1803 RHR	Actuation Test		Y		
CITROEN C4 (2004-2010)		Engine management ECU	No	HD1_S1803	HD1_S1803 RHR	Special Function	Configuration	Y		
CITROEN C4 (2004-2010)		Engine management ECU	No	HD1_S1803	HD1_S1803 RHR	Special Function	Pack Repair	Y		
CITROEN C4 (2004-2010)		Engine management ECU	No	MM6LPB	RFJ MM6LPB	Read ECU Information		Y		
CITROEN C4 (2004-2010)		Engine management ECU	No	MM6LPB	RFJ MM6LPB	Read Fault Code		Y		
CITROEN C4 (2004-2010)		Engine management ECU	No	MM6LPB	RFJ MM6LPB	Erase Fault Code		Y		
CITROEN C4 (2004-2010)		Engine management ECU	No	MM6LPB	RFJ MM6LPB	Live Data		Y		
CITROEN C4 (2004-2010)		Engine management ECU	No	MM6LPB	RFJ MM6LPB	Actuation Test		Y		
CITROEN C4 (2004-2010)		Engine management ECU	No	MM6LPB	RFJ MM6LPB	Special Function	Configuration	Y		
CITROEN C4 (2004-2010)		Engine management ECU	No	MM6LPB	RFJ MM6LPB	Special Function	Pack Repair	Y		
CITROEN C4 (2004-2010)		Engine management ECU	No	MM6LPB	6FY MM6LPB	Read ECU Information		Y		
CITROEN C4 (2004-2010)		Engine management ECU	No	MM6LPB	6FY MM6LPB	Read Fault Code		Y		
CITROEN C4 (2004-2010)		Engine management ECU	No	MM6LPB	6FY MM6LPB	Erase Fault Code		Y		
CITROEN C4 (2004-2010)		Engine management ECU	No	MM6LPB	6FY MM6LPB	Live Data		Y		
CITROEN C4 (2004-2010)		Engine management ECU	No	MM6LPB	6FY MM6LPB	Actuation Test		Y		
CITROEN C4 (2004-2010)		Engine management ECU	No	MM6LPB	6FY MM6LPB	Special Function	Configuration	Y		
CITROEN C4 (2004-2010)		Engine management ECU	No	MM6LPB	6FY MM6LPB	Special Function	Pack Repair	Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function reasons	Add (Y/N)	Verification (Y/N)	Remarks
CITROEN C4 (2004-2010)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP_81			Read Fault Code		Y		
CITROEN C4 (2004-2010)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP_81			Erase Fault Code		Y		
CITROEN C4 (2004-2010)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP_81			Live Data		Y		
CITROEN C4 (2004-2010)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP_81			Actuation Test		Y		
CITROEN C4 (2004-2010)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP_81			Special Function	Configuration	Y		
CITROEN C4 (2004-2010)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP_81			Special Function	Pack Repair	Y		
CITROEN C4 (2004-2010)		Automatic gearbox or controlled manual gearbox	BVA_AMB_AT6_EIB065			Read ECU Information		Y		
CITROEN C4 (2004-2010)		Automatic gearbox or controlled manual gearbox	BVA_AMB_AT6_EIB065			Read Fault Code		Y		
CITROEN C4 (2004-2010)		Automatic gearbox or controlled manual gearbox	BVA_AMB_AT6_EIB065			Erase Fault Code		Y		
CITROEN C4 (2004-2010)		Automatic gearbox or controlled manual gearbox	BVA_AMB_AT6_EIB065			Live Data		Y		
CITROEN C4 (2004-2010)		Automatic gearbox or controlled manual gearbox	BVA_AMB_AT6_EIB065			Actuation Test		Y		
CITROEN C4 (2004-2010)		Automatic gearbox or controlled manual gearbox	BVA_AMB_AT6_EIB065			Special Function	Oil wear counter	Y		
CITROEN C4 (2004-2010)		Automatic gearbox or controlled manual gearbox	BVA_AMB_AT6_EIB065			Special Function	Configuration	Y		
CITROEN C4 (2004-2010)		Automatic gearbox or controlled manual gearbox	BVA_AMB_AT6_EIB065			Special Function	Pack Repair	Y		
CITROEN C4 (2004-2010)		Automatic gearbox or controlled manual gearbox	BVA_AL4			Read ECU Information		Y		
CITROEN C4 (2004-2010)		Automatic gearbox or controlled manual gearbox	BVA_AL4			Read Fault Code		Y		
CITROEN C4 (2004-2010)		Automatic gearbox or controlled manual gearbox	BVA_AL4			Erase Fault Code		Y		
CITROEN C4 (2004-2010)		Automatic gearbox or controlled manual gearbox	BVA_AL4			Live Data		Y		
CITROEN C4 (2004-2010)		Automatic gearbox or controlled manual gearbox	BVA_AL4			Actuation Test		Y		
CITROEN C4 (2004-2010)		Automatic gearbox or controlled manual gearbox	BVA_AL4			Special Function	Configuration	Y		
CITROEN C4 (2004-2010)		Automatic gearbox or controlled manual gearbox	BVA_AL4			Special Function	Pack Repair	Y		
CITROEN C4 (2004-2010)		Automatic gearbox or controlled manual gearbox	BVA_AMB			Read ECU Information		Y		
CITROEN C4 (2004-2010)		Automatic gearbox or controlled manual gearbox	BVA_AMB			Read Fault Code		Y		
CITROEN C4 (2004-2010)		Automatic gearbox or controlled manual gearbox	BVA_AMB			Erase Fault Code		Y		
CITROEN C4 (2004-2010)		Automatic gearbox or controlled manual gearbox	BVA_AMB			Live Data		Y		
CITROEN C4 (2004-2010)		Automatic gearbox or controlled manual gearbox	BVA_AMB			Actuation Test		Y		
CITROEN C4 (2004-2010)		Automatic gearbox or controlled manual gearbox	BVA_AMB			Special Function	Configuration	Y		
CITROEN C4 (2004-2010)		Automatic gearbox or controlled manual gearbox	BVA_AMB			Special Function	Pack Repair	Y		
CITROEN C4 (2004-2010)		Automatic gearbox or controlled manual gearbox	CFC300P			Read ECU Information		Y		
CITROEN C4 (2004-2010)		Automatic gearbox or controlled manual gearbox	CFC300P			Read Fault Code		Y		
CITROEN C4 (2004-2010)		Automatic gearbox or controlled manual gearbox	CFC300P			Erase Fault Code		Y		
CITROEN C4 (2004-2010)		Automatic gearbox or controlled manual gearbox	CFC300P			Live Data		Y		
CITROEN C4 (2004-2010)		Automatic gearbox or controlled manual gearbox	CFC300P			Actuation Test		Y		
CITROEN C4 (2004-2010)		Automatic gearbox or controlled manual gearbox	CFC300P			Special Function	Replacement parts	Y		
CITROEN C4 (2004-2010)		Air bags and pre-tensioners control unit				Read ECU Information		Y		
CITROEN C4 (2004-2010)		Air bags and pre-tensioners control unit				Read Fault Code		Y		
CITROEN C4 (2004-2010)		Air bags and pre-tensioners control unit				Erase Fault Code		Y		
CITROEN C4 (2004-2010)		Air bags and pre-tensioners control unit				Live Data		Y		
CITROEN C4 (2004-2010)		Air bags and pre-tensioners control unit				Special Function	Configuration	Y		
CITROEN C4 (2004-2010)		Air bags and pre-tensioners control unit				Special Function	Pack Repair	Y		
CITROEN C4 (2004-2010)		Automatic gearbox electric control ECU				Read ECU Information		Y		
CITROEN C4 (2004-2010)		Automatic gearbox electric control ECU				Read Fault Code		Y		
CITROEN C4 (2004-2010)		Automatic gearbox electric control ECU				Erase Fault Code		Y		
CITROEN C4 (2004-2010)		Automatic gearbox electric control ECU				Live Data		Y		
CITROEN C4 (2004-2010)		Automatic gearbox electric control ECU				Special Function	Configuration	Y		
CITROEN C4 (2004-2010)		Automatic gearbox electric control ECU				Special Function	Pack Repair	Y		
CITROEN C4 (2004-2010)		Power steering	GEP_1			Read ECU Information		Y		
CITROEN C4 (2004-2010)		Power steering	GEP_1			Read Fault Code		Y		
CITROEN C4 (2004-2010)		Power steering	GEP_1			Erase Fault Code		Y		
CITROEN C4 (2004-2010)		Power steering	GEP_1			Live Data		Y		
CITROEN C4 (2004-2010)		Power steering	GEP_2			Read ECU Information		Y		
CITROEN C4 (2004-2010)		Power steering	GEP_2			Read Fault Code		Y		
CITROEN C4 (2004-2010)		Power steering	GEP_2			Erase Fault Code		Y		
CITROEN C4 (2004-2010)		Power steering	GEP_2			Live Data		Y		
CITROEN C4 (2004-2010)		Power steering	GEP_2			Actuation Test		Y		
CITROEN C4 (2004-2010)		Pneumatic suspension				Read ECU Information		Y		
CITROEN C4 (2004-2010)		Pneumatic suspension				Read Fault Code		Y		
CITROEN C4 (2004-2010)		Pneumatic suspension				Erase Fault Code		Y		
CITROEN C4 (2004-2010)		Pneumatic suspension				Live Data		Y		
CITROEN C4 (2004-2010)		Pneumatic suspension				Actuation Test		Y		
CITROEN C4 (2004-2010)		Pneumatic suspension				Special Function	Configuration	Y		
CITROEN C4 (2004-2010)		Pneumatic suspension				Special Function	Pack Repair	Y		
CITROEN C4 (2004-2010)		Under-inflation detection				Read ECU Information		Y		
CITROEN C4 (2004-2010)		Under-inflation detection				Read Fault Code		Y		
CITROEN C4 (2004-2010)		Under-inflation detection				Erase Fault Code		Y		
CITROEN C4 (2004-2010)		Under-inflation detection				Live Data		Y		
CITROEN C4 (2004-2010)		Under-inflation detection				Special Function	Pack Repair	Y		
CITROEN C4 (2004-2010)		Dynamic headlamp height adjuster				Read ECU Information		Y		
CITROEN C4 (2004-2010)		Dynamic headlamp height adjuster				Read Fault Code		Y		
CITROEN C4 (2004-2010)		Dynamic headlamp height adjuster				Erase Fault Code		Y		
CITROEN C4 (2004-2010)		Dynamic headlamp height adjuster				Live Data		Y		
CITROEN C4 (2004-2010)		Dynamic headlamp height adjuster				Actuation Test		Y		
CITROEN C4 (2004-2010)		Dynamic headlamp height adjuster				Special Function	Configuration	Y		
CITROEN C4 (2004-2010)		Dynamic headlamp height adjuster				Special Function	Pack Repair	Y		
CITROEN C4 (2004-2010)		Battery charge status unit	BECB			Read ECU Information		Y		
CITROEN C4 (2004-2010)		Battery charge status unit	BECB			Read Fault Code		Y		
CITROEN C4 (2004-2010)		Battery charge status unit	BECB			Erase Fault Code		Y		
CITROEN C4 (2004-2010)		Battery charge status unit	BECB			Live Data		Y		
CITROEN C4 (2004-2010)		Battery charge status unit	BECB_GEN2			Read ECU Information		Y		
CITROEN C4 (2004-2010)		Battery charge status unit	BECB_GEN2			Read Fault Code		Y		
CITROEN C4 (2004-2010)		Battery charge status unit	BECB_GEN2			Erase Fault Code		Y		
CITROEN C4 (2004-2010)		Battery charge status unit	BECB_GEN2			Live Data		Y		
CITROEN C4 (2004-2010)		Battery charge status unit	BECB_GEN2			Special Function	Configuration	Y		
CITROEN C4 (2004-2010)		Battery charge status unit	BECB_GEN2			Special Function	Pack Repair	Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Models	Year classification	System	Subsystem or system type (YES stands for Citroen, NO stands for other wires)	Subsystem (YES stands for Citroen, NO stands for other wires)	Subsystem or system type	Function type	Special function subitems	Add (Y/N)	Verification (Y/N)	Remarks
CITROEN C4 (2004-2010)		Electric secondary brake				Read ECU Information		Y		
CITROEN C4 (2004-2010)		Electric secondary brake				Read Fault Code		Y		
CITROEN C4 (2004-2010)		Electric secondary brake				Erase Fault Code		Y		
CITROEN C4 (2004-2010)		Electric secondary brake				Live Data		Y		
CITROEN C4 (2004-2010)		Electric secondary brake				Actuation Test		Y		
CITROEN C4 (2004-2010)		Electric secondary brake				Special Function	Pack Repair	Y		
CITROEN C4 (2004-2010)		Lane departure warning system				Read ECU Information		Y		
CITROEN C4 (2004-2010)		Lane departure warning system				Read Fault Code		Y		
CITROEN C4 (2004-2010)		Lane departure warning system				Erase Fault Code		Y		
CITROEN C4 (2004-2010)		Lane departure warning system				Live Data		Y		
CITROEN C4 (2004-2010)		Lane departure warning system				Actuation Test		Y		
CITROEN C4 (2004-2010)		Lane departure warning system				Special Function	Configuration	Y		
CITROEN C4 (2004-2010)		Engine relay unit				Read ECU Information		Y		
CITROEN C4 (2004-2010)		Engine relay unit				Read Fault Code		Y		
CITROEN C4 (2004-2010)		Engine relay unit				Erase Fault Code		Y		
CITROEN C4 (2004-2010)		Engine relay unit				Live Data		Y		
CITROEN C4 (2004-2010)		Trailer relay unit				Read ECU Information		Y		
CITROEN C4 (2004-2010)		Trailer relay unit				Read Fault Code		Y		
CITROEN C4 (2004-2010)		Trailer relay unit				Erase Fault Code		Y		
CITROEN C4 (2004-2010)		Trailer relay unit				Live Data		Y		
CITROEN C4 (2004-2010)		Windscreen wiper				Read ECU Information		Y		
CITROEN C4 (2004-2010)		Windscreen wiper				Read Fault Code		Y		
CITROEN C4 (2004-2010)		Windscreen wiper				Erase Fault Code		Y		
CITROEN C4 (2004-2010)		Parking assistance				Read ECU Information		Y		
CITROEN C4 (2004-2010)		Parking assistance				Read Fault Code		Y		
CITROEN C4 (2004-2010)		Parking assistance				Erase Fault Code		Y		
CITROEN C4 (2004-2010)		Parking assistance				Live Data		Y		
CITROEN C4 (2004-2010)		Parking assistance				Special Function	Pack Repair	Y		
CITROEN C4 (2004-2010)		Controls under the steering wheel				Read ECU Information		Y		
CITROEN C4 (2004-2010)		Controls under the steering wheel				Read Fault Code		Y		
CITROEN C4 (2004-2010)		Controls under the steering wheel				Erase Fault Code		Y		
CITROEN C4 (2004-2010)		Controls under the steering wheel				Live Data		Y		
CITROEN C4 (2004-2010)		Controls under the steering wheel				Actuation Test		Y		
CITROEN C4 (2004-2010)		Air conditioning				Read ECU Information		Y		
CITROEN C4 (2004-2010)		Air conditioning				Read Fault Code		Y		
CITROEN C4 (2004-2010)		Air conditioning				Erase Fault Code		Y		
CITROEN C4 (2004-2010)		Air conditioning				Live Data		Y		
CITROEN C4 (2004-2010)		Air conditioning				Actuation Test		Y		
CITROEN C4 (2004-2010)		Air conditioning				Special Function	Configuration	Y		
CITROEN C4 (2004-2010)		Instrument panel				Read ECU Information		Y		
CITROEN C4 (2004-2010)		Instrument panel				Read Fault Code		Y		
CITROEN C4 (2004-2010)		Instrument panel				Erase Fault Code		Y		
CITROEN C4 (2004-2010)		Instrument panel				Live Data		Y		
CITROEN C4 (2004-2010)		Instrument panel				Actuation Test		Y		
CITROEN C4 (2004-2010)		Instrument panel				Special Function	Pack Repair	Y		
CITROEN C4 (2004-2010)		Separate instrument panel				Read ECU Information		Y		
CITROEN C4 (2004-2010)		Separate instrument panel				Read Fault Code		Y		
CITROEN C4 (2004-2010)		Separate instrument panel				Erase Fault Code		Y		
CITROEN C4 (2004-2010)		Separate instrument panel				Live Data		Y		
CITROEN C4 (2004-2010)		Separate instrument panel				Special Function	Pack Repair	Y		
CITROEN C4 (2004-2010)		Radio amplifier				Read ECU Information		Y		
CITROEN C4 (2004-2010)		Radio amplifier				Read Fault Code		Y		
CITROEN C4 (2004-2010)		Radio amplifier				Erase Fault Code		Y		
CITROEN C4 (2004-2010)		Radio amplifier				Actuation Test		Y		
CITROEN C4 (2004-2010)		Radio amplifier				Special Function	Configuration	Y		
CITROEN C4 (2004-2010)		Radio amplifier				Special Function	Pack Repair	Y		
CITROEN C4 (2004-2010)		CD changer / External CD player				Read ECU Information		Y		
CITROEN C4 (2004-2010)		CD changer / External CD player				Read Fault Code		Y		
CITROEN C4 (2004-2010)		CD changer / External CD player				Erase Fault Code		Y		
CITROEN C4 (2004-2010)		CD changer / External CD player				Actuation Test		Y		
CITROEN C4 (2004-2010)		CD changer / External CD player				Special Function	Configuration	Y		
CITROEN C4 (2004-2010)		Telematic unit (BTX) or audio-navigation	RADIONAV_ENSG			Read ECU Information		Y		
CITROEN C4 (2004-2010)		Telematic unit (BTX) or audio-navigation	RADIONAV_ENSG			Read Fault Code		Y		
CITROEN C4 (2004-2010)		Telematic unit (BTX) or audio-navigation	RADIONAV_ENSG			Erase Fault Code		Y		
CITROEN C4 (2004-2010)		Telematic unit (BTX) or audio-navigation	RADIONAV_ENSG			Live Data		Y		
CITROEN C4 (2004-2010)		Telematic unit (BTX) or audio-navigation	RADIONAV_ENSG			Actuation Test		Y		
CITROEN C4 (2004-2010)		Telematic unit (BTX) or audio-navigation	RADIONAV_ENSG			Special Function	Configuration	Y		
CITROEN C4 (2004-2010)		Telematic unit (BTX) or audio-navigation	BOUTIER_TELEMATIQUE			Read ECU Information		Y		
CITROEN C4 (2004-2010)		Telematic unit (BTX) or audio-navigation	BOUTIER_TELEMATIQUE			Read Fault Code		Y		
CITROEN C4 (2004-2010)		Telematic unit (BTX) or audio-navigation	BOUTIER_TELEMATIQUE			Erase Fault Code		Y		
CITROEN C4 (2004-2010)		Telematic unit (BTX) or audio-navigation	BOUTIER_TELEMATIQUE			Actuation Test		Y		
CITROEN C4 (2004-2010)		Telematic unit (BTX) or audio-navigation	BOUTIER_TELEMATIQUE			Special Function	Configuration	Y		
CITROEN C4 (2004-2010)		Telematic unit (BTX) or audio-navigation	BOUTIER_TELEMATIQUE			Special Function	Pack Repair	Y		
CITROEN C4 (2004-2010)		Radio				Read ECU Information		Y		
CITROEN C4 (2004-2010)		Radio				Read Fault Code		Y		
CITROEN C4 (2004-2010)		Radio				Erase Fault Code		Y		
CITROEN C4 (2004-2010)		Radio				Live Data		Y		
CITROEN C4 (2004-2010)		Radio				Actuation Test		Y		
CITROEN C4 (2004-2010)		Radio				Special Function	Configuration	Y		
CITROEN C4 (2004-2010)		Hands-free kit / Portable unit	KML			Read ECU Information		Y		
CITROEN C4 (2004-2010)		Hands-free kit / Portable unit	KML			Read Fault Code		Y		
CITROEN C4 (2004-2010)		Hands-free kit / Portable unit	KML			Erase Fault Code		Y		
CITROEN C4 (2004-2010)		Hands-free kit / Portable unit	KML			Live Data		Y		
CITROEN C4 (2004-2010)		Hands-free kit / Portable unit	KML			Actuation Test		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Models	Year classification	System	Subsystem or system type (YES stands for Citroen, NO stands for other wires)	Subsystem (YES stands for Citroen, NO stands for other wires)	Subsystem or system type	Function type	Special function reasons	Add (Y/N)	Verification (Y/N)	Remarks
CITROEN C4 (2004-2010)		Hands-free kit / Portable unit	IME			Special Function	Configuration	Y		
CITROEN C4 (2004-2010)		Hands-free kit / Portable unit	BOITIER_NOMADE			Read ECU Information		Y		
CITROEN C4 (2004-2010)		Hands-free kit / Portable unit	BOITIER_NOMADE			Read Fault Code		Y		
CITROEN C4 (2004-2010)		Hands-free kit / Portable unit	BOITIER_NOMADE			Erase Fault Code		Y		
CITROEN C4 (2004-2010)		Hands-free kit / Portable unit	BOITIER_NOMADE			Live Data		Y		
CITROEN C4 (2004-2010)		Hands-free kit / Portable unit	BOITIER_NOMADE			Actuation Test		Y		
CITROEN C4 (2004-2010)		Hands-free kit / Portable unit	BOITIER_NOMADE			Special Function	Configuration	Y		
CITROEN C4 (2004-2010)		Anti-theft alarm	Alarm without anti-lift module			Read ECU Information		Y		
CITROEN C4 (2004-2010)		Anti-theft alarm	Alarm without anti-lift module			Read Fault Code		Y		
CITROEN C4 (2004-2010)		Anti-theft alarm	Alarm without anti-lift module			Erase Fault Code		Y		
CITROEN C4 (2004-2010)		Anti-theft alarm	Alarm without anti-lift module			Live Data		Y		
CITROEN C4 (2004-2010)		Anti-theft alarm	Alarm without anti-lift module			Actuation Test		Y		
CITROEN C4 (2004-2010)		Anti-theft alarm	Alarm without anti-lift module			Special Function	Configuration	Y		
CITROEN C4 (2004-2010)		Anti-theft alarm	Alarm without anti-lift module			Special Function	Pack Repair	Y		
CITROEN C4 (2004-2010)		Seat driver position memory module				Read ECU Information		Y		
CITROEN C4 (2004-2010)		Seat driver position memory module				Read Fault Code		Y		
CITROEN C4 (2004-2010)		Seat driver position memory module				Erase Fault Code		Y		
CITROEN C4 (2004-2010)		Seat driver position memory module				Live Data		Y		
CITROEN C4 (2004-2010)		Seat driver position memory module				Actuation Test		Y		
CITROEN C4 (2004-2010)		Seat driver position memory module				Special Function	Configuration	Y		
CITROEN C4 (2004-2010)		Seat driver position memory module				Special Function	Pack Repair	Y		
CITROEN C4 (2004-2010)		Passenger door module	BROSE			Read ECU Information		Y		
CITROEN C4 (2004-2010)		Passenger door module	BROSE			Read Fault Code		Y		
CITROEN C4 (2004-2010)		Passenger door module	BROSE			Erase Fault Code		Y		
CITROEN C4 (2004-2010)		Passenger door module	BROSE			Live Data		Y		
CITROEN C4 (2004-2010)		Passenger door module	BROSE			Actuation Test		Y		
CITROEN C4 (2004-2010)		Passenger door module	BROSE			Special Function	Replacement parts	Y		
CITROEN C4 (2004-2010)		Driver's door module	BROSE			Read ECU Information		Y		
CITROEN C4 (2004-2010)		Driver's door module	BROSE			Read Fault Code		Y		
CITROEN C4 (2004-2010)		Driver's door module	BROSE			Erase Fault Code		Y		
CITROEN C4 (2004-2010)		Driver's door module	BROSE			Live Data		Y		
CITROEN C4 (2004-2010)		Driver's door module	BROSE			Actuation Test		Y		
CITROEN C4 (2004-2010)		Driver's door module	BROSE			Special Function	Replacement parts	Y		
CITROEN C4 (2004-2010)		Ambient interior lighting unit				Read ECU Information		Y		
CITROEN C4 (2004-2010)		Ambient interior lighting unit				Live Data		Y		
CITROEN C4 (2004-2010)		Rain and light sensor				Read ECU Information		Y		
CITROEN C4 (2004-2010)		Rain and light sensor				Read Fault Code		Y		
CITROEN C4 (2004-2010)		Rain and light sensor				Erase Fault Code		Y		
CITROEN C4 (2004-2010)		High frequency receiver				Read ECU Information		Y		
CITROEN C4 (2004-2010)		High frequency receiver				Read Fault Code		Y		
CITROEN C4 (2004-2010)		High frequency receiver				Erase Fault Code		Y		
CITROEN C4 (2004-2010)		High frequency receiver				Live Data		Y		
CITROEN C4 (2004-2010)		Diesel additive function				Read ECU Information		Y		
CITROEN C4 (2004-2010)		Diesel additive function				Read Fault Code		Y		
CITROEN C4 (2004-2010)		Diesel additive function				Erase Fault Code		Y		
CITROEN C4 (2004-2010)		Diesel additive function				Live Data		Y		
CITROEN C4 (2004-2010)		Diesel additive function				Actuation Test		Y		
CITROEN C4 (2004-2010)		Diesel additive function				Special Function	Configuration	Y		
CITROEN C4 (2004-2010)		Diesel additive function				Special Function	Pack Repair	Y		
CITROEN C4 (2004-2010)		Diesel additive pump				Read ECU Information		Y		
CITROEN C4 (2004-2010)		Diesel additive pump				Read Fault Code		Y		
CITROEN C4 (2004-2010)		Diesel additive pump				Erase Fault Code		Y		
CITROEN C4 (2004-2010)		Diesel additive pump				Live Data		Y		
CITROEN C4 (2004-2010)		Diesel additive pump				Actuation Test		Y		
CITROEN C4 (2004-2010)		Diesel additive pump				Special Function	Configuration	Y		
CITROEN C4 (2004-2010)		Diesel additive pump				Special Function	Pack Repair	Y		
CITROEN C4 (2004-2010)		Multifunction screen	Type "A" (segments),with buttons			Read ECU Information		Y		
CITROEN C4 (2004-2010)		Multifunction screen	Type "A" (segments),with buttons			Read Fault Code		Y		
CITROEN C4 (2004-2010)		Multifunction screen	Type "A" (segments),with buttons			Erase Fault Code		Y		
CITROEN C4 (2004-2010)		Multifunction screen	Type "A" (segments),with buttons			Live Data		Y		
CITROEN C4 (2004-2010)		Multifunction screen	Type "A" (segments),with buttons			Actuation Test		Y		
CITROEN C4 (2004-2010)		Multifunction screen	Type "A" (segments),with buttons			Special Function	Configuration	Y		
CITROEN C4 (2004-2010)		Multifunction screen	Type "A" (segments),without button			Read ECU Information		Y		
CITROEN C4 (2004-2010)		Multifunction screen	Type "A" (segments),without button			Read Fault Code		Y		
CITROEN C4 (2004-2010)		Multifunction screen	Type "A" (segments),without button			Erase Fault Code		Y		
CITROEN C4 (2004-2010)		Multifunction screen	Type "A" (segments),without button			Live Data		Y		
CITROEN C4 (2004-2010)		Multifunction screen	Type "A" (segments),without button			Actuation Test		Y		
CITROEN C4 (2004-2010)		Multifunction screen	Type "A" (segments),without button			Special Function	Configuration	Y		
CITROEN C4 (2004-2010)		Multifunction screen	Type "A" (segments),without button			Special Function	Pack Repair	Y		
CITROEN C4 (2004-2010)		Multifunction screen	Type "C" (dot matrix)			Read ECU Information		Y		
CITROEN C4 (2004-2010)		Multifunction screen	Type "C" (dot matrix)			Read Fault Code		Y		
CITROEN C4 (2004-2010)		Multifunction screen	Type "C" (dot matrix)			Erase Fault Code		Y		
CITROEN C4 (2004-2010)		Multifunction screen	Type "C" (dot matrix)			Live Data		Y		
CITROEN C4 (2004-2010)		Multifunction screen	Type "C" (dot matrix)			Actuation Test		Y		
CITROEN C4 (2004-2010)		Multifunction screen	Type "C" (dot matrix)			Special Function	Configuration	Y		
CITROEN C4 (2004-2010)		Multifunction screen	Type "C" (dot matrix)			Special Function	Pack Repair	Y		
CITROEN C4 (2004-2010)		Multifunction screen	Type "C colour" (dot matrix)			Read ECU Information		Y		
CITROEN C4 (2004-2010)		Multifunction screen	Type "C colour" (dot matrix)			Read Fault Code		Y		
CITROEN C4 (2004-2010)		Multifunction screen	Type "C colour" (dot matrix)			Erase Fault Code		Y		
CITROEN C4 (2004-2010)		Multifunction screen	Type "C colour" (dot matrix)			Live Data		Y		
CITROEN C4 (2004-2010)		Multifunction screen	Type "C colour" (dot matrix)			Actuation Test		Y		
CITROEN C4 (2004-2010)		Multifunction screen	Type "C colour" (dot matrix)			Special Function	Configuration	Y		
CITROEN C4 (2004-2010)		Multifunction screen	Type "C colour" (dot matrix)			Special Function	Pack Repair	Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Models	Year classification	System	Subsystem or system type (YES stands for Citroen, NO stands for other cars)	Subsystem (YES stands for Citroen, NO stands for other cars)	Subsystem or system type	Function type	Special function reasons	Add (Y/N)	Verification (Y/N)	Remarks
CITROEN C4 (2004-2010)		Driving school module				Read ECU Information		Y		
CITROEN C4 (2004-2010)		Service module / Independent telematic unit		BTA		Read ECU Information		Y		
CITROEN C4 (2004-2010)		Service module / Independent telematic unit		BTA		Read Fault Code		Y		
CITROEN C4 (2004-2010)		Service module / Independent telematic unit		BTA		Erase Fault Code		Y		
CITROEN C4 (2004-2010)		Service module / Independent telematic unit		BTA		Live Data		Y		
CITROEN C4 (2004-2010)		Service module / Independent telematic unit		BTA		Actuation Test		Y		
CITROEN C4 (2004-2010)		Service module / Independent telematic unit		BLVY		Read ECU Information		Y		
CITROEN C4 (2004-2010)		Service module / Independent telematic unit		BLVY		Read Fault Code		Y		
CITROEN C4 (2004-2010)		Service module / Independent telematic unit		BLVY		Erase Fault Code		Y		
CITROEN C4 (2004-2010)		Service module / Independent telematic unit		BLVY		Live Data		Y		
CITROEN C4 (2004-2010)		Service module / Independent telematic unit		BLVY		Special Function	Configuration	Y		
CITROEN C4 (2004-2010)		Service module / Independent telematic unit		BLVY		Special Function	Declaration SIM card	Y		
C4 SEDAN (After 2006)		VIN				Special Function	Display of vehicle information	Y		
C4 SEDAN (After 2006)		Injection	Petrol engine	MMRKP Non BioFlex		Read ECU Information		Y		
C4 SEDAN (After 2006)		Injection	Petrol engine	MMRKP Non BioFlex		Read Fault Code		Y		
C4 SEDAN (After 2006)		Injection	Petrol engine	MMRKP Non BioFlex		Erase Fault Code		Y		
C4 SEDAN (After 2006)		Injection	Petrol engine	MMRKP Non BioFlex		Live Data		Y		
C4 SEDAN (After 2006)		Injection	Petrol engine	MMRKP Non BioFlex		Actuation Test		Y		
C4 SEDAN (After 2006)		Injection	Petrol engine	MMRKP Non BioFlex		Special Function	Initialisation of auto-adaptation	Y		
C4 SEDAN (After 2006)		Injection	Petrol engine	MMRKP Non BioFlex		Special Function	Replacement parts	Y		
C4 SEDAN (After 2006)		Injection	Petrol engine	MMRKP BioFlex		Read ECU Information		Y		
C4 SEDAN (After 2006)		Injection	Petrol engine	MMRKP BioFlex		Read Fault Code		Y		
C4 SEDAN (After 2006)		Injection	Petrol engine	MMRKP BioFlex		Erase Fault Code		Y		
C4 SEDAN (After 2006)		Injection	Petrol engine	MMRKP BioFlex		Live Data		Y		
C4 SEDAN (After 2006)		Injection	Petrol engine	MMRKP BioFlex		Actuation Test		Y		
C4 SEDAN (After 2006)		Injection	Petrol engine	MMRKP BioFlex		Special Function	Initialisation of auto-adaptation	Y		
C4 SEDAN (After 2006)		Injection	Petrol engine	MMRKP BioFlex		Special Function	Replacement parts	Y		
C4 SEDAN (After 2006)		Injection	Petrol engine	RFJ MM6LPB		Read ECU Information		Y		
C4 SEDAN (After 2006)		Injection	Petrol engine	RFJ MM6LPB		Read Fault Code		Y		
C4 SEDAN (After 2006)		Injection	Petrol engine	RFJ MM6LPB		Erase Fault Code		Y		
C4 SEDAN (After 2006)		Injection	Petrol engine	RFJ MM6LPB		Live Data		Y		
C4 SEDAN (After 2006)		Injection	Petrol engine	RFJ MM6LPB		Actuation Test		Y		
C4 SEDAN (After 2006)		Injection	Petrol engine	RFJ MM6LPB		Special Function	Configuration	Y		
C4 SEDAN (After 2006)		Injection	Petrol engine	RFJ MM6LPB		Special Function	Initialisation of auto-adaptation	Y		
C4 SEDAN (After 2006)		Injection	Petrol engine	RFJ MM6LPB		Special Function	Matching	Y		
C4 SEDAN (After 2006)		Injection	Petrol engine	NFU BOSCH ME749		Read ECU Information		Y		
C4 SEDAN (After 2006)		Injection	Petrol engine	NFU BOSCH ME749		Read Fault Code		Y		
C4 SEDAN (After 2006)		Injection	Petrol engine	NFU BOSCH ME749		Erase Fault Code		Y		
C4 SEDAN (After 2006)		Injection	Petrol engine	NFU BOSCH ME749		Live Data		Y		
C4 SEDAN (After 2006)		Injection	Petrol engine	NFU BOSCH ME749		Actuation Test		Y		
C4 SEDAN (After 2006)		Injection	Petrol engine	NFU BOSCH ME749		Special Function	Initialisation of the autoadaptive values	Y		
C4 SEDAN (After 2006)		Injection	Petrol engine	NSA BOSCH ME749		Read ECU Information		Y		
C4 SEDAN (After 2006)		Injection	Petrol engine	NSA BOSCH ME749		Read Fault Code		Y		
C4 SEDAN (After 2006)		Injection	Petrol engine	NSA BOSCH ME749		Erase Fault Code		Y		
C4 SEDAN (After 2006)		Injection	Petrol engine	NSA BOSCH ME749		Live Data		Y		
C4 SEDAN (After 2006)		Injection	Petrol engine	NSA BOSCH ME749		Actuation Test		Y		
C4 SEDAN (After 2006)		Injection	Petrol engine	NSA BOSCH ME749		Special Function	Initialisation of the autoadaptive values	Y		
C4 SEDAN (After 2006)		Injection	Petrol engine	NFS BOSCH ME745		Read ECU Information		Y		
C4 SEDAN (After 2006)		Injection	Petrol engine	NFS BOSCH ME745		Read Fault Code		Y		
C4 SEDAN (After 2006)		Injection	Petrol engine	NFS BOSCH ME745		Erase Fault Code		Y		
C4 SEDAN (After 2006)		Injection	Petrol engine	NFS BOSCH ME745		Live Data		Y		
C4 SEDAN (After 2006)		Injection	Petrol engine	NFS BOSCH ME745		Actuation Test		Y		
C4 SEDAN (After 2006)		Injection	Petrol engine	NFS BOSCH ME745		Special Function	Initialisation of the autoadaptive values	Y		
C4 SEDAN (After 2006)		Injection	Petrol engine	NFU BOSCH ME745		Read ECU Information		Y		
C4 SEDAN (After 2006)		Injection	Petrol engine	NFU BOSCH ME745		Read Fault Code		Y		
C4 SEDAN (After 2006)		Injection	Petrol engine	NFU BOSCH ME745		Erase Fault Code		Y		
C4 SEDAN (After 2006)		Injection	Petrol engine	NFU BOSCH ME745		Live Data		Y		
C4 SEDAN (After 2006)		Injection	Petrol engine	NFU BOSCH ME745		Actuation Test		Y		
C4 SEDAN (After 2006)		Injection	Petrol engine	NFU BOSCH ME745		Special Function	Initialisation of the autoadaptive values	Y		
C4 SEDAN (After 2006)		Injection	Petrol engine	NSA BOSCH ME745		Read ECU Information		Y		
C4 SEDAN (After 2006)		Injection	Petrol engine	NSA BOSCH ME745		Read Fault Code		Y		
C4 SEDAN (After 2006)		Injection	Petrol engine	NSA BOSCH ME745		Erase Fault Code		Y		
C4 SEDAN (After 2006)		Injection	Petrol engine	NSA BOSCH ME745		Live Data		Y		
C4 SEDAN (After 2006)		Injection	Petrol engine	NSA BOSCH ME745		Actuation Test		Y		
C4 SEDAN (After 2006)		Injection	Petrol engine	NSA BOSCH ME745		Special Function	Initialisation of the autoadaptive values	Y		
C4 SEDAN (After 2006)		Injection	Petrol engine	NFR BOSCH ME745		Read ECU Information		Y		
C4 SEDAN (After 2006)		Injection	Petrol engine	NFR BOSCH ME745		Read Fault Code		Y		
C4 SEDAN (After 2006)		Injection	Petrol engine	NFR BOSCH ME745		Erase Fault Code		Y		
C4 SEDAN (After 2006)		Injection	Petrol engine	NFR BOSCH ME745		Live Data		Y		
C4 SEDAN (After 2006)		Injection	Petrol engine	NFR BOSCH ME745		Actuation Test		Y		
C4 SEDAN (After 2006)		Injection	Petrol engine	NFR BOSCH ME745		Special Function	Initialisation of the autoadaptive values	Y		
C4 SEDAN (After 2006)		Injection	Diesel engine	RHM BOSCH EDC15C2 DW10A		Read ECU Information		Y		
C4 SEDAN (After 2006)		Injection	Diesel engine	RHM BOSCH EDC15C2 DW10A		Live Data		Y		
C4 SEDAN (After 2006)		Injection	Diesel engine	RHS BOSCH EDC15C2 DW10A		Read ECU Information		Y		
C4 SEDAN (After 2006)		Injection	Diesel engine	RHS BOSCH EDC15C2 DW10A		Live Data		Y		
C4 SEDAN (After 2006)		Injection	Diesel engine	RHT BOSCH EDC15C2 DW10A		Read ECU Information		Y		
C4 SEDAN (After 2006)		Injection	Diesel engine	RHT BOSCH EDC15C2 DW10A		Live Data		Y		
C4 SEDAN (After 2006)		Injection	Diesel engine	RHW BOSCH EDC15C2 DW10A		Read ECU Information		Y		
C4 SEDAN (After 2006)		Injection	Diesel engine	RHW BOSCH EDC15C2 DW10A		Live Data		Y		
C4 SEDAN (After 2006)		Injection	Diesel engine	RHZ BOSCH EDC15C2 DW10A		Read ECU Information		Y		
C4 SEDAN (After 2006)		Injection	Diesel engine	RHZ BOSCH EDC15C2 DW10A		Live Data		Y		
C4 SEDAN (After 2006)		Injection	Diesel engine	90Z (FAP) BOSCH EDC16C34 DW12ED4-11CV		Read ECU Information		Y		
C4 SEDAN (After 2006)		Injection	Diesel engine	90Z (FAP) BOSCH EDC16C34 DW12ED4-11CV		Read Fault Code		Y		
C4 SEDAN (After 2006)		Injection	Diesel engine	90Z (FAP) BOSCH EDC16C34 DW12ED4-11CV		Erase Fault Code		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Models	Year classification	System	Subsystem or system type (YES stands for Citroen, NO stands for other areas)	Subsystem (YES stands for Citroen, NO stands for other areas)	Subsystem or system type	Function type	Special function reasons	Add (Y/N)	Verification (Y/N)	Remarks
C4 SEDAN (After 2006)		Injection	Diesel engine	90Z (EPF) BOSCH EDC16C34 DVWTE4-11CV		Live Data		Y		
C4 SEDAN (After 2006)		Injection	Diesel engine	90Z (EPF) BOSCH EDC16C34 DVWTE4-11CV		Actuation Test		Y		
C4 SEDAN (After 2006)		Injection	Diesel engine	90Z (EPF) BOSCH EDC16C34 DVWTE4-11CV		Special Function	Specific operation for maintenance and part replacement	Y		
C4 SEDAN (After 2006)		Injection	Diesel engine	90H BOSCH EDC16C34 DVWTE4-90CV		Read ECU Information		Y		
C4 SEDAN (After 2006)		Injection	Diesel engine	90H BOSCH EDC16C34 DVWTE4-90CV		Read Fault Code		Y		
C4 SEDAN (After 2006)		Injection	Diesel engine	90H BOSCH EDC16C34 DVWTE4-90CV		Erase Fault Code		Y		
C4 SEDAN (After 2006)		Injection	Diesel engine	90H BOSCH EDC16C34 DVWTE4-90CV		Live Data		Y		
C4 SEDAN (After 2006)		Injection	Diesel engine	90H BOSCH EDC16C34 DVWTE4-90CV		Actuation Test		Y		
C4 SEDAN (After 2006)		Injection	Diesel engine	90H BOSCH EDC16C34 DVWTE4-90CV		Special Function	Specific operation for maintenance and part replacement	Y		
C4 SEDAN (After 2006)		Injection	Diesel engine	90L - DVWCTE - 111 CV HDI_S1807_B02		Read ECU Information		Y		
C4 SEDAN (After 2006)		Injection	Diesel engine	90L - DVWCTE - 111 CV HDI_S1807_B02		Read Fault Code		Y		
C4 SEDAN (After 2006)		Injection	Diesel engine	90L - DVWCTE - 111 CV HDI_S1807_B02		Erase Fault Code		Y		
C4 SEDAN (After 2006)		Injection	Diesel engine	90L - DVWCTE - 111 CV HDI_S1807_B02		Live Data		Y		
C4 SEDAN (After 2006)		Injection	Diesel engine	90L - DVWCTE - 111 CV HDI_S1807_B02		Actuation Test		Y		
C4 SEDAN (After 2006)		Injection	Diesel engine	90L - DVWCTE - 111 CV HDI_S1807_B02		Special Function	Particulate filter after sales operation	Y		
C4 SEDAN (After 2006)		Injection	Diesel engine	90L - DVWCTE - 111 CV HDI_S1807_B02		Special Function	Replacement parts	Y		
C4 SEDAN (After 2006)		Injection	Diesel engine	90L - DVWCTE - 111 CV HDI_S1807_B02		Read ECU Information		Y		
C4 SEDAN (After 2006)		Injection	Diesel engine	90L - DVWCTE - 111 CV HDI_S1807_B02		Read Fault Code		Y		
C4 SEDAN (After 2006)		Injection	Diesel engine	90L - DVWCTE - 111 CV HDI_S1807_B02		Erase Fault Code		Y		
C4 SEDAN (After 2006)		Injection	Diesel engine	90L - DVWCTE - 111 CV HDI_S1807_B02		Live Data		Y		
C4 SEDAN (After 2006)		Injection	Diesel engine	90L - DVWCTE - 111 CV HDI_S1807_B02		Actuation Test		Y		
C4 SEDAN (After 2006)		Injection	Diesel engine	90L - DVWCTE - 111 CV HDI_S1807_B02		Special Function	Particulate filter after sales operation	Y		
C4 SEDAN (After 2006)		Injection	Diesel engine	90L - DVWCTE - 111 CV HDI_S1807_B02		Special Function	Replacement parts	Y		
C4 SEDAN (After 2006)		Injection	Diesel engine	90G - DWGCM - 108 CV HDI_S1807_B02		Read ECU Information		Y		
C4 SEDAN (After 2006)		Injection	Diesel engine	90G - DWGCM - 108 CV HDI_S1807_B02		Read Fault Code		Y		
C4 SEDAN (After 2006)		Injection	Diesel engine	90G - DWGCM - 108 CV HDI_S1807_B02		Erase Fault Code		Y		
C4 SEDAN (After 2006)		Injection	Diesel engine	90G - DWGCM - 108 CV HDI_S1807_B02		Live Data		Y		
C4 SEDAN (After 2006)		Injection	Diesel engine	90G - DWGCM - 108 CV HDI_S1807_B02		Actuation Test		Y		
C4 SEDAN (After 2006)		Injection	Diesel engine	90G - DWGCM - 108 CV HDI_S1807_B02		Special Function	Particulate filter after sales operation	Y		
C4 SEDAN (After 2006)		Injection	Diesel engine	90G - DWGCM - 108 CV HDI_S1807_B02		Special Function	Replacement parts	Y		
C4 SEDAN (After 2006)		Gearbox ECU	Auto gearbox AL4			Read ECU Information		Y		
C4 SEDAN (After 2006)		Gearbox ECU	Auto gearbox AL4			Read Fault Code		Y		
C4 SEDAN (After 2006)		Gearbox ECU	Auto gearbox AL4			Erase Fault Code		Y		
C4 SEDAN (After 2006)		Gearbox ECU	Auto gearbox AL4			Live Data		Y		
C4 SEDAN (After 2006)		Gearbox ECU	Auto gearbox AL4			Actuation Test		Y		
C4 SEDAN (After 2006)		Gearbox ECU	Auto gearbox AL4			Special Function	Configuration	Y		
C4 SEDAN (After 2006)		Gearbox ECU	Auto gearbox AL4			Special Function	Pedal initialisation	Y		
C4 SEDAN (After 2006)		Gearbox ECU	Auto gearbox AL4			Special Function	Initialisation of auto-adaptation	Y		
C4 SEDAN (After 2006)		Gearbox ECU	Auto gearbox AL4			Special Function	Oil wear counter	Y		
C4 SEDAN (After 2006)		ABS	ESP8_1_BOSCH			Read ECU Information		Y		
C4 SEDAN (After 2006)		ABS	ESP8_1_BOSCH			Read Fault Code		Y		
C4 SEDAN (After 2006)		ABS	ESP8_1_BOSCH			Erase Fault Code		Y		
C4 SEDAN (After 2006)		ABS	ESP8_1_BOSCH			Live Data		Y		
C4 SEDAN (After 2006)		ABS	ESP8_1_BOSCH			Actuation Test		Y		
C4 SEDAN (After 2006)		ABS	ESP8_1_BOSCH			Special Function	Replacement part	Y		
C4 SEDAN (After 2006)		ABS	ESP8_BOSCH			Read ECU Information		Y		
C4 SEDAN (After 2006)		ABS	ESP8_BOSCH			Read Fault Code		Y		
C4 SEDAN (After 2006)		ABS	ESP8_BOSCH			Erase Fault Code		Y		
C4 SEDAN (After 2006)		ABS	ESP8_BOSCH			Live Data		Y		
C4 SEDAN (After 2006)		ABS	ESP8_BOSCH			Actuation Test		Y		
C4 SEDAN (After 2006)		ABS	ESP8_BOSCH			Special Function	Calibration of the steering wheel angle sensor	Y		
C4 SEDAN (After 2006)		ABS	ESP8_BOSCH			Special Function	Bleeding	Y		
C4 SEDAN (After 2006)		ABS	ABS8_1_BOSCH			Read ECU Information		Y		
C4 SEDAN (After 2006)		ABS	ABS8_1_BOSCH			Read Fault Code		Y		
C4 SEDAN (After 2006)		ABS	ABS8_1_BOSCH			Erase Fault Code		Y		
C4 SEDAN (After 2006)		ABS	ABS8_1_BOSCH			Live Data		Y		
C4 SEDAN (After 2006)		ABS	ABS8_1_BOSCH			Actuation Test		Y		
C4 SEDAN (After 2006)		ABS	ABS8_1_BOSCH			Special Function	Replacement part	Y		
C4 SEDAN (After 2006)		ABS	ABS8_BOSCH			Read ECU Information		Y		
C4 SEDAN (After 2006)		ABS	ABS8_BOSCH			Read Fault Code		Y		
C4 SEDAN (After 2006)		ABS	ABS8_BOSCH			Erase Fault Code		Y		
C4 SEDAN (After 2006)		ABS	ABS8_BOSCH			Live Data		Y		
C4 SEDAN (After 2006)		ABS	ABS8_BOSCH			Actuation Test		Y		
C4 SEDAN (After 2006)		ABS	ABS8_BOSCH			Special Function	Bleeding	Y		
C4 SEDAN (After 2006)		Airbag	Airbag			Read ECU Information		Y		
C4 SEDAN (After 2006)		Airbag	Airbag			Read Fault Code		Y		
C4 SEDAN (After 2006)		Airbag	Airbag			Erase Fault Code		Y		
C4 SEDAN (After 2006)		Airbag	Airbag			Live Data		Y		
C4 SEDAN (After 2006)		BSI	BSI			Read ECU Information		Y		
C4 SEDAN (After 2006)		BSI	BSI			Read Fault Code		Y		
C4 SEDAN (After 2006)		BSI	BSI			Erase Fault Code		Y		
C4 SEDAN (After 2006)		BSI	BSI			Live Data		Y		
C4 SEDAN (After 2006)		BSI	BSI			Special Function	Maintenance-BSI operating mode	Y		
C4 SEDAN (After 2006)		Instrument panel	Instrument panel			Read ECU Information		Y		
C4 SEDAN (After 2006)		Instrument panel	Instrument panel			Read Fault Code		Y		
C4 SEDAN (After 2006)		Instrument panel	Instrument panel			Erase Fault Code		Y		
C4 SEDAN (After 2006)		Instrument panel	Instrument panel			Live Data		Y		
C4 SEDAN (After 2006)		Radio	Radio			Read ECU Information		Y		
C4 SEDAN (After 2006)		Radio	Radio			Read Fault Code		Y		
C4 SEDAN (After 2006)		Radio	Radio			Erase Fault Code		Y		
C4 SEDAN (After 2006)		Radio	Radio			Live Data		Y		
C4 SEDAN (After 2006)		Radio	Radio			Actuation Test		Y		
C4 SEDAN (After 2006)		CD player	CD player			Read ECU Information		Y		
C4 SEDAN (After 2006)		CD player	CD player			Read Fault Code		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Models	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
C4 SEDAN (After 2006)		CD player				Erase Fault Code		Y		
C4 SEDAN (After 2006)		CD player				Live Data		Y		
C4 SEDAN (After 2006)		CD player				Actuation Test		Y		
C4 SEDAN (After 2006)		Parking assistance				Read ECU Information		Y		
C4 SEDAN (After 2006)		Parking assistance				Read Fault Code		Y		
C4 SEDAN (After 2006)		Parking assistance				Erase Fault Code		Y		
C4 SEDAN (After 2006)		Parking assistance				Live Data		Y		
C4 SEDAN (After 2006)		Parking assistance				Actuation Test		Y		
C4 SEDAN (After 2006)		Air conditioning				Read ECU Information		Y		
C4 SEDAN (After 2006)		Air conditioning				Read Fault Code		Y		
C4 SEDAN (After 2006)		Air conditioning				Erase Fault Code		Y		
C4 SEDAN (After 2006)		Air conditioning				Live Data		Y		
C4 SEDAN (After 2006)		Switch module under the steering wheel				Read ECU Information		Y		
C4 SEDAN (After 2006)		Switch module under the steering wheel				Read Fault Code		Y		
C4 SEDAN (After 2006)		Switch module under the steering wheel				Erase Fault Code		Y		
C4 SEDAN (After 2006)		Switch module under the steering wheel				Live Data		Y		
C4 SEDAN (After 2006)		Switch module under the steering wheel				Actuation Test		Y		
C4 SEDAN (After 2006)		Alarm				Read ECU Information		Y		
C4 SEDAN (After 2006)		Alarm				Read Fault Code		Y		
C4 SEDAN (After 2006)		Alarm				Erase Fault Code		Y		
C4 SEDAN (After 2006)		Alarm				Live Data		Y		
C4 SEDAN (After 2006)		Alarm				Actuation Test		Y		
C4 SEDAN (After 2006)		Driver's seat memorizing unit				Read ECU Information		Y		
C4 SEDAN (After 2006)		Driver's seat memorizing unit				Read Fault Code		Y		
C4 SEDAN (After 2006)		Driver's seat memorizing unit				Erase Fault Code		Y		
C4 SEDAN (After 2006)		Driver's seat memorizing unit				Live Data		Y		
C4 SEDAN (After 2006)		Driver's seat memorizing unit				Actuation Test		Y		
C4 SEDAN (After 2006)		Driver's door module				Read ECU Information		Y		
C4 SEDAN (After 2006)		Driver's door module				Read Fault Code		Y		
C4 SEDAN (After 2006)		Driver's door module				Erase Fault Code		Y		
C4 SEDAN (After 2006)		Driver's door module				Live Data		Y		
C4 SEDAN (After 2006)		Driver's door module				Actuation Test		Y		
C4 SEDAN (After 2006)		Passenger's door module				Read ECU Information		Y		
C4 SEDAN (After 2006)		Passenger's door module				Read Fault Code		Y		
C4 SEDAN (After 2006)		Passenger's door module				Erase Fault Code		Y		
C4 SEDAN (After 2006)		Passenger's door module				Live Data		Y		
C4 SEDAN (After 2006)		Passenger's door module				Actuation Test		Y		
C4 SEDAN (After 2006)		Unit Rev counter				Read ECU Information		Y		
C4 SEDAN (After 2006)		Unit Rev counter				Read Fault Code		Y		
C4 SEDAN (After 2006)		Unit Rev counter				Erase Fault Code		Y		
C4 SEDAN (After 2006)		Unit Rev counter				Live Data		Y		
C4 SEDAN (After 2006)		Unit Rev counter				Actuation Test		Y		
C4 SEDAN (After 2006)		Rain sensor/Brightness				Read ECU Information		Y		
C4 SEDAN (After 2006)		Rain sensor/Brightness				Read Fault Code		Y		
C4 SEDAN (After 2006)		Rain sensor/Brightness				Erase Fault Code		Y		
C4 SEDAN (After 2006)		Multifunction screen	Multifunction screen A			Read ECU Information		Y		
C4 SEDAN (After 2006)		Multifunction screen	Multifunction screen A			Read Fault Code		Y		
C4 SEDAN (After 2006)		Multifunction screen	Multifunction screen A			Erase Fault Code		Y		
C4 SEDAN (After 2006)		Multifunction screen	Multifunction screen A			Live Data		Y		
C4 SEDAN (After 2006)		Multifunction screen	Multifunction screen A			Actuation Test		Y		
C4 SEDAN (After 2006)		Multifunction screen	Multifunction screen C			Read ECU Information		Y		
C4 SEDAN (After 2006)		Multifunction screen	Multifunction screen C			Read Fault Code		Y		
C4 SEDAN (After 2006)		Multifunction screen	Multifunction screen C			Erase Fault Code		Y		
C4 SEDAN (After 2006)		Multifunction screen	Multifunction screen C			Live Data		Y		
C4 SEDAN (After 2006)		Multifunction screen	Multifunction screen C			Actuation Test		Y		
C4 SEDAN (After 2006)		Telematic	Telematics (RT3)			Read ECU Information		Y		
C4 SEDAN (After 2006)		Telematic	Telematics (RT3)			Read Fault Code		Y		
C4 SEDAN (After 2006)		Telematic	Telematics (RT3)			Erase Fault Code		Y		
C4 SEDAN (After 2006)		Telematic	Telematics (RT3)			Live Data		Y		
C4 SEDAN (After 2006)		Telematic	Telematics (RT3)			Actuation Test		Y		
C4 SEDAN (After 2006)		Telematic	Telematic (RT4)			Read ECU Information		Y		
C4 SEDAN (After 2006)		Telematic	Telematic (RT4)			Read Fault Code		Y		
C4 SEDAN (After 2006)		Telematic	Telematic (RT4)			Erase Fault Code		Y		
C4 SEDAN (After 2006)		Telematic	Telematic (RT4)			Live Data		Y		
C4 SEDAN (After 2006)		Telematic	Telematic (RT4)			Actuation Test		Y		
C4 SEDAN (After 2006)		Telematic	Telematic (RT5)			Read ECU Information		Y		
C4 SEDAN (After 2006)		Telematic	Telematic (RT5)			Read Fault Code		Y		
C4 SEDAN (After 2006)		Telematic	Telematic (RT5)			Erase Fault Code		Y		
C4 SEDAN (After 2006)		Telematic	Telematic (RT5)			Live Data		Y		
C4 SEDAN (After 2006)		Telematic	Telematic (RT5)			Actuation Test		Y		
C4 SEDAN (After 2006)		Trailer relay unit				Read ECU Information		Y		
C4 SEDAN (After 2006)		Trailer relay unit				Read Fault Code		Y		
C4 SEDAN (After 2006)		Trailer relay unit				Erase Fault Code		Y		
C4 SEDAN (After 2006)		Trailer relay unit				Live Data		Y		
C4 SEDAN (After 2006)		Trailer relay unit				Actuation Test		Y		
C4 SEDAN (After 2006)		Engine relay unit				Read ECU Information		Y		
C4 SEDAN (After 2006)		Engine relay unit				Read Fault Code		Y		
C4 SEDAN (After 2006)		Engine relay unit				Erase Fault Code		Y		
C4 SEDAN (After 2006)		Engine relay unit				Live Data		Y		
C4 SEDAN (After 2006)		Engine relay unit				Actuation Test		Y		
C4 SEDAN (After 2006)		Multiplexed diesel additive pump				Read ECU Information		Y		
C4 SEDAN (After 2006)		Multiplexed diesel additive pump				Read Fault Code		Y		
C4 SEDAN (After 2006)		Multiplexed diesel additive pump				Erase Fault Code		Y		
C4 SEDAN (After 2006)		Multiplexed diesel additive pump				Live Data		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Models	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function reasons	Add (Y/N)	Verification on (Y/N)	Remarks
C4 SEDAN (After 2006)		Multiplexed diesel additive pump				Actuation Test		Y		
C4 SEDAN (After 2006)		Power steering				Read ECU Information		Y		
C4 SEDAN (After 2006)		Power steering				Read Fault Code		Y		
C4 SEDAN (After 2006)		Power steering				Erase Fault Code		Y		
C4 SEDAN (After 2006)		Power steering				Live Data		Y		
C4 SEDAN (After 2006)		Directional headlamps				Read ECU Information		Y		
C4 SEDAN (After 2006)		Directional headlamps				Read Fault Code		Y		
C4 SEDAN (After 2006)		Directional headlamps				Erase Fault Code		Y		
C4 SEDAN (After 2006)		Directional headlamps				Live Data		Y		
C4 SEDAN (After 2006)		Directional headlamps				Actuation Test		Y		
C4 SEDAN (After 2006)		Hands Free Kit				Read ECU Information		Y		
C4 SEDAN (After 2006)		Hands Free Kit				Read Fault Code		Y		
C4 SEDAN (After 2006)		Hands Free Kit				Erase Fault Code		Y		
C4 SEDAN (After 2006)		Hands Free Kit				Live Data		Y		
C4 SEDAN (After 2006)		Hands Free Kit				Actuation Test		Y		
C4 SEDAN (After 2006)		Learning				Special Function	Key programming	Y		
C4 SEDAN (After 2006)		Calibration of the steering wheel angle sensor : C2, C3, C3 plural, New Look G5 with ESP MGOESP 800E				Special Function	Calibration of the steering wheel angle sensor : C2, C3, C3 plural, New	Y		
C4 SEDAN (After 2006)		Calibration of the steering wheel angle sensor : C2, C3, C3 plural, New Look G5 with ESP MGOESP 8.1				Special Function	Steering wheel angle sensor calibration	Y		
C407 (After 2010)		Built-in Systems Interface				Read ECU Information		Y		
C407 (After 2010)		Built-in Systems Interface				Read Fault Code		Y		
C407 (After 2010)		Built-in Systems Interface				Erase Fault Code		Y		
C407 (After 2010)		Built-in Systems Interface				Live Data		Y		
C407 (After 2010)		Built-in Systems Interface				Actuation Test		Y		
C407 (After 2010)		Built-in Systems Interface				Special Function	Maintenance - ISI operating mode	Y		
C407 (After 2010)		Built-in Systems Interface				Special Function	Pack Repair	Y		
C407 (After 2010)		Engine management ECU	Petrol engine	ME017_4.2	14 MED 17_4.2 E030 5	Read ECU Information		Y		
C407 (After 2010)		Engine management ECU	Petrol engine	ME017_4.2	14 MED 17_4.2 E030 5	Read Fault Code		Y		
C407 (After 2010)		Engine management ECU	Petrol engine	ME017_4.2	14 MED 17_4.2 E030 5	Erase Fault Code		Y		
C407 (After 2010)		Engine management ECU	Petrol engine	ME017_4.2	14 MED 17_4.2 E030 5	Live Data		Y		
C407 (After 2010)		Engine management ECU	Petrol engine	ME017_4.2	14 MED 17_4.2 E030 5	Actuation Test		Y		
C407 (After 2010)		Engine management ECU	Petrol engine	ME017_4.2	14 MED 17_4.2 E030 5	Special Function	Configuration	Y		
C407 (After 2010)		Engine management ECU	Petrol engine	ME017_4.2	14 MED 17_4.2 E030 5	Special Function	Pack Repair	Y		
C407 (After 2010)		Engine management ECU	Petrol engine	VD46	Engine type: INY	Read ECU Information		Y		
C407 (After 2010)		Engine management ECU	Petrol engine	VD46	Engine type: INY	Read Fault Code		Y		
C407 (After 2010)		Engine management ECU	Petrol engine	VD46	Engine type: INY	Erase Fault Code		Y		
C407 (After 2010)		Engine management ECU	Petrol engine	VD46	Engine type: INY	Live Data		Y		
C407 (After 2010)		Engine management ECU	Petrol engine	VD46	Engine type: INY	Actuation Test		Y		
C407 (After 2010)		Engine management ECU	Petrol engine	VD46	Engine type: INY	Special Function	Pack Repair	Y		
C407 (After 2010)		Engine management ECU	Petrol engine	VD46	Engine type: INZ	Read ECU Information		Y		
C407 (After 2010)		Engine management ECU	Petrol engine	VD46	Engine type: INZ	Read Fault Code		Y		
C407 (After 2010)		Engine management ECU	Petrol engine	VD46	Engine type: INZ	Erase Fault Code		Y		
C407 (After 2010)		Engine management ECU	Petrol engine	VD46	Engine type: INZ	Live Data		Y		
C407 (After 2010)		Engine management ECU	Petrol engine	VD46	Engine type: INZ	Actuation Test		Y		
C407 (After 2010)		Engine management ECU	Petrol engine	VD46	Engine type: INZ	Special Function	Pack Repair	Y		
C407 (After 2010)		Engine management ECU	Petrol engine	ME745	ME745 NFU	Read ECU Information		Y		
C407 (After 2010)		Engine management ECU	Petrol engine	ME745	ME745 NFU	Read Fault Code		Y		
C407 (After 2010)		Engine management ECU	Petrol engine	ME745	ME745 NFU	Erase Fault Code		Y		
C407 (After 2010)		Engine management ECU	Petrol engine	ME745	ME745 NFU	Live Data		Y		
C407 (After 2010)		Engine management ECU	Petrol engine	ME745	ME745 NFU	Actuation Test		Y		
C407 (After 2010)		Engine management ECU	Petrol engine	ME745	ME745 NFU	Special Function	Configuration	Y		
C407 (After 2010)		Engine management ECU	Petrol engine	ME745	ME745 NFU	Special Function	Pack Repair	Y		
C407 (After 2010)		Engine management ECU	Petrol engine	ME745	ME745 NGA	Read ECU Information		Y		
C407 (After 2010)		Engine management ECU	Petrol engine	ME745	ME745 NGA	Read Fault Code		Y		
C407 (After 2010)		Engine management ECU	Petrol engine	ME745	ME745 NGA	Erase Fault Code		Y		
C407 (After 2010)		Engine management ECU	Petrol engine	ME745	ME745 NGA	Live Data		Y		
C407 (After 2010)		Engine management ECU	Petrol engine	ME745	ME745 NGA	Actuation Test		Y		
C407 (After 2010)		Engine management ECU	Petrol engine	ME745	ME745 NGA	Special Function	Configuration	Y		
C407 (After 2010)		Engine management ECU	Petrol engine	ME745	ME745 NGA	Special Function	Pack Repair	Y		
C407 (After 2010)		Engine management ECU	Petrol engine	ME745	ME745 NGB	Read ECU Information		Y		
C407 (After 2010)		Engine management ECU	Petrol engine	ME745	ME745 NGB	Read Fault Code		Y		
C407 (After 2010)		Engine management ECU	Petrol engine	ME745	ME745 NGB	Erase Fault Code		Y		
C407 (After 2010)		Engine management ECU	Petrol engine	ME745	ME745 NGB	Live Data		Y		
C407 (After 2010)		Engine management ECU	Petrol engine	ME745	ME745 NGB	Actuation Test		Y		
C407 (After 2010)		Engine management ECU	Petrol engine	ME745	ME745 NGB	Special Function	Configuration	Y		
C407 (After 2010)		Engine management ECU	Petrol engine	ME745	ME745 NGB	Special Function	Pack Repair	Y		
C407 (After 2010)		Engine management ECU	Petrol engine	MEV017_4.2	MEV017_4.2 SFU	Read ECU Information		Y		
C407 (After 2010)		Engine management ECU	Petrol engine	MEV017_4.2	MEV017_4.2 SFU	Read Fault Code		Y		
C407 (After 2010)		Engine management ECU	Petrol engine	MEV017_4.2	MEV017_4.2 SFU	Erase Fault Code		Y		
C407 (After 2010)		Engine management ECU	Petrol engine	MEV017_4.2	MEV017_4.2 SFU	Live Data		Y		
C407 (After 2010)		Engine management ECU	Petrol engine	MEV017_4.2	MEV017_4.2 SFU	Actuation Test		Y		
C407 (After 2010)		Engine management ECU	Petrol engine	MEV017_4.2	MEV017_4.2 SFU	Special Function	Pack Repair	Y		
C407 (After 2010)		Engine management ECU	Petrol engine	ME017_4.4		Read ECU Information		Y		
C407 (After 2010)		Engine management ECU	Petrol engine	ME017_4.4		Read Fault Code		Y		
C407 (After 2010)		Engine management ECU	Petrol engine	ME017_4.4		Erase Fault Code		Y		
C407 (After 2010)		Engine management ECU	Petrol engine	ME017_4.4		Live Data		Y		
C407 (After 2010)		Engine management ECU	Petrol engine	ME017_4.4		Actuation Test		Y		
C407 (After 2010)		Engine management ECU	Petrol engine	ME017_4.4		Special Function	Pack Repair	Y		
C407 (After 2010)		Engine management ECU	Petrol engine	ME017_4.4		Special Function	Pack Repair	Y		
C407 (After 2010)		Engine management ECU	Diesel engine	DC06.2		Read ECU Information		Y		
C407 (After 2010)		Engine management ECU	Diesel engine	DC06.2		Read Fault Code		Y		
C407 (After 2010)		Engine management ECU	Diesel engine	DC06.2		Erase Fault Code		Y		
C407 (After 2010)		Engine management ECU	Diesel engine	DC06.2		Live Data		Y		
C407 (After 2010)		Engine management ECU	Diesel engine	DC06.2		Actuation Test		Y		
C407 (After 2010)		Engine management ECU	Diesel engine	DC06.2		Special Function	Pack Repair	Y		
C407 (After 2010)		Engine management ECU	Diesel engine	IBI_S11807_IB2		Read ECU Information		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Models	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function reasons	Add (Y/N)	Verification on (Y/N)	Remarks
C4(B7) (After 2010)		Engine management ECU	Diesel engine	HDI_S1D807_BR2		Read Fault Code		Y		
C4(B7) (After 2010)		Engine management ECU	Diesel engine	HDI_S1D807_BR2		Erase Fault Code		Y		
C4(B7) (After 2010)		Engine management ECU	Diesel engine	HDI_S1D807_BR2		Live Data		Y		
C4(B7) (After 2010)		Engine management ECU	Diesel engine	HDI_S1D807_BR2		Actuation Test		Y		
C4(B7) (After 2010)		Engine management ECU	Diesel engine	HDI_S1D807_BR2		Special Function	Configuration	Y		
C4(B7) (After 2010)		Engine management ECU	Diesel engine	HDI_S1D807_BR2		Special Function	Pack Repair	Y		
C4(B7) (After 2010)		Engine management ECU	Diesel engine	ED17C10_BR2	90P-DV07ED+ 92 CV	Read ECU Information		Y		
C4(B7) (After 2010)		Engine management ECU	Diesel engine	ED17C10_BR2	90P-DV07ED+ 92 CV	Read Fault Code		Y		
C4(B7) (After 2010)		Engine management ECU	Diesel engine	ED17C10_BR2	90P-DV07ED+ 92 CV	Erase Fault Code		Y		
C4(B7) (After 2010)		Engine management ECU	Diesel engine	ED17C10_BR2	90P-DV07ED+ 92 CV	Live Data		Y		
C4(B7) (After 2010)		Engine management ECU	Diesel engine	ED17C10_BR2	90P-DV07ED+ 92 CV	Actuation Test		Y		
C4(B7) (After 2010)		Engine management ECU	Diesel engine	ED17C10_BR2	90P-DV07ED+ 92 CV	Special Function	Configuration	Y		
C4(B7) (After 2010)		Engine management ECU	Diesel engine	ED17C10_BR2	90P-DV07ED+ 92 CV	Special Function	Pack Repair	Y		
C4(B7) (After 2010)		Engine management ECU	Diesel engine	ED17C10_BR2	90P-DV07ED+ 92 CV	Read ECU Information		Y		
C4(B7) (After 2010)		Engine management ECU	Diesel engine	ED17C10_BR2	90P-DV07ED+ 92 CV	Read Fault Code		Y		
C4(B7) (After 2010)		Engine management ECU	Diesel engine	ED17C10_BR2	90P-DV07ED+ 92 CV	Erase Fault Code		Y		
C4(B7) (After 2010)		Engine management ECU	Diesel engine	ED17C10_BR2	90P-DV07ED+ 92 CV	Live Data		Y		
C4(B7) (After 2010)		Engine management ECU	Diesel engine	ED17C10_BR2	90P-DV07ED+ 92 CV	Actuation Test		Y		
C4(B7) (After 2010)		Engine management ECU	Diesel engine	ED17C10_BR2	90P-DV07ED+ 92 CV	Special Function	Configuration	Y		
C4(B7) (After 2010)		Engine management ECU	Diesel engine	ED17C10_BR2	90P-DV07ED+ 92 CV	Special Function	Pack Repair	Y		
C4(B7) (After 2010)		Engine management ECU	Diesel engine	DCM5_BR2	RHE-DV07ED+ 163CV	Read ECU Information		Y		
C4(B7) (After 2010)		Engine management ECU	Diesel engine	DCM5_BR2	RHE-DV07ED+ 163CV	Read Fault Code		Y		
C4(B7) (After 2010)		Engine management ECU	Diesel engine	DCM5_BR2	RHE-DV07ED+ 163CV	Erase Fault Code		Y		
C4(B7) (After 2010)		Engine management ECU	Diesel engine	DCM5_BR2	RHE-DV07ED+ 163CV	Live Data		Y		
C4(B7) (After 2010)		Engine management ECU	Diesel engine	DCM5_BR2	RHE-DV07ED+ 163CV	Actuation Test		Y		
C4(B7) (After 2010)		Engine management ECU	Diesel engine	DCM5_BR2	RHE-DV07ED+ 163CV	Special Function	Configuration	Y		
C4(B7) (After 2010)		Engine management ECU	Diesel engine	DCM5_BR2	RHE-DV07ED+ 163CV	Special Function	Pack Repair	Y		
C4(B7) (After 2010)		Engine management ECU	Diesel engine	DCM5_BR2	RHE-DV07ED+ 163CV	Read ECU Information		Y		
C4(B7) (After 2010)		Engine management ECU	Diesel engine	DCM5_BR2	RHE-DV07ED+ 150CV	Read Fault Code		Y		
C4(B7) (After 2010)		Engine management ECU	Diesel engine	DCM5_BR2	RHE-DV07ED+ 150CV	Erase Fault Code		Y		
C4(B7) (After 2010)		Engine management ECU	Diesel engine	DCM5_BR2	RHE-DV07ED+ 150CV	Live Data		Y		
C4(B7) (After 2010)		Engine management ECU	Diesel engine	DCM5_BR2	RHE-DV07ED+ 150CV	Actuation Test		Y		
C4(B7) (After 2010)		Engine management ECU	Diesel engine	DCM5_BR2	RHE-DV07ED+ 150CV	Special Function	Configuration	Y		
C4(B7) (After 2010)		Engine management ECU	Diesel engine	DCM5_BR2	RHE-DV07ED+ 150CV	Special Function	Pack Repair	Y		
C4(B7) (After 2010)		Engine management ECU	Diesel engine	ED17G90		Read ECU Information		Y		
C4(B7) (After 2010)		Engine management ECU	Diesel engine	ED17G90		Read Fault Code		Y		
C4(B7) (After 2010)		Engine management ECU	Diesel engine	ED17G90		Erase Fault Code		Y		
C4(B7) (After 2010)		Engine management ECU	Diesel engine	ED17G90		Live Data		Y		
C4(B7) (After 2010)		Engine management ECU	Diesel engine	ED17G90		Actuation Test		Y		
C4(B7) (After 2010)		Engine management ECU	Diesel engine	ED17G90		Special Function	Pack Repair	Y		
C4(B7) (After 2010)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ABS/ESP			Read ECU Information		Y		
C4(B7) (After 2010)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ABS/ESP			Read Fault Code		Y		
C4(B7) (After 2010)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ABS/ESP			Erase Fault Code		Y		
C4(B7) (After 2010)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ABS/ESP			Live Data		Y		
C4(B7) (After 2010)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ABS/ESP			Actuation Test		Y		
C4(B7) (After 2010)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ABS/ESP			Special Function	Configuration	Y		
C4(B7) (After 2010)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ABS/ESP			Special Function	Pack repair	Y		
C4(B7) (After 2010)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP/ABS			Read ECU Information		Y		
C4(B7) (After 2010)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP/ABS			Read Fault Code		Y		
C4(B7) (After 2010)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP/ABS			Erase Fault Code		Y		
C4(B7) (After 2010)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP/ABS			Live Data		Y		
C4(B7) (After 2010)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP/ABS			Actuation Test		Y		
C4(B7) (After 2010)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP/ABS			Special Function	Configuration	Y		
C4(B7) (After 2010)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP/ABS			Special Function	Pack Repair	Y		
C4(B7) (After 2010)		Automatic gearbox or controlled manual gearbox	CFC300P			Read ECU Information		Y		
C4(B7) (After 2010)		Automatic gearbox or controlled manual gearbox	CFC300P			Read Fault Code		Y		
C4(B7) (After 2010)		Automatic gearbox or controlled manual gearbox	CFC300P			Erase Fault Code		Y		
C4(B7) (After 2010)		Automatic gearbox or controlled manual gearbox	CFC300P			Live Data		Y		
C4(B7) (After 2010)		Automatic gearbox or controlled manual gearbox	CFC300P			Actuation Test		Y		
C4(B7) (After 2010)		Automatic gearbox or controlled manual gearbox	CFC300P			Special Function	Replacement parts	Y		
C4(B7) (After 2010)		Automatic gearbox or controlled manual gearbox	BVA_AMB_A16_E180S			Read ECU Information		Y		
C4(B7) (After 2010)		Automatic gearbox or controlled manual gearbox	BVA_AMB_A16_E180S			Read Fault Code		Y		
C4(B7) (After 2010)		Automatic gearbox or controlled manual gearbox	BVA_AMB_A16_E180S			Erase Fault Code		Y		
C4(B7) (After 2010)		Automatic gearbox or controlled manual gearbox	BVA_AMB_A16_E180S			Live Data		Y		
C4(B7) (After 2010)		Automatic gearbox or controlled manual gearbox	BVA_AMB_A16_E180S			Actuation Test		Y		
C4(B7) (After 2010)		Automatic gearbox or controlled manual gearbox	BVA_AMB_A16_E180S			Special Function	Oil wear counter	Y		
C4(B7) (After 2010)		Automatic gearbox or controlled manual gearbox	BVA_AMB_A16_E180S			Special Function	Configuration	Y		
C4(B7) (After 2010)		Automatic gearbox or controlled manual gearbox	BVA_AMB_A16_E180S			Special Function	Pack Repair	Y		
C4(B7) (After 2010)		Automatic gearbox or controlled manual gearbox	BVA_AMB_A16_IDS			Read ECU Information		Y		
C4(B7) (After 2010)		Automatic gearbox or controlled manual gearbox	BVA_AMB_A16_IDS			Read Fault Code		Y		
C4(B7) (After 2010)		Automatic gearbox or controlled manual gearbox	BVA_AMB_A16_IDS			Erase Fault Code		Y		
C4(B7) (After 2010)		Automatic gearbox or controlled manual gearbox	BVA_AMB_A16_IDS			Live Data		Y		
C4(B7) (After 2010)		Automatic gearbox or controlled manual gearbox	BVA_AMB_A16_IDS			Actuation Test		Y		
C4(B7) (After 2010)		Automatic gearbox or controlled manual gearbox	BVA_AMB_A16_IDS			Special Function	Pack Repair	Y		
C4(B7) (After 2010)		Automatic gearbox or controlled manual gearbox	BVA_AMB_A16_IDS			Special Function	Configuration	Y		
C4(B7) (After 2010)		Automatic gearbox or controlled manual gearbox	BVA_AMB_A16_IDS			Special Function	Pack Repair	Y		
C4(B7) (After 2010)		Automatic gearbox or controlled manual gearbox	BVA_A18			Read ECU Information		Y		
C4(B7) (After 2010)		Automatic gearbox or controlled manual gearbox	BVA_A18			Read Fault Code		Y		
C4(B7) (After 2010)		Automatic gearbox or controlled manual gearbox	BVA_A18			Erase Fault Code		Y		
C4(B7) (After 2010)		Automatic gearbox or controlled manual gearbox	BVA_A18			Live Data		Y		
C4(B7) (After 2010)		Automatic gearbox or controlled manual gearbox	BVA_A18			Actuation Test		Y		
C4(B7) (After 2010)		Automatic gearbox or controlled manual gearbox	BVA_A18			Special Function	Configuration	Y		
C4(B7) (After 2010)		Automatic gearbox or controlled manual gearbox	BVA_A18			Special Function	Pack Repair	Y		
C4(B7) (After 2010)		Air bags and pre-tensioners control unit				Read ECU Information		Y		
C4(B7) (After 2010)		Air bags and pre-tensioners control unit				Read Fault Code		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Models	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
C4(B7) (After 2010)		Air bags and pre-tensioners control unit				Erase Fault Code		Y		
C4(B7) (After 2010)		Air bags and pre-tensioners control unit				Live Data		Y		
C4(B7) (After 2010)		Air bags and pre-tensioners control unit				Special Function	Configuration	Y		
C4(B7) (After 2010)		Air bags and pre-tensioners control unit				Special Function	Pack Repair	Y		
C4(B7) (After 2010)		Power steering				Read ECU Information		Y		
C4(B7) (After 2010)		Power steering				Read Fault Code		Y		
C4(B7) (After 2010)		Power steering				Erase Fault Code		Y		
C4(B7) (After 2010)		Power steering				Live Data		Y		
C4(B7) (After 2010)		Power steering				Actuation Test		Y		
C4(B7) (After 2010)		Diesel additive pump	POMPE_MIX_TI			Read ECU Information		Y		
C4(B7) (After 2010)		Diesel additive pump	POMPE_MIX_TI			Read Fault Code		Y		
C4(B7) (After 2010)		Diesel additive pump	POMPE_MIX_TI			Erase Fault Code		Y		
C4(B7) (After 2010)		Diesel additive pump	POMPE_MIX_TI			Live Data		Y		
C4(B7) (After 2010)		Diesel additive pump	POMPE_MIX_TI			Actuation Test		Y		
C4(B7) (After 2010)		Diesel additive pump	POMPE_MIX_TI			Special Function	Configuration	Y		
C4(B7) (After 2010)		Diesel additive pump	PAIDGO_TI_E6			Read ECU Information		Y		
C4(B7) (After 2010)		Diesel additive pump	PAIDGO_TI_E6			Read Fault Code		Y		
C4(B7) (After 2010)		Diesel additive pump	PAIDGO_TI_E6			Erase Fault Code		Y		
C4(B7) (After 2010)		Diesel additive pump	PAIDGO_TI_E6			Live Data		Y		
C4(B7) (After 2010)		Diesel additive pump	PAIDGO_TI_E6			Actuation Test		Y		
C4(B7) (After 2010)		Diesel additive pump	PAIDGO_TI_E6			Special Function	Configuration	Y		
C4(B7) (After 2010)		Under-inflation detection	ISG			Read ECU Information		Y		
C4(B7) (After 2010)		Under-inflation detection	ISG			Read Fault Code		Y		
C4(B7) (After 2010)		Under-inflation detection	ISG			Erase Fault Code		Y		
C4(B7) (After 2010)		Under-inflation detection	ISG			Live Data		Y		
C4(B7) (After 2010)		Under-inflation detection	ISG			Special Function	Pack Reparation	Y		
C4(B7) (After 2010)		Under-inflation detection	ISG_IDS			Read ECU Information		Y		
C4(B7) (After 2010)		Under-inflation detection	ISG_IDS			Read Fault Code		Y		
C4(B7) (After 2010)		Under-inflation detection	ISG_IDS			Erase Fault Code		Y		
C4(B7) (After 2010)		Under-inflation detection	ISG_IDS			Live Data		Y		
C4(B7) (After 2010)		Under-inflation detection	ISG_IDS			Special Function	Pack Reparation	Y		
C4(B7) (After 2010)		Dynamic headlamp height adjuster	BEHP			Read ECU Information		Y		
C4(B7) (After 2010)		Dynamic headlamp height adjuster	BEHP			Read Fault Code		Y		
C4(B7) (After 2010)		Dynamic headlamp height adjuster	BEHP			Erase Fault Code		Y		
C4(B7) (After 2010)		Dynamic headlamp height adjuster	BEHP			Live Data		Y		
C4(B7) (After 2010)		Dynamic headlamp height adjuster	BEHP			Actuation Test		Y		
C4(B7) (After 2010)		Dynamic headlamp height adjuster	LADCT			Read ECU Information		Y		
C4(B7) (After 2010)		Dynamic headlamp height adjuster	LADCT			Read Fault Code		Y		
C4(B7) (After 2010)		Dynamic headlamp height adjuster	LADCT			Erase Fault Code		Y		
C4(B7) (After 2010)		Dynamic headlamp height adjuster	LADCT			Live Data		Y		
C4(B7) (After 2010)		Dynamic headlamp height adjuster	LADCT			Actuation Test		Y		
C4(B7) (After 2010)		Dynamic headlamp height adjuster	LADCT			Special Function	Configuration with displaying of the parameters	Y		
C4(B7) (After 2010)		Dynamic headlamp height adjuster	LADCT			Special Function	Replacement parts	Y		
C4(B7) (After 2010)		Battery charge status unit				Read ECU Information		Y		
C4(B7) (After 2010)		Battery charge status unit				Read Fault Code		Y		
C4(B7) (After 2010)		Battery charge status unit				Erase Fault Code		Y		
C4(B7) (After 2010)		Battery charge status unit				Live Data		Y		
C4(B7) (After 2010)		Battery charge status unit				Special Function	Configuration with Displaying of the parameters	Y		
C4(B7) (After 2010)		Battery charge status unit				Special Function	Pack Repair	Y		
C4(B7) (After 2010)		Electric secondary brake				Read ECU Information		Y		
C4(B7) (After 2010)		Electric secondary brake				Read Fault Code		Y		
C4(B7) (After 2010)		Electric secondary brake				Erase Fault Code		Y		
C4(B7) (After 2010)		Electric secondary brake				Live Data		Y		
C4(B7) (After 2010)		Electric secondary brake				Actuation Test		Y		
C4(B7) (After 2010)		Electric secondary brake				Special Function	Pack Repair	Y		
C4(B7) (After 2010)		Lane departure warning system				Read ECU Information		Y		
C4(B7) (After 2010)		Lane departure warning system				Read Fault Code		Y		
C4(B7) (After 2010)		Lane departure warning system				Erase Fault Code		Y		
C4(B7) (After 2010)		Lane departure warning system				Live Data		Y		
C4(B7) (After 2010)		Lane departure warning system				Actuation Test		Y		
C4(B7) (After 2010)		Lane departure warning system				Special Function	Configuration with Displaying of the Parameters	Y		
C4(B7) (After 2010)		Trailer relay unit				Read ECU Information		Y		
C4(B7) (After 2010)		Trailer relay unit				Read Fault Code		Y		
C4(B7) (After 2010)		Trailer relay unit				Erase Fault Code		Y		
C4(B7) (After 2010)		Trailer relay unit				Live Data		Y		
C4(B7) (After 2010)		Trailer relay unit				Actuation Test		Y		
C4(B7) (After 2010)		Engine relay unit				Read ECU Information		Y		
C4(B7) (After 2010)		Engine relay unit				Read Fault Code		Y		
C4(B7) (After 2010)		Engine relay unit				Erase Fault Code		Y		
C4(B7) (After 2010)		Engine relay unit				Live Data		Y		
C4(B7) (After 2010)		Engine relay unit				Special Function	Configuration	Y		
C4(B7) (After 2010)		Parking assistance	4 parking assistance sensors			Read ECU Information		Y		
C4(B7) (After 2010)		Parking assistance	4 parking assistance sensors			Read Fault Code		Y		
C4(B7) (After 2010)		Parking assistance	4 parking assistance sensors			Erase Fault Code		Y		
C4(B7) (After 2010)		Parking assistance	4 parking assistance sensors			Live Data		Y		
C4(B7) (After 2010)		Parking assistance	4 parking assistance sensors			Actuation Test		Y		
C4(B7) (After 2010)		Parking assistance	4 parking assistance sensors			Special Function	Configuration	Y		
C4(B7) (After 2010)		Parking assistance	4 parking assistance sensors			Special Function	Pack Repair	Y		
C4(B7) (After 2010)		Parking assistance	10 parking assistance sensors			Read ECU Information		Y		
C4(B7) (After 2010)		Parking assistance	10 parking assistance sensors			Read Fault Code		Y		
C4(B7) (After 2010)		Parking assistance	10 parking assistance sensors			Erase Fault Code		Y		
C4(B7) (After 2010)		Parking assistance	10 parking assistance sensors			Live Data		Y		
C4(B7) (After 2010)		Parking assistance	10 parking assistance sensors			Actuation Test		Y		
C4(B7) (After 2010)		Parking assistance	10 parking assistance sensors			Special Function	Configuration	Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Models	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function reasons	Add (Y/N)	Verification (Y/N)	Remarks
C4(B7) (After 2010)		Parking assistance	10 parking assistance sensors			Special Function	Pack Repair	Y		
C4(B7) (After 2010)		Air conditioning				Read ECU Information		Y		
C4(B7) (After 2010)		Air conditioning				Read Fault Code		Y		
C4(B7) (After 2010)		Air conditioning				Erase Fault Code		Y		
C4(B7) (After 2010)		Air conditioning				Live Data		Y		
C4(B7) (After 2010)		Air conditioning				Actuation Test		Y		
C4(B7) (After 2010)		Air conditioning				Special Function	Pack Repair	Y		
C4(B7) (After 2010)		Controls under the steering wheel	Yes			Read ECU Information		Y		
C4(B7) (After 2010)		Controls under the steering wheel	Yes			Read Fault Code		Y		
C4(B7) (After 2010)		Controls under the steering wheel	Yes			Erase Fault Code		Y		
C4(B7) (After 2010)		Controls under the steering wheel	Yes			Live Data		Y		
C4(B7) (After 2010)		Controls under the steering wheel	Yes			Actuation Test		Y		
C4(B7) (After 2010)		Controls under the steering wheel	Yes			Special Function	Pack Repair	Y		
C4(B7) (After 2010)		Controls under the steering wheel	No			Read ECU Information		Y		
C4(B7) (After 2010)		Controls under the steering wheel	No			Read Fault Code		Y		
C4(B7) (After 2010)		Controls under the steering wheel	No			Erase Fault Code		Y		
C4(B7) (After 2010)		Controls under the steering wheel	No			Live Data		Y		
C4(B7) (After 2010)		Controls under the steering wheel	No			Actuation Test		Y		
C4(B7) (After 2010)		Controls under the steering wheel	No			Special Function	Pack Repair	Y		
C4(B7) (After 2010)		Multifunction screen	EMF_A_IDS			Read ECU Information		Y		
C4(B7) (After 2010)		Multifunction screen	EMF_A_IDS			Read Fault Code		Y		
C4(B7) (After 2010)		Multifunction screen	EMF_A_IDS			Erase Fault Code		Y		
C4(B7) (After 2010)		Multifunction screen	EMF_A_IDS			Live Data		Y		
C4(B7) (After 2010)		Multifunction screen	EMF_A_IDS			Actuation Test		Y		
C4(B7) (After 2010)		Multifunction screen	EMF_A_IDS			Special Function	Configuration	Y		
C4(B7) (After 2010)		Multifunction screen	EMF_C_IDS	Multifunction screen with pixels(C-)		Read ECU Information		Y		
C4(B7) (After 2010)		Multifunction screen	EMF_C_IDS	Multifunction screen with pixels(C-)		Read Fault Code		Y		
C4(B7) (After 2010)		Multifunction screen	EMF_C_IDS	Multifunction screen with pixels(C-)		Erase Fault Code		Y		
C4(B7) (After 2010)		Multifunction screen	EMF_C_IDS	Multifunction screen with pixels(C-)		Actuation Test		Y		
C4(B7) (After 2010)		Multifunction screen	EMF_C_IDS	Multifunction screen with pixels(C-)		Special Function	Configuration	Y		
C4(B7) (After 2010)		Multifunction screen	EMF_C_IDS	Multifunction screen with segments(A-)		Read ECU Information		Y		
C4(B7) (After 2010)		Multifunction screen	EMF_C_IDS	Multifunction screen with segments(A-)		Read Fault Code		Y		
C4(B7) (After 2010)		Multifunction screen	EMF_C_IDS	Multifunction screen with segments(A-)		Erase Fault Code		Y		
C4(B7) (After 2010)		Multifunction screen	EMF_C_IDS	Multifunction screen with segments(A-)		Actuation Test		Y		
C4(B7) (After 2010)		Multifunction screen	EMF_C_IDS	Multifunction screen with segments(A-)		Special Function	Configuration	Y		
C4(B7) (After 2010)		Radio	RS5			Read ECU Information		Y		
C4(B7) (After 2010)		Radio	RS5			Read Fault Code		Y		
C4(B7) (After 2010)		Radio	RS5			Erase Fault Code		Y		
C4(B7) (After 2010)		Radio	RS5			Live Data		Y		
C4(B7) (After 2010)		Radio	RS5			Actuation Test		Y		
C4(B7) (After 2010)		Radio	RS5			Special Function	Configuration	Y		
C4(B7) (After 2010)		Radio	RD45			Read ECU Information		Y		
C4(B7) (After 2010)		Radio	RD45			Read Fault Code		Y		
C4(B7) (After 2010)		Radio	RD45			Erase Fault Code		Y		
C4(B7) (After 2010)		Radio	RD45			Live Data		Y		
C4(B7) (After 2010)		Radio	RD45			Actuation Test		Y		
C4(B7) (After 2010)		Radio	RD45			Special Function	Configuration	Y		
C4(B7) (After 2010)		Radio	RD45			Special Function	Pack Repair	Y		
C4(B7) (After 2010)		Audio amplifier				Read ECU Information		Y		
C4(B7) (After 2010)		Audio amplifier				Read Fault Code		Y		
C4(B7) (After 2010)		Audio amplifier				Erase Fault Code		Y		
C4(B7) (After 2010)		Audio amplifier				Actuation Test		Y		
C4(B7) (After 2010)		Audio amplifier				Special Function	Configuration	Y		
C4(B7) (After 2010)		Telematic unit (OTA) or audio-navigation	RADIONAV_BNEG			Read ECU Information		Y		
C4(B7) (After 2010)		Telematic unit (OTA) or audio-navigation	RADIONAV_BNEG			Read Fault Code		Y		
C4(B7) (After 2010)		Telematic unit (OTA) or audio-navigation	RADIONAV_BNEG			Erase Fault Code		Y		
C4(B7) (After 2010)		Telematic unit (OTA) or audio-navigation	RADIONAV_BNEG			Live Data		Y		
C4(B7) (After 2010)		Telematic unit (OTA) or audio-navigation	RADIONAV_BNEG			Actuation Test		Y		
C4(B7) (After 2010)		Telematic unit (OTA) or audio-navigation	RADIONAV_BNEG			Special Function	Configuration	Y		
C4(B7) (After 2010)		Telematic unit (OTA) or audio-navigation	INRG2010			Read ECU Information		Y		
C4(B7) (After 2010)		Telematic unit (OTA) or audio-navigation	INRG2010			Read Fault Code		Y		
C4(B7) (After 2010)		Telematic unit (OTA) or audio-navigation	INRG2010			Erase Fault Code		Y		
C4(B7) (After 2010)		Telematic unit (OTA) or audio-navigation	INRG2010			Live Data		Y		
C4(B7) (After 2010)		Telematic unit (OTA) or audio-navigation	INRG2010			Actuation Test		Y		
C4(B7) (After 2010)		Telematic unit (OTA) or audio-navigation	INRG2010			Special Function	Configuration	Y		
C4(B7) (After 2010)		Telematic unit (OTA) or audio-navigation	INRG2010			Special Function	Pack Repair	Y		
C4(B7) (After 2010)		Telematic unit (OTA) or audio-navigation	SME6_PLUS			Read ECU Information		Y		
C4(B7) (After 2010)		Telematic unit (OTA) or audio-navigation	SME6_PLUS			Read Fault Code		Y		
C4(B7) (After 2010)		Telematic unit (OTA) or audio-navigation	SME6_PLUS			Erase Fault Code		Y		
C4(B7) (After 2010)		Telematic unit (OTA) or audio-navigation	SME6_PLUS			Live Data		Y		
C4(B7) (After 2010)		Telematic unit (OTA) or audio-navigation	SME6_PLUS			Actuation Test		Y		
C4(B7) (After 2010)		Telematic unit (OTA) or audio-navigation	SME6_PLUS			Special Function	Configuration	Y		
C4(B7) (After 2010)		Anti-theft alarm				Read ECU Information		Y		
C4(B7) (After 2010)		Anti-theft alarm				Read Fault Code		Y		
C4(B7) (After 2010)		Anti-theft alarm				Erase Fault Code		Y		
C4(B7) (After 2010)		Anti-theft alarm				Live Data		Y		
C4(B7) (After 2010)		Anti-theft alarm				Actuation Test		Y		
C4(B7) (After 2010)		Anti-theft alarm				Special Function	Configuration	Y		
C4(B7) (After 2010)		Anti-theft alarm				Special Function	Pack Repair	Y		
C4(B7) (After 2010)		Seat driver position memory module				Read ECU Information		Y		
C4(B7) (After 2010)		Seat driver position memory module				Read Fault Code		Y		
C4(B7) (After 2010)		Seat driver position memory module				Erase Fault Code		Y		
C4(B7) (After 2010)		Seat driver position memory module				Live Data		Y		
C4(B7) (After 2010)		Seat driver position memory module				Actuation Test		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Models	Year classification	System	Subsystem or system type (YES stands for Citroen, NO stands for other ones)	Subsystem (YES stands for Citroen, NO stands for other ones)	Subsystem or system type	Function type	Special function reasons	Adm (Y/N)	Verification (Y/N)	Remarks
C4(B7) (After 2010)		Seat driver position memory module				Special Function	Configuration	Y		
C4(B7) (After 2010)		Seat driver position memory module				Special Function	Pack Repair	Y		
C4(B7) (After 2010)		Driver's door module				Read ECU Information		Y		
C4(B7) (After 2010)		Driver's door module				Read Fault Code		Y		
C4(B7) (After 2010)		Driver's door module				Erase Fault Code		Y		
C4(B7) (After 2010)		Driver's door module				Live Data		Y		
C4(B7) (After 2010)		Driver's door module				Actuation Test		Y		
C4(B7) (After 2010)		Control panel dot matrix display	Yes			Read ECU Information		Y		
C4(B7) (After 2010)		Control panel dot matrix display	Yes			Read Fault Code		Y		
C4(B7) (After 2010)		Control panel dot matrix display	Yes			Erase Fault Code		Y		
C4(B7) (After 2010)		Control panel dot matrix display	Yes			Actuation Test		Y		
C4(B7) (After 2010)		Control panel dot matrix display	Yes			Special Function	Configuration	Y		
C4(B7) (After 2010)		Control panel dot matrix display	No			Read ECU Information		Y		
C4(B7) (After 2010)		Control panel dot matrix display	No			Read Fault Code		Y		
C4(B7) (After 2010)		Control panel dot matrix display	No			Erase Fault Code		Y		
C4(B7) (After 2010)		Control panel dot matrix display	No			Actuation Test		Y		
C4(B7) (After 2010)		Control panel dot matrix display	No			Special Function	Configuration	Y		
C4(B7) (After 2010)		Seat belt not fastened warning lights unit				Read ECU Information		Y		
C4(B7) (After 2010)		Seat belt not fastened warning lights unit				Actuation Test		Y		
C4(B7) (After 2010)		Rain and light sensor				Read ECU Information		Y		
C4(B7) (After 2010)		Rain and light sensor				Read Fault Code		Y		
C4(B7) (After 2010)		Rain and light sensor				Erase Fault Code		Y		
C4(B7) (After 2010)		Rain and light sensor				Live Data		Y		
C4(B7) (After 2010)		Rain and light sensor				Special Function	Pack Repair	Y		
C4(B7) (After 2010)		Driving school module				Read ECU Information		Y		
C4(B7) (After 2010)		Driving school module				Actuation Test		Y		
C4(B7) (After 2010)		Service module / Independent telematic unit	BTA			Read ECU Information		Y		
C4(B7) (After 2010)		Service module / Independent telematic unit	BTA			Read Fault Code		Y		
C4(B7) (After 2010)		Service module / Independent telematic unit	BTA			Erase Fault Code		Y		
C4(B7) (After 2010)		Service module / Independent telematic unit	BTA			Live Data		Y		
C4(B7) (After 2010)		Service module / Independent telematic unit	BTA			Actuation Test		Y		
C4(B7) (After 2010)		Service module / Independent telematic unit	BTA			Special Function	Configuration	Y		
C4(B7) (After 2010)		Service module / Independent telematic unit	BTA,2			Read ECU Information		Y		
C4(B7) (After 2010)		Service module / Independent telematic unit	BTA,2			Read Fault Code		Y		
C4(B7) (After 2010)		Service module / Independent telematic unit	BTA,2			Erase Fault Code		Y		
C4(B7) (After 2010)		Service module / Independent telematic unit	BTA,2			Live Data		Y		
C4(B7) (After 2010)		Service module / Independent telematic unit	BTA,2			Actuation Test		Y		
C4(B7) (After 2010)		Service module / Independent telematic unit	BTA,2			Special Function	Configuration	Y		
C4(B7) (After 2010)		Service module / Independent telematic unit	BTA,2			Special Function	Pack Repair	Y		
C4(B7) (After 2010)		Voltage retaining device	DMTC			Read ECU Information		Y		
C4(B7) (After 2010)		Voltage retaining device	DMTR			Read ECU Information		Y		
C4(B7) (After 2010)		Voltage retaining device	DMTR			Read Fault Code		Y		
C4(B7) (After 2010)		Voltage retaining device	DMTR			Erase Fault Code		Y		
C4(B7) (After 2010)		Voltage retaining device	DMTR,DFC3B			Read ECU Information		Y		
C4(B7) (After 2010)		Voltage retaining device	DMTR,DFC3B			Read Fault Code		Y		
C4(B7) (After 2010)		Voltage retaining device	DMTR,DFC3B			Erase Fault Code		Y		
C4(B7) (After 2010)		Multiplexed control panel	Accessory audio system and manual air conditioning			Read ECU Information		Y		
C4(B7) (After 2010)		Multiplexed control panel	Accessory audio system and manual air conditioning			Read Fault Code		Y		
C4(B7) (After 2010)		Multiplexed control panel	Accessory audio system and manual air conditioning			Erase Fault Code		Y		
C4(B7) (After 2010)		Multiplexed control panel	Accessory audio system and manual air conditioning			Live Data		Y		
C4(B7) (After 2010)		Multiplexed control panel	Accessory audio system and manual air conditioning			Actuation Test		Y		
C4(B7) (After 2010)		Multiplexed control panel	RIS audio system and manual air conditioning			Read ECU Information		Y		
C4(B7) (After 2010)		Multiplexed control panel	RIS audio system and manual air conditioning			Read Fault Code		Y		
C4(B7) (After 2010)		Multiplexed control panel	RIS audio system and manual air conditioning			Erase Fault Code		Y		
C4(B7) (After 2010)		Multiplexed control panel	RIS audio system and manual air conditioning			Live Data		Y		
C4(B7) (After 2010)		Multiplexed control panel	RIS audio system and manual air conditioning			Actuation Test		Y		
C4(B7) (After 2010)		Multiplexed control panel	RT6 telematic unit and manual air conditioning			Read ECU Information		Y		
C4(B7) (After 2010)		Multiplexed control panel	RT6 telematic unit and manual air conditioning			Read Fault Code		Y		
C4(B7) (After 2010)		Multiplexed control panel	RT6 telematic unit and manual air conditioning			Erase Fault Code		Y		
C4(B7) (After 2010)		Multiplexed control panel	RT6 telematic unit and manual air conditioning			Live Data		Y		
C4(B7) (After 2010)		Multiplexed control panel	RT6 telematic unit and manual air conditioning			Actuation Test		Y		
C4(B7) (After 2010)		Multiplexed control panel	Accessory audio equipment and automatic air conditioning			Read ECU Information		Y		
C4(B7) (After 2010)		Multiplexed control panel	Accessory audio equipment and automatic air conditioning			Read Fault Code		Y		
C4(B7) (After 2010)		Multiplexed control panel	Accessory audio equipment and automatic air conditioning			Erase Fault Code		Y		
C4(B7) (After 2010)		Multiplexed control panel	Accessory audio equipment and automatic air conditioning			Live Data		Y		
C4(B7) (After 2010)		Multiplexed control panel	Accessory audio equipment and automatic air conditioning			Actuation Test		Y		
C4(B7) (After 2010)		Multiplexed control panel	RIS audio system and automatic air conditioning			Read ECU Information		Y		
C4(B7) (After 2010)		Multiplexed control panel	RIS audio system and automatic air conditioning			Read Fault Code		Y		
C4(B7) (After 2010)		Multiplexed control panel	RIS audio system and automatic air conditioning			Erase Fault Code		Y		
C4(B7) (After 2010)		Multiplexed control panel	RIS audio system and automatic air conditioning			Live Data		Y		
C4(B7) (After 2010)		Multiplexed control panel	RIS audio system and automatic air conditioning			Actuation Test		Y		
C4(B7) (After 2010)		Multiplexed control panel	RT6 telematic unit and automatic air conditioning			Read ECU Information		Y		
C4(B7) (After 2010)		Multiplexed control panel	RT6 telematic unit and automatic air conditioning			Read Fault Code		Y		
C4(B7) (After 2010)		Multiplexed control panel	RT6 telematic unit and automatic air conditioning			Erase Fault Code		Y		
C4(B7) (After 2010)		Multiplexed control panel	RT6 telematic unit and automatic air conditioning			Live Data		Y		
C4(B7) (After 2010)		Multiplexed control panel	RT6 telematic unit and automatic air conditioning			Actuation Test		Y		
C4(B7) (After 2010)		Monitoring of the blind spot				Read ECU Information		Y		
C4(B7) (After 2010)		Monitoring of the blind spot				Read Fault Code		Y		
C4(B7) (After 2010)		Monitoring of the blind spot				Erase Fault Code		Y		
C4(B7) (After 2010)		Monitoring of the blind spot				Live Data		Y		
C4(B7) (After 2010)		Monitoring of the blind spot				Actuation Test		Y		
C4(B7) (After 2010)		Monitoring of the blind spot				Special Function	Configuration	Y		
C4(B7) (After 2010)		Control on the steering wheel / Integral controls steering wheel	Yes			Read ECU Information		Y		
C4(B7) (After 2010)		Control on the steering wheel / Integral controls steering wheel	Yes			Read Fault Code		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Models	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function reasons	Add (Y/N)	Verification (Y/N)	Remarks
C4(B7) (After 2010)		Control on the steering wheel / integral controls steering wheel	Yes			Erase Fault Code		Y		
C4(B7) (After 2010)		Control on the steering wheel / integral controls steering wheel	Yes			Live Data		Y		
C4(B7) (After 2010)		Control on the steering wheel / integral controls steering wheel	No			Read ECU Information		Y		
C4(B7) (After 2010)		Control on the steering wheel / integral controls steering wheel	No			Read Fault Code		Y		
C4(B7) (After 2010)		Control on the steering wheel / integral controls steering wheel	No			Erase Fault Code		Y		
C4(B7) (After 2010)		Control on the steering wheel / integral controls steering wheel	No			Live Data		Y		
C4(B7) (After 2010)		Supply protection and management unit				Read ECU Information		Y		
C4(B7) (After 2010)		Supply protection and management unit				Read Fault Code		Y		
C4(B7) (After 2010)		Supply protection and management unit				Erase Fault Code		Y		
C4(B7) (After 2010)		Supply protection and management unit				Live Data		Y		
C4(B7) (After 2010)		Hands free control unit				Read ECU Information		Y		
C4(B7) (After 2010)		Hands free control unit				Read Fault Code		Y		
C4(B7) (After 2010)		Hands free control unit				Erase Fault Code		Y		
C4(B7) (After 2010)		Hands free control unit				Live Data		Y		
C4(B7) (After 2010)		Hands free control unit				Special Function	Configuration	Y		
C4(B7) (After 2010)		Hands free control unit				Special Function	Pack Repair	Y		
C4(B7) (After 2010)		Electronic key reader				Read ECU Information		Y		
C4(B7) (After 2010)		Electronic key reader				Read Fault Code		Y		
C4(B7) (After 2010)		Electronic key reader				Erase Fault Code		Y		
C4(B7) (After 2010)		Electronic key reader				Live Data		Y		
C4(B7) (After 2010)		Electric steering lock				Read ECU Information		Y		
C4(B7) (After 2010)		Electric steering lock				Read Fault Code		Y		
C4(B7) (After 2010)		Electric steering lock				Erase Fault Code		Y		
C4(B7) (After 2010)		Electric steering lock				Live Data		Y		
C4(B7) (After 2010)		Electric steering lock				Actuation Test		Y		
C4(B7) (After 2010)		External CD player				Read ECU Information		Y		
C4(B7) (After 2010)		External CD player				Read Fault Code		Y		
C4(B7) (After 2010)		External CD player				Erase Fault Code		Y		
C4(B7) (After 2010)		External CD player				Live Data		Y		
C4(B7) (After 2010)		External CD player				Actuation Test		Y		
C4(B7) (After 2010)		External CD player				Special Function	Configuration	Y		
C4 L(B7)		Built-in Systems Interface				Read ECU Information		Y		
C4 L(B7)		Built-in Systems Interface				Read Fault Code		Y		
C4 L(B7)		Built-in Systems Interface				Live Data		Y		
C4 L(B7)		Built-in Systems Interface				Actuation Test		Y		
C4 L(B7)		Built-in Systems Interface				Special Function	Maintenance - ISI operating mode	Y		
C4 L(B7)		Built-in Systems Interface				Special Function	Pack Repair	Y		
C4 L(B7)		Engine management ECU	VD46			Read ECU Information		Y		
C4 L(B7)		Engine management ECU	VD46			Read Fault Code		Y		
C4 L(B7)		Engine management ECU	VD46			Erase Fault Code		Y		
C4 L(B7)		Engine management ECU	VD46			Live Data		Y		
C4 L(B7)		Engine management ECU	VD46			Actuation Test		Y		
C4 L(B7)		Engine management ECU	VD46			Special Function	Pack Repair	Y		
C4 L(B7)		Engine management ECU	ME745, EC5			Read ECU Information		Y		
C4 L(B7)		Engine management ECU	ME745, EC5			Read Fault Code		Y		
C4 L(B7)		Engine management ECU	ME745, EC5			Erase Fault Code		Y		
C4 L(B7)		Engine management ECU	ME745, EC5			Live Data		Y		
C4 L(B7)		Engine management ECU	ME745, EC5			Actuation Test		Y		
C4 L(B7)		Engine management ECU	ME745, EC5			Special Function	Configuration	Y		
C4 L(B7)		Engine management ECU	ME745, EC5			Special Function	Pack Repair	Y		
C4 L(B7)		Engine management ECU	ME017_4_2	14 MED17.4.2 EURO6		Read ECU Information		Y		
C4 L(B7)		Engine management ECU	ME017_4_2	14 MED17.4.2 EURO6		Read Fault Code		Y		
C4 L(B7)		Engine management ECU	ME017_4_2	14 MED17.4.2 EURO6		Erase Fault Code		Y		
C4 L(B7)		Engine management ECU	ME017_4_2	14 MED17.4.2 EURO6		Live Data		Y		
C4 L(B7)		Engine management ECU	ME017_4_2	14 MED17.4.2 EURO6		Actuation Test		Y		
C4 L(B7)		Engine management ECU	ME017_4_2	14 MED17.4.2 EURO6		Special Function	Configuration	Y		
C4 L(B7)		Engine management ECU	ME017_4_2	14 MED17.4.2 EURO6		Special Function	Pack Repair	Y		
C4 L(B7)		Engine management ECU	V96_32	Yes	Yes	Read ECU Information		Y		
C4 L(B7)		Engine management ECU	V96_32	Yes	Yes	Read Fault Code		Y		
C4 L(B7)		Engine management ECU	V96_32	Yes	Yes	Erase Fault Code		Y		
C4 L(B7)		Engine management ECU	V96_32	Yes	Yes	Live Data		Y		
C4 L(B7)		Engine management ECU	V96_32	Yes	Yes	Actuation Test		Y		
C4 L(B7)		Engine management ECU	V96_32	Yes	Yes	Special Function	Configuration	Y		
C4 L(B7)		Engine management ECU	V96_32	Yes	Yes	Special Function	Pack Repair	Y		
C4 L(B7)		Engine management ECU	V96_32	Yes	No	Read ECU Information		Y		
C4 L(B7)		Engine management ECU	V96_32	Yes	No	Read Fault Code		Y		
C4 L(B7)		Engine management ECU	V96_32	Yes	No	Erase Fault Code		Y		
C4 L(B7)		Engine management ECU	V96_32	Yes	No	Live Data		Y		
C4 L(B7)		Engine management ECU	V96_32	Yes	No	Actuation Test		Y		
C4 L(B7)		Engine management ECU	V96_32	Yes	No	Special Function	Configuration	Y		
C4 L(B7)		Engine management ECU	V96_32	Yes	No	Special Function	Pack Repair	Y		
C4 L(B7)		Engine management ECU	ME017_4_4			Read ECU Information		Y		
C4 L(B7)		Engine management ECU	ME017_4_4			Read Fault Code		Y		
C4 L(B7)		Engine management ECU	ME017_4_4			Erase Fault Code		Y		
C4 L(B7)		Engine management ECU	ME017_4_4			Live Data		Y		
C4 L(B7)		Engine management ECU	ME017_4_4			Actuation Test		Y		
C4 L(B7)		Engine management ECU	ME017_4_4			Special Function	Pack repairation	Y		
C4 L(B7)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	81 ESP			Read ECU Information		Y		
C4 L(B7)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	81 ESP			Read Fault Code		Y		
C4 L(B7)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	81 ESP			Erase Fault Code		Y		
C4 L(B7)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	81 ESP			Live Data		Y		
C4 L(B7)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	81 ESP			Actuation Test		Y		
C4 L(B7)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	81 ESP			Special Function	Configuration	Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function reasons	Add (Y/N)	Verification (Y/N)	Remarks
C4 L (07)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	81 ESP			Special Function	Pack Repair	Y		
C4 L (07)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP 90			Read ECU Information		Y		
C4 L (07)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP 90			Read Fault Code		Y		
C4 L (07)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP 90			Erase Fault Code		Y		
C4 L (07)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP 90			Live Data		Y		
C4 L (07)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP 90			Actuation Test		Y		
C4 L (07)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP 90			Special Function	Pack Repair	Y		
C4 L (07)		Automatic gearbox or controlled manual gearbox	BVA_A18			Read ECU Information		Y		
C4 L (07)		Automatic gearbox or controlled manual gearbox	BVA_A18			Read Fault Code		Y		
C4 L (07)		Automatic gearbox or controlled manual gearbox	BVA_A18			Erase Fault Code		Y		
C4 L (07)		Automatic gearbox or controlled manual gearbox	BVA_A18			Live Data		Y		
C4 L (07)		Automatic gearbox or controlled manual gearbox	BVA_A18			Actuation Test		Y		
C4 L (07)		Automatic gearbox or controlled manual gearbox	BVA_A18			Special Function	Configuration	Y		
C4 L (07)		Automatic gearbox or controlled manual gearbox	BVA_A18			Special Function	Pack Repair	Y		
C4 L (07)		Automatic gearbox or controlled manual gearbox	BVA_AM6_A16_E180G			Read ECU Information		Y		
C4 L (07)		Automatic gearbox or controlled manual gearbox	BVA_AM6_A16_E180G			Read Fault Code		Y		
C4 L (07)		Automatic gearbox or controlled manual gearbox	BVA_AM6_A16_E180G			Erase Fault Code		Y		
C4 L (07)		Automatic gearbox or controlled manual gearbox	BVA_AM6_A16_E180G			Live Data		Y		
C4 L (07)		Automatic gearbox or controlled manual gearbox	BVA_AM6_A16_E180G			Actuation Test		Y		
C4 L (07)		Automatic gearbox or controlled manual gearbox	BVA_AM6_A16_E180G			Special Function	Oil wear counter	Y		
C4 L (07)		Automatic gearbox or controlled manual gearbox	BVA_AM6_A16_E180G			Special Function	Configuration	Y		
C4 L (07)		Automatic gearbox or controlled manual gearbox	BVA_AM6_A16_E180G			Special Function	Pack Repair	Y		
C4 L (07)		Automatic gearbox or controlled manual gearbox	BVA_AM6_A16_ID5			Read ECU Information		Y		
C4 L (07)		Automatic gearbox or controlled manual gearbox	BVA_AM6_A16_ID5			Read Fault Code		Y		
C4 L (07)		Automatic gearbox or controlled manual gearbox	BVA_AM6_A16_ID5			Erase Fault Code		Y		
C4 L (07)		Automatic gearbox or controlled manual gearbox	BVA_AM6_A16_ID5			Live Data		Y		
C4 L (07)		Automatic gearbox or controlled manual gearbox	BVA_AM6_A16_ID5			Actuation Test		Y		
C4 L (07)		Automatic gearbox or controlled manual gearbox	BVA_AM6_A16_ID5			Special Function	Pack Repair	Y		
C4 L (07)		Air bags and pre-tensioners control unit				Read ECU Information		Y		
C4 L (07)		Air bags and pre-tensioners control unit				Read Fault Code		Y		
C4 L (07)		Air bags and pre-tensioners control unit				Erase Fault Code		Y		
C4 L (07)		Air bags and pre-tensioners control unit				Live Data		Y		
C4 L (07)		Air bags and pre-tensioners control unit				Special Function	Pack Repair	Y		
C4 L (07)		Power steering				Read ECU Information		Y		
C4 L (07)		Power steering				Read Fault Code		Y		
C4 L (07)		Power steering				Erase Fault Code		Y		
C4 L (07)		Power steering				Live Data		Y		
C4 L (07)		Power steering				Actuation Test		Y		
C4 L (07)		Under-inflation detection	DSG_ID5			Read ECU Information		Y		
C4 L (07)		Under-inflation detection	DSG_ID5			Read Fault Code		Y		
C4 L (07)		Under-inflation detection	DSG_ID5			Erase Fault Code		Y		
C4 L (07)		Under-inflation detection	DSG_ID5			Live Data		Y		
C4 L (07)		Under-inflation detection	DSG_ID5			Special Function	Pack Repair	Y		
C4 L (07)		Under-inflation detection	DSG			Read ECU Information		Y		
C4 L (07)		Under-inflation detection	DSG			Read Fault Code		Y		
C4 L (07)		Under-inflation detection	DSG			Erase Fault Code		Y		
C4 L (07)		Under-inflation detection	DSG			Live Data		Y		
C4 L (07)		Under-inflation detection	DSG			Special Function	Pack Repair	Y		
C4 L (07)		Battery charge status unit				Read ECU Information		Y		
C4 L (07)		Battery charge status unit				Read Fault Code		Y		
C4 L (07)		Battery charge status unit				Erase Fault Code		Y		
C4 L (07)		Battery charge status unit				Live Data		Y		
C4 L (07)		Battery charge status unit				Special Function	Configuration	Y		
C4 L (07)		Battery charge status unit				Special Function	Pack Repair	Y		
C4 L (07)		Engine relay unit				Read ECU Information		Y		
C4 L (07)		Engine relay unit				Read Fault Code		Y		
C4 L (07)		Engine relay unit				Erase Fault Code		Y		
C4 L (07)		Engine relay unit				Live Data		Y		
C4 L (07)		Engine relay unit				Actuation Test		Y		
C4 L (07)		Engine relay unit				Special Function	Configuration	Y		
C4 L (07)		Parking assistance				Read ECU Information		Y		
C4 L (07)		Parking assistance				Read Fault Code		Y		
C4 L (07)		Parking assistance				Erase Fault Code		Y		
C4 L (07)		Parking assistance				Live Data		Y		
C4 L (07)		Parking assistance				Special Function	Configuration	Y		
C4 L (07)		Parking assistance				Special Function	Pack Repair	Y		
C4 L (07)		Air conditioning	RFTA_FOUR-ZONE			Read ECU Information		Y		
C4 L (07)		Air conditioning	RFTA_FOUR-ZONE			Read Fault Code		Y		
C4 L (07)		Air conditioning	RFTA_FOUR-ZONE			Erase Fault Code		Y		
C4 L (07)		Air conditioning	RFTA_FOUR-ZONE			Live Data		Y		
C4 L (07)		Air conditioning	RFTA_FOUR-ZONE			Actuation Test		Y		
C4 L (07)		Air conditioning	RFTA_FOUR-ZONE			Special Function	Pack Repair	Y		
C4 L (07)		Controls under the steering wheel	Yes			Read ECU Information		Y		
C4 L (07)		Controls under the steering wheel	Yes			Read Fault Code		Y		
C4 L (07)		Controls under the steering wheel	Yes			Erase Fault Code		Y		
C4 L (07)		Controls under the steering wheel	Yes			Live Data		Y		
C4 L (07)		Controls under the steering wheel	Yes			Actuation Test		Y		
C4 L (07)		Controls under the steering wheel	Yes			Special Function	Pack Repair	Y		
C4 L (07)		Controls under the steering wheel	No			Read ECU Information		Y		
C4 L (07)		Controls under the steering wheel	No			Read Fault Code		Y		
C4 L (07)		Controls under the steering wheel	No			Erase Fault Code		Y		
C4 L (07)		Controls under the steering wheel	No			Live Data		Y		
C4 L (07)		Controls under the steering wheel	No			Actuation Test		Y		
C4 L (07)		Controls under the steering wheel	No			Special Function	Pack Repair	Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function reasons	Add (Y/N)	Verification (Y/N)	Remarks
C4 L087		Multifunction screen	EMF_A_IDS			Read ECU Information		Y		
C4 L087		Multifunction screen	EMF_A_IDS			Read Fault Code		Y		
C4 L087		Multifunction screen	EMF_A_IDS			Erase Fault Code		Y		
C4 L087		Multifunction screen	EMF_A_IDS			Actuation Test		Y		
C4 L087		Multifunction screen	EMF_A_IDS			Special Function	Configuration with displaying of the parameters	Y		
C4 L087		Multifunction screen	EMF_A_IDS			Special Function	Pack Repair	Y		
C4 L087		Multifunction screen	EMF_C_IDS			Read ECU Information		Y		
C4 L087		Multifunction screen	EMF_C_IDS			Read Fault Code		Y		
C4 L087		Multifunction screen	EMF_C_IDS			Erase Fault Code		Y		
C4 L087		Multifunction screen	EMF_C_IDS			Actuation Test		Y		
C4 L087		Multifunction screen	EMF_C_IDS			Special Function	Configuration with displaying of the parameters	Y		
C4 L087		Telematic unit (RTX) or audio-navigation				Read ECU Information		Y		
C4 L087		Telematic unit (RTX) or audio-navigation				Read Fault Code		Y		
C4 L087		Telematic unit (RTX) or audio-navigation				Erase Fault Code		Y		
C4 L087		Telematic unit (RTX) or audio-navigation				Live Data		Y		
C4 L087		Telematic unit (RTX) or audio-navigation				Actuation Test		Y		
C4 L087		Telematic unit (RTX) or audio-navigation				Special Function	Configuration	Y		
C4 L087		Anti-theft alarm				Read ECU Information		Y		
C4 L087		Anti-theft alarm				Read Fault Code		Y		
C4 L087		Anti-theft alarm				Erase Fault Code		Y		
C4 L087		Anti-theft alarm				Live Data		Y		
C4 L087		Anti-theft alarm				Actuation Test		Y		
C4 L087		Anti-theft alarm				Special Function	Configuration	Y		
C4 L087		Anti-theft alarm				Special Function	Pack Repair	Y		
C4 L087		Control panel dot matrix display	COLOR MATRIX SCREEN			Read ECU Information		Y		
C4 L087		Control panel dot matrix display	COLOR MATRIX SCREEN			Read Fault Code		Y		
C4 L087		Control panel dot matrix display	COLOR MATRIX SCREEN			Erase Fault Code		Y		
C4 L087		Control panel dot matrix display	COLOR MATRIX SCREEN			Actuation Test		Y		
C4 L087		Control panel dot matrix display	COLOR MATRIX SCREEN			Special Function	Configuration	Y		
C4 L087		Control panel dot matrix display	MONOCHROME MATRIX SCREEN			Read ECU Information		Y		
C4 L087		Control panel dot matrix display	MONOCHROME MATRIX SCREEN			Read Fault Code		Y		
C4 L087		Control panel dot matrix display	MONOCHROME MATRIX SCREEN			Erase Fault Code		Y		
C4 L087		Control panel dot matrix display	MONOCHROME MATRIX SCREEN			Actuation Test		Y		
C4 L087		Control panel dot matrix display	MONOCHROME MATRIX SCREEN			Special Function	Configuration	Y		
C4 L087		Rain and light sensor				Read ECU Information		Y		
C4 L087		Rain and light sensor				Read Fault Code		Y		
C4 L087		Rain and light sensor				Erase Fault Code		Y		
C4 L087		Rain and light sensor				Live Data		Y		
C4 L087		Rain and light sensor				Special Function	Pack Repair	Y		
C4 L087		Service module / Independent telematic unit				Read ECU Information		Y		
C4 L087		Service module / Independent telematic unit				Read Fault Code		Y		
C4 L087		Service module / Independent telematic unit				Erase Fault Code		Y		
C4 L087		Service module / Independent telematic unit				Live Data		Y		
C4 L087		Service module / Independent telematic unit				Actuation Test		Y		
C4 L087		Service module / Independent telematic unit				Special Function	Configuration	Y		
C4 L087		Service module / Independent telematic unit				Special Function	Pack Repair	Y		
C4 L087		Voltage retaining device	DMTC			Read ECU Information		Y		
C4 L087		Voltage retaining device	DMTR			Read ECU Information		Y		
C4 L087		Voltage retaining device	DMTR			Read Fault Code		Y		
C4 L087		Voltage retaining device	DMTR			Erase Fault Code		Y		
C4 L087		Voltage retaining device	DMTR-DTC3B			Read ECU Information		Y		
C4 L087		Voltage retaining device	DMTR-DTC3B			Read Fault Code		Y		
C4 L087		Voltage retaining device	DMTR-DTC3B			Erase Fault Code		Y		
C4 L087		Multiplexed control panel	Accessory audio system and manual air conditioning			Read ECU Information		Y		
C4 L087		Multiplexed control panel	Accessory audio system and manual air conditioning			Read Fault Code		Y		
C4 L087		Multiplexed control panel	Accessory audio system and manual air conditioning			Erase Fault Code		Y		
C4 L087		Multiplexed control panel	Accessory audio system and manual air conditioning			Live Data		Y		
C4 L087		Multiplexed control panel	Accessory audio system and manual air conditioning			Actuation Test		Y		
C4 L087		Multiplexed control panel	RIS audio system and manual air conditioning			Read ECU Information		Y		
C4 L087		Multiplexed control panel	RIS audio system and manual air conditioning			Read Fault Code		Y		
C4 L087		Multiplexed control panel	RIS audio system and manual air conditioning			Erase Fault Code		Y		
C4 L087		Multiplexed control panel	RIS audio system and manual air conditioning			Live Data		Y		
C4 L087		Multiplexed control panel	RIS audio system and manual air conditioning			Actuation Test		Y		
C4 L087		Multiplexed control panel	RT6 telematic unit and manual air conditioning			Read ECU Information		Y		
C4 L087		Multiplexed control panel	RT6 telematic unit and manual air conditioning			Read Fault Code		Y		
C4 L087		Multiplexed control panel	RT6 telematic unit and manual air conditioning			Erase Fault Code		Y		
C4 L087		Multiplexed control panel	RT6 telematic unit and manual air conditioning			Live Data		Y		
C4 L087		Multiplexed control panel	RT6 telematic unit and manual air conditioning			Actuation Test		Y		
C4 L087		Multiplexed control panel	Accessory audio equipment and automatic air conditioning			Read ECU Information		Y		
C4 L087		Multiplexed control panel	Accessory audio equipment and automatic air conditioning			Read Fault Code		Y		
C4 L087		Multiplexed control panel	Accessory audio equipment and automatic air conditioning			Erase Fault Code		Y		
C4 L087		Multiplexed control panel	Accessory audio equipment and automatic air conditioning			Live Data		Y		
C4 L087		Multiplexed control panel	Accessory audio equipment and automatic air conditioning			Actuation Test		Y		
C4 L087		Multiplexed control panel	RIS audio system and automatic air conditioning			Read ECU Information		Y		
C4 L087		Multiplexed control panel	RIS audio system and automatic air conditioning			Read Fault Code		Y		
C4 L087		Multiplexed control panel	RIS audio system and automatic air conditioning			Erase Fault Code		Y		
C4 L087		Multiplexed control panel	RIS audio system and automatic air conditioning			Live Data		Y		
C4 L087		Multiplexed control panel	RIS audio system and automatic air conditioning			Actuation Test		Y		
C4 L087		Multiplexed control panel	RT6 telematic unit and automatic air conditioning			Read ECU Information		Y		
C4 L087		Multiplexed control panel	RT6 telematic unit and automatic air conditioning			Read Fault Code		Y		
C4 L087		Multiplexed control panel	RT6 telematic unit and automatic air conditioning			Erase Fault Code		Y		
C4 L087		Multiplexed control panel	RT6 telematic unit and automatic air conditioning			Live Data		Y		
C4 L087		Multiplexed control panel	RT6 telematic unit and automatic air conditioning			Actuation Test		Y		
C4 L087		Control on the steering wheel / Integral controls steering wheel	Yes			Read ECU Information		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function reasons	Add (Y/N)	Verification (Y/N)	Remarks
C4 PICASSO (2006-2013)		Automatic gearbox or controlled manual gearbox	BVA_AL4			Erase Fault Code		Y		
C4 PICASSO (2006-2013)		Automatic gearbox or controlled manual gearbox	BVA_AL4			Live Data		Y		
C4 PICASSO (2006-2013)		Automatic gearbox or controlled manual gearbox	BVA_AL4			Actuation Test		Y		
C4 PICASSO (2006-2013)		Automatic gearbox or controlled manual gearbox	BVA_AL4			Special Function	Configuration	Y		
C4 PICASSO (2006-2013)		Automatic gearbox or controlled manual gearbox	BVA_AL4			Special Function	Pack Repair	Y		
C4 PICASSO (2006-2013)		Automatic gearbox or controlled manual gearbox	BVA_AM6			Read ECU Information		Y		
C4 PICASSO (2006-2013)		Automatic gearbox or controlled manual gearbox	BVA_AM6			Read Fault Code		Y		
C4 PICASSO (2006-2013)		Automatic gearbox or controlled manual gearbox	BVA_AM6			Erase Fault Code		Y		
C4 PICASSO (2006-2013)		Automatic gearbox or controlled manual gearbox	BVA_AM6			Live Data		Y		
C4 PICASSO (2006-2013)		Automatic gearbox or controlled manual gearbox	BVA_AM6			Actuation Test		Y		
C4 PICASSO (2006-2013)		Automatic gearbox or controlled manual gearbox	BVA_AM6			Special Function	Oil wear counter	Y		
C4 PICASSO (2006-2013)		Automatic gearbox or controlled manual gearbox	BVA_AM6			Special Function	Configuration	Y		
C4 PICASSO (2006-2013)		Automatic gearbox or controlled manual gearbox	BVA_AM6			Special Function	Replacement parts	Y		
C4 PICASSO (2006-2013)		Automatic gearbox or controlled manual gearbox	CFC300P			Read ECU Information		Y		
C4 PICASSO (2006-2013)		Automatic gearbox or controlled manual gearbox	CFC300P			Read Fault Code		Y		
C4 PICASSO (2006-2013)		Automatic gearbox or controlled manual gearbox	CFC300P			Erase Fault Code		Y		
C4 PICASSO (2006-2013)		Automatic gearbox or controlled manual gearbox	CFC300P			Live Data		Y		
C4 PICASSO (2006-2013)		Automatic gearbox or controlled manual gearbox	CFC300P			Actuation Test		Y		
C4 PICASSO (2006-2013)		Automatic gearbox or controlled manual gearbox	CFC300P			Special Function	Replacement parts	Y		
C4 PICASSO (2006-2013)		Automatic gearbox electric control				Read ECU Information		Y		
C4 PICASSO (2006-2013)		Automatic gearbox electric control				Read Fault Code		Y		
C4 PICASSO (2006-2013)		Automatic gearbox electric control				Erase Fault Code		Y		
C4 PICASSO (2006-2013)		Automatic gearbox electric control				Live Data		Y		
C4 PICASSO (2006-2013)		Automatic gearbox electric control				Actuation Test		Y		
C4 PICASSO (2006-2013)		Air bags and pre-tensioners control unit				Read ECU Information		Y		
C4 PICASSO (2006-2013)		Air bags and pre-tensioners control unit				Read Fault Code		Y		
C4 PICASSO (2006-2013)		Air bags and pre-tensioners control unit				Erase Fault Code		Y		
C4 PICASSO (2006-2013)		Air bags and pre-tensioners control unit				Live Data		Y		
C4 PICASSO (2006-2013)		Air bags and pre-tensioners control unit				Special Function	Configuration	Y		
C4 PICASSO (2006-2013)		Air bags and pre-tensioners control unit				Special Function	Pack Repair	Y		
C4 PICASSO (2006-2013)		Power steering				Read ECU Information		Y		
C4 PICASSO (2006-2013)		Power steering				Read Fault Code		Y		
C4 PICASSO (2006-2013)		Power steering				Erase Fault Code		Y		
C4 PICASSO (2006-2013)		Power steering				Live Data		Y		
C4 PICASSO (2006-2013)		Power steering				Actuation Test		Y		
C4 PICASSO (2006-2013)		Pneumatic suspension				Read ECU Information		Y		
C4 PICASSO (2006-2013)		Pneumatic suspension				Read Fault Code		Y		
C4 PICASSO (2006-2013)		Pneumatic suspension				Erase Fault Code		Y		
C4 PICASSO (2006-2013)		Pneumatic suspension				Live Data		Y		
C4 PICASSO (2006-2013)		Pneumatic suspension				Actuation Test		Y		
C4 PICASSO (2006-2013)		Pneumatic suspension				Special Function	Configuration	Y		
C4 PICASSO (2006-2013)		Pneumatic suspension				Special Function	Pack Repair	Y		
C4 PICASSO (2006-2013)		Diesel additive pump	PADDDG			Read ECU Information		Y		
C4 PICASSO (2006-2013)		Diesel additive pump	PADDDG			Read Fault Code		Y		
C4 PICASSO (2006-2013)		Diesel additive pump	PADDDG			Erase Fault Code		Y		
C4 PICASSO (2006-2013)		Diesel additive pump	PADDDG			Live Data		Y		
C4 PICASSO (2006-2013)		Diesel additive pump	PADDDG			Actuation Test		Y		
C4 PICASSO (2006-2013)		Diesel additive pump	PADDDG			Special Function	Configuration	Y		
C4 PICASSO (2006-2013)		Diesel additive pump	PADDDG			Special Function	Pack Repair	Y		
C4 PICASSO (2006-2013)		Diesel additive pump	POMPE_MUX_TI			Read ECU Information		Y		
C4 PICASSO (2006-2013)		Diesel additive pump	POMPE_MUX_TI			Read Fault Code		Y		
C4 PICASSO (2006-2013)		Diesel additive pump	POMPE_MUX_TI			Erase Fault Code		Y		
C4 PICASSO (2006-2013)		Diesel additive pump	POMPE_MUX_TI			Live Data		Y		
C4 PICASSO (2006-2013)		Diesel additive pump	POMPE_MUX_TI			Actuation Test		Y		
C4 PICASSO (2006-2013)		Diesel additive pump	POMPE_MUX_TI			Special Function	Configuration	Y		
C4 PICASSO (2006-2013)		Under-inflation detection				Read ECU Information		Y		
C4 PICASSO (2006-2013)		Under-inflation detection				Read Fault Code		Y		
C4 PICASSO (2006-2013)		Under-inflation detection				Erase Fault Code		Y		
C4 PICASSO (2006-2013)		Under-inflation detection				Live Data		Y		
C4 PICASSO (2006-2013)		Under-inflation detection				Special Function	Pack Repair	Y		
C4 PICASSO (2006-2013)		Dynamic headlamp height adjuster				Read ECU Information		Y		
C4 PICASSO (2006-2013)		Dynamic headlamp height adjuster				Read Fault Code		Y		
C4 PICASSO (2006-2013)		Dynamic headlamp height adjuster				Erase Fault Code		Y		
C4 PICASSO (2006-2013)		Dynamic headlamp height adjuster				Live Data		Y		
C4 PICASSO (2006-2013)		Dynamic headlamp height adjuster				Actuation Test		Y		
C4 PICASSO (2006-2013)		Dynamic headlamp height adjuster				Special Function	Configuration	Y		
C4 PICASSO (2006-2013)		Dynamic headlamp height adjuster				Special Function	Pack Repair	Y		
C4 PICASSO (2006-2013)		Battery charge status unit	BECD			Read ECU Information		Y		
C4 PICASSO (2006-2013)		Battery charge status unit	BECD			Read Fault Code		Y		
C4 PICASSO (2006-2013)		Battery charge status unit	BECD			Erase Fault Code		Y		
C4 PICASSO (2006-2013)		Battery charge status unit	BECD			Live Data		Y		
C4 PICASSO (2006-2013)		Battery charge status unit	BECD_GEN2			Read ECU Information		Y		
C4 PICASSO (2006-2013)		Battery charge status unit	BECD_GEN2			Read Fault Code		Y		
C4 PICASSO (2006-2013)		Battery charge status unit	BECD_GEN2			Erase Fault Code		Y		
C4 PICASSO (2006-2013)		Battery charge status unit	BECD_GEN2			Live Data		Y		
C4 PICASSO (2006-2013)		Battery charge status unit	BECD_GEN2			Special Function	Configuration	Y		
C4 PICASSO (2006-2013)		Battery charge status unit	BECD_GEN2			Special Function	Pack Repair	Y		
C4 PICASSO (2006-2013)		Electric secondary brake				Read ECU Information		Y		
C4 PICASSO (2006-2013)		Electric secondary brake				Read Fault Code		Y		
C4 PICASSO (2006-2013)		Electric secondary brake				Erase Fault Code		Y		
C4 PICASSO (2006-2013)		Electric secondary brake				Live Data		Y		
C4 PICASSO (2006-2013)		Electric secondary brake				Actuation Test		Y		
C4 PICASSO (2006-2013)		Electric secondary brake				Special Function	Pack Repair	Y		
C4 PICASSO (2006-2013)		Lane departure warning system				Read ECU Information		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
C4 PICASSO (2006-2013)		Lane departure warning system				Read Fault Code		Y		
C4 PICASSO (2006-2013)		Lane departure warning system				Erase Fault Code		Y		
C4 PICASSO (2006-2013)		Lane departure warning system				Live Data		Y		
C4 PICASSO (2006-2013)		Lane departure warning system				Actuation Test		Y		
C4 PICASSO (2006-2013)		Lane departure warning system				Special Function	Configuration	Y		
C4 PICASSO (2006-2013)		Engine relay unit				Read ECU Information		Y		
C4 PICASSO (2006-2013)		Engine relay unit				Read Fault Code		Y		
C4 PICASSO (2006-2013)		Engine relay unit				Erase Fault Code		Y		
C4 PICASSO (2006-2013)		Engine relay unit				Live Data		Y		
C4 PICASSO (2006-2013)		Engine relay unit				Actuation Test		Y		
C4 PICASSO (2006-2013)		Trailer relay unit				Read ECU Information		Y		
C4 PICASSO (2006-2013)		Trailer relay unit				Read Fault Code		Y		
C4 PICASSO (2006-2013)		Trailer relay unit				Erase Fault Code		Y		
C4 PICASSO (2006-2013)		Trailer relay unit				Live Data		Y		
C4 PICASSO (2006-2013)		Trailer relay unit				Actuation Test		Y		
C4 PICASSO (2006-2013)		Windscreen wiper				Read ECU Information		Y		
C4 PICASSO (2006-2013)		Windscreen wiper				Read Fault Code		Y		
C4 PICASSO (2006-2013)		Windscreen wiper				Erase Fault Code		Y		
C4 PICASSO (2006-2013)		Windscreen wiper				Actuation Test		Y		
C4 PICASSO (2006-2013)		Windscreen wiper				Special Function	Configuration	Y		
C4 PICASSO (2006-2013)		Parking assistance				Read ECU Information		Y		
C4 PICASSO (2006-2013)		Parking assistance				Read Fault Code		Y		
C4 PICASSO (2006-2013)		Parking assistance				Erase Fault Code		Y		
C4 PICASSO (2006-2013)		Parking assistance				Live Data		Y		
C4 PICASSO (2006-2013)		Parking assistance				Special Function	Pack Repair	Y		
C4 PICASSO (2006-2013)		Parking assistance				Special Function	Configuration	Y		
C4 PICASSO (2006-2013)		Controls under the steering wheel				Read ECU Information		Y		
C4 PICASSO (2006-2013)		Controls under the steering wheel				Read Fault Code		Y		
C4 PICASSO (2006-2013)		Controls under the steering wheel				Erase Fault Code		Y		
C4 PICASSO (2006-2013)		Controls under the steering wheel				Live Data		Y		
C4 PICASSO (2006-2013)		Controls under the steering wheel				Actuation Test		Y		
C4 PICASSO (2006-2013)		Air conditioning				Read ECU Information		Y		
C4 PICASSO (2006-2013)		Air conditioning				Read Fault Code		Y		
C4 PICASSO (2006-2013)		Air conditioning				Erase Fault Code		Y		
C4 PICASSO (2006-2013)		Air conditioning				Live Data		Y		
C4 PICASSO (2006-2013)		Air conditioning				Actuation Test		Y		
C4 PICASSO (2006-2013)		Air conditioning				Special Function	Pack Repair	Y		
C4 PICASSO (2006-2013)		Separate instrument panel				Read ECU Information		Y		
C4 PICASSO (2006-2013)		Separate instrument panel				Read Fault Code		Y		
C4 PICASSO (2006-2013)		Separate instrument panel				Erase Fault Code		Y		
C4 PICASSO (2006-2013)		Separate instrument panel				Live Data		Y		
C4 PICASSO (2006-2013)		Separate instrument panel				Actuation Test		Y		
C4 PICASSO (2006-2013)		Separate instrument panel				Special Function	Pack Repair	Y		
C4 PICASSO (2006-2013)		Radio amplifier				Read ECU Information		Y		
C4 PICASSO (2006-2013)		Radio amplifier				Read Fault Code		Y		
C4 PICASSO (2006-2013)		Radio amplifier				Erase Fault Code		Y		
C4 PICASSO (2006-2013)		Radio amplifier				Actuation Test		Y		
C4 PICASSO (2006-2013)		Radio amplifier				Special Function	Configuration	Y		
C4 PICASSO (2006-2013)		Radio amplifier				Special Function	Pack Repair	Y		
C4 PICASSO (2006-2013)		CD changer / external CD player				Read ECU Information		Y		
C4 PICASSO (2006-2013)		CD changer / external CD player				Read Fault Code		Y		
C4 PICASSO (2006-2013)		CD changer / external CD player				Erase Fault Code		Y		
C4 PICASSO (2006-2013)		CD changer / external CD player				Actuation Test		Y		
C4 PICASSO (2006-2013)		CD changer / external CD player				Special Function	Configuration	Y		
C4 PICASSO (2006-2013)		Telematic unit (BTX) or audio-navigation	RADIONAV_BNSG			Read ECU Information		Y		
C4 PICASSO (2006-2013)		Telematic unit (BTX) or audio-navigation	RADIONAV_BNSG			Read Fault Code		Y		
C4 PICASSO (2006-2013)		Telematic unit (BTX) or audio-navigation	RADIONAV_BNSG			Erase Fault Code		Y		
C4 PICASSO (2006-2013)		Telematic unit (BTX) or audio-navigation	RADIONAV_BNSG			Live Data		Y		
C4 PICASSO (2006-2013)		Telematic unit (BTX) or audio-navigation	RADIONAV_BNSG			Actuation Test		Y		
C4 PICASSO (2006-2013)		Telematic unit (BTX) or audio-navigation	RADIONAV_BNSG			Special Function	Configuration	Y		
C4 PICASSO (2006-2013)		Telematic unit (BTX) or audio-navigation	BOUTHER_TELEMATIQUE			Read ECU Information		Y		
C4 PICASSO (2006-2013)		Telematic unit (BTX) or audio-navigation	BOUTHER_TELEMATIQUE			Read Fault Code		Y		
C4 PICASSO (2006-2013)		Telematic unit (BTX) or audio-navigation	BOUTHER_TELEMATIQUE			Erase Fault Code		Y		
C4 PICASSO (2006-2013)		Telematic unit (BTX) or audio-navigation	BOUTHER_TELEMATIQUE			Actuation Test		Y		
C4 PICASSO (2006-2013)		Telematic unit (BTX) or audio-navigation	BOUTHER_TELEMATIQUE			Special Function	Configuration	Y		
C4 PICASSO (2006-2013)		Telematic unit (BTX) or audio-navigation	BOUTHER_TELEMATIQUE			Special Function	Pack Repair	Y		
C4 PICASSO (2006-2013)		Telematic unit (BTX) or audio-navigation	INRG2010			Read ECU Information		Y		
C4 PICASSO (2006-2013)		Telematic unit (BTX) or audio-navigation	INRG2010			Read Fault Code		Y		
C4 PICASSO (2006-2013)		Telematic unit (BTX) or audio-navigation	INRG2010			Erase Fault Code		Y		
C4 PICASSO (2006-2013)		Telematic unit (BTX) or audio-navigation	INRG2010			Live Data		Y		
C4 PICASSO (2006-2013)		Telematic unit (BTX) or audio-navigation	INRG2010			Actuation Test		Y		
C4 PICASSO (2006-2013)		Telematic unit (BTX) or audio-navigation	INRG2010			Special Function	Configuration	Y		
C4 PICASSO (2006-2013)		Telematic unit (BTX) or audio-navigation	INRG2010			Special Function	Pack Repair	Y		
C4 PICASSO (2006-2013)		Radio	Yes	RD4		Read ECU Information		Y		
C4 PICASSO (2006-2013)		Radio	Yes	RD4		Read Fault Code		Y		
C4 PICASSO (2006-2013)		Radio	Yes	RD4		Erase Fault Code		Y		
C4 PICASSO (2006-2013)		Radio	Yes	RD4		Live Data		Y		
C4 PICASSO (2006-2013)		Radio	Yes	RD4		Actuation Test		Y		
C4 PICASSO (2006-2013)		Radio	Yes	RD4		Special Function	Configuration	Y		
C4 PICASSO (2006-2013)		Radio	Yes	RD4		Special Function	Replacement parts	Y		
C4 PICASSO (2006-2013)		Radio	Yes	RD4S		Read ECU Information		Y		
C4 PICASSO (2006-2013)		Radio	Yes	RD4S		Read Fault Code		Y		
C4 PICASSO (2006-2013)		Radio	Yes	RD4S		Erase Fault Code		Y		
C4 PICASSO (2006-2013)		Radio	Yes	RD4S		Live Data		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for Citroen, NO stands for other wires)	Subsystem (YES stands for Citroen, NO stands for other wires)	Subsystem or system type	Function type	Special function reasons	Add (Y/N)	Verification (Y/N)	Remarks
C4 PICASSO (2006-2013)		Radio	Yes	RD45		Actuation Test		Y		
C4 PICASSO (2006-2013)		Radio	Yes	RD45		Special Function	Configuration	Y		
C4 PICASSO (2006-2013)		Radio	Yes	RD45		Special Function	Pack Repair	Y		
C4 PICASSO (2006-2013)		Hands-free Kit / Portable Unit	KML			Read ECU Information		Y		
C4 PICASSO (2006-2013)		Hands-free Kit / Portable Unit	KML			Read Fault Code		Y		
C4 PICASSO (2006-2013)		Hands-free Kit / Portable Unit	KML			Erase Fault Code		Y		
C4 PICASSO (2006-2013)		Hands-free Kit / Portable Unit	KML			Live Data		Y		
C4 PICASSO (2006-2013)		Hands-free Kit / Portable Unit	KML			Actuation Test		Y		
C4 PICASSO (2006-2013)		Hands-free Kit / Portable Unit	KML			Special Function	Configuration	Y		
C4 PICASSO (2006-2013)		Hands-free Kit / Portable Unit	BOITIER_NOMADE			Read ECU Information		Y		
C4 PICASSO (2006-2013)		Hands-free Kit / Portable Unit	BOITIER_NOMADE			Read Fault Code		Y		
C4 PICASSO (2006-2013)		Hands-free Kit / Portable Unit	BOITIER_NOMADE			Erase Fault Code		Y		
C4 PICASSO (2006-2013)		Hands-free Kit / Portable Unit	BOITIER_NOMADE			Live Data		Y		
C4 PICASSO (2006-2013)		Hands-free Kit / Portable Unit	BOITIER_NOMADE			Actuation Test		Y		
C4 PICASSO (2006-2013)		Hands-free Kit / Portable Unit	BOITIER_NOMADE			Special Function	Configuration	Y		
C4 PICASSO (2006-2013)		Anti-theft alarm	Anti-theft alarm			Read ECU Information		Y		
C4 PICASSO (2006-2013)		Anti-theft alarm	Anti-theft alarm			Read Fault Code		Y		
C4 PICASSO (2006-2013)		Anti-theft alarm	Anti-theft alarm			Erase Fault Code		Y		
C4 PICASSO (2006-2013)		Anti-theft alarm	Anti-theft alarm			Live Data		Y		
C4 PICASSO (2006-2013)		Anti-theft alarm	Anti-theft alarm			Actuation Test		Y		
C4 PICASSO (2006-2013)		Anti-theft alarm	Anti-theft alarm			Special Function	Configuration	Y		
C4 PICASSO (2006-2013)		Anti-theft alarm	Anti-theft alarm			Special Function	Pack Repair	Y		
C4 PICASSO (2006-2013)		Seat driver position memory module				Read ECU Information		Y		
C4 PICASSO (2006-2013)		Seat driver position memory module				Read Fault Code		Y		
C4 PICASSO (2006-2013)		Seat driver position memory module				Erase Fault Code		Y		
C4 PICASSO (2006-2013)		Seat driver position memory module				Live Data		Y		
C4 PICASSO (2006-2013)		Seat driver position memory module				Actuation Test		Y		
C4 PICASSO (2006-2013)		Seat driver position memory module				Special Function	Configuration	Y		
C4 PICASSO (2006-2013)		Seat driver position memory module				Special Function	Pack Repair	Y		
C4 PICASSO (2006-2013)		Passenger's door module				Read ECU Information		Y		
C4 PICASSO (2006-2013)		Passenger's door module				Read Fault Code		Y		
C4 PICASSO (2006-2013)		Passenger's door module				Erase Fault Code		Y		
C4 PICASSO (2006-2013)		Passenger's door module				Live Data		Y		
C4 PICASSO (2006-2013)		Passenger's door module				Actuation Test		Y		
C4 PICASSO (2006-2013)		Passenger's door module				Special Function	Replacement parts	Y		
C4 PICASSO (2006-2013)		Driver's door module				Read ECU Information		Y		
C4 PICASSO (2006-2013)		Driver's door module				Read Fault Code		Y		
C4 PICASSO (2006-2013)		Driver's door module				Erase Fault Code		Y		
C4 PICASSO (2006-2013)		Driver's door module				Live Data		Y		
C4 PICASSO (2006-2013)		Driver's door module				Actuation Test		Y		
C4 PICASSO (2006-2013)		Driver's door module				Special Function	Replacement parts	Y		
C4 PICASSO (2006-2013)		Ambient interior lighting unit				Read ECU Information		Y		
C4 PICASSO (2006-2013)		Ambient interior lighting unit				Live Data		Y		
C4 PICASSO (2006-2013)		Ambient interior lighting unit				Actuation Test		Y		
C4 PICASSO (2006-2013)		Rain and light sensor				Read ECU Information		Y		
C4 PICASSO (2006-2013)		Rain and light sensor				Read Fault Code		Y		
C4 PICASSO (2006-2013)		Rain and light sensor				Erase Fault Code		Y		
C4 PICASSO (2006-2013)		High frequency receiver				Read ECU Information		Y		
C4 PICASSO (2006-2013)		High frequency receiver				Read Fault Code		Y		
C4 PICASSO (2006-2013)		High frequency receiver				Erase Fault Code		Y		
C4 PICASSO (2006-2013)		High frequency receiver				Live Data		Y		
C4 PICASSO (2006-2013)		Service module / Independent telematic unit	BIA			Read ECU Information		Y		
C4 PICASSO (2006-2013)		Service module / Independent telematic unit	BIA			Read Fault Code		Y		
C4 PICASSO (2006-2013)		Service module / Independent telematic unit	BIA			Erase Fault Code		Y		
C4 PICASSO (2006-2013)		Service module / Independent telematic unit	BIA			Live Data		Y		
C4 PICASSO (2006-2013)		Service module / Independent telematic unit	BIA			Actuation Test		Y		
C4 PICASSO (2006-2013)		Service module / Independent telematic unit	BIA			Special Function	Configuration	Y		
C4 PICASSO (2006-2013)		Service module / Independent telematic unit	BLVY			Read ECU Information		Y		
C4 PICASSO (2006-2013)		Service module / Independent telematic unit	BLVY			Read Fault Code		Y		
C4 PICASSO (2006-2013)		Service module / Independent telematic unit	BLVY			Erase Fault Code		Y		
C4 PICASSO (2006-2013)		Service module / Independent telematic unit	BLVY			Live Data		Y		
C4 PICASSO (2006-2013)		Service module / Independent telematic unit	BLVY			Actuation Test		Y		
C4 PICASSO (2006-2013)		Service module / Independent telematic unit	BLVY			Special Function	Configuration	Y		
C4 PICASSO (2006-2013)		Voltage retaining device				Read ECU Information		Y		
C4 PICASSO (2006-2013)		Calibration of the steering wheel angle sensor : (C2, C3, C3 plural), New Look C3 with ESP M0805P & L				Special Function	Steering wheel angle sensor calibration	Y		
C4 PICASSO(078) (After 2013)		Built-in Systems Interface				Read ECU Information		Y		
C4 PICASSO(078) (After 2013)		Built-in Systems Interface				Read Fault Code		Y		
C4 PICASSO(078) (After 2013)		Built-in Systems Interface				Erase Fault Code		Y		
C4 PICASSO(078) (After 2013)		Built-in Systems Interface				Live Data		Y		
C4 PICASSO(078) (After 2013)		Built-in Systems Interface				Actuation Test		Y		
C4 PICASSO(078) (After 2013)		Built-in Systems Interface				Special Function	Maintenance-BSI operating mode	Y		
C4 PICASSO(078) (After 2013)		Built-in Systems Interface				Special Function	Learning	Y		
C4 PICASSO(078) (After 2013)		Engine management ECU	DCM6.2	DCM6.2 DR10FD TED4-150 CV	ARX DCM6.2	Read ECU Information		Y		
C4 PICASSO(078) (After 2013)		Engine management ECU	DCM6.2	DCM6.2 DR10FD TED4-150 CV	ARX DCM6.2	Read Fault Code		Y		
C4 PICASSO(078) (After 2013)		Engine management ECU	DCM6.2	DCM6.2 DR10FD TED4-150 CV	ARX DCM6.2	Erase Fault Code		Y		
C4 PICASSO(078) (After 2013)		Engine management ECU	DCM6.2	DCM6.2 DR10FD TED4-150 CV	ARX DCM6.2	Live Data		Y		
C4 PICASSO(078) (After 2013)		Engine management ECU	DCM6.2	DCM6.2 DR10FD TED4-150 CV	ARX DCM6.2	Actuation Test		Y		
C4 PICASSO(078) (After 2013)		Engine management ECU	DCM6.2	DCM6.2 DR10FD TED4-150 CV	ARX DCM6.2	Special Function	Configuration	Y		
C4 PICASSO(078) (After 2013)		Engine management ECU	DCM6.2	DCM6.2 DR10FD TED4-150 CV	ARX DCM6.2	Special Function	Pack Repair	Y		
C4 PICASSO(078) (After 2013)		Engine management ECU	EDC17C10_B82			Read ECU Information		Y		
C4 PICASSO(078) (After 2013)		Engine management ECU	EDC17C10_B82			Read Fault Code		Y		
C4 PICASSO(078) (After 2013)		Engine management ECU	EDC17C10_B82			Erase Fault Code		Y		
C4 PICASSO(078) (After 2013)		Engine management ECU	EDC17C10_B82			Live Data		Y		
C4 PICASSO(078) (After 2013)		Engine management ECU	EDC17C10_B82			Actuation Test		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function reasons	Add (Y/N)	Verification (Y/N)	Remarks
C4 PICASSO(028) (After 2013)		Engine management ECU	EDC17C10_B02			Special Function	Configuration	Y		
C4 PICASSO(028) (After 2013)		Engine management ECU	EDC17C10_B02			Special Function	Pack Repair	Y		
C4 PICASSO(028) (After 2013)		Engine management ECU	HD1_S10807_B02			Read ECU Information		Y		
C4 PICASSO(028) (After 2013)		Engine management ECU	HD1_S10807_B02			Read Fault Code		Y		
C4 PICASSO(028) (After 2013)		Engine management ECU	HD1_S10807_B02			Erase Fault Code		Y		
C4 PICASSO(028) (After 2013)		Engine management ECU	HD1_S10807_B02			Live Data		Y		
C4 PICASSO(028) (After 2013)		Engine management ECU	HD1_S10807_B02			Actuation Test		Y		
C4 PICASSO(028) (After 2013)		Engine management ECU	HD1_S10807_B02			Special Function	Configuration	Y		
C4 PICASSO(028) (After 2013)		Engine management ECU	HD1_S10807_B02			Special Function	Pack Repair	Y		
C4 PICASSO(028) (After 2013)		Engine management ECU	MED17_4_2	14 MED 17.4.2 EURO 5		Read ECU Information		Y		
C4 PICASSO(028) (After 2013)		Engine management ECU	MED17_4_2	14 MED 17.4.2 EURO 5		Read Fault Code		Y		
C4 PICASSO(028) (After 2013)		Engine management ECU	MED17_4_2	14 MED 17.4.2 EURO 5		Erase Fault Code		Y		
C4 PICASSO(028) (After 2013)		Engine management ECU	MED17_4_2	14 MED 17.4.2 EURO 5		Live Data		Y		
C4 PICASSO(028) (After 2013)		Engine management ECU	MED17_4_2	14 MED 17.4.2 EURO 5		Actuation Test		Y		
C4 PICASSO(028) (After 2013)		Engine management ECU	MED17_4_2	14 MED 17.4.2 EURO 5		Special Function	Configuration	Y		
C4 PICASSO(028) (After 2013)		Engine management ECU	MED17_4_2	14 MED 17.4.2 EURO 5		Special Function	Pack Repair	Y		
C4 PICASSO(028) (After 2013)		Engine management ECU	MEV17_4_2	MEV 17.4.2 EP9C	SFS MEV 17.4.2 EURO 5	Read ECU Information		Y		
C4 PICASSO(028) (After 2013)		Engine management ECU	MEV17_4_2	MEV 17.4.2 EP9C	SFS MEV 17.4.2 EURO 5	Read Fault Code		Y		
C4 PICASSO(028) (After 2013)		Engine management ECU	MEV17_4_2	MEV 17.4.2 EP9C	SFS MEV 17.4.2 EURO 5	Erase Fault Code		Y		
C4 PICASSO(028) (After 2013)		Engine management ECU	MEV17_4_2	MEV 17.4.2 EP9C	SFS MEV 17.4.2 EURO 5	Live Data		Y		
C4 PICASSO(028) (After 2013)		Engine management ECU	MEV17_4_2	MEV 17.4.2 EP9C	SFS MEV 17.4.2 EURO 5	Actuation Test		Y		
C4 PICASSO(028) (After 2013)		Engine management ECU	MEV17_4_2	MEV 17.4.2 EP9C	SFS MEV 17.4.2 EURO 5	Special Function	Configuration	Y		
C4 PICASSO(028) (After 2013)		Engine management ECU	MEV17_4_2	MEV 17.4.2 EP9C	SFS MEV 17.4.2 EURO 5	Special Function	Pack Repair	Y		
C4 PICASSO(028) (After 2013)		Engine management ECU	MED17_4_4			Read ECU Information		Y		
C4 PICASSO(028) (After 2013)		Engine management ECU	MED17_4_4			Read Fault Code		Y		
C4 PICASSO(028) (After 2013)		Engine management ECU	MED17_4_4			Erase Fault Code		Y		
C4 PICASSO(028) (After 2013)		Engine management ECU	MED17_4_4			Live Data		Y		
C4 PICASSO(028) (After 2013)		Engine management ECU	MED17_4_4			Actuation Test		Y		
C4 PICASSO(028) (After 2013)		Engine management ECU	MED17_4_4			Special Function	Pack Repair	Y		
C4 PICASSO(028) (After 2013)		Engine management ECU	EDC17C00			Read ECU Information		Y		
C4 PICASSO(028) (After 2013)		Engine management ECU	EDC17C00			Read Fault Code		Y		
C4 PICASSO(028) (After 2013)		Engine management ECU	EDC17C00			Erase Fault Code		Y		
C4 PICASSO(028) (After 2013)		Engine management ECU	EDC17C00			Live Data		Y		
C4 PICASSO(028) (After 2013)		Engine management ECU	EDC17C00			Actuation Test		Y		
C4 PICASSO(028) (After 2013)		Engine management ECU	EDC17C00			Special Function	Pack Repair	Y		
C4 PICASSO(028) (After 2013)		Engine management ECU	VD46			Read ECU Information		Y		
C4 PICASSO(028) (After 2013)		Engine management ECU	VD46			Read Fault Code		Y		
C4 PICASSO(028) (After 2013)		Engine management ECU	VD46			Erase Fault Code		Y		
C4 PICASSO(028) (After 2013)		Engine management ECU	VD46			Live Data		Y		
C4 PICASSO(028) (After 2013)		Engine management ECU	VD46			Actuation Test		Y		
C4 PICASSO(028) (After 2013)		Engine management ECU	VD46			Special Function	Pack Repair	Y		
C4 PICASSO(028) (After 2013)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)				Read ECU Information		Y		
C4 PICASSO(028) (After 2013)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)				Read Fault Code		Y		
C4 PICASSO(028) (After 2013)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)				Erase Fault Code		Y		
C4 PICASSO(028) (After 2013)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)				Live Data		Y		
C4 PICASSO(028) (After 2013)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)				Actuation Test		Y		
C4 PICASSO(028) (After 2013)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)				Special Function	Pack Repair	Y		
C4 PICASSO(028) (After 2013)		Automatic gearbox or controlled manual gearbox	CFC300P			Read ECU Information		Y		
C4 PICASSO(028) (After 2013)		Automatic gearbox or controlled manual gearbox	CFC300P			Read Fault Code		Y		
C4 PICASSO(028) (After 2013)		Automatic gearbox or controlled manual gearbox	CFC300P			Erase Fault Code		Y		
C4 PICASSO(028) (After 2013)		Automatic gearbox or controlled manual gearbox	CFC300P			Live Data		Y		
C4 PICASSO(028) (After 2013)		Automatic gearbox or controlled manual gearbox	CFC300P			Actuation Test		Y		
C4 PICASSO(028) (After 2013)		Automatic gearbox or controlled manual gearbox	CFC300P			Special Function	Replacement parts	Y		
C4 PICASSO(028) (After 2013)		Automatic gearbox or controlled manual gearbox	BVA_0M6_A16_US			Read ECU Information		Y		
C4 PICASSO(028) (After 2013)		Automatic gearbox or controlled manual gearbox	BVA_0M6_A16_US			Read Fault Code		Y		
C4 PICASSO(028) (After 2013)		Automatic gearbox or controlled manual gearbox	BVA_0M6_A16_US			Erase Fault Code		Y		
C4 PICASSO(028) (After 2013)		Automatic gearbox or controlled manual gearbox	BVA_0M6_A16_US			Live Data		Y		
C4 PICASSO(028) (After 2013)		Automatic gearbox or controlled manual gearbox	BVA_0M6_A16_US			Actuation Test		Y		
C4 PICASSO(028) (After 2013)		Automatic gearbox or controlled manual gearbox	BVA_0M6_A16_US			Special Function	Pack Repair	Y		
C4 PICASSO(028) (After 2013)		Air bags and pre-tensioners control unit				Read ECU Information		Y		
C4 PICASSO(028) (After 2013)		Air bags and pre-tensioners control unit				Read Fault Code		Y		
C4 PICASSO(028) (After 2013)		Air bags and pre-tensioners control unit				Erase Fault Code		Y		
C4 PICASSO(028) (After 2013)		Air bags and pre-tensioners control unit				Live Data		Y		
C4 PICASSO(028) (After 2013)		Air bags and pre-tensioners control unit				Special Function	Pack Repair	Y		
C4 PICASSO(028) (After 2013)		Engine relay unit				Read ECU Information		Y		
C4 PICASSO(028) (After 2013)		Engine relay unit				Read Fault Code		Y		
C4 PICASSO(028) (After 2013)		Engine relay unit				Erase Fault Code		Y		
C4 PICASSO(028) (After 2013)		Engine relay unit				Live Data		Y		
C4 PICASSO(028) (After 2013)		Engine relay unit				Actuation Test		Y		
C4 PICASSO(028) (After 2013)		Engine relay unit				Special Function	Configuration	Y		
C4 PICASSO(028) (After 2013)		Trailer relay unit				Read ECU Information		Y		
C4 PICASSO(028) (After 2013)		Trailer relay unit				Read Fault Code		Y		
C4 PICASSO(028) (After 2013)		Trailer relay unit				Erase Fault Code		Y		
C4 PICASSO(028) (After 2013)		Trailer relay unit				Live Data		Y		
C4 PICASSO(028) (After 2013)		Trailer relay unit				Actuation Test		Y		
C4 PICASSO(028) (After 2013)		Controls under the steering wheel				Read ECU Information		Y		
C4 PICASSO(028) (After 2013)		Controls under the steering wheel				Read Fault Code		Y		
C4 PICASSO(028) (After 2013)		Controls under the steering wheel				Erase Fault Code		Y		
C4 PICASSO(028) (After 2013)		Controls under the steering wheel				Live Data		Y		
C4 PICASSO(028) (After 2013)		Controls under the steering wheel				Actuation Test		Y		
C4 PICASSO(028) (After 2013)		Controls under the steering wheel				Special Function	Pack Repair	Y		
C4 PICASSO(028) (After 2013)		External CD player				Read ECU Information		Y		
C4 PICASSO(028) (After 2013)		External CD player				Read Fault Code		Y		
C4 PICASSO(028) (After 2013)		External CD player				Erase Fault Code		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for Citroen, NO stands for other wires)	Subsystem (YES stands for Citroen, NO stands for other wires)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
C4 PICASSO(029) (After 2013)		External CD player				Live Data		Y		
C4 PICASSO(028) (After 2013)		External CD player				Actuation Test		Y		
C4 PICASSO(029) (After 2013)		External CD player				Special Function	Configuration	Y		
C4 PICASSO(028) (After 2013)		External CD player				Special Function	Pack Repair	Y		
C4 PICASSO(028) (After 2013)		Radio amplifier				Read ECU Information		Y		
C4 PICASSO(028) (After 2013)		Radio amplifier				Read Fault Code		Y		
C4 PICASSO(028) (After 2013)		Radio amplifier				Erase Fault Code		Y		
C4 PICASSO(028) (After 2013)		Radio amplifier				Actuation Test		Y		
C4 PICASSO(028) (After 2013)		Radio amplifier				Special Function	Configuration	Y		
C4 PICASSO(028) (After 2013)		Radio amplifier				Special Function	Pack Repair	Y		
C4 PICASSO(028) (After 2013)		Control on the steering wheel / integral controls steering wheel				Read ECU Information		Y		
C4 PICASSO(028) (After 2013)		Control on the steering wheel / integral controls steering wheel				Read Fault Code		Y		
C4 PICASSO(028) (After 2013)		Control on the steering wheel / integral controls steering wheel				Erase Fault Code		Y		
C4 PICASSO(028) (After 2013)		Control on the steering wheel / integral controls steering wheel				Live Data		Y		
C4 PICASSO(028) (After 2013)		Control on the steering wheel / integral controls steering wheel				Actuation Test		Y		
C4 PICASSO(028) (After 2013)		Multifunction video camera(CM)	CVM			Read ECU Information		Y		
C4 PICASSO(028) (After 2013)		Multifunction video camera(CM)	CVM			Read Fault Code		Y		
C4 PICASSO(028) (After 2013)		Multifunction video camera(CM)	CVM			Erase Fault Code		Y		
C4 PICASSO(028) (After 2013)		Multifunction video camera(CM)	CVM			Live Data		Y		
C4 PICASSO(028) (After 2013)		Multifunction video camera(CM)	CVM			Actuation Test		Y		
C4 PICASSO(028) (After 2013)		Multifunction video camera(CM)	CVM			Special Function	Configuration	Y		
C4 PICASSO(028) (After 2013)		Multifunction video camera(CM)	CVM			Special Function	Pack Repair	Y		
C4 PICASSO(028) (After 2013)		Multifunction video camera(CM)	CVM_2			Read ECU Information		Y		
C4 PICASSO(028) (After 2013)		Multifunction video camera(CM)	CVM_2			Read Fault Code		Y		
C4 PICASSO(028) (After 2013)		Multifunction video camera(CM)	CVM_2			Erase Fault Code		Y		
C4 PICASSO(028) (After 2013)		Multifunction video camera(CM)	CVM_2			Live Data		Y		
C4 PICASSO(028) (After 2013)		Multifunction video camera(CM)	CVM_2			Actuation Test		Y		
C4 PICASSO(028) (After 2013)		Multifunction video camera(CM)	CVM_2			Special Function	Configuration	Y		
C4 PICASSO(028) (After 2013)		Multifunction video camera(CM)	CVM_2			Special Function	Pack Repair	Y		
C4 PICASSO(028) (After 2013)		Anti-theft alarm				Read ECU Information		Y		
C4 PICASSO(028) (After 2013)		Anti-theft alarm				Read Fault Code		Y		
C4 PICASSO(028) (After 2013)		Anti-theft alarm				Erase Fault Code		Y		
C4 PICASSO(028) (After 2013)		Anti-theft alarm				Live Data		Y		
C4 PICASSO(028) (After 2013)		Anti-theft alarm				Actuation Test		Y		
C4 PICASSO(028) (After 2013)		Anti-theft alarm				Special Function	Configuration	Y		
C4 PICASSO(028) (After 2013)		Intrusion alarm siren				Read ECU Information		Y		
C4 PICASSO(028) (After 2013)		Intrusion alarm siren				Read Fault Code		Y		
C4 PICASSO(028) (After 2013)		Intrusion alarm siren				Erase Fault Code		Y		
C4 PICASSO(028) (After 2013)		Intrusion alarm siren				Live Data		Y		
C4 PICASSO(028) (After 2013)		Intrusion alarm siren				Actuation Test		Y		
C4 PICASSO(028) (After 2013)		Intrusion alarm siren				Special Function	Configuration	Y		
C4 PICASSO(028) (After 2013)		Left hand front wiper motor				Read ECU Information		Y		
C4 PICASSO(028) (After 2013)		Left hand front wiper motor				Read Fault Code		Y		
C4 PICASSO(028) (After 2013)		Left hand front wiper motor				Erase Fault Code		Y		
C4 PICASSO(028) (After 2013)		Left hand front wiper motor				Live Data		Y		
C4 PICASSO(028) (After 2013)		Left hand front wiper motor				Actuation Test		Y		
C4 PICASSO(028) (After 2013)		Right hand front wiper motor				Read ECU Information		Y		
C4 PICASSO(028) (After 2013)		Right hand front wiper motor				Read Fault Code		Y		
C4 PICASSO(028) (After 2013)		Right hand front wiper motor				Erase Fault Code		Y		
C4 PICASSO(028) (After 2013)		Right hand front wiper motor				Live Data		Y		
C4 PICASSO(028) (After 2013)		Right hand front wiper motor				Actuation Test		Y		
C4 PICASSO(028) (After 2013)		Right hand front wiper motor				Special Function	Configuration	Y		
C4 PICASSO(028) (After 2013)		Air conditioning				Read ECU Information		Y		
C4 PICASSO(028) (After 2013)		Air conditioning				Read Fault Code		Y		
C4 PICASSO(028) (After 2013)		Air conditioning				Erase Fault Code		Y		
C4 PICASSO(028) (After 2013)		Air conditioning				Live Data		Y		
C4 PICASSO(028) (After 2013)		Air conditioning				Actuation Test		Y		
C4 PICASSO(028) (After 2013)		Air conditioning				Special Function	Configuration	Y		
C4 PICASSO(028) (After 2013)		Air conditioning				Special Function	Pack Repair	Y		
C4 PICASSO(028) (After 2013)		Air conditioning				Special Function	Learning	Y		
C4 PICASSO(028) (After 2013)		Vehicle distance assistance				Read ECU Information		Y		
C4 PICASSO(028) (After 2013)		Vehicle distance assistance				Read Fault Code		Y		
C4 PICASSO(028) (After 2013)		Vehicle distance assistance				Erase Fault Code		Y		
C4 PICASSO(028) (After 2013)		Vehicle distance assistance				Live Data		Y		
C4 PICASSO(028) (After 2013)		Vehicle distance assistance				Actuation Test		Y		
C4 PICASSO(028) (After 2013)		Vehicle distance assistance				Special Function	Configuration	Y		
C4 PICASSO(028) (After 2013)		Seat driver position memory module				Read ECU Information		Y		
C4 PICASSO(028) (After 2013)		Seat driver position memory module				Read Fault Code		Y		
C4 PICASSO(028) (After 2013)		Seat driver position memory module				Erase Fault Code		Y		
C4 PICASSO(028) (After 2013)		Seat driver position memory module				Live Data		Y		
C4 PICASSO(028) (After 2013)		Seat driver position memory module				Actuation Test		Y		
C4 PICASSO(028) (After 2013)		Seat driver position memory module				Special Function	Configuration	Y		
C4 PICASSO(028) (After 2013)		Seat driver position memory module				Special Function	Pack Repair	Y		
C4 PICASSO(028) (After 2013)		Rain and light sensor	PLUTE_LUMINOSITE_IRS			Read ECU Information		Y		
C4 PICASSO(028) (After 2013)		Rain and light sensor	PLUTE_LUMINOSITE_IRS			Read Fault Code		Y		
C4 PICASSO(028) (After 2013)		Rain and light sensor	PLUTE_LUMINOSITE_IRS			Erase Fault Code		Y		
C4 PICASSO(028) (After 2013)		Rain and light sensor	PLUTE_LUMINOSITE_IRS			Live Data		Y		
C4 PICASSO(028) (After 2013)		Rain and light sensor	PLUTE_LUMINOSITE_IRS			Special Function	Pack Repair	Y		
C4 PICASSO(028) (After 2013)		Rain and light sensor	CDPL_IRS_HELIA			Read ECU Information		Y		
C4 PICASSO(028) (After 2013)		Rain and light sensor	CDPL_IRS_HELIA			Read Fault Code		Y		
C4 PICASSO(028) (After 2013)		Rain and light sensor	CDPL_IRS_HELIA			Erase Fault Code		Y		
C4 PICASSO(028) (After 2013)		Rain and light sensor	CDPL_IRS_HELIA			Live Data		Y		
C4 PICASSO(028) (After 2013)		Rain and light sensor	CDPL_IRS_HELIA			Special Function	Pack Repair	Y		
C4 PICASSO(028) (After 2013)		Right-hand reversible seat belt inertia reel				Read ECU Information		Y		
C4 PICASSO(028) (After 2013)		Right-hand reversible seat belt inertia reel				Read Fault Code		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function reasons	Add (Y/N)	Verification (Y/N)	Remarks
C4 PICASSO(028) (After 2013)		Right-hand reversible seat belt inertia reel				Erase Fault Code		Y		
C4 PICASSO(028) (After 2013)		Right-hand reversible seat belt inertia reel				Live Data		Y		
C4 PICASSO(028) (After 2013)		Right-hand reversible seat belt inertia reel				Actuation Test		Y		
C4 PICASSO(028) (After 2013)		Right-hand reversible seat belt inertia reel				Special Function	Configuration	Y		
C4 PICASSO(028) (After 2013)		Right-hand reversible seat belt inertia reel				Special Function	Pack Repair	Y		
C4 PICASSO(028) (After 2013)		Left-hand reversible seat belt inertia reel				Read ECU Information		Y		
C4 PICASSO(028) (After 2013)		Left-hand reversible seat belt inertia reel				Read Fault Code		Y		
C4 PICASSO(028) (After 2013)		Left-hand reversible seat belt inertia reel				Erase Fault Code		Y		
C4 PICASSO(028) (After 2013)		Left-hand reversible seat belt inertia reel				Live Data		Y		
C4 PICASSO(028) (After 2013)		Left-hand reversible seat belt inertia reel				Actuation Test		Y		
C4 PICASSO(028) (After 2013)		Left-hand reversible seat belt inertia reel				Special Function	Configuration	Y		
C4 PICASSO(028) (After 2013)		Left-hand reversible seat belt inertia reel				Special Function	Pack Repair	Y		
C4 PICASSO(028) (After 2013)		Battery charge status unit				Read ECU Information		Y		
C4 PICASSO(028) (After 2013)		Battery charge status unit				Read Fault Code		Y		
C4 PICASSO(028) (After 2013)		Battery charge status unit				Erase Fault Code		Y		
C4 PICASSO(028) (After 2013)		Battery charge status unit				Live Data		Y		
C4 PICASSO(028) (After 2013)		Battery charge status unit				Special Function	Configuration	Y		
C4 PICASSO(028) (After 2013)		Battery charge status unit				Special Function	Pack Repair	Y		
C4 PICASSO(028) (After 2013)		Multiplexed control panel				Read ECU Information		Y		
C4 PICASSO(028) (After 2013)		Multiplexed control panel				Read Fault Code		Y		
C4 PICASSO(028) (After 2013)		Multiplexed control panel				Erase Fault Code		Y		
C4 PICASSO(028) (After 2013)		Multiplexed control panel				Live Data		Y		
C4 PICASSO(028) (After 2013)		Multiplexed control panel				Actuation Test		Y		
C4 PICASSO(028) (After 2013)		Parking assistance	4 Parking assistance sensor			Read ECU Information		Y		
C4 PICASSO(028) (After 2013)		Parking assistance	4 Parking assistance sensor			Read Fault Code		Y		
C4 PICASSO(028) (After 2013)		Parking assistance	4 Parking assistance sensor			Erase Fault Code		Y		
C4 PICASSO(028) (After 2013)		Parking assistance	4 Parking assistance sensor			Live Data		Y		
C4 PICASSO(028) (After 2013)		Parking assistance	4 Parking assistance sensor			Special Function	Configuration	Y		
C4 PICASSO(028) (After 2013)		Parking assistance	4 Parking assistance sensor			Special Function	Pack Repair	Y		
C4 PICASSO(028) (After 2013)		Parking assistance	8 Parking assistance sensor			Read ECU Information		Y		
C4 PICASSO(028) (After 2013)		Parking assistance	8 Parking assistance sensor			Read Fault Code		Y		
C4 PICASSO(028) (After 2013)		Parking assistance	8 Parking assistance sensor			Erase Fault Code		Y		
C4 PICASSO(028) (After 2013)		Parking assistance	8 Parking assistance sensor			Live Data		Y		
C4 PICASSO(028) (After 2013)		Parking assistance	8 Parking assistance sensor			Special Function	Configuration	Y		
C4 PICASSO(028) (After 2013)		Parking assistance	8 Parking assistance sensor			Special Function	Pack Repair	Y		
C4 PICASSO(028) (After 2013)		Telematic unit (OTA) or audio-navigation	SMES PLUS			Read ECU Information		Y		
C4 PICASSO(028) (After 2013)		Telematic unit (OTA) or audio-navigation	SMES PLUS			Read Fault Code		Y		
C4 PICASSO(028) (After 2013)		Telematic unit (OTA) or audio-navigation	SMES PLUS			Erase Fault Code		Y		
C4 PICASSO(028) (After 2013)		Telematic unit (OTA) or audio-navigation	SMES PLUS			Live Data		Y		
C4 PICASSO(028) (After 2013)		Telematic unit (OTA) or audio-navigation	SMES PLUS			Actuation Test		Y		
C4 PICASSO(028) (After 2013)		Telematic unit (OTA) or audio-navigation	SMES PLUS			Special Function	Configuration	Y		
C4 PICASSO(028) (After 2013)		Telematic unit (OTA) or audio-navigation	MIN			Read ECU Information		Y		
C4 PICASSO(028) (After 2013)		Telematic unit (OTA) or audio-navigation	MIN			Read Fault Code		Y		
C4 PICASSO(028) (After 2013)		Telematic unit (OTA) or audio-navigation	MIN			Erase Fault Code		Y		
C4 PICASSO(028) (After 2013)		Telematic unit (OTA) or audio-navigation	MIN			Live Data		Y		
C4 PICASSO(028) (After 2013)		Telematic unit (OTA) or audio-navigation	MIN			Actuation Test		Y		
C4 PICASSO(028) (After 2013)		Telematic unit (OTA) or audio-navigation	NAC			Read ECU Information		Y		
C4 PICASSO(028) (After 2013)		Telematic unit (OTA) or audio-navigation	NAC			Read Fault Code		Y		
C4 PICASSO(028) (After 2013)		Telematic unit (OTA) or audio-navigation	NAC			Erase Fault Code		Y		
C4 PICASSO(028) (After 2013)		Telematic unit (OTA) or audio-navigation	NAC			Live Data		Y		
C4 PICASSO(028) (After 2013)		Telematic unit (OTA) or audio-navigation	NAC			Actuation Test		Y		
C4 PICASSO(028) (After 2013)		Telematic unit (OTA) or audio-navigation	ECU			Read ECU Information		Y		
C4 PICASSO(028) (After 2013)		Telematic unit (OTA) or audio-navigation	ECU			Read Fault Code		Y		
C4 PICASSO(028) (After 2013)		Telematic unit (OTA) or audio-navigation	ECU			Erase Fault Code		Y		
C4 PICASSO(028) (After 2013)		Telematic unit (OTA) or audio-navigation	ECU			Live Data		Y		
C4 PICASSO(028) (After 2013)		Telematic unit (OTA) or audio-navigation	ECU			Actuation Test		Y		
C4 PICASSO(028) (After 2013)		Dynamic headlamp height adjuster				Read ECU Information		Y		
C4 PICASSO(028) (After 2013)		Dynamic headlamp height adjuster				Read Fault Code		Y		
C4 PICASSO(028) (After 2013)		Dynamic headlamp height adjuster				Erase Fault Code		Y		
C4 PICASSO(028) (After 2013)		Dynamic headlamp height adjuster				Live Data		Y		
C4 PICASSO(028) (After 2013)		Dynamic headlamp height adjuster				Actuation Test		Y		
C4 PICASSO(028) (After 2013)		Electronic key reader				Read ECU Information		Y		
C4 PICASSO(028) (After 2013)		Electronic key reader				Read Fault Code		Y		
C4 PICASSO(028) (After 2013)		Electronic key reader				Erase Fault Code		Y		
C4 PICASSO(028) (After 2013)		Electronic key reader				Live Data		Y		
C4 PICASSO(028) (After 2013)		Electric steering lock				Read ECU Information		Y		
C4 PICASSO(028) (After 2013)		Electric steering lock				Read Fault Code		Y		
C4 PICASSO(028) (After 2013)		Electric steering lock				Erase Fault Code		Y		
C4 PICASSO(028) (After 2013)		Electric steering lock				Live Data		Y		
C4 PICASSO(028) (After 2013)		Electric steering lock				Actuation Test		Y		
C4 PICASSO(028) (After 2013)		Signalling fuse box				Read ECU Information		Y		
C4 PICASSO(028) (After 2013)		Signalling fuse box				Read Fault Code		Y		
C4 PICASSO(028) (After 2013)		Signalling fuse box				Erase Fault Code		Y		
C4 PICASSO(028) (After 2013)		Signalling fuse box				Live Data		Y		
C4 PICASSO(028) (After 2013)		Signalling fuse box				Actuation Test		Y		
C4 PICASSO(028) (After 2013)		Driver's door module				Read ECU Information		Y		
C4 PICASSO(028) (After 2013)		Driver's door module				Read Fault Code		Y		
C4 PICASSO(028) (After 2013)		Driver's door module				Erase Fault Code		Y		
C4 PICASSO(028) (After 2013)		Driver's door module				Live Data		Y		
C4 PICASSO(028) (After 2013)		Driver's door module				Actuation Test		Y		
C4 PICASSO(028) (After 2013)		Supply protection and management unit				Read ECU Information		Y		
C4 PICASSO(028) (After 2013)		Supply protection and management unit				Live Data		Y		
C4 PICASSO(028) (After 2013)		Automatic gearbox electric control				Read ECU Information		Y		
C4 PICASSO(028) (After 2013)		Automatic gearbox electric control				Read Fault Code		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function reasons	Add (Y/N)	Verification (Y/N)	Remarks
C4 PICASSO(029) (After 2013)		Automatic gearbox electric control				Erase Fault Code		Y		
C4 PICASSO(028) (After 2013)		Automatic gearbox electric control				Live Data		Y		
C4 PICASSO(029) (After 2013)		Automatic gearbox electric control				Actuation Test		Y		
C4 PICASSO(028) (After 2013)		Automatic gearbox electric control				Special Function	Programming	Y		
C4 PICASSO(028) (After 2013)		Automatic gearbox electric control				Special Function	Replacement parts	Y		
C4 PICASSO(028) (After 2013)		Hands free control unit				Read ECU Information		Y		
C4 PICASSO(028) (After 2013)		Hands free control unit				Read Fault Code		Y		
C4 PICASSO(029) (After 2013)		Hands free control unit				Erase Fault Code		Y		
C4 PICASSO(028) (After 2013)		Hands free control unit				Live Data		Y		
C4 PICASSO(028) (After 2013)		Hands free control unit				Actuation Test		Y		
C4 PICASSO(028) (After 2013)		Hands free control unit				Special Function	Configuration	Y		
C4 PICASSO(028) (After 2013)		Hands free control unit				Special Function	Pack Repair	Y		
C4 PICASSO(029) (After 2013)		Service module / Independent telematic unit	BTA			Read ECU Information		Y		
C4 PICASSO(028) (After 2013)		Service module / Independent telematic unit	BTA			Read Fault Code		Y		
C4 PICASSO(028) (After 2013)		Service module / Independent telematic unit	BTA			Erase Fault Code		Y		
C4 PICASSO(028) (After 2013)		Service module / Independent telematic unit	BTA			Live Data		Y		
C4 PICASSO(028) (After 2013)		Service module / Independent telematic unit	BTA			Actuation Test		Y		
C4 PICASSO(029) (After 2013)		Service module / Independent telematic unit	BTA			Special Function	Configuration	Y		
C4 PICASSO(028) (After 2013)		Service module / Independent telematic unit	BTA,2			Read ECU Information		Y		
C4 PICASSO(028) (After 2013)		Service module / Independent telematic unit	BTA,2			Read Fault Code		Y		
C4 PICASSO(028) (After 2013)		Service module / Independent telematic unit	BTA,2			Erase Fault Code		Y		
C4 PICASSO(028) (After 2013)		Service module / Independent telematic unit	BTA,2			Live Data		Y		
C4 PICASSO(029) (After 2013)		Service module / Independent telematic unit	BTA,2			Actuation Test		Y		
C4 PICASSO(029) (After 2013)		Service module / Independent telematic unit	BTA,2			Special Function	Configuration	Y		
C4 PICASSO(028) (After 2013)		Service module / Independent telematic unit	BTA,2			Special Function	Pack Repair	Y		
C4 PICASSO(028) (After 2013)		Service module / Independent telematic unit	BTA,3R			Read ECU Information		Y		
C4 PICASSO(028) (After 2013)		Service module / Independent telematic unit	BTA,3R			Read Fault Code		Y		
C4 PICASSO(029) (After 2013)		Service module / Independent telematic unit	BTA,3R			Erase Fault Code		Y		
C4 PICASSO(028) (After 2013)		Service module / Independent telematic unit	BTA,3R			Live Data		Y		
C4 PICASSO(028) (After 2013)		Service module / Independent telematic unit	BTA,3R			Actuation Test		Y		
C4 PICASSO(028) (After 2013)		Power steering				Read ECU Information		Y		
C4 PICASSO(028) (After 2013)		Power steering				Read Fault Code		Y		
C4 PICASSO(029) (After 2013)		Power steering				Erase Fault Code		Y		
C4 PICASSO(028) (After 2013)		Power steering				Live Data		Y		
C4 PICASSO(028) (After 2013)		Power steering				Special Function	Configuration	Y		
C4 PICASSO(028) (After 2013)		Voltage retaining device	DMTC			Read ECU Information		Y		
C4 PICASSO(028) (After 2013)		Voltage retaining device	DMTR			Read ECU Information		Y		
C4 PICASSO(029) (After 2013)		Voltage retaining device	DMTR			Read Fault Code		Y		
C4 PICASSO(028) (After 2013)		Voltage retaining device	DMTR			Erase Fault Code		Y		
C4 PICASSO(028) (After 2013)		Voltage retaining device	DMTR,DFC3B			Read ECU Information		Y		
C4 PICASSO(028) (After 2013)		Voltage retaining device	DMTR,DFC3B			Read Fault Code		Y		
C4 PICASSO(028) (After 2013)		Voltage retaining device	DMTR,DFC3B			Erase Fault Code		Y		
C4 PICASSO(029) (After 2013)		Motorized Boot ECU				Read ECU Information		Y		
C4 PICASSO(028) (After 2013)		Motorized Boot ECU				Read Fault Code		Y		
C4 PICASSO(028) (After 2013)		Motorized Boot ECU				Erase Fault Code		Y		
C4 PICASSO(029) (After 2013)		Motorized Boot ECU				Live Data		Y		
C4 PICASSO(028) (After 2013)		Motorized Boot ECU				Actuation Test		Y		
C4 PICASSO(028) (After 2013)		Diesel additive pump				Read ECU Information		Y		
C4 PICASSO(028) (After 2013)		Diesel additive pump				Read Fault Code		Y		
C4 PICASSO(028) (After 2013)		Diesel additive pump				Erase Fault Code		Y		
C4 PICASSO(029) (After 2013)		Diesel additive pump				Live Data		Y		
C4 PICASSO(028) (After 2013)		Diesel additive pump				Actuation Test		Y		
C4 PICASSO(028) (After 2013)		Diesel additive pump				Special Function	Pack Repair	Y		
C4 PICASSO(028) (After 2013)		Panoramic vision assistance ECU				Read ECU Information		Y		
C4 PICASSO(028) (After 2013)		Panoramic vision assistance ECU				Read Fault Code		Y		
C4 PICASSO(029) (After 2013)		Panoramic vision assistance ECU				Erase Fault Code		Y		
C4 PICASSO(028) (After 2013)		Panoramic vision assistance ECU				Live Data		Y		
C4 PICASSO(028) (After 2013)		Panoramic vision assistance ECU				Actuation Test		Y		
C4 PICASSO(028) (After 2013)		Additional heating				Read ECU Information		Y		
C4 PICASSO(028) (After 2013)		Additional heating				Read Fault Code		Y		
C4 PICASSO(029) (After 2013)		Additional heating				Erase Fault Code		Y		
C4 PICASSO(028) (After 2013)		Additional heating				Live Data		Y		
C4 PICASSO(028) (After 2013)		Additional heating				Actuation Test		Y		
C4 PICASSO(028) (After 2013)		Additional heating				Special Function	Pack Repair	Y		
C4 PICASSO(028) (After 2013)		Hands full access ECU, right-hand side or rear				Read ECU Information		Y		
C4 PICASSO(029) (After 2013)		Hands full access ECU, right-hand side or rear				Read Fault Code		Y		
C4 PICASSO(028) (After 2013)		Touch screen				Read ECU Information		Y		
C4 PICASSO(028) (After 2013)		Touch screen				Read Fault Code		Y		
C4 PICASSO(028) (After 2013)		Touch screen				Erase Fault Code		Y		
C4 PICASSO(028) (After 2013)		Touch screen				Live Data		Y		
C4 PICASSO(029) (After 2013)		Touch screen				Actuation Test		Y		
C4 PICASSO(028) (After 2013)		Driver's seat comfort ECU				Read ECU Information		Y		
C4 PICASSO(028) (After 2013)		Driver's seat comfort ECU				Read Fault Code		Y		
C4 PICASSO(028) (After 2013)		Driver's seat comfort ECU				Erase Fault Code		Y		
C4 PICASSO(028) (After 2013)		Driver's seat comfort ECU				Live Data		Y		
C4 PICASSO(029) (After 2013)		Driver's seat comfort ECU				Actuation Test		Y		
C4 Aircross		Built-in Systems Interface				Special Function	Identification	Y		
C4 Aircross		Built-in Systems Interface				Special Function	Fault reading	Y		
C4 Aircross		Built-in Systems Interface				Erase Fault Code		Y		
C4 Aircross		Built-in Systems Interface				Live Data		Y		
C4 Aircross		Engine management ECU	MEVEC			Read ECU Information		Y		
C4 Aircross		Engine management ECU	MEVEC			Read Fault Code		Y		
C4 Aircross		Engine management ECU	MEVEC			Erase Fault Code		Y		
C4 Aircross		Engine management ECU	MEVEC			Actuation Test		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Models	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function reasons	Add (Y/N)	Verification (Y/N)	Remarks
C4 Aircross		Engine management ECU	MIVEC			Special Function	Pack Repair	Y		
C4 Aircross		Engine management ECU	CMR 4492			Read ECU Information		Y		
C4 Aircross		Engine management ECU	CMR 4492			Read Fault Code		Y		
C4 Aircross		Engine management ECU	CMR 4492			Erase Fault Code		Y		
C4 Aircross		Engine management ECU	CMR 4492			Live Data		Y		
C4 Aircross		Engine management ECU	CMR 4492			Actuation Test		Y		
C4 Aircross		Engine management ECU	CMR 4492			Special Function	Configuration	Y		
C4 Aircross		Engine management ECU	CMR 4492			Special Function	Pack Repair	Y		
C4 Aircross		Engine management ECU	HD1_4N13	HD1_4N13		Read ECU Information		Y		
C4 Aircross		Engine management ECU	HD1_4N13	HD1_4N13		Read Fault Code		Y		
C4 Aircross		Engine management ECU	HD1_4N13	HD1_4N13		Erase Fault Code		Y		
C4 Aircross		Engine management ECU	HD1_4N13	HD1_4N13		Live Data		Y		
C4 Aircross		Engine management ECU	HD1_4N13	HD1_4N13		Actuation Test		Y		
C4 Aircross		Engine management ECU	HD1_4N13	HD1_4N13		Special Function	Pack Repair	Y		
C4 Aircross		Engine management ECU	HD1_4N13	HD1_4N13_STT		Read ECU Information		Y		
C4 Aircross		Engine management ECU	HD1_4N13	HD1_4N13_STT		Read Fault Code		Y		
C4 Aircross		Engine management ECU	HD1_4N13	HD1_4N13_STT		Erase Fault Code		Y		
C4 Aircross		Engine management ECU	HD1_4N13	HD1_4N13_STT		Live Data		Y		
C4 Aircross		Engine management ECU	HD1_4N13	HD1_4N13_STT		Actuation Test		Y		
C4 Aircross		Engine management ECU	HD1_4N13	HD1_4N13_STT		Special Function	Pack Repair	Y		
C4 Aircross		Engine management ECU	HD1_4N13	HD1_4N13_WITHOUT_FAP		Read ECU Information		Y		
C4 Aircross		Engine management ECU	HD1_4N13	HD1_4N13_WITHOUT_FAP		Read Fault Code		Y		
C4 Aircross		Engine management ECU	HD1_4N13	HD1_4N13_WITHOUT_FAP		Erase Fault Code		Y		
C4 Aircross		Engine management ECU	HD1_4N13	HD1_4N13_WITHOUT_FAP		Live Data		Y		
C4 Aircross		Engine management ECU	HD1_4N13	HD1_4N13_WITHOUT_FAP		Actuation Test		Y		
C4 Aircross		Engine management ECU	HD1_4N13	HD1_4N13_WITHOUT_FAP		Special Function	Pack Repair	Y		
C4 Aircross		Engine management ECU	HD1_S1807_3J34			Read ECU Information		Y		
C4 Aircross		Engine management ECU	HD1_S1807_3J34			Read Fault Code		Y		
C4 Aircross		Engine management ECU	HD1_S1807_3J34			Erase Fault Code		Y		
C4 Aircross		Engine management ECU	HD1_S1807_3J34			Live Data		Y		
C4 Aircross		Engine management ECU	HD1_S1807_3J34			Actuation Test		Y		
C4 Aircross		Engine management ECU	HD1_S1807_3J34			Special Function	Configuration	Y		
C4 Aircross		Engine management ECU	HD1_S1807_3J34			Special Function	Pack Repair	Y		
C4 Aircross		Automatic gearbox or controlled manual gearbox	BY_CVT	MIVEC 2.0L EURO 2		Read ECU Information		Y		
C4 Aircross		Automatic gearbox or controlled manual gearbox	BY_CVT	MIVEC 2.0L EURO 2		Read Fault Code		Y		
C4 Aircross		Automatic gearbox or controlled manual gearbox	BY_CVT	MIVEC 2.0L EURO 2		Erase Fault Code		Y		
C4 Aircross		Automatic gearbox or controlled manual gearbox	BY_CVT	MIVEC 2.0L EURO 2		Live Data		Y		
C4 Aircross		Automatic gearbox or controlled manual gearbox	BY_CVT	MIVEC 2.0L EURO 2		Special Function	Pack Repair	Y		
C4 Aircross		Automatic gearbox or controlled manual gearbox	BY_CVT	MIVEC 2.0L EURO 4		Read ECU Information		Y		
C4 Aircross		Automatic gearbox or controlled manual gearbox	BY_CVT	MIVEC 2.0L EURO 4		Read Fault Code		Y		
C4 Aircross		Automatic gearbox or controlled manual gearbox	BY_CVT	MIVEC 2.0L EURO 4		Erase Fault Code		Y		
C4 Aircross		Automatic gearbox or controlled manual gearbox	BY_CVT	MIVEC 2.0L EURO 4		Live Data		Y		
C4 Aircross		Automatic gearbox or controlled manual gearbox	BY_CVT	MIVEC 2.0L EURO 4		Special Function	Pack Repair	Y		
C4 Aircross		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ABS			Read ECU Information		Y		
C4 Aircross		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ABS			Read Fault Code		Y		
C4 Aircross		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ABS			Erase Fault Code		Y		
C4 Aircross		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ABS			Live Data		Y		
C4 Aircross		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ABS			Actuation Test		Y		
C4 Aircross		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ABS			Special Function	Configuration	Y		
C4 Aircross		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP V2			Read ECU Information		Y		
C4 Aircross		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP V2			Read Fault Code		Y		
C4 Aircross		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP V2			Erase Fault Code		Y		
C4 Aircross		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP V2			Live Data		Y		
C4 Aircross		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP V2			Actuation Test		Y		
C4 Aircross		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP V2			Special Function	Pack Repair	Y		
C4 Aircross		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP V2			Special Function	Configuration	Y		
C4 Aircross		Air bags and pre-tensioners control unit				Read ECU Information		Y		
C4 Aircross		Air bags and pre-tensioners control unit				Read Fault Code		Y		
C4 Aircross		Air bags and pre-tensioners control unit				Erase Fault Code		Y		
C4 Aircross		Air bags and pre-tensioners control unit				Live Data		Y		
C4 Aircross		Air bags and pre-tensioners control unit				Actuation Test		Y		
C4 Aircross		Rear final drive controlled clutch ECU				Read ECU Information		Y		
C4 Aircross		Rear final drive controlled clutch ECU				Read Fault Code		Y		
C4 Aircross		Rear final drive controlled clutch ECU				Erase Fault Code		Y		
C4 Aircross		Rear final drive controlled clutch ECU				Live Data		Y		
C4 Aircross		Rear final drive controlled clutch ECU				Actuation Test		Y		
C4 Aircross		Engine immobiliser / hands-free control unit	WCM			Read ECU Information		Y		
C4 Aircross		Engine immobiliser / hands-free control unit	WCM			Read Fault Code		Y		
C4 Aircross		Engine immobiliser / hands-free control unit	WCM			Erase Fault Code		Y		
C4 Aircross		Engine immobiliser / hands-free control unit	WCM			Live Data		Y		
C4 Aircross		Engine immobiliser / hands-free control unit	WCM			Special Function	Configuration	Y		
C4 Aircross		Engine immobiliser / hands-free control unit	WCM			Special Function	Replacement parts	Y		
C4 Aircross		Engine immobiliser / hands-free control unit	NOS			Read ECU Information		Y		
C4 Aircross		Engine immobiliser / hands-free control unit	NOS			Read Fault Code		Y		
C4 Aircross		Engine immobiliser / hands-free control unit	NOS			Erase Fault Code		Y		
C4 Aircross		Engine immobiliser / hands-free control unit	NOS			Live Data		Y		
C4 Aircross		Engine immobiliser / hands-free control unit	NOS			Actuation Test		Y		
C4 Aircross		Anti-theft alarm				Read ECU Information		Y		
C4 Aircross		Anti-theft alarm				Read Fault Code		Y		
C4 Aircross		Anti-theft alarm				Erase Fault Code		Y		
C4 Aircross		Anti-theft alarm				Live Data		Y		
C4 Aircross		Starting authorisation ECU				Read ECU Information		Y		
C4 Aircross		Starting authorisation ECU				Read Fault Code		Y		
C4 Aircross		Starting authorisation ECU				Erase Fault Code		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Models	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
C4 Aircross		Starting authorisation ECU				Live Data		Y		
C4 Aircross		Starting authorisation ECU				Actuation Test		Y		
C4 Aircross		Stop and Start ECU				Special Function	Identification	Y		
C4 Aircross		Stop and Start ECU				Special Function	Fault reading	Y		
C4 Aircross		Stop and Start ECU				Erase Fault Code		Y		
C4 Aircross		Stop and Start ECU				Live Data		Y		
C4 Aircross		Driver's door module				Read ECU Information		Y		
C4 Aircross		Driver's door module				Read Fault Code		Y		
C4 Aircross		Driver's door module				Erase Fault Code		Y		
C4 Aircross		Driver's door module				Live Data		Y		
C4 Aircross		Steering wheel angle sensor				Read ECU Information		Y		
C4 Aircross		Steering wheel angle sensor				Read Fault Code		Y		
C4 Aircross		Steering wheel angle sensor				Erase Fault Code		Y		
C4 Aircross		Steering wheel angle sensor				Special Function	Pack Repair	Y		
C4 Aircross		Rain and light sensor				Read ECU Information		Y		
C4 Aircross		Rain and light sensor				Read Fault Code		Y		
C4 Aircross		Rain and light sensor				Erase Fault Code		Y		
C4 Aircross		Rain and light sensor				Live Data		Y		
C4 Aircross		Rain and light sensor				Special Function	Replacement Parts	Y		
C4 Aircross		Parking assistance				Read ECU Information		Y		
C4 Aircross		Parking assistance				Read Fault Code		Y		
C4 Aircross		Parking assistance				Erase Fault Code		Y		
C4 Aircross		Parking assistance				Live Data		Y		
C4 Aircross		Instrument panel				Read ECU Information		Y		
C4 Aircross		Instrument panel				Read Fault Code		Y		
C4 Aircross		Instrument panel				Erase Fault Code		Y		
C4 Aircross		Instrument panel				Live Data		Y		
C4 Aircross		Instrument panel				Actuation Test		Y		
C4 Aircross		Instrument panel				Special Function	Configuration	Y		
C4 Aircross		Instrument panel				Special Function	Pack Repair	Y		
C4 Aircross		Air conditioning				Read ECU Information		Y		
C4 Aircross		Air conditioning				Read Fault Code		Y		
C4 Aircross		Air conditioning				Erase Fault Code		Y		
C4 Aircross		Air conditioning				Live Data		Y		
C4 Aircross		Air conditioning				Actuation Test		Y		
C4 Aircross		Dynamic headlamp height adjuster				Read ECU Information		Y		
C4 Aircross		Dynamic headlamp height adjuster				Read Fault Code		Y		
C4 Aircross		Dynamic headlamp height adjuster				Erase Fault Code		Y		
C4 Aircross		Dynamic headlamp height adjuster				Live Data		Y		
C4 Aircross		Dynamic headlamp height adjuster				Actuation Test		Y		
C4 Aircross		Dynamic headlamp height adjuster				Special Function	Calibration	Y		
C4 Aircross		Power steering				Read ECU Information		Y		
C4 Aircross		Power steering				Read Fault Code		Y		
C4 Aircross		Power steering				Erase Fault Code		Y		
C4 Aircross		Power steering				Live Data		Y		
C4 Aircross		Power steering(recent vehicle)				Read ECU Information		Y		
C4 Aircross		Power steering(recent vehicle)				Read Fault Code		Y		
C4 Aircross		Power steering(recent vehicle)				Erase Fault Code		Y		
C4 Aircross		Power steering(recent vehicle)				Live Data		Y		
C4 Aircross		Radio				Read ECU Information		Y		
C4 Aircross		Radio				Read Fault Code		Y		
C4 Aircross		Radio				Erase Fault Code		Y		
C4 Aircross		Radio				Live Data		Y		
C4 Aircross		Radio				Actuation Test		Y		
C4 Aircross		Navigation assistance				Read ECU Information		Y		
C4 Aircross		Navigation assistance				Read Fault Code		Y		
C4 Aircross		Navigation assistance				Erase Fault Code		Y		
C4 Aircross(A88C)		Built-in Systems Interface				Read ECU Information		Y		
C4 Aircross(A88C)		Built-in Systems Interface				Read Fault Code		Y		
C4 Aircross(A88C)		Built-in Systems Interface				Erase Fault Code		Y		
C4 Aircross(A88C)		Built-in Systems Interface				Special Function	Maintenance-BSI operating mode	Y		
C4 Aircross(A88C)		Built-in Systems Interface				Special Function	Pack repair	Y		
C4 Aircross(A88C)		Engine management ECU	Y046			Read ECU Information		Y		
C4 Aircross(A88C)		Engine management ECU	Y046			Read Fault Code		Y		
C4 Aircross(A88C)		Engine management ECU	Y046			Erase Fault Code		Y		
C4 Aircross(A88C)		Engine management ECU	Y046			Live Data		Y		
C4 Aircross(A88C)		Engine management ECU	Y046			Actuation Test		Y		
C4 Aircross(A88C)		Engine management ECU	Y046			Special Function	Pack repair	Y		
C4 Aircross(A88C)		Engine management ECU	ME017_4_4			Read ECU Information		Y		
C4 Aircross(A88C)		Engine management ECU	ME017_4_4			Read Fault Code		Y		
C4 Aircross(A88C)		Engine management ECU	ME017_4_4			Erase Fault Code		Y		
C4 Aircross(A88C)		Engine management ECU	ME017_4_4			Live Data		Y		
C4 Aircross(A88C)		Engine management ECU	ME017_4_4			Actuation Test		Y		
C4 Aircross(A88C)		Engine management ECU	ME017_4_4			Special Function	Pack Reparation	Y		
C4 Aircross(A88C)		Engine management ECU	CM0_V056			Read ECU Information		Y		
C4 Aircross(A88C)		Engine management ECU	CM0_V056			Read Fault Code		Y		
C4 Aircross(A88C)		Engine management ECU	CM0_V056			Erase Fault Code		Y		
C4 Aircross(A88C)		Engine management ECU	CM0_V056			Live Data		Y		
C4 Aircross(A88C)		Engine management ECU	CM0_V056			Special Function	Pack repair	Y		
C4 Aircross(A88C)		Voltage retaining device				Read ECU Information		Y		
C4 Aircross(A88C)		Voltage retaining device				Read Fault Code		Y		
C4 Aircross(A88C)		Voltage retaining device				Erase Fault Code		Y		
C4 Aircross(A88C)		Automatic gearbox or controlled manual gearbox	BVA_4M6_A19_1D5			Read ECU Information		Y		
C4 Aircross(A88C)		Automatic gearbox or controlled manual gearbox	BVA_4M6_A16_1D5			Read Fault Code		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for Citroen, NO stands for other wires)	Subsystem (YES stands for Citroen, NO stands for other wires)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
C4 Aircross(488C)		Automatic gearbox or controlled manual gearbox	EVA, ABS, AT6, IDS			Erase Fault Code		Y		
C4 Aircross(488C)		Automatic gearbox or controlled manual gearbox	EVA, ABS, AT6, IDS			Live Data		Y		
C4 Aircross(488C)		Automatic gearbox or controlled manual gearbox	EVA, ABS, AT6, IDS			Actuation Test		Y		
C4 Aircross(488C)		Automatic gearbox or controlled manual gearbox	ECCT200			Read ECU Information		Y		
C4 Aircross(488C)		Automatic gearbox or controlled manual gearbox	ECCT200			Read Fault Code		Y		
C4 Aircross(488C)		Automatic gearbox or controlled manual gearbox	ECCT200			Erase Fault Code		Y		
C4 Aircross(488C)		Automatic gearbox or controlled manual gearbox	ECCT200			Live Data		Y		
C4 Aircross(488C)		Power steering				Read ECU Information		Y		
C4 Aircross(488C)		Power steering				Read Fault Code		Y		
C4 Aircross(488C)		Power steering				Erase Fault Code		Y		
C4 Aircross(488C)		Power steering				Live Data		Y		
C4 Aircross(488C)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)				Read ECU Information		Y		
C4 Aircross(488C)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)				Read Fault Code		Y		
C4 Aircross(488C)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)				Erase Fault Code		Y		
C4 Aircross(488C)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)				Live Data		Y		
C4 Aircross(488C)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)				Actuation Test		Y		
C4 Aircross(488C)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)				Special Function	Pack repair	Y		
C4 Aircross(488C)		Battery charge status unit				Read ECU Information		Y		
C4 Aircross(488C)		Battery charge status unit				Read Fault Code		Y		
C4 Aircross(488C)		Battery charge status unit				Erase Fault Code		Y		
C4 Aircross(488C)		Battery charge status unit				Live Data		Y		
C4 Aircross(488C)		Electric steering lock				Read ECU Information		Y		
C4 Aircross(488C)		Electric steering lock				Read Fault Code		Y		
C4 Aircross(488C)		Electric steering lock				Erase Fault Code		Y		
C4 Aircross(488C)		Electric steering lock				Live Data		Y		
C4 Aircross(488C)		Instrument panel				Read ECU Information		Y		
C4 Aircross(488C)		Instrument panel				Read Fault Code		Y		
C4 Aircross(488C)		Instrument panel				Erase Fault Code		Y		
C4 Aircross(488C)		Instrument panel				Live Data		Y		
C4 Aircross(488C)		Instrument panel				Actuation Test		Y		
C4 Aircross(488C)		Head-Up Display				Read ECU Information		Y		
C4 Aircross(488C)		Head-Up Display				Read Fault Code		Y		
C4 Aircross(488C)		Head-Up Display				Erase Fault Code		Y		
C4 Aircross(488C)		Head-Up Display				Live Data		Y		
C4 Aircross(488C)		Head-Up Display				Actuation Test		Y		
C4 Aircross(488C)		Controls under the steering wheel				Read ECU Information		Y		
C4 Aircross(488C)		Controls under the steering wheel				Read Fault Code		Y		
C4 Aircross(488C)		Controls under the steering wheel				Erase Fault Code		Y		
C4 Aircross(488C)		Controls under the steering wheel				Live Data		Y		
C4 Aircross(488C)		Controls under the steering wheel				Actuation Test		Y		
C4 Aircross(488C)		Controls under the steering wheel				Special Function	Pack repair	Y		
C4 Aircross(488C)		Control on the steering wheel / integral controls steering wheel				Read ECU Information		Y		
C4 Aircross(488C)		Control on the steering wheel / integral controls steering wheel				Read Fault Code		Y		
C4 Aircross(488C)		Control on the steering wheel / integral controls steering wheel				Erase Fault Code		Y		
C4 Aircross(488C)		Control on the steering wheel / integral controls steering wheel				Live Data		Y		
C4 Aircross(488C)		Multiplexed control panel				Read ECU Information		Y		
C4 Aircross(488C)		Multiplexed control panel				Read Fault Code		Y		
C4 Aircross(488C)		Multiplexed control panel				Erase Fault Code		Y		
C4 Aircross(488C)		Multiplexed control panel				Live Data		Y		
C4 Aircross(488C)		Air bags and pre-tensioners control unit				Read ECU Information		Y		
C4 Aircross(488C)		Air bags and pre-tensioners control unit				Read Fault Code		Y		
C4 Aircross(488C)		Air bags and pre-tensioners control unit				Erase Fault Code		Y		
C4 Aircross(488C)		Air bags and pre-tensioners control unit				Live Data		Y		
C4 Aircross(488C)		Seat belt not fastened warning lights unit				Read ECU Information		Y		
C4 Aircross(488C)		Seat belt not fastened warning lights unit				Actuation Test		Y		
C4 Aircross(488C)		Rain and brightness sensor				Read ECU Information		Y		
C4 Aircross(488C)		Rain and brightness sensor				Read Fault Code		Y		
C4 Aircross(488C)		Rain and brightness sensor				Erase Fault Code		Y		
C4 Aircross(488C)		Rain and brightness sensor				Live Data		Y		
C4 Aircross(488C)		Multifunction video camera(CMF)				Read ECU Information		Y		
C4 Aircross(488C)		Multifunction video camera(CMF)				Read Fault Code		Y		
C4 Aircross(488C)		Multifunction video camera(CMF)				Erase Fault Code		Y		
C4 Aircross(488C)		Multifunction video camera(CMF)				Live Data		Y		
C4 Aircross(488C)		Multifunction video camera(CMF)				Actuation Test		Y		
C4 Aircross(488C)		Parking assistance	4 parking assistance sensors			Read ECU Information		Y		
C4 Aircross(488C)		Parking assistance	4 parking assistance sensors			Read Fault Code		Y		
C4 Aircross(488C)		Parking assistance	4 parking assistance sensors			Erase Fault Code		Y		
C4 Aircross(488C)		Parking assistance	4 parking assistance sensors			Live Data		Y		
C4 Aircross(488C)		Parking assistance	4 parking assistance sensors			Actuation Test		Y		
C4 Aircross(488C)		Parking assistance	8 parking assistance sensors			Read ECU Information		Y		
C4 Aircross(488C)		Parking assistance	8 parking assistance sensors			Read Fault Code		Y		
C4 Aircross(488C)		Parking assistance	8 parking assistance sensors			Erase Fault Code		Y		
C4 Aircross(488C)		Parking assistance	8 parking assistance sensors			Live Data		Y		
C4 Aircross(488C)		Parking assistance	8 parking assistance sensors			Actuation Test		Y		
C4 Aircross(488C)		Touch screen				Read ECU Information		Y		
C4 Aircross(488C)		Touch screen				Read Fault Code		Y		
C4 Aircross(488C)		Touch screen				Erase Fault Code		Y		
C4 Aircross(488C)		Touch screen				Live Data		Y		
C4 Aircross(488C)		Touch screen				Actuation Test		Y		
C4 Aircross(488C)		Touch screen				Read ECU Information		Y		
C4 Aircross(488C)		Touch screen				Read Fault Code		Y		
C4 Aircross(488C)		Touch screen				Erase Fault Code		Y		
C4 Aircross(488C)		Touch screen				Live Data		Y		
C4 Aircross(488C)		Touch screen				Actuation Test		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function reasons	Add (Y/N)	Verification (Y/N)	Remarks
C4 Aircross(A88C)		Telematic unit (RTX) or audio/navigation				Read ECU Information		Y		
C4 Aircross(A88C)		Telematic unit (RTX) or audio/navigation				Read Fault Code		Y		
C4 Aircross(A88C)		Telematic unit (RTX) or audio/navigation				Erase Fault Code		Y		
C4 Aircross(A88C)		Telematic unit (RTX) or audio/navigation				Live Data		Y		
C4 Aircross(A88C)		Telematic unit (RTX) or audio/navigation				Actuation Test		Y		
C4 Aircross(A88C)		Service module / Independent telematic unit				Read ECU Information		Y		
C4 Aircross(A88C)		Service module / Independent telematic unit				Read Fault Code		Y		
C4 Aircross(A88C)		Service module / Independent telematic unit				Erase Fault Code		Y		
C4 Aircross(A88C)		Service module / Independent telematic unit				Live Data		Y		
C4 Aircross(A88C)		Service module / Independent telematic unit				Actuation Test		Y		
C4 Aircross(A88C)		Driver's door module				Read ECU Information		Y		
C4 Aircross(A88C)		Driver's door module				Read Fault Code		Y		
C4 Aircross(A88C)		Driver's door module				Erase Fault Code		Y		
C4 Aircross(A88C)		Driver's door module				Live Data		Y		
C4 Aircross(A88C)		Driver's door module				Actuation Test		Y		
C4 Aircross(A88C)		Air conditioning				Read ECU Information		Y		
C4 Aircross(A88C)		Air conditioning				Read Fault Code		Y		
C4 Aircross(A88C)		Air conditioning				Erase Fault Code		Y		
C4 Aircross(A88C)		Air conditioning				Live Data		Y		
C4 Aircross(A88C)		Air conditioning				Actuation Test		Y		
C4 CACTUS(E3)		Built-in Systems Interface				Read ECU Information		Y		
C4 CACTUS(E3)		Built-in Systems Interface				Read Fault Code		Y		
C4 CACTUS(E3)		Built-in Systems Interface				Erase Fault Code		Y		
C4 CACTUS(E3)		Built-in Systems Interface				Live Data		Y		
C4 CACTUS(E3)		Built-in Systems Interface				Actuation Test		Y		
C4 CACTUS(E3)		Built-in Systems Interface				Special Function	Maintenance-BSI operating mode	Y		
C4 CACTUS(E3)		Built-in Systems Interface				Special Function	Learning	Y		
C4 CACTUS(E3)		Engine management ECU	EDC17C10_BH2	9HP - 1969TDE - 92 CV		Read ECU Information		Y		
C4 CACTUS(E3)		Engine management ECU	EDC17C10_BH2	9HP - 1969TDE - 92 CV		Read Fault Code		Y		
C4 CACTUS(E3)		Engine management ECU	EDC17C10_BH2	9HP - 1969TDE - 92 CV		Erase Fault Code		Y		
C4 CACTUS(E3)		Engine management ECU	EDC17C10_BH2	9HP - 1969TDE - 92 CV		Live Data		Y		
C4 CACTUS(E3)		Engine management ECU	EDC17C10_BH2	9HP - 1969TDE - 92 CV		Actuation Test		Y		
C4 CACTUS(E3)		Engine management ECU	EDC17C10_BH2	9HP - 1969TDE - 92 CV		Special Function	Configuration	Y		
C4 CACTUS(E3)		Engine management ECU	EDC17C10_BH2	9HP - 1969TDE - 92 CV		Special Function	Pack Repair	Y		
C4 CACTUS(E3)		Engine management ECU	V46	IMU		Read ECU Information		Y		
C4 CACTUS(E3)		Engine management ECU	V46	IMU		Read Fault Code		Y		
C4 CACTUS(E3)		Engine management ECU	V46	IMU		Erase Fault Code		Y		
C4 CACTUS(E3)		Engine management ECU	V46	IMU		Live Data		Y		
C4 CACTUS(E3)		Engine management ECU	V46	IMU		Actuation Test		Y		
C4 CACTUS(E3)		Engine management ECU	V46	IMU		Special Function	Pack Repair	Y		
C4 CACTUS(E3)		Engine management ECU	V46	IMZ		Read ECU Information		Y		
C4 CACTUS(E3)		Engine management ECU	V46	IMZ		Read Fault Code		Y		
C4 CACTUS(E3)		Engine management ECU	V46	IMZ		Erase Fault Code		Y		
C4 CACTUS(E3)		Engine management ECU	V46	IMZ		Live Data		Y		
C4 CACTUS(E3)		Engine management ECU	V46	IMZ		Actuation Test		Y		
C4 CACTUS(E3)		Engine management ECU	V46	IMZ		Special Function	Pack Repair	Y		
C4 CACTUS(E3)		Engine management ECU	V46	IMZ	No	Read ECU Information		Y		
C4 CACTUS(E3)		Engine management ECU	V46	IMZ	No	Read Fault Code		Y		
C4 CACTUS(E3)		Engine management ECU	V46	IMZ	No	Erase Fault Code		Y		
C4 CACTUS(E3)		Engine management ECU	V46	IMZ	No	Live Data		Y		
C4 CACTUS(E3)		Engine management ECU	V46	IMZ	No	Actuation Test		Y		
C4 CACTUS(E3)		Engine management ECU	V46	IMZ	No	Special Function	Pack Repair	Y		
C4 CACTUS(E3)		Engine management ECU	ME749	ME749_EUS_NFP		Read ECU Information		Y		
C4 CACTUS(E3)		Engine management ECU	ME749	ME749_EUS_NFP		Read Fault Code		Y		
C4 CACTUS(E3)		Engine management ECU	ME749	ME749_EUS_NFP		Erase Fault Code		Y		
C4 CACTUS(E3)		Engine management ECU	ME749	ME749_EUS_NFP		Live Data		Y		
C4 CACTUS(E3)		Engine management ECU	ME749	ME749_EUS_NFP		Actuation Test		Y		
C4 CACTUS(E3)		Engine management ECU	ME749	ME749_EUS_NFP		Special Function	Pack Repair	Y		
C4 CACTUS(E3)		Engine management ECU	ME749	ME749_EUS_NFN		Read ECU Information		Y		
C4 CACTUS(E3)		Engine management ECU	ME749	ME749_EUS_NFN		Read Fault Code		Y		
C4 CACTUS(E3)		Engine management ECU	ME749	ME749_EUS_NFN		Erase Fault Code		Y		
C4 CACTUS(E3)		Engine management ECU	ME749	ME749_EUS_NFN		Live Data		Y		
C4 CACTUS(E3)		Engine management ECU	ME749	ME749_EUS_NFN		Actuation Test		Y		
C4 CACTUS(E3)		Engine management ECU	ME749	ME749_EUS_NFN		Special Function	Pack Repair	Y		
C4 CACTUS(E3)		Engine management ECU	VD46			Read ECU Information		Y		
C4 CACTUS(E3)		Engine management ECU	VD46			Read Fault Code		Y		
C4 CACTUS(E3)		Engine management ECU	VD46			Erase Fault Code		Y		
C4 CACTUS(E3)		Engine management ECU	VD46			Live Data		Y		
C4 CACTUS(E3)		Engine management ECU	VD46			Actuation Test		Y		
C4 CACTUS(E3)		Engine management ECU	VD46			Special Function	Pack Repair	Y		
C4 CACTUS(E3)		Engine management ECU	EDC17C00			Read ECU Information		Y		
C4 CACTUS(E3)		Engine management ECU	EDC17C00			Read Fault Code		Y		
C4 CACTUS(E3)		Engine management ECU	EDC17C00			Erase Fault Code		Y		
C4 CACTUS(E3)		Engine management ECU	EDC17C00			Live Data		Y		
C4 CACTUS(E3)		Engine management ECU	EDC17C00			Actuation Test		Y		
C4 CACTUS(E3)		Engine management ECU	EDC17C00			Special Function	Pack Repair	Y		
C4 CACTUS(E3)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP MK100			Read ECU Information		Y		
C4 CACTUS(E3)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP MK100			Read Fault Code		Y		
C4 CACTUS(E3)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP MK100			Erase Fault Code		Y		
C4 CACTUS(E3)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP MK100			Live Data		Y		
C4 CACTUS(E3)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP MK100			Actuation Test		Y		
C4 CACTUS(E3)		Automatic gearbox or controlled manual gearbox	MUPS_IBS			Read ECU Information		Y		
C4 CACTUS(E3)		Automatic gearbox or controlled manual gearbox	MUPS_IBS			Read Fault Code		Y		
C4 CACTUS(E3)		Automatic gearbox or controlled manual gearbox	MUPS_IBS			Erase Fault Code		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function reasons	Add (Y/N)	Verification (Y/N)	Remarks
C4 CACTUS(E3)		Automatic gearbox or controlled manual gearbox	MUPS_IDS			Live Data		Y		
C4 CACTUS(E3)		Automatic gearbox or controlled manual gearbox	MUPS_IDS			Actuation Test		Y		
C4 CACTUS(E3)		Automatic gearbox or controlled manual gearbox	MUPS_IDS			Special Function	Setting of the actuator	Y		
C4 CACTUS(E3)		Automatic gearbox or controlled manual gearbox	MUPS_IDS			Special Function	Counters	Y		
C4 CACTUS(E3)		Automatic gearbox or controlled manual gearbox	MUPS_IDS			Special Function	Programming	Y		
C4 CACTUS(E3)		Automatic gearbox or controlled manual gearbox	MUPS_IDS			Special Function	Replacement parts	Y		
C4 CACTUS(E3)		Automatic gearbox or controlled manual gearbox	CFC300P			Read ECU Information		Y		
C4 CACTUS(E3)		Automatic gearbox or controlled manual gearbox	CFC300P			Read Fault Code		Y		
C4 CACTUS(E3)		Automatic gearbox or controlled manual gearbox	CFC300P			Erase Fault Code		Y		
C4 CACTUS(E3)		Automatic gearbox or controlled manual gearbox	CFC300P			Live Data		Y		
C4 CACTUS(E3)		Automatic gearbox or controlled manual gearbox	CFC300P			Actuation Test		Y		
C4 CACTUS(E3)		Automatic gearbox or controlled manual gearbox	CFC300P			Special Function	Replacement parts	Y		
C4 CACTUS(E3)		Automatic gearbox or controlled manual gearbox	BVWP_MCP_IDS			Read ECU Information		Y		
C4 CACTUS(E3)		Automatic gearbox or controlled manual gearbox	BVWP_MCP_IDS			Read Fault Code		Y		
C4 CACTUS(E3)		Automatic gearbox or controlled manual gearbox	BVWP_MCP_IDS			Erase Fault Code		Y		
C4 CACTUS(E3)		Automatic gearbox or controlled manual gearbox	BVWP_MCP_IDS			Live Data		Y		
C4 CACTUS(E3)		Automatic gearbox or controlled manual gearbox	BVWP_MCP_IDS			Actuation Test		Y		
C4 CACTUS(E3)		Automatic gearbox or controlled manual gearbox	BVWP_MCP_IDS			Special Function	Replacement parts	Y		
C4 CACTUS(E3)		Automatic gearbox or controlled manual gearbox	BVWP_MCP_IDS			Special Function	Counters	Y		
C4 CACTUS(E3)		Automatic gearbox or controlled manual gearbox	BVA_AMS_AT6_IDS			Read ECU Information		Y		
C4 CACTUS(E3)		Automatic gearbox or controlled manual gearbox	BVA_AMS_AT6_IDS			Read Fault Code		Y		
C4 CACTUS(E3)		Automatic gearbox or controlled manual gearbox	BVA_AMS_AT6_IDS			Erase Fault Code		Y		
C4 CACTUS(E3)		Automatic gearbox or controlled manual gearbox	BVA_AMS_AT6_IDS			Live Data		Y		
C4 CACTUS(E3)		Automatic gearbox or controlled manual gearbox	BVA_AMS_AT6_IDS			Actuation Test		Y		
C4 CACTUS(E3)		Automatic gearbox or controlled manual gearbox	BVA_AMS_AT6_IDS			Special Function	Pack Repair	Y		
C4 CACTUS(E3)		Air bags and pre-tensioners control unit				Read ECU Information		Y		
C4 CACTUS(E3)		Air bags and pre-tensioners control unit				Read Fault Code		Y		
C4 CACTUS(E3)		Air bags and pre-tensioners control unit				Erase Fault Code		Y		
C4 CACTUS(E3)		Air bags and pre-tensioners control unit				Live Data		Y		
C4 CACTUS(E3)		Air bags and pre-tensioners control unit				Special Function	Pack Repair	Y		
C4 CACTUS(E3)		Air conditioning				Read ECU Information		Y		
C4 CACTUS(E3)		Air conditioning				Read Fault Code		Y		
C4 CACTUS(E3)		Air conditioning				Erase Fault Code		Y		
C4 CACTUS(E3)		Air conditioning				Live Data		Y		
C4 CACTUS(E3)		Air conditioning				Actuation Test		Y		
C4 CACTUS(E3)		Air conditioning				Special Function	Configuration	Y		
C4 CACTUS(E3)		Air conditioning				Special Function	Pack Repair	Y		
C4 CACTUS(E3)		Air conditioning				Special Function	Learning	Y		
C4 CACTUS(E3)		Battery charge status unit				Read ECU Information		Y		
C4 CACTUS(E3)		Battery charge status unit				Read Fault Code		Y		
C4 CACTUS(E3)		Battery charge status unit				Erase Fault Code		Y		
C4 CACTUS(E3)		Battery charge status unit				Live Data		Y		
C4 CACTUS(E3)		Battery charge status unit				Special Function	Configuration	Y		
C4 CACTUS(E3)		Battery charge status unit				Special Function	Pack Repair	Y		
C4 CACTUS(E3)		Power steering				Read ECU Information		Y		
C4 CACTUS(E3)		Power steering				Read Fault Code		Y		
C4 CACTUS(E3)		Power steering				Erase Fault Code		Y		
C4 CACTUS(E3)		Power steering				Live Data		Y		
C4 CACTUS(E3)		Power steering				Special Function	Configuration	Y		
C4 CACTUS(E3)		Trailer relay unit				Read ECU Information		Y		
C4 CACTUS(E3)		Trailer relay unit				Read Fault Code		Y		
C4 CACTUS(E3)		Trailer relay unit				Erase Fault Code		Y		
C4 CACTUS(E3)		Trailer relay unit				Live Data		Y		
C4 CACTUS(E3)		Trailer relay unit				Actuation Test		Y		
C4 CACTUS(E3)		Service module / Independent telematic unit	BTA			Read ECU Information		Y		
C4 CACTUS(E3)		Service module / Independent telematic unit	BTA			Read Fault Code		Y		
C4 CACTUS(E3)		Service module / Independent telematic unit	BTA			Erase Fault Code		Y		
C4 CACTUS(E3)		Service module / Independent telematic unit	BTA			Live Data		Y		
C4 CACTUS(E3)		Service module / Independent telematic unit	BTA			Actuation Test		Y		
C4 CACTUS(E3)		Service module / Independent telematic unit	BTA			Special Function	Configuration	Y		
C4 CACTUS(E3)		Service module / Independent telematic unit	BTA.2			Read ECU Information		Y		
C4 CACTUS(E3)		Service module / Independent telematic unit	BTA.2			Read Fault Code		Y		
C4 CACTUS(E3)		Service module / Independent telematic unit	BTA.2			Erase Fault Code		Y		
C4 CACTUS(E3)		Service module / Independent telematic unit	BTA.2			Live Data		Y		
C4 CACTUS(E3)		Service module / Independent telematic unit	BTA.2			Actuation Test		Y		
C4 CACTUS(E3)		Service module / Independent telematic unit	BTA.2			Special Function	Configuration	Y		
C4 CACTUS(E3)		Service module / Independent telematic unit	BTA.2			Special Function	Pack Repair	Y		
C4 CACTUS(E3)		Seat belt not fastened warning lights unit				Read ECU Information		Y		
C4 CACTUS(E3)		Seat belt not fastened warning lights unit				Actuation Test		Y		
C4 CACTUS(E3)		Controls on the steering wheel / integral controls steering wheel	Yes			Read ECU Information		Y		
C4 CACTUS(E3)		Controls on the steering wheel / integral controls steering wheel	Yes			Read Fault Code		Y		
C4 CACTUS(E3)		Controls on the steering wheel / integral controls steering wheel	Yes			Erase Fault Code		Y		
C4 CACTUS(E3)		Controls on the steering wheel / integral controls steering wheel	Yes			Live Data		Y		
C4 CACTUS(E3)		Controls on the steering wheel / integral controls steering wheel	Yes			Actuation Test		Y		
C4 CACTUS(E3)		Controls on the steering wheel / integral controls steering wheel	No			Read ECU Information		Y		
C4 CACTUS(E3)		Controls on the steering wheel / integral controls steering wheel	No			Read Fault Code		Y		
C4 CACTUS(E3)		Controls on the steering wheel / integral controls steering wheel	No			Erase Fault Code		Y		
C4 CACTUS(E3)		Controls on the steering wheel / integral controls steering wheel	No			Live Data		Y		
C4 CACTUS(E3)		Controls on the steering wheel / integral controls steering wheel	No			Actuation Test		Y		
C4 CACTUS(E3)		Voltage retaining device	DMTC			Read ECU Information		Y		
C4 CACTUS(E3)		Voltage retaining device	DMTR			Read ECU Information		Y		
C4 CACTUS(E3)		Voltage retaining device	DMTR			Read Fault Code		Y		
C4 CACTUS(E3)		Voltage retaining device	DMTR			Erase Fault Code		Y		
C4 CACTUS(E3)		Voltage retaining device	DMTR.DTC36			Read ECU Information		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Models	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
C4 CACTUS (E3)		Voltage retaining device	DMTR, DTC3B			Read Fault Code		Y		
C4 CACTUS (E3)		Voltage retaining device	DMTR, DTC3B			Erase Fault Code		Y		
C4 CACTUS (E3)		Parking assistance	4 parking assistance sensors			Read ECU Information		Y		
C4 CACTUS (E3)		Parking assistance	4 parking assistance sensors			Read Fault Code		Y		
C4 CACTUS (E3)		Parking assistance	4 parking assistance sensors			Erase Fault Code		Y		
C4 CACTUS (E3)		Parking assistance	4 parking assistance sensors			Live Data		Y		
C4 CACTUS (E3)		Parking assistance	4 parking assistance sensors			Special Function	Configuration	Y		
C4 CACTUS (E3)		Parking assistance	4 parking assistance sensors			Special Function	Pack Repair	Y		
C4 CACTUS (E3)		Parking assistance	8 parking assistance sensors			Read ECU Information		Y		
C4 CACTUS (E3)		Parking assistance	8 parking assistance sensors			Read Fault Code		Y		
C4 CACTUS (E3)		Parking assistance	8 parking assistance sensors			Erase Fault Code		Y		
C4 CACTUS (E3)		Parking assistance	8 parking assistance sensors			Live Data		Y		
C4 CACTUS (E3)		Parking assistance	8 parking assistance sensors			Special Function	Configuration	Y		
C4 CACTUS (E3)		Parking assistance	8 parking assistance sensors			Special Function	Pack Repair	Y		
C4 CACTUS (E3)		Parking assistance	10 parking assistance sensors			Read ECU Information		Y		
C4 CACTUS (E3)		Parking assistance	10 parking assistance sensors			Read Fault Code		Y		
C4 CACTUS (E3)		Parking assistance	10 parking assistance sensors			Erase Fault Code		Y		
C4 CACTUS (E3)		Parking assistance	10 parking assistance sensors			Live Data		Y		
C4 CACTUS (E3)		Parking assistance	10 parking assistance sensors			Special Function	Configuration	Y		
C4 CACTUS (E3)		Parking assistance	10 parking assistance sensors			Special Function	Pack Repair	Y		
C4 CACTUS (E3)		Diesel additive pump	PAREGO			Read ECU Information		Y		
C4 CACTUS (E3)		Diesel additive pump	PAREGO			Read Fault Code		Y		
C4 CACTUS (E3)		Diesel additive pump	PAREGO			Erase Fault Code		Y		
C4 CACTUS (E3)		Diesel additive pump	PAREGO			Live Data		Y		
C4 CACTUS (E3)		Diesel additive pump	PAREGO			Actuation Test		Y		
C4 CACTUS (E3)		Diesel additive pump	PAREGO			Special Function	Configuration	Y		
C4 CACTUS (E3)		Diesel additive pump	PAREGO			Special Function	Pack Repair	Y		
C4 CACTUS (E3)		Diesel additive pump	PAREGO_TI_E6			Read ECU Information		Y		
C4 CACTUS (E3)		Diesel additive pump	PAREGO_TI_E6			Read Fault Code		Y		
C4 CACTUS (E3)		Diesel additive pump	PAREGO_TI_E6			Erase Fault Code		Y		
C4 CACTUS (E3)		Diesel additive pump	PAREGO_TI_E6			Live Data		Y		
C4 CACTUS (E3)		Diesel additive pump	PAREGO_TI_E6			Special Function	Configuration	Y		
C4 CACTUS (E3)		Telematic unit (OTA) or audio-navigation				Read ECU Information		Y		
C4 CACTUS (E3)		Telematic unit (OTA) or audio-navigation				Read Fault Code		Y		
C4 CACTUS (E3)		Telematic unit (OTA) or audio-navigation				Erase Fault Code		Y		
C4 CACTUS (E3)		Telematic unit (OTA) or audio-navigation				Live Data		Y		
C4 CACTUS (E3)		Telematic unit (OTA) or audio-navigation				Actuation Test		Y		
C4 CACTUS (E3)		Telematic unit (OTA) or audio-navigation				Special Function	Configuration	Y		
C4 CACTUS (E3)		Instrument panel				Read ECU Information		Y		
C4 CACTUS (E3)		Instrument panel				Read Fault Code		Y		
C4 CACTUS (E3)		Instrument panel				Erase Fault Code		Y		
C4 CACTUS (E3)		Instrument panel				Live Data		Y		
C4 CACTUS (E3)		Instrument panel				Actuation Test		Y		
C4 CACTUS (E3)		Touch screen				Read ECU Information		Y		
C4 CACTUS (E3)		Touch screen				Read Fault Code		Y		
C4 CACTUS (E3)		Touch screen				Erase Fault Code		Y		
C4 CACTUS (E3)		Touch screen				Live Data		Y		
C4 CACTUS (E3)		Touch screen				Actuation Test		Y		
C4 CACTUS (E3)		Touch screen				Special Function	Configuration	Y		
C4 CACTUS (E3)		Multiplexed control panel	Telematics unit SMEG*			Read ECU Information		Y		
C4 CACTUS (E3)		Multiplexed control panel	Telematics unit SMEG*			Read Fault Code		Y		
C4 CACTUS (E3)		Multiplexed control panel	Telematics unit SMEG*			Erase Fault Code		Y		
C4 CACTUS (E3)		Multiplexed control panel	Telematics unit SMEG*			Live Data		Y		
C4 CACTUS (E3)		Multiplexed control panel	Telematics unit SMEG*			Actuation Test		Y		
C4 CACTUS (E3)		Rain and light sensor				Read ECU Information		Y		
C4 CACTUS (E3)		Rain and light sensor				Read Fault Code		Y		
C4 CACTUS (E3)		Rain and light sensor				Erase Fault Code		Y		
C4 CACTUS (E3)		Rain and light sensor				Live Data		Y		
C4 CACTUS (E3)		Rain and light sensor				Special Function	Pack Repair	Y		
C4 CACTUS (E3)		Controls under the steering wheel				Read ECU Information		Y		
C4 CACTUS (E3)		Controls under the steering wheel				Read Fault Code		Y		
C4 CACTUS (E3)		Controls under the steering wheel				Erase Fault Code		Y		
C4 CACTUS (E3)		Controls under the steering wheel				Live Data		Y		
C4 CACTUS (E3)		Controls under the steering wheel				Actuation Test		Y		
C4 CACTUS (E3)		External CD player				Read ECU Information		Y		
C4 CACTUS (E3)		External CD player				Read Fault Code		Y		
C4 CACTUS (E3)		External CD player				Erase Fault Code		Y		
C4 CACTUS (E3)		External CD player				Live Data		Y		
C4 CACTUS (E3)		External CD player				Actuation Test		Y		
C4 CACTUS (E3)		External CD player				Special Function	Configuration	Y		
C4 CACTUS (E3)		External CD player				Special Function	Pack Repair	Y		
C4 CACTUS (F3)		Built-in Systems Interface				Read ECU Information		Y		
C4 CACTUS (F3)		Built-in Systems Interface				Read Fault Code		Y		
C4 CACTUS (F3)		Built-in Systems Interface				Erase Fault Code		Y		
C4 CACTUS (F3)		Built-in Systems Interface				Live Data		Y		
C4 CACTUS (F3)		Built-in Systems Interface				Actuation Test		Y		
C4 CACTUS (F3)		Built-in Systems Interface				Special Function	Maintenance-BSI operating mode	Y		
C4 CACTUS (F3)		Built-in Systems Interface				Special Function	Learning	Y		
C4 CACTUS (F3)		Engine management ECU	EDC17000			Read ECU Information		Y		
C4 CACTUS (F3)		Engine management ECU	EDC17000			Read Fault Code		Y		
C4 CACTUS (F3)		Engine management ECU	EDC17000			Erase Fault Code		Y		
C4 CACTUS (F3)		Engine management ECU	EDC17000			Live Data		Y		
C4 CACTUS (F3)		Engine management ECU	EDC17000			Actuation Test		Y		
C4 CACTUS (F3)		Engine management ECU	EDC17000			Special Function	Pack Repair	Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
C4 CACTUS (F3)		Engine management ECU	CMU_MU1CS003			Read ECU Information		Y		
C4 CACTUS (F3)		Engine management ECU	CMU_MU1CS003			Read Fault Code		Y		
C4 CACTUS (F3)		Engine management ECU	CMU_MU1CS003			Erase Fault Code		Y		
C4 CACTUS (F3)		Engine management ECU	CMU_MU1CS003			Live Data		Y		
C4 CACTUS (F3)		Engine management ECU	CMU_MU1CS003			Actuation Test		Y		
C4 CACTUS (F3)		Engine management ECU	CMU_MU1CS003			Special Function	Pack Repair	Y		
C4 CACTUS (F3)		Engine management ECU	CMU_V1066			Read ECU Information		Y		
C4 CACTUS (F3)		Engine management ECU	CMU_V1066			Read Fault Code		Y		
C4 CACTUS (F3)		Engine management ECU	CMU_V1066			Erase Fault Code		Y		
C4 CACTUS (F3)		Engine management ECU	CMU_V1066			Live Data		Y		
C4 CACTUS (F3)		Engine management ECU	CMU_V1066			Actuation Test		Y		
C4 CACTUS (F3)		Engine management ECU	CMU_V1066			Special Function	Pack Repair	Y		
C4 CACTUS (F3)		Engine management ECU	VD46			Read ECU Information		Y		
C4 CACTUS (F3)		Engine management ECU	VD46			Read Fault Code		Y		
C4 CACTUS (F3)		Engine management ECU	VD46			Erase Fault Code		Y		
C4 CACTUS (F3)		Engine management ECU	VD46			Live Data		Y		
C4 CACTUS (F3)		Engine management ECU	VD46			Actuation Test		Y		
C4 CACTUS (F3)		Engine management ECU	VD46			Special Function	Pack Repair	Y		
C4 CACTUS (F3)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP_MK100			Read ECU Information		Y		
C4 CACTUS (F3)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP_MK100			Read Fault Code		Y		
C4 CACTUS (F3)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP_MK100			Erase Fault Code		Y		
C4 CACTUS (F3)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP_MK100			Live Data		Y		
C4 CACTUS (F3)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP_MK100			Actuation Test		Y		
C4 CACTUS (F3)		Automatic gearbox or controlled manual gearbox	MUPS_IDS			Read ECU Information		Y		
C4 CACTUS (F3)		Automatic gearbox or controlled manual gearbox	MUPS_IDS			Read Fault Code		Y		
C4 CACTUS (F3)		Automatic gearbox or controlled manual gearbox	MUPS_IDS			Erase Fault Code		Y		
C4 CACTUS (F3)		Automatic gearbox or controlled manual gearbox	MUPS_IDS			Live Data		Y		
C4 CACTUS (F3)		Automatic gearbox or controlled manual gearbox	MUPS_IDS			Actuation Test		Y		
C4 CACTUS (F3)		Automatic gearbox or controlled manual gearbox	MUPS_IDS			Special Function	Setting of the actuator	Y		
C4 CACTUS (F3)		Automatic gearbox or controlled manual gearbox	MUPS_IDS			Special Function	Counters	Y		
C4 CACTUS (F3)		Automatic gearbox or controlled manual gearbox	MUPS_IDS			Special Function	Programming	Y		
C4 CACTUS (F3)		Automatic gearbox or controlled manual gearbox	MUPS_IDS			Special Function	Replacement parts	Y		
C4 CACTUS (F3)		Automatic gearbox or controlled manual gearbox	CFC300P			Read ECU Information		Y		
C4 CACTUS (F3)		Automatic gearbox or controlled manual gearbox	CFC300P			Read Fault Code		Y		
C4 CACTUS (F3)		Automatic gearbox or controlled manual gearbox	CFC300P			Erase Fault Code		Y		
C4 CACTUS (F3)		Automatic gearbox or controlled manual gearbox	CFC300P			Live Data		Y		
C4 CACTUS (F3)		Automatic gearbox or controlled manual gearbox	CFC300P			Actuation Test		Y		
C4 CACTUS (F3)		Automatic gearbox or controlled manual gearbox	CFC300P			Special Function	Replacement parts	Y		
C4 CACTUS (F3)		Automatic gearbox or controlled manual gearbox	BVWP_MCP_IDS			Read ECU Information		Y		
C4 CACTUS (F3)		Automatic gearbox or controlled manual gearbox	BVWP_MCP_IDS			Read Fault Code		Y		
C4 CACTUS (F3)		Automatic gearbox or controlled manual gearbox	BVWP_MCP_IDS			Live Data		Y		
C4 CACTUS (F3)		Automatic gearbox or controlled manual gearbox	BVWP_MCP_IDS			Actuation Test		Y		
C4 CACTUS (F3)		Automatic gearbox or controlled manual gearbox	BVWP_MCP_IDS			Special Function	Replacement parts	Y		
C4 CACTUS (F3)		Automatic gearbox or controlled manual gearbox	BVWP_MCP_IDS			Special Function	Counters	Y		
C4 CACTUS (F3)		Automatic gearbox or controlled manual gearbox	BVA_AM6_AT6_IDS			Read ECU Information		Y		
C4 CACTUS (F3)		Automatic gearbox or controlled manual gearbox	BVA_AM6_AT6_IDS			Read Fault Code		Y		
C4 CACTUS (F3)		Automatic gearbox or controlled manual gearbox	BVA_AM6_AT6_IDS			Erase Fault Code		Y		
C4 CACTUS (F3)		Automatic gearbox or controlled manual gearbox	BVA_AM6_AT6_IDS			Live Data		Y		
C4 CACTUS (F3)		Automatic gearbox or controlled manual gearbox	BVA_AM6_AT6_IDS			Actuation Test		Y		
C4 CACTUS (F3)		Automatic gearbox or controlled manual gearbox	BVA_AM6_AT6_IDS			Special Function	Pack Repair	Y		
C4 CACTUS (F3)		Air bags and pre-tensioners control unit				Read ECU Information		Y		
C4 CACTUS (F3)		Air bags and pre-tensioners control unit				Read Fault Code		Y		
C4 CACTUS (F3)		Air bags and pre-tensioners control unit				Erase Fault Code		Y		
C4 CACTUS (F3)		Air bags and pre-tensioners control unit				Live Data		Y		
C4 CACTUS (F3)		Air bags and pre-tensioners control unit				Special Function	Pack Repair	Y		
C4 CACTUS (F3)		Air conditioning				Read ECU Information		Y		
C4 CACTUS (F3)		Air conditioning				Read Fault Code		Y		
C4 CACTUS (F3)		Air conditioning				Erase Fault Code		Y		
C4 CACTUS (F3)		Air conditioning				Live Data		Y		
C4 CACTUS (F3)		Air conditioning				Actuation Test		Y		
C4 CACTUS (F3)		Air conditioning				Special Function	Configuration	Y		
C4 CACTUS (F3)		Air conditioning				Special Function	Pack Repair	Y		
C4 CACTUS (F3)		Air conditioning				Special Function	Learning	Y		
C4 CACTUS (F3)		Battery charge status unit				Read ECU Information		Y		
C4 CACTUS (F3)		Battery charge status unit				Read Fault Code		Y		
C4 CACTUS (F3)		Battery charge status unit				Erase Fault Code		Y		
C4 CACTUS (F3)		Battery charge status unit				Live Data		Y		
C4 CACTUS (F3)		Battery charge status unit				Special Function	Configuration	Y		
C4 CACTUS (F3)		Battery charge status unit				Special Function	Pack Repair	Y		
C4 CACTUS (F3)		Power steering				Read ECU Information		Y		
C4 CACTUS (F3)		Power steering				Read Fault Code		Y		
C4 CACTUS (F3)		Power steering				Erase Fault Code		Y		
C4 CACTUS (F3)		Power steering				Live Data		Y		
C4 CACTUS (F3)		Power steering				Special Function	Configuration	Y		
C4 CACTUS (F3)		Trailer relay unit				Read ECU Information		Y		
C4 CACTUS (F3)		Trailer relay unit				Read Fault Code		Y		
C4 CACTUS (F3)		Trailer relay unit				Erase Fault Code		Y		
C4 CACTUS (F3)		Trailer relay unit				Live Data		Y		
C4 CACTUS (F3)		Trailer relay unit				Actuation Test		Y		
C4 CACTUS (F3)		Service module / Independent telematic unit	BTA			Read ECU Information		Y		
C4 CACTUS (F3)		Service module / Independent telematic unit	BTA			Read Fault Code		Y		
C4 CACTUS (F3)		Service module / Independent telematic unit	BTA			Erase Fault Code		Y		
C4 CACTUS (F3)		Service module / Independent telematic unit	BTA			Live Data		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
C4 CACTUS (F3)		Service module / Independent telematic unit	BTA			Actuation Test		Y		
C4 CACTUS (F3)		Service module / Independent telematic unit	BTA			Special Function	Configuration	Y		
C4 CACTUS (F3)		Service module / Independent telematic unit	BTA_2			Read ECU Information		Y		
C4 CACTUS (F3)		Service module / Independent telematic unit	BTA_2			Read Fault Code		Y		
C4 CACTUS (F3)		Service module / Independent telematic unit	BTA_2			Erase Fault Code		Y		
C4 CACTUS (F3)		Service module / Independent telematic unit	BTA_2			Live Data		Y		
C4 CACTUS (F3)		Service module / Independent telematic unit	BTA_2			Actuation Test		Y		
C4 CACTUS (F3)		Service module / Independent telematic unit	BTA_2			Special Function	Configuration	Y		
C4 CACTUS (F3)		Service module / Independent telematic unit	BTA_2			Special Function	Pack Repair	Y		
C4 CACTUS (F3)		Seat belt not fastened warning lights unit				Read ECU Information		Y		
C4 CACTUS (F3)		Seat belt not fastened warning lights unit				Actuation Test		Y		
C4 CACTUS (F3)		Controls on the steering wheel / integral controls steering wheel	Yes			Read ECU Information		Y		
C4 CACTUS (F3)		Controls on the steering wheel / integral controls steering wheel	Yes			Read Fault Code		Y		
C4 CACTUS (F3)		Controls on the steering wheel / integral controls steering wheel	Yes			Erase Fault Code		Y		
C4 CACTUS (F3)		Controls on the steering wheel / integral controls steering wheel	Yes			Live Data		Y		
C4 CACTUS (F3)		Controls on the steering wheel / integral controls steering wheel	Yes			Actuation Test		Y		
C4 CACTUS (F3)		Controls on the steering wheel / integral controls steering wheel	No			Read ECU Information		Y		
C4 CACTUS (F3)		Controls on the steering wheel / integral controls steering wheel	No			Read Fault Code		Y		
C4 CACTUS (F3)		Controls on the steering wheel / integral controls steering wheel	No			Erase Fault Code		Y		
C4 CACTUS (F3)		Controls on the steering wheel / integral controls steering wheel	No			Live Data		Y		
C4 CACTUS (F3)		Controls on the steering wheel / integral controls steering wheel	No			Actuation Test		Y		
C4 CACTUS (F3)		Voltage retaining device	DMTC			Read ECU Information		Y		
C4 CACTUS (F3)		Voltage retaining device	DMTR			Read ECU Information		Y		
C4 CACTUS (F3)		Voltage retaining device	DMTR			Read Fault Code		Y		
C4 CACTUS (F3)		Voltage retaining device	DMTR			Erase Fault Code		Y		
C4 CACTUS (F3)		Voltage retaining device	DMTR_DTC3B			Read ECU Information		Y		
C4 CACTUS (F3)		Voltage retaining device	DMTR_DTC3B			Read Fault Code		Y		
C4 CACTUS (F3)		Voltage retaining device	DMTR_DTC3B			Erase Fault Code		Y		
C4 CACTUS (F3)		Parking assistance	4 parking assistance sensors			Read ECU Information		Y		
C4 CACTUS (F3)		Parking assistance	4 parking assistance sensors			Read Fault Code		Y		
C4 CACTUS (F3)		Parking assistance	4 parking assistance sensors			Erase Fault Code		Y		
C4 CACTUS (F3)		Parking assistance	4 parking assistance sensors			Live Data		Y		
C4 CACTUS (F3)		Parking assistance	4 parking assistance sensors			Special Function	Configuration	Y		
C4 CACTUS (F3)		Parking assistance	4 parking assistance sensors			Special Function	Pack Repair	Y		
C4 CACTUS (F3)		Parking assistance	8 parking assistance sensors			Read ECU Information		Y		
C4 CACTUS (F3)		Parking assistance	8 parking assistance sensors			Read Fault Code		Y		
C4 CACTUS (F3)		Parking assistance	8 parking assistance sensors			Erase Fault Code		Y		
C4 CACTUS (F3)		Parking assistance	8 parking assistance sensors			Live Data		Y		
C4 CACTUS (F3)		Parking assistance	8 parking assistance sensors			Special Function	Configuration	Y		
C4 CACTUS (F3)		Parking assistance	8 parking assistance sensors			Special Function	Pack Repair	Y		
C4 CACTUS (F3)		Parking assistance	10 parking assistance sensors			Read ECU Information		Y		
C4 CACTUS (F3)		Parking assistance	10 parking assistance sensors			Read Fault Code		Y		
C4 CACTUS (F3)		Parking assistance	10 parking assistance sensors			Erase Fault Code		Y		
C4 CACTUS (F3)		Parking assistance	10 parking assistance sensors			Live Data		Y		
C4 CACTUS (F3)		Parking assistance	10 parking assistance sensors			Special Function	Configuration	Y		
C4 CACTUS (F3)		Parking assistance	10 parking assistance sensors			Special Function	Pack Repair	Y		
C4 CACTUS (F3)		Diesel additive pump	PMBDGO			Read ECU Information		Y		
C4 CACTUS (F3)		Diesel additive pump	PMBDGO			Read Fault Code		Y		
C4 CACTUS (F3)		Diesel additive pump	PMBDGO			Erase Fault Code		Y		
C4 CACTUS (F3)		Diesel additive pump	PMBDGO			Live Data		Y		
C4 CACTUS (F3)		Diesel additive pump	PMBDGO			Actuation Test		Y		
C4 CACTUS (F3)		Diesel additive pump	PMBDGO			Special Function	Configuration	Y		
C4 CACTUS (F3)		Diesel additive pump	PMBDGO			Special Function	Pack Repair	Y		
C4 CACTUS (F3)		Diesel additive pump	PMBDGO_TI_E6			Read ECU Information		Y		
C4 CACTUS (F3)		Diesel additive pump	PMBDGO_TI_E6			Read Fault Code		Y		
C4 CACTUS (F3)		Diesel additive pump	PMBDGO_TI_E6			Erase Fault Code		Y		
C4 CACTUS (F3)		Diesel additive pump	PMBDGO_TI_E6			Live Data		Y		
C4 CACTUS (F3)		Diesel additive pump	PMBDGO_TI_E6			Special Function	Configuration	Y		
C4 CACTUS (F3)		Telematic unit (BTX) or audio-navigation				Read ECU Information		Y		
C4 CACTUS (F3)		Telematic unit (BTX) or audio-navigation				Read Fault Code		Y		
C4 CACTUS (F3)		Telematic unit (BTX) or audio-navigation				Erase Fault Code		Y		
C4 CACTUS (F3)		Telematic unit (BTX) or audio-navigation				Live Data		Y		
C4 CACTUS (F3)		Telematic unit (BTX) or audio-navigation				Actuation Test		Y		
C4 CACTUS (F3)		Telematic unit (BTX) or audio-navigation				Special Function	Configuration	Y		
C4 CACTUS (F3)		Instrument panel				Read ECU Information		Y		
C4 CACTUS (F3)		Instrument panel				Read Fault Code		Y		
C4 CACTUS (F3)		Instrument panel				Erase Fault Code		Y		
C4 CACTUS (F3)		Instrument panel				Live Data		Y		
C4 CACTUS (F3)		Instrument panel				Actuation Test		Y		
C4 CACTUS (F3)		Touch screen				Read ECU Information		Y		
C4 CACTUS (F3)		Touch screen				Read Fault Code		Y		
C4 CACTUS (F3)		Touch screen				Erase Fault Code		Y		
C4 CACTUS (F3)		Touch screen				Live Data		Y		
C4 CACTUS (F3)		Touch screen				Actuation Test		Y		
C4 CACTUS (F3)		Touch screen				Special Function	Configuration	Y		
C4 CACTUS (F3)		Multiplexed control panel	Telematics unit SMEG*			Read ECU Information		Y		
C4 CACTUS (F3)		Multiplexed control panel	Telematics unit SMEG*			Read Fault Code		Y		
C4 CACTUS (F3)		Multiplexed control panel	Telematics unit SMEG*			Erase Fault Code		Y		
C4 CACTUS (F3)		Multiplexed control panel	Telematics unit SMEG*			Live Data		Y		
C4 CACTUS (F3)		Multiplexed control panel	Telematics unit SMEG*			Actuation Test		Y		
C4 CACTUS (F3)		Rain and light sensor				Read ECU Information		Y		
C4 CACTUS (F3)		Rain and light sensor				Read Fault Code		Y		
C4 CACTUS (F3)		Rain and light sensor				Erase Fault Code		Y		
C4 CACTUS (F3)		Rain and light sensor				Live Data		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function reasons	Add (Y/N)	Verification (Y/N)	Remarks
C4 CACTUS (F3)		Rain and light sensor				Special Function	Pack Repair	Y		
C4 CACTUS (F3)		Controls under the steering wheel				Read ECU Information		Y		
C4 CACTUS (F3)		Controls under the steering wheel				Read Fault Code		Y		
C4 CACTUS (F3)		Controls under the steering wheel				Erase Fault Code		Y		
C4 CACTUS (F3)		Controls under the steering wheel				Live Data		Y		
C4 CACTUS (F3)		Controls under the steering wheel				Actuation Test		Y		
C4 CACTUS (F3)		External CD player				Read ECU Information		Y		
C4 CACTUS (F3)		External CD player				Read Fault Code		Y		
C4 CACTUS (F3)		External CD player				Erase Fault Code		Y		
C4 CACTUS (F3)		External CD player				Live Data		Y		
C4 CACTUS (F3)		External CD player				Actuation Test		Y		
C4 CACTUS (F3)		External CD player				Special Function	Configuration	Y		
C4 CACTUS (F3)		External CD player				Special Function	Pack Repair	Y		
C4 QUATRE		Built-in Systems Interface				Read ECU Information		Y		
C4 QUATRE		Built-in Systems Interface				Read Fault Code		Y		
C4 QUATRE		Built-in Systems Interface				Erase Fault Code		Y		
C4 QUATRE		Built-in Systems Interface				Live Data		Y		
C4 QUATRE		Built-in Systems Interface				Actuation Test		Y		
C4 QUATRE		Built-in Systems Interface				Special Function	Maintenance-BSI operating mode	Y		
C4 QUATRE		Built-in Systems Interface				Special Function	Learning	Y		
C4 QUATRE		Engine management ECU	VD46			Read ECU Information		Y		
C4 QUATRE		Engine management ECU	VD46			Read Fault Code		Y		
C4 QUATRE		Engine management ECU	VD46			Erase Fault Code		Y		
C4 QUATRE		Engine management ECU	VD46			Live Data		Y		
C4 QUATRE		Engine management ECU	VD46			Actuation Test		Y		
C4 QUATRE		Engine management ECU	VD46			Special Function	Pack Repair	Y		
C4 QUATRE		Engine management ECU	MED17_4_4			Read ECU Information		Y		
C4 QUATRE		Engine management ECU	MED17_4_4			Read Fault Code		Y		
C4 QUATRE		Engine management ECU	MED17_4_4			Erase Fault Code		Y		
C4 QUATRE		Engine management ECU	MED17_4_4			Live Data		Y		
C4 QUATRE		Engine management ECU	MED17_4_4			Actuation Test		Y		
C4 QUATRE		Engine management ECU	MED17_4_4			Special Function	Pack reparation	Y		
C4 QUATRE		Engine management ECU	V46_S2			Read ECU Information		Y		
C4 QUATRE		Engine management ECU	V46_S2			Read Fault Code		Y		
C4 QUATRE		Engine management ECU	V46_S2			Erase Fault Code		Y		
C4 QUATRE		Engine management ECU	V46_S2			Live Data		Y		
C4 QUATRE		Engine management ECU	V46_S2			Actuation Test		Y		
C4 QUATRE		Engine management ECU	V46_S2			Special Function	Initializing the autodiagnostics	Y		
C4 QUATRE		Engine management ECU	V46_S2			Special Function	Replacement parts	Y		
C4 QUATRE		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)				Read ECU Information		Y		
C4 QUATRE		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)				Read Fault Code		Y		
C4 QUATRE		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)				Erase Fault Code		Y		
C4 QUATRE		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)				Live Data		Y		
C4 QUATRE		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)				Actuation Test		Y		
C4 QUATRE		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)				Special Function	Pack Repair	Y		
C4 QUATRE		Automatic gearbox or controlled manual gearbox				Read ECU Information		Y		
C4 QUATRE		Automatic gearbox or controlled manual gearbox				Read Fault Code		Y		
C4 QUATRE		Automatic gearbox or controlled manual gearbox				Erase Fault Code		Y		
C4 QUATRE		Automatic gearbox or controlled manual gearbox				Live Data		Y		
C4 QUATRE		Automatic gearbox or controlled manual gearbox				Actuation Test		Y		
C4 QUATRE		Automatic gearbox or controlled manual gearbox				Special Function	Pack Repair	Y		
C4 QUATRE		Air bags and pre-tensioners control unit				Read ECU Information		Y		
C4 QUATRE		Air bags and pre-tensioners control unit				Read Fault Code		Y		
C4 QUATRE		Air bags and pre-tensioners control unit				Erase Fault Code		Y		
C4 QUATRE		Air bags and pre-tensioners control unit				Live Data		Y		
C4 QUATRE		Air bags and pre-tensioners control unit				Special Function	Pack Repair	Y		
C4 QUATRE		Control on the steering wheel / integral controls steering wheel				Read ECU Information		Y		
C4 QUATRE		Control on the steering wheel / integral controls steering wheel				Read Fault Code		Y		
C4 QUATRE		Control on the steering wheel / integral controls steering wheel				Erase Fault Code		Y		
C4 QUATRE		Control on the steering wheel / integral controls steering wheel				Live Data		Y		
C4 QUATRE		Electric steering lock				Read ECU Information		Y		
C4 QUATRE		Electric steering lock				Read Fault Code		Y		
C4 QUATRE		Electric steering lock				Erase Fault Code		Y		
C4 QUATRE		Electric steering lock				Live Data		Y		
C4 QUATRE		Electric steering lock				Actuation Test		Y		
C4 QUATRE		Electronic key reader				Read ECU Information		Y		
C4 QUATRE		Electronic key reader				Read Fault Code		Y		
C4 QUATRE		Electronic key reader				Erase Fault Code		Y		
C4 QUATRE		Electronic key reader				Live Data		Y		
C4 QUATRE		Rain and light sensor				Read ECU Information		Y		
C4 QUATRE		Rain and light sensor				Read Fault Code		Y		
C4 QUATRE		Rain and light sensor				Erase Fault Code		Y		
C4 QUATRE		Rain and light sensor				Live Data		Y		
C4 QUATRE		Rain and light sensor				Special Function	Pack Repair	Y		
C4 QUATRE		Controls under the steering wheel	Yes			Read ECU Information		Y		
C4 QUATRE		Controls under the steering wheel	Yes			Read Fault Code		Y		
C4 QUATRE		Controls under the steering wheel	Yes			Erase Fault Code		Y		
C4 QUATRE		Controls under the steering wheel	Yes			Live Data		Y		
C4 QUATRE		Controls under the steering wheel	Yes			Actuation Test		Y		
C4 QUATRE		Controls under the steering wheel	Yes			Special Function	Pack Repair	Y		
C4 QUATRE		Controls under the steering wheel	No			Read ECU Information		Y		
C4 QUATRE		Controls under the steering wheel	No			Read Fault Code		Y		
C4 QUATRE		Controls under the steering wheel	No			Erase Fault Code		Y		
C4 QUATRE		Controls under the steering wheel	No			Live Data		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
C4 QUATRE		Controls under the steering wheel	No			Actuation Test		Y		
C4 QUATRE		Air conditioning	RFPA TWO ZONE			Read ECU Information		Y		
C4 QUATRE		Air conditioning	RFPA TWO ZONE			Read Fault Code		Y		
C4 QUATRE		Air conditioning	RFPA TWO ZONE			Erase Fault Code		Y		
C4 QUATRE		Air conditioning	RFPA TWO ZONE			Live Data		Y		
C4 QUATRE		Air conditioning	RFPA TWO ZONE			Actuation Test		Y		
C4 QUATRE		Air conditioning	RFPA TWO ZONE			Special Function	Pack Repair	Y		
C4 QUATRE		Battery charge status unit				Read ECU Information		Y		
C4 QUATRE		Battery charge status unit				Read Fault Code		Y		
C4 QUATRE		Battery charge status unit				Erase Fault Code		Y		
C4 QUATRE		Battery charge status unit				Live Data		Y		
C4 QUATRE		Battery charge status unit				Special Function	Configuration	Y		
C4 QUATRE		Battery charge status unit				Special Function	Pack Repair	Y		
C4 QUATRE		Telematic unit (OTA) or audio-navigation	MEN			Read ECU Information		Y		
C4 QUATRE		Telematic unit (OTA) or audio-navigation	MEN			Read Fault Code		Y		
C4 QUATRE		Telematic unit (OTA) or audio-navigation	MEN			Erase Fault Code		Y		
C4 QUATRE		Telematic unit (OTA) or audio-navigation	MEN			Live Data		Y		
C4 QUATRE		Telematic unit (OTA) or audio-navigation	MEN			Actuation Test		Y		
C4 QUATRE		Telematic unit (OTA) or audio-navigation	MEN			Special Function	Configuration	Y		
C4 QUATRE		Telematic unit (OTA) or audio-navigation	NAC			Read ECU Information		Y		
C4 QUATRE		Telematic unit (OTA) or audio-navigation	NAC			Read Fault Code		Y		
C4 QUATRE		Telematic unit (OTA) or audio-navigation	NAC			Erase Fault Code		Y		
C4 QUATRE		Telematic unit (OTA) or audio-navigation	NAC			Live Data		Y		
C4 QUATRE		Telematic unit (OTA) or audio-navigation	NAC			Actuation Test		Y		
C4 QUATRE		Multiplexed control panel				Read ECU Information		Y		
C4 QUATRE		Multiplexed control panel				Read Fault Code		Y		
C4 QUATRE		Multiplexed control panel				Erase Fault Code		Y		
C4 QUATRE		Multiplexed control panel				Live Data		Y		
C4 QUATRE		Multiplexed control panel				Actuation Test		Y		
C4 QUATRE		Parking assistance				Read ECU Information		Y		
C4 QUATRE		Parking assistance				Read Fault Code		Y		
C4 QUATRE		Parking assistance				Erase Fault Code		Y		
C4 QUATRE		Parking assistance				Live Data		Y		
C4 QUATRE		Parking assistance				Actuation Test		Y		
C4 QUATRE		Parking assistance				Special Function	Configuration	Y		
C4 QUATRE		Parking assistance				Special Function	Pack Repair	Y		
C4 QUATRE		Service module / Independent telematic unit				Read ECU Information		Y		
C4 QUATRE		Service module / Independent telematic unit				Read Fault Code		Y		
C4 QUATRE		Service module / Independent telematic unit				Erase Fault Code		Y		
C4 QUATRE		Service module / Independent telematic unit				Live Data		Y		
C4 QUATRE		Service module / Independent telematic unit				Actuation Test		Y		
C4 QUATRE		Service module / Independent telematic unit				Special Function	Configuration	Y		
C4 QUATRE		Service module / Independent telematic unit				Special Function	Pack Repair	Y		
C4 QUATRE		Power steering				Read ECU Information		Y		
C4 QUATRE		Power steering				Read Fault Code		Y		
C4 QUATRE		Power steering				Erase Fault Code		Y		
C4 QUATRE		Power steering				Live Data		Y		
C4 QUATRE		Power steering				Actuation Test		Y		
C4 QUATRE		Hands-free control unit				Read ECU Information		Y		
C4 QUATRE		Hands-free control unit				Read Fault Code		Y		
C4 QUATRE		Hands-free control unit				Erase Fault Code		Y		
C4 QUATRE		Hands-free control unit				Live Data		Y		
C4 QUATRE		Hands-free control unit				Special Function	Configuration	Y		
C4 QUATRE		Hands-free control unit				Special Function	Pack Repair	Y		
C4 QUATRE		Voltage retaining device	DMTR			Read ECU Information		Y		
C4 QUATRE		Voltage retaining device	DMTR			Read Fault Code		Y		
C4 QUATRE		Voltage retaining device	DMTR			Erase Fault Code		Y		
C4 QUATRE		Voltage retaining device	DMTR, DFC3B			Read ECU Information		Y		
C4 QUATRE		Voltage retaining device	DMTR, DFC3B			Read Fault Code		Y		
C4 QUATRE		Voltage retaining device	DMTR, DFC3B			Erase Fault Code		Y		
C4 QUATRE		Multifunction video recording camera				Read ECU Information		Y		
C4 QUATRE		Multifunction video recording camera				Read Fault Code		Y		
C4 QUATRE		Multifunction video recording camera				Erase Fault Code		Y		
C4 QUATRE		Multifunction video recording camera				Live Data		Y		
C4 QUATRE		Multifunction video recording camera				Actuation Test		Y		
C4(C41)		Built-in systems interface				Read ECU Information		Y		
C4(C41)		Built-in systems interface				Read Fault Code		Y		
C4(C41)		Built-in systems interface				Erase Fault Code		Y		
C4(C41)		Built-in systems interface				Special Function	Maintenance-BSI operating mode	Y		
C4(C41)		Engine management ECU	CMU_MU1CS003			Read ECU Information		Y		
C4(C41)		Engine management ECU	CMU_MU1CS003			Read Fault Code		Y		
C4(C41)		Engine management ECU	CMU_MU1CS003			Erase Fault Code		Y		
C4(C41)		Engine management ECU	CMU_MU1CS003			Live Data		Y		
C4(C41)		Engine management ECU	CMU_MU1CS003			Actuation Test		Y		
C4(C41)		Engine management ECU	CMU_MU1CS003			Special Function	Pack repair	Y		
C4(C41)		Engine management ECU	CMU_V106			Read ECU Information		Y		
C4(C41)		Engine management ECU	CMU_V106			Read Fault Code		Y		
C4(C41)		Engine management ECU	CMU_V106			Erase Fault Code		Y		
C4(C41)		Engine management ECU	CMU_V106			Live Data		Y		
C4(C41)		Engine management ECU	CMU_V106			Actuation Test		Y		
C4(C41)		Engine management ECU	CMU_V106			Special Function	Pack repair	Y		
C4(C41)		Engine management ECU	CMU_MU1CS032			Read ECU Information		Y		
C4(C41)		Engine management ECU	CMU_MU1CS032			Read Fault Code		Y		
C4(C41)		Engine management ECU	CMU_MU1CS032			Erase Fault Code		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function reasons	Add (Y/N)	Verification (Y/N)	Remarks
C4(C4)		Engine management ECU	CMR_M61CS032			Live Data		Y		
C4(C4)		Engine management ECU	CMR_M61CS032			Actuation Test		Y		
C4(C4)		Engine management ECU	CMR_M61CS032			Special Function	Pack repair	Y		
C4(C4)		Urea ECU				Read ECU Information		Y		
C4(C4)		Electric machine management ECU				Read ECU Information		Y		
C4(C4)		Electric machine management ECU				Read Fault Code		Y		
C4(C4)		Electric machine management ECU				Erase Fault Code		Y		
C4(C4)		Electric machine management ECU				Live Data		Y		
C4(C4)		Traction battery ECU				Read ECU Information		Y		
C4(C4)		Traction battery ECU				Read Fault Code		Y		
C4(C4)		Traction battery ECU				Erase Fault Code		Y		
C4(C4)		Traction battery ECU				Live Data		Y		
C4(C4)		Traction battery ECU				Special Function	Pack repair	Y		
C4(C4)		On-board charger / direct voltage transformer assembly				Read ECU Information		Y		
C4(C4)		On-board charger / direct voltage transformer assembly				Read Fault Code		Y		
C4(C4)		On-board charger / direct voltage transformer assembly				Erase Fault Code		Y		
C4(C4)		On-board charger / direct voltage transformer assembly				Live Data		Y		
C4(C4)		On-board charger / direct voltage transformer assembly				Actuation Test		Y		
C4(C4)		Electric / hybrid drive train supervisor ECU				Read ECU Information		Y		
C4(C4)		Electric / hybrid drive train supervisor ECU				Read Fault Code		Y		
C4(C4)		Electric / hybrid drive train supervisor ECU				Erase Fault Code		Y		
C4(C4)		Electric / hybrid drive train supervisor ECU				Live Data		Y		
C4(C4)		Electric / hybrid drive train supervisor ECU				Actuation Test		Y		
C4(C4)		Ancillaries battery switch				Read ECU Information		Y		
C4(C4)		Ancillaries battery switch				Read Fault Code		Y		
C4(C4)		Ancillaries battery switch				Erase Fault Code		Y		
C4(C4)		Ancillaries battery switch				Live Data		Y		
C4(C4)		Automatic or piloted manual gearbox				Read ECU Information		Y		
C4(C4)		Automatic or piloted manual gearbox				Read Fault Code		Y		
C4(C4)		Automatic or piloted manual gearbox				Erase Fault Code		Y		
C4(C4)		Automatic or piloted manual gearbox				Live Data		Y		
C4(C4)		Automatic or piloted manual gearbox				Actuation Test		Y		
C4(C4)		Sequential gear lever				Read ECU Information		Y		
C4(C4)		Sequential gear lever				Read Fault Code		Y		
C4(C4)		Sequential gear lever				Erase Fault Code		Y		
C4(C4)		Sequential gear lever				Live Data		Y		
C4(C4)		Sequential gear lever				Actuation Test		Y		
C4(C4)		Power steering				Read ECU Information		Y		
C4(C4)		Power steering				Read Fault Code		Y		
C4(C4)		Power steering				Erase Fault Code		Y		
C4(C4)		Power steering				Live Data		Y		
C4(C4)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP/M100_HDS	NO		Read ECU Information		Y		
C4(C4)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP/M100_HDS	NO		Read Fault Code		Y		
C4(C4)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP/M100_HDS	NO		Erase Fault Code		Y		
C4(C4)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP/M100_HDS	NO		Live Data		Y		
C4(C4)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP/M100_HDS	NO		Actuation Test		Y		
C4(C4)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP/M100_HDS	NO		Special Function	Pack repair	Y		
C4(C4)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP/M100_HDS	YES		Read ECU Information		Y		
C4(C4)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP/M100_HDS	YES		Read Fault Code		Y		
C4(C4)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP/M100_HDS	YES		Erase Fault Code		Y		
C4(C4)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP/M100_HDS	YES		Live Data		Y		
C4(C4)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP/M100_HDS	YES		Actuation Test		Y		
C4(C4)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP/M100_HDS	YES		Special Function	Pack repair	Y		
C4(C4)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP90	NO		Read ECU Information		Y		
C4(C4)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP90	NO		Read Fault Code		Y		
C4(C4)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP90	NO		Erase Fault Code		Y		
C4(C4)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP90	NO		Live Data		Y		
C4(C4)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP90	NO		Actuation Test		Y		
C4(C4)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP90	NO		Special Function	Pack repair	Y		
C4(C4)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP90	YES		Read ECU Information		Y		
C4(C4)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP90	YES		Read Fault Code		Y		
C4(C4)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP90	YES		Live Data		Y		
C4(C4)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP90	YES		Actuation Test		Y		
C4(C4)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP90	YES		Special Function	Pack repair	Y		
C4(C4)		Park finger locking actuator				Read ECU Information		Y		
C4(C4)		Park finger locking actuator				Read Fault Code		Y		
C4(C4)		Park finger locking actuator				Erase Fault Code		Y		
C4(C4)		Park finger locking actuator				Live Data		Y		
C4(C4)		Pedestrian horn				Read ECU Information		Y		
C4(C4)		Pedestrian horn				Read Fault Code		Y		
C4(C4)		Pedestrian horn				Erase Fault Code		Y		
C4(C4)		Trailer relay unit	BSC_2010_BQ			Read ECU Information		Y		
C4(C4)		Trailer relay unit	BSC_2010_BQ			Read Fault Code		Y		
C4(C4)		Trailer relay unit	BSC_2010_BQ			Erase Fault Code		Y		
C4(C4)		Trailer relay unit	BSC_2010_BQ			Live Data		Y		
C4(C4)		Trailer relay unit	BSC_2010_BQ			Actuation Test		Y		
C4(C4)		Trailer relay unit	TIM			Read ECU Information		Y		
C4(C4)		Trailer relay unit	TIM			Read Fault Code		Y		
C4(C4)		Trailer relay unit	TIM			Erase Fault Code		Y		
C4(C4)		Trailer relay unit	TIM			Live Data		Y		
C4(C4)		Trailer relay unit	TIM			Actuation Test		Y		
C4(C4)		Battery charge status control unit				Read ECU Information		Y		
C4(C4)		Battery charge status control unit				Read Fault Code		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for Citroen, NO stands for other ones)	Subsystem (YES stands for Citroen, NO stands for other ones)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
C4(C4)		Battery charge status control unit				Erase Fault Code		Y		
C4(C4)		Battery charge status control unit				Live Data		Y		
C4(C4)		Hands-free unit				Read ECU Information		Y		
C4(C4)		Hands-free unit				Read Fault Code		Y		
C4(C4)		Hands-free unit				Erase Fault Code		Y		
C4(C4)		Hands-free unit				Live Data		Y		
C4(C4)		Hands-free unit				Actuation Test		Y		
C4(C4)		Instrument panel	COMBINE_USD_EV	NO		Read ECU Information		Y		
C4(C4)		Instrument panel	COMBINE_USD_EV	NO		Read Fault Code		Y		
C4(C4)		Instrument panel	COMBINE_USD_EV	NO		Erase Fault Code		Y		
C4(C4)		Instrument panel	COMBINE_USD_EV	NO		Live Data		Y		
C4(C4)		Instrument panel	COMBINE_USD_EV	NO		Actuation Test		Y		
C4(C4)		Instrument panel	COMBINE_USD_EV	YES		Read ECU Information		Y		
C4(C4)		Instrument panel	COMBINE_USD_EV	YES		Read Fault Code		Y		
C4(C4)		Instrument panel	COMBINE_USD_EV	YES		Erase Fault Code		Y		
C4(C4)		Instrument panel	COMBINE_USD_EV	YES		Live Data		Y		
C4(C4)		Instrument panel	COMBINE_USD_EV	YES		Actuation Test		Y		
C4(C4)		Instrument panel	OMB_LCD_ENTRY			Read ECU Information		Y		
C4(C4)		Instrument panel	OMB_LCD_ENTRY			Read Fault Code		Y		
C4(C4)		Instrument panel	OMB_LCD_ENTRY			Erase Fault Code		Y		
C4(C4)		Head Up Display				Read ECU Information		Y		
C4(C4)		Head Up Display				Read Fault Code		Y		
C4(C4)		Head Up Display				Erase Fault Code		Y		
C4(C4)		Head Up Display				Live Data		Y		
C4(C4)		Head Up Display				Actuation Test		Y		
C4(C4)		Controls under the steering wheel				Read ECU Information		Y		
C4(C4)		Controls under the steering wheel				Read Fault Code		Y		
C4(C4)		Controls under the steering wheel				Erase Fault Code		Y		
C4(C4)		Controls under the steering wheel				Live Data		Y		
C4(C4)		Controls under the steering wheel				Actuation Test		Y		
C4(C4)		Controls on the steering wheel / integral controls steering wheel				Read ECU Information		Y		
C4(C4)		Controls on the steering wheel / integral controls steering wheel				Read Fault Code		Y		
C4(C4)		Controls on the steering wheel / integral controls steering wheel				Erase Fault Code		Y		
C4(C4)		Controls on the steering wheel / integral controls steering wheel				Live Data		Y		
C4(C4)		Steering wheel ECU (SWE)				Read ECU Information		Y		
C4(C4)		Steering wheel ECU (SWE)				Read Fault Code		Y		
C4(C4)		Steering wheel ECU (SWE)				Erase Fault Code		Y		
C4(C4)		Steering wheel ECU (SWE)				Live Data		Y		
C4(C4)		Multifunction control panel				Read ECU Information		Y		
C4(C4)		Multifunction control panel				Read Fault Code		Y		
C4(C4)		Multifunction control panel				Erase Fault Code		Y		
C4(C4)		Multifunction control panel				Live Data		Y		
C4(C4)		Multifunction control panel				Actuation Test		Y		
C4(C4)		Airbags and pretensioners ECU				Read ECU Information		Y		
C4(C4)		Airbags and pretensioners ECU				Read Fault Code		Y		
C4(C4)		Airbags and pretensioners ECU				Erase Fault Code		Y		
C4(C4)		Airbags and pretensioners ECU				Live Data		Y		
C4(C4)		Seat belt not fastened warning lights unit				Read ECU Information		Y		
C4(C4)		Rain and brightness sensor				Read ECU Information		Y		
C4(C4)		Rain and brightness sensor				Read Fault Code		Y		
C4(C4)		Rain and brightness sensor				Erase Fault Code		Y		
C4(C4)		Rain and brightness sensor				Live Data		Y		
C4(C4)		Panoramic visual assistance ECU				Read ECU Information		Y		
C4(C4)		Panoramic visual assistance ECU				Read Fault Code		Y		
C4(C4)		Panoramic visual assistance ECU				Erase Fault Code		Y		
C4(C4)		Panoramic visual assistance ECU				Live Data		Y		
C4(C4)		Panoramic visual assistance ECU				Actuation Test		Y		
C4(C4)		Multifunction video camera (CMF)				Read ECU Information		Y		
C4(C4)		Multifunction video camera (CMF)				Read Fault Code		Y		
C4(C4)		Multifunction video camera (CMF)				Erase Fault Code		Y		
C4(C4)		Multifunction video camera (CMF)				Live Data		Y		
C4(C4)		Multifunction video camera (CMF)				Actuation Test		Y		
C4(C4)		Vehicle Distance Assistance				Read ECU Information		Y		
C4(C4)		Vehicle Distance Assistance				Read Fault Code		Y		
C4(C4)		Vehicle Distance Assistance				Erase Fault Code		Y		
C4(C4)		Vehicle Distance Assistance				Live Data		Y		
C4(C4)		Vehicle Distance Assistance				Actuation Test		Y		
C4(C4)		Parking assistance				Read ECU Information		Y		
C4(C4)		Parking assistance				Read Fault Code		Y		
C4(C4)		Parking assistance				Erase Fault Code		Y		
C4(C4)		Parking assistance				Live Data		Y		
C4(C4)		Parking assistance				Actuation Test		Y		
C4(C4)		Touch screen				Read ECU Information		Y		
C4(C4)		Touch screen				Read Fault Code		Y		
C4(C4)		Touch screen				Erase Fault Code		Y		
C4(C4)		Touch screen				Live Data		Y		
C4(C4)		Touch screen				Actuation Test		Y		
C4(C4)		Audio-navigation / connected audio system	NAC			Read ECU Information		Y		
C4(C4)		Audio-navigation / connected audio system	NAC			Read Fault Code		Y		
C4(C4)		Audio-navigation / connected audio system	NAC			Erase Fault Code		Y		
C4(C4)		Audio-navigation / connected audio system	NAC			Live Data		Y		
C4(C4)		Audio-navigation / connected audio system	NAC			Actuation Test		Y		
C4(C4)		Audio-navigation / connected audio system	RC			Read ECU Information		Y		
C4(C4)		Audio-navigation / connected audio system	RC			Read Fault Code		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
C4(C41)		Audio/navigation / connected audio system	BCE			Erase Fault Code		Y		
C4(C41)		Audio/navigation / connected audio system	BCE			Live Data		Y		
C4(C41)		Audio/navigation / connected audio system	BCE			Actuation Test		Y		
C4(C41)		Audio/navigation / connected audio system	A10_IDS			Read ECU Information		Y		
C4(C41)		Audio/navigation / connected audio system	A10_IDS			Read Fault Code		Y		
C4(C41)		Audio/navigation / connected audio system	A10_IDS			Erase Fault Code		Y		
C4(C41)		Audio/navigation / connected audio system	A10_IDS			Live Data		Y		
C4(C41)		Audio/navigation / connected audio system	A10_IDS			Actuation Test		Y		
C4(C41)		Audio/navigation system / connected audio system controls				Read ECU Information		Y		
C4(C41)		Audio/navigation system / connected audio system controls				Read Fault Code		Y		
C4(C41)		Service module / Independent telematic unit	BTA_3R			Read ECU Information		Y		
C4(C41)		Service module / Independent telematic unit	BTA_3R			Read Fault Code		Y		
C4(C41)		Service module / Independent telematic unit	BTA_3R			Erase Fault Code		Y		
C4(C41)		Service module / Independent telematic unit	BTA_3R			Live Data		Y		
C4(C41)		Service module / Independent telematic unit	BTA_3R			Actuation Test		Y		
C4(C41)		Service module / Independent telematic unit	BTA_3S			Read ECU Information		Y		
C4(C41)		Service module / Independent telematic unit	BTA_3S			Read Fault Code		Y		
C4(C41)		Service module / Independent telematic unit	BTA_3S			Erase Fault Code		Y		
C4(C41)		Service module / Independent telematic unit	BTA_3S			Live Data		Y		
C4(C41)		Service module / Independent telematic unit	BTA_3S			Actuation Test		Y		
C4(C41)		Anti-theft alarm				Read ECU Information		Y		
C4(C41)		Anti-theft alarm				Read Fault Code		Y		
C4(C41)		Anti-theft alarm				Erase Fault Code		Y		
C4(C41)		Anti-theft alarm				Live Data		Y		
C4(C41)		Intrusion alarm siren				Read ECU Information		Y		
C4(C41)		Intrusion alarm siren				Read Fault Code		Y		
C4(C41)		Intrusion alarm siren				Erase Fault Code		Y		
C4(C41)		Intrusion alarm siren				Live Data		Y		
C4(C41)		Intrusion alarm siren				Actuation Test		Y		
C4(C41)		Driver's door module				Read ECU Information		Y		
C4(C41)		Driver's door module				Read Fault Code		Y		
C4(C41)		Driver's door module				Erase Fault Code		Y		
C4(C41)		Driver's door module				Live Data		Y		
C4(C41)		Sunroof				Read ECU Information		Y		
C4(C41)		Sunroof				Read Fault Code		Y		
C4(C41)		Sunroof				Erase Fault Code		Y		
C4(C41)		Sunroof				Live Data		Y		
C4(C41)		Air conditioning				Read ECU Information		Y		
C4(C41)		Air conditioning				Read Fault Code		Y		
C4(C41)		Air conditioning				Erase Fault Code		Y		
C4(C41)		Air conditioning				Live Data		Y		
C4(C41)		Air conditioning				Actuation Test		Y		
C4(C41)		Air con compressor				Read ECU Information		Y		
C4(C41)		Air con compressor				Read Fault Code		Y		
C4(C41)		Air con compressor				Live Data		Y		
C4(C41)		Electric coolant heater				Read ECU Information		Y		
C4(C41)		Electric coolant heater				Read Fault Code		Y		
C4(C41)		Electric coolant heater				Live Data		Y		
C4(C41)		Electric coolant heater				Actuation Test		Y		
C4(C41)		Front left seat heated pads and ventilation regulation ECU				Read ECU Information		Y		
C4(C41)		Front left seat heated pads and ventilation regulation ECU				Read Fault Code		Y		
C4(C41)		Front left seat heated pads and ventilation regulation ECU				Live Data		Y		
C4(C41)		Front left seat heated pads and ventilation regulation ECU				Actuation Test		Y		
C4(C41)		Front right seat heated pads and ventilation regulation ECU				Read ECU Information		Y		
C4(C41)		Front right seat heated pads and ventilation regulation ECU				Read Fault Code		Y		
C4(C41)		Front right seat heated pads and ventilation regulation ECU				Live Data		Y		
C4(C41)		Front right seat heated pads and ventilation regulation ECU				Actuation Test		Y		
C4(C41)		Electric steering lock				Read ECU Information		Y		
C4(C41)		Electric steering lock				Read Fault Code		Y		
C4(C41)		Electric steering lock				Erase Fault Code		Y		
C4(C41)		Electric steering lock				Live Data		Y		
C5 (2001-2004)		Engine ECU	Petrol engine	2.0L BFN MM48P		Read ECU Information		Y		
C5 (2001-2004)		Engine ECU	Petrol engine	2.0L BFN MM48P		Read Fault Code		Y		
C5 (2001-2004)		Engine ECU	Petrol engine	2.0L BFN MM48P		Erase Fault Code		Y		
C5 (2001-2004)		Engine ECU	Petrol engine	2.0L BFN MM48P		Live Data		Y		
C5 (2001-2004)		Engine ECU	Petrol engine	2.0L BFN MM48P		Actuation Test		Y		
C5 (2001-2004)		Engine ECU	Petrol engine	2.0L BFN MM48P		Special Function	Initialisation of auto-adaptation	Y		
C5 (2001-2004)		Engine ECU	Petrol engine	2.0L BFN MM48P		Special Function	Matching	Y		
C5 (2001-2004)		Engine ECU	Petrol engine	BFN MM48P (SEPS)		Read ECU Information		Y		
C5 (2001-2004)		Engine ECU	Petrol engine	BFN MM48P (SEPS)		Read Fault Code		Y		
C5 (2001-2004)		Engine ECU	Petrol engine	BFN MM48P (SEPS)		Erase Fault Code		Y		
C5 (2001-2004)		Engine ECU	Petrol engine	BFN MM48P (SEPS)		Live Data		Y		
C5 (2001-2004)		Engine ECU	Petrol engine	BFN MM48P (SEPS)		Actuation Test		Y		
C5 (2001-2004)		Engine ECU	Petrol engine	BFN MM48P (SEPS)		Special Function	Initialisation of auto-adaptation	Y		
C5 (2001-2004)		Engine ECU	Petrol engine	BFN MM48P (SEPS)		Special Function	Matching	Y		
C5 (2001-2004)		Engine ECU	Petrol engine	BFN MM48P		Read ECU Information		Y		
C5 (2001-2004)		Engine ECU	Petrol engine	BFN MM48P		Read Fault Code		Y		
C5 (2001-2004)		Engine ECU	Petrol engine	BFN MM48P		Erase Fault Code		Y		
C5 (2001-2004)		Engine ECU	Petrol engine	BFN MM48P		Live Data		Y		
C5 (2001-2004)		Engine ECU	Petrol engine	BFN MM48P		Actuation Test		Y		
C5 (2001-2004)		Engine ECU	Petrol engine	BFN MM48P		Special Function	Initialisation of auto-adaptation	Y		
C5 (2001-2004)		Engine ECU	Petrol engine	BFN MM48P		Special Function	Matching	Y		
C5 (2001-2004)		Engine ECU	Petrol engine	3.0L XFX BOSCH ME746		Read ECU Information		Y		
C5 (2001-2004)		Engine ECU	Petrol engine	3.0L XFX BOSCH ME746		Read Fault Code		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Models	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function reasons	Add (Y/N)	Verification (Y/N)	Remarks
CS (2001-2004)		Engine ECU	Petrol engine	3.0L XFX BOSCH ME746		Erase Fault Code		Y		
CS (2001-2004)		Engine ECU	Petrol engine	3.0L XFX BOSCH ME746		Live Data		Y		
CS (2001-2004)		Engine ECU	Petrol engine	3.0L XFX BOSCH ME746		Actuation Test		Y		
CS (2001-2004)		Engine ECU	Petrol engine	3.0L XFX BOSCH ME746		Special Function	Initialisation of auto-adaptation	Y		
CS (2001-2004)		Engine ECU	Petrol engine	3.0L XFX BOSCH ME746		Special Function	Matching	Y		
CS (2001-2004)		Engine ECU	Petrol engine	1.8 6FZ SAGEM S2000P(SRPS)		Read ECU Information		Y		
CS (2001-2004)		Engine ECU	Petrol engine	1.8 6FZ SAGEM S2000P(SRPS)		Read Fault Code		Y		
CS (2001-2004)		Engine ECU	Petrol engine	1.8 6FZ SAGEM S2000P(SRPS)		Erase Fault Code		Y		
CS (2001-2004)		Engine ECU	Petrol engine	1.8 6FZ SAGEM S2000P(SRPS)		Live Data		Y		
CS (2001-2004)		Engine ECU	Petrol engine	1.8 6FZ SAGEM S2000P(SRPS)		Actuation Test		Y		
CS (2001-2004)		Engine ECU	Petrol engine	1.8 6FZ SAGEM S2000P(SRPS)		Special Function	Recentering of programming values	Y		
CS (2001-2004)		Engine ECU	Petrol engine	1.8 6FZ SAGEM S2000P		Read ECU Information		Y		
CS (2001-2004)		Engine ECU	Petrol engine	1.8 6FZ SAGEM S2000P		Read Fault Code		Y		
CS (2001-2004)		Engine ECU	Petrol engine	1.8 6FZ SAGEM S2000P		Erase Fault Code		Y		
CS (2001-2004)		Engine ECU	Petrol engine	1.8 6FZ SAGEM S2000P		Live Data		Y		
CS (2001-2004)		Engine ECU	Petrol engine	1.8 6FZ SAGEM S2000P		Actuation Test		Y		
CS (2001-2004)		Engine ECU	Petrol engine	1.8 6FZ SAGEM S2000P		Special Function	Recentering of programming values	Y		
CS (2001-2004)		Engine ECU	Petrol engine	1.8 6FZ SAGEM S2000P		Special Function	Programming / Matching	Y		
CS (2001-2004)		Engine ECU	Petrol engine	6FZ SAGEM S2000PM (GRPS)		Read ECU Information		Y		
CS (2001-2004)		Engine ECU	Petrol engine	6FZ SAGEM S2000PM (GRPS)		Read Fault Code		Y		
CS (2001-2004)		Engine ECU	Petrol engine	6FZ SAGEM S2000PM (GRPS)		Erase Fault Code		Y		
CS (2001-2004)		Engine ECU	Petrol engine	6FZ SAGEM S2000PM (GRPS)		Live Data		Y		
CS (2001-2004)		Engine ECU	Petrol engine	6FZ SAGEM S2000PM (GRPS)		Actuation Test		Y		
CS (2001-2004)		Engine ECU	Petrol engine	6FZ SAGEM S2000PM (GRPS)		Special Function	Matching	Y		
CS (2001-2004)		Engine ECU	Petrol engine	6FZ SAGEM S2000PM		Read ECU Information		Y		
CS (2001-2004)		Engine ECU	Petrol engine	6FZ SAGEM S2000PM		Read Fault Code		Y		
CS (2001-2004)		Engine ECU	Petrol engine	6FZ SAGEM S2000PM		Erase Fault Code		Y		
CS (2001-2004)		Engine ECU	Petrol engine	6FZ SAGEM S2000PM		Live Data		Y		
CS (2001-2004)		Engine ECU	Petrol engine	6FZ SAGEM S2000PM		Actuation Test		Y		
CS (2001-2004)		Engine ECU	Petrol engine	6FZ SAGEM S2000PM		Special Function	Matching	Y		
CS (2001-2004)		Engine ECU	Petrol engine	2.0L RLZ SIEMENS Sirius81		Read ECU Information		Y		
CS (2001-2004)		Engine ECU	Petrol engine	2.0L RLZ SIEMENS Sirius81		Read Fault Code		Y		
CS (2001-2004)		Engine ECU	Petrol engine	2.0L RLZ SIEMENS Sirius81		Erase Fault Code		Y		
CS (2001-2004)		Engine ECU	Petrol engine	2.0L RLZ SIEMENS Sirius81		Live Data		Y		
CS (2001-2004)		Engine ECU	Petrol engine	2.0L RLZ SIEMENS Sirius81		Actuation Test		Y		
CS (2001-2004)		Engine ECU	Petrol engine	2.0L RLZ SIEMENS Sirius81		Special Function	Initialisation of auto-adaptation	Y		
CS (2001-2004)		Engine ECU	Petrol engine	2.0L RLZ SIEMENS Sirius81		Special Function	Matching	Y		
CS (2001-2004)		Engine ECU	Diesel engine	2.2L 4HX BOSCH EDC15C2		Read ECU Information		Y		
CS (2001-2004)		Engine ECU	Diesel engine	2.2L 4HX BOSCH EDC15C2		Read Fault Code		Y		
CS (2001-2004)		Engine ECU	Diesel engine	2.2L 4HX BOSCH EDC15C2		Erase Fault Code		Y		
CS (2001-2004)		Engine ECU	Diesel engine	2.2L 4HX BOSCH EDC15C2		Live Data		Y		
CS (2001-2004)		Engine ECU	Diesel engine	2.2L 4HX BOSCH EDC15C2		Actuation Test		Y		
CS (2001-2004)		Engine ECU	Diesel engine	2.2L 4HX BOSCH EDC15C2		Special Function	After sales operation (particle emission filter)	Y		
CS (2001-2004)		Engine ECU	Diesel engine	2.0L RHY BOSCH EDC15C2		Read ECU Information		Y		
CS (2001-2004)		Engine ECU	Diesel engine	2.0L RHY BOSCH EDC15C2		Read Fault Code		Y		
CS (2001-2004)		Engine ECU	Diesel engine	2.0L RHY BOSCH EDC15C2		Erase Fault Code		Y		
CS (2001-2004)		Engine ECU	Diesel engine	2.0L RHY BOSCH EDC15C2		Live Data		Y		
CS (2001-2004)		Engine ECU	Diesel engine	2.0L RHY BOSCH EDC15C2		Actuation Test		Y		
CS (2001-2004)		Engine ECU	Diesel engine	2.0L RHY BOSCH EDC15C2		Special Function	After sales operation (particle emission filter)	Y		
CS (2001-2004)		Engine ECU	Diesel engine	2.0L RHZ BOSCH EDC15C2		Read ECU Information		Y		
CS (2001-2004)		Engine ECU	Diesel engine	2.0L RHZ BOSCH EDC15C2		Read Fault Code		Y		
CS (2001-2004)		Engine ECU	Diesel engine	2.0L RHZ BOSCH EDC15C2		Live Data		Y		
CS (2001-2004)		Engine ECU	Diesel engine	2.0L RHZ BOSCH EDC15C2		Actuation Test		Y		
CS (2001-2004)		Engine ECU	Diesel engine	2.0L RHZ BOSCH EDC15C2		Special Function	After sales operation (particle emission filter)	Y		
CS (2001-2004)		Engine ECU	Diesel engine	2.0L RBS BOSCH EDC15C2		Read ECU Information		Y		
CS (2001-2004)		Engine ECU	Diesel engine	2.0L RBS BOSCH EDC15C2		Read Fault Code		Y		
CS (2001-2004)		Engine ECU	Diesel engine	2.0L RBS BOSCH EDC15C2		Erase Fault Code		Y		
CS (2001-2004)		Engine ECU	Diesel engine	2.0L RBS BOSCH EDC15C2		Live Data		Y		
CS (2001-2004)		Engine ECU	Diesel engine	2.0L RBS BOSCH EDC15C2		Actuation Test		Y		
CS (2001-2004)		Engine ECU	Diesel engine	2.0L RBS BOSCH EDC15C2		Special Function	After sales operation (particle emission filter)	Y		
CS (2001-2004)		Engine ECU	Diesel engine	2.0L RBS BOSCH EDC15C2		Read ECU Information		Y		
CS (2001-2004)		Engine ECU	Diesel engine	RHY SIEMENS SID801		Read ECU Information		Y		
CS (2001-2004)		Engine ECU	Diesel engine	RHY SIEMENS SID801		Read Fault Code		Y		
CS (2001-2004)		Engine ECU	Diesel engine	RHY SIEMENS SID801		Erase Fault Code		Y		
CS (2001-2004)		Engine ECU	Diesel engine	RHY SIEMENS SID801		Live Data		Y		
CS (2001-2004)		Engine ECU	Diesel engine	RHY SIEMENS SID801		Actuation Test		Y		
CS (2001-2004)		Engine ECU	Diesel engine	RHY SIEMENS SID801		Special Function	Programming / Matching	Y		
CS (2001-2004)		Auto gearbox	Auto gearbox AL4	Auto gearbox AL4,1(24)		Read ECU Information		Y		
CS (2001-2004)		Auto gearbox	Auto gearbox AL4	Auto gearbox AL4,1(24)		Read Fault Code		Y		
CS (2001-2004)		Auto gearbox	Auto gearbox AL4	Auto gearbox AL4,1(24)		Erase Fault Code		Y		
CS (2001-2004)		Auto gearbox	Auto gearbox AL4	Auto gearbox AL4,1(24)		Live Data		Y		
CS (2001-2004)		Auto gearbox	Auto gearbox AL4	Auto gearbox AL4,1(24)		Actuation Test		Y		
CS (2001-2004)		Auto gearbox	Auto gearbox AL4	Auto gearbox AL4,1(24)		Special Function	Initialisation of auto-adaptation	Y		
CS (2001-2004)		Auto gearbox	Auto gearbox AL4	Auto gearbox AL4,1(24)		Special Function	Oil wear counter	Y		
CS (2001-2004)		Auto gearbox	Auto gearbox AL4	Auto gearbox AL4,2(24)		Read ECU Information		Y		
CS (2001-2004)		Auto gearbox	Auto gearbox AL4	Auto gearbox AL4,2(24)		Read Fault Code		Y		
CS (2001-2004)		Auto gearbox	Auto gearbox AL4	Auto gearbox AL4,2(24)		Erase Fault Code		Y		
CS (2001-2004)		Auto gearbox	Auto gearbox AL4	Auto gearbox AL4,2(24)		Live Data		Y		
CS (2001-2004)		Auto gearbox	Auto gearbox AL4	Auto gearbox AL4,2(24)		Actuation Test		Y		
CS (2001-2004)		Auto gearbox	Auto gearbox AL4	Auto gearbox AL4,2(24)		Special Function	Pedal initialisation	Y		
CS (2001-2004)		Auto gearbox	Auto gearbox AL4	Auto gearbox AL4,2(24)		Special Function	Initialisation of auto-adaptation	Y		
CS (2001-2004)		Auto gearbox	Auto gearbox AL4	Auto gearbox AL4,2(24)		Special Function	Oil wear counter	Y		
CS (2001-2004)		Auto gearbox	Auto gearbox AL4	Auto gearbox AL4,3(14)		Read ECU Information		Y		
CS (2001-2004)		Auto gearbox	Auto gearbox AL4	Auto gearbox AL4,3(14)		Read Fault Code		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Models	Year classification	System	Subsystem or system type (YES stands for Citroen, NO stands for other areas)	Subsystem (YES stands for Citroen, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
CS (2001-2004)		Auto gearbox	Auto gearbox AL4	Auto gearbox AL4_3(1A)		Erase Fault Code		Y		
CS (2001-2004)		Auto gearbox	Auto gearbox AL4	Auto gearbox AL4_3(1A)		Live Data		Y		
CS (2001-2004)		Auto gearbox	Auto gearbox AL4	Auto gearbox AL4_3(1A)		Actuation Test		Y		
CS (2001-2004)		Auto gearbox	Auto gearbox AL4	Auto gearbox AL4_3(1A)		Special Function	Pedal initialisation	Y		
CS (2001-2004)		Auto gearbox	Auto gearbox AL4	Auto gearbox AL4_3(1A)		Special Function	Initialisation of auto-adaptation	Y		
CS (2001-2004)		Auto gearbox	Auto gearbox AL4	Auto gearbox AL4_3(1A)		Special Function	Oil wear counter	Y		
CS (2001-2004)		Auto gearbox	Auto gearbox 4HP20			Read ECU Information		Y		
CS (2001-2004)		Auto gearbox	Auto gearbox 4HP20			Read Fault Code		Y		
CS (2001-2004)		Auto gearbox	Auto gearbox 4HP20			Erase Fault Code		Y		
CS (2001-2004)		Auto gearbox	Auto gearbox 4HP20			Live Data		Y		
CS (2001-2004)		Auto gearbox	Auto gearbox 4HP20			Actuation Test		Y		
CS (2001-2004)		Auto gearbox	Auto gearbox 4HP20			Special Function	Initialisation of auto-adaptation	Y		
CS (2001-2004)		Anti-lock brake system	ABS M060			Read ECU Information		Y		
CS (2001-2004)		Anti-lock brake system	ABS M060			Read Fault Code		Y		
CS (2001-2004)		Anti-lock brake system	ABS M060			Erase Fault Code		Y		
CS (2001-2004)		Anti-lock brake system	ABS M060			Live Data		Y		
CS (2001-2004)		Anti-lock brake system	ABS M060			Actuation Test		Y		
CS (2001-2004)		Anti-lock brake system	ABS M060			Special Function	Bleeding	Y		
CS (2001-2004)		Anti-lock brake system	ESP M060			Read ECU Information		Y		
CS (2001-2004)		Anti-lock brake system	ESP M060			Read Fault Code		Y		
CS (2001-2004)		Anti-lock brake system	ESP M060			Erase Fault Code		Y		
CS (2001-2004)		Anti-lock brake system	ESP M060			Live Data		Y		
CS (2001-2004)		Anti-lock brake system	ESP M060			Actuation Test		Y		
CS (2001-2004)		Anti-lock brake system	ESP M060			Special Function	Bleeding	Y		
CS (2001-2004)		Airbag				Read ECU Information		Y		
CS (2001-2004)		Airbag				Read Fault Code		Y		
CS (2001-2004)		Airbag				Erase Fault Code		Y		
CS (2001-2004)		BSI				Read ECU Information		Y		
CS (2001-2004)		BSI				Read Fault Code		Y		
CS (2001-2004)		BSI				Erase Fault Code		Y		
CS (2001-2004)		BSI				Live Data		Y		
CS (2001-2004)		BSI				Special Function	Reset maintenance indicator	Y		
CS (2001-2004)		BSI				Special Function	Key programming	Y		
CS (2001-2004)		Navigation	Navigation SIEMENS			Read ECU Information		Y		
CS (2001-2004)		Navigation	Navigation SIEMENS			Read Fault Code		Y		
CS (2001-2004)		Navigation	Navigation SIEMENS			Erase Fault Code		Y		
CS (2001-2004)		Navigation	Navigation SIEMENS			Live Data		Y		
CS (2001-2004)		Navigation	Navigation YD0			Read ECU Information		Y		
CS (2001-2004)		Navigation	Navigation YD0			Live Data		Y		
CS (2001-2004)		Instrument panel				Read ECU Information		Y		
CS (2001-2004)		Instrument panel				Read Fault Code		Y		
CS (2001-2004)		Instrument panel				Erase Fault Code		Y		
CS (2001-2004)		Instrument panel				Live Data		Y		
CS (2001-2004)		Instrument panel				Actuation Test		Y		
CS (2001-2004)		Air conditioning				Read ECU Information		Y		
CS (2001-2004)		Air conditioning				Read Fault Code		Y		
CS (2001-2004)		Air conditioning				Erase Fault Code		Y		
CS (2001-2004)		Air conditioning				Live Data		Y		
CS (2001-2004)		Air conditioning				Actuation Test		Y		
CS (2001-2004)		Radio post-equipment				Read ECU Information		Y		
CS (2001-2004)		Radio post-equipment				Read Fault Code		Y		
CS (2001-2004)		Radio post-equipment				Erase Fault Code		Y		
CS (2001-2004)		Radio post-equipment				Live Data		Y		
CS (2001-2004)		Radio post-equipment				Actuation Test		Y		
CS (2001-2004)		Car phone				Read ECU Information		Y		
CS (2001-2004)		Car phone				Read Fault Code		Y		
CS (2001-2004)		Car phone				Erase Fault Code		Y		
CS (2001-2004)		Car phone				Live Data		Y		
CS (2001-2004)		Car phone				Actuation Test		Y		
CS (2001-2004)		CD player				Read ECU Information		Y		
CS (2001-2004)		CD player				Read Fault Code		Y		
CS (2001-2004)		CD player				Erase Fault Code		Y		
CS (2001-2004)		CD player				Live Data		Y		
CS (2001-2004)		CD player				Actuation Test		Y		
CS (2001-2004)		Parking assistance				Read ECU Information		Y		
CS (2001-2004)		Parking assistance				Read Fault Code		Y		
CS (2001-2004)		Parking assistance				Erase Fault Code		Y		
CS (2001-2004)		Parking assistance				Live Data		Y		
CS (2001-2004)		Parking assistance				Actuation Test		Y		
CS (2001-2004)		Sun roof				Read ECU Information		Y		
CS (2001-2004)		Sun roof				Read Fault Code		Y		
CS (2001-2004)		Sun roof				Erase Fault Code		Y		
CS (2001-2004)		Sun roof				Live Data		Y		
CS (2001-2004)		Sun roof				Actuation Test		Y		
CS (2001-2004)		Alarm				Read ECU Information		Y		
CS (2001-2004)		Alarm				Read Fault Code		Y		
CS (2001-2004)		Alarm				Erase Fault Code		Y		
CS (2001-2004)		Alarm				Live Data		Y		
CS (2001-2004)		Alarm				Actuation Test		Y		
CS (2001-2004)		Switch module at the steering wheel				Read ECU Information		Y		
CS (2001-2004)		Switch module at the steering wheel				Live Data		Y		
CS (2001-2004)		Driver's door module				Read ECU Information		Y		
CS (2001-2004)		Driver's door module				Live Data		Y		
CS (2001-2004)		Passenger's door module				Read ECU Information		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Models	Year classification	System	Subsystem or system type (YES stands for Citroen, NO stands for other wires)	Subsystem (YES stands for Citroen, NO stands for other wires)	Subsystem or system type	Function type	Special function subname	Add (Y/N)	Verification (Y/N)	Remarks
CS (2001-2004)		Passenger's door module				Live Data		Y		
CS (2001-2004)		Diesel additive function	ADDITIF_FAP			Read ECU Information		Y		
CS (2001-2004)		Diesel additive function	ADDITIF_FAP			Live Data		Y		
CS (2001-2004)		Diesel additive function	ADDITIF_FAP			Actuation Test		Y		
CS (2001-2004)		Diesel additive function	ADGGOZ			Read ECU Information		Y		
CS (2001-2004)		Diesel additive function	ADGGOZ			Read Fault Code		Y		
CS (2001-2004)		Diesel additive function	ADGGOZ			Erase Fault Code		Y		
CS (2001-2004)		Diesel additive function	ADGGOZ			Live Data		Y		
CS (2001-2004)		Diesel additive function	ADGGOZ			Actuation Test		Y		
CS (2001-2004)		Display or Autopoc or Telematics	Multifunction display SAGEM A			Read ECU Information		Y		
CS (2001-2004)		Display or Autopoc or Telematics	Multifunction display SAGEM A			Read Fault Code		Y		
CS (2001-2004)		Display or Autopoc or Telematics	Multifunction display SAGEM A			Erase Fault Code		Y		
CS (2001-2004)		Display or Autopoc or Telematics	Multifunction display SAGEM A			Live Data		Y		
CS (2001-2004)		Display or Autopoc or Telematics	Multifunction display SAGEM A			Actuation Test		Y		
CS (2001-2004)		Display or Autopoc or Telematics	Multifunction display SAGEM B			Read ECU Information		Y		
CS (2001-2004)		Display or Autopoc or Telematics	Multifunction display SAGEM B			Read Fault Code		Y		
CS (2001-2004)		Display or Autopoc or Telematics	Multifunction display SAGEM B			Erase Fault Code		Y		
CS (2001-2004)		Display or Autopoc or Telematics	Multifunction display SAGEM B			Live Data		Y		
CS (2001-2004)		Display or Autopoc or Telematics	Multifunction display SAGEM B			Actuation Test		Y		
CS (2001-2004)		Display or Autopoc or Telematics	Multifunction display SIEMENS C			Read ECU Information		Y		
CS (2001-2004)		Display or Autopoc or Telematics	Multifunction display SIEMENS C			Read Fault Code		Y		
CS (2001-2004)		Display or Autopoc or Telematics	Multifunction display SIEMENS C			Erase Fault Code		Y		
CS (2001-2004)		Display or Autopoc or Telematics	Multifunction display SIEMENS C			Live Data		Y		
CS (2001-2004)		Display or Autopoc or Telematics	Multifunction display SIEMENS C			Actuation Test		Y		
CS (2001-2004)		Display or Autopoc or Telematics	Multifunction display VDO D			Read ECU Information		Y		
CS (2001-2004)		Display or Autopoc or Telematics	Multifunction display VDO D			Read Fault Code		Y		
CS (2001-2004)		Display or Autopoc or Telematics	Multifunction display VDO D			Erase Fault Code		Y		
CS (2001-2004)		Display or Autopoc or Telematics	Multifunction display VDO D			Live Data		Y		
CS (2001-2004)		Display or Autopoc or Telematics	Multifunction display VDO D			Actuation Test		Y		
CS (2001-2004)		Display or Autopoc or Telematics	Multifunction display AUTOPC			Read ECU Information		Y		
CS (2001-2004)		Display or Autopoc or Telematics	Multifunction display AUTOPC			Read Fault Code		Y		
CS (2001-2004)		Display or Autopoc or Telematics	Multifunction display AUTOPC			Erase Fault Code		Y		
CS (2001-2004)		Display or Autopoc or Telematics	Multifunction display AUTOPC			Live Data		Y		
CS (2001-2004)		Display or Autopoc or Telematics	Multifunction display AUTOPC			Actuation Test		Y		
CS (2001-2004)		Display or Autopoc or Telematics	Telematics unit			Read ECU Information		Y		
CS (2001-2004)		Display or Autopoc or Telematics	Telematics unit			Read Fault Code		Y		
CS (2001-2004)		Display or Autopoc or Telematics	Telematics unit			Erase Fault Code		Y		
CS (2001-2004)		Display or Autopoc or Telematics	Telematics unit			Live Data		Y		
CS (2001-2004)		Display or Autopoc or Telematics	Telematics unit			Actuation Test		Y		
CS (2001-2004)		Suspension	Suspension			Read ECU Information		Y		
CS (2001-2004)		Suspension	Suspension			Read Fault Code		Y		
CS (2001-2004)		Suspension	Suspension			Erase Fault Code		Y		
CS (2001-2004)		Suspension	Suspension			Live Data		Y		
CS (2001-2004)		Suspension	Suspension			Actuation Test		Y		
CS (2001-2004)		Suspension	ECOTECH SUSPENSION			Read ECU Information		Y		
CS (2001-2004)		Suspension	ECOTECH SUSPENSION			Read Fault Code		Y		
CS (2001-2004)		Suspension	ECOTECH SUSPENSION			Erase Fault Code		Y		
CS (2001-2004)		Suspension	ECOTECH SUSPENSION			Live Data		Y		
CS (2001-2004)		Suspension	ECOTECH SUSPENSION			Actuation Test		Y		
CS (2001-2004)		Additional heating				Read ECU Information		Y		
CS (2001-2004)		Additional heating				Read Fault Code		Y		
CS (2001-2004)		Additional heating				Erase Fault Code		Y		
CS (2001-2004)		Additional heating				Live Data		Y		
CS (2001-2004)		Additional heating				Actuation Test		Y		
CS (2001-2004)		Right-hand headlamp				Read ECU Information		Y		
CS (2001-2004)		Right-hand headlamp				Read Fault Code		Y		
CS (2001-2004)		Right-hand headlamp				Erase Fault Code		Y		
CS (2001-2004)		Right-hand headlamp				Live Data		Y		
CS (2001-2004)		Right-hand headlamp				Actuation Test		Y		
CS (2001-2004)		Left-hand headlamp				Read ECU Information		Y		
CS (2001-2004)		Left-hand headlamp				Read Fault Code		Y		
CS (2001-2004)		Left-hand headlamp				Erase Fault Code		Y		
CS (2001-2004)		Left-hand headlamp				Live Data		Y		
CS (2001-2004)		Left-hand headlamp				Actuation Test		Y		
CS (2001-2004)		Rain sensor/Brightness				Read ECU Information		Y		
CS (2001-2004)		Rain sensor/Brightness				Live Data		Y		
CS R (2004-2007)		Built-in Systems Interface				Read ECU Information		Y		
CS R (2004-2007)		Built-in Systems Interface				Read Fault Code		Y		
CS R (2004-2007)		Built-in Systems Interface				Live Data		Y		
CS R (2004-2007)		Built-in Systems Interface				Actuation Test		Y		
CS R (2004-2007)		Built-in Systems Interface				Special Function	Maintenance-BSI operating mode	Y		
CS R (2004-2007)		Built-in Systems Interface				Special Function	Learning	Y		
CS R (2004-2007)		Engine ECU	Petrol engine	RFJ M86LFB		Read ECU Information		Y		
CS R (2004-2007)		Engine ECU	Petrol engine	RFJ M86LFB		Read Fault Code		Y		
CS R (2004-2007)		Engine ECU	Petrol engine	RFJ M86LFB		Erase Fault Code		Y		
CS R (2004-2007)		Engine ECU	Petrol engine	RFJ M86LFB		Live Data		Y		
CS R (2004-2007)		Engine ECU	Petrol engine	RFJ M86LFB		Actuation Test		Y		
CS R (2004-2007)		Engine ECU	Petrol engine	RFJ M86LFB		Special Function	Configuration	Y		
CS R (2004-2007)		Engine ECU	Petrol engine	RFJ M86LFB		Special Function	Initialisation of auto-adaptation	Y		
CS R (2004-2007)		Engine ECU	Petrol engine	RFJ M86LFB		Special Function	Matching	Y		
CS R (2004-2007)		Engine ECU	Petrol engine	GFY M86LFB		Read ECU Information		Y		
CS R (2004-2007)		Engine ECU	Petrol engine	GFY M86LFB		Read Fault Code		Y		
CS R (2004-2007)		Engine ECU	Petrol engine	GFY M86LFB		Erase Fault Code		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
CS R (2004-2007)		Engine ECU	Diesel engine	BHR SIEMENS SID803A		Erase Fault Code		Y		
CS R (2004-2007)		Engine ECU	Diesel engine	BHR SIEMENS SID803A		Live Data		Y		
CS R (2004-2007)		Engine ECU	Diesel engine	BHR SIEMENS SID803A		Actuation Test		Y		
CS R (2004-2007)		Engine ECU	Diesel engine	BHR SIEMENS SID803A		Special Function	Configuration	Y		
CS R (2004-2007)		Engine ECU	Diesel engine	BHR SIEMENS SID803A		Special Function	Learning	Y		
CS R (2004-2007)		Engine ECU	Diesel engine	BHR SIEMENS SID803A		Special Function	Particle Filter and diesel additive maintenance	Y		
CS R (2004-2007)		Engine ECU	Diesel engine	BHR SIEMENS SID803A		Special Function	Injector replacement (SID 803 A ECU)	Y		
CS R (2004-2007)		Engine ECU	Diesel engine	BHR SIEMENS SID803A		Special Function	Programming / Matching	Y		
CS R (2004-2007)		Engine ECU	Diesel engine	BHR SIEMENS SID803A		Read ECU Information		Y		
CS R (2004-2007)		Engine ECU	Diesel engine	BHR SIEMENS SID803A		Read Fault Code		Y		
CS R (2004-2007)		Engine ECU	Diesel engine	BHR SIEMENS SID803A		Erase Fault Code		Y		
CS R (2004-2007)		Engine ECU	Diesel engine	BHR SIEMENS SID803A		Live Data		Y		
CS R (2004-2007)		Engine ECU	Diesel engine	BHR SIEMENS SID803A		Actuation Test		Y		
CS R (2004-2007)		Engine ECU	Diesel engine	BHR SIEMENS SID803A		Special Function	Configuration	Y		
CS R (2004-2007)		Engine ECU	Diesel engine	BHR SIEMENS SID803A		Special Function	Learning	Y		
CS R (2004-2007)		Engine ECU	Diesel engine	BHR SIEMENS SID803A		Special Function	Particle Filter and diesel additive maintenance	Y		
CS R (2004-2007)		Engine ECU	Diesel engine	BHR SIEMENS SID803A		Special Function	Injector replacement (SID 803 A ECU)	Y		
CS R (2004-2007)		Engine ECU	Diesel engine	BHR SIEMENS SID803A		Special Function	Programming / Matching	Y		
CS R (2004-2007)		Engine ECU	Diesel engine	BHR SIEMENS SID803		Read ECU Information		Y		
CS R (2004-2007)		Engine ECU	Diesel engine	BHR SIEMENS SID803		Read Fault Code		Y		
CS R (2004-2007)		Engine ECU	Diesel engine	BHR SIEMENS SID803		Erase Fault Code		Y		
CS R (2004-2007)		Engine ECU	Diesel engine	BHR SIEMENS SID803		Live Data		Y		
CS R (2004-2007)		Engine ECU	Diesel engine	BHR SIEMENS SID803		Actuation Test		Y		
CS R (2004-2007)		Engine ECU	Diesel engine	BHR SIEMENS SID803		Special Function	Learning	Y		
CS R (2004-2007)		Engine ECU	Diesel engine	BHR SIEMENS SID803		Special Function	Particle Filter and diesel additive maintenance	Y		
CS R (2004-2007)		Engine ECU	Diesel engine	BHR SIEMENS SID803		Special Function	Injector replacement (SID 803 A ECU)	Y		
CS R (2004-2007)		Engine ECU	Diesel engine	BHR SIEMENS SID803		Special Function	Programming / Matching	Y		
CS R (2004-2007)		Engine ECU	Diesel engine	BHR SIEMENS SID803		Read ECU Information		Y		
CS R (2004-2007)		Engine ECU	Diesel engine	BHR SIEMENS SID803		Read Fault Code		Y		
CS R (2004-2007)		Engine ECU	Diesel engine	BHR SIEMENS SID803		Erase Fault Code		Y		
CS R (2004-2007)		Engine ECU	Diesel engine	BHR SIEMENS SID803		Live Data		Y		
CS R (2004-2007)		Engine ECU	Diesel engine	BHR SIEMENS SID803		Actuation Test		Y		
CS R (2004-2007)		Engine ECU	Diesel engine	BHR SIEMENS SID803		Special Function	Learning	Y		
CS R (2004-2007)		Engine ECU	Diesel engine	BHR SIEMENS SID803		Special Function	Particle Filter and diesel additive maintenance	Y		
CS R (2004-2007)		Engine ECU	Diesel engine	BHR SIEMENS SID803		Special Function	Injector replacement (SID 803 A ECU)	Y		
CS R (2004-2007)		Engine ECU	Diesel engine	BHR SIEMENS SID803		Special Function	Programming / Matching	Y		
CS R (2004-2007)		Gearbox ECU	Auto gearbox AL4			Read ECU Information		Y		
CS R (2004-2007)		Gearbox ECU	Auto gearbox AL4			Read Fault Code		Y		
CS R (2004-2007)		Gearbox ECU	Auto gearbox AL4			Erase Fault Code		Y		
CS R (2004-2007)		Gearbox ECU	Auto gearbox AL4			Live Data		Y		
CS R (2004-2007)		Gearbox ECU	Auto gearbox AL4			Actuation Test		Y		
CS R (2004-2007)		Gearbox ECU	Auto gearbox AL4			Special Function	Configuration	Y		
CS R (2004-2007)		Gearbox ECU	Auto gearbox AL4			Special Function	Pedal initialization	Y		
CS R (2004-2007)		Gearbox ECU	Auto gearbox AL4			Special Function	Initialization of auto-adaptation	Y		
CS R (2004-2007)		Gearbox ECU	Auto gearbox AL4			Special Function	Oil wear counter	Y		
CS R (2004-2007)		Gearbox ECU	Auto gearbox 4HP20			Read ECU Information		Y		
CS R (2004-2007)		Gearbox ECU	Auto gearbox 4HP20			Read Fault Code		Y		
CS R (2004-2007)		Gearbox ECU	Auto gearbox 4HP20			Erase Fault Code		Y		
CS R (2004-2007)		Gearbox ECU	Auto gearbox 4HP20			Live Data		Y		
CS R (2004-2007)		Gearbox ECU	Auto gearbox 4HP20			Actuation Test		Y		
CS R (2004-2007)		Gearbox ECU	Auto gearbox 4HP20			Special Function	Initialization of auto-adaptation	Y		
CS R (2004-2007)		Gearbox ECU	Auto gearbox AM6			Read ECU Information		Y		
CS R (2004-2007)		Gearbox ECU	Auto gearbox AM6			Read Fault Code		Y		
CS R (2004-2007)		Gearbox ECU	Auto gearbox AM6			Erase Fault Code		Y		
CS R (2004-2007)		Gearbox ECU	Auto gearbox AM6			Live Data		Y		
CS R (2004-2007)		Gearbox ECU	Auto gearbox AM6			Actuation Test		Y		
CS R (2004-2007)		Gearbox ECU	Auto gearbox AM6			Special Function	Specific operations	Y		
CS R (2004-2007)		Anti-lock brake system	ESP M060			Read ECU Information		Y		
CS R (2004-2007)		Anti-lock brake system	ESP M060			Read Fault Code		Y		
CS R (2004-2007)		Anti-lock brake system	ESP M060			Erase Fault Code		Y		
CS R (2004-2007)		Anti-lock brake system	ESP M060			Live Data		Y		
CS R (2004-2007)		Anti-lock brake system	ESP M060			Actuation Test		Y		
CS R (2004-2007)		Anti-lock brake system	ESP M060			Special Function	Configuration	Y		
CS R (2004-2007)		Anti-lock brake system	ESP M060			Special Function	Bleeding	Y		
CS R (2004-2007)		Airbag				Read ECU Information		Y		
CS R (2004-2007)		Airbag				Read Fault Code		Y		
CS R (2004-2007)		Airbag				Erase Fault Code		Y		
CS R (2004-2007)		Airbag				Live Data		Y		
CS R (2004-2007)		Airbag				Special Function	Configuration	Y		
CS R (2004-2007)		Airbag				Special Function	Unlocking	Y		
CS R (2004-2007)		Instrument panel				Read ECU Information		Y		
CS R (2004-2007)		Instrument panel				Read Fault Code		Y		
CS R (2004-2007)		Instrument panel				Erase Fault Code		Y		
CS R (2004-2007)		Instrument panel				Live Data		Y		
CS R (2004-2007)		Instrument panel				Actuation Test		Y		
CS R (2004-2007)		Instrument panel				Special Function	Configuration	Y		
CS R (2004-2007)		Radio				Read ECU Information		Y		
CS R (2004-2007)		Radio				Read Fault Code		Y		
CS R (2004-2007)		Radio				Erase Fault Code		Y		
CS R (2004-2007)		Radio				Live Data		Y		
CS R (2004-2007)		Radio				Actuation Test		Y		
CS R (2004-2007)		Radio				Special Function	Configuration	Y		
CS R (2004-2007)		CD player				Read ECU Information		Y		
CS R (2004-2007)		CD player				Read Fault Code		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
CS R (2004-2007)		CD player				Erase Fault Code		Y		
CS R (2004-2007)		CD player				Live Data		Y		
CS R (2004-2007)		CD player				Actuation Test		Y		
CS R (2004-2007)		Parking assistance				Read ECU Information		Y		
CS R (2004-2007)		Parking assistance				Read Fault Code		Y		
CS R (2004-2007)		Parking assistance				Erase Fault Code		Y		
CS R (2004-2007)		Parking assistance				Live Data		Y		
CS R (2004-2007)		Parking assistance				Actuation Test		Y		
CS R (2004-2007)		Parking assistance				Special Function	Configuration	Y		
CS R (2004-2007)		Air conditioning				Read ECU Information		Y		
CS R (2004-2007)		Air conditioning				Read Fault Code		Y		
CS R (2004-2007)		Air conditioning				Erase Fault Code		Y		
CS R (2004-2007)		Air conditioning				Live Data		Y		
CS R (2004-2007)		Air conditioning				Actuation Test		Y		
CS R (2004-2007)		Lane departure warning system				Read ECU Information		Y		
CS R (2004-2007)		Lane departure warning system				Read Fault Code		Y		
CS R (2004-2007)		Lane departure warning system				Erase Fault Code		Y		
CS R (2004-2007)		Lane departure warning system				Live Data		Y		
CS R (2004-2007)		Lane departure warning system				Actuation Test		Y		
CS R (2004-2007)		Lane departure warning system				Special Function	Configuration	Y		
CS R (2004-2007)		Alarm				Read ECU Information		Y		
CS R (2004-2007)		Alarm				Read Fault Code		Y		
CS R (2004-2007)		Alarm				Erase Fault Code		Y		
CS R (2004-2007)		Alarm				Live Data		Y		
CS R (2004-2007)		Alarm				Actuation Test		Y		
CS R (2004-2007)		Alarm				Special Function	Configuration	Y		
CS R (2004-2007)		Switch module under the steering wheel				Read ECU Information		Y		
CS R (2004-2007)		Switch module under the steering wheel				Read Fault Code		Y		
CS R (2004-2007)		Switch module under the steering wheel				Erase Fault Code		Y		
CS R (2004-2007)		Switch module under the steering wheel				Live Data		Y		
CS R (2004-2007)		Switch module under the steering wheel				Actuation Test		Y		
CS R (2004-2007)		Diesel additive function				Read ECU Information		Y		
CS R (2004-2007)		Diesel additive function				Read Fault Code		Y		
CS R (2004-2007)		Diesel additive function				Erase Fault Code		Y		
CS R (2004-2007)		Diesel additive function				Live Data		Y		
CS R (2004-2007)		Diesel additive function				Actuation Test		Y		
CS R (2004-2007)		Diesel additive function				Special Function	Configuration	Y		
CS R (2004-2007)		Driver's door module				Read ECU Information		Y		
CS R (2004-2007)		Driver's door module				Read Fault Code		Y		
CS R (2004-2007)		Driver's door module				Erase Fault Code		Y		
CS R (2004-2007)		Driver's door module				Live Data		Y		
CS R (2004-2007)		Driver's door module				Actuation Test		Y		
CS R (2004-2007)		Passenger's door module				Read ECU Information		Y		
CS R (2004-2007)		Passenger's door module				Read Fault Code		Y		
CS R (2004-2007)		Passenger's door module				Erase Fault Code		Y		
CS R (2004-2007)		Passenger's door module				Live Data		Y		
CS R (2004-2007)		Passenger's door module				Actuation Test		Y		
CS R (2004-2007)		Rain sensor / Brightness				Read ECU Information		Y		
CS R (2004-2007)		Rain sensor / Brightness				Read Fault Code		Y		
CS R (2004-2007)		Rain sensor / Brightness				Erase Fault Code		Y		
CS R (2004-2007)		Sun roof				Read ECU Information		Y		
CS R (2004-2007)		Sun roof				Read Fault Code		Y		
CS R (2004-2007)		Sun roof				Erase Fault Code		Y		
CS R (2004-2007)		Sun roof				Live Data		Y		
CS R (2004-2007)		Sun roof				Actuation Test		Y		
CS R (2004-2007)		Sun roof				Special Function	Initialisation	Y		
CS R (2004-2007)		Multifunction screen	Multifunction screen A			Read ECU Information		Y		
CS R (2004-2007)		Multifunction screen	Multifunction screen A			Read Fault Code		Y		
CS R (2004-2007)		Multifunction screen	Multifunction screen A			Erase Fault Code		Y		
CS R (2004-2007)		Multifunction screen	Multifunction screen A			Live Data		Y		
CS R (2004-2007)		Multifunction screen	Multifunction screen A			Actuation Test		Y		
CS R (2004-2007)		Multifunction screen	Multifunction screen A			Special Function	Configuration	Y		
CS R (2004-2007)		Multifunction screen	Multifunction screen C			Read ECU Information		Y		
CS R (2004-2007)		Multifunction screen	Multifunction screen C			Read Fault Code		Y		
CS R (2004-2007)		Multifunction screen	Multifunction screen C			Erase Fault Code		Y		
CS R (2004-2007)		Multifunction screen	Multifunction screen C			Live Data		Y		
CS R (2004-2007)		Multifunction screen	Multifunction screen C			Actuation Test		Y		
CS R (2004-2007)		Multifunction screen	Multifunction screen C			Special Function	Configuration	Y		
CS R (2004-2007)		Telematic	Telematics (RT3)			Read ECU Information		Y		
CS R (2004-2007)		Telematic	Telematics (RT3)			Read Fault Code		Y		
CS R (2004-2007)		Telematic	Telematics (RT3)			Erase Fault Code		Y		
CS R (2004-2007)		Telematic	Telematics (RT3)			Live Data		Y		
CS R (2004-2007)		Telematic	Telematics (RT3)			Actuation Test		Y		
CS R (2004-2007)		Telematic	Telematics (RT3)			Special Function	Function test	Y		
CS R (2004-2007)		Telematic	Telematics (RT3)			Special Function	Configuration	Y		
CS R (2004-2007)		Telematic	Telematics (RT3)			Special Function	Emergency battery / Change battery	Y		
CS R (2004-2007)		Telematic	Telematics (RT4)			Read ECU Information		Y		
CS R (2004-2007)		Telematic	Telematics (RT4)			Read Fault Code		Y		
CS R (2004-2007)		Telematic	Telematics (RT4)			Erase Fault Code		Y		
CS R (2004-2007)		Telematic	Telematics (RT4)			Live Data		Y		
CS R (2004-2007)		Telematic	Telematics (RT4)			Actuation Test		Y		
CS R (2004-2007)		Telematic	Telematics (RT4)			Special Function	Function test	Y		
CS R (2004-2007)		Telematic	Telematics (RT4)			Special Function	Configuration	Y		
CS R (2004-2007)		Telematic	Telematics (RT4)			Special Function	Emergency battery / Change battery	Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
CS R (2004-2007)		Telematic	Telematic (RTS)			Read ECU Information		Y		
CS R (2004-2007)		Telematic	Telematic (RTS)			Read Fault Code		Y		
CS R (2004-2007)		Telematic	Telematic (RTS)			Erase Fault Code		Y		
CS R (2004-2007)		Telematic	Telematic (RTS)			Live Data		Y		
CS R (2004-2007)		Telematic	Telematic (RTS)			Actuation Test		Y		
CS R (2004-2007)		Telematic	Telematic (RTS)			Special Function	Function test	Y		
CS R (2004-2007)		Telematic	Telematic (RTS)			Special Function	Configuration	Y		
CS R (2004-2007)		Telematic	Telematic (RTS)			Special Function	Emergency battery / Change battery	Y		
CS R (2004-2007)		Trailer relay unit				Read ECU Information		Y		
CS R (2004-2007)		Trailer relay unit				Read Fault Code		Y		
CS R (2004-2007)		Trailer relay unit				Erase Fault Code		Y		
CS R (2004-2007)		Trailer relay unit				Live Data		Y		
CS R (2004-2007)		Trailer relay unit				Actuation Test		Y		
CS R (2004-2007)		Engine relay unit				Read ECU Information		Y		
CS R (2004-2007)		Engine relay unit				Read Fault Code		Y		
CS R (2004-2007)		Engine relay unit				Erase Fault Code		Y		
CS R (2004-2007)		Engine relay unit				Live Data		Y		
CS R (2004-2007)		Engine relay unit				Actuation Test		Y		
CS R (2004-2007)		Suspension				Read ECU Information		Y		
CS R (2004-2007)		Suspension				Read Fault Code		Y		
CS R (2004-2007)		Suspension				Erase Fault Code		Y		
CS R (2004-2007)		Suspension				Live Data		Y		
CS R (2004-2007)		Suspension				Actuation Test		Y		
CS R (2004-2007)		Suspension				Special Function	Vehicle reference height adjustment	Y		
CS R (2004-2007)		Suspension				Special Function	Depressurise	Y		
CS R (2004-2007)		Additional heating				Read ECU Information		Y		
CS R (2004-2007)		Additional heating				Read Fault Code		Y		
CS R (2004-2007)		Additional heating				Erase Fault Code		Y		
CS R (2004-2007)		Additional heating				Live Data		Y		
CS R (2004-2007)		Additional heating				Actuation Test		Y		
CS R (2004-2007)		Additional heating				Special Function	O2 setting	Y		
CS R (2004-2007)		Power steering				Read ECU Information		Y		
CS R (2004-2007)		Power steering				Read Fault Code		Y		
CS R (2004-2007)		Power steering				Erase Fault Code		Y		
CS R (2004-2007)		Power steering				Live Data		Y		
CS R (2004-2007)		Power steering				Actuation Test		Y		
CS R (2004-2007)		Directional headlamps				Read ECU Information		Y		
CS R (2004-2007)		Directional headlamps				Read Fault Code		Y		
CS R (2004-2007)		Directional headlamps				Erase Fault Code		Y		
CS R (2004-2007)		Directional headlamps				Actuation Test		Y		
CS R (2004-2007)		Directional headlamps				Special Function	Configuration	Y		
CS R (2004-2007)		Deflation detection				Read ECU Information		Y		
CS R (2004-2007)		Deflation detection				Read Fault Code		Y		
CS R (2004-2007)		Deflation detection				Erase Fault Code		Y		
CS R (2004-2007)		Deflation detection				Live Data		Y		
CS R (2004-2007)		Deflation detection				Special Function	Wheel transmitter module management	Y		
CS R (2004-2007)		Deflation detection				Special Function	Tyre pressure detector activation / deactivation	Y		
CS R (2004-2007)		Deflation detection				Special Function	Valve programming check	Y		
CS R (2004-2007)		Hands Free Kit				Read ECU Information		Y		
CS R (2004-2007)		Hands Free Kit				Read Fault Code		Y		
CS R (2004-2007)		Hands Free Kit				Erase Fault Code		Y		
CS R (2004-2007)		Hands Free Kit				Live Data		Y		
CS R (2004-2007)		Hands Free Kit				Actuation Test		Y		
CS R (2004-2007)		Hands Free Kit				Special Function	Configuration	Y		
CITROEN CS (L7) (After 2007)		Built-in Systems Interface				Read ECU Information		Y		
CITROEN CS (L7) (After 2007)		Built-in Systems Interface				Read Fault Code		Y		
CITROEN CS (L7) (After 2007)		Built-in Systems Interface				Erase Fault Code		Y		
CITROEN CS (L7) (After 2007)		Built-in Systems Interface				Live Data		Y		
CITROEN CS (L7) (After 2007)		Built-in Systems Interface				Actuation Test		Y		
CITROEN CS (L7) (After 2007)		Built-in Systems Interface				Special Function	Maintenance-BSI operating mode	Y		
CITROEN CS (L7) (After 2007)		Engine management ECU	Petrol engine	ME17_4_2	14 MED 17_4.2 E180 S	Read ECU Information		Y		
CITROEN CS (L7) (After 2007)		Engine management ECU	Petrol engine	ME17_4_2	14 MED 17_4.2 E180 S	Read Fault Code		Y		
CITROEN CS (L7) (After 2007)		Engine management ECU	Petrol engine	ME17_4_2	14 MED 17_4.2 E180 S	Erase Fault Code		Y		
CITROEN CS (L7) (After 2007)		Engine management ECU	Petrol engine	ME17_4_2	14 MED 17_4.2 E180 S	Live Data		Y		
CITROEN CS (L7) (After 2007)		Engine management ECU	Petrol engine	ME17_4_2	14 MED 17_4.2 E180 S	Actuation Test		Y		
CITROEN CS (L7) (After 2007)		Engine management ECU	Petrol engine	ME17_4_2	14 MED 17_4.2 E180 S	Special Function	Configuration	Y		
CITROEN CS (L7) (After 2007)		Engine management ECU	Petrol engine	ME17_4_2	14 MED 17_4.2 E180 S	Special Function	Pack Repair	Y		
CITROEN CS (L7) (After 2007)		Engine management ECU	Petrol engine	MEV17_4_2	MEV17_4_2E180C	Read ECU Information		Y		
CITROEN CS (L7) (After 2007)		Engine management ECU	Petrol engine	MEV17_4_2	MEV17_4_2E180C	Read Fault Code		Y		
CITROEN CS (L7) (After 2007)		Engine management ECU	Petrol engine	MEV17_4_2	MEV17_4_2E180C	Erase Fault Code		Y		
CITROEN CS (L7) (After 2007)		Engine management ECU	Petrol engine	MEV17_4_2	MEV17_4_2E180C	Live Data		Y		
CITROEN CS (L7) (After 2007)		Engine management ECU	Petrol engine	MEV17_4_2	MEV17_4_2E180C	Actuation Test		Y		
CITROEN CS (L7) (After 2007)		Engine management ECU	Petrol engine	MEV17_4_2	MEV17_4_2E180C	Special Function	Configuration	Y		
CITROEN CS (L7) (After 2007)		Engine management ECU	Petrol engine	MEV17_4_2	MEV17_4_2E180C	Special Function	Pack Repair	Y		
CITROEN CS (L7) (After 2007)		Engine management ECU	Petrol engine	ME747	ME747 X3V	Read ECU Information		Y		
CITROEN CS (L7) (After 2007)		Engine management ECU	Petrol engine	ME747	ME747 X3V	Read Fault Code		Y		
CITROEN CS (L7) (After 2007)		Engine management ECU	Petrol engine	ME747	ME747 X3V	Erase Fault Code		Y		
CITROEN CS (L7) (After 2007)		Engine management ECU	Petrol engine	ME747	ME747 X3V	Live Data		Y		
CITROEN CS (L7) (After 2007)		Engine management ECU	Petrol engine	ME747	ME747 X3V	Actuation Test		Y		
CITROEN CS (L7) (After 2007)		Engine management ECU	Petrol engine	ME747	ME747 X3V	Special Function	Configuration	Y		
CITROEN CS (L7) (After 2007)		Engine management ECU	Petrol engine	ME747	ME747 X3V	Special Function	Pack Repair	Y		
CITROEN CS (L7) (After 2007)		Engine management ECU	Petrol engine	ME747	ME747 X3U	Read ECU Information		Y		
CITROEN CS (L7) (After 2007)		Engine management ECU	Petrol engine	ME747	ME747 X3U	Read Fault Code		Y		
CITROEN CS (L7) (After 2007)		Engine management ECU	Petrol engine	ME747	ME747 X3U	Erase Fault Code		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Models	Year classification	System	Subsystem or system type (YES stands for Citroen, NO stands for other wires)	Subsystem (YES stands for Citroen, NO stands for other wires)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification on (Y/N)	Remarks
CITROEN C5 (17) (After 2007)		Automatic gearbox or controlled manual gearbox	BVA_ML4			Erase Fault Code		Y		
CITROEN C5 (17) (After 2007)		Automatic gearbox or controlled manual gearbox	BVA_ML4			Live Data		Y		
CITROEN C5 (17) (After 2007)		Automatic gearbox or controlled manual gearbox	BVA_ML4			Actuation Test		Y		
CITROEN C5 (17) (After 2007)		Automatic gearbox or controlled manual gearbox	BVA_ML4			Special Function	Configuration	Y		
CITROEN C5 (17) (After 2007)		Automatic gearbox or controlled manual gearbox	BVA_ML4			Special Function	Pack Repair	Y		
CITROEN C5 (17) (After 2007)		Automatic gearbox or controlled manual gearbox	BVA_MMS			Read ECU Information		Y		
CITROEN C5 (17) (After 2007)		Automatic gearbox or controlled manual gearbox	BVA_MMS			Read Fault Code		Y		
CITROEN C5 (17) (After 2007)		Automatic gearbox or controlled manual gearbox	BVA_MMS			Erase Fault Code		Y		
CITROEN C5 (17) (After 2007)		Automatic gearbox or controlled manual gearbox	BVA_MMS			Live Data		Y		
CITROEN C5 (17) (After 2007)		Automatic gearbox or controlled manual gearbox	BVA_MMS			Actuation Test		Y		
CITROEN C5 (17) (After 2007)		Automatic gearbox or controlled manual gearbox	BVA_MMS			Special Function	Configuration	Y		
CITROEN C5 (17) (After 2007)		Automatic gearbox or controlled manual gearbox	BVA_MMS			Special Function	Replacement parts	Y		
CITROEN C5 (17) (After 2007)		Automatic gearbox or controlled manual gearbox	BVA_MMS			Special Function	Oil wear counter	Y		
CITROEN C5 (17) (After 2007)		Automatic gearbox or controlled manual gearbox	CPC300P			Read ECU Information		Y		
CITROEN C5 (17) (After 2007)		Automatic gearbox or controlled manual gearbox	CPC300P			Read Fault Code		Y		
CITROEN C5 (17) (After 2007)		Automatic gearbox or controlled manual gearbox	CPC300P			Erase Fault Code		Y		
CITROEN C5 (17) (After 2007)		Automatic gearbox or controlled manual gearbox	CPC300P			Live Data		Y		
CITROEN C5 (17) (After 2007)		Automatic gearbox or controlled manual gearbox	CPC300P			Actuation Test		Y		
CITROEN C5 (17) (After 2007)		Automatic gearbox or controlled manual gearbox	CPC300P			Special Function	Replacement parts	Y		
CITROEN C5 (17) (After 2007)		Automatic gearbox or controlled manual gearbox	BVA_MMS AT6 IDS			Read ECU Information		Y		
CITROEN C5 (17) (After 2007)		Automatic gearbox or controlled manual gearbox	BVA_MMS AT6 IDS			Read Fault Code		Y		
CITROEN C5 (17) (After 2007)		Automatic gearbox or controlled manual gearbox	BVA_MMS AT6 IDS			Erase Fault Code		Y		
CITROEN C5 (17) (After 2007)		Automatic gearbox or controlled manual gearbox	BVA_MMS AT6 IDS			Live Data		Y		
CITROEN C5 (17) (After 2007)		Automatic gearbox or controlled manual gearbox	BVA_MMS AT6 IDS			Actuation Test		Y		
CITROEN C5 (17) (After 2007)		Automatic gearbox or controlled manual gearbox	BVA_MMS AT6 IDS			Special Function	Configuration	Y		
CITROEN C5 (17) (After 2007)		Automatic gearbox or controlled manual gearbox	BVA_MMS AT6 IDS			Special Function	Pack Repair	Y		
CITROEN C5 (17) (After 2007)		Air bags and pre-tensioners control unit				Read ECU Information		Y		
CITROEN C5 (17) (After 2007)		Air bags and pre-tensioners control unit				Read Fault Code		Y		
CITROEN C5 (17) (After 2007)		Air bags and pre-tensioners control unit				Erase Fault Code		Y		
CITROEN C5 (17) (After 2007)		Air bags and pre-tensioners control unit				Live Data		Y		
CITROEN C5 (17) (After 2007)		Air bags and pre-tensioners control unit				Special Function	Configuration	Y		
CITROEN C5 (17) (After 2007)		Air bags and pre-tensioners control unit				Special Function	Pack Repair	Y		
CITROEN C5 (17) (After 2007)		Power steering				Read ECU Information		Y		
CITROEN C5 (17) (After 2007)		Power steering				Read Fault Code		Y		
CITROEN C5 (17) (After 2007)		Power steering				Erase Fault Code		Y		
CITROEN C5 (17) (After 2007)		Power steering				Live Data		Y		
CITROEN C5 (17) (After 2007)		Power steering				Actuation Test		Y		
CITROEN C5 (17) (After 2007)		Electronically managed suspension				Read ECU Information		Y		
CITROEN C5 (17) (After 2007)		Electronically managed suspension				Read Fault Code		Y		
CITROEN C5 (17) (After 2007)		Electronically managed suspension				Erase Fault Code		Y		
CITROEN C5 (17) (After 2007)		Electronically managed suspension				Live Data		Y		
CITROEN C5 (17) (After 2007)		Electronically managed suspension				Actuation Test		Y		
CITROEN C5 (17) (After 2007)		Electronically managed suspension				Special Function	Configuration	Y		
CITROEN C5 (17) (After 2007)		Electronically managed suspension				Special Function	Pack Repair	Y		
CITROEN C5 (17) (After 2007)		Body height ECU				Read ECU Information		Y		
CITROEN C5 (17) (After 2007)		Body height ECU				Read Fault Code		Y		
CITROEN C5 (17) (After 2007)		Body height ECU				Erase Fault Code		Y		
CITROEN C5 (17) (After 2007)		Body height ECU				Live Data		Y		
CITROEN C5 (17) (After 2007)		Variable damping ECU				Read ECU Information		Y		
CITROEN C5 (17) (After 2007)		Variable damping ECU				Read Fault Code		Y		
CITROEN C5 (17) (After 2007)		Variable damping ECU				Erase Fault Code		Y		
CITROEN C5 (17) (After 2007)		Variable damping ECU				Live Data		Y		
CITROEN C5 (17) (After 2007)		Variable damping ECU				Actuation Test		Y		
CITROEN C5 (17) (After 2007)		Additional heating				Read ECU Information		Y		
CITROEN C5 (17) (After 2007)		Additional heating				Read Fault Code		Y		
CITROEN C5 (17) (After 2007)		Additional heating				Erase Fault Code		Y		
CITROEN C5 (17) (After 2007)		Additional heating				Live Data		Y		
CITROEN C5 (17) (After 2007)		Additional heating				Actuation Test		Y		
CITROEN C5 (17) (After 2007)		Additional heating				Special Function	Pack Repair	Y		
CITROEN C5 (17) (After 2007)		Under-inflation detection	ISG			Read ECU Information		Y		
CITROEN C5 (17) (After 2007)		Under-inflation detection	ISG			Read Fault Code		Y		
CITROEN C5 (17) (After 2007)		Under-inflation detection	ISG			Erase Fault Code		Y		
CITROEN C5 (17) (After 2007)		Under-inflation detection	ISG			Live Data		Y		
CITROEN C5 (17) (After 2007)		Under-inflation detection	ISG			Special Function	Pack Repair	Y		
CITROEN C5 (17) (After 2007)		Under-inflation detection	ISG_IDS			Read ECU Information		Y		
CITROEN C5 (17) (After 2007)		Under-inflation detection	ISG_IDS			Read Fault Code		Y		
CITROEN C5 (17) (After 2007)		Under-inflation detection	ISG_IDS			Erase Fault Code		Y		
CITROEN C5 (17) (After 2007)		Under-inflation detection	ISG_IDS			Live Data		Y		
CITROEN C5 (17) (After 2007)		Under-inflation detection	ISG_IDS			Special Function	Pack Repair	Y		
CITROEN C5 (17) (After 2007)		Dynamic headlamp height adjuster				Read ECU Information		Y		
CITROEN C5 (17) (After 2007)		Dynamic headlamp height adjuster				Read Fault Code		Y		
CITROEN C5 (17) (After 2007)		Dynamic headlamp height adjuster				Erase Fault Code		Y		
CITROEN C5 (17) (After 2007)		Dynamic headlamp height adjuster				Live Data		Y		
CITROEN C5 (17) (After 2007)		Dynamic headlamp height adjuster				Actuation Test		Y		
CITROEN C5 (17) (After 2007)		Dynamic headlamp height adjuster				Special Function	Configuration	Y		
CITROEN C5 (17) (After 2007)		Dynamic headlamp height adjuster				Special Function	Pack Repair	Y		
CITROEN C5 (17) (After 2007)		Electric secondary brake				Read ECU Information		Y		
CITROEN C5 (17) (After 2007)		Electric secondary brake				Read Fault Code		Y		
CITROEN C5 (17) (After 2007)		Electric secondary brake				Erase Fault Code		Y		
CITROEN C5 (17) (After 2007)		Electric secondary brake				Live Data		Y		
CITROEN C5 (17) (After 2007)		Electric secondary brake				Actuation Test		Y		
CITROEN C5 (17) (After 2007)		Electric secondary brake				Special Function	Pack Repair	Y		
CITROEN C5 (17) (After 2007)		Lane departure warning system				Read ECU Information		Y		
CITROEN C5 (17) (After 2007)		Lane departure warning system				Read Fault Code		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Models	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification on (Y/N)	Remarks
CITROEN C5 (17) (After 2007)		Lane departure warning system				Erase Fault Code		Y		
CITROEN C5 (17) (After 2007)		Lane departure warning system				Live Data		Y		
CITROEN C5 (17) (After 2007)		Lane departure warning system				Actuation Test		Y		
CITROEN C5 (17) (After 2007)		Lane departure warning system				Special Function	Configuration	Y		
CITROEN C5 (17) (After 2007)		Trailer relay unit				Read ECU Information		Y		
CITROEN C5 (17) (After 2007)		Trailer relay unit				Read Fault Code		Y		
CITROEN C5 (17) (After 2007)		Trailer relay unit				Erase Fault Code		Y		
CITROEN C5 (17) (After 2007)		Trailer relay unit				Live Data		Y		
CITROEN C5 (17) (After 2007)		Trailer relay unit				Actuation Test		Y		
CITROEN C5 (17) (After 2007)		Engine relay unit				Read ECU Information		Y		
CITROEN C5 (17) (After 2007)		Engine relay unit				Read Fault Code		Y		
CITROEN C5 (17) (After 2007)		Engine relay unit				Erase Fault Code		Y		
CITROEN C5 (17) (After 2007)		Engine relay unit				Live Data		Y		
CITROEN C5 (17) (After 2007)		Engine relay unit				Actuation Test		Y		
CITROEN C5 (17) (After 2007)		Multifunction screen	Type "A" (segments),with buttons			Read ECU Information		Y		
CITROEN C5 (17) (After 2007)		Multifunction screen	Type "A" (segments),with buttons			Read Fault Code		Y		
CITROEN C5 (17) (After 2007)		Multifunction screen	Type "A" (segments),with buttons			Erase Fault Code		Y		
CITROEN C5 (17) (After 2007)		Multifunction screen	Type "A" (segments),with buttons			Live Data		Y		
CITROEN C5 (17) (After 2007)		Multifunction screen	Type "A" (segments),with buttons			Actuation Test		Y		
CITROEN C5 (17) (After 2007)		Multifunction screen	Type "A" (segments),with buttons			Special Function	Configuration	Y		
CITROEN C5 (17) (After 2007)		Multifunction screen	Type "A" (segments),with buttons			Special Function	Pack Repair	Y		
CITROEN C5 (17) (After 2007)		Multifunction screen	Type "A" (segments),without button			Read ECU Information		Y		
CITROEN C5 (17) (After 2007)		Multifunction screen	Type "A" (segments),without button			Read Fault Code		Y		
CITROEN C5 (17) (After 2007)		Multifunction screen	Type "A" (segments),without button			Erase Fault Code		Y		
CITROEN C5 (17) (After 2007)		Multifunction screen	Type "A" (segments),without button			Live Data		Y		
CITROEN C5 (17) (After 2007)		Multifunction screen	Type "A" (segments),without button			Actuation Test		Y		
CITROEN C5 (17) (After 2007)		Multifunction screen	Type "A" (segments),without button			Special Function	Configuration	Y		
CITROEN C5 (17) (After 2007)		Multifunction screen	Type "A" (segments),without button			Special Function	Pack Repair	Y		
CITROEN C5 (17) (After 2007)		Multifunction screen	Type "C" (dot matrix)			Read ECU Information		Y		
CITROEN C5 (17) (After 2007)		Multifunction screen	Type "C" (dot matrix)			Read Fault Code		Y		
CITROEN C5 (17) (After 2007)		Multifunction screen	Type "C" (dot matrix)			Erase Fault Code		Y		
CITROEN C5 (17) (After 2007)		Multifunction screen	Type "C" (dot matrix)			Live Data		Y		
CITROEN C5 (17) (After 2007)		Multifunction screen	Type "C" (dot matrix)			Actuation Test		Y		
CITROEN C5 (17) (After 2007)		Multifunction screen	Type "C" (dot matrix)			Special Function	Configuration	Y		
CITROEN C5 (17) (After 2007)		Multifunction screen	Type "C" (dot matrix)			Special Function	Pack Repair	Y		
CITROEN C5 (17) (After 2007)		Multifunction screen	Type "C colour" (dot matrix)			Read ECU Information		Y		
CITROEN C5 (17) (After 2007)		Multifunction screen	Type "C colour" (dot matrix)			Read Fault Code		Y		
CITROEN C5 (17) (After 2007)		Multifunction screen	Type "C colour" (dot matrix)			Erase Fault Code		Y		
CITROEN C5 (17) (After 2007)		Multifunction screen	Type "C colour" (dot matrix)			Live Data		Y		
CITROEN C5 (17) (After 2007)		Multifunction screen	Type "C colour" (dot matrix)			Actuation Test		Y		
CITROEN C5 (17) (After 2007)		Multifunction screen	Type "C colour" (dot matrix)			Special Function	Configuration	Y		
CITROEN C5 (17) (After 2007)		Multifunction screen	Type "C colour" (dot matrix)			Special Function	Pack Repair	Y		
CITROEN C5 (17) (After 2007)		Windscreen wiper				Read ECU Information		Y		
CITROEN C5 (17) (After 2007)		Windscreen wiper				Read Fault Code		Y		
CITROEN C5 (17) (After 2007)		Windscreen wiper				Erase Fault Code		Y		
CITROEN C5 (17) (After 2007)		Windscreen wiper				Actuation Test		Y		
CITROEN C5 (17) (After 2007)		Parking assistance				Read ECU Information		Y		
CITROEN C5 (17) (After 2007)		Parking assistance				Read Fault Code		Y		
CITROEN C5 (17) (After 2007)		Parking assistance				Erase Fault Code		Y		
CITROEN C5 (17) (After 2007)		Parking assistance				Live Data		Y		
CITROEN C5 (17) (After 2007)		Parking assistance				Special Function	Configuration	Y		
CITROEN C5 (17) (After 2007)		Parking assistance				Special Function	Pack Repair	Y		
CITROEN C5 (17) (After 2007)		Controls under the steering wheel				Read ECU Information		Y		
CITROEN C5 (17) (After 2007)		Controls under the steering wheel				Read Fault Code		Y		
CITROEN C5 (17) (After 2007)		Controls under the steering wheel				Erase Fault Code		Y		
CITROEN C5 (17) (After 2007)		Controls under the steering wheel				Live Data		Y		
CITROEN C5 (17) (After 2007)		Controls under the steering wheel				Actuation Test		Y		
CITROEN C5 (17) (After 2007)		Air conditioning				Read ECU Information		Y		
CITROEN C5 (17) (After 2007)		Air conditioning				Read Fault Code		Y		
CITROEN C5 (17) (After 2007)		Air conditioning				Erase Fault Code		Y		
CITROEN C5 (17) (After 2007)		Air conditioning				Live Data		Y		
CITROEN C5 (17) (After 2007)		Air conditioning				Actuation Test		Y		
CITROEN C5 (17) (After 2007)		Instrument panel				Read ECU Information		Y		
CITROEN C5 (17) (After 2007)		Instrument panel				Read Fault Code		Y		
CITROEN C5 (17) (After 2007)		Instrument panel				Erase Fault Code		Y		
CITROEN C5 (17) (After 2007)		Instrument panel				Live Data		Y		
CITROEN C5 (17) (After 2007)		Instrument panel				Actuation Test		Y		
CITROEN C5 (17) (After 2007)		Instrument panel				Special Function	Configuration	Y		
CITROEN C5 (17) (After 2007)		Radio amplifier				Read ECU Information		Y		
CITROEN C5 (17) (After 2007)		Radio amplifier				Read Fault Code		Y		
CITROEN C5 (17) (After 2007)		Radio amplifier				Erase Fault Code		Y		
CITROEN C5 (17) (After 2007)		Radio amplifier				Actuation Test		Y		
CITROEN C5 (17) (After 2007)		CD changer / External CD player				Read ECU Information		Y		
CITROEN C5 (17) (After 2007)		CD changer / External CD player				Read Fault Code		Y		
CITROEN C5 (17) (After 2007)		CD changer / External CD player				Erase Fault Code		Y		
CITROEN C5 (17) (After 2007)		CD changer / External CD player				Actuation Test		Y		
CITROEN C5 (17) (After 2007)		CD changer / External CD player				Special Function	Configuration	Y		
CITROEN C5 (17) (After 2007)		Hands-free kit / Portable unit	IME			Read ECU Information		Y		
CITROEN C5 (17) (After 2007)		Hands-free kit / Portable unit	IME			Read Fault Code		Y		
CITROEN C5 (17) (After 2007)		Hands-free kit / Portable unit	IME			Erase Fault Code		Y		
CITROEN C5 (17) (After 2007)		Hands-free kit / Portable unit	IME			Live Data		Y		
CITROEN C5 (17) (After 2007)		Hands-free kit / Portable unit	IME			Actuation Test		Y		
CITROEN C5 (17) (After 2007)		Hands-free kit / Portable unit	IME			Special Function	Configuration	Y		
CITROEN C5 (17) (After 2007)		Hands-free kit / Portable unit	IME			Read ECU Information		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Models	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
CITROEN C5 (A7) (After 2007)		Hands-free kit / Portable unit	BOUTIER_NOMODE			Read Fault Code		Y		
CITROEN C5 (A7) (After 2007)		Hands-free kit / Portable unit	BOUTIER_NOMODE			Erase Fault Code		Y		
CITROEN C5 (A7) (After 2007)		Hands-free kit / Portable unit	BOUTIER_NOMODE			Live Data		Y		
CITROEN C5 (A7) (After 2007)		Hands-free kit / Portable unit	BOUTIER_NOMODE			Actuation Test		Y		
CITROEN C5 (A7) (After 2007)		Hands-free kit / Portable unit	BOUTIER_NOMODE			Special Function	Configuration	Y		
CITROEN C5 (A7) (After 2007)		Voltage retaining device	DMTC			Read ECU Information		Y		
CITROEN C5 (A7) (After 2007)		Voltage retaining device	DMTR			Read ECU Information		Y		
CITROEN C5 (A7) (After 2007)		Voltage retaining device	DMTR			Read Fault Code		Y		
CITROEN C5 (A7) (After 2007)		Voltage retaining device	DMTR			Erase Fault Code		Y		
CITROEN C5 (A7) (After 2007)		Voltage retaining device	DMTR_DTC3B			Read ECU Information		Y		
CITROEN C5 (A7) (After 2007)		Voltage retaining device	DMTR_DTC3B			Read Fault Code		Y		
CITROEN C5 (A7) (After 2007)		Voltage retaining device	DMTR_DTC3B			Erase Fault Code		Y		
CITROEN C5 (A7) (After 2007)		Radio	Yes	RD4		Read ECU Information		Y		
CITROEN C5 (A7) (After 2007)		Radio	Yes	RD4		Read Fault Code		Y		
CITROEN C5 (A7) (After 2007)		Radio	Yes	RD4		Erase Fault Code		Y		
CITROEN C5 (A7) (After 2007)		Radio	Yes	RD4		Live Data		Y		
CITROEN C5 (A7) (After 2007)		Radio	Yes	RD4		Actuation Test		Y		
CITROEN C5 (A7) (After 2007)		Radio	Yes	RD4		Special Function	Repair	Y		
CITROEN C5 (A7) (After 2007)		Radio	Yes	RD4S		Read ECU Information		Y		
CITROEN C5 (A7) (After 2007)		Radio	Yes	RD4S		Read Fault Code		Y		
CITROEN C5 (A7) (After 2007)		Radio	Yes	RD4S		Erase Fault Code		Y		
CITROEN C5 (A7) (After 2007)		Radio	Yes	RD4S		Live Data		Y		
CITROEN C5 (A7) (After 2007)		Radio	Yes	RD4S		Actuation Test		Y		
CITROEN C5 (A7) (After 2007)		Radio	Yes	RD4S		Special Function	Configuration	Y		
CITROEN C5 (A7) (After 2007)		Radio	Yes	RD4S		Special Function	Pack Repair	Y		
CITROEN C5 (A7) (After 2007)		Telematic unit (OTA) or audio-navigation	BOUTIER_TELEMATIQUE			Read ECU Information		Y		
CITROEN C5 (A7) (After 2007)		Telematic unit (OTA) or audio-navigation	BOUTIER_TELEMATIQUE			Read Fault Code		Y		
CITROEN C5 (A7) (After 2007)		Telematic unit (OTA) or audio-navigation	BOUTIER_TELEMATIQUE			Erase Fault Code		Y		
CITROEN C5 (A7) (After 2007)		Telematic unit (OTA) or audio-navigation	BOUTIER_TELEMATIQUE			Live Data		Y		
CITROEN C5 (A7) (After 2007)		Telematic unit (OTA) or audio-navigation	BOUTIER_TELEMATIQUE			Actuation Test		Y		
CITROEN C5 (A7) (After 2007)		Telematic unit (OTA) or audio-navigation	BOUTIER_TELEMATIQUE			Special Function	Configuration	Y		
CITROEN C5 (A7) (After 2007)		Telematic unit (OTA) or audio-navigation	BOUTIER_TELEMATIQUE			Special Function	Pack Repair	Y		
CITROEN C5 (A7) (After 2007)		Telematic unit (OTA) or audio-navigation	RADIONAV_BNEG			Read ECU Information		Y		
CITROEN C5 (A7) (After 2007)		Telematic unit (OTA) or audio-navigation	RADIONAV_BNEG			Read Fault Code		Y		
CITROEN C5 (A7) (After 2007)		Telematic unit (OTA) or audio-navigation	RADIONAV_BNEG			Erase Fault Code		Y		
CITROEN C5 (A7) (After 2007)		Telematic unit (OTA) or audio-navigation	RADIONAV_BNEG			Live Data		Y		
CITROEN C5 (A7) (After 2007)		Telematic unit (OTA) or audio-navigation	RADIONAV_BNEG			Actuation Test		Y		
CITROEN C5 (A7) (After 2007)		Telematic unit (OTA) or audio-navigation	RADIONAV_BNEG			Special Function	Configuration	Y		
CITROEN C5 (A7) (After 2007)		Telematic unit (OTA) or audio-navigation	RADIONAV_MG4			Read ECU Information		Y		
CITROEN C5 (A7) (After 2007)		Telematic unit (OTA) or audio-navigation	RADIONAV_MG4			Read Fault Code		Y		
CITROEN C5 (A7) (After 2007)		Telematic unit (OTA) or audio-navigation	RADIONAV_MG4			Erase Fault Code		Y		
CITROEN C5 (A7) (After 2007)		Telematic unit (OTA) or audio-navigation	RADIONAV_MG4			Live Data		Y		
CITROEN C5 (A7) (After 2007)		Telematic unit (OTA) or audio-navigation	RADIONAV_MG4			Actuation Test		Y		
CITROEN C5 (A7) (After 2007)		Telematic unit (OTA) or audio-navigation	RADIONAV_MG4			Special Function	Configuration	Y		
CITROEN C5 (A7) (After 2007)		Telematic unit (OTA) or audio-navigation	RADIONAV_ENEGC			Read ECU Information		Y		
CITROEN C5 (A7) (After 2007)		Telematic unit (OTA) or audio-navigation	RADIONAV_ENEGC			Read Fault Code		Y		
CITROEN C5 (A7) (After 2007)		Telematic unit (OTA) or audio-navigation	RADIONAV_ENEGC			Erase Fault Code		Y		
CITROEN C5 (A7) (After 2007)		Telematic unit (OTA) or audio-navigation	RADIONAV_ENEGC			Live Data		Y		
CITROEN C5 (A7) (After 2007)		Telematic unit (OTA) or audio-navigation	RADIONAV_ENEGC			Actuation Test		Y		
CITROEN C5 (A7) (After 2007)		Telematic unit (OTA) or audio-navigation	RADIONAV_ENEGC			Special Function	Configuration	Y		
CITROEN C5 (A7) (After 2007)		Telematic unit (OTA) or audio-navigation	INEG2010			Read ECU Information		Y		
CITROEN C5 (A7) (After 2007)		Telematic unit (OTA) or audio-navigation	INEG2010			Read Fault Code		Y		
CITROEN C5 (A7) (After 2007)		Telematic unit (OTA) or audio-navigation	INEG2010			Erase Fault Code		Y		
CITROEN C5 (A7) (After 2007)		Telematic unit (OTA) or audio-navigation	INEG2010			Live Data		Y		
CITROEN C5 (A7) (After 2007)		Telematic unit (OTA) or audio-navigation	INEG2010			Actuation Test		Y		
CITROEN C5 (A7) (After 2007)		Telematic unit (OTA) or audio-navigation	INEG2010			Special Function	Configuration	Y		
CITROEN C5 (A7) (After 2007)		Telematic unit (OTA) or audio-navigation	INEG2010			Special Function	Pack Repair	Y		
CITROEN C5 (A7) (After 2007)		Telematic unit (OTA) or audio-navigation	SMES_PLUS			Read ECU Information		Y		
CITROEN C5 (A7) (After 2007)		Telematic unit (OTA) or audio-navigation	SMES_PLUS			Read Fault Code		Y		
CITROEN C5 (A7) (After 2007)		Telematic unit (OTA) or audio-navigation	SMES_PLUS			Erase Fault Code		Y		
CITROEN C5 (A7) (After 2007)		Telematic unit (OTA) or audio-navigation	SMES_PLUS			Live Data		Y		
CITROEN C5 (A7) (After 2007)		Telematic unit (OTA) or audio-navigation	SMES_PLUS			Actuation Test		Y		
CITROEN C5 (A7) (After 2007)		Telematic unit (OTA) or audio-navigation	SMES_PLUS			Special Function	Configuration	Y		
CITROEN C5 (A7) (After 2007)		Telematic unit (OTA) or audio-navigation	SMES_PLUS			Special Function	Pack Repair	Y		
CITROEN C5 (A7) (After 2007)		Anti-theft alarm				Read ECU Information		Y		
CITROEN C5 (A7) (After 2007)		Anti-theft alarm				Read Fault Code		Y		
CITROEN C5 (A7) (After 2007)		Anti-theft alarm				Erase Fault Code		Y		
CITROEN C5 (A7) (After 2007)		Anti-theft alarm				Live Data		Y		
CITROEN C5 (A7) (After 2007)		Anti-theft alarm				Actuation Test		Y		
CITROEN C5 (A7) (After 2007)		Seat driver position memory module				Read ECU Information		Y		
CITROEN C5 (A7) (After 2007)		Seat driver position memory module				Read Fault Code		Y		
CITROEN C5 (A7) (After 2007)		Seat driver position memory module				Erase Fault Code		Y		
CITROEN C5 (A7) (After 2007)		Seat driver position memory module				Live Data		Y		
CITROEN C5 (A7) (After 2007)		Seat driver position memory module				Actuation Test		Y		
CITROEN C5 (A7) (After 2007)		Seat driver position memory module				Special Function	Configuration	Y		
CITROEN C5 (A7) (After 2007)		Seat driver position memory module				Special Function	Pack Repair	Y		
CITROEN C5 (A7) (After 2007)		Driver's door module				Read ECU Information		Y		
CITROEN C5 (A7) (After 2007)		Driver's door module				Read Fault Code		Y		
CITROEN C5 (A7) (After 2007)		Driver's door module				Erase Fault Code		Y		
CITROEN C5 (A7) (After 2007)		Driver's door module				Live Data		Y		
CITROEN C5 (A7) (After 2007)		Driver's door module				Actuation Test		Y		
CITROEN C5 (A7) (After 2007)		Service module / Independent telematic unit	MD_SERV			Read ECU Information		Y		
CITROEN C5 (A7) (After 2007)		Service module / Independent telematic unit	MD_SERV			Read Fault Code		Y		
CITROEN C5 (A7) (After 2007)		Service module / Independent telematic unit	MD_SERV			Erase Fault Code		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
CITROEN C5(L7) (After 2007)		Service module / Independent telematic unit	MD_SERV			Live Data		Y		
CITROEN C5(L7) (After 2007)		Service module / Independent telematic unit	MD_SERV			Actuation Test		Y		
CITROEN C5(L7) (After 2007)		Service module / Independent telematic unit	MD_SERV			Special Function	Configuration	Y		
CITROEN C5(L7) (After 2007)		Service module / Independent telematic unit	BTA			Read ECU Information		Y		
CITROEN C5(L7) (After 2007)		Service module / Independent telematic unit	BTA			Read Fault Code		Y		
CITROEN C5(L7) (After 2007)		Service module / Independent telematic unit	BTA			Erase Fault Code		Y		
CITROEN C5(L7) (After 2007)		Service module / Independent telematic unit	BTA			Live Data		Y		
CITROEN C5(L7) (After 2007)		Service module / Independent telematic unit	BTA			Actuation Test		Y		
CITROEN C5(L7) (After 2007)		Service module / Independent telematic unit	BTA			Special Function	Configuration	Y		
CITROEN C5(L7) (After 2007)		Service module / Independent telematic unit	BTA_CN			Read ECU Information		Y		
CITROEN C5(L7) (After 2007)		Service module / Independent telematic unit	BTA_CN			Read Fault Code		Y		
CITROEN C5(L7) (After 2007)		Service module / Independent telematic unit	BTA_CN			Erase Fault Code		Y		
CITROEN C5(L7) (After 2007)		Service module / Independent telematic unit	BTA_CN			Live Data		Y		
CITROEN C5(L7) (After 2007)		Service module / Independent telematic unit	BTA_CN			Actuation Test		Y		
CITROEN C5(L7) (After 2007)		Service module / Independent telematic unit	BTA_CN			Special Function	Configuration	Y		
CITROEN C5(L7) (After 2007)		Service module / Independent telematic unit	BTA_CN			Special Function	Pack Repair	Y		
CITROEN C5(L7) (After 2007)		Service module / Independent telematic unit	BTA_2			Read ECU Information		Y		
CITROEN C5(L7) (After 2007)		Service module / Independent telematic unit	BTA_2			Read Fault Code		Y		
CITROEN C5(L7) (After 2007)		Service module / Independent telematic unit	BTA_2			Erase Fault Code		Y		
CITROEN C5(L7) (After 2007)		Service module / Independent telematic unit	BTA_2			Live Data		Y		
CITROEN C5(L7) (After 2007)		Service module / Independent telematic unit	BTA_2			Actuation Test		Y		
CITROEN C5(L7) (After 2007)		Service module / Independent telematic unit	BTA_2			Special Function	Configuration	Y		
CITROEN C5(L7) (After 2007)		Service module / Independent telematic unit	BTA_2			Special Function	Pack Repair	Y		
CITROEN C5(L7) (After 2007)		Rain and light sensor				Read ECU Information		Y		
CITROEN C5(L7) (After 2007)		Rain and light sensor				Read Fault Code		Y		
CITROEN C5(L7) (After 2007)		Rain and light sensor				Erase Fault Code		Y		
CITROEN C5(L7) (After 2007)		Seat belt not fastened warning lights unit				Read ECU Information		Y		
CITROEN C5(L7) (After 2007)		Seat belt not fastened warning lights unit				Actuation Test		Y		
CITROEN C5(L7) (After 2007)		Motorised Boot ECU				Read ECU Information		Y		
CITROEN C5(L7) (After 2007)		Motorised Boot ECU				Read Fault Code		Y		
CITROEN C5(L7) (After 2007)		Motorised Boot ECU				Erase Fault Code		Y		
CITROEN C5(L7) (After 2007)		Motorised Boot ECU				Live Data		Y		
CITROEN C5(L7) (After 2007)		Motorised Boot ECU				Actuation Test		Y		
CITROEN C5(L7) (After 2007)		High frequency receiver				Read ECU Information		Y		
CITROEN C5(L7) (After 2007)		High frequency receiver				Read Fault Code		Y		
CITROEN C5(L7) (After 2007)		High frequency receiver				Erase Fault Code		Y		
CITROEN C5(L7) (After 2007)		High frequency receiver				Live Data		Y		
CITROEN C5(L7) (After 2007)		Active damper electronic unit				Read ECU Information		Y		
CITROEN C5(L7) (After 2007)		Active damper electronic unit				Read Fault Code		Y		
CITROEN C5(L7) (After 2007)		Active damper electronic unit				Erase Fault Code		Y		
CITROEN C5(L7) (After 2007)		Active damper electronic unit				Live Data		Y		
CITROEN C5(L7) (After 2007)		Active damper electronic unit				Actuation Test		Y		
CITROEN C5(L7) (After 2007)		Active damper electronic unit				Special Function	Pack Repair	Y		
CS AHCROSS		Engine ECU	MED17_4_4			Read ECU Information		Y		
CS AHCROSS		Engine ECU	MED17_4_4			Read Fault Code		Y		
CS AHCROSS		Engine ECU	MED17_4_4			Erase Fault Code		Y		
CS AHCROSS		Engine ECU	MED17_4_4			Live Data		Y		
CS AHCROSS		Engine ECU	MED17_4_4			Special Function	Pack Repair	Y		
CS AHCROSS		Engine ECU	MED17_4_4 EP8			Read ECU Information		Y		
CS AHCROSS		Engine ECU	MED17_4_4 EP8			Read Fault Code		Y		
CS AHCROSS		Engine ECU	MED17_4_4 EP8			Erase Fault Code		Y		
CS AHCROSS		Engine ECU	MED17_4_4 EP8			Live Data		Y		
CS AHCROSS		Engine ECU	MED17_4_4 EP8			Special Function	Pack repair	Y		
CS AHCROSS		Engine ECU	VD46			Read ECU Information		Y		
CS AHCROSS		Engine ECU	VD46			Read Fault Code		Y		
CS AHCROSS		Engine ECU	VD46			Erase Fault Code		Y		
CS AHCROSS		Engine ECU	VD46			Live Data		Y		
CS AHCROSS		Engine ECU	VD46			Special Function	Pack repair	Y		
CS AHCROSS		Gearbox ECU				Read ECU Information		Y		
CS AHCROSS		Gearbox ECU				Read Fault Code		Y		
CS AHCROSS		Gearbox ECU				Erase Fault Code		Y		
CS AHCROSS		Gearbox ECU				Live Data		Y		
CS AHCROSS		Gearbox ECU				Actuation Test		Y		
CS AHCROSS		Gearbox ECU				Special Function	Pack Repair	Y		
CS AHCROSS		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)				Read ECU Information		Y		
CS AHCROSS		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)				Read Fault Code		Y		
CS AHCROSS		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)				Erase Fault Code		Y		
CS AHCROSS		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)				Live Data		Y		
CS AHCROSS		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)				Special Function	Pack Repair	Y		
CS AHCROSS		Air bag				Read ECU Information		Y		
CS AHCROSS		Air bag				Read Fault Code		Y		
CS AHCROSS		Air bag				Erase Fault Code		Y		
CS AHCROSS		Air bag				Live Data		Y		
CS AHCROSS		Air bag				Special Function	Pack Repair	Y		
CS AHCROSS		Parking aid				Read ECU Information		Y		
CS AHCROSS		Parking aid				Read Fault Code		Y		
CS AHCROSS		Parking aid				Erase Fault Code		Y		
CS AHCROSS		Parking aid				Live Data		Y		
CS AHCROSS		Vehicle distance assistance				Read ECU Information		Y		
CS AHCROSS		Vehicle distance assistance				Read Fault Code		Y		
CS AHCROSS		Vehicle distance assistance				Erase Fault Code		Y		
CS AHCROSS		Vehicle distance assistance				Live Data		Y		
CS AHCROSS		Vehicle distance assistance				Actuation Test		Y		
CS AHCROSS		Anti-slip mode selector				Read ECU Information		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
CS AHCROSS		Anti-slip mode selector				Read Fault Code		Y		
CS AHCROSS		Anti-slip mode selector				Live Data		Y		
CS AHCROSS		Electric steering lock				Read ECU Information		Y		
CS AHCROSS		Electric steering lock				Read Fault Code		Y		
CS AHCROSS		Electric steering lock				Erase Fault Code		Y		
CS AHCROSS		Electric steering lock				Live Data		Y		
CS AHCROSS		Electric steering lock				Actuation Test		Y		
CS AHCROSS		Motorised Boot ECU				Read ECU Information		Y		
CS AHCROSS		Motorised Boot ECU				Read Fault Code		Y		
CS AHCROSS		Motorised Boot ECU				Erase Fault Code		Y		
CS AHCROSS		Motorised Boot ECU				Live Data		Y		
CS AHCROSS		Directional headlamps				Read ECU Information		Y		
CS AHCROSS		Directional headlamps				Read Fault Code		Y		
CS AHCROSS		Directional headlamps				Erase Fault Code		Y		
CS AHCROSS		Directional headlamps				Live Data		Y		
CS AHCROSS		Directional headlamps				Actuation Test		Y		
CS AHCROSS		Directional headlamps				Special Function	Pack repair	Y		
CS AHCROSS		Rain-sunlight sensor				Read ECU Information		Y		
CS AHCROSS		Rain-sunlight sensor				Read Fault Code		Y		
CS AHCROSS		Rain-sunlight sensor				Erase Fault Code		Y		
CS AHCROSS		Rain-sunlight sensor				Live Data		Y		
CS AHCROSS		Control of the telematic unit				Read ECU Information		Y		
CS AHCROSS		Control of the telematic unit				Read Fault Code		Y		
CS AHCROSS		Control of the telematic unit				Erase Fault Code		Y		
CS AHCROSS		Control of the telematic unit				Live Data		Y		
CS AHCROSS		Control on the steering wheel (VCI)				Read ECU Information		Y		
CS AHCROSS		Control on the steering wheel (VCI)				Read Fault Code		Y		
CS AHCROSS		Control on the steering wheel (VCI)				Erase Fault Code		Y		
CS AHCROSS		Control on the steering wheel (VCI)				Live Data		Y		
CS AHCROSS		Control on the steering wheel (VCI)				Actuation Test		Y		
CS AHCROSS		Power steering electric pump unit				Read ECU Information		Y		
CS AHCROSS		Power steering electric pump unit				Read Fault Code		Y		
CS AHCROSS		Power steering electric pump unit				Erase Fault Code		Y		
CS AHCROSS		Power steering electric pump unit				Live Data		Y		
CS AHCROSS		Voltage retaining device				Read ECU Information		Y		
CS AHCROSS		Voltage retaining device				Read Fault Code		Y		
CS AHCROSS		Voltage retaining device				Erase Fault Code		Y		
CS AHCROSS		Multiplexed control panel				Read ECU Information		Y		
CS AHCROSS		Multiplexed control panel				Read Fault Code		Y		
CS AHCROSS		Multiplexed control panel				Erase Fault Code		Y		
CS AHCROSS		Multiplexed control panel				Live Data		Y		
CS AHCROSS		Multiplexed control panel				Actuation Test		Y		
CS AHCROSS		Controls under the steering wheel				Read ECU Information		Y		
CS AHCROSS		Controls under the steering wheel				Read Fault Code		Y		
CS AHCROSS		Controls under the steering wheel				Erase Fault Code		Y		
CS AHCROSS		Controls under the steering wheel				Live Data		Y		
CS AHCROSS		Controls under the steering wheel				Special Function	Pack repair	Y		
CS AHCROSS		Service module				Read ECU Information		Y		
CS AHCROSS		Service module				Read Fault Code		Y		
CS AHCROSS		Service module				Erase Fault Code		Y		
CS AHCROSS		Service module				Live Data		Y		
CS AHCROSS		Driver's door module				Read ECU Information		Y		
CS AHCROSS		Driver's door module				Read Fault Code		Y		
CS AHCROSS		Driver's door module				Erase Fault Code		Y		
CS AHCROSS		Driver's door module				Live Data		Y		
CS AHCROSS		Seat belts not fastened LED unit				Read ECU Information		Y		
CS AHCROSS		Seat belts not fastened LED unit				Actuation Test		Y		
CS AHCROSS		Battery charge status unit				Read ECU Information		Y		
CS AHCROSS		Battery charge status unit				Read Fault Code		Y		
CS AHCROSS		Battery charge status unit				Erase Fault Code		Y		
CS AHCROSS		Battery charge status unit				Live Data		Y		
CS AHCROSS		Air conditioning				Read ECU Information		Y		
CS AHCROSS		Air conditioning				Read Fault Code		Y		
CS AHCROSS		Air conditioning				Erase Fault Code		Y		
CS AHCROSS		Air conditioning				Live Data		Y		
CS AHCROSS		Air conditioning				Actuation Test		Y		
CS AHCROSS		Control panel	COMBINE_IDS			Read ECU Information		Y		
CS AHCROSS		Control panel	COMBINE_IDS			Read Fault Code		Y		
CS AHCROSS		Control panel	COMBINE_IDS			Erase Fault Code		Y		
CS AHCROSS		Control panel	COMBINE_IDS			Live Data		Y		
CS AHCROSS		Control panel	C100CO			Read ECU Information		Y		
CS AHCROSS		Control panel	C100CO			Read Fault Code		Y		
CS AHCROSS		Control panel	C100CO			Erase Fault Code		Y		
CS AHCROSS		Control panel	C100CO			Live Data		Y		
CS AHCROSS		Automatic gearbox electric control				Read ECU Information		Y		
CS AHCROSS		Automatic gearbox electric control				Read Fault Code		Y		
CS AHCROSS		Automatic gearbox electric control				Erase Fault Code		Y		
CS AHCROSS		Automatic gearbox electric control				Live Data		Y		
CS AHCROSS		Automatic gearbox electric control				Actuation Test		Y		
CS (378)		Built-in systems interface				Read ECU Information		Y		
CS (378)		Built-in systems interface				Read Fault Code		Y		
CS (378)		Built-in systems interface				Erase Fault Code		Y		
CS (378)		Built-in systems interface				Special Function	Maintenance-BSI operating mode	Y		
CS (378)		Built-in systems interface				Special Function	Pack repair	Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
CS (3780)		Engine management ECU	MED17_4_4			Read ECU Information		Y		
CS (3780)		Engine management ECU	MED17_4_4			Read Fault Code		Y		
CS (3780)		Engine management ECU	MED17_4_4			Erase Fault Code		Y		
CS (3780)		Engine management ECU	MED17_4_4			Live Data		Y		
CS (3780)		Engine management ECU	MED17_4_4			Actuation Test		Y		
CS (3780)		Engine management ECU	MED17_4_4			Special Function	Pack Reparation	Y		
CS (3780)		Engine management ECU	MED17_4_4_EP8			Read ECU Information		Y		
CS (3780)		Engine management ECU	MED17_4_4_EP8			Read Fault Code		Y		
CS (3780)		Engine management ECU	MED17_4_4_EP8			Erase Fault Code		Y		
CS (3780)		Engine management ECU	MED17_4_4_EP8			Live Data		Y		
CS (3780)		Engine management ECU	MED17_4_4_EP8			Actuation Test		Y		
CS (3780)		Engine management ECU	MED17_4_4_EP8			Special Function	Pack Reparation	Y		
CS (3780)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)				Read ECU Information		Y		
CS (3780)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)				Read Fault Code		Y		
CS (3780)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)				Erase Fault Code		Y		
CS (3780)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)				Live Data		Y		
CS (3780)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)				Actuation Test		Y		
CS (3780)		Under-inflation detection				Read ECU Information		Y		
CS (3780)		Under-inflation detection				Read Fault Code		Y		
CS (3780)		Under-inflation detection				Erase Fault Code		Y		
CS (3780)		Under-inflation detection				Live Data		Y		
CS (3780)		Under-inflation detection				Special Function	Pack Reparation	Y		
CS (3780)		Air conditioning				Read ECU Information		Y		
CS (3780)		Air conditioning				Read Fault Code		Y		
CS (3780)		Air conditioning				Erase Fault Code		Y		
CS (3780)		Air conditioning				Live Data		Y		
CS (3780)		Air conditioning				Actuation Test		Y		
CS (3780)		Power steering				Read ECU Information		Y		
CS (3780)		Power steering				Read Fault Code		Y		
CS (3780)		Power steering				Erase Fault Code		Y		
CS (3780)		Power steering				Live Data		Y		
CS (3780)		Power steering				Actuation Test		Y		
CS (3780)		Control on the steering wheel / integral controls steering wheel				Read ECU Information		Y		
CS (3780)		Control on the steering wheel / integral controls steering wheel				Read Fault Code		Y		
CS (3780)		Control on the steering wheel / integral controls steering wheel				Erase Fault Code		Y		
CS (3780)		Control on the steering wheel / integral controls steering wheel				Live Data		Y		
CS (3780)		Air bags and pre-tensioners control unit				Read ECU Information		Y		
CS (3780)		Air bags and pre-tensioners control unit				Read Fault Code		Y		
CS (3780)		Air bags and pre-tensioners control unit				Erase Fault Code		Y		
CS (3780)		Air bags and pre-tensioners control unit				Live Data		Y		
CS (3780)		Service module / Independent telematic unit				Read ECU Information		Y		
CS (3780)		Service module / Independent telematic unit				Read Fault Code		Y		
CS (3780)		Service module / Independent telematic unit				Erase Fault Code		Y		
CS (3780)		Service module / Independent telematic unit				Live Data		Y		
CS (3780)		Service module / Independent telematic unit				Actuation Test		Y		
CS (3780)		Parking assistance				Read ECU Information		Y		
CS (3780)		Parking assistance				Read Fault Code		Y		
CS (3780)		Parking assistance				Erase Fault Code		Y		
CS (3780)		Parking assistance				Live Data		Y		
CS (3780)		Parking assistance				Actuation Test		Y		
CS (3780)		Multifunction video recordign camera				Read ECU Information		Y		
CS (3780)		Multifunction video recordign camera				Read Fault Code		Y		
CS (3780)		Multifunction video recordign camera				Erase Fault Code		Y		
CS (3780)		Multifunction video recordign camera				Live Data		Y		
CS (3780)		Controls under the steering wheel				Read ECU Information		Y		
CS (3780)		Controls under the steering wheel				Read Fault Code		Y		
CS (3780)		Controls under the steering wheel				Erase Fault Code		Y		
CS (3780)		Controls under the steering wheel				Live Data		Y		
CS (3780)		Controls under the steering wheel				Actuation Test		Y		
CS (3780)		Multiplexed control panel				Read ECU Information		Y		
CS (3780)		Multiplexed control panel				Read Fault Code		Y		
CS (3780)		Multiplexed control panel				Erase Fault Code		Y		
CS (3780)		Multiplexed control panel				Live Data		Y		
CS (3780)		Multiplexed control panel				Actuation Test		Y		
CS (3780)		Battery charge status unit				Read ECU Information		Y		
CS (3780)		Battery charge status unit				Read Fault Code		Y		
CS (3780)		Battery charge status unit				Erase Fault Code		Y		
CS (3780)		Battery charge status unit				Live Data		Y		
CS (3780)		Electric steering lock				Read ECU Information		Y		
CS (3780)		Electric steering lock				Read Fault Code		Y		
CS (3780)		Electric steering lock				Erase Fault Code		Y		
CS (3780)		Electric steering lock				Live Data		Y		
CS (3780)		Voltage retaining device				Read ECU Information		Y		
CS (3780)		Voltage retaining device				Read Fault Code		Y		
CS (3780)		Voltage retaining device				Erase Fault Code		Y		
CS (3780)		Panoramic visual assistance ECU				Read ECU Information		Y		
CS (3780)		Panoramic visual assistance ECU				Read Fault Code		Y		
CS (3780)		Panoramic visual assistance ECU				Erase Fault Code		Y		
CS (3780)		Panoramic visual assistance ECU				Live Data		Y		
CS (3780)		Touch screen				Read ECU Information		Y		
CS (3780)		Touch screen				Read Fault Code		Y		
CS (3780)		Touch screen				Erase Fault Code		Y		
CS (3780)		Touch screen				Live Data		Y		
CS (3780)		Touch screen				Actuation Test		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
CS (X780)		Driver's door module				Read ECU Information		Y		
CS (X780)		Driver's door module				Read Fault Code		Y		
CS (X780)		Driver's door module				Erase Fault Code		Y		
CS (X780)		Driver's door module				Live Data		Y		
CS (X780)		Driver's door module				Actuation Test		Y		
CS (X780)		Telematic unit (RTX) or audio/navigation				Read ECU Information		Y		
CS (X780)		Telematic unit (RTX) or audio/navigation				Read Fault Code		Y		
CS (X780)		Telematic unit (RTX) or audio/navigation				Erase Fault Code		Y		
CS (X780)		Telematic unit (RTX) or audio/navigation				Live Data		Y		
CS (X780)		Telematic unit (RTX) or audio/navigation				Actuation Test		Y		
CS (X780)		Rain and brightness sensor				Read ECU Information		Y		
CS (X780)		Rain and brightness sensor				Read Fault Code		Y		
CS (X780)		Rain and brightness sensor				Erase Fault Code		Y		
CS (X780)		Rain and brightness sensor				Live Data		Y		
CS (X780)		Audio amplifier				Read ECU Information		Y		
CS (X780)		Audio amplifier				Read Fault Code		Y		
CS (X780)		Audio amplifier				Erase Fault Code		Y		
CS (X780)		Audio amplifier				Actuation Test		Y		
CS (X780)		Dynamic headlamp height adjuster				Read ECU Information		Y		
CS (X780)		Dynamic headlamp height adjuster				Read Fault Code		Y		
CS (X780)		Dynamic headlamp height adjuster				Erase Fault Code		Y		
CS (X780)		Dynamic headlamp height adjuster				Live Data		Y		
CS (X780)		Dynamic headlamp height adjuster				Actuation Test		Y		
CS (X780)		Dynamic headlamp height adjuster				Special Function	Pack Repair	Y		
CS (X780)		Front left seat heated pads and ventilation regulation ECU				Read ECU Information		Y		
CS (X780)		Front left seat heated pads and ventilation regulation ECU				Read Fault Code		Y		
CS (X780)		Front left seat heated pads and ventilation regulation ECU				Live Data		Y		
CS (X780)		Front left seat heated pads and ventilation regulation ECU				Actuation Test		Y		
CS (X780)		Front right seat heated pads and ventilation regulation ECU				Read ECU Information		Y		
CS (X780)		Front right seat heated pads and ventilation regulation ECU				Read Fault Code		Y		
CS (X780)		Front right seat heated pads and ventilation regulation ECU				Live Data		Y		
CS (X780)		Front right seat heated pads and ventilation regulation ECU				Actuation Test		Y		
CS (X780)		Automatic gearbox or controlled manual gearbox				Read ECU Information		Y		
CS (X780)		Automatic gearbox or controlled manual gearbox				Read Fault Code		Y		
CS (X780)		Automatic gearbox or controlled manual gearbox				Erase Fault Code		Y		
CS (X780)		Automatic gearbox or controlled manual gearbox				Live Data		Y		
CS (X780)		Automatic gearbox or controlled manual gearbox				Actuation Test		Y		
CS (X780)		Control of the telematic unit				Read ECU Information		Y		
CS (X780)		Control of the telematic unit				Read Fault Code		Y		
CS (X780)		Seat driver position memory module				Read ECU Information		Y		
CS (X780)		Seat driver position memory module				Read Fault Code		Y		
CS (X780)		Seat driver position memory module				Erase Fault Code		Y		
CS (X780)		Seat driver position memory module				Live Data		Y		
CS (X780)		Seat driver position memory module				Actuation Test		Y		
CS (X780)		Seat driver position memory module				Special Function	Pack Repair	Y		
CS (X780)		Instrument panel	CIBOCCO			Read ECU Information		Y		
CS (X780)		Instrument panel	CIBOCCO			Read Fault Code		Y		
CS (X780)		Instrument panel	CIBOCCO			Erase Fault Code		Y		
CS (X780)		Instrument panel	CIBOCCO			Live Data		Y		
CS (X780)		Instrument panel	CIBOCCO			Actuation Test		Y		
CS (X780)		Instrument panel	COMBINE_IDS			Read ECU Information		Y		
CS (X780)		Instrument panel	COMBINE_IDS			Read Fault Code		Y		
CS (X780)		Instrument panel	COMBINE_IDS			Erase Fault Code		Y		
CS (X780)		Instrument panel	COMBINE_IDS			Live Data		Y		
CS (X780)		Instrument panel	COMBINE_IDS			Actuation Test		Y		
CS (X780)		Left hand windscreen wiper motor				Read ECU Information		Y		
CS (X780)		Left hand windscreen wiper motor				Read Fault Code		Y		
CS (X780)		Left hand windscreen wiper motor				Erase Fault Code		Y		
CS (X780)		Left hand windscreen wiper motor				Live Data		Y		
CS (X780)		Left hand windscreen wiper motor				Actuation Test		Y		
CS (X780)		Right hand windscreen wiper motor				Read ECU Information		Y		
CS (X780)		Right hand windscreen wiper motor				Read Fault Code		Y		
CS (X780)		Right hand windscreen wiper motor				Erase Fault Code		Y		
CS (X780)		Right hand windscreen wiper motor				Live Data		Y		
CS (X780)		Right hand windscreen wiper motor				Actuation Test		Y		
CS (E43C)		Built-in systems interface				Read ECU Information		Y		
CS (E43C)		Built-in systems interface				Read Fault Code		Y		
CS (E43C)		Built-in systems interface				Erase Fault Code		Y		
CS (E43C)		Built-in systems interface				Special Function	Maintenance- built-in systems interface(OSM)operating mode	Y		
CS (E43C)		Engine management ECU	OMI_V156			Read ECU Information		Y		
CS (E43C)		Engine management ECU	OMI_V156			Read Fault Code		Y		
CS (E43C)		Engine management ECU	OMI_V156			Erase Fault Code		Y		
CS (E43C)		Engine management ECU	OMI_V156			Live Data		Y		
CS (E43C)		Engine management ECU	OMI_V156			Actuation Test		Y		
CS (E43C)		Engine management ECU	OMI_V156			Special Function	Pack Repair	Y		
CS (E43C)		Engine management ECU	OMI_M61CS003			Read ECU Information		Y		
CS (E43C)		Engine management ECU	OMI_M61CS003			Read Fault Code		Y		
CS (E43C)		Engine management ECU	OMI_M61CS003			Erase Fault Code		Y		
CS (E43C)		Engine management ECU	OMI_M61CS003			Live Data		Y		
CS (E43C)		Engine management ECU	OMI_M61CS003			Actuation Test		Y		
CS (E43C)		Engine management ECU	OMI_M61CS003			Special Function	Pack Repair	Y		
CS (E43C)		Engine management ECU	OMI_M61CS042			Read ECU Information		Y		
CS (E43C)		Engine management ECU	OMI_M61CS042			Read Fault Code		Y		
CS (E43C)		Engine management ECU	OMI_M61CS042			Erase Fault Code		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function reasons	Add (Y/N)	Verification (Y/N)	Remarks
CS0(643C)		Engine management ECU	OMI_MG1CS042			Live Data		Y		
CS0(643C)		Engine management ECU	OMI_MG1CS042			Actuation Test		Y		
CS0(643C)		Engine management ECU	OMI_MG1CS042			Special Function	Pack Repair	Y		
CS0(643C)		Engine management ECU	OMI_MG1CS042_PHEV			Read ECU Information		Y		
CS0(643C)		Engine management ECU	OMI_MG1CS042_PHEV			Read Fault Code		Y		
CS0(643C)		Engine management ECU	OMI_MG1CS042_PHEV			Erase Fault Code		Y		
CS0(643C)		Engine management ECU	OMI_MG1CS042_PHEV			Live Data		Y		
CS0(643C)		Engine management ECU	OMI_MG1CS042_PHEV			Actuation Test		Y		
CS0(643C)		Engine management ECU	OMI_MG1CS042_PHEV			Special Function	Pack Repair	Y		
CS0(643C)		Breac ECU				Read ECU Information		Y		
CS0(643C)		Electric machine management ECU				Read ECU Information		Y		
CS0(643C)		Electric machine management ECU				Read Fault Code		Y		
CS0(643C)		Electric machine management ECU				Erase Fault Code		Y		
CS0(643C)		Electric machine management ECU				Live Data		Y		
CS0(643C)		Traction battery ECU				Read ECU Information		Y		
CS0(643C)		Traction battery ECU				Read Fault Code		Y		
CS0(643C)		Traction battery ECU				Erase Fault Code		Y		
CS0(643C)		Traction battery ECU				Live Data		Y		
CS0(643C)		Traction battery ECU				Special Function	Pack repair	Y		
CS0(643C)		On-board charger / direct voltage transformer assembly				Read ECU Information		Y		
CS0(643C)		On-board charger / direct voltage transformer assembly				Read Fault Code		Y		
CS0(643C)		On-board charger / direct voltage transformer assembly				Erase Fault Code		Y		
CS0(643C)		On-board charger / direct voltage transformer assembly				Live Data		Y		
CS0(643C)		On-board charger / direct voltage transformer assembly				Actuation Test		Y		
CS0(643C)		On-board charger / direct voltage transformer assembly				Special Function	Pack repair	Y		
CS0(643C)		Electric / hybrid drive train supervisor ECU				Read ECU Information		Y		
CS0(643C)		Electric / hybrid drive train supervisor ECU				Read Fault Code		Y		
CS0(643C)		Electric / hybrid drive train supervisor ECU				Erase Fault Code		Y		
CS0(643C)		Electric / hybrid drive train supervisor ECU				Live Data		Y		
CS0(643C)		Electric / hybrid drive train supervisor ECU				Actuation Test		Y		
CS0(643C)		Ancillaries battery 1 switch				Read ECU Information		Y		
CS0(643C)		Ancillaries battery 1 switch				Read Fault Code		Y		
CS0(643C)		Ancillaries battery 1 switch				Erase Fault Code		Y		
CS0(643C)		Ancillaries battery 1 switch				Live Data		Y		
CS0(643C)		Ancillaries battery 2 switch				Read ECU Information		Y		
CS0(643C)		Ancillaries battery 2 switch				Read Fault Code		Y		
CS0(643C)		Ancillaries battery 2 switch				Erase Fault Code		Y		
CS0(643C)		Ancillaries battery 2 switch				Live Data		Y		
CS0(643C)		Electrical brake servo master cylinder				Read ECU Information		Y		
CS0(643C)		Electrical brake servo master cylinder				Read Fault Code		Y		
CS0(643C)		Electrical brake servo master cylinder				Erase Fault Code		Y		
CS0(643C)		Electrical brake servo master cylinder				Live Data		Y		
CS0(643C)		Automatic or piloted manual gearbox	BVA_A3NS			Read ECU Information		Y		
CS0(643C)		Automatic or piloted manual gearbox	BVA_A3NS			Read Fault Code		Y		
CS0(643C)		Automatic or piloted manual gearbox	BVA_A3NS			Erase Fault Code		Y		
CS0(643C)		Automatic or piloted manual gearbox	BVA_A3NS			Live Data		Y		
CS0(643C)		Automatic or piloted manual gearbox	BVA_A3NS			Actuation Test		Y		
CS0(643C)		Automatic or piloted manual gearbox	BVA_EATNS			Read ECU Information		Y		
CS0(643C)		Automatic or piloted manual gearbox	BVA_EATNS			Read Fault Code		Y		
CS0(643C)		Automatic or piloted manual gearbox	BVA_EATNS			Erase Fault Code		Y		
CS0(643C)		Automatic or piloted manual gearbox	BVA_EATNS			Live Data		Y		
CS0(643C)		Automatic or piloted manual gearbox	BVA_EATNS			Actuation Test		Y		
CS0(643C)		Sequential gear lever				Read ECU Information		Y		
CS0(643C)		Sequential gear lever				Read Fault Code		Y		
CS0(643C)		Sequential gear lever				Erase Fault Code		Y		
CS0(643C)		Sequential gear lever				Live Data		Y		
CS0(643C)		Sequential gear lever				Actuation Test		Y		
CS0(643C)		Power steering				Read ECU Information		Y		
CS0(643C)		Power steering				Read Fault Code		Y		
CS0(643C)		Power steering				Erase Fault Code		Y		
CS0(643C)		Power steering				Live Data		Y		
CS0(643C)		Power steering				Special Function	Pack Repair	Y		
CS0(643C)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)				Read ECU Information		Y		
CS0(643C)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)				Read Fault Code		Y		
CS0(643C)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)				Erase Fault Code		Y		
CS0(643C)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)				Live Data		Y		
CS0(643C)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)				Actuation Test		Y		
CS0(643C)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)				Special Function	Pack repair	Y		
CS0(643C)		Variable damping suspension ECU				Read ECU Information		Y		
CS0(643C)		Variable damping suspension ECU				Read Fault Code		Y		
CS0(643C)		Variable damping suspension ECU				Erase Fault Code		Y		
CS0(643C)		Variable damping suspension ECU				Live Data		Y		
CS0(643C)		Variable damping suspension ECU				Actuation Test		Y		
CS0(643C)		Left-hand headlamp	No			Read ECU Information		Y		
CS0(643C)		Left-hand headlamp	No			Read Fault Code		Y		
CS0(643C)		Left-hand headlamp	No			Erase Fault Code		Y		
CS0(643C)		Left-hand headlamp	No			Live Data		Y		
CS0(643C)		Left-hand headlamp	Yes			Read ECU Information		Y		
CS0(643C)		Left-hand headlamp	Yes			Read Fault Code		Y		
CS0(643C)		Left-hand headlamp	Yes			Erase Fault Code		Y		
CS0(643C)		Left-hand headlamp	Yes			Live Data		Y		
CS0(643C)		Left-hand headlamp	Yes			Actuation Test		Y		
CS0(643C)		Right-hand headlamp	No			Read ECU Information		Y		
CS0(643C)		Right-hand headlamp	No			Read Fault Code		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
CS(E43C)		Right-hand headlamp	No			Erase Fault Code		Y		
CS(E43C)		Right-hand headlamp	No			Live Data		Y		
CS(E43C)		Right-hand headlamp	Yes			Read ECU Information		Y		
CS(E43C)		Right-hand headlamp	Yes			Read Fault Code		Y		
CS(E43C)		Right-hand headlamp	Yes			Erase Fault Code		Y		
CS(E43C)		Right-hand headlamp	Yes			Live Data		Y		
CS(E43C)		Pedestrian horn				Read ECU Information		Y		
CS(E43C)		Pedestrian horn				Read Fault Code		Y		
CS(E43C)		Pedestrian horn				Erase Fault Code		Y		
CS(E43C)		Passenger compartment distribution unit (IDR)				Read ECU Information		Y		
CS(E43C)		Passenger compartment distribution unit (IDR)				Read Fault Code		Y		
CS(E43C)		Passenger compartment distribution unit (IDR)				Erase Fault Code		Y		
CS(E43C)		Passenger compartment distribution unit (IDR)				Live Data		Y		
CS(E43C)		Trailer relay unit				Read ECU Information		Y		
CS(E43C)		Trailer relay unit				Read Fault Code		Y		
CS(E43C)		Trailer relay unit				Erase Fault Code		Y		
CS(E43C)		Trailer relay unit				Live Data		Y		
CS(E43C)		Trailer relay unit				Actuation Test		Y		
CS(E43C)		Battery charge status control unit				Read ECU Information		Y		
CS(E43C)		Battery charge status control unit				Read Fault Code		Y		
CS(E43C)		Battery charge status control unit				Erase Fault Code		Y		
CS(E43C)		Battery charge status control unit				Live Data		Y		
CS(E43C)		Hands-free unit				Read ECU Information		Y		
CS(E43C)		Hands-free unit				Read Fault Code		Y		
CS(E43C)		Hands-free unit				Erase Fault Code		Y		
CS(E43C)		Hands-free unit				Live Data		Y		
CS(E43C)		Hands-free unit				Actuation Test		Y		
CS(E43C)		Instrument panel	COMBINE_IDS_EV	NO		Read ECU Information		Y		
CS(E43C)		Instrument panel	COMBINE_IDS_EV	NO		Read Fault Code		Y		
CS(E43C)		Instrument panel	COMBINE_IDS_EV	NO		Erase Fault Code		Y		
CS(E43C)		Instrument panel	COMBINE_IDS_EV	NO		Live Data		Y		
CS(E43C)		Instrument panel	COMBINE_IDS_EV	NO		Actuation Test		Y		
CS(E43C)		Instrument panel	COMBINE_IDS_EV	YES		Read ECU Information		Y		
CS(E43C)		Instrument panel	COMBINE_IDS_EV	YES		Read Fault Code		Y		
CS(E43C)		Instrument panel	COMBINE_IDS_EV	YES		Erase Fault Code		Y		
CS(E43C)		Instrument panel	COMBINE_IDS_EV	YES		Live Data		Y		
CS(E43C)		Instrument panel	COMBINE_IDS_EV	YES		Actuation Test		Y		
CS(E43C)		Instrument panel	DCS			Read ECU Information		Y		
CS(E43C)		Instrument panel	DCS			Read Fault Code		Y		
CS(E43C)		Instrument panel	DCS			Erase Fault Code		Y		
CS(E43C)		Instrument panel	DCS			Live Data		Y		
CS(E43C)		Instrument panel	DCS			Actuation Test		Y		
CS(E43C)		Instrument panel	CLUSTER_BOX			Read ECU Information		Y		
CS(E43C)		Instrument panel	CLUSTER_BOX			Read Fault Code		Y		
CS(E43C)		Instrument panel	CLUSTER_BOX			Erase Fault Code		Y		
CS(E43C)		Instrument panel	CLUSTER_BOX			Live Data		Y		
CS(E43C)		Instrument panel	CLUSTER_BOX			Actuation Test		Y		
CS(E43C)		Display on the instrument panel				Read ECU Information		Y		
CS(E43C)		Display on the instrument panel				Read Fault Code		Y		
CS(E43C)		Display on the instrument panel				Erase Fault Code		Y		
CS(E43C)		Display on the instrument panel				Live Data		Y		
CS(E43C)		Display on the instrument panel				Actuation Test		Y		
CS(E43C)		Head Up Display				Read ECU Information		Y		
CS(E43C)		Head Up Display				Read Fault Code		Y		
CS(E43C)		Head Up Display				Erase Fault Code		Y		
CS(E43C)		Head Up Display				Live Data		Y		
CS(E43C)		Head Up Display				Actuation Test		Y		
CS(E43C)		Controls under the steering wheel				Read ECU Information		Y		
CS(E43C)		Controls under the steering wheel				Read Fault Code		Y		
CS(E43C)		Controls under the steering wheel				Erase Fault Code		Y		
CS(E43C)		Controls under the steering wheel				Live Data		Y		
CS(E43C)		Controls under the steering wheel				Actuation Test		Y		
CS(E43C)		Controls on the steering wheel / integral controls steering wheel				Read ECU Information		Y		
CS(E43C)		Controls on the steering wheel / integral controls steering wheel				Read Fault Code		Y		
CS(E43C)		Controls on the steering wheel / integral controls steering wheel				Erase Fault Code		Y		
CS(E43C)		Controls on the steering wheel / integral controls steering wheel				Live Data		Y		
CS(E43C)		Steering wheel ECU (SWE)	NO			Read ECU Information		Y		
CS(E43C)		Steering wheel ECU (SWE)	NO			Read Fault Code		Y		
CS(E43C)		Steering wheel ECU (SWE)	NO			Erase Fault Code		Y		
CS(E43C)		Steering wheel ECU (SWE)	NO			Live Data		Y		
CS(E43C)		Steering wheel ECU (SWE)	YES			Read ECU Information		Y		
CS(E43C)		Steering wheel ECU (SWE)	YES			Read Fault Code		Y		
CS(E43C)		Steering wheel ECU (SWE)	YES			Erase Fault Code		Y		
CS(E43C)		Steering wheel ECU (SWE)	YES			Live Data		Y		
CS(E43C)		Multifunction control panel				Read ECU Information		Y		
CS(E43C)		Multifunction control panel				Read Fault Code		Y		
CS(E43C)		Multifunction control panel				Erase Fault Code		Y		
CS(E43C)		Multifunction control panel				Live Data		Y		
CS(E43C)		Multifunction control panel				Actuation Test		Y		
CS(E43C)		Airbags and pretensioners ECU				Read ECU Information		Y		
CS(E43C)		Airbags and pretensioners ECU				Read Fault Code		Y		
CS(E43C)		Airbags and pretensioners ECU				Erase Fault Code		Y		
CS(E43C)		Airbags and pretensioners ECU				Live Data		Y		
CS(E43C)		Seat belt not fastened warning lights unit				Read ECU Information		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
CSX(643C)		Windscreen wiper				Read ECU Information		Y		
CSX(643C)		Windscreen wiper				Read Fault Code		Y		
CSX(643C)		Windscreen wiper				Erase Fault Code		Y		
CSX(643C)		Windscreen wiper				Live Data		Y		
CSX(643C)		Windscreen wiper				Actuation Test		Y		
CSX(643C)		Rain and brightness sensor				Read ECU Information		Y		
CSX(643C)		Rain and brightness sensor				Read Fault Code		Y		
CSX(643C)		Rain and brightness sensor				Erase Fault Code		Y		
CSX(643C)		Rain and brightness sensor				Live Data		Y		
CSX(643C)		Panoramic visual assistance ECU				Read ECU Information		Y		
CSX(643C)		Panoramic visual assistance ECU				Read Fault Code		Y		
CSX(643C)		Panoramic visual assistance ECU				Erase Fault Code		Y		
CSX(643C)		Multifunction video camera				Read ECU Information		Y		
CSX(643C)		Multifunction video camera				Read Fault Code		Y		
CSX(643C)		Multifunction video camera				Erase Fault Code		Y		
CSX(643C)		Multifunction video camera				Live Data		Y		
CSX(643C)		Multifunction video camera				Actuation Test		Y		
CSX(643C)		Vehicle Distance Assistance				Read ECU Information		Y		
CSX(643C)		Vehicle Distance Assistance				Read Fault Code		Y		
CSX(643C)		Vehicle Distance Assistance				Erase Fault Code		Y		
CSX(643C)		Vehicle Distance Assistance				Live Data		Y		
CSX(643C)		Front left-hand corner radar				Read ECU Information		Y		
CSX(643C)		Front left-hand corner radar				Read Fault Code		Y		
CSX(643C)		Front left-hand corner radar				Erase Fault Code		Y		
CSX(643C)		Front left-hand corner radar				Live Data		Y		
CSX(643C)		Front right-hand corner radar				Read ECU Information		Y		
CSX(643C)		Front right-hand corner radar				Read Fault Code		Y		
CSX(643C)		Front right-hand corner radar				Erase Fault Code		Y		
CSX(643C)		Front right-hand corner radar				Live Data		Y		
CSX(643C)		Rear left-hand corner radar				Read ECU Information		Y		
CSX(643C)		Rear left-hand corner radar				Read Fault Code		Y		
CSX(643C)		Rear left-hand corner radar				Erase Fault Code		Y		
CSX(643C)		Rear left-hand corner radar				Live Data		Y		
CSX(643C)		Rear right-hand corner radar				Read ECU Information		Y		
CSX(643C)		Rear right-hand corner radar				Read Fault Code		Y		
CSX(643C)		Rear right-hand corner radar				Erase Fault Code		Y		
CSX(643C)		Rear right-hand corner radar				Live Data		Y		
CSX(643C)		Night vision ECU				Read ECU Information		Y		
CSX(643C)		Night vision ECU				Read Fault Code		Y		
CSX(643C)		Night vision ECU				Erase Fault Code		Y		
CSX(643C)		Night vision ECU				Live Data		Y		
CSX(643C)		Parking assistance				Read ECU Information		Y		
CSX(643C)		Parking assistance				Read Fault Code		Y		
CSX(643C)		Parking assistance				Erase Fault Code		Y		
CSX(643C)		Parking assistance				Live Data		Y		
CSX(643C)		Touch screen				Read ECU Information		Y		
CSX(643C)		Touch screen				Read Fault Code		Y		
CSX(643C)		Touch screen				Erase Fault Code		Y		
CSX(643C)		Touch screen				Live Data		Y		
CSX(643C)		Touch screen				Actuation Test		Y		
CSX(643C)		Touch screen	DISPLAY_TOUCH_PAD			Read ECU Information		Y		
CSX(643C)		Touch screen	DISPLAY_TOUCH_PAD			Read Fault Code		Y		
CSX(643C)		Touch screen	DISPLAY_TOUCH_PAD			Erase Fault Code		Y		
CSX(643C)		Touch screen	DISPLAY_TOUCH_PAD			Live Data		Y		
CSX(643C)		Touch screen	DISPLAY_TOUCH_PAD			Actuation Test		Y		
CSX(643C)		Touch screen	RECOMP_TOUCH_SCREEN			Read ECU Information		Y		
CSX(643C)		Touch screen	RECOMP_TOUCH_SCREEN			Read Fault Code		Y		
CSX(643C)		Touch screen	RECOMP_TOUCH_SCREEN			Erase Fault Code		Y		
CSX(643C)		Touch screen	RECOMP_TOUCH_SCREEN			Live Data		Y		
CSX(643C)		Touch screen	RECOMP_TOUCH_SCREEN			Actuation Test		Y		
CSX(643C)		Audio/navigation / connected audio system	IVI_HEAD_INIT			Read ECU Information		Y		
CSX(643C)		Audio/navigation / connected audio system	IVI_HEAD_INIT			Read Fault Code		Y		
CSX(643C)		Audio/navigation / connected audio system	IVI_HEAD_INIT			Erase Fault Code		Y		
CSX(643C)		Audio/navigation / connected audio system	IVI_HEAD_INIT			Live Data		Y		
CSX(643C)		Audio/navigation / connected audio system	IVI_HEAD_INIT			Actuation Test		Y		
CSX(643C)		Audio/navigation / connected audio system	A12_NEA			Read ECU Information		Y		
CSX(643C)		Audio/navigation / connected audio system	A12_NEA			Read Fault Code		Y		
CSX(643C)		Audio/navigation / connected audio system	A12_NEA			Erase Fault Code		Y		
CSX(643C)		Audio/navigation / connected audio system	A12_NEA			Live Data		Y		
CSX(643C)		Audio/navigation / connected audio system	A12_NEA			Actuation Test		Y		
CSX(643C)		Audio/navigation system / connected audio system controls				Read ECU Information		Y		
CSX(643C)		Audio/navigation system / connected audio system controls				Read Fault Code		Y		
CSX(643C)		Anti-theft alarm				Read ECU Information		Y		
CSX(643C)		Anti-theft alarm				Read Fault Code		Y		
CSX(643C)		Anti-theft alarm				Erase Fault Code		Y		
CSX(643C)		Anti-theft alarm				Live Data		Y		
CSX(643C)		Intrusion alarm siren				Read ECU Information		Y		
CSX(643C)		Intrusion alarm siren				Read Fault Code		Y		
CSX(643C)		Intrusion alarm siren				Erase Fault Code		Y		
CSX(643C)		Intrusion alarm siren				Live Data		Y		
CSX(643C)		Intrusion alarm siren				Actuation Test		Y		
CSX(643C)		Motorised Boot Unit				Read ECU Information		Y		
CSX(643C)		Motorised Boot Unit				Read Fault Code		Y		
CSX(643C)		Motorised Boot Unit				Erase Fault Code		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
CSX(E43C)		Motorized Boot Unit				Live Data		Y		
CSX(E43C)		Motorized Boot Unit				Actuation Test		Y		
CSX(E43C)		Driver's door ECU	NO			Read ECU Information		Y		
CSX(E43C)		Driver's door ECU	NO			Read Fault Code		Y		
CSX(E43C)		Driver's door ECU	NO			Erase Fault Code		Y		
CSX(E43C)		Driver's door ECU	NO			Live Data		Y		
CSX(E43C)		Driver's door ECU	NO			Actuation Test		Y		
CSX(E43C)		Driver's door ECU	YES			Read ECU Information		Y		
CSX(E43C)		Driver's door ECU	YES			Read Fault Code		Y		
CSX(E43C)		Driver's door ECU	YES			Erase Fault Code		Y		
CSX(E43C)		Driver's door ECU	YES			Live Data		Y		
CSX(E43C)		Driver's door ECU	YES			Actuation Test		Y		
CSX(E43C)		Front passenger's door ECU	NO			Read ECU Information		Y		
CSX(E43C)		Front passenger's door ECU	NO			Read Fault Code		Y		
CSX(E43C)		Front passenger's door ECU	NO			Erase Fault Code		Y		
CSX(E43C)		Front passenger's door ECU	NO			Live Data		Y		
CSX(E43C)		Front passenger's door ECU	NO			Actuation Test		Y		
CSX(E43C)		Front passenger's door ECU	YES			Read ECU Information		Y		
CSX(E43C)		Front passenger's door ECU	YES			Read Fault Code		Y		
CSX(E43C)		Front passenger's door ECU	YES			Erase Fault Code		Y		
CSX(E43C)		Front passenger's door ECU	YES			Live Data		Y		
CSX(E43C)		Front passenger's door ECU	YES			Actuation Test		Y		
CSX(E43C)		Rear left-hand door ECU				Read ECU Information		Y		
CSX(E43C)		Rear left-hand door ECU				Read Fault Code		Y		
CSX(E43C)		Rear left-hand door ECU				Erase Fault Code		Y		
CSX(E43C)		Rear left-hand door ECU				Live Data		Y		
CSX(E43C)		Rear left-hand door ECU				Actuation Test		Y		
CSX(E43C)		Rear right-hand door ECU				Read ECU Information		Y		
CSX(E43C)		Rear right-hand door ECU				Read Fault Code		Y		
CSX(E43C)		Rear right-hand door ECU				Erase Fault Code		Y		
CSX(E43C)		Rear right-hand door ECU				Live Data		Y		
CSX(E43C)		Rear right-hand door ECU				Actuation Test		Y		
CSX(E43C)		Hands full access ECU, right hand side or rear				Read ECU Information		Y		
CSX(E43C)		Hands full access ECU, right hand side or rear				Read Fault Code		Y		
CSX(E43C)		Sunroof				Read ECU Information		Y		
CSX(E43C)		Sunroof				Read Fault Code		Y		
CSX(E43C)		Sunroof				Erase Fault Code		Y		
CSX(E43C)		Sunroof	NO			Live Data		Y		
CSX(E43C)		Sunroof				Special Function	Pack Repair	Y		
CSX(E43C)		Air con compressor				Read ECU Information		Y		
CSX(E43C)		Air con compressor				Read Fault Code		Y		
CSX(E43C)		Air con compressor				Live Data		Y		
CSX(E43C)		Electric coolant heater				Read ECU Information		Y		
CSX(E43C)		Electric coolant heater				Read Fault Code		Y		
CSX(E43C)		Electric coolant heater				Live Data		Y		
CSX(E43C)		Electric coolant heater				Actuation Test		Y		
CSX(E43C)		Front left seat heated pads and ventilation regulation ECU				Read ECU Information		Y		
CSX(E43C)		Front left seat heated pads and ventilation regulation ECU				Read Fault Code		Y		
CSX(E43C)		Front left seat heated pads and ventilation regulation ECU				Live Data		Y		
CSX(E43C)		Front left seat heated pads and ventilation regulation ECU				Actuation Test		Y		
CSX(E43C)		Front right seat heated pads and ventilation regulation ECU				Read ECU Information		Y		
CSX(E43C)		Front right seat heated pads and ventilation regulation ECU				Read Fault Code		Y		
CSX(E43C)		Front right seat heated pads and ventilation regulation ECU				Live Data		Y		
CSX(E43C)		Front right seat heated pads and ventilation regulation ECU				Actuation Test		Y		
CSX(E43C)		Driver's seat comfort ECU				Read ECU Information		Y		
CSX(E43C)		Driver's seat comfort ECU				Read Fault Code		Y		
CSX(E43C)		Driver's seat comfort ECU				Erase Fault Code		Y		
CSX(E43C)		Driver's seat comfort ECU				Live Data		Y		
CSX(E43C)		Driver's seat comfort ECU				Actuation Test		Y		
CSX(E43C)		Driver's seat pneumatic functions ECU	NO			Read Fault Code		Y		
CSX(E43C)		Driver's seat pneumatic functions ECU	NO			Live Data		Y		
CSX(E43C)		Driver's seat pneumatic functions ECU	NO			Actuation Test		Y		
CSX(E43C)		Driver's seat pneumatic functions ECU	YES			Read Fault Code		Y		
CSX(E43C)		Driver's seat pneumatic functions ECU	YES			Live Data		Y		
CSX(E43C)		Passenger's seat pneumatic functions ECU				Read ECU Information		Y		
CSX(E43C)		Passenger's seat pneumatic functions ECU				Read Fault Code		Y		
CSX(E43C)		Passenger's seat pneumatic functions ECU				Live Data		Y		
CSX(E43C)		Passenger's seat pneumatic functions ECU				Actuation Test		Y		
CSX(E43C)		Wireless charger				Read ECU Information		Y		
CSX(E43C)		Wireless charger				Read Fault Code		Y		
CSX(E43C)		Wireless charger				Erase Fault Code		Y		
CSX(E43C)		Wireless charger				Live Data		Y		
CSX(E43C)		Wireless charger				Actuation Test		Y		
CSX(E43C)		Service module / Independent telematic unit				Read ECU Information		Y		
CSX(E43C)		Service module / Independent telematic unit				Read Fault Code		Y		
CSX(E43C)		Service module / Independent telematic unit				Erase Fault Code		Y		
CSX(E43C)		Service module / Independent telematic unit				Live Data		Y		
CSX(E43C)		Service module / Independent telematic unit				Actuation Test		Y		
CSX(E43C)		Electric steering lock				Read ECU Information		Y		
CSX(E43C)		Electric steering lock				Read Fault Code		Y		
CSX(E43C)		Electric steering lock				Erase Fault Code		Y		
CSX(E43C)		Electric steering lock				Live Data		Y		
CS		Built-in systems interface				Read ECU Information		Y		
CS		Built-in systems interface				Read Fault Code		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function reasons	Add (Y/N)	Verification (Y/N)	Remarks
06		Built-in systems interface				Erase Fault Code		Y		
06		Engine management ECU	Petrol engine	ME747	ME747 3XV	Read ECU Information		Y		
06		Engine management ECU	Petrol engine	ME747	ME747 3XV	Read Fault Code		Y		
06		Engine management ECU	Petrol engine	ME747	ME747 3XV	Erase Fault Code		Y		
06		Engine management ECU	Petrol engine	ME747	ME747 3XV	Live Data		Y		
06		Engine management ECU	Petrol engine	ME747	ME747 3XV	Actuation Test		Y		
06		Engine management ECU	Petrol engine	ME747	ME747 3XV	Special Function	Configuration	Y		
06		Engine management ECU	Petrol engine	ME747	ME747 3XV	Special Function	Pack Repair	Y		
06		Engine management ECU	Petrol engine	ME747	ME747 3XU	Read ECU Information		Y		
06		Engine management ECU	Petrol engine	ME747	ME747 3XU	Read Fault Code		Y		
06		Engine management ECU	Petrol engine	ME747	ME747 3XU	Erase Fault Code		Y		
06		Engine management ECU	Petrol engine	ME747	ME747 3XU	Live Data		Y		
06		Engine management ECU	Petrol engine	ME747	ME747 3XU	Actuation Test		Y		
06		Engine management ECU	Petrol engine	ME747	ME747 3XU	Special Function	Configuration	Y		
06		Engine management ECU	Petrol engine	ME747	ME747 3XU	Special Function	Pack Repair	Y		
06		Engine management ECU	Diesel engine	EDC16C39	EDC16C39 40P	Read ECU Information		Y		
06		Engine management ECU	Diesel engine	EDC16C39	EDC16C39 40P	Read Fault Code		Y		
06		Engine management ECU	Diesel engine	EDC16C39	EDC16C39 40P	Erase Fault Code		Y		
06		Engine management ECU	Diesel engine	EDC16C39	EDC16C39 40P	Live Data		Y		
06		Engine management ECU	Diesel engine	EDC16C39	EDC16C39 40P	Actuation Test		Y		
06		Engine management ECU	Diesel engine	EDC16C39	EDC16C39 40P	Special Function	Configuration	Y		
06		Engine management ECU	Diesel engine	EDC16C39	EDC16C39 40P	Special Function	Pack Repair	Y		
06		Engine management ECU	Diesel engine	EDC16C39	EDC16C39 40R	Read ECU Information		Y		
06		Engine management ECU	Diesel engine	EDC16C39	EDC16C39 40R	Read Fault Code		Y		
06		Engine management ECU	Diesel engine	EDC16C39	EDC16C39 40R	Erase Fault Code		Y		
06		Engine management ECU	Diesel engine	EDC16C39	EDC16C39 40R	Live Data		Y		
06		Engine management ECU	Diesel engine	EDC16C39	EDC16C39 40R	Actuation Test		Y		
06		Engine management ECU	Diesel engine	EDC16C39	EDC16C39 40R	Special Function	Configuration	Y		
06		Engine management ECU	Diesel engine	EDC16C39	EDC16C39 40R	Special Function	Pack Repair	Y		
06		Engine management ECU	Diesel engine	EDC16C39	EDC16C39 40S	Read ECU Information		Y		
06		Engine management ECU	Diesel engine	EDC16C39	EDC16C39 40S	Read Fault Code		Y		
06		Engine management ECU	Diesel engine	EDC16C39	EDC16C39 40S	Erase Fault Code		Y		
06		Engine management ECU	Diesel engine	EDC16C39	EDC16C39 40S	Live Data		Y		
06		Engine management ECU	Diesel engine	EDC16C39	EDC16C39 40S	Actuation Test		Y		
06		Engine management ECU	Diesel engine	EDC16C39	EDC16C39 40S	Special Function	Configuration	Y		
06		Engine management ECU	Diesel engine	EDC16C39	EDC16C39 40S	Special Function	Pack Repair	Y		
06		Engine management ECU	Diesel engine	EDC16C39	EDC16C39 40T	Read ECU Information		Y		
06		Engine management ECU	Diesel engine	EDC16C39	EDC16C39 40T	Read Fault Code		Y		
06		Engine management ECU	Diesel engine	EDC16C39	EDC16C39 40T	Erase Fault Code		Y		
06		Engine management ECU	Diesel engine	EDC16C39	EDC16C39 40T	Live Data		Y		
06		Engine management ECU	Diesel engine	EDC16C39	EDC16C39 40T	Actuation Test		Y		
06		Engine management ECU	Diesel engine	EDC16C39	EDC16C39 40T	Special Function	Configuration	Y		
06		Engine management ECU	Diesel engine	EDC16C39	EDC16C39 40T	Special Function	Pack Repair	Y		
06		Engine management ECU	Diesel engine	SID201	SID201 1BZ	Read ECU Information		Y		
06		Engine management ECU	Diesel engine	SID201	SID201 1BZ	Read Fault Code		Y		
06		Engine management ECU	Diesel engine	SID201	SID201 1BZ	Erase Fault Code		Y		
06		Engine management ECU	Diesel engine	SID201	SID201 1BZ	Live Data		Y		
06		Engine management ECU	Diesel engine	SID201	SID201 1BZ	Actuation Test		Y		
06		Engine management ECU	Diesel engine	SID201	SID201 1BZ	Special Function	Pack Repair	Y		
06		Engine management ECU	Diesel engine	SID201	SID201 1BZ	Special Function	Configuration	Y		
06		Engine management ECU	Diesel engine	EDC17CP11	EDC17CP11 38Z	Read ECU Information		Y		
06		Engine management ECU	Diesel engine	EDC17CP11	EDC17CP11 38Z	Read Fault Code		Y		
06		Engine management ECU	Diesel engine	EDC17CP11	EDC17CP11 38Z	Erase Fault Code		Y		
06		Engine management ECU	Diesel engine	EDC17CP11	EDC17CP11 38Z	Live Data		Y		
06		Engine management ECU	Diesel engine	EDC17CP11	EDC17CP11 38Z	Actuation Test		Y		
06		Engine management ECU	Diesel engine	EDC17CP11	EDC17CP11 38Z	Special Function	Configuration	Y		
06		Engine management ECU	Diesel engine	EDC17CP11	EDC17CP11 38Z	Special Function	Pack Repair	Y		
06		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP_EBC_440(K)			Read ECU Information		Y		
06		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP_EBC_440(K)			Read Fault Code		Y		
06		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP_EBC_440(K)			Erase Fault Code		Y		
06		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP_EBC_440(K)			Live Data		Y		
06		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP_EBC_440(K)			Actuation Test		Y		
06		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP_EBC_440(K)			Special Function	Configuration	Y		
06		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP_EBC_440(K)			Special Function	Pack Repair	Y		
06		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP_EBC_440(CAN)			Read ECU Information		Y		
06		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP_EBC_440(CAN)			Read Fault Code		Y		
06		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP_EBC_440(CAN)			Erase Fault Code		Y		
06		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP_EBC_440(CAN)			Live Data		Y		
06		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP_EBC_440(CAN)			Actuation Test		Y		
06		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP_EBC_440(CAN)			Special Function	Configuration	Y		
06		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP_EBC_440(CAN)			Special Function	Pack Repair	Y		
06		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	81 ESP			Read ECU Information		Y		
06		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	81 ESP			Read Fault Code		Y		
06		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	81 ESP			Erase Fault Code		Y		
06		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	81 ESP			Live Data		Y		
06		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	81 ESP			Actuation Test		Y		
06		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	81 ESP			Special Function	Configuration	Y		
06		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	81 ESP			Special Function	Pack Repair	Y		
06		Automatic gearbox or controlled manual gearbox	BVA_0M6			Read ECU Information		Y		
06		Automatic gearbox or controlled manual gearbox	BVA_0M6			Read Fault Code		Y		
06		Automatic gearbox or controlled manual gearbox	BVA_0M6			Erase Fault Code		Y		
06		Automatic gearbox or controlled manual gearbox	BVA_0M6			Live Data		Y		
06		Automatic gearbox or controlled manual gearbox	BVA_0M6			Actuation Test		Y		
06		Automatic gearbox or controlled manual gearbox	BVA_0M6			Special Function	Configuration	Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
06		Automatic gearbox or controlled manual gearbox	BVA_AM6			Special Function	Replacement parts	Y		
06		Automatic gearbox or controlled manual gearbox	BVA_AM6			Special Function	Oil wear counter	Y		
06		Automatic gearbox or controlled manual gearbox	BVA_AM6_AT6_EB005			Read ECU Information		Y		
06		Automatic gearbox or controlled manual gearbox	BVA_AM6_AT6_EB005			Read Fault Code		Y		
06		Automatic gearbox or controlled manual gearbox	BVA_AM6_AT6_EB005			Erase Fault Code		Y		
06		Automatic gearbox or controlled manual gearbox	BVA_AM6_AT6_EB005			Live Data		Y		
06		Automatic gearbox or controlled manual gearbox	BVA_AM6_AT6_EB005			Actuation Test		Y		
06		Automatic gearbox or controlled manual gearbox	BVA_AM6_AT6_EB005			Special Function	Oil wear counter	Y		
06		Automatic gearbox or controlled manual gearbox	BVA_AM6_AT6_EB005			Special Function	Configuration	Y		
06		Automatic gearbox or controlled manual gearbox	BVA_AM6_AT6_EB005			Special Function	Pack Repair	Y		
06		Air bags and pre-tensioners control unit				Read ECU Information		Y		
06		Air bags and pre-tensioners control unit				Read Fault Code		Y		
06		Air bags and pre-tensioners control unit				Erase Fault Code		Y		
06		Air bags and pre-tensioners control unit				Live Data		Y		
06		Air bags and pre-tensioners control unit				Special Function	Configuration	Y		
06		Air bags and pre-tensioners control unit				Special Function	Pack Repair	Y		
06		Power steering				Read ECU Information		Y		
06		Power steering				Read Fault Code		Y		
06		Power steering				Erase Fault Code		Y		
06		Power steering				Live Data		Y		
06		Power steering				Actuation Test		Y		
06		Electronically managed suspension				Read ECU Information		Y		
06		Electronically managed suspension				Read Fault Code		Y		
06		Electronically managed suspension				Erase Fault Code		Y		
06		Electronically managed suspension				Live Data		Y		
06		Electronically managed suspension				Actuation Test		Y		
06		Electronically managed suspension				Special Function	Configuration	Y		
06		Electronically managed suspension				Special Function	Pack Repair	Y		
06		Variable damping ECU				Read ECU Information		Y		
06		Variable damping ECU				Read Fault Code		Y		
06		Variable damping ECU				Erase Fault Code		Y		
06		Variable damping ECU				Live Data		Y		
06		Variable damping ECU				Actuation Test		Y		
06		Variable damping ECU				Special Function	Pack Repair	Y		
06		Additional heating				Read ECU Information		Y		
06		Additional heating				Read Fault Code		Y		
06		Additional heating				Erase Fault Code		Y		
06		Additional heating				Live Data		Y		
06		Additional heating				Actuation Test		Y		
06		Additional heating				Special Function	Pack Repair	Y		
06		Under-inflation detection				Read ECU Information		Y		
06		Under-inflation detection				Read Fault Code		Y		
06		Under-inflation detection				Erase Fault Code		Y		
06		Under-inflation detection				Live Data		Y		
06		Under-inflation detection				Special Function	Pack Repair	Y		
06		Dynamic headlamp height adjuster				Read ECU Information		Y		
06		Dynamic headlamp height adjuster				Read Fault Code		Y		
06		Dynamic headlamp height adjuster				Erase Fault Code		Y		
06		Dynamic headlamp height adjuster				Live Data		Y		
06		Dynamic headlamp height adjuster				Actuation Test		Y		
06		Dynamic headlamp height adjuster				Special Function	Configuration	Y		
06		Right-hand dynamic headlamp height adjuster				Read ECU Information		Y		
06		Right-hand dynamic headlamp height adjuster				Read Fault Code		Y		
06		Right-hand dynamic headlamp height adjuster				Erase Fault Code		Y		
06		Right-hand dynamic headlamp height adjuster				Live Data		Y		
06		Right-hand dynamic headlamp height adjuster				Actuation Test		Y		
06		Right-hand dynamic headlamp height adjuster				Special Function	Configuration	Y		
06		Right-hand dynamic headlamp height adjuster				Special Function	Pack Repair	Y		
06		Left-hand dynamic headlamp height adjuster				Read ECU Information		Y		
06		Left-hand dynamic headlamp height adjuster				Read Fault Code		Y		
06		Left-hand dynamic headlamp height adjuster				Erase Fault Code		Y		
06		Left-hand dynamic headlamp height adjuster				Live Data		Y		
06		Left-hand dynamic headlamp height adjuster				Actuation Test		Y		
06		Left-hand dynamic headlamp height adjuster				Special Function	Configuration	Y		
06		Battery charge status unit	BECD			Read ECU Information		Y		
06		Battery charge status unit	BECD			Read Fault Code		Y		
06		Battery charge status unit	BECD			Erase Fault Code		Y		
06		Battery charge status unit	BECD			Live Data		Y		
06		Battery charge status unit	BECD_GEN2			Read ECU Information		Y		
06		Battery charge status unit	BECD_GEN2			Read Fault Code		Y		
06		Battery charge status unit	BECD_GEN2			Erase Fault Code		Y		
06		Battery charge status unit	BECD_GEN2			Live Data		Y		
06		Electric secondary brake				Read ECU Information		Y		
06		Electric secondary brake				Read Fault Code		Y		
06		Electric secondary brake				Erase Fault Code		Y		
06		Electric secondary brake				Live Data		Y		
06		Electric secondary brake				Actuation Test		Y		
06		Electric secondary brake				Special Function	Configuration	Y		
06		Electric secondary brake				Special Function	Pack Repair	Y		
06		Lane departure warning system				Read ECU Information		Y		
06		Lane departure warning system				Read Fault Code		Y		
06		Lane departure warning system				Erase Fault Code		Y		
06		Lane departure warning system				Live Data		Y		
06		Lane departure warning system				Actuation Test		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Models	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function subitems	Add (Y/N)	Verification (Y/N)	Remarks
06		Lane departure warning system				Special Function	Configuration	Y		
06		Boot relay unit				Read ECU Information		Y		
06		Boot relay unit				Read Fault Code		Y		
06		Boot relay unit				Erase Fault Code		Y		
06		Boot relay unit				Live Data		Y		
06		Engine relay unit				Read ECU Information		Y		
06		Engine relay unit				Read Fault Code		Y		
06		Engine relay unit				Erase Fault Code		Y		
06		Engine relay unit				Live Data		Y		
06		Engine relay unit				Actuation Test		Y		
06		Trailer relay unit				Read ECU Information		Y		
06		Trailer relay unit				Read Fault Code		Y		
06		Trailer relay unit				Erase Fault Code		Y		
06		Trailer relay unit				Live Data		Y		
06		Trailer relay unit				Actuation Test		Y		
06		Instrument panel				Read ECU Information		Y		
06		Instrument panel				Read Fault Code		Y		
06		Instrument panel				Erase Fault Code		Y		
06		Instrument panel				Live Data		Y		
06		Instrument panel				Actuation Test		Y		
06		Instrument panel				Special Function	Pack Repair	Y		
06		Multifunction screen	Type "A" (segments),with buttons			Read ECU Information		Y		
06		Multifunction screen	Type "A" (segments),with buttons			Read Fault Code		Y		
06		Multifunction screen	Type "A" (segments),with buttons			Erase Fault Code		Y		
06		Multifunction screen	Type "A" (segments),with buttons			Live Data		Y		
06		Multifunction screen	Type "A" (segments),with buttons			Actuation Test		Y		
06		Multifunction screen	Type "A" (segments),with buttons			Special Function	Configuration	Y		
06		Multifunction screen	Type "A" (segments),with buttons			Special Function	Pack Repair	Y		
06		Multifunction screen	Type "A" (segments),without button			Read ECU Information		Y		
06		Multifunction screen	Type "A" (segments),without button			Read Fault Code		Y		
06		Multifunction screen	Type "A" (segments),without button			Erase Fault Code		Y		
06		Multifunction screen	Type "A" (segments),without button			Live Data		Y		
06		Multifunction screen	Type "A" (segments),without button			Actuation Test		Y		
06		Multifunction screen	Type "A" (segments),without button			Special Function	Configuration	Y		
06		Multifunction screen	Type "A" (segments),without button			Special Function	Pack Repair	Y		
06		Multifunction screen	Type "C" (dot matrix)			Read ECU Information		Y		
06		Multifunction screen	Type "C" (dot matrix)			Read Fault Code		Y		
06		Multifunction screen	Type "C" (dot matrix)			Erase Fault Code		Y		
06		Multifunction screen	Type "C" (dot matrix)			Live Data		Y		
06		Multifunction screen	Type "C" (dot matrix)			Actuation Test		Y		
06		Multifunction screen	Type "C" (dot matrix)			Special Function	Configuration	Y		
06		Multifunction screen	Type "C" (dot matrix)			Special Function	Pack Repair	Y		
06		Multifunction screen	Type "C colour" (dot matrix)			Read ECU Information		Y		
06		Multifunction screen	Type "C colour" (dot matrix)			Read Fault Code		Y		
06		Multifunction screen	Type "C colour" (dot matrix)			Erase Fault Code		Y		
06		Multifunction screen	Type "C colour" (dot matrix)			Live Data		Y		
06		Multifunction screen	Type "C colour" (dot matrix)			Actuation Test		Y		
06		Multifunction screen	Type "C colour" (dot matrix)			Special Function	Configuration	Y		
06		Multifunction screen	Type "C colour" (dot matrix)			Special Function	Pack Repair	Y		
06		Windscreen wiper				Read ECU Information		Y		
06		Windscreen wiper				Read Fault Code		Y		
06		Windscreen wiper				Erase Fault Code		Y		
06		Windscreen wiper				Actuation Test		Y		
06		Windscreen wiper				Special Function	Configuration	Y		
06		Windscreen wiper				Special Function	Pack Repair	Y		
06		Parking assistance				Read ECU Information		Y		
06		Parking assistance				Read Fault Code		Y		
06		Parking assistance				Erase Fault Code		Y		
06		Parking assistance				Live Data		Y		
06		Parking assistance				Special Function	Configuration	Y		
06		Parking assistance				Special Function	Pack Repair	Y		
06		Controls under the steering wheel				Read ECU Information		Y		
06		Controls under the steering wheel				Read Fault Code		Y		
06		Controls under the steering wheel				Erase Fault Code		Y		
06		Controls under the steering wheel				Live Data		Y		
06		Controls under the steering wheel				Actuation Test		Y		
06		Controls under the steering wheel				Special Function	Pack Repair	Y		
06		Air conditioning				Read ECU Information		Y		
06		Air conditioning				Read Fault Code		Y		
06		Air conditioning				Erase Fault Code		Y		
06		Air conditioning				Live Data		Y		
06		Air conditioning				Actuation Test		Y		
06		Hands-free kit / Portable unit	IME			Read ECU Information		Y		
06		Hands-free kit / Portable unit	IME			Read Fault Code		Y		
06		Hands-free kit / Portable unit	IME			Erase Fault Code		Y		
06		Hands-free kit / Portable unit	IME			Live Data		Y		
06		Hands-free kit / Portable unit	IME			Actuation Test		Y		
06		Hands-free kit / Portable unit	IME			Special Function	Configuration	Y		
06		Hands-free kit / Portable unit	BOITIER_NOMADE			Read ECU Information		Y		
06		Hands-free kit / Portable unit	BOITIER_NOMADE			Read Fault Code		Y		
06		Hands-free kit / Portable unit	BOITIER_NOMADE			Erase Fault Code		Y		
06		Hands-free kit / Portable unit	BOITIER_NOMADE			Live Data		Y		
06		Hands-free kit / Portable unit	BOITIER_NOMADE			Actuation Test		Y		
06		Hands-free kit / Portable unit	BOITIER_NOMADE			Special Function	Configuration	Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification on (Y/N)	Remarks
06		Radio				Read ECU Information		Y		
06		Radio				Read Fault Code		Y		
06		Radio				Erase Fault Code		Y		
06		Radio				Live Data		Y		
06		Radio				Actuation Test		Y		
06		Radio				Special Function	Configuration	Y		
06		Radio				Special Function	Replacement parts	Y		
06		Telematic unit (OTA) or audio-navigation				Read ECU Information		Y		
06		Telematic unit (OTA) or audio-navigation				Read Fault Code		Y		
06		Telematic unit (OTA) or audio-navigation				Erase Fault Code		Y		
06		Telematic unit (OTA) or audio-navigation				Live Data		Y		
06		Telematic unit (OTA) or audio-navigation				Actuation Test		Y		
06		Telematic unit (OTA) or audio-navigation				Special Function	Configuration	Y		
06		Telematic unit (OTA) or audio-navigation				Special Function	Pack Repair	Y		
06		CD changer / External CD player				Read ECU Information		Y		
06		CD changer / External CD player				Read Fault Code		Y		
06		CD changer / External CD player				Erase Fault Code		Y		
06		CD changer / External CD player				Actuation Test		Y		
06		CD changer / External CD player				Special Function	Configuration	Y		
06		Anti-theft alarm				Read ECU Information		Y		
06		Anti-theft alarm				Read Fault Code		Y		
06		Anti-theft alarm				Erase Fault Code		Y		
06		Anti-theft alarm				Live Data		Y		
06		Anti-theft alarm				Actuation Test		Y		
06		Anti-theft alarm				Special Function	Configuration	Y		
06		Anti-theft alarm				Special Function	Pack Repair	Y		
06		Rear seats position memorisation unit				Read ECU Information		Y		
06		Rear seats position memorisation unit				Read Fault Code		Y		
06		Rear seats position memorisation unit				Erase Fault Code		Y		
06		Rear seats position memorisation unit				Live Data		Y		
06		Rear seats position memorisation unit				Actuation Test		Y		
06		Rear seats position memorisation unit				Special Function	Configuration	Y		
06		Rear seats position memorisation unit				Special Function	Learning	Y		
06		Seat passenger position memory module				Read ECU Information		Y		
06		Seat passenger position memory module				Read Fault Code		Y		
06		Seat passenger position memory module				Erase Fault Code		Y		
06		Seat passenger position memory module				Live Data		Y		
06		Seat passenger position memory module				Actuation Test		Y		
06		Seat passenger position memory module				Special Function	Configuration	Y		
06		Seat passenger position memory module				Special Function	Pack Repair	Y		
06		Seat driver position memory module				Read ECU Information		Y		
06		Seat driver position memory module				Read Fault Code		Y		
06		Seat driver position memory module				Erase Fault Code		Y		
06		Seat driver position memory module				Live Data		Y		
06		Seat driver position memory module				Actuation Test		Y		
06		Seat driver position memory module				Special Function	Configuration	Y		
06		Seat driver position memory module				Special Function	Pack Repair	Y		
06		Passenger's door module				Read ECU Information		Y		
06		Passenger's door module				Read Fault Code		Y		
06		Passenger's door module				Erase Fault Code		Y		
06		Passenger's door module				Live Data		Y		
06		Passenger's door module				Actuation Test		Y		
06		Passenger's door module				Special Function	Replacement parts	Y		
06		Driver's door module				Read ECU Information		Y		
06		Driver's door module				Read Fault Code		Y		
06		Driver's door module				Erase Fault Code		Y		
06		Driver's door module				Live Data		Y		
06		Driver's door module				Actuation Test		Y		
06		Driver's door module				Special Function	Replacement parts	Y		
06		Driver's seat panel				Read ECU Information		Y		
06		Driver's seat panel				Read Fault Code		Y		
06		Driver's seat panel				Erase Fault Code		Y		
06		Driver's seat panel				Live Data		Y		
06		Driver's seat panel				Actuation Test		Y		
06		Driver's seat panel				Special Function	Configuration	Y		
06		Passenger's seat panel				Read ECU Information		Y		
06		Passenger's seat panel				Read Fault Code		Y		
06		Passenger's seat panel				Erase Fault Code		Y		
06		Passenger's seat panel				Live Data		Y		
06		Passenger's seat panel				Actuation Test		Y		
06		Passenger's seat panel				Special Function	Configuration	Y		
06		Moving panel deflector				Read ECU Information		Y		
06		Moving panel deflector				Read Fault Code		Y		
06		Moving panel deflector				Erase Fault Code		Y		
06		Moving panel deflector				Live Data		Y		
06		Moving panel deflector				Actuation Test		Y		
06		Moving panel deflector				Special Function	Pack Repair	Y		
06		Headlamp beam corrector	CISPD			Read ECU Information		Y		
06		Headlamp beam corrector	CISPD			Live Data		Y		
06		Headlamp beam corrector	CISPG			Read ECU Information		Y		
06		Headlamp beam corrector	CISPG			Live Data		Y		
06		Rear air conditioning table				Read ECU Information		Y		
06		Rear air conditioning table				Read Fault Code		Y		
06		Rear air conditioning table				Erase Fault Code		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
06		Rear air conditioning table				Live Data		Y		
06		Rear air conditioning table				Actuation Test		Y		
06		Rear air conditioning table				Special Function	Pack Repair	Y		
06		High Head Vision				Read ECU Information		Y		
06		High Head Vision				Read Fault Code		Y		
06		High Head Vision				Erase Fault Code		Y		
06		High Head Vision				Live Data		Y		
06		High Head Vision				Actuation Test		Y		
06		High Head Vision				Special Function	Configuration	Y		
06		Rain and light sensor				Read ECU Information		Y		
06		Rain and light sensor				Read Fault Code		Y		
06		Rain and light sensor				Erase Fault Code		Y		
06		Pedestrian impact detection unit				Read ECU Information		Y		
06		Pedestrian impact detection unit				Read Fault Code		Y		
06		Pedestrian impact detection unit				Erase Fault Code		Y		
06		Pedestrian impact detection unit				Live Data		Y		
06		Pedestrian impact detection unit				Special Function	Configuration	Y		
06		High frequency receiver				Read ECU Information		Y		
06		High frequency receiver				Read Fault Code		Y		
06		High frequency receiver				Erase Fault Code		Y		
06		High frequency receiver				Live Data		Y		
06(081)		Built-in systems interface				Read ECU Information		Y		
06(081)		Built-in systems interface				Read Fault Code		Y		
06(081)		Built-in systems interface				Erase Fault Code		Y		
06(081)		Built-in systems interface				Live Data		Y		
06(081)		Built-in systems interface				Actuation Test		Y		
06(081)		Engine management ECU	MED17_4_4			Read ECU Information		Y		
06(081)		Engine management ECU	MED17_4_4			Read Fault Code		Y		
06(081)		Engine management ECU	MED17_4_4			Erase Fault Code		Y		
06(081)		Engine management ECU	MED17_4_4			Live Data		Y		
06(081)		Engine management ECU	MED17_4_4			Actuation Test		Y		
06(081)		Engine management ECU	MED17_4_4			Special Function	Temporary reactivation of the Stop and Start function(for a maximum distance)	Y		
06(081)		Engine management ECU	MED17_4_4			Special Function	Work on the ancillaries battery	Y		
06(081)		Engine management ECU	MED17_4_4			Special Function	Initialization of the autoadaptive values	Y		
06(081)		Engine management ECU	MED17_4_4			Special Function	Replacement parts	Y		
06(081)		Engine management ECU	MED17_4_4 EP8			Read ECU Information		Y		
06(081)		Engine management ECU	MED17_4_4 EP8			Read Fault Code		Y		
06(081)		Engine management ECU	MED17_4_4 EP8			Erase Fault Code		Y		
06(081)		Engine management ECU	MED17_4_4 EP8			Live Data		Y		
06(081)		Engine management ECU	MED17_4_4 EP8			Actuation Test		Y		
06(081)		Engine management ECU	MED17_4_4 EP8			Special Function	Temporary reactivation of the Stop and Start function(for a maximum distance)	Y		
06(081)		Engine management ECU	MED17_4_4 EP8			Special Function	Work on the ancillaries battery	Y		
06(081)		Engine management ECU	MED17_4_4 EP8			Special Function	Initialization of the autoadaptive values	Y		
06(081)		Engine management ECU	MED17_4_4 EP8			Special Function	Replacement parts	Y		
06(081)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)				Read ECU Information		Y		
06(081)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)				Read Fault Code		Y		
06(081)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)				Erase Fault Code		Y		
06(081)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)				Live Data		Y		
06(081)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)				Actuation Test		Y		
06(081)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)				Special Function	Pack Repair	Y		
06(081)		Automatic gearbox or controlled manual gearbox	BVA_0M6_A16_US			Read ECU Information		Y		
06(081)		Automatic gearbox or controlled manual gearbox	BVA_0M6_A16_US			Read Fault Code		Y		
06(081)		Automatic gearbox or controlled manual gearbox	BVA_0M6_A16_US			Erase Fault Code		Y		
06(081)		Automatic gearbox or controlled manual gearbox	BVA_0M6_A16_US			Live Data		Y		
06(081)		Automatic gearbox or controlled manual gearbox	BVA_0M6_A16_US			Actuation Test		Y		
06(081)		Automatic gearbox or controlled manual gearbox	BVA_0M6_A16_US			Special Function	Pack Repair	Y		
06(081)		Air bags and pre-tensioners control unit				Read ECU Information		Y		
06(081)		Air bags and pre-tensioners control unit				Read Fault Code		Y		
06(081)		Air bags and pre-tensioners control unit				Erase Fault Code		Y		
06(081)		Air bags and pre-tensioners control unit				Live Data		Y		
06(081)		Air bags and pre-tensioners control unit				Special Function	Pack Repair	Y		
06(081)		Air conditioning				Read ECU Information		Y		
06(081)		Air conditioning				Read Fault Code		Y		
06(081)		Air conditioning				Erase Fault Code		Y		
06(081)		Air conditioning				Live Data		Y		
06(081)		Air conditioning				Actuation Test		Y		
06(081)		Air conditioning				Special Function	Pack Repair	Y		
06(081)		Multifunction video camera(CMF)				Read ECU Information		Y		
06(081)		Multifunction video camera(CMF)				Read Fault Code		Y		
06(081)		Multifunction video camera(CMF)				Erase Fault Code		Y		
06(081)		Multifunction video camera(CMF)				Live Data		Y		
06(081)		Multifunction video camera(CMF)				Actuation Test		Y		
06(081)		Multifunction video camera(CMF)				Special Function	Configuration	Y		
06(081)		Multifunction video camera(CMF)				Special Function	Pack Repair	Y		
06(081)		Driver's door module				Read ECU Information		Y		
06(081)		Driver's door module				Read Fault Code		Y		
06(081)		Driver's door module				Erase Fault Code		Y		
06(081)		Driver's door module				Live Data		Y		
06(081)		Panoramic vision assistance ECU				Read ECU Information		Y		
06(081)		Panoramic vision assistance ECU				Read Fault Code		Y		
06(081)		Panoramic vision assistance ECU				Erase Fault Code		Y		
06(081)		Panoramic vision assistance ECU				Live Data		Y		
06(081)		Panoramic vision assistance ECU				Actuation Test		Y		
06(081)		Panoramic vision assistance ECU				Special Function	Pack Repair	Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
060801		Controls under the steering wheel				Read ECU Information		Y		
060801		Controls under the steering wheel				Read Fault Code		Y		
060801		Controls under the steering wheel				Erase Fault Code		Y		
060801		Controls under the steering wheel				Live Data		Y		
060801		Controls under the steering wheel				Actuation Test		Y		
060801		Controls under the steering wheel				Special Function	Pack Repair	Y		
060801		Controls on the steering wheel / integral controls steering wheel				Read ECU Information		Y		
060801		Controls on the steering wheel / integral controls steering wheel				Read Fault Code		Y		
060801		Controls on the steering wheel / integral controls steering wheel				Erase Fault Code		Y		
060801		Controls on the steering wheel / integral controls steering wheel				Live Data		Y		
060801		Vehicle distance assistance				Read ECU Information		Y		
060801		Vehicle distance assistance				Read Fault Code		Y		
060801		Vehicle distance assistance				Erase Fault Code		Y		
060801		Vehicle distance assistance				Live Data		Y		
060801		Vehicle distance assistance				Actuation Test		Y		
060801		Voltage retaining device				Read ECU Information		Y		
060801		Voltage retaining device				Read Fault Code		Y		
060801		Voltage retaining device				Erase Fault Code		Y		
060801		Front left seat heated pads and ventilation regulation ECU				Read ECU Information		Y		
060801		Front left seat heated pads and ventilation regulation ECU				Read Fault Code		Y		
060801		Front left seat heated pads and ventilation regulation ECU				Live Data		Y		
060801		Front left seat heated pads and ventilation regulation ECU				Actuation Test		Y		
060801		Front right seat heated pads and ventilation regulation ECU				Read ECU Information		Y		
060801		Front right seat heated pads and ventilation regulation ECU				Read Fault Code		Y		
060801		Front right seat heated pads and ventilation regulation ECU				Live Data		Y		
060801		Front right seat heated pads and ventilation regulation ECU				Actuation Test		Y		
060801		Electric steering lock				Read ECU Information		Y		
060801		Electric steering lock				Read Fault Code		Y		
060801		Electric steering lock				Erase Fault Code		Y		
060801		Electric steering lock				Live Data		Y		
060801		Electric steering lock				Actuation Test		Y		
060801		Engine relay unit				Read ECU Information		Y		
060801		Engine relay unit				Read Fault Code		Y		
060801		Engine relay unit				Erase Fault Code		Y		
060801		Service module / Independent telematic unit				Read ECU Information		Y		
060801		Service module / Independent telematic unit				Read Fault Code		Y		
060801		Service module / Independent telematic unit				Erase Fault Code		Y		
060801		Service module / Independent telematic unit				Live Data		Y		
060801		Service module / Independent telematic unit				Actuation Test		Y		
060801		Service module / Independent telematic unit				Special Function	Configuration	Y		
060801		Service module / Independent telematic unit				Special Function	Pack Repair	Y		
060801		Radio amplifier				Read ECU Information		Y		
060801		Radio amplifier				Read Fault Code		Y		
060801		Radio amplifier				Erase Fault Code		Y		
060801		Radio amplifier				Actuation Test		Y		
060801		Radio amplifier				Special Function	Configuration	Y		
060801		Radio amplifier				Special Function	Pack Repair	Y		
060801		Rain and light sensor				Read ECU Information		Y		
060801		Rain and light sensor				Read Fault Code		Y		
060801		Rain and light sensor				Erase Fault Code		Y		
060801		Rain and light sensor				Live Data		Y		
060801		Rain and light sensor				Special Function	Pack Repair	Y		
060801		Multiplexed control panel				Read ECU Information		Y		
060801		Multiplexed control panel				Read Fault Code		Y		
060801		Multiplexed control panel				Erase Fault Code		Y		
060801		Multiplexed control panel				Live Data		Y		
060801		Multiplexed control panel				Actuation Test		Y		
060801		Parking assistance				Read ECU Information		Y		
060801		Parking assistance				Read Fault Code		Y		
060801		Parking assistance				Erase Fault Code		Y		
060801		Parking assistance				Live Data		Y		
060801		Audio-navigation/telematic unit/connected audio system				Read ECU Information		Y		
060801		Audio-navigation/telematic unit/connected audio system				Read Fault Code		Y		
060801		Audio-navigation/telematic unit/connected audio system				Erase Fault Code		Y		
060801		Audio-navigation/telematic unit/connected audio system				Live Data		Y		
060801		Audio-navigation/telematic unit/connected audio system				Actuation Test		Y		
060801		Touch screen				Read ECU Information		Y		
060801		Touch screen				Read Fault Code		Y		
060801		Touch screen				Erase Fault Code		Y		
060801		Touch screen				Live Data		Y		
060801		Touch screen				Actuation Test		Y		
060801		Driver's seat comfort ECU				Read ECU Information		Y		
060801		Driver's seat comfort ECU				Read Fault Code		Y		
060801		Driver's seat comfort ECU				Erase Fault Code		Y		
060801		Driver's seat comfort ECU				Live Data		Y		
060801		Driver's seat comfort ECU				Actuation Test		Y		
060801		Power steering				Read ECU Information		Y		
060801		Power steering				Read Fault Code		Y		
060801		Power steering				Erase Fault Code		Y		
060801		Power steering				Live Data		Y		
060801		Power steering				Actuation Test		Y		
060801		Battery charge status unit				Read ECU Information		Y		
060801		Battery charge status unit				Read Fault Code		Y		
060801		Battery charge status unit				Erase Fault Code		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function reasons	Add (Y/N)	Verification (Y/N)	Remarks
CS(081)		Battery charge status unit				Live Data		Y		
CS(081)		Battery charge status unit				Special Function	Pack Repair	Y		
CS(081)		Battery charge status unit				Special Function	Configuration	Y		
CS(081)		Supply protection and management unit				Read ECU Information		Y		
CS(081)		Supply protection and management unit				Read Fault Code		Y		
CS(081)		Supply protection and management unit				Erase Fault Code		Y		
CS(081)		Supply protection and management unit				Live Data		Y		
CS(081)		Left hand front wiper motor				Read ECU Information		Y		
CS(081)		Left hand front wiper motor				Read Fault Code		Y		
CS(081)		Left hand front wiper motor				Erase Fault Code		Y		
CS(081)		Left hand front wiper motor				Live Data		Y		
CS(081)		Left hand front wiper motor				Actuation Test		Y		
CS(081)		Right hand front wiper motor				Read ECU Information		Y		
CS(081)		Right hand front wiper motor				Read Fault Code		Y		
CS(081)		Right hand front wiper motor				Erase Fault Code		Y		
CS(081)		Right hand front wiper motor				Live Data		Y		
CS(081)		Right hand front wiper motor				Actuation Test		Y		
CS(081)		Control of the telematic unit				Read ECU Information		Y		
CS(081)		Control of the telematic unit				Read Fault Code		Y		
CS(081)		Control of the telematic unit				Erase Fault Code		Y		
CS(081)		Control of the telematic unit				Live Data		Y		
CS VAN (2002-2005)		Engine ECU	Petrol engine	2.0L BFN MM48P		Read ECU Information		Y		
CS VAN (2002-2005)		Engine ECU	Petrol engine	2.0L BFN MM48P		Read Fault Code		Y		
CS VAN (2002-2005)		Engine ECU	Petrol engine	2.0L BFN MM48P		Erase Fault Code		Y		
CS VAN (2002-2005)		Engine ECU	Petrol engine	2.0L BFN MM48P		Live Data		Y		
CS VAN (2002-2005)		Engine ECU	Petrol engine	2.0L BFN MM48P		Actuation Test		Y		
CS VAN (2002-2005)		Engine ECU	Petrol engine	2.0L BFN MM48P		Special Function	Initialisation of the autodaptive values	Y		
CS VAN (2002-2005)		Engine ECU	Petrol engine	3F2 MM4MP2		Read ECU Information		Y		
CS VAN (2002-2005)		Engine ECU	Petrol engine	3F2 MM4MP2		Read Fault Code		Y		
CS VAN (2002-2005)		Engine ECU	Petrol engine	3F2 MM4MP2		Erase Fault Code		Y		
CS VAN (2002-2005)		Engine ECU	Petrol engine	3F2 MM4MP2		Live Data		Y		
CS VAN (2002-2005)		Engine ECU	Petrol engine	3F2 MM4MP2		Actuation Test		Y		
CS VAN (2002-2005)		Engine ECU	Petrol engine	3F2 MM4MP2		Special Function	Initialisation of auto-adaptation	Y		
CS VAN (2002-2005)		Engine ECU	Petrol engine	BFN MM4MP2		Read ECU Information		Y		
CS VAN (2002-2005)		Engine ECU	Petrol engine	BFN MM4MP2		Read Fault Code		Y		
CS VAN (2002-2005)		Engine ECU	Petrol engine	BFN MM4MP2		Erase Fault Code		Y		
CS VAN (2002-2005)		Engine ECU	Petrol engine	BFN MM4MP2		Live Data		Y		
CS VAN (2002-2005)		Engine ECU	Petrol engine	BFN MM4MP2		Actuation Test		Y		
CS VAN (2002-2005)		Engine ECU	Petrol engine	BFN MM4MP2		Special Function	Initialisation of auto-adaptation	Y		
CS VAN (2002-2005)		Engine ECU	Petrol engine	BFN MM4LP 1		Read ECU Information		Y		
CS VAN (2002-2005)		Engine ECU	Petrol engine	BFN MM4LP 1		Read Fault Code		Y		
CS VAN (2002-2005)		Engine ECU	Petrol engine	BFN MM4LP 1		Erase Fault Code		Y		
CS VAN (2002-2005)		Engine ECU	Petrol engine	BFN MM4LP 1		Live Data		Y		
CS VAN (2002-2005)		Engine ECU	Petrol engine	BFN MM4LP 1		Actuation Test		Y		
CS VAN (2002-2005)		Engine ECU	Petrol engine	BFN MM4LP 1		Special Function	Initialisation of auto-adaptation	Y		
CS VAN (2002-2005)		Engine ECU	Petrol engine	3F2 MM4LP 1		Read ECU Information		Y		
CS VAN (2002-2005)		Engine ECU	Petrol engine	3F2 MM4LP 1		Read Fault Code		Y		
CS VAN (2002-2005)		Engine ECU	Petrol engine	3F2 MM4LP 1		Erase Fault Code		Y		
CS VAN (2002-2005)		Engine ECU	Petrol engine	3F2 MM4LP 1		Live Data		Y		
CS VAN (2002-2005)		Engine ECU	Petrol engine	3F2 MM4LP 1		Actuation Test		Y		
CS VAN (2002-2005)		Engine ECU	Petrol engine	3F2 MM4LP 1		Special Function	Initialisation of auto-adaptation	Y		
CS VAN (2002-2005)		Engine ECU	Petrol engine	BFN MM4LP 2		Read ECU Information		Y		
CS VAN (2002-2005)		Engine ECU	Petrol engine	BFN MM4LP 2		Read Fault Code		Y		
CS VAN (2002-2005)		Engine ECU	Petrol engine	BFN MM4LP 2		Erase Fault Code		Y		
CS VAN (2002-2005)		Engine ECU	Petrol engine	BFN MM4LP 2		Live Data		Y		
CS VAN (2002-2005)		Engine ECU	Petrol engine	BFN MM4LP 2		Special Function	Initialisation of the autodaptive values	Y		
CS VAN (2002-2005)		Engine ECU	Petrol engine	3F2 MM4LP 2		Read ECU Information		Y		
CS VAN (2002-2005)		Engine ECU	Petrol engine	3F2 MM4LP 2		Read Fault Code		Y		
CS VAN (2002-2005)		Engine ECU	Petrol engine	3F2 MM4LP 2		Erase Fault Code		Y		
CS VAN (2002-2005)		Engine ECU	Petrol engine	3F2 MM4LP 2		Live Data		Y		
CS VAN (2002-2005)		Engine ECU	Petrol engine	3F2 MM4LP 2		Special Function	Initialisation of the autodaptive values	Y		
CS VAN (2002-2005)		Engine ECU	Petrol engine	3.0L XFW BOSCH ME746		Read ECU Information		Y		
CS VAN (2002-2005)		Engine ECU	Petrol engine	3.0L XFW BOSCH ME746		Read Fault Code		Y		
CS VAN (2002-2005)		Engine ECU	Petrol engine	3.0L XFW BOSCH ME746		Erase Fault Code		Y		
CS VAN (2002-2005)		Engine ECU	Petrol engine	3.0L XFW BOSCH ME746		Live Data		Y		
CS VAN (2002-2005)		Engine ECU	Petrol engine	3.0L XFW BOSCH ME746		Actuation Test		Y		
CS VAN (2002-2005)		Engine ECU	Petrol engine	3.0L XFW BOSCH ME746		Special Function	Initialisation of auto-adaptation	Y		
CS VAN (2002-2005)		Auto gearbox	Auto gearbox AL4,1			Read ECU Information		Y		
CS VAN (2002-2005)		Auto gearbox	Auto gearbox AL4,1			Read Fault Code		Y		
CS VAN (2002-2005)		Auto gearbox	Auto gearbox AL4,1			Erase Fault Code		Y		
CS VAN (2002-2005)		Auto gearbox	Auto gearbox AL4,1			Live Data		Y		
CS VAN (2002-2005)		Auto gearbox	Auto gearbox AL4,1			Actuation Test		Y		
CS VAN (2002-2005)		Auto gearbox	Auto gearbox AL4,1			Special Function	Initialisation of auto-adaptation	Y		
CS VAN (2002-2005)		Auto gearbox	Auto gearbox AL4,2			Read ECU Information		Y		
CS VAN (2002-2005)		Auto gearbox	Auto gearbox AL4,2			Read Fault Code		Y		
CS VAN (2002-2005)		Auto gearbox	Auto gearbox AL4,2			Erase Fault Code		Y		
CS VAN (2002-2005)		Auto gearbox	Auto gearbox AL4,2			Live Data		Y		
CS VAN (2002-2005)		Auto gearbox	Auto gearbox AL4,2			Actuation Test		Y		
CS VAN (2002-2005)		Auto gearbox	Auto gearbox AL4,2			Special Function	Pedal initialisation	Y		
CS VAN (2002-2005)		Auto gearbox	Auto gearbox AL4,2			Special Function	Initialisation of auto-adaptation	Y		
CS VAN (2002-2005)		Auto gearbox	Auto gearbox AL4,2			Special Function	Oil wear counter	Y		
CS VAN (2002-2005)		Auto gearbox	Auto gearbox AL4,3			Read ECU Information		Y		
CS VAN (2002-2005)		Auto gearbox	Auto gearbox AL4,3			Read Fault Code		Y		
CS VAN (2002-2005)		Auto gearbox	Auto gearbox AL4,3			Erase Fault Code		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
CS VAN (2002-2005)		Auto gearbox	Auto gearbox AL4.3			Live Data		Y		
CS VAN (2002-2005)		Auto gearbox	Auto gearbox AL4.3			Actuation Test		Y		
CS VAN (2002-2005)		Auto gearbox	Auto gearbox AL4.3			Special Function	Pedal initialization	Y		
CS VAN (2002-2005)		Auto gearbox	Auto gearbox AL4.3			Special Function	Initialization of auto-adaptation	Y		
CS VAN (2002-2005)		Auto gearbox	Auto gearbox AL4.3			Special Function	Oil wear counter	Y		
CS VAN (2002-2005)		Auto gearbox	Auto gearbox 4HP20.1			Read ECU Information		Y		
CS VAN (2002-2005)		Auto gearbox	Auto gearbox 4HP20.1			Read Fault Code		Y		
CS VAN (2002-2005)		Auto gearbox	Auto gearbox 4HP20.1			Erase Fault Code		Y		
CS VAN (2002-2005)		Auto gearbox	Auto gearbox 4HP20.1			Live Data		Y		
CS VAN (2002-2005)		Auto gearbox	Auto gearbox 4HP20.1			Actuation Test		Y		
CS VAN (2002-2005)		Auto gearbox	Auto gearbox 4HP20.1			Special Function	Initialization of auto-adaptation	Y		
CS VAN (2002-2005)		Auto gearbox	Auto gearbox 4HP20.2			Read ECU Information		Y		
CS VAN (2002-2005)		Auto gearbox	Auto gearbox 4HP20.2			Read Fault Code		Y		
CS VAN (2002-2005)		Auto gearbox	Auto gearbox 4HP20.2			Erase Fault Code		Y		
CS VAN (2002-2005)		Auto gearbox	Auto gearbox 4HP20.2			Live Data		Y		
CS VAN (2002-2005)		Auto gearbox	Auto gearbox 4HP20.2			Actuation Test		Y		
CS VAN (2002-2005)		Auto gearbox	Auto gearbox 4HP20.2			Special Function	Initialization of auto-adaptation	Y		
CS VAN (2002-2005)		Anti-lock brake system	ABS.7			Read ECU Information		Y		
CS VAN (2002-2005)		Anti-lock brake system	ABS.7			Read Fault Code		Y		
CS VAN (2002-2005)		Anti-lock brake system	ABS.7			Erase Fault Code		Y		
CS VAN (2002-2005)		Anti-lock brake system	ABS.7			Live Data		Y		
CS VAN (2002-2005)		Anti-lock brake system	ABS.7			Special Function	Bleeding	Y		
CS VAN (2002-2005)		Anti-lock brake system	ESP_BOSCHS.7			Read ECU Information		Y		
CS VAN (2002-2005)		Anti-lock brake system	ESP_BOSCHS.7			Read Fault Code		Y		
CS VAN (2002-2005)		Anti-lock brake system	ESP_BOSCHS.7			Erase Fault Code		Y		
CS VAN (2002-2005)		Anti-lock brake system	ESP_BOSCHS.7			Live Data		Y		
CS VAN (2002-2005)		Anti-lock brake system	ESP_BOSCHS.7			Actuation Test		Y		
CS VAN (2002-2005)		Anti-lock brake system	ESP_BOSCHS.7			Special Function	Bleeding	Y		
CS VAN (2002-2005)		Airbag				Read ECU Information		Y		
CS VAN (2002-2005)		Airbag				Read Fault Code		Y		
CS VAN (2002-2005)		Airbag				Erase Fault Code		Y		
CS VAN (2002-2005)		Airbag				Live Data		Y		
CS VAN (2002-2005)		Built-in Systems Interface				Read ECU Information		Y		
CS VAN (2002-2005)		Built-in Systems Interface				Read Fault Code		Y		
CS VAN (2002-2005)		Built-in Systems Interface				Erase Fault Code		Y		
CS VAN (2002-2005)		Built-in Systems Interface				Live Data		Y		
CS VAN (2002-2005)		Built-in Systems Interface				Special Function	Maintenance-BSI operating mode	Y		
CS VAN (2002-2005)		Instrument panel				Read ECU Information		Y		
CS VAN (2002-2005)		Instrument panel				Read Fault Code		Y		
CS VAN (2002-2005)		Instrument panel				Erase Fault Code		Y		
CS VAN (2002-2005)		Instrument panel				Live Data		Y		
CS VAN (2002-2005)		Instrument panel				Actuation Test		Y		
CS VAN (2002-2005)		Radio	Radio post-equipment			Read ECU Information		Y		
CS VAN (2002-2005)		Radio	Radio post-equipment			Read Fault Code		Y		
CS VAN (2002-2005)		Radio	Radio post-equipment			Erase Fault Code		Y		
CS VAN (2002-2005)		Radio	Radio post-equipment			Live Data		Y		
CS VAN (2002-2005)		Radio	Radio post-equipment			Actuation Test		Y		
CS VAN (2002-2005)		Radio	Telematic receiver command			Read ECU Information		Y		
CS VAN (2002-2005)		Radio	Telematic receiver command			Live Data		Y		
CS VAN (2002-2005)		CD player				Read ECU Information		Y		
CS VAN (2002-2005)		CD player				Read Fault Code		Y		
CS VAN (2002-2005)		CD player				Erase Fault Code		Y		
CS VAN (2002-2005)		CD player				Live Data		Y		
CS VAN (2002-2005)		CD player				Actuation Test		Y		
CS VAN (2002-2005)		Parking assistance				Read ECU Information		Y		
CS VAN (2002-2005)		Parking assistance				Read Fault Code		Y		
CS VAN (2002-2005)		Parking assistance				Erase Fault Code		Y		
CS VAN (2002-2005)		Parking assistance				Live Data		Y		
CS VAN (2002-2005)		Parking assistance				Actuation Test		Y		
CS VAN (2002-2005)		Air conditioning				Read ECU Information		Y		
CS VAN (2002-2005)		Air conditioning				Read Fault Code		Y		
CS VAN (2002-2005)		Air conditioning				Erase Fault Code		Y		
CS VAN (2002-2005)		Air conditioning				Live Data		Y		
CS VAN (2002-2005)		LEDs and odometer ECU				Read ECU Information		Y		
CS VAN (2002-2005)		LEDs and odometer ECU				Read Fault Code		Y		
CS VAN (2002-2005)		LEDs and odometer ECU				Erase Fault Code		Y		
CS VAN (2002-2005)		Memory unit				Read ECU Information		Y		
CS VAN (2002-2005)		Memory unit				Read Fault Code		Y		
CS VAN (2002-2005)		Memory unit				Erase Fault Code		Y		
CS VAN (2002-2005)		Memory unit				Live Data		Y		
CS VAN (2002-2005)		Rear sunroof				Read ECU Information		Y		
CS VAN (2002-2005)		Rear sunroof				Read Fault Code		Y		
CS VAN (2002-2005)		Rear sunroof				Erase Fault Code		Y		
CS VAN (2002-2005)		Rear sunroof				Live Data		Y		
CS VAN (2002-2005)		Front sunroof				Read ECU Information		Y		
CS VAN (2002-2005)		Front sunroof				Read Fault Code		Y		
CS VAN (2002-2005)		Front sunroof				Erase Fault Code		Y		
CS VAN (2002-2005)		Front sunroof				Live Data		Y		
CS VAN (2002-2005)		Middle sunroof				Read ECU Information		Y		
CS VAN (2002-2005)		Middle sunroof				Read Fault Code		Y		
CS VAN (2002-2005)		Middle sunroof				Erase Fault Code		Y		
CS VAN (2002-2005)		Middle sunroof				Live Data		Y		
CS VAN (2002-2005)		Alarm				Read ECU Information		Y		
CS VAN (2002-2005)		Alarm				Read Fault Code		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Models	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function reasons	Add (Y/N)	Verification (Y/N)	Remarks
CS VAN (2002-2005)		Alarm				Erase Fault Code		Y		
CS VAN (2002-2005)		Alarm				Live Data		Y		
CS VAN (2002-2005)		Alarm				Actuation Test		Y		
CS VAN (2002-2005)		Switch module at the steering wheel				Read ECU Information		Y		
CS VAN (2002-2005)		Switch module at the steering wheel				Live Data		Y		
CS VAN (2002-2005)		Sliding side doors module				Read ECU Information		Y		
CS VAN (2002-2005)		Sliding side doors module				Read Fault Code		Y		
CS VAN (2002-2005)		Sliding side doors module				Erase Fault Code		Y		
CS VAN (2002-2005)		Sliding side doors module				Live Data		Y		
CS VAN (2002-2005)		Driver's door module				Read ECU Information		Y		
CS VAN (2002-2005)		Driver's door module				Live Data		Y		
CS VAN (2002-2005)		Passenger's door module				Read ECU Information		Y		
CS VAN (2002-2005)		Passenger's door module				Live Data		Y		
CS VAN (2002-2005)		Diesel additive function	ADDITIF_FAT			Read ECU Information		Y		
CS VAN (2002-2005)		Diesel additive function	ADDITIF_FAT			Live Data		Y		
CS VAN (2002-2005)		Diesel additive function	ADDGQZ			Read ECU Information		Y		
CS VAN (2002-2005)		Diesel additive function	ADDGQZ			Read Fault Code		Y		
CS VAN (2002-2005)		Diesel additive function	ADDGQZ			Erase Fault Code		Y		
CS VAN (2002-2005)		Diesel additive function	ADDGQZ			Live Data		Y		
CS VAN (2002-2005)		Diesel additive function	ADDGQZ			Actuation Test		Y		
CS VAN (2002-2005)		Display or Telematics	Multifunction displayB			Read ECU Information		Y		
CS VAN (2002-2005)		Display or Telematics	Multifunction displayB			Read Fault Code		Y		
CS VAN (2002-2005)		Display or Telematics	Multifunction displayB			Erase Fault Code		Y		
CS VAN (2002-2005)		Display or Telematics	Multifunction displayB			Live Data		Y		
CS VAN (2002-2005)		Display or Telematics	Multifunction displayB			Actuation Test		Y		
CS VAN (2002-2005)		Display or Telematics	TELEMAT			Read ECU Information		Y		
CS VAN (2002-2005)		Display or Telematics	TELEMAT			Read Fault Code		Y		
CS VAN (2002-2005)		Display or Telematics	TELEMAT			Erase Fault Code		Y		
CS VAN (2002-2005)		Display or Telematics	TELEMAT			Live Data		Y		
CS VAN (2002-2005)		Display or Telematics	TELEMAT			Actuation Test		Y		
CS VAN (2002-2005)		Additional heating				Read ECU Information		Y		
CS VAN (2002-2005)		Additional heating				Read Fault Code		Y		
CS VAN (2002-2005)		Additional heating				Erase Fault Code		Y		
CS VAN (2002-2005)		Additional heating				Live Data		Y		
CS VAN (2002-2005)		Additional heating				Actuation Test		Y		
CS VAN (2002-2005)		Right-hand headlamp				Read ECU Information		Y		
CS VAN (2002-2005)		Right-hand headlamp				Read Fault Code		Y		
CS VAN (2002-2005)		Right-hand headlamp				Erase Fault Code		Y		
CS VAN (2002-2005)		Right-hand headlamp				Live Data		Y		
CS VAN (2002-2005)		Left-hand headlamp				Read ECU Information		Y		
CS VAN (2002-2005)		Left-hand headlamp				Read Fault Code		Y		
CS VAN (2002-2005)		Left-hand headlamp				Erase Fault Code		Y		
CS VAN (2002-2005)		Left-hand headlamp				Live Data		Y		
CS VAN (2002-2005)		Learning				Special Function	Key programming	Y		
CS VAN (2002-2005)		Calibration of the steering wheel angle sensor : C2, C3, C3 a1aritel, New Look C3 with ESP, WAGOESP, BOSCH, T				Special Function	Steering wheel angle sensor calibration	Y		
CS CAN (After 2005)		Built-in Systems Interface				Read ECU Information		Y		
CS CAN (After 2005)		Built-in Systems Interface				Read Fault Code		Y		
CS CAN (After 2005)		Built-in Systems Interface				Erase Fault Code		Y		
CS CAN (After 2005)		Built-in Systems Interface				Live Data		Y		
CS CAN (After 2005)		Built-in Systems Interface				Actuation Test		Y		
CS CAN (After 2005)		Built-in Systems Interface				Special Function	Maintenance : BSI operating mode	Y		
CS CAN (After 2005)		Built-in Systems Interface				Special Function	Configuration	Y		
CS CAN (After 2005)		Engine management ECU	EDC15C2	EDC15C2 HW		Read ECU Information		Y		
CS CAN (After 2005)		Engine management ECU	EDC15C2	EDC15C2 HW		Read Fault Code		Y		
CS CAN (After 2005)		Engine management ECU	EDC15C2	EDC15C2 HW		Erase Fault Code		Y		
CS CAN (After 2005)		Engine management ECU	EDC15C2	EDC15C2 HW		Live Data		Y		
CS CAN (After 2005)		Engine management ECU	EDC15C2	EDC15C2 HW		Actuation Test		Y		
CS CAN (After 2005)		Engine management ECU	EDC15C2	EDC15C2 HW		Special Function	Configuration	Y		
CS CAN (After 2005)		Engine management ECU	EDC15C2	EDC15C2 HW		Special Function	Pack Repair	Y		
CS CAN (After 2005)		Engine management ECU	EDC15C2	EDC15C2 HW		Read ECU Information		Y		
CS CAN (After 2005)		Engine management ECU	EDC15C2	EDC15C2 HW		Read Fault Code		Y		
CS CAN (After 2005)		Engine management ECU	EDC15C2	EDC15C2 HW		Erase Fault Code		Y		
CS CAN (After 2005)		Engine management ECU	EDC15C2	EDC15C2 HW		Live Data		Y		
CS CAN (After 2005)		Engine management ECU	EDC15C2	EDC15C2 HW		Actuation Test		Y		
CS CAN (After 2005)		Engine management ECU	EDC15C2	EDC15C2 HW		Special Function	Configuration	Y		
CS CAN (After 2005)		Engine management ECU	EDC15C2	EDC15C2 HW		Special Function	Pack Repair	Y		
CS CAN (After 2005)		Engine management ECU	EDC15C2	EDC15C2 HW		Read ECU Information		Y		
CS CAN (After 2005)		Engine management ECU	EDC15C2	EDC15C2 HW		Erase Fault Code		Y		
CS CAN (After 2005)		Engine management ECU	EDC15C2	EDC15C2 HW		Live Data		Y		
CS CAN (After 2005)		Engine management ECU	EDC15C2	EDC15C2 HW		Actuation Test		Y		
CS CAN (After 2005)		Engine management ECU	EDC15C2	EDC15C2 HW		Special Function	Configuration	Y		
CS CAN (After 2005)		Engine management ECU	EDC15C2	EDC15C2 HW		Special Function	Pack Repair	Y		
CS CAN (After 2005)		Engine management ECU	MM6LFB	HFJ MM6LFB		Read ECU Information		Y		
CS CAN (After 2005)		Engine management ECU	MM6LFB	HFJ MM6LFB		Read Fault Code		Y		
CS CAN (After 2005)		Engine management ECU	MM6LFB	HFJ MM6LFB		Erase Fault Code		Y		
CS CAN (After 2005)		Engine management ECU	MM6LFB	HFJ MM6LFB		Live Data		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Models	Year classification	System	Subsystem or system type (YES stands for Citroen, NO stands for other ones)	Subsystem (YES stands for Citroen, NO stands for other ones)	Subsystem or system type	Function type	Special function subitems	Add (Y/N)	Verification (Y/N)	Remarks
CS CAN (After 2005)		Multifunction screen	Type "C" (dot matrix)			Read Fault Code		Y		
CS CAN (After 2005)		Multifunction screen	Type "C" (dot matrix)			Erase Fault Code		Y		
CS CAN (After 2005)		Multifunction screen	Type "C" (dot matrix)			Live Data		Y		
CS CAN (After 2005)		Multifunction screen	Type "C" (dot matrix)			Actuation Test		Y		
CS CAN (After 2005)		Multifunction screen	Type "C" (dot matrix)			Special Function	Configuration	Y		
CS CAN (After 2005)		Multifunction screen	Type "C" (dot matrix)			Special Function	Pack Repair	Y		
CS CAN (After 2005)		Multifunction screen	Type "C colour" (dot matrix)			Read ECU Information		Y		
CS CAN (After 2005)		Multifunction screen	Type "C colour" (dot matrix)			Read Fault Code		Y		
CS CAN (After 2005)		Multifunction screen	Type "C colour" (dot matrix)			Erase Fault Code		Y		
CS CAN (After 2005)		Multifunction screen	Type "C colour" (dot matrix)			Live Data		Y		
CS CAN (After 2005)		Multifunction screen	Type "C colour" (dot matrix)			Actuation Test		Y		
CS CAN (After 2005)		Multifunction screen	Type "C colour" (dot matrix)			Special Function	Configuration	Y		
CS CAN (After 2005)		Multifunction screen	Type "C colour" (dot matrix)			Special Function	Pack Repair	Y		
CS CAN (After 2005)		Air conditioning				Read ECU Information		Y		
CS CAN (After 2005)		Air conditioning				Read Fault Code		Y		
CS CAN (After 2005)		Air conditioning				Erase Fault Code		Y		
CS CAN (After 2005)		Air conditioning				Live Data		Y		
CS CAN (After 2005)		Air conditioning				Actuation Test		Y		
CS CAN (After 2005)		Instrument panel				Read ECU Information		Y		
CS CAN (After 2005)		Instrument panel				Read Fault Code		Y		
CS CAN (After 2005)		Instrument panel				Erase Fault Code		Y		
CS CAN (After 2005)		Instrument panel				Live Data		Y		
CS CAN (After 2005)		Instrument panel				Actuation Test		Y		
CS CAN (After 2005)		Controls under the steering wheel				Read ECU Information		Y		
CS CAN (After 2005)		Controls under the steering wheel				Read Fault Code		Y		
CS CAN (After 2005)		Controls under the steering wheel				Erase Fault Code		Y		
CS CAN (After 2005)		Controls under the steering wheel				Live Data		Y		
CS CAN (After 2005)		Controls under the steering wheel				Actuation Test		Y		
CS CAN (After 2005)		Controls under the steering wheel				Special Function	Pack Repair	Y		
CS CAN (After 2005)		Parking assistance				Read ECU Information		Y		
CS CAN (After 2005)		Parking assistance				Read Fault Code		Y		
CS CAN (After 2005)		Parking assistance				Erase Fault Code		Y		
CS CAN (After 2005)		Parking assistance				Live Data		Y		
CS CAN (After 2005)		Parking assistance				Special Function	Configuration	Y		
CS CAN (After 2005)		Parking assistance				Special Function	Pack Repair	Y		
CS CAN (After 2005)		CD changer / External CD player				Read ECU Information		Y		
CS CAN (After 2005)		CD changer / External CD player				Read Fault Code		Y		
CS CAN (After 2005)		CD changer / External CD player				Erase Fault Code		Y		
CS CAN (After 2005)		CD changer / External CD player				Actuation Test		Y		
CS CAN (After 2005)		CD changer / External CD player				Special Function	Configuration	Y		
CS CAN (After 2005)		Radio	RD4			Read ECU Information		Y		
CS CAN (After 2005)		Radio	RD4			Read Fault Code		Y		
CS CAN (After 2005)		Radio	RD4			Erase Fault Code		Y		
CS CAN (After 2005)		Radio	RD4			Live Data		Y		
CS CAN (After 2005)		Radio	RD4			Actuation Test		Y		
CS CAN (After 2005)		Radio	RD4			Special Function	Configuration	Y		
CS CAN (After 2005)		Radio	RD45			Read ECU Information		Y		
CS CAN (After 2005)		Radio	RD45			Read Fault Code		Y		
CS CAN (After 2005)		Radio	RD45			Erase Fault Code		Y		
CS CAN (After 2005)		Radio	RD45			Live Data		Y		
CS CAN (After 2005)		Radio	RD45			Actuation Test		Y		
CS CAN (After 2005)		Radio	RD45			Special Function	Configuration	Y		
CS CAN (After 2005)		Hands-free kit / Portable unit	KML			Read ECU Information		Y		
CS CAN (After 2005)		Hands-free kit / Portable unit	KML			Read Fault Code		Y		
CS CAN (After 2005)		Hands-free kit / Portable unit	KML			Erase Fault Code		Y		
CS CAN (After 2005)		Hands-free kit / Portable unit	KML			Live Data		Y		
CS CAN (After 2005)		Hands-free kit / Portable unit	KML			Actuation Test		Y		
CS CAN (After 2005)		Hands-free kit / Portable unit	KML			Special Function	Configuration	Y		
CS CAN (After 2005)		Hands-free kit / Portable unit	BOITIER_NOMODE			Read ECU Information		Y		
CS CAN (After 2005)		Hands-free kit / Portable unit	BOITIER_NOMODE			Read Fault Code		Y		
CS CAN (After 2005)		Hands-free kit / Portable unit	BOITIER_NOMODE			Erase Fault Code		Y		
CS CAN (After 2005)		Hands-free kit / Portable unit	BOITIER_NOMODE			Live Data		Y		
CS CAN (After 2005)		Hands-free kit / Portable unit	BOITIER_NOMODE			Actuation Test		Y		
CS CAN (After 2005)		Hands-free kit / Portable unit	BOITIER_NOMODE			Special Function	Configuration	Y		
CS CAN (After 2005)		Telematic unit (OTA) or audio-navigation	BOITIER_TELEMATIQUE			Read ECU Information		Y		
CS CAN (After 2005)		Telematic unit (OTA) or audio-navigation	BOITIER_TELEMATIQUE			Read Fault Code		Y		
CS CAN (After 2005)		Telematic unit (OTA) or audio-navigation	BOITIER_TELEMATIQUE			Erase Fault Code		Y		
CS CAN (After 2005)		Telematic unit (OTA) or audio-navigation	BOITIER_TELEMATIQUE			Live Data		Y		
CS CAN (After 2005)		Telematic unit (OTA) or audio-navigation	BOITIER_TELEMATIQUE			Actuation Test		Y		
CS CAN (After 2005)		Telematic unit (OTA) or audio-navigation	BOITIER_TELEMATIQUE			Special Function	Configuration	Y		
CS CAN (After 2005)		Telematic unit (OTA) or audio-navigation	BOITIER_TELEMATIQUE			Special Function	Pack Repair	Y		
CS CAN (After 2005)		Telematic unit (OTA) or audio-navigation	RADIONAV_BNRS			Read ECU Information		Y		
CS CAN (After 2005)		Telematic unit (OTA) or audio-navigation	RADIONAV_BNRS			Read Fault Code		Y		
CS CAN (After 2005)		Telematic unit (OTA) or audio-navigation	RADIONAV_BNRS			Erase Fault Code		Y		
CS CAN (After 2005)		Telematic unit (OTA) or audio-navigation	RADIONAV_BNRS			Live Data		Y		
CS CAN (After 2005)		Telematic unit (OTA) or audio-navigation	RADIONAV_BNRS			Actuation Test		Y		
CS CAN (After 2005)		Telematic unit (OTA) or audio-navigation	RADIONAV_BNRS			Special Function	Configuration	Y		
CS CAN (After 2005)		Telematic unit (OTA) or audio-navigation	BNRS2010			Read ECU Information		Y		
CS CAN (After 2005)		Telematic unit (OTA) or audio-navigation	BNRS2010			Read Fault Code		Y		
CS CAN (After 2005)		Telematic unit (OTA) or audio-navigation	BNRS2010			Erase Fault Code		Y		
CS CAN (After 2005)		Telematic unit (OTA) or audio-navigation	BNRS2010			Live Data		Y		
CS CAN (After 2005)		Telematic unit (OTA) or audio-navigation	BNRS2010			Actuation Test		Y		
CS CAN (After 2005)		Telematic unit (OTA) or audio-navigation	BNRS2010			Special Function	Configuration	Y		
CS CAN (After 2005)		Telematic unit (OTA) or audio-navigation	BNRS2010			Special Function	Pack Repair	Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Models	Year classification	System	Subsystem or system type (YES stands for Citroen, NO stands for other wires)	Subsystem (YES stands for Citroen, NO stands for other wires)	Subsystem or system type	Function type	Special function subcode	Add (Y/N)	Verification (Y/N)	Remarks
CS CAN (After 2005)		Seat driver position memory module				Read ECU Information		Y		
CS CAN (After 2005)		Seat driver position memory module				Read Fault Code		Y		
CS CAN (After 2005)		Seat driver position memory module				Erase Fault Code		Y		
CS CAN (After 2005)		Seat driver position memory module				Live Data		Y		
CS CAN (After 2005)		Seat driver position memory module				Actuation Test		Y		
CS CAN (After 2005)		Seat driver position memory module				Special Function	Configuration	Y		
CS CAN (After 2005)		Anti-theft alarm	Alarm without anti-lift module			Read ECU Information		Y		
CS CAN (After 2005)		Anti-theft alarm	Alarm without anti-lift module			Read Fault Code		Y		
CS CAN (After 2005)		Anti-theft alarm	Alarm without anti-lift module			Erase Fault Code		Y		
CS CAN (After 2005)		Anti-theft alarm	Alarm without anti-lift module			Live Data		Y		
CS CAN (After 2005)		Anti-theft alarm	Alarm without anti-lift module			Actuation Test		Y		
CS CAN (After 2005)		Anti-theft alarm	Alarm without anti-lift module			Special Function	Configuration	Y		
CS CAN (After 2005)		Passenger's door module	BROSE			Read ECU Information		Y		
CS CAN (After 2005)		Passenger's door module	BROSE			Read Fault Code		Y		
CS CAN (After 2005)		Passenger's door module	BROSE			Erase Fault Code		Y		
CS CAN (After 2005)		Passenger's door module	BROSE			Live Data		Y		
CS CAN (After 2005)		Passenger's door module	BROSE			Actuation Test		Y		
CS CAN (After 2005)		Passenger's door module	BROSE			Special Function	Configuration	Y		
CS CAN (After 2005)		Passenger's door module	BROSE			Special Function	Replacement parts	Y		
CS CAN (After 2005)		Sliding side doors module				Read ECU Information		Y		
CS CAN (After 2005)		Sliding side doors module				Read Fault Code		Y		
CS CAN (After 2005)		Sliding side doors module				Erase Fault Code		Y		
CS CAN (After 2005)		Sliding side doors module				Live Data		Y		
CS CAN (After 2005)		Sliding side doors module				Actuation Test		Y		
CS CAN (After 2005)		Sliding side doors module				Special Function	Configuration	Y		
CS CAN (After 2005)		Driver's door module	BROSE			Read ECU Information		Y		
CS CAN (After 2005)		Driver's door module	BROSE			Read Fault Code		Y		
CS CAN (After 2005)		Driver's door module	BROSE			Erase Fault Code		Y		
CS CAN (After 2005)		Driver's door module	BROSE			Live Data		Y		
CS CAN (After 2005)		Driver's door module	BROSE			Actuation Test		Y		
CS CAN (After 2005)		Driver's door module	BROSE			Special Function	Configuration	Y		
CS CAN (After 2005)		Driver's door module	BROSE			Special Function	Replacement parts	Y		
CS CAN (After 2005)		Rear sunroof				Read ECU Information		Y		
CS CAN (After 2005)		Rear sunroof				Read Fault Code		Y		
CS CAN (After 2005)		Rear sunroof				Erase Fault Code		Y		
CS CAN (After 2005)		Rear sunroof				Live Data		Y		
CS CAN (After 2005)		Rear sunroof				Actuation Test		Y		
CS CAN (After 2005)		Rear sunroof				Special Function	Configuration	Y		
CS CAN (After 2005)		Front sunroof				Read ECU Information		Y		
CS CAN (After 2005)		Front sunroof				Read Fault Code		Y		
CS CAN (After 2005)		Front sunroof				Erase Fault Code		Y		
CS CAN (After 2005)		Front sunroof				Live Data		Y		
CS CAN (After 2005)		Front sunroof				Actuation Test		Y		
CS CAN (After 2005)		Front sunroof				Special Function	Configuration	Y		
CS CAN (After 2005)		Central sunroof				Read ECU Information		Y		
CS CAN (After 2005)		Central sunroof				Read Fault Code		Y		
CS CAN (After 2005)		Central sunroof				Erase Fault Code		Y		
CS CAN (After 2005)		Central sunroof				Live Data		Y		
CS CAN (After 2005)		Central sunroof				Actuation Test		Y		
CS CAN (After 2005)		Central sunroof				Special Function	Configuration	Y		
CS CAN (After 2005)		Odometer LED unit				Read ECU Information		Y		
CS CAN (After 2005)		Odometer LED unit				Read Fault Code		Y		
CS CAN (After 2005)		Odometer LED unit				Erase Fault Code		Y		
CS CAN (After 2005)		Odometer LED unit				Live Data		Y		
CS CAN (After 2005)		Odometer LED unit				Actuation Test		Y		
CS CAN (After 2005)		Odometer LED unit				Special Function	Configuration	Y		
CS CAN (After 2005)		Rain and light sensor				Read ECU Information		Y		
CS CAN (After 2005)		Rain and light sensor				Read Fault Code		Y		
CS CAN (After 2005)		Rain and light sensor				Erase Fault Code		Y		
CS CAN (After 2005)		Control of the telematic unit				Read ECU Information		Y		
CS CAN (After 2005)		Control of the telematic unit				Live Data		Y		
CS CAN (After 2005)		Learning				Special Function	Key programming	Y		
C15		1.9 WJY LUCAS DCN2				Read ECU Information		Y		
C15		1.9 WJY LUCAS DCN2				Read Fault Code		Y		
C15		1.9 WJY LUCAS DCN2				Erase Fault Code		Y		
C15		1.9 WJY LUCAS DCN2				Live Data		Y		
C15		1.9 WJY LUCAS DCN2				Actuation Test		Y		
BS3		VIS				Special Function	Display of vehicle information	Y		
BS3		Built-in Systems Interface				Read ECU Information		Y		
BS3		Built-in Systems Interface				Read Fault Code		Y		
BS3		Built-in Systems Interface				Erase Fault Code		Y		
BS3		Built-in Systems Interface				Live Data		Y		
BS3		Built-in Systems Interface				Actuation Test		Y		
BS3		Built-in Systems Interface				Special Function	Maintenance - BSI operating mode	Y		
BS3		Built-in Systems Interface				Special Function	Pack Repair	Y		
BS3		Engine management ECU	Petrol engine	MEV17_4_EURO5	MEV17_4_EURO5 SFS	Read ECU Information		Y		
BS3		Engine management ECU	Petrol engine	MEV17_4_EURO5	MEV17_4_EURO5 SFS	Read Fault Code		Y		
BS3		Engine management ECU	Petrol engine	MEV17_4_EURO5	MEV17_4_EURO5 SFS	Erase Fault Code		Y		
BS3		Engine management ECU	Petrol engine	MEV17_4_EURO5	MEV17_4_EURO5 SFS	Live Data		Y		
BS3		Engine management ECU	Petrol engine	MEV17_4_EURO5	MEV17_4_EURO5 SFS	Actuation Test		Y		
BS3		Engine management ECU	Petrol engine	MEV17_4_EURO5	MEV17_4_EURO5 SFS	Special Function	Configuration	Y		
BS3		Engine management ECU	Petrol engine	MEV17_4_EURO5	MEV17_4_EURO5 SFS	Special Function	Pack Repair	Y		
BS3		Engine management ECU	Petrol engine	MEV17_4_EURO4	MEV17_4_EURO4+ SFR	Read ECU Information		Y		
BS3		Engine management ECU	Petrol engine	MEV17_4_EURO4	MEV17_4_EURO4+ SFR	Read Fault Code		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function reasons	Add (Y/N)	Verification (Y/N)	Remarks
DS3		Engine management ECU	Diesel engine	EDC17C10_BH2	98P -DV6DTED -92 CV	Special Function	Configuration	Y		
DS3		Engine management ECU	Diesel engine	EDC17C10_BH2	98P -DV6DTED -92 CV	Special Function	Pack Repair	Y		
DS3		Engine management ECU	Diesel engine	EDC17C10_BH2	98J -DV6DTED -90 CV	Read ECU Information		Y		
DS3		Engine management ECU	Diesel engine	EDC17C10_BH2	98J -DV6DTED -90 CV	Read Fault Code		Y		
DS3		Engine management ECU	Diesel engine	EDC17C10_BH2	98J -DV6DTED -90 CV	Erase Fault Code		Y		
DS3		Engine management ECU	Diesel engine	EDC17C10_BH2	98J -DV6DTED -90 CV	Live Data		Y		
DS3		Engine management ECU	Diesel engine	EDC17C10_BH2	98J -DV6DTED -90 CV	Actuation Test		Y		
DS3		Engine management ECU	Diesel engine	EDC17C10_BH2	98J -DV6DTED -90 CV	Special Function	Configuration	Y		
DS3		Engine management ECU	Diesel engine	EDC17C10_BH2	98J -DV6DTED -90 CV	Special Function	Pack Repair	Y		
DS3		Engine management ECU	Diesel engine	EDC17C10_BH2	88R -DV6CTED -70 CV	Read ECU Information		Y		
DS3		Engine management ECU	Diesel engine	EDC17C10_BH2	88R -DV6CTED -70 CV	Read Fault Code		Y		
DS3		Engine management ECU	Diesel engine	EDC17C10_BH2	88R -DV6CTED -70 CV	Erase Fault Code		Y		
DS3		Engine management ECU	Diesel engine	EDC17C10_BH2	88R -DV6CTED -70 CV	Live Data		Y		
DS3		Engine management ECU	Diesel engine	EDC17C10_BH2	88R -DV6CTED -70 CV	Actuation Test		Y		
DS3		Engine management ECU	Diesel engine	EDC17C10_BH2	88R -DV6CTED -70 CV	Special Function	Configuration	Y		
DS3		Engine management ECU	Diesel engine	EDC17C10_BH2	88R -DV6CTED -70 CV	Special Function	Pack Repair	Y		
DS3		Engine management ECU	Diesel engine	EDC17C10_BH2	88P -DV6CTED -70 CV	Read ECU Information		Y		
DS3		Engine management ECU	Diesel engine	EDC17C10_BH2	88P -DV6CTED -70 CV	Read Fault Code		Y		
DS3		Engine management ECU	Diesel engine	EDC17C10_BH2	88P -DV6CTED -70 CV	Erase Fault Code		Y		
DS3		Engine management ECU	Diesel engine	EDC17C10_BH2	88P -DV6CTED -70 CV	Live Data		Y		
DS3		Engine management ECU	Diesel engine	EDC17C10_BH2	88P -DV6CTED -70 CV	Actuation Test		Y		
DS3		Engine management ECU	Diesel engine	EDC17C10_BH2	88P -DV6CTED -70 CV	Special Function	Configuration	Y		
DS3		Engine management ECU	Diesel engine	EDC17C10_BH2	88P -DV6CTED -70 CV	Special Function	Pack Repair	Y		
DS3		Engine management ECU	Diesel engine	HDJ_S11807	HDJ_S11807_98R	Read ECU Information		Y		
DS3		Engine management ECU	Diesel engine	HDJ_S11807	HDJ_S11807_98R	Read Fault Code		Y		
DS3		Engine management ECU	Diesel engine	HDJ_S11807	HDJ_S11807_98R	Erase Fault Code		Y		
DS3		Engine management ECU	Diesel engine	HDJ_S11807	HDJ_S11807_98R	Live Data		Y		
DS3		Engine management ECU	Diesel engine	HDJ_S11807	HDJ_S11807_98R	Actuation Test		Y		
DS3		Engine management ECU	Diesel engine	HDJ_S11807	HDJ_S11807_98R	Special Function	Configuration	Y		
DS3		Engine management ECU	Diesel engine	HDJ_S11807	HDJ_S11807_98R	Special Function	Pack Repair	Y		
DS3		Engine management ECU	Diesel engine	HDJ_S11807	HDJ_S11807_98L	Read ECU Information		Y		
DS3		Engine management ECU	Diesel engine	HDJ_S11807	HDJ_S11807_98L	Read Fault Code		Y		
DS3		Engine management ECU	Diesel engine	HDJ_S11807	HDJ_S11807_98L	Erase Fault Code		Y		
DS3		Engine management ECU	Diesel engine	HDJ_S11807	HDJ_S11807_98L	Live Data		Y		
DS3		Engine management ECU	Diesel engine	HDJ_S11807	HDJ_S11807_98L	Actuation Test		Y		
DS3		Engine management ECU	Diesel engine	HDJ_S11807	HDJ_S11807_98L	Special Function	Configuration	Y		
DS3		Engine management ECU	Diesel engine	HDJ_S11807	HDJ_S11807_98L	Special Function	Pack Repair	Y		
DS3		Engine management ECU	Diesel engine	HDJ_S11807_BH2	HDJ_S11807_BH2_98R	Read ECU Information		Y		
DS3		Engine management ECU	Diesel engine	HDJ_S11807_BH2	HDJ_S11807_BH2_98R	Read Fault Code		Y		
DS3		Engine management ECU	Diesel engine	HDJ_S11807_BH2	HDJ_S11807_BH2_98R	Erase Fault Code		Y		
DS3		Engine management ECU	Diesel engine	HDJ_S11807_BH2	HDJ_S11807_BH2_98R	Live Data		Y		
DS3		Engine management ECU	Diesel engine	HDJ_S11807_BH2	HDJ_S11807_BH2_98R	Actuation Test		Y		
DS3		Engine management ECU	Diesel engine	HDJ_S11807_BH2	HDJ_S11807_BH2_98R	Special Function	Configuration	Y		
DS3		Engine management ECU	Diesel engine	HDJ_S11807_BH2	HDJ_S11807_BH2_98R	Special Function	Pack Repair	Y		
DS3		Engine management ECU	Diesel engine	HDJ_S11807_BH2	HDJ_S11807_BH2_98R	Read ECU Information		Y		
DS3		Engine management ECU	Diesel engine	HDJ_S11807_BH2	HDJ_S11807_BH2_98R	Read Fault Code		Y		
DS3		Engine management ECU	Diesel engine	HDJ_S11807_BH2	HDJ_S11807_BH2_98R	Erase Fault Code		Y		
DS3		Engine management ECU	Diesel engine	HDJ_S11807_BH2	HDJ_S11807_BH2_98R	Live Data		Y		
DS3		Engine management ECU	Diesel engine	HDJ_S11807_BH2	HDJ_S11807_BH2_98R	Actuation Test		Y		
DS3		Engine management ECU	Diesel engine	HDJ_S11807_BH2	HDJ_S11807_BH2_98R	Special Function	Configuration	Y		
DS3		Engine management ECU	Diesel engine	HDJ_S11807_BH2	HDJ_S11807_BH2_98R	Special Function	Pack Repair	Y		
DS3		Engine management ECU	Diesel engine	EDC17C60		Read ECU Information		Y		
DS3		Engine management ECU	Diesel engine	EDC17C60		Read Fault Code		Y		
DS3		Engine management ECU	Diesel engine	EDC17C60		Erase Fault Code		Y		
DS3		Engine management ECU	Diesel engine	EDC17C60		Live Data		Y		
DS3		Engine management ECU	Diesel engine	EDC17C60		Actuation Test		Y		
DS3		Engine management ECU	Diesel engine	EDC17C60		Special Function	Configuration	Y		
DS3		Engine management ECU	Diesel engine	EDC17C60		Special Function	Pack Repair	Y		
DS3		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)		ESP8650_0		Read ECU Information		Y		
DS3		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)		ESP8650_0		Read Fault Code		Y		
DS3		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)		ESP8650_0		Erase Fault Code		Y		
DS3		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)		ESP8650_0		Live Data		Y		
DS3		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)		ESP8650_0		Actuation Test		Y		
DS3		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)		ESP8650_0		Special Function	Configuration	Y		
DS3		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)		ESP8650_0		Special Function	Pack Repair	Y		
DS3		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)		ESP86L100		Read ECU Information		Y		
DS3		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)		ESP86L100		Read Fault Code		Y		
DS3		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)		ESP86L100		Erase Fault Code		Y		
DS3		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)		ESP86L100		Live Data		Y		
DS3		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)		ESP86L100		Actuation Test		Y		
DS3		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)		ESP86L100		Special Function	Configuration	Y		
DS3		Automatic gearbox or controlled manual gearbox		BVA_IL4		Read ECU Information		Y		
DS3		Automatic gearbox or controlled manual gearbox		BVA_IL4		Read Fault Code		Y		
DS3		Automatic gearbox or controlled manual gearbox		BVA_IL4		Erase Fault Code		Y		
DS3		Automatic gearbox or controlled manual gearbox		BVA_IL4		Live Data		Y		
DS3		Automatic gearbox or controlled manual gearbox		BVA_IL4		Actuation Test		Y		
DS3		Automatic gearbox or controlled manual gearbox		BVA_IL4		Special Function	Configuration	Y		
DS3		Automatic gearbox or controlled manual gearbox		BVA_IL4		Special Function	Pack Repair	Y		
DS3		Automatic gearbox or controlled manual gearbox		BWP_MA		Read ECU Information		Y		
DS3		Automatic gearbox or controlled manual gearbox		BWP_MA		Read Fault Code		Y		
DS3		Automatic gearbox or controlled manual gearbox		BWP_MA		Erase Fault Code		Y		
DS3		Automatic gearbox or controlled manual gearbox		BWP_MA		Live Data		Y		
DS3		Automatic gearbox or controlled manual gearbox		BWP_MA		Actuation Test		Y		
DS3		Automatic gearbox or controlled manual gearbox		BWP_MA		Special Function	Counters	Y		
DS3		Automatic gearbox or controlled manual gearbox		BWP_MA		Special Function	Setting of the actuator	Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for Citroen, NO stands for other wires)	Subsystem (YES stands for Citroen, NO stands for other wires)	Subsystem or system type	Function type	Special function subname	Add (Y/N)	Verification (Y/N)	Remarks
DS3		Automatic gearbox or controlled manual gearbox	BWP_MA			Special Function	Learning	Y		
DS3		Automatic gearbox or controlled manual gearbox	BWP_MA			Special Function	Replacement parts	Y		
DS3		Automatic gearbox or controlled manual gearbox	CFC300P			Read ECU Information		Y		
DS3		Automatic gearbox or controlled manual gearbox	CFC300P			Read Fault Code		Y		
DS3		Automatic gearbox or controlled manual gearbox	CFC300P			Erase Fault Code		Y		
DS3		Automatic gearbox or controlled manual gearbox	CFC300P			Live Data		Y		
DS3		Automatic gearbox or controlled manual gearbox	CFC300P			Actuation Test		Y		
DS3		Automatic gearbox or controlled manual gearbox	CFC300P			Special Function	Replacement parts	Y		
DS3		Automatic gearbox or controlled manual gearbox	MUPS_IDS			Read ECU Information		Y		
DS3		Automatic gearbox or controlled manual gearbox	MUPS_IDS			Read Fault Code		Y		
DS3		Automatic gearbox or controlled manual gearbox	MUPS_IDS			Erase Fault Code		Y		
DS3		Automatic gearbox or controlled manual gearbox	MUPS_IDS			Live Data		Y		
DS3		Automatic gearbox or controlled manual gearbox	MUPS_IDS			Actuation Test		Y		
DS3		Automatic gearbox or controlled manual gearbox	MUPS_IDS			Special Function	Setting of the actuator	Y		
DS3		Automatic gearbox or controlled manual gearbox	MUPS_IDS			Special Function	Programming	Y		
DS3		Automatic gearbox or controlled manual gearbox	MUPS_IDS			Special Function	Replacement parts	Y		
DS3		Automatic gearbox or controlled manual gearbox	EVA_AM6_AT6_IDS			Read ECU Information		Y		
DS3		Automatic gearbox or controlled manual gearbox	EVA_AM6_AT6_IDS			Read Fault Code		Y		
DS3		Automatic gearbox or controlled manual gearbox	EVA_AM6_AT6_IDS			Erase Fault Code		Y		
DS3		Automatic gearbox or controlled manual gearbox	EVA_AM6_AT6_IDS			Live Data		Y		
DS3		Automatic gearbox or controlled manual gearbox	EVA_AM6_AT6_IDS			Actuation Test		Y		
DS3		Automatic gearbox or controlled manual gearbox	EVA_AM6_AT6_IDS			Special Function	Pack Repair	Y		
DS3		Automatic gearbox or controlled manual gearbox	EVA_AM6_AT6_IDS			Special Function	Configuration	Y		
DS3		Automatic gearbox or controlled manual gearbox	BWP_MCP_IDS			Read ECU Information		Y		
DS3		Automatic gearbox or controlled manual gearbox	BWP_MCP_IDS			Read Fault Code		Y		
DS3		Automatic gearbox or controlled manual gearbox	BWP_MCP_IDS			Erase Fault Code		Y		
DS3		Automatic gearbox or controlled manual gearbox	BWP_MCP_IDS			Live Data		Y		
DS3		Automatic gearbox or controlled manual gearbox	BWP_MCP_IDS			Actuation Test		Y		
DS3		Automatic gearbox or controlled manual gearbox	BWP_MCP_IDS			Special Function	Replacement parts	Y		
DS3		Automatic gearbox or controlled manual gearbox	BWP_MCP_IDS			Special Function	Counters	Y		
DS3		Air bags and pre-tensioners control unit				Read ECU Information		Y		
DS3		Air bags and pre-tensioners control unit				Read Fault Code		Y		
DS3		Air bags and pre-tensioners control unit				Erase Fault Code		Y		
DS3		Air bags and pre-tensioners control unit				Live Data		Y		
DS3		Air bags and pre-tensioners control unit				Special Function	Configuration	Y		
DS3		Air bags and pre-tensioners control unit				Special Function	Pack Repair	Y		
DS3		Power steering				Read ECU Information		Y		
DS3		Power steering				Read Fault Code		Y		
DS3		Power steering				Erase Fault Code		Y		
DS3		Power steering				Live Data		Y		
DS3		Power steering				Actuation Test		Y		
DS3		Power steering				Special Function	Configuration	Y		
DS3		Diesel additive pump	PAIDGO			Read ECU Information		Y		
DS3		Diesel additive pump	PAIDGO			Read Fault Code		Y		
DS3		Diesel additive pump	PAIDGO			Erase Fault Code		Y		
DS3		Diesel additive pump	PAIDGO			Live Data		Y		
DS3		Diesel additive pump	PAIDGO			Actuation Test		Y		
DS3		Diesel additive pump	PAIDGO			Special Function	Configuration	Y		
DS3		Diesel additive pump	PAIDGO			Special Function	Pack Repair	Y		
DS3		Diesel additive pump	PAIDGO_TI_E6			Read ECU Information		Y		
DS3		Diesel additive pump	PAIDGO_TI_E6			Read Fault Code		Y		
DS3		Diesel additive pump	PAIDGO_TI_E6			Erase Fault Code		Y		
DS3		Diesel additive pump	PAIDGO_TI_E6			Live Data		Y		
DS3		Diesel additive pump	PAIDGO_TI_E6			Actuation Test		Y		
DS3		Diesel additive pump	PAIDGO_TI_E6			Special Function	Configuration	Y		
DS3		Battery charge status unit	BECB			Read ECU Information		Y		
DS3		Battery charge status unit	BECB			Read Fault Code		Y		
DS3		Battery charge status unit	BECB			Erase Fault Code		Y		
DS3		Battery charge status unit	BECB			Live Data		Y		
DS3		Battery charge status unit	BECB			Special Function	Configuration	Y		
DS3		Battery charge status unit	BECB_GEN2			Read ECU Information		Y		
DS3		Battery charge status unit	BECB_GEN2			Read Fault Code		Y		
DS3		Battery charge status unit	BECB_GEN2			Erase Fault Code		Y		
DS3		Battery charge status unit	BECB_GEN2			Live Data		Y		
DS3		Battery charge status unit	BECB_GEN2			Special Function	Configuration	Y		
DS3		Battery charge status unit	BECB_GEN2			Special Function	Pack Repair	Y		
DS3		Trailer relay unit				Read ECU Information		Y		
DS3		Trailer relay unit				Read Fault Code		Y		
DS3		Trailer relay unit				Erase Fault Code		Y		
DS3		Trailer relay unit				Live Data		Y		
DS3		Trailer relay unit				Actuation Test		Y		
DS3		Engine relay unit				Read ECU Information		Y		
DS3		Engine relay unit				Read Fault Code		Y		
DS3		Engine relay unit				Erase Fault Code		Y		
DS3		Engine relay unit				Live Data		Y		
DS3		Engine relay unit				Actuation Test		Y		
DS3		Controls under the steering wheel				Read ECU Information		Y		
DS3		Controls under the steering wheel				Read Fault Code		Y		
DS3		Controls under the steering wheel				Erase Fault Code		Y		
DS3		Controls under the steering wheel				Live Data		Y		
DS3		Controls under the steering wheel				Actuation Test		Y		
DS3		Parking assistance				Read ECU Information		Y		
DS3		Parking assistance				Read Fault Code		Y		
DS3		Parking assistance				Erase Fault Code		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function reasons	Add (Y/N)	Verification (Y/N)	Remarks
DS3		Parking assistance				Live Data		Y		
DS3		Parking assistance				Special Function	Configuration	Y		
DS3		Parking assistance				Special Function	Pack Repair	Y		
DS3		Air conditioning				Read ECU Information		Y		
DS3		Air conditioning				Read Fault Code		Y		
DS3		Air conditioning				Erase Fault Code		Y		
DS3		Air conditioning				Live Data		Y		
DS3		Air conditioning				Actuation Test		Y		
DS3		Air conditioning				Special Function	Configuration	Y		
DS3		Air conditioning				Special Function	Pack Repair	Y		
DS3		Multifunction screen	Type "A"(segments) with buttons			Read ECU Information		Y		
DS3		Multifunction screen	Type "A"(segments) with buttons			Read Fault Code		Y		
DS3		Multifunction screen	Type "A"(segments) with buttons			Erase Fault Code		Y		
DS3		Multifunction screen	Type "A"(segments) with buttons			Live Data		Y		
DS3		Multifunction screen	Type "A"(segments) with buttons			Actuation Test		Y		
DS3		Multifunction screen	Type "A"(segments) with buttons			Special Function	Configuration	Y		
DS3		Multifunction screen	Type "A"(segments) with buttons			Special Function	Pack Repair	Y		
DS3		Multifunction screen	Type "A"(segments) without button			Read ECU Information		Y		
DS3		Multifunction screen	Type "A"(segments) without button			Read Fault Code		Y		
DS3		Multifunction screen	Type "A"(segments) without button			Erase Fault Code		Y		
DS3		Multifunction screen	Type "A"(segments) without button			Live Data		Y		
DS3		Multifunction screen	Type "A"(segments) without button			Actuation Test		Y		
DS3		Multifunction screen	Type "A"(segments) without button			Special Function	Configuration	Y		
DS3		Multifunction screen	Type "A"(segments) without button			Special Function	Pack Repair	Y		
DS3		Multifunction screen	Type "C" (dot matrix)			Read ECU Information		Y		
DS3		Multifunction screen	Type "C" (dot matrix)			Read Fault Code		Y		
DS3		Multifunction screen	Type "C" (dot matrix)			Erase Fault Code		Y		
DS3		Multifunction screen	Type "C" (dot matrix)			Live Data		Y		
DS3		Multifunction screen	Type "C" (dot matrix)			Actuation Test		Y		
DS3		Multifunction screen	Type "C" (dot matrix)			Special Function	Configuration	Y		
DS3		Multifunction screen	Type "C" (dot matrix)			Special Function	Pack Repair	Y		
DS3		Multifunction screen	Type "C colour" (dot matrix)			Read ECU Information		Y		
DS3		Multifunction screen	Type "C colour" (dot matrix)			Read Fault Code		Y		
DS3		Multifunction screen	Type "C colour" (dot matrix)			Erase Fault Code		Y		
DS3		Multifunction screen	Type "C colour" (dot matrix)			Live Data		Y		
DS3		Multifunction screen	Type "C colour" (dot matrix)			Actuation Test		Y		
DS3		Multifunction screen	Type "C colour" (dot matrix)			Special Function	Configuration	Y		
DS3		Multifunction screen	Type "C colour" (dot matrix)			Special Function	Pack Repair	Y		
DS3		Instrument panel				Read ECU Information		Y		
DS3		Instrument panel				Read Fault Code		Y		
DS3		Instrument panel				Erase Fault Code		Y		
DS3		Instrument panel				Live Data		Y		
DS3		Instrument panel				Actuation Test		Y		
DS3		Instrument panel				Special Function	Configuration	Y		
DS3		Instrument panel				Special Function	Pack Repair	Y		
DS3		Hands-free Kit(telephone)				Read ECU Information		Y		
DS3		Hands-free Kit(telephone)				Read Fault Code		Y		
DS3		Hands-free Kit(telephone)				Erase Fault Code		Y		
DS3		Hands-free Kit(telephone)				Live Data		Y		
DS3		Hands-free Kit(telephone)				Actuation Test		Y		
DS3		Hands-free Kit(telephone)				Special Function	Configuration	Y		
DS3		Hands-free Kit(telephone)				Special Function	Pack Repair	Y		
DS3		Telematic unit (OTA) or audio-navigation	RADIONAV_INREG			Read ECU Information		Y		
DS3		Telematic unit (OTA) or audio-navigation	RADIONAV_INREG			Read Fault Code		Y		
DS3		Telematic unit (OTA) or audio-navigation	RADIONAV_INREG			Erase Fault Code		Y		
DS3		Telematic unit (OTA) or audio-navigation	RADIONAV_INREG			Live Data		Y		
DS3		Telematic unit (OTA) or audio-navigation	RADIONAV_INREG			Actuation Test		Y		
DS3		Telematic unit (OTA) or audio-navigation	RADIONAV_INREG			Special Function	Configuration	Y		
DS3		Telematic unit (OTA) or audio-navigation	RADIONAV_INREG			Read ECU Information		Y		
DS3		Telematic unit (OTA) or audio-navigation	RADIONAV_INREG			Read Fault Code		Y		
DS3		Telematic unit (OTA) or audio-navigation	RADIONAV_INREG			Erase Fault Code		Y		
DS3		Telematic unit (OTA) or audio-navigation	RADIONAV_INREG			Live Data		Y		
DS3		Telematic unit (OTA) or audio-navigation	RADIONAV_INREG			Actuation Test		Y		
DS3		Telematic unit (OTA) or audio-navigation	RADIONAV_INREG			Special Function	Configuration	Y		
DS3		Telematic unit (OTA) or audio-navigation	RADIONAV_INREG			Special Function	Pack Repair	Y		
DS3		Telematic unit (OTA) or audio-navigation	INREG2010			Read ECU Information		Y		
DS3		Telematic unit (OTA) or audio-navigation	INREG2010			Read Fault Code		Y		
DS3		Telematic unit (OTA) or audio-navigation	INREG2010			Erase Fault Code		Y		
DS3		Telematic unit (OTA) or audio-navigation	INREG2010			Live Data		Y		
DS3		Telematic unit (OTA) or audio-navigation	INREG2010			Actuation Test		Y		
DS3		Telematic unit (OTA) or audio-navigation	INREG2010			Special Function	Configuration	Y		
DS3		Telematic unit (OTA) or audio-navigation	INREG2010			Special Function	Pack Repair	Y		
DS3		Radio	Yes	RD4		Read ECU Information		Y		
DS3		Radio	Yes	RD4		Read Fault Code		Y		
DS3		Radio	Yes	RD4		Erase Fault Code		Y		
DS3		Radio	Yes	RD4		Live Data		Y		
DS3		Radio	Yes	RD4		Actuation Test		Y		
DS3		Radio	Yes	RD4		Special Function	Configuration	Y		
DS3		Radio	Yes	RD4		Special Function	Replacement parts	Y		
DS3		Radio	Yes	RD45		Read ECU Information		Y		
DS3		Radio	Yes	RD45		Read Fault Code		Y		
DS3		Radio	Yes	RD45		Erase Fault Code		Y		
DS3		Radio	Yes	RD45		Live Data		Y		
DS3		Radio	Yes	RD45		Actuation Test		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
DS3		Radio	Yes	RD45		Special Function	Configuration	Y		
DS3		Radio	Yes	RD45		Special Function	Pack Repair	Y		
DS3		Anti-theft alarm	Anti-theft alarm			Read ECU Information		Y		
DS3		Anti-theft alarm	Anti-theft alarm			Read Fault Code		Y		
DS3		Anti-theft alarm	Anti-theft alarm			Erase Fault Code		Y		
DS3		Anti-theft alarm	Anti-theft alarm			Live Data		Y		
DS3		Anti-theft alarm	Anti-theft alarm			Actuation Test		Y		
DS3		Anti-theft alarm	Anti-theft alarm			Special Function	Configuration	Y		
DS3		Anti-theft alarm	Anti-theft alarm			Special Function	Pack Repair	Y		
DS3		Rain and light sensor				Read ECU Information		Y		
DS3		Rain and light sensor				Read Fault Code		Y		
DS3		Rain and light sensor				Erase Fault Code		Y		
DS3		Seat belt not fastened warning lights unit				Read ECU Information		Y		
DS3		Seat belt not fastened warning lights unit				Actuation Test		Y		
DS3		High frequency receiver				Read ECU Information		Y		
DS3		High frequency receiver				Read Fault Code		Y		
DS3		High frequency receiver				Erase Fault Code		Y		
DS3		High frequency receiver				Live Data		Y		
DS3		Service module / Independent telematic unit	BTA			Read ECU Information		Y		
DS3		Service module / Independent telematic unit	BTA			Read Fault Code		Y		
DS3		Service module / Independent telematic unit	BTA			Erase Fault Code		Y		
DS3		Service module / Independent telematic unit	BTA			Live Data		Y		
DS3		Service module / Independent telematic unit	BTA			Actuation Test		Y		
DS3		Service module / Independent telematic unit	BTA			Special Function	Configuration	Y		
DS3		Service module / Independent telematic unit	BTA,2			Read ECU Information		Y		
DS3		Service module / Independent telematic unit	BTA,2			Read Fault Code		Y		
DS3		Service module / Independent telematic unit	BTA,2			Erase Fault Code		Y		
DS3		Service module / Independent telematic unit	BTA,2			Live Data		Y		
DS3		Service module / Independent telematic unit	BTA,2			Actuation Test		Y		
DS3		Service module / Independent telematic unit	BTA,2			Special Function	Configuration	Y		
DS3		Service module / Independent telematic unit	BTA,2			Special Function	Pack Repair	Y		
DS3		Voltage retaining device	DMTC			Read ECU Information		Y		
DS3		Voltage retaining device	DMTR			Read ECU Information		Y		
DS3		Voltage retaining device	DMTR			Read Fault Code		Y		
DS3		Voltage retaining device	DMTR			Erase Fault Code		Y		
DS3		Voltage retaining device	DMTR,DFCGB			Read ECU Information		Y		
DS3		Voltage retaining device	DMTR,DFCGB			Read Fault Code		Y		
DS3		Voltage retaining device	DMTR,DFCGB			Erase Fault Code		Y		
DS3		Vehicle distance assistance				Read ECU Information		Y		
DS3		Vehicle distance assistance				Read Fault Code		Y		
DS3		Vehicle distance assistance				Erase Fault Code		Y		
DS3		Vehicle distance assistance				Live Data		Y		
DS3		Vehicle distance assistance				Actuation Test		Y		
DS3		Vehicle distance assistance				Special Function	Pack Repair	Y		
DS4		Built-in Systems Interface				Read ECU Information		Y		
DS4		Built-in Systems Interface				Read Fault Code		Y		
DS4		Built-in Systems Interface				Erase Fault Code		Y		
DS4		Built-in Systems Interface				Live Data		Y		
DS4		Built-in Systems Interface				Actuation Test		Y		
DS4		Built-in Systems Interface				Special Function	Maintenance - ISI operating mode	Y		
DS4		Built-in Systems Interface				Special Function	Pack Repair	Y		
DS4		Engine management ECU	Petrol engine	MED17_4_2	14 MED 17_4_2 EIRO 5	Read ECU Information		Y		
DS4		Engine management ECU	Petrol engine	MED17_4_2	14 MED 17_4_2 EIRO 5	Read Fault Code		Y		
DS4		Engine management ECU	Petrol engine	MED17_4_2	14 MED 17_4_2 EIRO 5	Erase Fault Code		Y		
DS4		Engine management ECU	Petrol engine	MED17_4_2	14 MED 17_4_2 EIRO 5	Live Data		Y		
DS4		Engine management ECU	Petrol engine	MED17_4_2	14 MED 17_4_2 EIRO 5	Actuation Test		Y		
DS4		Engine management ECU	Petrol engine	MED17_4_2	14 MED 17_4_2 EIRO 5	Special Function	Configuration	Y		
DS4		Engine management ECU	Petrol engine	MED17_4_2	14 MED 17_4_2 EIRO 5	Special Function	Pack Repair	Y		
DS4		Engine management ECU	Petrol engine	VD46	Engine type: INY	Read ECU Information		Y		
DS4		Engine management ECU	Petrol engine	VD46	Engine type: INY	Read Fault Code		Y		
DS4		Engine management ECU	Petrol engine	VD46	Engine type: INY	Erase Fault Code		Y		
DS4		Engine management ECU	Petrol engine	VD46	Engine type: INY	Live Data		Y		
DS4		Engine management ECU	Petrol engine	VD46	Engine type: INY	Actuation Test		Y		
DS4		Engine management ECU	Petrol engine	VD46	Engine type: INY	Special Function	Pack Repair	Y		
DS4		Engine management ECU	Petrol engine	VD46	Engine type: INZ	Read ECU Information		Y		
DS4		Engine management ECU	Petrol engine	VD46	Engine type: INZ	Read Fault Code		Y		
DS4		Engine management ECU	Petrol engine	VD46	Engine type: INZ	Erase Fault Code		Y		
DS4		Engine management ECU	Petrol engine	VD46	Engine type: INZ	Live Data		Y		
DS4		Engine management ECU	Petrol engine	VD46	Engine type: INZ	Actuation Test		Y		
DS4		Engine management ECU	Petrol engine	VD46	Engine type: INZ	Special Function	Pack Repair	Y		
DS4		Engine management ECU	Petrol engine	ME745	ME745 NFU	Read ECU Information		Y		
DS4		Engine management ECU	Petrol engine	ME745	ME745 NFU	Read Fault Code		Y		
DS4		Engine management ECU	Petrol engine	ME745	ME745 NFU	Erase Fault Code		Y		
DS4		Engine management ECU	Petrol engine	ME745	ME745 NFU	Live Data		Y		
DS4		Engine management ECU	Petrol engine	ME745	ME745 NFU	Actuation Test		Y		
DS4		Engine management ECU	Petrol engine	ME745	ME745 NFU	Special Function	Configuration	Y		
DS4		Engine management ECU	Petrol engine	ME745	ME745 NFU	Special Function	Pack Repair	Y		
DS4		Engine management ECU	Petrol engine	ME745	ME745 NGA	Read ECU Information		Y		
DS4		Engine management ECU	Petrol engine	ME745	ME745 NGA	Read Fault Code		Y		
DS4		Engine management ECU	Petrol engine	ME745	ME745 NGA	Erase Fault Code		Y		
DS4		Engine management ECU	Petrol engine	ME745	ME745 NGA	Live Data		Y		
DS4		Engine management ECU	Petrol engine	ME745	ME745 NGA	Actuation Test		Y		
DS4		Engine management ECU	Petrol engine	ME745	ME745 NGA	Special Function	Configuration	Y		
DS4		Engine management ECU	Petrol engine	ME745	ME745 NGA	Special Function	Pack Repair	Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Models	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
DS4		Engine management ECU	Petrol engine	ME745	ME745 NGB	Read ECU Information		Y		
DS4		Engine management ECU	Petrol engine	ME745	ME745 NGB	Read Fault Code		Y		
DS4		Engine management ECU	Petrol engine	ME745	ME745 NGB	Erase Fault Code		Y		
DS4		Engine management ECU	Petrol engine	ME745	ME745 NGB	Live Data		Y		
DS4		Engine management ECU	Petrol engine	ME745	ME745 NGB	Actuation Test		Y		
DS4		Engine management ECU	Petrol engine	ME745	ME745 NGB	Special Function	Configuration	Y		
DS4		Engine management ECU	Petrol engine	ME745	ME745 NGB	Special Function	Pack Repair	Y		
DS4		Engine management ECU	Petrol engine	MEVD17_4_2	MEVD17_4_2 SFU	Read ECU Information		Y		
DS4		Engine management ECU	Petrol engine	MEVD17_4_2	MEVD17_4_2 SFU	Read Fault Code		Y		
DS4		Engine management ECU	Petrol engine	MEVD17_4_2	MEVD17_4_2 SFU	Erase Fault Code		Y		
DS4		Engine management ECU	Petrol engine	MEVD17_4_2	MEVD17_4_2 SFU	Live Data		Y		
DS4		Engine management ECU	Petrol engine	MEVD17_4_2	MEVD17_4_2 SFU	Actuation Test		Y		
DS4		Engine management ECU	Petrol engine	MEVD17_4_2	MEVD17_4_2 SFU	Special Function	Pack Repair	Y		
DS4		Engine management ECU	Petrol engine	MED17_4_4		Read ECU Information		Y		
DS4		Engine management ECU	Petrol engine	MED17_4_4		Read Fault Code		Y		
DS4		Engine management ECU	Petrol engine	MED17_4_4		Erase Fault Code		Y		
DS4		Engine management ECU	Petrol engine	MED17_4_4		Live Data		Y		
DS4		Engine management ECU	Petrol engine	MED17_4_4		Actuation Test		Y		
DS4		Engine management ECU	Petrol engine	MED17_4_4		Special Function	Pack Repair	Y		
DS4		Engine management ECU	Petrol engine	MM6KP		Read ECU Information		Y		
DS4		Engine management ECU	Petrol engine	MM6KP		Read Fault Code		Y		
DS4		Engine management ECU	Petrol engine	MM6KP		Erase Fault Code		Y		
DS4		Engine management ECU	Petrol engine	MM6KP		Live Data		Y		
DS4		Engine management ECU	Petrol engine	MM6KP		Actuation Test		Y		
DS4		Engine management ECU	Petrol engine	MM6KP		Special Function	Configuration	Y		
DS4		Engine management ECU	Petrol engine	MM6KP		Special Function	Pack Repair	Y		
DS4		Engine management ECU	Petrol engine	V46_21		Read ECU Information		Y		
DS4		Engine management ECU	Petrol engine	V46_21		Read Fault Code		Y		
DS4		Engine management ECU	Petrol engine	V46_21		Erase Fault Code		Y		
DS4		Engine management ECU	Petrol engine	V46_21		Live Data		Y		
DS4		Engine management ECU	Petrol engine	V46_21		Actuation Test		Y		
DS4		Engine management ECU	Petrol engine	V46_21		Special Function	Configuration	Y		
DS4		Engine management ECU	Petrol engine	V46_21		Special Function	Pack Repair	Y		
DS4		Engine management ECU	Petrol engine	ME745_ECS		Read ECU Information		Y		
DS4		Engine management ECU	Petrol engine	ME745_ECS		Read Fault Code		Y		
DS4		Engine management ECU	Petrol engine	ME745_ECS		Erase Fault Code		Y		
DS4		Engine management ECU	Petrol engine	ME745_ECS		Live Data		Y		
DS4		Engine management ECU	Petrol engine	ME745_ECS		Actuation Test		Y		
DS4		Engine management ECU	Petrol engine	ME745_ECS		Special Function	Configuration	Y		
DS4		Engine management ECU	Petrol engine	ME745_ECS		Special Function	Pack Repair	Y		
DS4		Engine management ECU	Petrol engine	V46_32		Read ECU Information		Y		
DS4		Engine management ECU	Petrol engine	V46_32		Read Fault Code		Y		
DS4		Engine management ECU	Petrol engine	V46_32		Erase Fault Code		Y		
DS4		Engine management ECU	Petrol engine	V46_32		Live Data		Y		
DS4		Engine management ECU	Petrol engine	V46_32		Actuation Test		Y		
DS4		Engine management ECU	Petrol engine	V46_32		Special Function	Configuration	Y		
DS4		Engine management ECU	Petrol engine	V46_32		Special Function	Pack Repair	Y		
DS4		Engine management ECU	Diesel engine	DCM6_2		Read ECU Information		Y		
DS4		Engine management ECU	Diesel engine	DCM6_2		Read Fault Code		Y		
DS4		Engine management ECU	Diesel engine	DCM6_2		Erase Fault Code		Y		
DS4		Engine management ECU	Diesel engine	DCM6_2		Live Data		Y		
DS4		Engine management ECU	Diesel engine	DCM6_2		Actuation Test		Y		
DS4		Engine management ECU	Diesel engine	DCM6_2		Special Function	Pack Repair	Y		
DS4		Engine management ECU	Diesel engine	HD1_S1807_BR2		Read ECU Information		Y		
DS4		Engine management ECU	Diesel engine	HD1_S1807_BR2		Read Fault Code		Y		
DS4		Engine management ECU	Diesel engine	HD1_S1807_BR2		Erase Fault Code		Y		
DS4		Engine management ECU	Diesel engine	HD1_S1807_BR2		Live Data		Y		
DS4		Engine management ECU	Diesel engine	HD1_S1807_BR2		Actuation Test		Y		
DS4		Engine management ECU	Diesel engine	HD1_S1807_BR2		Special Function	Configuration	Y		
DS4		Engine management ECU	Diesel engine	HD1_S1807_BR2		Special Function	Pack Repair	Y		
DS4		Engine management ECU	Diesel engine	EDC17C10_BR2	90P-DV0TED - 92 CV	Read ECU Information		Y		
DS4		Engine management ECU	Diesel engine	EDC17C10_BR2	90P-DV0TED - 92 CV	Read Fault Code		Y		
DS4		Engine management ECU	Diesel engine	EDC17C10_BR2	90P-DV0TED - 92 CV	Erase Fault Code		Y		
DS4		Engine management ECU	Diesel engine	EDC17C10_BR2	90P-DV0TED - 92 CV	Live Data		Y		
DS4		Engine management ECU	Diesel engine	EDC17C10_BR2	90P-DV0TED - 92 CV	Actuation Test		Y		
DS4		Engine management ECU	Diesel engine	EDC17C10_BR2	90P-DV0TED - 92 CV	Special Function	Configuration	Y		
DS4		Engine management ECU	Diesel engine	EDC17C10_BR2	90P-DV0TED - 92 CV	Special Function	Pack Repair	Y		
DS4		Engine management ECU	Diesel engine	EDC17C10_BR2	90J-DV0TEEM - 90 CV	Read ECU Information		Y		
DS4		Engine management ECU	Diesel engine	EDC17C10_BR2	90J-DV0TEEM - 90 CV	Read Fault Code		Y		
DS4		Engine management ECU	Diesel engine	EDC17C10_BR2	90J-DV0TEEM - 90 CV	Erase Fault Code		Y		
DS4		Engine management ECU	Diesel engine	EDC17C10_BR2	90J-DV0TEEM - 90 CV	Live Data		Y		
DS4		Engine management ECU	Diesel engine	EDC17C10_BR2	90J-DV0TEEM - 90 CV	Actuation Test		Y		
DS4		Engine management ECU	Diesel engine	EDC17C10_BR2	90J-DV0TEEM - 90 CV	Special Function	Configuration	Y		
DS4		Engine management ECU	Diesel engine	EDC17C10_BR2	90J-DV0TEEM - 90 CV	Special Function	Pack Repair	Y		
DS4		Engine management ECU	Diesel engine	DCM35_BR2	R8B-DV10CTED4-163CV	Read ECU Information		Y		
DS4		Engine management ECU	Diesel engine	DCM35_BR2	R8B-DV10CTED4-163CV	Read Fault Code		Y		
DS4		Engine management ECU	Diesel engine	DCM35_BR2	R8B-DV10CTED4-163CV	Erase Fault Code		Y		
DS4		Engine management ECU	Diesel engine	DCM35_BR2	R8B-DV10CTED4-163CV	Live Data		Y		
DS4		Engine management ECU	Diesel engine	DCM35_BR2	R8B-DV10CTED4-163CV	Actuation Test		Y		
DS4		Engine management ECU	Diesel engine	DCM35_BR2	R8B-DV10CTED4-163CV	Special Function	Configuration	Y		
DS4		Engine management ECU	Diesel engine	DCM35_BR2	R8B-DV10CTED4-163CV	Special Function	Pack Repair	Y		
DS4		Engine management ECU	Diesel engine	DCM35_BR2	R8E-DV10CTED4-150CV	Read ECU Information		Y		
DS4		Engine management ECU	Diesel engine	DCM35_BR2	R8E-DV10CTED4-150CV	Read Fault Code		Y		
DS4		Engine management ECU	Diesel engine	DCM35_BR2	R8E-DV10CTED4-150CV	Erase Fault Code		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function reasons	Add (Y/N)	Verification (Y/N)	Remarks
DS4		Engine management ECU	Diesel engine	DCM5_BR2	RHE-DW10CTED4-150CV	Live Data		Y		
DS4		Engine management ECU	Diesel engine	DCM5_BR2	RHE-DW10CTED4-150CV	Actuation Test		Y		
DS4		Engine management ECU	Diesel engine	DCM5_BR2	RHE-DW10CTED4-150CV	Special Function	Configuration	Y		
DS4		Engine management ECU	Diesel engine	DCM5_BR2	RHE-DW10CTED4-150CV	Special Function	Pack Repair	Y		
DS4		Engine management ECU	Diesel engine	EDC1700		Read ECU Information		Y		
DS4		Engine management ECU	Diesel engine	EDC1700		Read Fault Code		Y		
DS4		Engine management ECU	Diesel engine	EDC1700		Erase Fault Code		Y		
DS4		Engine management ECU	Diesel engine	EDC1700		Live Data		Y		
DS4		Engine management ECU	Diesel engine	EDC1700		Actuation Test		Y		
DS4		Engine management ECU	Diesel engine	EDC1700		Special Function	Pack Repair	Y		
DS4		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)		ABS81		Read ECU Information		Y		
DS4		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)		ABS81		Read Fault Code		Y		
DS4		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)		ABS81		Erase Fault Code		Y		
DS4		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)		ABS81		Live Data		Y		
DS4		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)		ABS81		Actuation Test		Y		
DS4		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)		ABS81		Special Function	Configuration	Y		
DS4		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)		ABS81		Special Function	Pack repair	Y		
DS4		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)		ESP81		Read ECU Information		Y		
DS4		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)		ESP81		Read Fault Code		Y		
DS4		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)		ESP81		Erase Fault Code		Y		
DS4		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)		ESP81		Live Data		Y		
DS4		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)		ESP81		Actuation Test		Y		
DS4		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)		ESP81		Special Function	Configuration	Y		
DS4		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)		ESP81		Special Function	Pack Repair	Y		
DS4		Automatic gearbox or controlled manual gearbox		CFC300P		Read ECU Information		Y		
DS4		Automatic gearbox or controlled manual gearbox		CFC300P		Read Fault Code		Y		
DS4		Automatic gearbox or controlled manual gearbox		CFC300P		Erase Fault Code		Y		
DS4		Automatic gearbox or controlled manual gearbox		CFC300P		Live Data		Y		
DS4		Automatic gearbox or controlled manual gearbox		CFC300P		Actuation Test		Y		
DS4		Automatic gearbox or controlled manual gearbox		CFC300P		Special Function	Replacement parts	Y		
DS4		Automatic gearbox or controlled manual gearbox		BVA_AM6_AT6_EUR05		Read ECU Information		Y		
DS4		Automatic gearbox or controlled manual gearbox		BVA_AM6_AT6_EUR05		Read Fault Code		Y		
DS4		Automatic gearbox or controlled manual gearbox		BVA_AM6_AT6_EUR05		Erase Fault Code		Y		
DS4		Automatic gearbox or controlled manual gearbox		BVA_AM6_AT6_EUR05		Live Data		Y		
DS4		Automatic gearbox or controlled manual gearbox		BVA_AM6_AT6_EUR05		Actuation Test		Y		
DS4		Automatic gearbox or controlled manual gearbox		BVA_AM6_AT6_EUR05		Special Function	Oil wear counter	Y		
DS4		Automatic gearbox or controlled manual gearbox		BVA_AM6_AT6_EUR05		Special Function	Configuration	Y		
DS4		Automatic gearbox or controlled manual gearbox		BVA_AM6_AT6_EUR05		Special Function	Pack Repair	Y		
DS4		Automatic gearbox or controlled manual gearbox		BVA_AM6_AT6_IDS		Read ECU Information		Y		
DS4		Automatic gearbox or controlled manual gearbox		BVA_AM6_AT6_IDS		Read Fault Code		Y		
DS4		Automatic gearbox or controlled manual gearbox		BVA_AM6_AT6_IDS		Erase Fault Code		Y		
DS4		Automatic gearbox or controlled manual gearbox		BVA_AM6_AT6_IDS		Live Data		Y		
DS4		Automatic gearbox or controlled manual gearbox		BVA_AM6_AT6_IDS		Actuation Test		Y		
DS4		Automatic gearbox or controlled manual gearbox		BVA_AM6_AT6_IDS		Special Function	Pack Repair	Y		
DS4		Automatic gearbox or controlled manual gearbox		BVA_AM6_AT6_IDS		Special Function	Configuration	Y		
DS4		Automatic gearbox or controlled manual gearbox		BVA_AT8		Read ECU Information		Y		
DS4		Automatic gearbox or controlled manual gearbox		BVA_AT8		Read Fault Code		Y		
DS4		Automatic gearbox or controlled manual gearbox		BVA_AT8		Erase Fault Code		Y		
DS4		Automatic gearbox or controlled manual gearbox		BVA_AT8		Live Data		Y		
DS4		Automatic gearbox or controlled manual gearbox		BVA_AT8		Actuation Test		Y		
DS4		Automatic gearbox or controlled manual gearbox		BVA_AT8		Special Function	Configuration	Y		
DS4		Automatic gearbox or controlled manual gearbox		BVA_AT8		Special Function	Pack Repair	Y		
DS4		Air bags and pre-tensioners control unit				Read ECU Information		Y		
DS4		Air bags and pre-tensioners control unit				Read Fault Code		Y		
DS4		Air bags and pre-tensioners control unit				Erase Fault Code		Y		
DS4		Air bags and pre-tensioners control unit				Live Data		Y		
DS4		Air bags and pre-tensioners control unit				Special Function	Configuration	Y		
DS4		Air bags and pre-tensioners control unit				Special Function	Pack Repair	Y		
DS4		Power steering				Read ECU Information		Y		
DS4		Power steering				Read Fault Code		Y		
DS4		Power steering				Erase Fault Code		Y		
DS4		Power steering				Live Data		Y		
DS4		Power steering				Actuation Test		Y		
DS4		Diesel additive pump		POMPE_MUX_TI		Read ECU Information		Y		
DS4		Diesel additive pump		POMPE_MUX_TI		Read Fault Code		Y		
DS4		Diesel additive pump		POMPE_MUX_TI		Erase Fault Code		Y		
DS4		Diesel additive pump		POMPE_MUX_TI		Live Data		Y		
DS4		Diesel additive pump		POMPE_MUX_TI		Actuation Test		Y		
DS4		Diesel additive pump		POMPE_MUX_TI		Special Function	Configuration	Y		
DS4		Diesel additive pump		PAID00_TI_E6		Read ECU Information		Y		
DS4		Diesel additive pump		PAID00_TI_E6		Read Fault Code		Y		
DS4		Diesel additive pump		PAID00_TI_E6		Erase Fault Code		Y		
DS4		Diesel additive pump		PAID00_TI_E6		Live Data		Y		
DS4		Diesel additive pump		PAID00_TI_E6		Actuation Test		Y		
DS4		Diesel additive pump		PAID00_TI_E6		Special Function	Configuration	Y		
DS4		Under-inflation detection		DSG		Read ECU Information		Y		
DS4		Under-inflation detection		DSG		Read Fault Code		Y		
DS4		Under-inflation detection		DSG		Erase Fault Code		Y		
DS4		Under-inflation detection		DSG		Live Data		Y		
DS4		Under-inflation detection		DSG		Special Function	Pack Reparation	Y		
DS4		Under-inflation detection		DSG_IDS		Read ECU Information		Y		
DS4		Under-inflation detection		DSG_IDS		Read Fault Code		Y		
DS4		Under-inflation detection		DSG_IDS		Erase Fault Code		Y		
DS4		Under-inflation detection		DSG_IDS		Live Data		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
DS4		Under-inflation detection	DSG, IDS			Special Function	Pack Repair	Y		
DS4		Dynamic headlamp height adjuster	HEMP			Read ECU Information		Y		
DS4		Dynamic headlamp height adjuster	HEMP			Read Fault Code		Y		
DS4		Dynamic headlamp height adjuster	HEMP			Erase Fault Code		Y		
DS4		Dynamic headlamp height adjuster	HEMP			Live Data		Y		
DS4		Dynamic headlamp height adjuster	HEMP			Actuation Test		Y		
DS4		Dynamic headlamp height adjuster	LADCT			Read ECU Information		Y		
DS4		Dynamic headlamp height adjuster	LADCT			Read Fault Code		Y		
DS4		Dynamic headlamp height adjuster	LADCT			Erase Fault Code		Y		
DS4		Dynamic headlamp height adjuster	LADCT			Live Data		Y		
DS4		Dynamic headlamp height adjuster	LADCT			Actuation Test		Y		
DS4		Dynamic headlamp height adjuster	LADCT			Special Function	Configuration with displaying of the parameters	Y		
DS4		Dynamic headlamp height adjuster	LADCT			Special Function	Replacement parts	Y		
DS4		Battery charge status unit				Read ECU Information		Y		
DS4		Battery charge status unit				Read Fault Code		Y		
DS4		Battery charge status unit				Erase Fault Code		Y		
DS4		Battery charge status unit				Live Data		Y		
DS4		Battery charge status unit				Special Function	Configuration with Displaying of the parameters	Y		
DS4		Battery charge status unit				Special Function	Pack Repair	Y		
DS4		Electric secondary brake				Read ECU Information		Y		
DS4		Electric secondary brake				Read Fault Code		Y		
DS4		Electric secondary brake				Erase Fault Code		Y		
DS4		Electric secondary brake				Live Data		Y		
DS4		Electric secondary brake				Actuation Test		Y		
DS4		Electric secondary brake				Special Function	Pack Repair	Y		
DS4		Lane departure warning system				Read ECU Information		Y		
DS4		Lane departure warning system				Read Fault Code		Y		
DS4		Lane departure warning system				Erase Fault Code		Y		
DS4		Lane departure warning system				Live Data		Y		
DS4		Lane departure warning system				Actuation Test		Y		
DS4		Lane departure warning system				Special Function	Configuration with Displaying of the Parameters	Y		
DS4		Trailer relay unit				Read ECU Information		Y		
DS4		Trailer relay unit				Read Fault Code		Y		
DS4		Trailer relay unit				Erase Fault Code		Y		
DS4		Trailer relay unit				Live Data		Y		
DS4		Trailer relay unit				Actuation Test		Y		
DS4		Engine relay unit				Read ECU Information		Y		
DS4		Engine relay unit				Read Fault Code		Y		
DS4		Engine relay unit				Erase Fault Code		Y		
DS4		Engine relay unit				Live Data		Y		
DS4		Engine relay unit				Special Function	Configuration	Y		
DS4		Parking assistance	4 parking assistance sensors			Read ECU Information		Y		
DS4		Parking assistance	4 parking assistance sensors			Read Fault Code		Y		
DS4		Parking assistance	4 parking assistance sensors			Erase Fault Code		Y		
DS4		Parking assistance	4 parking assistance sensors			Live Data		Y		
DS4		Parking assistance	4 parking assistance sensors			Actuation Test		Y		
DS4		Parking assistance	4 parking assistance sensors			Special Function	Configuration	Y		
DS4		Parking assistance	4 parking assistance sensors			Special Function	Pack Repair	Y		
DS4		Parking assistance	10 parking assistance sensors			Read ECU Information		Y		
DS4		Parking assistance	10 parking assistance sensors			Read Fault Code		Y		
DS4		Parking assistance	10 parking assistance sensors			Erase Fault Code		Y		
DS4		Parking assistance	10 parking assistance sensors			Live Data		Y		
DS4		Parking assistance	10 parking assistance sensors			Actuation Test		Y		
DS4		Parking assistance	10 parking assistance sensors			Special Function	Configuration	Y		
DS4		Parking assistance	10 parking assistance sensors			Special Function	Pack Repair	Y		
DS4		Air conditioning				Read ECU Information		Y		
DS4		Air conditioning				Read Fault Code		Y		
DS4		Air conditioning				Erase Fault Code		Y		
DS4		Air conditioning				Live Data		Y		
DS4		Air conditioning				Actuation Test		Y		
DS4		Air conditioning				Special Function	Pack Repair	Y		
DS4		Controls under the steering wheel	Yes			Read ECU Information		Y		
DS4		Controls under the steering wheel	Yes			Read Fault Code		Y		
DS4		Controls under the steering wheel	Yes			Erase Fault Code		Y		
DS4		Controls under the steering wheel	Yes			Live Data		Y		
DS4		Controls under the steering wheel	Yes			Actuation Test		Y		
DS4		Controls under the steering wheel	Yes			Special Function	Pack Repair	Y		
DS4		Controls under the steering wheel	No			Read ECU Information		Y		
DS4		Controls under the steering wheel	No			Read Fault Code		Y		
DS4		Controls under the steering wheel	No			Erase Fault Code		Y		
DS4		Controls under the steering wheel	No			Live Data		Y		
DS4		Controls under the steering wheel	No			Actuation Test		Y		
DS4		Controls under the steering wheel	No			Special Function	Pack Repair	Y		
DS4		Multifunction screen	EMF_A_IDS			Read ECU Information		Y		
DS4		Multifunction screen	EMF_A_IDS			Read Fault Code		Y		
DS4		Multifunction screen	EMF_A_IDS			Erase Fault Code		Y		
DS4		Multifunction screen	EMF_A_IDS			Live Data		Y		
DS4		Multifunction screen	EMF_A_IDS			Actuation Test		Y		
DS4		Multifunction screen	EMF_A_IDS			Special Function	Configuration	Y		
DS4		Multifunction screen	EMF_C_IDS	Multifunction screen with pixels(C-)		Read ECU Information		Y		
DS4		Multifunction screen	EMF_C_IDS	Multifunction screen with pixels(C-)		Read Fault Code		Y		
DS4		Multifunction screen	EMF_C_IDS	Multifunction screen with pixels(C-)		Erase Fault Code		Y		
DS4		Multifunction screen	EMF_C_IDS	Multifunction screen with pixels(C-)		Live Data		Y		
DS4		Multifunction screen	EMF_C_IDS	Multifunction screen with pixels(C-)		Actuation Test		Y		
DS4		Multifunction screen	EMF_C_IDS	Multifunction screen with pixels(C-)		Special Function	Configuration	Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
DS4		Multifunction screen	EMF_C_IDS			Read ECU Information		Y		
DS4		Multifunction screen	EMF_C_IDS			Read Fault Code		Y		
DS4		Multifunction screen	EMF_C_IDS			Erase Fault Code		Y		
DS4		Multifunction screen	EMF_C_IDS			Actuation Test		Y		
DS4		Multifunction screen	EMF_C_IDS				Configuration	Y		
DS4		Radio	RS5			Read ECU Information		Y		
DS4		Radio	RS5			Read Fault Code		Y		
DS4		Radio	RS5			Erase Fault Code		Y		
DS4		Radio	RS5			Live Data		Y		
DS4		Radio	RS5			Actuation Test		Y		
DS4		Radio	RS5			Special Function	Configuration	Y		
DS4		Radio	RD45			Read ECU Information		Y		
DS4		Radio	RD45			Read Fault Code		Y		
DS4		Radio	RD45			Erase Fault Code		Y		
DS4		Radio	RD45			Live Data		Y		
DS4		Radio	RD45			Actuation Test		Y		
DS4		Radio	RD45			Special Function	Configuration	Y		
DS4		Radio	RD45			Special Function	Pack Repair	Y		
DS4		Audio amplifier				Read ECU Information		Y		
DS4		Audio amplifier				Read Fault Code		Y		
DS4		Audio amplifier				Erase Fault Code		Y		
DS4		Audio amplifier				Actuation Test		Y		
DS4		Audio amplifier				Special Function	Configuration	Y		
DS4		Telematic unit (OTA) or audio-navigation	RADONAV_BNEG			Read ECU Information		Y		
DS4		Telematic unit (OTA) or audio-navigation	RADONAV_BNEG			Read Fault Code		Y		
DS4		Telematic unit (OTA) or audio-navigation	RADONAV_BNEG			Erase Fault Code		Y		
DS4		Telematic unit (OTA) or audio-navigation	RADONAV_BNEG			Live Data		Y		
DS4		Telematic unit (OTA) or audio-navigation	RADONAV_BNEG			Actuation Test		Y		
DS4		Telematic unit (OTA) or audio-navigation	RADONAV_BNEG			Special Function	Configuration	Y		
DS4		Telematic unit (OTA) or audio-navigation	RNEG2010			Read ECU Information		Y		
DS4		Telematic unit (OTA) or audio-navigation	RNEG2010			Read Fault Code		Y		
DS4		Telematic unit (OTA) or audio-navigation	RNEG2010			Erase Fault Code		Y		
DS4		Telematic unit (OTA) or audio-navigation	RNEG2010			Live Data		Y		
DS4		Telematic unit (OTA) or audio-navigation	RNEG2010			Actuation Test		Y		
DS4		Telematic unit (OTA) or audio-navigation	RNEG2010			Special Function	Configuration	Y		
DS4		Telematic unit (OTA) or audio-navigation	RNEG2010			Special Function	Pack Repair	Y		
DS4		Telematic unit (OTA) or audio-navigation	SNEG_PLUS			Read ECU Information		Y		
DS4		Telematic unit (OTA) or audio-navigation	SNEG_PLUS			Read Fault Code		Y		
DS4		Telematic unit (OTA) or audio-navigation	SNEG_PLUS			Erase Fault Code		Y		
DS4		Telematic unit (OTA) or audio-navigation	SNEG_PLUS			Live Data		Y		
DS4		Telematic unit (OTA) or audio-navigation	SNEG_PLUS			Actuation Test		Y		
DS4		Telematic unit (OTA) or audio-navigation	SNEG_PLUS			Special Function	Configuration	Y		
DS4		Telematic unit (OTA) or audio-navigation	NAC/RC_CN			Read ECU Information		Y		
DS4		Telematic unit (OTA) or audio-navigation	NAC/RC_CN			Read Fault Code		Y		
DS4		Telematic unit (OTA) or audio-navigation	NAC/RC_CN			Erase Fault Code		Y		
DS4		Telematic unit (OTA) or audio-navigation	NAC/RC_CN			Live Data		Y		
DS4		Telematic unit (OTA) or audio-navigation	NAC/RC_CN			Actuation Test		Y		
DS4		Anti-theft alarm				Read ECU Information		Y		
DS4		Anti-theft alarm				Read Fault Code		Y		
DS4		Anti-theft alarm				Erase Fault Code		Y		
DS4		Anti-theft alarm				Live Data		Y		
DS4		Anti-theft alarm				Actuation Test		Y		
DS4		Anti-theft alarm				Special Function	Configuration	Y		
DS4		Anti-theft alarm				Special Function	Pack Repair	Y		
DS4		Seat driver position memory module				Read ECU Information		Y		
DS4		Seat driver position memory module				Read Fault Code		Y		
DS4		Seat driver position memory module				Erase Fault Code		Y		
DS4		Seat driver position memory module				Live Data		Y		
DS4		Seat driver position memory module				Actuation Test		Y		
DS4		Seat driver position memory module				Special Function	Configuration	Y		
DS4		Seat driver position memory module				Special Function	Pack Repair	Y		
DS4		Driver's door module				Read ECU Information		Y		
DS4		Driver's door module				Read Fault Code		Y		
DS4		Driver's door module				Erase Fault Code		Y		
DS4		Driver's door module				Live Data		Y		
DS4		Driver's door module				Actuation Test		Y		
DS4		Control panel dot matrix display	Yes			Read ECU Information		Y		
DS4		Control panel dot matrix display	Yes			Read Fault Code		Y		
DS4		Control panel dot matrix display	Yes			Erase Fault Code		Y		
DS4		Control panel dot matrix display	Yes			Actuation Test		Y		
DS4		Control panel dot matrix display	Yes			Special Function	Configuration	Y		
DS4		Control panel dot matrix display	No			Read ECU Information		Y		
DS4		Control panel dot matrix display	No			Read Fault Code		Y		
DS4		Control panel dot matrix display	No			Erase Fault Code		Y		
DS4		Control panel dot matrix display	No			Actuation Test		Y		
DS4		Control panel dot matrix display	No			Special Function	Configuration	Y		
DS4		Seat belt not fastened warning lights unit				Read ECU Information		Y		
DS4		Seat belt not fastened warning lights unit				Actuation Test		Y		
DS4		Rain and light sensor				Read ECU Information		Y		
DS4		Rain and light sensor				Read Fault Code		Y		
DS4		Rain and light sensor				Erase Fault Code		Y		
DS4		Rain and light sensor				Live Data		Y		
DS4		Rain and light sensor				Special Function	Pack Repair	Y		
DS4		Driving school module				Read ECU Information		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for Citroen, NO stands for other wires)	Subsystem (YES stands for Citroen, NO stands for other wires)	Subsystem or system type	Function type	Special function reasons	Add (Y/N)	Verification (Y/N)	Remarks
B54		Driving school module				Actuation Test		Y		
B54		Service module / Independent telematic unit	BTA			Read ECU Information		Y		
B54		Service module / Independent telematic unit	BTA			Read Fault Code		Y		
B54		Service module / Independent telematic unit	BTA			Erase Fault Code		Y		
B54		Service module / Independent telematic unit	BTA			Live Data		Y		
B54		Service module / Independent telematic unit	BTA			Actuation Test		Y		
B54		Service module / Independent telematic unit	BTA			Special Function	Configuration	Y		
B54		Service module / Independent telematic unit	BTA.2			Read ECU Information		Y		
B54		Service module / Independent telematic unit	BTA.2			Read Fault Code		Y		
B54		Service module / Independent telematic unit	BTA.2			Erase Fault Code		Y		
B54		Service module / Independent telematic unit	BTA.2			Live Data		Y		
B54		Service module / Independent telematic unit	BTA.2			Actuation Test		Y		
B54		Service module / Independent telematic unit	BTA.2			Special Function	Configuration	Y		
B54		Service module / Independent telematic unit	BTA.2			Special Function	Pack Repair	Y		
B54		Voltage retaining device	DMTC			Read ECU Information		Y		
B54		Voltage retaining device	DMTR			Read ECU Information		Y		
B54		Voltage retaining device	DMTR			Read Fault Code		Y		
B54		Voltage retaining device	DMTR			Erase Fault Code		Y		
B54		Voltage retaining device	DMTR DFC3B			Read ECU Information		Y		
B54		Voltage retaining device	DMTR DFC3B			Read Fault Code		Y		
B54		Voltage retaining device	DMTR DFC3B			Erase Fault Code		Y		
B54		Multiplexed control panel	Accessory audio system and manual air conditioning			Read ECU Information		Y		
B54		Multiplexed control panel	Accessory audio system and manual air conditioning			Read Fault Code		Y		
B54		Multiplexed control panel	Accessory audio system and manual air conditioning			Erase Fault Code		Y		
B54		Multiplexed control panel	Accessory audio system and manual air conditioning			Live Data		Y		
B54		Multiplexed control panel	Accessory audio system and manual air conditioning			Actuation Test		Y		
B54		Multiplexed control panel	RS5 audio system and manual air conditioning			Read ECU Information		Y		
B54		Multiplexed control panel	RS5 audio system and manual air conditioning			Read Fault Code		Y		
B54		Multiplexed control panel	RS5 audio system and manual air conditioning			Erase Fault Code		Y		
B54		Multiplexed control panel	RS5 audio system and manual air conditioning			Live Data		Y		
B54		Multiplexed control panel	RS5 audio system and manual air conditioning			Actuation Test		Y		
B54		Multiplexed control panel	RT6 telematic unit and manual air conditioning			Read ECU Information		Y		
B54		Multiplexed control panel	RT6 telematic unit and manual air conditioning			Read Fault Code		Y		
B54		Multiplexed control panel	RT6 telematic unit and manual air conditioning			Erase Fault Code		Y		
B54		Multiplexed control panel	RT6 telematic unit and manual air conditioning			Live Data		Y		
B54		Multiplexed control panel	RT6 telematic unit and manual air conditioning			Actuation Test		Y		
B54		Multiplexed control panel	Accessory audio equipment and automatic air conditioning			Read ECU Information		Y		
B54		Multiplexed control panel	Accessory audio equipment and automatic air conditioning			Read Fault Code		Y		
B54		Multiplexed control panel	Accessory audio equipment and automatic air conditioning			Erase Fault Code		Y		
B54		Multiplexed control panel	Accessory audio equipment and automatic air conditioning			Live Data		Y		
B54		Multiplexed control panel	Accessory audio equipment and automatic air conditioning			Actuation Test		Y		
B54		Multiplexed control panel	RS5 audio system and automatic air conditioning			Read ECU Information		Y		
B54		Multiplexed control panel	RS5 audio system and automatic air conditioning			Read Fault Code		Y		
B54		Multiplexed control panel	RS5 audio system and automatic air conditioning			Erase Fault Code		Y		
B54		Multiplexed control panel	RS5 audio system and automatic air conditioning			Live Data		Y		
B54		Multiplexed control panel	RS5 audio system and automatic air conditioning			Actuation Test		Y		
B54		Multiplexed control panel	RT6 telematic unit and automatic air conditioning			Read ECU Information		Y		
B54		Multiplexed control panel	RT6 telematic unit and automatic air conditioning			Read Fault Code		Y		
B54		Multiplexed control panel	RT6 telematic unit and automatic air conditioning			Erase Fault Code		Y		
B54		Multiplexed control panel	RT6 telematic unit and automatic air conditioning			Live Data		Y		
B54		Multiplexed control panel	RT6 telematic unit and automatic air conditioning			Actuation Test		Y		
B54		Monitoring of the blind spot				Read ECU Information		Y		
B54		Monitoring of the blind spot				Read Fault Code		Y		
B54		Monitoring of the blind spot				Erase Fault Code		Y		
B54		Monitoring of the blind spot				Live Data		Y		
B54		Monitoring of the blind spot				Actuation Test		Y		
B54		Monitoring of the blind spot				Special Function	Configuration	Y		
B54		Control on the steering wheel / integral controls steering wheel	Yes			Read ECU Information		Y		
B54		Control on the steering wheel / integral controls steering wheel	Yes			Read Fault Code		Y		
B54		Control on the steering wheel / integral controls steering wheel	Yes			Erase Fault Code		Y		
B54		Control on the steering wheel / integral controls steering wheel	Yes			Live Data		Y		
B54		Control on the steering wheel / integral controls steering wheel	No			Read ECU Information		Y		
B54		Control on the steering wheel / integral controls steering wheel	No			Read Fault Code		Y		
B54		Control on the steering wheel / integral controls steering wheel	No			Erase Fault Code		Y		
B54		Control on the steering wheel / integral controls steering wheel	No			Live Data		Y		
B54		Supply protection and management unit				Read ECU Information		Y		
B54		Supply protection and management unit				Read Fault Code		Y		
B54		Supply protection and management unit				Erase Fault Code		Y		
B54		Supply protection and management unit				Live Data		Y		
B54		Hands free control unit				Read ECU Information		Y		
B54		Hands free control unit				Read Fault Code		Y		
B54		Hands free control unit				Erase Fault Code		Y		
B54		Hands free control unit				Live Data		Y		
B54		Hands free control unit				Special Function	Configuration	Y		
B54		Hands free control unit				Special Function	Pack Repair	Y		
B54		Electronic key reader				Read ECU Information		Y		
B54		Electronic key reader				Read Fault Code		Y		
B54		Electronic key reader				Erase Fault Code		Y		
B54		Electronic key reader				Live Data		Y		
B54		Electric steering lock				Read ECU Information		Y		
B54		Electric steering lock				Read Fault Code		Y		
B54		Electric steering lock				Erase Fault Code		Y		
B54		Electric steering lock				Live Data		Y		
B54		Electric steering lock				Actuation Test		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
DS4		External CD player				Read ECU Information		Y		
DS4		External CD player				Read Fault Code		Y		
DS4		External CD player				Erase Fault Code		Y		
DS4		External CD player				Live Data		Y		
DS4		External CD player				Actuation Test		Y		
DS4		External CD player				Special Function	Configuration	Y		
DS4		Touch screen				Read ECU Information		Y		
DS4		Touch screen				Read Fault Code		Y		
DS4		Touch screen				Erase Fault Code		Y		
DS4		Touch screen				Live Data		Y		
DS4		Touch screen				Actuation Test		Y		
DS4 S		Built-in Systems Interface				Read ECU Information		Y		
DS4 S		Built-in Systems Interface				Read Fault Code		Y		
DS4 S		Built-in Systems Interface				Erase Fault Code		Y		
DS4 S		Built-in Systems Interface				Live Data		Y		
DS4 S		Built-in Systems Interface				Actuation Test		Y		
DS4 S		Built-in Systems Interface				Special Function	Maintenance - ISI operating mode	Y		
DS4 S		Built-in Systems Interface				Special Function	Configuration	Y		
DS4 S		Built-in Systems Interface				Special Function	Pack Repair	Y		
DS4 S		Engine management ECU	MED17_4_4			Read ECU Information		Y		
DS4 S		Engine management ECU	MED17_4_4			Read Fault Code		Y		
DS4 S		Engine management ECU	MED17_4_4			Erase Fault Code		Y		
DS4 S		Engine management ECU	MED17_4_4			Live Data		Y		
DS4 S		Engine management ECU	MED17_4_4			Actuation Test		Y		
DS4 S		Engine management ECU	MED17_4_4			Special Function	Pack reparation	Y		
DS4 S		Engine management ECU	MED17_4_4 EP8			Read ECU Information		Y		
DS4 S		Engine management ECU	MED17_4_4 EP8			Read Fault Code		Y		
DS4 S		Engine management ECU	MED17_4_4 EP8			Erase Fault Code		Y		
DS4 S		Engine management ECU	MED17_4_4 EP8			Live Data		Y		
DS4 S		Engine management ECU	MED17_4_4 EP8			Actuation Test		Y		
DS4 S		Engine management ECU	MED17_4_4 EP8			Special Function	Pack reparation	Y		
DS4 S		Engine management ECU	VD46			Read ECU Information		Y		
DS4 S		Engine management ECU	VD46			Read Fault Code		Y		
DS4 S		Engine management ECU	VD46			Erase Fault Code		Y		
DS4 S		Engine management ECU	VD46			Live Data		Y		
DS4 S		Engine management ECU	VD46			Actuation Test		Y		
DS4 S		Engine management ECU	VD46			Special Function	Pack Repair	Y		
DS4 S		Automatic gearbox or controlled manual gearbox	BVA_AMB_A16_EB0G5			Read ECU Information		Y		
DS4 S		Automatic gearbox or controlled manual gearbox	BVA_AMB_A16_EB0G5			Read Fault Code		Y		
DS4 S		Automatic gearbox or controlled manual gearbox	BVA_AMB_A16_EB0G5			Erase Fault Code		Y		
DS4 S		Automatic gearbox or controlled manual gearbox	BVA_AMB_A16_EB0G5			Live Data		Y		
DS4 S		Automatic gearbox or controlled manual gearbox	BVA_AMB_A16_EB0G5			Actuation Test		Y		
DS4 S		Automatic gearbox or controlled manual gearbox	BVA_AMB_A16_EB0G5			Special Function	Oil wear counter	Y		
DS4 S		Automatic gearbox or controlled manual gearbox	BVA_AMB_A16_EB0G5			Special Function	Pack Repair	Y		
DS4 S		Automatic gearbox or controlled manual gearbox	BVA_AMB_A16_US5			Read ECU Information		Y		
DS4 S		Automatic gearbox or controlled manual gearbox	BVA_AMB_A16_US5			Read Fault Code		Y		
DS4 S		Automatic gearbox or controlled manual gearbox	BVA_AMB_A16_US5			Erase Fault Code		Y		
DS4 S		Automatic gearbox or controlled manual gearbox	BVA_AMB_A16_US5			Live Data		Y		
DS4 S		Automatic gearbox or controlled manual gearbox	BVA_AMB_A16_US5			Actuation Test		Y		
DS4 S		Automatic gearbox or controlled manual gearbox	BVA_AMB_A16_US5			Special Function	Configuration	Y		
DS4 S		Automatic gearbox or controlled manual gearbox	BVA_AMB_A16_US5			Special Function	Pack Repair	Y		
DS4 S		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP81			Read ECU Information		Y		
DS4 S		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP81			Read Fault Code		Y		
DS4 S		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP81			Erase Fault Code		Y		
DS4 S		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP81			Live Data		Y		
DS4 S		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP81			Actuation Test		Y		
DS4 S		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP81			Special Function	Pack Repair	Y		
DS4 S		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP90			Read ECU Information		Y		
DS4 S		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP90			Read Fault Code		Y		
DS4 S		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP90			Erase Fault Code		Y		
DS4 S		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP90			Live Data		Y		
DS4 S		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP90			Actuation Test		Y		
DS4 S		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP90			Special Function	Pack Repair	Y		
DS4 S		Air bags and pre-tensioners control unit				Read ECU Information		Y		
DS4 S		Air bags and pre-tensioners control unit				Read Fault Code		Y		
DS4 S		Air bags and pre-tensioners control unit				Erase Fault Code		Y		
DS4 S		Air bags and pre-tensioners control unit				Live Data		Y		
DS4 S		Air bags and pre-tensioners control unit				Special Function	Configuration	Y		
DS4 S		Air bags and pre-tensioners control unit				Special Function	Pack Repair	Y		
DS4 S		Power steering				Read ECU Information		Y		
DS4 S		Power steering				Read Fault Code		Y		
DS4 S		Power steering				Erase Fault Code		Y		
DS4 S		Power steering				Live Data		Y		
DS4 S		Power steering				Actuation Test		Y		
DS4 S		Voltage retaining device	DMTR			Read ECU Information		Y		
DS4 S		Voltage retaining device	DMTR			Read Fault Code		Y		
DS4 S		Voltage retaining device	DMTR			Erase Fault Code		Y		
DS4 S		Voltage retaining device	DMTR_DTC0B			Read ECU Information		Y		
DS4 S		Voltage retaining device	DMTR_DTC0B			Read Fault Code		Y		
DS4 S		Voltage retaining device	DMTR_DTC0B			Erase Fault Code		Y		
DS4 S		Multiplexed control panel	MN5_audio/navigation and automatic air conditioning			Read ECU Information		Y		
DS4 S		Multiplexed control panel	MN5_audio/navigation and automatic air conditioning			Read Fault Code		Y		
DS4 S		Multiplexed control panel	MN5_audio/navigation and automatic air conditioning			Erase Fault Code		Y		
DS4 S		Multiplexed control panel	MN5_audio/navigation and automatic air conditioning			Live Data		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
DS4 S		Multiplexed control panel	80N audio/navigation and automatic air conditioning			Actuation Test		Y		
DS4 S		Multiplexed control panel	RD45 audio system and automatic air conditioning			Read ECU Information		Y		
DS4 S		Multiplexed control panel	RD45 audio system and automatic air conditioning			Read Fault Code		Y		
DS4 S		Multiplexed control panel	RD45 audio system and automatic air conditioning			Erase Fault Code		Y		
DS4 S		Multiplexed control panel	RD45 audio system and automatic air conditioning			Live Data		Y		
DS4 S		Multiplexed control panel	RD45 audio system and manual air conditioning			Read ECU Information		Y		
DS4 S		Multiplexed control panel	RD45 audio system and manual air conditioning			Read Fault Code		Y		
DS4 S		Multiplexed control panel	RD45 audio system and manual air conditioning			Erase Fault Code		Y		
DS4 S		Multiplexed control panel	RD45 audio system and manual air conditioning			Live Data		Y		
DS4 S		Multiplexed control panel	RD45 audio system and manual air conditioning			Actuation Test		Y		
DS4 S		Supply protection and management unit				Read ECU Information		Y		
DS4 S		Supply protection and management unit				Read Fault Code		Y		
DS4 S		Supply protection and management unit				Erase Fault Code		Y		
DS4 S		Supply protection and management unit				Live Data		Y		
DS4 S		Electric steering lock				Read ECU Information		Y		
DS4 S		Electric steering lock				Read Fault Code		Y		
DS4 S		Electric steering lock				Erase Fault Code		Y		
DS4 S		Electric steering lock				Live Data		Y		
DS4 S		Electric steering lock				Actuation Test		Y		
DS4 S		Electronic key reader				Read ECU Information		Y		
DS4 S		Electronic key reader				Read Fault Code		Y		
DS4 S		Electronic key reader				Erase Fault Code		Y		
DS4 S		Electronic key reader				Live Data		Y		
DS4 S		Battery charge status unit				Read ECU Information		Y		
DS4 S		Battery charge status unit				Read Fault Code		Y		
DS4 S		Battery charge status unit				Erase Fault Code		Y		
DS4 S		Battery charge status unit				Live Data		Y		
DS4 S		Battery charge status unit				Special Function	Configuration	Y		
DS4 S		Hands-free control unit				Read ECU Information		Y		
DS4 S		Hands-free control unit				Read Fault Code		Y		
DS4 S		Hands-free control unit				Erase Fault Code		Y		
DS4 S		Hands-free control unit				Live Data		Y		
DS4 S		Hands-free control unit				Actuation Test		Y		
DS4 S		Hands-free control unit				Special Function	Configuration	Y		
DS4 S		Hands-free control unit				Special Function	Pack Repair	Y		
DS4 S		Electric secondary brake				Read ECU Information		Y		
DS4 S		Electric secondary brake				Read Fault Code		Y		
DS4 S		Electric secondary brake				Erase Fault Code		Y		
DS4 S		Electric secondary brake				Live Data		Y		
DS4 S		Electric secondary brake				Actuation Test		Y		
DS4 S		Electric secondary brake				Special Function	Pack Repair	Y		
DS4 S		Radio				Read ECU Information		Y		
DS4 S		Radio				Read Fault Code		Y		
DS4 S		Radio				Erase Fault Code		Y		
DS4 S		Radio				Live Data		Y		
DS4 S		Radio				Actuation Test		Y		
DS4 S		Radio				Special Function	Configuration	Y		
DS4 S		Telematic unit (BTX) or audio/navigation				Read ECU Information		Y		
DS4 S		Telematic unit (BTX) or audio/navigation				Read Fault Code		Y		
DS4 S		Telematic unit (BTX) or audio/navigation				Erase Fault Code		Y		
DS4 S		Telematic unit (BTX) or audio/navigation				Live Data		Y		
DS4 S		Telematic unit (BTX) or audio/navigation				Actuation Test		Y		
DS4 S		Telematic unit (BTX) or audio/navigation				Special Function	Configuration	Y		
DS4 S		Under-inflation detection				Read ECU Information		Y		
DS4 S		Under-inflation detection				Read Fault Code		Y		
DS4 S		Under-inflation detection				Erase Fault Code		Y		
DS4 S		Under-inflation detection				Live Data		Y		
DS4 S		Under-inflation detection				Special Function	Pack Reparation	Y		
DS4 S		Service module / Independent telematic unit				Read ECU Information		Y		
DS4 S		Service module / Independent telematic unit				Read Fault Code		Y		
DS4 S		Service module / Independent telematic unit				Erase Fault Code		Y		
DS4 S		Service module / Independent telematic unit				Live Data		Y		
DS4 S		Service module / Independent telematic unit				Actuation Test		Y		
DS4 S		Service module / Independent telematic unit				Special Function	Configuration	Y		
DS4 S		Service module / Independent telematic unit				Special Function	Pack Repair	Y		
DS4 S		Radio amplifier				Read ECU Information		Y		
DS4 S		Radio amplifier				Read Fault Code		Y		
DS4 S		Radio amplifier				Erase Fault Code		Y		
DS4 S		Radio amplifier				Actuation Test		Y		
DS4 S		Radio amplifier				Special Function	Configuration	Y		
DS4 S		Multifunction screen	EMF_A_IDS			Read ECU Information		Y		
DS4 S		Multifunction screen	EMF_A_IDS			Read Fault Code		Y		
DS4 S		Multifunction screen	EMF_A_IDS			Erase Fault Code		Y		
DS4 S		Multifunction screen	EMF_A_IDS			Actuation Test		Y		
DS4 S		Multifunction screen	EMF_A_IDS			Special Function	Configuration	Y		
DS4 S		Multifunction screen	EMF_C_IDS			Read ECU Information		Y		
DS4 S		Multifunction screen	EMF_C_IDS			Read Fault Code		Y		
DS4 S		Multifunction screen	EMF_C_IDS			Erase Fault Code		Y		
DS4 S		Multifunction screen	EMF_C_IDS			Actuation Test		Y		
DS4 S		Multifunction screen	EMF_C_IDS			Special Function	Configuration	Y		
DS4 S		Control panel dot matrix display	COLOR MATRIX SCREEN			Read ECU Information		Y		
DS4 S		Control panel dot matrix display	COLOR MATRIX SCREEN			Read Fault Code		Y		
DS4 S		Control panel dot matrix display	COLOR MATRIX SCREEN			Erase Fault Code		Y		
DS4 S		Control panel dot matrix display	COLOR MATRIX SCREEN			Actuation Test		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
DS4 S		Control panel dot matrix display	CLUSTER MATRIX SCREEN			Special Function	Configuration	Y		
DS4 S		Parking assistance	4 parking assistance sensors			Read ECU Information		Y		
DS4 S		Parking assistance	4 parking assistance sensors			Read Fault Code		Y		
DS4 S		Parking assistance	4 parking assistance sensors			Erase Fault Code		Y		
DS4 S		Parking assistance	4 parking assistance sensors			Live Data		Y		
DS4 S		Parking assistance	4 parking assistance sensors			Actuation Test		Y		
DS4 S		Parking assistance	4 parking assistance sensors			Special Function	Configuration	Y		
DS4 S		Parking assistance	12 parking assistance sensors			Read ECU Information		Y		
DS4 S		Parking assistance	12 parking assistance sensors			Read Fault Code		Y		
DS4 S		Parking assistance	12 parking assistance sensors			Erase Fault Code		Y		
DS4 S		Parking assistance	12 parking assistance sensors			Live Data		Y		
DS4 S		Parking assistance	12 parking assistance sensors			Actuation Test		Y		
DS4 S		Parking assistance	12 parking assistance sensors			Special Function	Configuration	Y		
DS4 S		Controls under the steering wheel				Read ECU Information		Y		
DS4 S		Controls under the steering wheel				Read Fault Code		Y		
DS4 S		Controls under the steering wheel				Erase Fault Code		Y		
DS4 S		Controls under the steering wheel				Live Data		Y		
DS4 S		Controls under the steering wheel				Actuation Test		Y		
DS4 S		Controls under the steering wheel				Special Function	Pack Repair	Y		
DS4 S		Controls on the steering wheel / integral controls steering wheel	Yes			Read ECU Information		Y		
DS4 S		Controls on the steering wheel / integral controls steering wheel	Yes			Read Fault Code		Y		
DS4 S		Controls on the steering wheel / integral controls steering wheel	Yes			Erase Fault Code		Y		
DS4 S		Controls on the steering wheel / integral controls steering wheel	Yes			Live Data		Y		
DS4 S		Controls on the steering wheel / integral controls steering wheel	Yes			Actuation Test		Y		
DS4 S		Controls on the steering wheel / integral controls steering wheel	No			Read ECU Information		Y		
DS4 S		Controls on the steering wheel / integral controls steering wheel	No			Read Fault Code		Y		
DS4 S		Controls on the steering wheel / integral controls steering wheel	No			Erase Fault Code		Y		
DS4 S		Controls on the steering wheel / integral controls steering wheel	No			Live Data		Y		
DS4 S		Controls on the steering wheel / integral controls steering wheel	No			Actuation Test		Y		
DS4 S		Anti-theft alarm				Read ECU Information		Y		
DS4 S		Anti-theft alarm				Read Fault Code		Y		
DS4 S		Anti-theft alarm				Erase Fault Code		Y		
DS4 S		Anti-theft alarm				Live Data		Y		
DS4 S		Anti-theft alarm				Actuation Test		Y		
DS4 S		Air conditioning	RFTA TWO ZONE			Read ECU Information		Y		
DS4 S		Air conditioning	RFTA TWO ZONE			Read Fault Code		Y		
DS4 S		Air conditioning	RFTA TWO ZONE			Erase Fault Code		Y		
DS4 S		Air conditioning	RFTA TWO ZONE			Live Data		Y		
DS4 S		Air conditioning	RFTA TWO ZONE			Actuation Test		Y		
DS4 S		Air conditioning	RFTA TWO ZONE			Special Function	Pack Repair	Y		
DS4 S		Rain and light sensor				Read ECU Information		Y		
DS4 S		Rain and light sensor				Read Fault Code		Y		
DS4 S		Rain and light sensor				Erase Fault Code		Y		
DS4 S		Rain and light sensor				Live Data		Y		
DS4 S		Rain and light sensor				Special Function	Pack Repair	Y		
DS4 S		Instrument panel				Read ECU Information		Y		
DS4 S		Instrument panel				Read Fault Code		Y		
DS4 S		Instrument panel				Erase Fault Code		Y		
DS4 S		Instrument panel				Live Data		Y		
DS4 S		Instrument panel				Actuation Test		Y		
DS4 S		Engine relay unit				Read ECU Information		Y		
DS4 S		Engine relay unit				Read Fault Code		Y		
DS4 S		Engine relay unit				Erase Fault Code		Y		
DS4 S		Engine relay unit				Live Data		Y		
DS4 S		Engine relay unit				Actuation Test		Y		
DS4 S		Engine relay unit				Special Function	Configuration	Y		
DS4 S		Dynamic headlamp height adjuster				Read ECU Information		Y		
DS4 S		Dynamic headlamp height adjuster				Read Fault Code		Y		
DS4 S		Dynamic headlamp height adjuster				Erase Fault Code		Y		
DS4 S		Dynamic headlamp height adjuster				Live Data		Y		
DS4 S		Dynamic headlamp height adjuster				Actuation Test		Y		
DS5		Built-in Systems Interface				Read ECU Information		Y		
DS5		Built-in Systems Interface				Read Fault Code		Y		
DS5		Built-in Systems Interface				Live Data		Y		
DS5		Built-in Systems Interface				Actuation Test		Y		
DS5		Built-in Systems Interface				Special Function	Maintenance - BSI operating mode	Y		
DS5		Built-in Systems Interface				Special Function	Configuration	Y		
DS5		Built-in Systems Interface				Special Function	Pack Repair	Y		
DS5		Engine management ECU	EDC17000			Read ECU Information		Y		
DS5		Engine management ECU	EDC17000			Read Fault Code		Y		
DS5		Engine management ECU	EDC17000			Erase Fault Code		Y		
DS5		Engine management ECU	EDC17000			Live Data		Y		
DS5		Engine management ECU	EDC17000			Actuation Test		Y		
DS5		Engine management ECU	EDC17000			Special Function	Pack Repair	Y		
DS5		Engine management ECU	DCM6.2	DCM6.2 DW10FD TED4 - 150 CV	AUX DCM6.2	Read ECU Information		Y		
DS5		Engine management ECU	DCM6.2	DCM6.2 DW10FD TED4 - 150 CV	AUX DCM6.2	Read Fault Code		Y		
DS5		Engine management ECU	DCM6.2	DCM6.2 DW10FD TED4 - 150 CV	AUX DCM6.2	Erase Fault Code		Y		
DS5		Engine management ECU	DCM6.2	DCM6.2 DW10FD TED4 - 150 CV	AUX DCM6.2	Live Data		Y		
DS5		Engine management ECU	DCM6.2	DCM6.2 DW10FD TED4 - 150 CV	AUX DCM6.2	Actuation Test		Y		
DS5		Engine management ECU	DCM6.2	DCM6.2 DW10FD TED4 - 150 CV	AUX DCM6.2	Special Function	Pack Repair	Y		
DS5		Engine management ECU	DCM6.2	DCM6.2 DW10FC TED4 - 180 CV	AUX DCM6.2	Read ECU Information		Y		
DS5		Engine management ECU	DCM6.2	DCM6.2 DW10FC TED4 - 180 CV	AUX DCM6.2	Read Fault Code		Y		
DS5		Engine management ECU	DCM6.2	DCM6.2 DW10FC TED4 - 180 CV	AUX DCM6.2	Erase Fault Code		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function reasons	Add (Y/N)	Verification (Y/N)	Remarks
DSS		Engine management ECU	DCM6.2	DCM6.2 DW10FC TED4 - 180 CV	AW DCM6.2	Live Data		Y		
DSS		Engine management ECU	DCM6.2	DCM6.2 DW10FC TED4 - 180 CV	AW DCM6.2	Actuation Test		Y		
DSS		Engine management ECU	DCM6.2	DCM6.2 DW10FC TED4 - 180 CV	AW DCM6.2	Special Function	Pack Repair	Y		
DSS		Engine management ECU	DCM6.2	DCM6.2 DW10FC TED4 - 136 CV	AW DCM6.2	Read ECU Information		Y		
DSS		Engine management ECU	DCM6.2	DCM6.2 DW10FC TED4 - 136 CV	AW DCM6.2	Read Fault Code		Y		
DSS		Engine management ECU	DCM6.2	DCM6.2 DW10FC TED4 - 136 CV	AW DCM6.2	Erase Fault Code		Y		
DSS		Engine management ECU	DCM6.2	DCM6.2 DW10FC TED4 - 136 CV	AW DCM6.2	Live Data		Y		
DSS		Engine management ECU	DCM6.2	DCM6.2 DW10FC TED4 - 136 CV	AW DCM6.2	Actuation Test		Y		
DSS		Engine management ECU	DCM6.2	DCM6.2 DW10FC TED4 - 136 CV	AW DCM6.2	Special Function	Pack Repair	Y		
DSS		Engine management ECU	HD1_S1D807_BR2	9HD-DVACTED		Read ECU Information		Y		
DSS		Engine management ECU	HD1_S1D807_BR2	9HD-DVACTED		Read Fault Code		Y		
DSS		Engine management ECU	HD1_S1D807_BR2	9HD-DVACTED		Erase Fault Code		Y		
DSS		Engine management ECU	HD1_S1D807_BR2	9HD-DVACTED		Live Data		Y		
DSS		Engine management ECU	HD1_S1D807_BR2	9HD-DVACTED		Actuation Test		Y		
DSS		Engine management ECU	HD1_S1D807_BR2	9HD-DVACTED		Special Function	Configuration	Y		
DSS		Engine management ECU	HD1_S1D807_BR2	9HD-DVACTED		Special Function	Pack Repair	Y		
DSS		Engine management ECU	HD1_S1D807_BR2	9HD-DVACTED		Read ECU Information		Y		
DSS		Engine management ECU	HD1_S1D807_BR2	9HD-DVACTED		Read Fault Code		Y		
DSS		Engine management ECU	HD1_S1D807_BR2	9HD-DVACTED		Erase Fault Code		Y		
DSS		Engine management ECU	HD1_S1D807_BR2	9HD-DVACTED		Live Data		Y		
DSS		Engine management ECU	HD1_S1D807_BR2	9HD-DVACTED		Actuation Test		Y		
DSS		Engine management ECU	HD1_S1D807_BR2	9HD-DVACTED		Special Function	Configuration	Y		
DSS		Engine management ECU	HD1_S1D807_BR2	9HD-DVACTED		Special Function	Pack Repair	Y		
DSS		Engine management ECU	DCM5_BR2	8BH-DW10CTD4-163CV		Read ECU Information		Y		
DSS		Engine management ECU	DCM5_BR2	8BH-DW10CTD4-163CV		Read Fault Code		Y		
DSS		Engine management ECU	DCM5_BR2	8BH-DW10CTD4-163CV		Erase Fault Code		Y		
DSS		Engine management ECU	DCM5_BR2	8BH-DW10CTD4-163CV		Live Data		Y		
DSS		Engine management ECU	DCM5_BR2	8BH-DW10CTD4-163CV		Actuation Test		Y		
DSS		Engine management ECU	DCM5_BR2	8BH-DW10CTD4-163CV		Special Function	Configuration	Y		
DSS		Engine management ECU	DCM5_BR2	8BH-DW10CTD4-163CV		Special Function	Pack Repair	Y		
DSS		Engine management ECU	DCM5_BR2	8BD-DW10CTD4-136CV		Read ECU Information		Y		
DSS		Engine management ECU	DCM5_BR2	8BD-DW10CTD4-136CV		Read Fault Code		Y		
DSS		Engine management ECU	DCM5_BR2	8BD-DW10CTD4-136CV		Erase Fault Code		Y		
DSS		Engine management ECU	DCM5_BR2	8BD-DW10CTD4-136CV		Live Data		Y		
DSS		Engine management ECU	DCM5_BR2	8BD-DW10CTD4-136CV		Actuation Test		Y		
DSS		Engine management ECU	DCM5_BR2	8BD-DW10CTD4-136CV		Special Function	Configuration	Y		
DSS		Engine management ECU	DCM5_BR2	8BD-DW10CTD4-136CV		Special Function	Pack Repair	Y		
DSS		Engine management ECU	DCM5_BR2	8BH-DW10CTD4-150CV		Read ECU Information		Y		
DSS		Engine management ECU	DCM5_BR2	8BH-DW10CTD4-150CV		Read Fault Code		Y		
DSS		Engine management ECU	DCM5_BR2	8BH-DW10CTD4-150CV		Erase Fault Code		Y		
DSS		Engine management ECU	DCM5_BR2	8BH-DW10CTD4-150CV		Live Data		Y		
DSS		Engine management ECU	DCM5_BR2	8BH-DW10CTD4-150CV		Actuation Test		Y		
DSS		Engine management ECU	DCM5_BR2	8BH-DW10CTD4-150CV		Special Function	Configuration	Y		
DSS		Engine management ECU	DCM5_BR2	8BH-DW10CTD4-150CV		Special Function	Pack Repair	Y		
DSS		Engine management ECU	MEV17_4.2	14 MEV17.4.2 EBROS		Read ECU Information		Y		
DSS		Engine management ECU	MEV17_4.2	14 MEV17.4.2 EBROS		Read Fault Code		Y		
DSS		Engine management ECU	MEV17_4.2	14 MEV17.4.2 EBROS		Erase Fault Code		Y		
DSS		Engine management ECU	MEV17_4.2	14 MEV17.4.2 EBROS		Live Data		Y		
DSS		Engine management ECU	MEV17_4.2	14 MEV17.4.2 EBROS		Actuation Test		Y		
DSS		Engine management ECU	MEV17_4.2	14 MEV17.4.2 EBROS		Special Function	Configuration	Y		
DSS		Engine management ECU	MEV17_4.2	14 MEV17.4.2 EBROS		Special Function	Pack Repair	Y		
DSS		Engine management ECU	MEV17_4.2	5FU MEV17.4.2 EBROS		Read ECU Information		Y		
DSS		Engine management ECU	MEV17_4.2	5FU MEV17.4.2 EBROS		Read Fault Code		Y		
DSS		Engine management ECU	MEV17_4.2	5FU MEV17.4.2 EBROS		Erase Fault Code		Y		
DSS		Engine management ECU	MEV17_4.2	5FU MEV17.4.2 EBROS		Live Data		Y		
DSS		Engine management ECU	MEV17_4.2	5FU MEV17.4.2 EBROS		Actuation Test		Y		
DSS		Engine management ECU	MEV17_4.2	5FU MEV17.4.2 EBROS		Special Function	Pack Repair	Y		
DSS		Engine management ECU	MEV17_4.4			Read ECU Information		Y		
DSS		Engine management ECU	MEV17_4.4			Read Fault Code		Y		
DSS		Engine management ECU	MEV17_4.4			Erase Fault Code		Y		
DSS		Engine management ECU	MEV17_4.4			Live Data		Y		
DSS		Engine management ECU	MEV17_4.4			Actuation Test		Y		
DSS		Engine management ECU	MEV17_4.4			Special Function	Pack repairation	Y		
DSS		Engine management ECU	MEV17_4.4 EP8			Read ECU Information		Y		
DSS		Engine management ECU	MEV17_4.4 EP8			Read Fault Code		Y		
DSS		Engine management ECU	MEV17_4.4 EP8			Erase Fault Code		Y		
DSS		Engine management ECU	MEV17_4.4 EP8			Live Data		Y		
DSS		Engine management ECU	MEV17_4.4 EP8			Actuation Test		Y		
DSS		Engine management ECU	MEV17_4.4 EP8			Special Function	Pack repairation	Y		
DSS		Engine management ECU	DCM5_JN	8BC-DW10CTD4-163CV		Read ECU Information		Y		
DSS		Engine management ECU	DCM5_JN	8BC-DW10CTD4-163CV		Read Fault Code		Y		
DSS		Engine management ECU	DCM5_JN	8BC-DW10CTD4-163CV		Erase Fault Code		Y		
DSS		Engine management ECU	DCM5_JN	8BC-DW10CTD4-163CV		Live Data		Y		
DSS		Engine management ECU	DCM5_JN	8BC-DW10CTD4-163CV		Actuation Test		Y		
DSS		Engine management ECU	DCM5_JN	8BC-DW10CTD4-163CV		Special Function	Configuration	Y		
DSS		Engine management ECU	DCM5_JN	8BC-DW10CTD4-163CV		Special Function	Pack Repair	Y		
DSS		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP81			Read ECU Information		Y		
DSS		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP81			Read Fault Code		Y		
DSS		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP81			Erase Fault Code		Y		
DSS		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP81			Live Data		Y		
DSS		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP81			Actuation Test		Y		
DSS		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP81			Special Function	Configuration	Y		
DSS		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP81			Special Function	Pack Repair	Y		
DSS		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP90			Read ECU Information		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
DSS		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP90			Read Fault Code		Y		
DSS		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP90			Erase Fault Code		Y		
DSS		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP90			Live Data		Y		
DSS		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP90			Actuation Test		Y		
DSS		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP90			Special Function	Pack Repair	Y		
DSS		Automatic gearbox or controlled manual gearbox	BVA_4M6_AT6_EH005			Read ECU Information		Y		
DSS		Automatic gearbox or controlled manual gearbox	BVA_4M6_AT6_EH005			Read Fault Code		Y		
DSS		Automatic gearbox or controlled manual gearbox	BVA_4M6_AT6_EH005			Erase Fault Code		Y		
DSS		Automatic gearbox or controlled manual gearbox	BVA_4M6_AT6_EH005			Live Data		Y		
DSS		Automatic gearbox or controlled manual gearbox	BVA_4M6_AT6_EH005			Actuation Test		Y		
DSS		Automatic gearbox or controlled manual gearbox	BVA_4M6_AT6_EH005			Special Function	Oil wear counter	Y		
DSS		Automatic gearbox or controlled manual gearbox	BVA_4M6_AT6_EH005			Special Function	Configuration	Y		
DSS		Automatic gearbox or controlled manual gearbox	BVA_4M6_AT6_EH005			Special Function	Pack Repair	Y		
DSS		Automatic gearbox or controlled manual gearbox	CFC300P			Read ECU Information		Y		
DSS		Automatic gearbox or controlled manual gearbox	CFC300P			Read Fault Code		Y		
DSS		Automatic gearbox or controlled manual gearbox	CFC300P			Erase Fault Code		Y		
DSS		Automatic gearbox or controlled manual gearbox	CFC300P			Live Data		Y		
DSS		Automatic gearbox or controlled manual gearbox	CFC300P			Actuation Test		Y		
DSS		Automatic gearbox or controlled manual gearbox	CFC300P			Special Function	Replacement parts	Y		
DSS		Automatic gearbox or controlled manual gearbox	BVA_4M6_AT6_IDS			Read ECU Information		Y		
DSS		Automatic gearbox or controlled manual gearbox	BVA_4M6_AT6_IDS			Read Fault Code		Y		
DSS		Automatic gearbox or controlled manual gearbox	BVA_4M6_AT6_IDS			Erase Fault Code		Y		
DSS		Automatic gearbox or controlled manual gearbox	BVA_4M6_AT6_IDS			Live Data		Y		
DSS		Automatic gearbox or controlled manual gearbox	BVA_4M6_AT6_IDS			Actuation Test		Y		
DSS		Automatic gearbox or controlled manual gearbox	BVA_4M6_AT6_IDS			Special Function	Configuration	Y		
DSS		Automatic gearbox or controlled manual gearbox	BVA_4M6_AT6_IDS			Special Function	Pack Repair	Y		
DSS		Automatic gearbox or controlled manual gearbox	CFC300P_HY			Read ECU Information		Y		
DSS		Automatic gearbox or controlled manual gearbox	CFC300P_HY			Read Fault Code		Y		
DSS		Automatic gearbox or controlled manual gearbox	CFC300P_HY			Erase Fault Code		Y		
DSS		Automatic gearbox or controlled manual gearbox	CFC300P_HY			Live Data		Y		
DSS		Automatic gearbox or controlled manual gearbox	CFC300P_HY			Actuation Test		Y		
DSS		Automatic gearbox or controlled manual gearbox	CFC300P_HY			Special Function	Counters	Y		
DSS		Automatic gearbox or controlled manual gearbox	CFC300P_HY			Special Function	Programming operations	Y		
DSS		Automatic gearbox or controlled manual gearbox	CFC300P_HY			Special Function	Replacement parts	Y		
DSS		Air bags and pre-tensioners control unit				Read ECU Information		Y		
DSS		Air bags and pre-tensioners control unit				Read Fault Code		Y		
DSS		Air bags and pre-tensioners control unit				Erase Fault Code		Y		
DSS		Air bags and pre-tensioners control unit				Live Data		Y		
DSS		Air bags and pre-tensioners control unit				Special Function	Configuration	Y		
DSS		Air bags and pre-tensioners control unit				Special Function	Pack Repair	Y		
DSS		Power steering				Read ECU Information		Y		
DSS		Power steering				Read Fault Code		Y		
DSS		Power steering				Erase Fault Code		Y		
DSS		Power steering				Live Data		Y		
DSS		Power steering				Actuation Test		Y		
DSS		Battery charge status unit				Read ECU Information		Y		
DSS		Battery charge status unit				Read Fault Code		Y		
DSS		Battery charge status unit				Erase Fault Code		Y		
DSS		Battery charge status unit				Live Data		Y		
DSS		Battery charge status unit				Special Function	Configuration	Y		
DSS		Diesel additive pump	POMPE_MUX_TI			Read ECU Information		Y		
DSS		Diesel additive pump	POMPE_MUX_TI			Read Fault Code		Y		
DSS		Diesel additive pump	POMPE_MUX_TI			Erase Fault Code		Y		
DSS		Diesel additive pump	POMPE_MUX_TI			Live Data		Y		
DSS		Diesel additive pump	POMPE_MUX_TI			Actuation Test		Y		
DSS		Diesel additive pump	POMPE_MUX_TI			Special Function	Configuration	Y		
DSS		Diesel additive pump	POMPE_TI_E6			Read ECU Information		Y		
DSS		Diesel additive pump	POMPE_TI_E6			Read Fault Code		Y		
DSS		Diesel additive pump	POMPE_TI_E6			Erase Fault Code		Y		
DSS		Diesel additive pump	POMPE_TI_E6			Live Data		Y		
DSS		Diesel additive pump	POMPE_TI_E6			Actuation Test		Y		
DSS		Diesel additive pump	POMPE_TI_E6			Special Function	Configuration	Y		
DSS		Electric secondary brake				Read ECU Information		Y		
DSS		Electric secondary brake				Read Fault Code		Y		
DSS		Electric secondary brake				Erase Fault Code		Y		
DSS		Electric secondary brake				Live Data		Y		
DSS		Electric secondary brake				Actuation Test		Y		
DSS		Electric secondary brake				Special Function	Pack Repair	Y		
DSS		Vibrators control ECU				Read ECU Information		Y		
DSS		Vibrators control ECU				Read Fault Code		Y		
DSS		Vibrators control ECU				Erase Fault Code		Y		
DSS		Vibrators control ECU				Live Data		Y		
DSS		Vibrators control ECU				Actuation Test		Y		
DSS		Under-inflation detection	DSG			Read ECU Information		Y		
DSS		Under-inflation detection	DSG			Read Fault Code		Y		
DSS		Under-inflation detection	DSG			Erase Fault Code		Y		
DSS		Under-inflation detection	DSG			Live Data		Y		
DSS		Under-inflation detection	DSG			Special Function	Pack Repair	Y		
DSS		Under-inflation detection	DSG_IDS			Read ECU Information		Y		
DSS		Under-inflation detection	DSG_IDS			Read Fault Code		Y		
DSS		Under-inflation detection	DSG_IDS			Erase Fault Code		Y		
DSS		Under-inflation detection	DSG_IDS			Live Data		Y		
DSS		Under-inflation detection	DSG_IDS			Special Function	Pack Repair	Y		
DSS		Dynamic headlamp height adjuster	HEMP_2			Read ECU Information		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
DSS		Dynamic headlamp height adjuster	BEMP_2			Read Fault Code		Y		
DSS		Dynamic headlamp height adjuster	BEMP_2			Erase Fault Code		Y		
DSS		Dynamic headlamp height adjuster	BEMP_2			Live Data		Y		
DSS		Dynamic headlamp height adjuster	BEMP_2			Actuation Test		Y		
DSS		Dynamic headlamp height adjuster	BEMP_2			Special Function	Configuration	Y		
DSS		Dynamic headlamp height adjuster	BEMP_2			Special Function	Pack Repair	Y		
DSS		Dynamic headlamp height adjuster	LADCT			Read ECU Information		Y		
DSS		Dynamic headlamp height adjuster	LADCT			Read Fault Code		Y		
DSS		Dynamic headlamp height adjuster	LADCT			Erase Fault Code		Y		
DSS		Dynamic headlamp height adjuster	LADCT			Live Data		Y		
DSS		Dynamic headlamp height adjuster	LADCT			Actuation Test		Y		
DSS		Dynamic headlamp height adjuster	LADCT			Special Function	Configuration	Y		
DSS		Dynamic headlamp height adjuster	LADCT			Special Function	Pack Repair	Y		
DSS		Engine relay unit				Read ECU Information		Y		
DSS		Engine relay unit				Read Fault Code		Y		
DSS		Engine relay unit				Erase Fault Code		Y		
DSS		Engine relay unit				Live Data		Y		
DSS		Engine relay unit				Actuation Test		Y		
DSS		Engine relay unit				Special Function	Configuration	Y		
DSS		Trailer relay unit				Read ECU Information		Y		
DSS		Trailer relay unit				Read Fault Code		Y		
DSS		Trailer relay unit				Erase Fault Code		Y		
DSS		Trailer relay unit				Live Data		Y		
DSS		Trailer relay unit				Actuation Test		Y		
DSS		Supply protection and management unit				Read ECU Information		Y		
DSS		Supply protection and management unit				Read Fault Code		Y		
DSS		Supply protection and management unit				Erase Fault Code		Y		
DSS		Supply protection and management unit				Live Data		Y		
DSS		Service module / Independent telematic unit	BTA			Read ECU Information		Y		
DSS		Service module / Independent telematic unit	BTA			Read Fault Code		Y		
DSS		Service module / Independent telematic unit	BTA			Erase Fault Code		Y		
DSS		Service module / Independent telematic unit	BTA			Live Data		Y		
DSS		Service module / Independent telematic unit	BTA			Actuation Test		Y		
DSS		Service module / Independent telematic unit	BTA			Special Function	Configuration	Y		
DSS		Service module / Independent telematic unit	BTA,2			Read ECU Information		Y		
DSS		Service module / Independent telematic unit	BTA,2			Read Fault Code		Y		
DSS		Service module / Independent telematic unit	BTA,2			Erase Fault Code		Y		
DSS		Service module / Independent telematic unit	BTA,2			Live Data		Y		
DSS		Service module / Independent telematic unit	BTA,2			Actuation Test		Y		
DSS		Service module / Independent telematic unit	BTA,2			Special Function	Configuration	Y		
DSS		Service module / Independent telematic unit	BTA,2			Special Function	Pack Repair	Y		
DSS		Service module / Independent telematic unit	BLV			Read ECU Information		Y		
DSS		Service module / Independent telematic unit	BLV			Read Fault Code		Y		
DSS		Service module / Independent telematic unit	BLV			Erase Fault Code		Y		
DSS		Service module / Independent telematic unit	BLV			Live Data		Y		
DSS		Service module / Independent telematic unit	BLV			Actuation Test		Y		
DSS		Service module / Independent telematic unit	BLV			Special Function	Configuration	Y		
DSS		Telematic navigator / separate control				Read ECU Information		Y		
DSS		Telematic navigator / separate control				Live Data		Y		
DSS		Telematic navigator / separate control				Actuation Test		Y		
DSS		Instrument panel				Read ECU Information		Y		
DSS		Instrument panel				Read Fault Code		Y		
DSS		Instrument panel				Erase Fault Code		Y		
DSS		Instrument panel				Live Data		Y		
DSS		Instrument panel				Actuation Test		Y		
DSS		Control panel dot matrix display	Colour matrix screen			Read ECU Information		Y		
DSS		Control panel dot matrix display	Colour matrix screen			Read Fault Code		Y		
DSS		Control panel dot matrix display	Colour matrix screen			Erase Fault Code		Y		
DSS		Control panel dot matrix display	Colour matrix screen			Actuation Test		Y		
DSS		Control panel dot matrix display	Colour matrix screen			Special Function	Configuration	Y		
DSS		Control panel dot matrix display	Monochrome matrix screen			Read ECU Information		Y		
DSS		Control panel dot matrix display	Monochrome matrix screen			Read Fault Code		Y		
DSS		Control panel dot matrix display	Monochrome matrix screen			Erase Fault Code		Y		
DSS		Control panel dot matrix display	Monochrome matrix screen			Actuation Test		Y		
DSS		Control panel dot matrix display	Monochrome matrix screen			Special Function	Configuration	Y		
DSS		Anti-theft alarm				Read ECU Information		Y		
DSS		Anti-theft alarm				Read Fault Code		Y		
DSS		Anti-theft alarm				Erase Fault Code		Y		
DSS		Anti-theft alarm				Live Data		Y		
DSS		Anti-theft alarm				Actuation Test		Y		
DSS		Anti-theft alarm				Special Function	Configuration	Y		
DSS		Controls under the steering wheel				Read ECU Information		Y		
DSS		Controls under the steering wheel				Read Fault Code		Y		
DSS		Controls under the steering wheel				Erase Fault Code		Y		
DSS		Controls under the steering wheel				Live Data		Y		
DSS		Controls under the steering wheel				Actuation Test		Y		
DSS		Controls under the steering wheel				Special Function	Pack Repair	Y		
DSS		Hands-free control unit				Read ECU Information		Y		
DSS		Hands-free control unit				Read Fault Code		Y		
DSS		Hands-free control unit				Erase Fault Code		Y		
DSS		Hands-free control unit				Live Data		Y		
DSS		Hands-free control unit				Actuation Test		Y		
DSS		Hands-free control unit				Special Function	Configuration	Y		
DSS		Hands-free control unit				Special Function	Pack Repair	Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
DSS		Electronic key reader				Read ECU Information		Y		
DSS		Electronic key reader				Read Fault Code		Y		
DSS		Electronic key reader				Erase Fault Code		Y		
DSS		Electronic key reader				Live Data		Y		
DSS		Seat belt not fastened warning lights unit				Read ECU Information		Y		
DSS		Seat belt not fastened warning lights unit				Actuation Test		Y		
DSS		Multifunction screen	EMF_A_IDS			Read ECU Information		Y		
DSS		Multifunction screen	EMF_A_IDS			Read Fault Code		Y		
DSS		Multifunction screen	EMF_A_IDS			Erase Fault Code		Y		
DSS		Multifunction screen	EMF_A_IDS			Actuation Test		Y		
DSS		Multifunction screen	EMF_A_IDS			Special Function	Configuration	Y		
DSS		Multifunction screen	EMF_C_IDS			Read ECU Information		Y		
DSS		Multifunction screen	EMF_C_IDS			Read Fault Code		Y		
DSS		Multifunction screen	EMF_C_IDS			Erase Fault Code		Y		
DSS		Multifunction screen	EMF_C_IDS			Actuation Test		Y		
DSS		Multifunction screen	EMF_C_IDS			Special Function	Configuration	Y		
DSS		Rain and light sensor				Read ECU Information		Y		
DSS		Rain and light sensor				Read Fault Code		Y		
DSS		Rain and light sensor				Erase Fault Code		Y		
DSS		Rain and light sensor				Live Data		Y		
DSS		Rain and light sensor				Special Function	Pack Repair	Y		
DSS		Voltage retaining device	DMTC			Read ECU Information		Y		
DSS		Voltage retaining device	DMTR			Read ECU Information		Y		
DSS		Voltage retaining device	DMTR			Read Fault Code		Y		
DSS		Voltage retaining device	DMTR			Erase Fault Code		Y		
DSS		Voltage retaining device	DMTR_DTCDB			Read ECU Information		Y		
DSS		Voltage retaining device	DMTR_DTCDB			Read Fault Code		Y		
DSS		Voltage retaining device	DMTR_DTCDB			Erase Fault Code		Y		
DSS		Multifunction video camera(CMF)				Read ECU Information		Y		
DSS		Multifunction video camera(CMF)				Read Fault Code		Y		
DSS		Multifunction video camera(CMF)				Erase Fault Code		Y		
DSS		Multifunction video camera(CMF)				Live Data		Y		
DSS		Multifunction video camera(CMF)				Actuation Test		Y		
DSS		Multifunction video camera(CMF)				Special Function	Configuration	Y		
DSS		Multifunction video camera(CMF)				Special Function	Pack Repair	Y		
DSS		Seat driver position memory module				Read ECU Information		Y		
DSS		Seat driver position memory module				Read Fault Code		Y		
DSS		Seat driver position memory module				Erase Fault Code		Y		
DSS		Seat driver position memory module				Live Data		Y		
DSS		Seat driver position memory module				Actuation Test		Y		
DSS		Seat driver position memory module				Special Function	Configuration	Y		
DSS		Parking assistance	4 parking assistance sensors			Read ECU Information		Y		
DSS		Parking assistance	4 parking assistance sensors			Read Fault Code		Y		
DSS		Parking assistance	4 parking assistance sensors			Erase Fault Code		Y		
DSS		Parking assistance	4 parking assistance sensors			Live Data		Y		
DSS		Parking assistance	4 parking assistance sensors			Special Function	Configuration	Y		
DSS		Parking assistance	4 parking assistance sensors			Special Function	Pack Repair	Y		
DSS		Parking assistance	10 parking assistance sensors			Read ECU Information		Y		
DSS		Parking assistance	10 parking assistance sensors			Read Fault Code		Y		
DSS		Parking assistance	10 parking assistance sensors			Erase Fault Code		Y		
DSS		Parking assistance	10 parking assistance sensors			Live Data		Y		
DSS		Parking assistance	10 parking assistance sensors			Special Function	Configuration	Y		
DSS		Parking assistance	10 parking assistance sensors			Special Function	Pack Repair	Y		
DSS		High Head Vision				Read ECU Information		Y		
DSS		High Head Vision				Read Fault Code		Y		
DSS		High Head Vision				Erase Fault Code		Y		
DSS		High Head Vision				Live Data		Y		
DSS		High Head Vision				Actuation Test		Y		
DSS		High Head Vision				Special Function	Configuration	Y		
DSS		Air conditioning	RFTA_TWO_ZONE			Read ECU Information		Y		
DSS		Air conditioning	RFTA_TWO_ZONE			Read Fault Code		Y		
DSS		Air conditioning	RFTA_TWO_ZONE			Erase Fault Code		Y		
DSS		Air conditioning	RFTA_TWO_ZONE			Live Data		Y		
DSS		Air conditioning	RFTA_TWO_ZONE			Actuation Test		Y		
DSS		Air conditioning	RFTA_TWO_ZONE			Special Function	Pack Repair	Y		
DSS		Radio amplifier				Read ECU Information		Y		
DSS		Radio amplifier				Read Fault Code		Y		
DSS		Radio amplifier				Erase Fault Code		Y		
DSS		Radio amplifier				Actuation Test		Y		
DSS		Radio amplifier				Special Function	Configuration	Y		
DSS		Telematic unit(OTA) or audio-navigation	RADIONAV_INREG			Read ECU Information		Y		
DSS		Telematic unit(OTA) or audio-navigation	RADIONAV_INREG			Read Fault Code		Y		
DSS		Telematic unit(OTA) or audio-navigation	RADIONAV_INREG			Erase Fault Code		Y		
DSS		Telematic unit(OTA) or audio-navigation	RADIONAV_INREG			Live Data		Y		
DSS		Telematic unit(OTA) or audio-navigation	RADIONAV_INREG			Actuation Test		Y		
DSS		Telematic unit(OTA) or audio-navigation	RADIONAV_INREG			Special Function	Configuration	Y		
DSS		Telematic unit(OTA) or audio-navigation	INREG2010			Read ECU Information		Y		
DSS		Telematic unit(OTA) or audio-navigation	INREG2010			Read Fault Code		Y		
DSS		Telematic unit(OTA) or audio-navigation	INREG2010			Erase Fault Code		Y		
DSS		Telematic unit(OTA) or audio-navigation	INREG2010			Live Data		Y		
DSS		Telematic unit(OTA) or audio-navigation	INREG2010			Actuation Test		Y		
DSS		Telematic unit(OTA) or audio-navigation	INREG2010			Special Function	Configuration	Y		
DSS		Telematic unit(OTA) or audio-navigation	INREG2010			Special Function	Pack Repair	Y		
DSS		Telematic unit(OTA) or audio-navigation	SMES_PLUS			Read ECU Information		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for Citroen, NO stands for other wires)	Subsystem (YES stands for Citroen, NO stands for other wires)	Subsystem or system type	Function type	Special function subname	Add (Y/N)	Verification (Y/N)	Remarks
DSS		Telematic unit (RTX) or audio/navigation	SMES_PLUS			Read Fault Code		Y		
DSS		Telematic unit (RTX) or audio/navigation	SMES_PLUS			Erase Fault Code		Y		
DSS		Telematic unit (RTX) or audio/navigation	SMES_PLUS			Live Data		Y		
DSS		Telematic unit (RTX) or audio/navigation	SMES_PLUS			Actuation Test		Y		
DSS		Telematic unit (RTX) or audio/navigation	SMES_PLUS			Special Function	Configuration	Y		
DSS		Telematic unit (RTX) or audio/navigation	NAC			Read ECU Information		Y		
DSS		Telematic unit (RTX) or audio/navigation	NAC			Read Fault Code		Y		
DSS		Telematic unit (RTX) or audio/navigation	NAC			Erase Fault Code		Y		
DSS		Telematic unit (RTX) or audio/navigation	NAC			Live Data		Y		
DSS		Telematic unit (RTX) or audio/navigation	NAC			Actuation Test		Y		
DSS		Controls on the steering wheel / integral controls steering wheel				Read ECU Information		Y		
DSS		Controls on the steering wheel / integral controls steering wheel				Read Fault Code		Y		
DSS		Controls on the steering wheel / integral controls steering wheel				Erase Fault Code		Y		
DSS		Controls on the steering wheel / integral controls steering wheel				Live Data		Y		
DSS		Controls on the steering wheel / integral controls steering wheel				Actuation Test		Y		
DSS		Multiplexed control panel	RIS audio system and automatic air conditioning			Read ECU Information		Y		
DSS		Multiplexed control panel	RIS audio system and automatic air conditioning			Read Fault Code		Y		
DSS		Multiplexed control panel	RIS audio system and automatic air conditioning			Erase Fault Code		Y		
DSS		Multiplexed control panel	RIS audio system and automatic air conditioning			Live Data		Y		
DSS		Multiplexed control panel	RIS audio system and automatic air conditioning			Actuation Test		Y		
DSS		Multiplexed control panel	RT6 telematic unit and automatic air conditioning			Read ECU Information		Y		
DSS		Multiplexed control panel	RT6 telematic unit and automatic air conditioning			Read Fault Code		Y		
DSS		Multiplexed control panel	RT6 telematic unit and automatic air conditioning			Erase Fault Code		Y		
DSS		Multiplexed control panel	RT6 telematic unit and automatic air conditioning			Live Data		Y		
DSS		Multiplexed control panel	RT6 telematic unit and automatic air conditioning			Actuation Test		Y		
DSS		Radio	RS5			Read ECU Information		Y		
DSS		Radio	RS5			Read Fault Code		Y		
DSS		Radio	RS5			Erase Fault Code		Y		
DSS		Radio	RS5			Live Data		Y		
DSS		Radio	RS5			Actuation Test		Y		
DSS		Radio	RS5			Special Function	Configuration	Y		
DSS		Radio	RD45			Read ECU Information		Y		
DSS		Radio	RD45			Read Fault Code		Y		
DSS		Radio	RD45			Live Data		Y		
DSS		Radio	RD45			Actuation Test		Y		
DSS		Radio	RD45			Special Function	Configuration	Y		
DSS		Clock				Read ECU Information		Y		
DSS		Clock				Read Fault Code		Y		
DSS		Clock				Erase Fault Code		Y		
DSS		Clock				Live Data		Y		
DSS		Clock				Actuation Test		Y		
DSS		Windscreen wiper				Read ECU Information		Y		
DSS		Windscreen wiper				Read Fault Code		Y		
DSS		Windscreen wiper				Erase Fault Code		Y		
DSS		Windscreen wiper				Live Data		Y		
DSS		Windscreen wiper				Actuation Test		Y		
DSS		Electric steering lock				Read ECU Information		Y		
DSS		Electric steering lock				Read Fault Code		Y		
DSS		Electric steering lock				Erase Fault Code		Y		
DSS		Electric steering lock				Live Data		Y		
DSS		Electric steering lock				Actuation Test		Y		
DSS		External CD player	CDE			Read ECU Information		Y		
DSS		External CD player	CDE			Read Fault Code		Y		
DSS		External CD player	CDE			Erase Fault Code		Y		
DSS		External CD player	CDE			Live Data		Y		
DSS		External CD player	CDE			Actuation Test		Y		
DSS		External CD player	CDE			Special Function	Configuration	Y		
DSS		Touch screen				Read ECU Information		Y		
DSS		Touch screen				Read Fault Code		Y		
DSS		Touch screen				Erase Fault Code		Y		
DSS		Touch screen				Live Data		Y		
DSS		Touch screen				Actuation Test		Y		
DSS Hybrid4		Built-in Systems Interface				Read ECU Information		Y		
DSS Hybrid4		Built-in Systems Interface				Read Fault Code		Y		
DSS Hybrid4		Built-in Systems Interface				Erase Fault Code		Y		
DSS Hybrid4		Built-in Systems Interface				Live Data		Y		
DSS Hybrid4		Built-in Systems Interface				Actuation Test		Y		
DSS Hybrid4		Built-in Systems Interface				Special Function	Maintenance - BSI operating mode	Y		
DSS Hybrid4		Built-in Systems Interface				Special Function	Configuration	Y		
DSS Hybrid4		Built-in Systems Interface				Special Function	Pack Repair	Y		
DSS Hybrid4		Engine management ECU	EDC17030			Read ECU Information		Y		
DSS Hybrid4		Engine management ECU	EDC17030			Read Fault Code		Y		
DSS Hybrid4		Engine management ECU	EDC17030			Erase Fault Code		Y		
DSS Hybrid4		Engine management ECU	EDC17030			Live Data		Y		
DSS Hybrid4		Engine management ECU	EDC17030			Actuation Test		Y		
DSS Hybrid4		Engine management ECU	EDC17030			Special Function	Pack Repair	Y		
DSS Hybrid4		Engine management ECU	DCM6.2	DCM6.2 DW10FD TED4 - 150 CV	AW DCM6.2	Read ECU Information		Y		
DSS Hybrid4		Engine management ECU	DCM6.2	DCM6.2 DW10FD TED4 - 150 CV	AW DCM6.2	Read Fault Code		Y		
DSS Hybrid4		Engine management ECU	DCM6.2	DCM6.2 DW10FD TED4 - 150 CV	AW DCM6.2	Erase Fault Code		Y		
DSS Hybrid4		Engine management ECU	DCM6.2	DCM6.2 DW10FD TED4 - 150 CV	AW DCM6.2	Live Data		Y		
DSS Hybrid4		Engine management ECU	DCM6.2	DCM6.2 DW10FD TED4 - 150 CV	AW DCM6.2	Actuation Test		Y		
DSS Hybrid4		Engine management ECU	DCM6.2	DCM6.2 DW10FD TED4 - 150 CV	AW DCM6.2	Special Function	Pack Repair	Y		
DSS Hybrid4		Engine management ECU	DCM6.2	DCM6.2 DW10FD TED4 - 180 CV	AW DCM6.2	Read ECU Information		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other area)	Subsystem (YES stands for China, NO stands for other area)	Subsystem or system type	Function type	Special function reasons	Add (Y/N)	Verification (Y/N)	Remarks
DSS Hybrid4		Engine management ECU	DCM6.2	DCM6.2 DW10FC TED4 - 180 CV	AW DCM6.2	Read Fault Code		Y		
DSS Hybrid4		Engine management ECU	DCM6.2	DCM6.2 DW10FC TED4 - 180 CV	AW DCM6.2	Erase Fault Code		Y		
DSS Hybrid4		Engine management ECU	DCM6.2	DCM6.2 DW10FC TED4 - 180 CV	AW DCM6.2	Live Data		Y		
DSS Hybrid4		Engine management ECU	DCM6.2	DCM6.2 DW10FC TED4 - 180 CV	AW DCM6.2	Actuation Test		Y		
DSS Hybrid4		Engine management ECU	DCM6.2	DCM6.2 DW10FC TED4 - 180 CV	AW DCM6.2	Special Function	Pack Repair	Y		
DSS Hybrid4		Engine management ECU	DCM6.2	DCM6.2 DW10FC TED4 - 136 CV	AW DCM6.2	Read ECU Information		Y		
DSS Hybrid4		Engine management ECU	DCM6.2	DCM6.2 DW10FC TED4 - 136 CV	AW DCM6.2	Read Fault Code		Y		
DSS Hybrid4		Engine management ECU	DCM6.2	DCM6.2 DW10FC TED4 - 136 CV	AW DCM6.2	Erase Fault Code		Y		
DSS Hybrid4		Engine management ECU	DCM6.2	DCM6.2 DW10FC TED4 - 136 CV	AW DCM6.2	Live Data		Y		
DSS Hybrid4		Engine management ECU	DCM6.2	DCM6.2 DW10FC TED4 - 136 CV	AW DCM6.2	Actuation Test		Y		
DSS Hybrid4		Engine management ECU	DCM6.2	DCM6.2 DW10FC TED4 - 136 CV	AW DCM6.2	Special Function	Pack Repair	Y		
DSS Hybrid4		Engine management ECU	HD1_S1D807_BR2	90B-DVACTED		Read ECU Information		Y		
DSS Hybrid4		Engine management ECU	HD1_S1D807_BR2	90B-DVACTED		Read Fault Code		Y		
DSS Hybrid4		Engine management ECU	HD1_S1D807_BR2	90B-DVACTED		Erase Fault Code		Y		
DSS Hybrid4		Engine management ECU	HD1_S1D807_BR2	90B-DVACTED		Live Data		Y		
DSS Hybrid4		Engine management ECU	HD1_S1D807_BR2	90B-DVACTED		Actuation Test		Y		
DSS Hybrid4		Engine management ECU	HD1_S1D807_BR2	90B-DVACTED		Special Function	Configuration	Y		
DSS Hybrid4		Engine management ECU	HD1_S1D807_BR2	90B-DVACTED		Special Function	Pack Repair	Y		
DSS Hybrid4		Engine management ECU	HD1_S1D807_BR2	90D-DVACTED		Read ECU Information		Y		
DSS Hybrid4		Engine management ECU	HD1_S1D807_BR2	90D-DVACTED		Read Fault Code		Y		
DSS Hybrid4		Engine management ECU	HD1_S1D807_BR2	90D-DVACTED		Erase Fault Code		Y		
DSS Hybrid4		Engine management ECU	HD1_S1D807_BR2	90D-DVACTED		Live Data		Y		
DSS Hybrid4		Engine management ECU	HD1_S1D807_BR2	90D-DVACTED		Actuation Test		Y		
DSS Hybrid4		Engine management ECU	HD1_S1D807_BR2	90D-DVACTED		Special Function	Configuration	Y		
DSS Hybrid4		Engine management ECU	HD1_S1D807_BR2	90D-DVACTED		Special Function	Pack Repair	Y		
DSS Hybrid4		Engine management ECU	DCM5_BR2	80B-DW10CTD4-163CV		Read ECU Information		Y		
DSS Hybrid4		Engine management ECU	DCM5_BR2	80B-DW10CTD4-163CV		Read Fault Code		Y		
DSS Hybrid4		Engine management ECU	DCM5_BR2	80B-DW10CTD4-163CV		Erase Fault Code		Y		
DSS Hybrid4		Engine management ECU	DCM5_BR2	80B-DW10CTD4-163CV		Live Data		Y		
DSS Hybrid4		Engine management ECU	DCM5_BR2	80B-DW10CTD4-163CV		Actuation Test		Y		
DSS Hybrid4		Engine management ECU	DCM5_BR2	80B-DW10CTD4-163CV		Special Function	Configuration	Y		
DSS Hybrid4		Engine management ECU	DCM5_BR2	80B-DW10CTD4-163CV		Special Function	Pack Repair	Y		
DSS Hybrid4		Engine management ECU	DCM5_BR2	80D-DW10CTD4-136CV		Read ECU Information		Y		
DSS Hybrid4		Engine management ECU	DCM5_BR2	80D-DW10CTD4-136CV		Read Fault Code		Y		
DSS Hybrid4		Engine management ECU	DCM5_BR2	80D-DW10CTD4-136CV		Erase Fault Code		Y		
DSS Hybrid4		Engine management ECU	DCM5_BR2	80D-DW10CTD4-136CV		Live Data		Y		
DSS Hybrid4		Engine management ECU	DCM5_BR2	80D-DW10CTD4-136CV		Actuation Test		Y		
DSS Hybrid4		Engine management ECU	DCM5_BR2	80D-DW10CTD4-136CV		Special Function	Configuration	Y		
DSS Hybrid4		Engine management ECU	DCM5_BR2	80D-DW10CTD4-136CV		Special Function	Pack Repair	Y		
DSS Hybrid4		Engine management ECU	DCM5_BR2	80E-DW10CTD4-150CV		Read ECU Information		Y		
DSS Hybrid4		Engine management ECU	DCM5_BR2	80E-DW10CTD4-150CV		Read Fault Code		Y		
DSS Hybrid4		Engine management ECU	DCM5_BR2	80E-DW10CTD4-150CV		Erase Fault Code		Y		
DSS Hybrid4		Engine management ECU	DCM5_BR2	80E-DW10CTD4-150CV		Live Data		Y		
DSS Hybrid4		Engine management ECU	DCM5_BR2	80E-DW10CTD4-150CV		Actuation Test		Y		
DSS Hybrid4		Engine management ECU	DCM5_BR2	80E-DW10CTD4-150CV		Special Function	Configuration	Y		
DSS Hybrid4		Engine management ECU	DCM5_BR2	80E-DW10CTD4-150CV		Special Function	Pack Repair	Y		
DSS Hybrid4		Engine management ECU	MED17_4.2	14 MED17_4.2 EURO6		Read ECU Information		Y		
DSS Hybrid4		Engine management ECU	MED17_4.2	14 MED17_4.2 EURO6		Read Fault Code		Y		
DSS Hybrid4		Engine management ECU	MED17_4.2	14 MED17_4.2 EURO6		Erase Fault Code		Y		
DSS Hybrid4		Engine management ECU	MED17_4.2	14 MED17_4.2 EURO6		Live Data		Y		
DSS Hybrid4		Engine management ECU	MED17_4.2	14 MED17_4.2 EURO6		Actuation Test		Y		
DSS Hybrid4		Engine management ECU	MED17_4.2	14 MED17_4.2 EURO6		Special Function	Configuration	Y		
DSS Hybrid4		Engine management ECU	MED17_4.2	14 MED17_4.2 EURO6		Special Function	Pack Repair	Y		
DSS Hybrid4		Engine management ECU	MEV017_4.2	5FU MEV017_4.2 EURO6		Read ECU Information		Y		
DSS Hybrid4		Engine management ECU	MEV017_4.2	5FU MEV017_4.2 EURO6		Read Fault Code		Y		
DSS Hybrid4		Engine management ECU	MEV017_4.2	5FU MEV017_4.2 EURO6		Erase Fault Code		Y		
DSS Hybrid4		Engine management ECU	MEV017_4.2	5FU MEV017_4.2 EURO6		Live Data		Y		
DSS Hybrid4		Engine management ECU	MEV017_4.2	5FU MEV017_4.2 EURO6		Actuation Test		Y		
DSS Hybrid4		Engine management ECU	MEV017_4.2	5FU MEV017_4.2 EURO6		Special Function	Pack Repair	Y		
DSS Hybrid4		Engine management ECU	MED17_4.4			Read ECU Information		Y		
DSS Hybrid4		Engine management ECU	MED17_4.4			Read Fault Code		Y		
DSS Hybrid4		Engine management ECU	MED17_4.4			Erase Fault Code		Y		
DSS Hybrid4		Engine management ECU	MED17_4.4			Live Data		Y		
DSS Hybrid4		Engine management ECU	MED17_4.4			Actuation Test		Y		
DSS Hybrid4		Engine management ECU	MED17_4.4			Special Function	Pack repairation	Y		
DSS Hybrid4		Engine management ECU	MED17_4.4 EP8			Read ECU Information		Y		
DSS Hybrid4		Engine management ECU	MED17_4.4 EP8			Read Fault Code		Y		
DSS Hybrid4		Engine management ECU	MED17_4.4 EP8			Erase Fault Code		Y		
DSS Hybrid4		Engine management ECU	MED17_4.4 EP8			Live Data		Y		
DSS Hybrid4		Engine management ECU	MED17_4.4 EP8			Actuation Test		Y		
DSS Hybrid4		Engine management ECU	MED17_4.4 EP8			Special Function	Pack repairation	Y		
DSS Hybrid4		Engine management ECU	DCM5_JV	80C-DW10CTD4-163CV		Read ECU Information		Y		
DSS Hybrid4		Engine management ECU	DCM5_JV	80C-DW10CTD4-163CV		Read Fault Code		Y		
DSS Hybrid4		Engine management ECU	DCM5_JV	80C-DW10CTD4-163CV		Erase Fault Code		Y		
DSS Hybrid4		Engine management ECU	DCM5_JV	80C-DW10CTD4-163CV		Live Data		Y		
DSS Hybrid4		Engine management ECU	DCM5_JV	80C-DW10CTD4-163CV		Actuation Test		Y		
DSS Hybrid4		Engine management ECU	DCM5_JV	80C-DW10CTD4-163CV		Special Function	Configuration	Y		
DSS Hybrid4		Engine management ECU	DCM5_JV	80C-DW10CTD4-163CV		Special Function	Pack Repair	Y		
DSS Hybrid4		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP81			Read ECU Information		Y		
DSS Hybrid4		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP81			Read Fault Code		Y		
DSS Hybrid4		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP81			Erase Fault Code		Y		
DSS Hybrid4		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP81			Live Data		Y		
DSS Hybrid4		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP81			Actuation Test		Y		
DSS Hybrid4		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP81			Special Function	Configuration	Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function reasons	Add (Y/N)	Verification (Y/N)	Remarks
DSS Hybrid4		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP8			Special Function	Pack Repair	Y		
DSS Hybrid4		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP90			Read ECU Information		Y		
DSS Hybrid4		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP90			Read Fault Code		Y		
DSS Hybrid4		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP90			Erase Fault Code		Y		
DSS Hybrid4		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP90			Live Data		Y		
DSS Hybrid4		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP90			Actuation Test		Y		
DSS Hybrid4		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP90			Special Function	Pack Repair	Y		
DSS Hybrid4		Automatic gearbox or controlled manual gearbox	BVA_AM6_AT6_EH005			Read ECU Information		Y		
DSS Hybrid4		Automatic gearbox or controlled manual gearbox	BVA_AM6_AT6_EH005			Read Fault Code		Y		
DSS Hybrid4		Automatic gearbox or controlled manual gearbox	BVA_AM6_AT6_EH005			Erase Fault Code		Y		
DSS Hybrid4		Automatic gearbox or controlled manual gearbox	BVA_AM6_AT6_EH005			Live Data		Y		
DSS Hybrid4		Automatic gearbox or controlled manual gearbox	BVA_AM6_AT6_EH005			Actuation Test		Y		
DSS Hybrid4		Automatic gearbox or controlled manual gearbox	BVA_AM6_AT6_EH005			Special Function	Oil wear counter	Y		
DSS Hybrid4		Automatic gearbox or controlled manual gearbox	BVA_AM6_AT6_EH005			Special Function	Configuration	Y		
DSS Hybrid4		Automatic gearbox or controlled manual gearbox	BVA_AM6_AT6_EH005			Special Function	Pack Repair	Y		
DSS Hybrid4		Automatic gearbox or controlled manual gearbox	CFC300P			Read ECU Information		Y		
DSS Hybrid4		Automatic gearbox or controlled manual gearbox	CFC300P			Read Fault Code		Y		
DSS Hybrid4		Automatic gearbox or controlled manual gearbox	CFC300P			Erase Fault Code		Y		
DSS Hybrid4		Automatic gearbox or controlled manual gearbox	CFC300P			Live Data		Y		
DSS Hybrid4		Automatic gearbox or controlled manual gearbox	CFC300P			Actuation Test		Y		
DSS Hybrid4		Automatic gearbox or controlled manual gearbox	CFC300P			Special Function	Replacement parts	Y		
DSS Hybrid4		Automatic gearbox or controlled manual gearbox	BVA_AM6_AT6_IDS			Read ECU Information		Y		
DSS Hybrid4		Automatic gearbox or controlled manual gearbox	BVA_AM6_AT6_IDS			Read Fault Code		Y		
DSS Hybrid4		Automatic gearbox or controlled manual gearbox	BVA_AM6_AT6_IDS			Erase Fault Code		Y		
DSS Hybrid4		Automatic gearbox or controlled manual gearbox	BVA_AM6_AT6_IDS			Live Data		Y		
DSS Hybrid4		Automatic gearbox or controlled manual gearbox	BVA_AM6_AT6_IDS			Actuation Test		Y		
DSS Hybrid4		Automatic gearbox or controlled manual gearbox	BVA_AM6_AT6_IDS			Special Function	Configuration	Y		
DSS Hybrid4		Automatic gearbox or controlled manual gearbox	BVA_AM6_AT6_IDS			Special Function	Pack Repair	Y		
DSS Hybrid4		Automatic gearbox or controlled manual gearbox	CFC300P_HY			Read ECU Information		Y		
DSS Hybrid4		Automatic gearbox or controlled manual gearbox	CFC300P_HY			Read Fault Code		Y		
DSS Hybrid4		Automatic gearbox or controlled manual gearbox	CFC300P_HY			Erase Fault Code		Y		
DSS Hybrid4		Automatic gearbox or controlled manual gearbox	CFC300P_HY			Live Data		Y		
DSS Hybrid4		Automatic gearbox or controlled manual gearbox	CFC300P_HY			Actuation Test		Y		
DSS Hybrid4		Automatic gearbox or controlled manual gearbox	CFC300P_HY			Special Function	Counters	Y		
DSS Hybrid4		Automatic gearbox or controlled manual gearbox	CFC300P_HY			Special Function	Programming operations	Y		
DSS Hybrid4		Automatic gearbox or controlled manual gearbox	CFC300P_HY			Special Function	Replacement parts	Y		
DSS Hybrid4		Air bags and pre-tensioners control unit				Read ECU Information		Y		
DSS Hybrid4		Air bags and pre-tensioners control unit				Read Fault Code		Y		
DSS Hybrid4		Air bags and pre-tensioners control unit				Erase Fault Code		Y		
DSS Hybrid4		Air bags and pre-tensioners control unit				Live Data		Y		
DSS Hybrid4		Air bags and pre-tensioners control unit				Special Function	Configuration	Y		
DSS Hybrid4		Air bags and pre-tensioners control unit				Special Function	Pack Repair	Y		
DSS Hybrid4		Power steering				Read ECU Information		Y		
DSS Hybrid4		Power steering				Read Fault Code		Y		
DSS Hybrid4		Power steering				Erase Fault Code		Y		
DSS Hybrid4		Power steering				Live Data		Y		
DSS Hybrid4		Power steering				Actuation Test		Y		
DSS Hybrid4		Battery charge status unit				Read ECU Information		Y		
DSS Hybrid4		Battery charge status unit				Read Fault Code		Y		
DSS Hybrid4		Battery charge status unit				Erase Fault Code		Y		
DSS Hybrid4		Battery charge status unit				Live Data		Y		
DSS Hybrid4		Battery charge status unit				Special Function	Configuration	Y		
DSS Hybrid4		Diesel additive pump	POMPE_MU3_TI			Read ECU Information		Y		
DSS Hybrid4		Diesel additive pump	POMPE_MU3_TI			Read Fault Code		Y		
DSS Hybrid4		Diesel additive pump	POMPE_MU3_TI			Erase Fault Code		Y		
DSS Hybrid4		Diesel additive pump	POMPE_MU3_TI			Live Data		Y		
DSS Hybrid4		Diesel additive pump	POMPE_MU3_TI			Actuation Test		Y		
DSS Hybrid4		Diesel additive pump	POMPE_MU3_TI			Special Function	Configuration	Y		
DSS Hybrid4		Diesel additive pump	POMPE_TI_E6			Read ECU Information		Y		
DSS Hybrid4		Diesel additive pump	POMPE_TI_E6			Read Fault Code		Y		
DSS Hybrid4		Diesel additive pump	POMPE_TI_E6			Erase Fault Code		Y		
DSS Hybrid4		Diesel additive pump	POMPE_TI_E6			Live Data		Y		
DSS Hybrid4		Diesel additive pump	POMPE_TI_E6			Actuation Test		Y		
DSS Hybrid4		Diesel additive pump	POMPE_TI_E6			Special Function	Configuration	Y		
DSS Hybrid4		Electric secondary brake				Read ECU Information		Y		
DSS Hybrid4		Electric secondary brake				Read Fault Code		Y		
DSS Hybrid4		Electric secondary brake				Erase Fault Code		Y		
DSS Hybrid4		Electric secondary brake				Live Data		Y		
DSS Hybrid4		Electric secondary brake				Actuation Test		Y		
DSS Hybrid4		Electric secondary brake				Special Function	Pack Repair	Y		
DSS Hybrid4		Vibrators control ECU				Read ECU Information		Y		
DSS Hybrid4		Vibrators control ECU				Read Fault Code		Y		
DSS Hybrid4		Vibrators control ECU				Erase Fault Code		Y		
DSS Hybrid4		Vibrators control ECU				Live Data		Y		
DSS Hybrid4		Vibrators control ECU				Actuation Test		Y		
DSS Hybrid4		Under-inflation detection	DSG			Read ECU Information		Y		
DSS Hybrid4		Under-inflation detection	DSG			Read Fault Code		Y		
DSS Hybrid4		Under-inflation detection	DSG			Erase Fault Code		Y		
DSS Hybrid4		Under-inflation detection	DSG			Live Data		Y		
DSS Hybrid4		Under-inflation detection	DSG			Special Function	Pack Reparation	Y		
DSS Hybrid4		Under-inflation detection	DSG_IDS			Read ECU Information		Y		
DSS Hybrid4		Under-inflation detection	DSG_IDS			Read Fault Code		Y		
DSS Hybrid4		Under-inflation detection	DSG_IDS			Erase Fault Code		Y		
DSS Hybrid4		Under-inflation detection	DSG_IDS			Live Data		Y		

CITROËN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
DSS Hybrid4		Under-inflation detection	DIS_DES			Special Function	Pack Repair	Y		
DSS Hybrid4		Dynamic headlamp height adjuster	BEMP_2			Read ECU Information		Y		
DSS Hybrid4		Dynamic headlamp height adjuster	BEMP_2			Read Fault Code		Y		
DSS Hybrid4		Dynamic headlamp height adjuster	BEMP_2			Erase Fault Code		Y		
DSS Hybrid4		Dynamic headlamp height adjuster	BEMP_2			Live Data		Y		
DSS Hybrid4		Dynamic headlamp height adjuster	BEMP_2			Actuation Test		Y		
DSS Hybrid4		Dynamic headlamp height adjuster	BEMP_2			Special Function	Configuration	Y		
DSS Hybrid4		Dynamic headlamp height adjuster	BEMP_2			Special Function	Pack Repair	Y		
DSS Hybrid4		Dynamic headlamp height adjuster	LADCT			Read ECU Information		Y		
DSS Hybrid4		Dynamic headlamp height adjuster	LADCT			Read Fault Code		Y		
DSS Hybrid4		Dynamic headlamp height adjuster	LADCT			Erase Fault Code		Y		
DSS Hybrid4		Dynamic headlamp height adjuster	LADCT			Live Data		Y		
DSS Hybrid4		Dynamic headlamp height adjuster	LADCT			Actuation Test		Y		
DSS Hybrid4		Dynamic headlamp height adjuster	LADCT			Special Function	Configuration	Y		
DSS Hybrid4		Dynamic headlamp height adjuster	LADCT			Special Function	Pack Repair	Y		
DSS Hybrid4		Engine relay unit				Read ECU Information		Y		
DSS Hybrid4		Engine relay unit				Read Fault Code		Y		
DSS Hybrid4		Engine relay unit				Erase Fault Code		Y		
DSS Hybrid4		Engine relay unit				Live Data		Y		
DSS Hybrid4		Engine relay unit				Actuation Test		Y		
DSS Hybrid4		Engine relay unit				Special Function	Configuration	Y		
DSS Hybrid4		Trailer relay unit				Read ECU Information		Y		
DSS Hybrid4		Trailer relay unit				Read Fault Code		Y		
DSS Hybrid4		Trailer relay unit				Erase Fault Code		Y		
DSS Hybrid4		Trailer relay unit				Live Data		Y		
DSS Hybrid4		Trailer relay unit				Actuation Test		Y		
DSS Hybrid4		Supply protection and management unit				Read ECU Information		Y		
DSS Hybrid4		Supply protection and management unit				Read Fault Code		Y		
DSS Hybrid4		Supply protection and management unit				Erase Fault Code		Y		
DSS Hybrid4		Supply protection and management unit				Live Data		Y		
DSS Hybrid4		Service module / Independent telematic unit	BTA			Read ECU Information		Y		
DSS Hybrid4		Service module / Independent telematic unit	BTA			Read Fault Code		Y		
DSS Hybrid4		Service module / Independent telematic unit	BTA			Erase Fault Code		Y		
DSS Hybrid4		Service module / Independent telematic unit	BTA			Live Data		Y		
DSS Hybrid4		Service module / Independent telematic unit	BTA			Actuation Test		Y		
DSS Hybrid4		Service module / Independent telematic unit	BTA			Special Function	Configuration	Y		
DSS Hybrid4		Service module / Independent telematic unit	BTA_2			Read ECU Information		Y		
DSS Hybrid4		Service module / Independent telematic unit	BTA_2			Read Fault Code		Y		
DSS Hybrid4		Service module / Independent telematic unit	BTA_2			Erase Fault Code		Y		
DSS Hybrid4		Service module / Independent telematic unit	BTA_2			Live Data		Y		
DSS Hybrid4		Service module / Independent telematic unit	BTA_2			Actuation Test		Y		
DSS Hybrid4		Service module / Independent telematic unit	BTA_2			Special Function	Configuration	Y		
DSS Hybrid4		Service module / Independent telematic unit	BTA_2			Special Function	Pack Repair	Y		
DSS Hybrid4		Service module / Independent telematic unit	BLVY			Read ECU Information		Y		
DSS Hybrid4		Service module / Independent telematic unit	BLVY			Read Fault Code		Y		
DSS Hybrid4		Service module / Independent telematic unit	BLVY			Erase Fault Code		Y		
DSS Hybrid4		Service module / Independent telematic unit	BLVY			Live Data		Y		
DSS Hybrid4		Service module / Independent telematic unit	BLVY			Actuation Test		Y		
DSS Hybrid4		Service module / Independent telematic unit	BLVY			Special Function	Configuration	Y		
DSS Hybrid4		Telematic navigator / separate control				Read ECU Information		Y		
DSS Hybrid4		Telematic navigator / separate control				Live Data		Y		
DSS Hybrid4		Telematic navigator / separate control				Actuation Test		Y		
DSS Hybrid4		Instrument panel				Read ECU Information		Y		
DSS Hybrid4		Instrument panel				Read Fault Code		Y		
DSS Hybrid4		Instrument panel				Erase Fault Code		Y		
DSS Hybrid4		Instrument panel				Live Data		Y		
DSS Hybrid4		Instrument panel				Actuation Test		Y		
DSS Hybrid4		Control panel dot matrix display	Colour matrix screen			Read ECU Information		Y		
DSS Hybrid4		Control panel dot matrix display	Colour matrix screen			Read Fault Code		Y		
DSS Hybrid4		Control panel dot matrix display	Colour matrix screen			Erase Fault Code		Y		
DSS Hybrid4		Control panel dot matrix display	Colour matrix screen			Actuation Test		Y		
DSS Hybrid4		Control panel dot matrix display	Colour matrix screen			Special Function	Configuration	Y		
DSS Hybrid4		Control panel dot matrix display	Monochrome matrix screen			Read ECU Information		Y		
DSS Hybrid4		Control panel dot matrix display	Monochrome matrix screen			Read Fault Code		Y		
DSS Hybrid4		Control panel dot matrix display	Monochrome matrix screen			Erase Fault Code		Y		
DSS Hybrid4		Control panel dot matrix display	Monochrome matrix screen			Actuation Test		Y		
DSS Hybrid4		Control panel dot matrix display	Monochrome matrix screen			Special Function	Configuration	Y		
DSS Hybrid4		Anti-theft alarm				Read ECU Information		Y		
DSS Hybrid4		Anti-theft alarm				Read Fault Code		Y		
DSS Hybrid4		Anti-theft alarm				Erase Fault Code		Y		
DSS Hybrid4		Anti-theft alarm				Live Data		Y		
DSS Hybrid4		Anti-theft alarm				Actuation Test		Y		
DSS Hybrid4		Anti-theft alarm				Special Function	Configuration	Y		
DSS Hybrid4		Controls under the steering wheel				Read ECU Information		Y		
DSS Hybrid4		Controls under the steering wheel				Read Fault Code		Y		
DSS Hybrid4		Controls under the steering wheel				Erase Fault Code		Y		
DSS Hybrid4		Controls under the steering wheel				Live Data		Y		
DSS Hybrid4		Controls under the steering wheel				Actuation Test		Y		
DSS Hybrid4		Controls under the steering wheel				Special Function	Pack Repair	Y		
DSS Hybrid4		Hands-free control unit				Read ECU Information		Y		
DSS Hybrid4		Hands-free control unit				Read Fault Code		Y		
DSS Hybrid4		Hands-free control unit				Erase Fault Code		Y		
DSS Hybrid4		Hands-free control unit				Live Data		Y		
DSS Hybrid4		Hands-free control unit				Actuation Test		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
DSS Hybrid4		Hands-free control unit				Special Function	Configuration	Y		
DSS Hybrid4		Hands-free control unit				Special Function	Pack Repair	Y		
DSS Hybrid4		Electronic key reader				Read ECU Information		Y		
DSS Hybrid4		Electronic key reader				Read Fault Code		Y		
DSS Hybrid4		Electronic key reader				Erase Fault Code		Y		
DSS Hybrid4		Electronic key reader				Live Data		Y		
DSS Hybrid4		Seat belt not fastened warning lights unit				Read ECU Information		Y		
DSS Hybrid4		Seat belt not fastened warning lights unit				Actuation Test		Y		
DSS Hybrid4		Multifunction screen	EMF_A_IDS			Read ECU Information		Y		
DSS Hybrid4		Multifunction screen	EMF_A_IDS			Read Fault Code		Y		
DSS Hybrid4		Multifunction screen	EMF_A_IDS			Erase Fault Code		Y		
DSS Hybrid4		Multifunction screen	EMF_A_IDS			Actuation Test		Y		
DSS Hybrid4		Multifunction screen	EMF_A_IDS			Special Function	Configuration	Y		
DSS Hybrid4		Multifunction screen	EMF_C_IDS			Read ECU Information		Y		
DSS Hybrid4		Multifunction screen	EMF_C_IDS			Read Fault Code		Y		
DSS Hybrid4		Multifunction screen	EMF_C_IDS			Erase Fault Code		Y		
DSS Hybrid4		Multifunction screen	EMF_C_IDS			Actuation Test		Y		
DSS Hybrid4		Multifunction screen	EMF_C_IDS			Special Function	Configuration	Y		
DSS Hybrid4		Rain and light sensor				Read ECU Information		Y		
DSS Hybrid4		Rain and light sensor				Read Fault Code		Y		
DSS Hybrid4		Rain and light sensor				Erase Fault Code		Y		
DSS Hybrid4		Rain and light sensor				Live Data		Y		
DSS Hybrid4		Rain and light sensor				Special Function	Pack Repair	Y		
DSS Hybrid4		Multifunction video camera(CMF)				Read ECU Information		Y		
DSS Hybrid4		Multifunction video camera(CMF)				Read Fault Code		Y		
DSS Hybrid4		Multifunction video camera(CMF)				Erase Fault Code		Y		
DSS Hybrid4		Multifunction video camera(CMF)				Live Data		Y		
DSS Hybrid4		Multifunction video camera(CMF)				Actuation Test		Y		
DSS Hybrid4		Multifunction video camera(CMF)				Special Function	Configuration	Y		
DSS Hybrid4		Multifunction video camera(CMF)				Special Function	Pack Repair	Y		
DSS Hybrid4		Seat driver position memory module				Read ECU Information		Y		
DSS Hybrid4		Seat driver position memory module				Read Fault Code		Y		
DSS Hybrid4		Seat driver position memory module				Erase Fault Code		Y		
DSS Hybrid4		Seat driver position memory module				Live Data		Y		
DSS Hybrid4		Seat driver position memory module				Actuation Test		Y		
DSS Hybrid4		Seat driver position memory module				Special Function	Configuration	Y		
DSS Hybrid4		Parking assistance	4 parking assistance sensors			Read ECU Information		Y		
DSS Hybrid4		Parking assistance	4 parking assistance sensors			Read Fault Code		Y		
DSS Hybrid4		Parking assistance	4 parking assistance sensors			Erase Fault Code		Y		
DSS Hybrid4		Parking assistance	4 parking assistance sensors			Live Data		Y		
DSS Hybrid4		Parking assistance	4 parking assistance sensors			Special Function	Configuration	Y		
DSS Hybrid4		Parking assistance	4 parking assistance sensors			Special Function	Pack Repair	Y		
DSS Hybrid4		Parking assistance	10 parking assistance sensors			Read ECU Information		Y		
DSS Hybrid4		Parking assistance	10 parking assistance sensors			Read Fault Code		Y		
DSS Hybrid4		Parking assistance	10 parking assistance sensors			Erase Fault Code		Y		
DSS Hybrid4		Parking assistance	10 parking assistance sensors			Live Data		Y		
DSS Hybrid4		Parking assistance	10 parking assistance sensors			Special Function	Configuration	Y		
DSS Hybrid4		Parking assistance	10 parking assistance sensors			Special Function	Pack Repair	Y		
DSS Hybrid4		High Head Vision				Read ECU Information		Y		
DSS Hybrid4		High Head Vision				Read Fault Code		Y		
DSS Hybrid4		High Head Vision				Erase Fault Code		Y		
DSS Hybrid4		High Head Vision				Live Data		Y		
DSS Hybrid4		High Head Vision				Actuation Test		Y		
DSS Hybrid4		High Head Vision				Special Function	Configuration	Y		
DSS Hybrid4		Air conditioning	RFTA TWO ZONE			Read ECU Information		Y		
DSS Hybrid4		Air conditioning	RFTA TWO ZONE			Read Fault Code		Y		
DSS Hybrid4		Air conditioning	RFTA TWO ZONE			Erase Fault Code		Y		
DSS Hybrid4		Air conditioning	RFTA TWO ZONE			Live Data		Y		
DSS Hybrid4		Air conditioning	RFTA TWO ZONE			Actuation Test		Y		
DSS Hybrid4		Air conditioning	RFTA TWO ZONE			Special Function	Pack Repair	Y		
DSS Hybrid4		Radio amplifier				Read ECU Information		Y		
DSS Hybrid4		Radio amplifier				Read Fault Code		Y		
DSS Hybrid4		Radio amplifier				Erase Fault Code		Y		
DSS Hybrid4		Radio amplifier				Actuation Test		Y		
DSS Hybrid4		Radio amplifier				Special Function	Configuration	Y		
DSS Hybrid4		Telematic unit (OTA) or audio-navigation	RADIONAV_INREG			Read ECU Information		Y		
DSS Hybrid4		Telematic unit (OTA) or audio-navigation	RADIONAV_INREG			Read Fault Code		Y		
DSS Hybrid4		Telematic unit (OTA) or audio-navigation	RADIONAV_INREG			Erase Fault Code		Y		
DSS Hybrid4		Telematic unit (OTA) or audio-navigation	RADIONAV_INREG			Live Data		Y		
DSS Hybrid4		Telematic unit (OTA) or audio-navigation	RADIONAV_INREG			Actuation Test		Y		
DSS Hybrid4		Telematic unit (OTA) or audio-navigation	RADIONAV_INREG			Special Function	Configuration	Y		
DSS Hybrid4		Telematic unit (OTA) or audio-navigation	INREG2010			Read ECU Information		Y		
DSS Hybrid4		Telematic unit (OTA) or audio-navigation	INREG2010			Read Fault Code		Y		
DSS Hybrid4		Telematic unit (OTA) or audio-navigation	INREG2010			Erase Fault Code		Y		
DSS Hybrid4		Telematic unit (OTA) or audio-navigation	INREG2010			Live Data		Y		
DSS Hybrid4		Telematic unit (OTA) or audio-navigation	INREG2010			Actuation Test		Y		
DSS Hybrid4		Telematic unit (OTA) or audio-navigation	INREG2010			Special Function	Configuration	Y		
DSS Hybrid4		Telematic unit (OTA) or audio-navigation	INREG2010			Special Function	Pack Repair	Y		
DSS Hybrid4		Telematic unit (OTA) or audio-navigation	SMES_PLUS			Read ECU Information		Y		
DSS Hybrid4		Telematic unit (OTA) or audio-navigation	SMES_PLUS			Read Fault Code		Y		
DSS Hybrid4		Telematic unit (OTA) or audio-navigation	SMES_PLUS			Erase Fault Code		Y		
DSS Hybrid4		Telematic unit (OTA) or audio-navigation	SMES_PLUS			Live Data		Y		
DSS Hybrid4		Telematic unit (OTA) or audio-navigation	SMES_PLUS			Actuation Test		Y		
DSS Hybrid4		Telematic unit (OTA) or audio-navigation	SMES_PLUS			Special Function	Configuration	Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
DSS Hybrid4		Telematic unit (RTX) or audio/navigation	NA			Read ECU Information		Y		
DSS Hybrid4		Telematic unit (RTX) or audio/navigation	NA			Read Fault Code		Y		
DSS Hybrid4		Telematic unit (RTX) or audio/navigation	NA			Erase Fault Code		Y		
DSS Hybrid4		Telematic unit (RTX) or audio/navigation	NA			Live Data		Y		
DSS Hybrid4		Telematic unit (RTX) or audio/navigation	NA			Actuation Test		Y		
DSS Hybrid4		Controls on the steering wheel / integral controls steering wheel				Read ECU Information		Y		
DSS Hybrid4		Controls on the steering wheel / integral controls steering wheel				Read Fault Code		Y		
DSS Hybrid4		Controls on the steering wheel / integral controls steering wheel				Erase Fault Code		Y		
DSS Hybrid4		Controls on the steering wheel / integral controls steering wheel				Live Data		Y		
DSS Hybrid4		Controls on the steering wheel / integral controls steering wheel				Actuation Test		Y		
DSS Hybrid4		Multiplexed control panel	RIS audio system and automatic air conditioning			Read ECU Information		Y		
DSS Hybrid4		Multiplexed control panel	RIS audio system and automatic air conditioning			Read Fault Code		Y		
DSS Hybrid4		Multiplexed control panel	RIS audio system and automatic air conditioning			Erase Fault Code		Y		
DSS Hybrid4		Multiplexed control panel	RIS audio system and automatic air conditioning			Live Data		Y		
DSS Hybrid4		Multiplexed control panel	RIS audio system and automatic air conditioning			Actuation Test		Y		
DSS Hybrid4		Multiplexed control panel	RTG telematic unit and automatic air conditioning			Read ECU Information		Y		
DSS Hybrid4		Multiplexed control panel	RTG telematic unit and automatic air conditioning			Read Fault Code		Y		
DSS Hybrid4		Multiplexed control panel	RTG telematic unit and automatic air conditioning			Erase Fault Code		Y		
DSS Hybrid4		Multiplexed control panel	RTG telematic unit and automatic air conditioning			Live Data		Y		
DSS Hybrid4		Multiplexed control panel	RTG telematic unit and automatic air conditioning			Actuation Test		Y		
DSS Hybrid4		Clock				Read ECU Information		Y		
DSS Hybrid4		Clock				Read Fault Code		Y		
DSS Hybrid4		Clock				Erase Fault Code		Y		
DSS Hybrid4		Clock				Live Data		Y		
DSS Hybrid4		Clock				Actuation Test		Y		
DSS Hybrid4		Windscreen wiper				Read ECU Information		Y		
DSS Hybrid4		Windscreen wiper				Read Fault Code		Y		
DSS Hybrid4		Windscreen wiper				Erase Fault Code		Y		
DSS Hybrid4		Windscreen wiper				Live Data		Y		
DSS Hybrid4		Windscreen wiper				Actuation Test		Y		
DSS Hybrid4		Electric steering lock				Read ECU Information		Y		
DSS Hybrid4		Electric steering lock				Read Fault Code		Y		
DSS Hybrid4		Electric steering lock				Erase Fault Code		Y		
DSS Hybrid4		Electric steering lock				Live Data		Y		
DSS Hybrid4		Electric steering lock				Actuation Test		Y		
DSS Hybrid4		External CD player	CE			Read ECU Information		Y		
DSS Hybrid4		External CD player	CE			Read Fault Code		Y		
DSS Hybrid4		External CD player	CE			Erase Fault Code		Y		
DSS Hybrid4		External CD player	CE			Live Data		Y		
DSS Hybrid4		External CD player	CE			Actuation Test		Y		
DSS Hybrid4		External CD player	CE			Special Function	Confirmation	Y		
DSS Hybrid4		Touch screen				Read ECU Information		Y		
DSS Hybrid4		Touch screen				Read Fault Code		Y		
DSS Hybrid4		Touch screen				Erase Fault Code		Y		
DSS Hybrid4		Touch screen				Live Data		Y		
DSS Hybrid4		Touch screen				Actuation Test		Y		
DSS Hybrid4		Hybrid mode selector				Read ECU Information		Y		
DSS Hybrid4		Hybrid mode selector				Read Fault Code		Y		
DSS Hybrid4		Hybrid mode selector				Live Data		Y		
DSS Hybrid4		Hybrid mode selector				Actuation Test		Y		
DSS Hybrid4		Traction battery ECU				Read ECU Information		Y		
DSS Hybrid4		Traction battery ECU				Read Fault Code		Y		
DSS Hybrid4		Traction battery ECU				Erase Fault Code		Y		
DSS Hybrid4		Traction battery ECU				Live Data		Y		
DSS Hybrid4		Traction battery ECU				Actuation Test		Y		
DSS Hybrid4		Traction battery ECU				Special Function	Reactivation	Y		
DSS Hybrid4		Traction battery ECU				Special Function	Replacement parts	Y		
DSS Hybrid4		Hybrid control ECU 1				Read ECU Information		Y		
DSS Hybrid4		Hybrid control ECU 1				Read Fault Code		Y		
DSS Hybrid4		Hybrid control ECU 1				Erase Fault Code		Y		
DSS Hybrid4		Hybrid control ECU 1				Live Data		Y		
DSS Hybrid4		Hybrid control ECU 1				Actuation Test		Y		
DSS Hybrid4		Hybrid control ECU 1				Special Function	Pack Repair	Y		
DSS Hybrid4		Hybrid control ECU 2				Read ECU Information		Y		
DSS Hybrid4		Hybrid control ECU 2				Read Fault Code		Y		
DSS Hybrid4		Hybrid control ECU 2				Erase Fault Code		Y		
DSS Hybrid4		Hybrid control ECU 2				Live Data		Y		
DSS Hybrid4		Radio				Read ECU Information		Y		
DSS Hybrid4		Radio				Read Fault Code		Y		
DSS Hybrid4		Radio				Erase Fault Code		Y		
DSS Hybrid4		Radio				Live Data		Y		
DSS Hybrid4		Radio				Actuation Test		Y		
DSS Hybrid4		Radio				Special Function	Configuration	Y		
DSS LS		Built-in Systems Interface				Read ECU Information		Y		
DSS LS		Built-in Systems Interface				Read Fault Code		Y		
DSS LS		Built-in Systems Interface				Erase Fault Code		Y		
DSS LS		Built-in Systems Interface				Live Data		Y		
DSS LS		Built-in Systems Interface				Actuation Test		Y		
DSS LS		Built-in Systems Interface				Special Function	Maintenance - BSI operating mode	Y		
DSS LS		Built-in Systems Interface				Special Function	Configuration	Y		
DSS LS		Built-in Systems Interface				Special Function	Pack Repair	Y		
DSS LS		Engine management ECU	V46_32	Yes		Read ECU Information		Y		
DSS LS		Engine management ECU	V46_32	Yes		Read Fault Code		Y		
DSS LS		Engine management ECU	V46_32	Yes		Erase Fault Code		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function reasons	Add (Y/N)	Verification (Y/N)	Remarks
DSS LS		Engine management ECU	V96_32	Yes		Live Data		Y		
DSS LS		Engine management ECU	V96_32	Yes		Actuation Test		Y		
DSS LS		Engine management ECU	V96_32	Yes		Special Function	Configuration	Y		
DSS LS		Engine management ECU	V96_32	Yes		Special Function	Pack Repair	Y		
DSS LS		Engine management ECU	V96_32	Yes	No	Read ECU Information		Y		
DSS LS		Engine management ECU	V96_32	Yes	No	Read Fault Code		Y		
DSS LS		Engine management ECU	V96_32	Yes	No	Erase Fault Code		Y		
DSS LS		Engine management ECU	V96_32	Yes	No	Live Data		Y		
DSS LS		Engine management ECU	V96_32	Yes	No	Actuation Test		Y		
DSS LS		Engine management ECU	V96_32	Yes	No	Special Function	Configuration	Y		
DSS LS		Engine management ECU	V96_32	Yes	No	Special Function	Pack Repair	Y		
DSS LS		Engine management ECU	MED17_4.2	SPV MED17.4.2 EURO5		Read ECU Information		Y		
DSS LS		Engine management ECU	MED17_4.2	SPV MED17.4.2 EURO5		Read Fault Code		Y		
DSS LS		Engine management ECU	MED17_4.2	SPV MED17.4.2 EURO5		Erase Fault Code		Y		
DSS LS		Engine management ECU	MED17_4.2	SPV MED17.4.2 EURO5		Live Data		Y		
DSS LS		Engine management ECU	MED17_4.2	SPV MED17.4.2 EURO5		Actuation Test		Y		
DSS LS		Engine management ECU	MED17_4.2	SPV MED17.4.2 EURO5		Special Function	Configuration	Y		
DSS LS		Engine management ECU	MED17_4.2	SPV MED17.4.2 EURO5		Special Function	Pack Repair	Y		
DSS LS		Engine management ECU	MEVD17_4.2	MEVD 17.4.2 EURO5 EP9C/DX	BC MEVD 17.4.2 EURO5	Read ECU Information		Y		
DSS LS		Engine management ECU	MEVD17_4.2	MEVD 17.4.2 EURO5 EP9C/DX	BC MEVD 17.4.2 EURO5	Read Fault Code		Y		
DSS LS		Engine management ECU	MEVD17_4.2	MEVD 17.4.2 EURO5 EP9C/DX	BC MEVD 17.4.2 EURO5	Erase Fault Code		Y		
DSS LS		Engine management ECU	MEVD17_4.2	MEVD 17.4.2 EURO5 EP9C/DX	BC MEVD 17.4.2 EURO5	Live Data		Y		
DSS LS		Engine management ECU	MEVD17_4.2	MEVD 17.4.2 EURO5 EP9C/DX	BC MEVD 17.4.2 EURO5	Actuation Test		Y		
DSS LS		Engine management ECU	MEVD17_4.2	MEVD 17.4.2 EURO5 EP9C/DX	BC MEVD 17.4.2 EURO5	Special Function	Pack Repair	Y		
DSS LS		Engine management ECU	MED17_4.4			Read ECU Information		Y		
DSS LS		Engine management ECU	MED17_4.4			Read Fault Code		Y		
DSS LS		Engine management ECU	MED17_4.4			Erase Fault Code		Y		
DSS LS		Engine management ECU	MED17_4.4			Live Data		Y		
DSS LS		Engine management ECU	MED17_4.4			Actuation Test		Y		
DSS LS		Engine management ECU	MED17_4.4			Special Function	Pack repairation	Y		
DSS LS		Engine management ECU	MED17_4.4 EP8			Read ECU Information		Y		
DSS LS		Engine management ECU	MED17_4.4 EP8			Read Fault Code		Y		
DSS LS		Engine management ECU	MED17_4.4 EP8			Erase Fault Code		Y		
DSS LS		Engine management ECU	MED17_4.4 EP8			Live Data		Y		
DSS LS		Engine management ECU	MED17_4.4 EP8			Actuation Test		Y		
DSS LS		Engine management ECU	MED17_4.4 EP8			Special Function	Pack repairation	Y		
DSS LS		Engine management ECU	VD46			Read ECU Information		Y		
DSS LS		Engine management ECU	VD46			Read Fault Code		Y		
DSS LS		Engine management ECU	VD46			Erase Fault Code		Y		
DSS LS		Engine management ECU	VD46			Live Data		Y		
DSS LS		Engine management ECU	VD46			Actuation Test		Y		
DSS LS		Engine management ECU	VD46			Special Function	Pack Repair	Y		
DSS LS		Automatic gearbox or controlled manual gearbox	BVA_4MS_A16_EURO5			Read ECU Information		Y		
DSS LS		Automatic gearbox or controlled manual gearbox	BVA_4MS_A16_EURO5			Read Fault Code		Y		
DSS LS		Automatic gearbox or controlled manual gearbox	BVA_4MS_A16_EURO5			Erase Fault Code		Y		
DSS LS		Automatic gearbox or controlled manual gearbox	BVA_4MS_A16_EURO5			Live Data		Y		
DSS LS		Automatic gearbox or controlled manual gearbox	BVA_4MS_A16_EURO5			Actuation Test		Y		
DSS LS		Automatic gearbox or controlled manual gearbox	BVA_4MS_A16_EURO5			Special Function	Configuration	Y		
DSS LS		Automatic gearbox or controlled manual gearbox	BVA_4MS_A16_EURO5			Special Function	Oil wear counter	Y		
DSS LS		Automatic gearbox or controlled manual gearbox	BVA_4MS_A16_EURO5			Special Function	Pack Repair	Y		
DSS LS		Automatic gearbox or controlled manual gearbox	BVA_4MS_A16_US			Read ECU Information		Y		
DSS LS		Automatic gearbox or controlled manual gearbox	BVA_4MS_A16_US			Read Fault Code		Y		
DSS LS		Automatic gearbox or controlled manual gearbox	BVA_4MS_A16_US			Erase Fault Code		Y		
DSS LS		Automatic gearbox or controlled manual gearbox	BVA_4MS_A16_US			Live Data		Y		
DSS LS		Automatic gearbox or controlled manual gearbox	BVA_4MS_A16_US			Actuation Test		Y		
DSS LS		Automatic gearbox or controlled manual gearbox	BVA_4MS_A16_US			Special Function	Configuration	Y		
DSS LS		Automatic gearbox or controlled manual gearbox	BVA_4MS_A16_US			Special Function	Pack Repair	Y		
DSS LS		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP81			Read ECU Information		Y		
DSS LS		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP81			Read Fault Code		Y		
DSS LS		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP81			Erase Fault Code		Y		
DSS LS		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP81			Live Data		Y		
DSS LS		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP81			Actuation Test		Y		
DSS LS		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP81			Special Function	Pack Repair	Y		
DSS LS		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP90			Read ECU Information		Y		
DSS LS		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP90			Read Fault Code		Y		
DSS LS		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP90			Erase Fault Code		Y		
DSS LS		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP90			Live Data		Y		
DSS LS		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP90			Actuation Test		Y		
DSS LS		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP90			Special Function	Pack Repair	Y		
DSS LS		Air bags and pre-tensioners control unit				Read ECU Information		Y		
DSS LS		Air bags and pre-tensioners control unit				Read Fault Code		Y		
DSS LS		Air bags and pre-tensioners control unit				Erase Fault Code		Y		
DSS LS		Air bags and pre-tensioners control unit				Live Data		Y		
DSS LS		Air bags and pre-tensioners control unit				Special Function	Configuration	Y		
DSS LS		Air bags and pre-tensioners control unit				Special Function	Pack Repair	Y		
DSS LS		Power steering				Read ECU Information		Y		
DSS LS		Power steering				Read Fault Code		Y		
DSS LS		Power steering				Erase Fault Code		Y		
DSS LS		Power steering				Live Data		Y		
DSS LS		Power steering				Actuation Test		Y		
DSS LS		Voltage retaining device	DMTR			Read ECU Information		Y		
DSS LS		Voltage retaining device	DMTR			Read Fault Code		Y		
DSS LS		Voltage retaining device	DMTR			Erase Fault Code		Y		
DSS LS		Voltage retaining device	DMTR DTC36			Read ECU Information		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
DSS LS		Voltage retaining device		DMTR, DTCDB		Read Fault Code		Y		
DSS LS		Voltage retaining device		DMTR, DTCDB		Erase Fault Code		Y		
DSS LS		Multiplexed control panel	MON audio/navigation and automatic air conditioning			Read ECU Information		Y		
DSS LS		Multiplexed control panel	MON audio/navigation and automatic air conditioning			Read Fault Code		Y		
DSS LS		Multiplexed control panel	MON audio/navigation and automatic air conditioning			Erase Fault Code		Y		
DSS LS		Multiplexed control panel	MON audio/navigation and automatic air conditioning			Live Data		Y		
DSS LS		Multiplexed control panel	MON audio/navigation and automatic air conditioning			Actuation Test		Y		
DSS LS		Multiplexed control panel	BD45 audio system and automatic air conditioning			Read ECU Information		Y		
DSS LS		Multiplexed control panel	BD45 audio system and automatic air conditioning			Read Fault Code		Y		
DSS LS		Multiplexed control panel	BD45 audio system and automatic air conditioning			Erase Fault Code		Y		
DSS LS		Multiplexed control panel	BD45 audio system and automatic air conditioning			Live Data		Y		
DSS LS		Multiplexed control panel	BD45 audio system and manual air conditioning			Read ECU Information		Y		
DSS LS		Multiplexed control panel	BD45 audio system and manual air conditioning			Read Fault Code		Y		
DSS LS		Multiplexed control panel	BD45 audio system and manual air conditioning			Erase Fault Code		Y		
DSS LS		Multiplexed control panel	BD45 audio system and manual air conditioning			Live Data		Y		
DSS LS		Multiplexed control panel	BD45 audio system and manual air conditioning			Actuation Test		Y		
DSS LS		Supply protection and management unit				Read ECU Information		Y		
DSS LS		Supply protection and management unit				Read Fault Code		Y		
DSS LS		Supply protection and management unit				Erase Fault Code		Y		
DSS LS		Supply protection and management unit				Live Data		Y		
DSS LS		Electric steering lock				Read ECU Information		Y		
DSS LS		Electric steering lock				Read Fault Code		Y		
DSS LS		Electric steering lock				Erase Fault Code		Y		
DSS LS		Electric steering lock				Live Data		Y		
DSS LS		Electric steering lock				Actuation Test		Y		
DSS LS		Electronic key reader				Read ECU Information		Y		
DSS LS		Electronic key reader				Read Fault Code		Y		
DSS LS		Electronic key reader				Erase Fault Code		Y		
DSS LS		Electronic key reader				Live Data		Y		
DSS LS		Battery charge status unit				Read ECU Information		Y		
DSS LS		Battery charge status unit				Read Fault Code		Y		
DSS LS		Battery charge status unit				Erase Fault Code		Y		
DSS LS		Battery charge status unit				Live Data		Y		
DSS LS		Battery charge status unit				Special Function	Configuration	Y		
DSS LS		Hands-free control unit				Read ECU Information		Y		
DSS LS		Hands-free control unit				Read Fault Code		Y		
DSS LS		Hands-free control unit				Erase Fault Code		Y		
DSS LS		Hands-free control unit				Live Data		Y		
DSS LS		Hands-free control unit				Actuation Test		Y		
DSS LS		Hands-free control unit				Special Function	Configuration	Y		
DSS LS		Hands-free control unit				Special Function	Pack Repair	Y		
DSS LS		Electric secondary brake				Read ECU Information		Y		
DSS LS		Electric secondary brake				Read Fault Code		Y		
DSS LS		Electric secondary brake				Erase Fault Code		Y		
DSS LS		Electric secondary brake				Live Data		Y		
DSS LS		Electric secondary brake				Actuation Test		Y		
DSS LS		Electric secondary brake				Special Function	Pack Repair	Y		
DSS LS		Radio				Read ECU Information		Y		
DSS LS		Radio				Read Fault Code		Y		
DSS LS		Radio				Erase Fault Code		Y		
DSS LS		Radio				Live Data		Y		
DSS LS		Radio				Actuation Test		Y		
DSS LS		Radio				Special Function	Configuration	Y		
DSS LS		Telematic unit (BT) or audio-navigation				Read ECU Information		Y		
DSS LS		Telematic unit (BT) or audio-navigation				Read Fault Code		Y		
DSS LS		Telematic unit (BT) or audio-navigation				Erase Fault Code		Y		
DSS LS		Telematic unit (BT) or audio-navigation				Live Data		Y		
DSS LS		Telematic unit (BT) or audio-navigation				Actuation Test		Y		
DSS LS		Telematic unit (BT) or audio-navigation				Special Function	Configuration	Y		
DSS LS		Under-inflation detection				Read ECU Information		Y		
DSS LS		Under-inflation detection				Read Fault Code		Y		
DSS LS		Under-inflation detection				Erase Fault Code		Y		
DSS LS		Under-inflation detection				Live Data		Y		
DSS LS		Under-inflation detection				Special Function	Pack Repair	Y		
DSS LS		Service module / Independent telematic unit				Read ECU Information		Y		
DSS LS		Service module / Independent telematic unit				Read Fault Code		Y		
DSS LS		Service module / Independent telematic unit				Erase Fault Code		Y		
DSS LS		Service module / Independent telematic unit				Live Data		Y		
DSS LS		Service module / Independent telematic unit				Actuation Test		Y		
DSS LS		Service module / Independent telematic unit				Special Function	Configuration	Y		
DSS LS		Service module / Independent telematic unit				Special Function	Pack Repair	Y		
DSS LS		Radio amplifier				Read ECU Information		Y		
DSS LS		Radio amplifier				Read Fault Code		Y		
DSS LS		Radio amplifier				Erase Fault Code		Y		
DSS LS		Radio amplifier				Actuation Test		Y		
DSS LS		Radio amplifier				Special Function	Configuration	Y		
DSS LS		Multifunction screen		EMF_A_IDS		Read ECU Information		Y		
DSS LS		Multifunction screen		EMF_A_IDS		Read Fault Code		Y		
DSS LS		Multifunction screen		EMF_A_IDS		Erase Fault Code		Y		
DSS LS		Multifunction screen		EMF_A_IDS		Actuation Test		Y		
DSS LS		Multifunction screen		EMF_A_IDS		Special Function	Configuration	Y		
DSS LS		Multifunction screen		EMF_C_IDS		Read ECU Information		Y		
DSS LS		Multifunction screen		EMF_C_IDS		Read Fault Code		Y		
DSS LS		Multifunction screen		EMF_C_IDS		Erase Fault Code		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for Citroen, NO stands for other areas)	Subsystem (YES stands for Citroen, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
DSS LS		Multifunction screen	EMF C IDS			Actuation Test		Y		
DSS LS		Multifunction screen	EMF C IDS			Special Function	Configuration	Y		
DSS LS		Control panel dot matrix display	COLOR MATRIX SCREEN			Read ECU Information		Y		
DSS LS		Control panel dot matrix display	COLOR MATRIX SCREEN			Read Fault Code		Y		
DSS LS		Control panel dot matrix display	COLOR MATRIX SCREEN			Erase Fault Code		Y		
DSS LS		Control panel dot matrix display	COLOR MATRIX SCREEN			Actuation Test		Y		
DSS LS		Control panel dot matrix display	COLOR MATRIX SCREEN			Special Function	Configuration	Y		
DSS LS		Parking assistance	4 parking assistance sensors			Read ECU Information		Y		
DSS LS		Parking assistance	4 parking assistance sensors			Read Fault Code		Y		
DSS LS		Parking assistance	4 parking assistance sensors			Erase Fault Code		Y		
DSS LS		Parking assistance	4 parking assistance sensors			Live Data		Y		
DSS LS		Parking assistance	4 parking assistance sensors			Actuation Test		Y		
DSS LS		Parking assistance	4 parking assistance sensors			Special Function	Configuration	Y		
DSS LS		Parking assistance	12 parking assistance sensors			Read ECU Information		Y		
DSS LS		Parking assistance	12 parking assistance sensors			Read Fault Code		Y		
DSS LS		Parking assistance	12 parking assistance sensors			Erase Fault Code		Y		
DSS LS		Parking assistance	12 parking assistance sensors			Live Data		Y		
DSS LS		Parking assistance	12 parking assistance sensors			Actuation Test		Y		
DSS LS		Parking assistance	12 parking assistance sensors			Special Function	Configuration	Y		
DSS LS		Controls under the steering wheel				Read ECU Information		Y		
DSS LS		Controls under the steering wheel				Read Fault Code		Y		
DSS LS		Controls under the steering wheel				Erase Fault Code		Y		
DSS LS		Controls under the steering wheel				Live Data		Y		
DSS LS		Controls under the steering wheel				Actuation Test		Y		
DSS LS		Controls under the steering wheel				Special Function	Pack Repair	Y		
DSS LS		Controls on the steering wheel / integral controls steering wheel	Yes			Read ECU Information		Y		
DSS LS		Controls on the steering wheel / integral controls steering wheel	Yes			Read Fault Code		Y		
DSS LS		Controls on the steering wheel / integral controls steering wheel	Yes			Erase Fault Code		Y		
DSS LS		Controls on the steering wheel / integral controls steering wheel	Yes			Live Data		Y		
DSS LS		Controls on the steering wheel / integral controls steering wheel	Yes			Actuation Test		Y		
DSS LS		Controls on the steering wheel / integral controls steering wheel	No			Read ECU Information		Y		
DSS LS		Controls on the steering wheel / integral controls steering wheel	No			Read Fault Code		Y		
DSS LS		Controls on the steering wheel / integral controls steering wheel	No			Erase Fault Code		Y		
DSS LS		Controls on the steering wheel / integral controls steering wheel	No			Live Data		Y		
DSS LS		Controls on the steering wheel / integral controls steering wheel	No			Actuation Test		Y		
DSS LS		Anti-theft alarm				Read ECU Information		Y		
DSS LS		Anti-theft alarm				Read Fault Code		Y		
DSS LS		Anti-theft alarm				Erase Fault Code		Y		
DSS LS		Anti-theft alarm				Live Data		Y		
DSS LS		Anti-theft alarm				Actuation Test		Y		
DSS LS		Air conditioning	RFTA TWO ZONE			Read ECU Information		Y		
DSS LS		Air conditioning	RFTA TWO ZONE			Read Fault Code		Y		
DSS LS		Air conditioning	RFTA TWO ZONE			Erase Fault Code		Y		
DSS LS		Air conditioning	RFTA TWO ZONE			Live Data		Y		
DSS LS		Air conditioning	RFTA TWO ZONE			Actuation Test		Y		
DSS LS		Air conditioning	RFTA TWO ZONE			Special Function	Pack Repair	Y		
DSS LS		Dynamic headlamp height adjuster				Read ECU Information		Y		
DSS LS		Dynamic headlamp height adjuster				Read Fault Code		Y		
DSS LS		Dynamic headlamp height adjuster				Erase Fault Code		Y		
DSS LS		Dynamic headlamp height adjuster				Live Data		Y		
DSS LS		Dynamic headlamp height adjuster				Actuation Test		Y		
DSS LS		Rain and light sensor				Read ECU Information		Y		
DSS LS		Rain and light sensor				Read Fault Code		Y		
DSS LS		Rain and light sensor				Erase Fault Code		Y		
DSS LS		Rain and light sensor				Live Data		Y		
DSS LS		Rain and light sensor				Special Function	Pack Repair	Y		
DSS LS		Instrument panel				Read ECU Information		Y		
DSS LS		Instrument panel				Read Fault Code		Y		
DSS LS		Instrument panel				Erase Fault Code		Y		
DSS LS		Instrument panel				Live Data		Y		
DSS LS		Instrument panel				Actuation Test		Y		
DSS LS		Engine relay unit				Read ECU Information		Y		
DSS LS		Engine relay unit				Read Fault Code		Y		
DSS LS		Engine relay unit				Erase Fault Code		Y		
DSS LS		Engine relay unit				Live Data		Y		
DSS LS		Engine relay unit				Actuation Test		Y		
DSS LS		Engine relay unit				Special Function	Configuration	Y		
D86		Built-in Systems Interface				Read ECU Information		Y		
D86		Built-in Systems Interface				Read Fault Code		Y		
D86		Built-in Systems Interface				Erase Fault Code		Y		
D86		Built-in Systems Interface				Live Data		Y		
D86		Built-in Systems Interface				Actuation Test		Y		
D86		Built-in Systems Interface				Special Function	Maintenance - ISI operating mode	Y		
D86		Built-in Systems Interface				Special Function	Configuration	Y		
D86		Built-in Systems Interface				Special Function	Pack Repair	Y		
D86		Engine management ECU	MEVD17_4.2	MEVD 17.4.2 EURO6 EPSCDIX	BC MEVD 17.4.2 EURO6	Read ECU Information		Y		
D86		Engine management ECU	MEVD17_4.2	MEVD 17.4.2 EURO6 EPSCDIX	BC MEVD 17.4.2 EURO6	Read Fault Code		Y		
D86		Engine management ECU	MEVD17_4.2	MEVD 17.4.2 EURO6 EPSCDIX	BC MEVD 17.4.2 EURO6	Erase Fault Code		Y		
D86		Engine management ECU	MEVD17_4.2	MEVD 17.4.2 EURO6 EPSCDIX	BC MEVD 17.4.2 EURO6	Live Data		Y		
D86		Engine management ECU	MEVD17_4.2	MEVD 17.4.2 EURO6 EPSCDIX	BC MEVD 17.4.2 EURO6	Actuation Test		Y		
D86		Engine management ECU	MEVD17_4.2	MEVD 17.4.2 EURO6 EPSCDIX	BC MEVD 17.4.2 EURO6	Special Function	Pack Repair	Y		
D86		Engine management ECU	MEB17_4.4			Read ECU Information		Y		
D86		Engine management ECU	MEB17_4.4			Read Fault Code		Y		
D86		Engine management ECU	MEB17_4.4			Erase Fault Code		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function reasons	Add (Y/N)	Verification (Y/N)	Remarks
DS6		Engine management ECU	MED17_4_4			Live Data		Y		
DS6		Engine management ECU	MED17_4_4			Actuation Test		Y		
DS6		Engine management ECU	MED17_4_4			Special Function	Pack repair	Y		
DS6		Engine management ECU	MED17_4_4_EPB			Read ECU Information		Y		
DS6		Engine management ECU	MED17_4_4_EPB			Read Fault Code		Y		
DS6		Engine management ECU	MED17_4_4_EPB			Erase Fault Code		Y		
DS6		Engine management ECU	MED17_4_4_EPB			Live Data		Y		
DS6		Engine management ECU	MED17_4_4_EPB			Actuation Test		Y		
DS6		Engine management ECU	MED17_4_4_EPB			Special Function	Pack repair	Y		
DS6		Automatic gearbox or controlled manual gearbox	BVA_AM6_AT6_EB005			Read ECU Information		Y		
DS6		Automatic gearbox or controlled manual gearbox	BVA_AM6_AT6_EB005			Read Fault Code		Y		
DS6		Automatic gearbox or controlled manual gearbox	BVA_AM6_AT6_EB005			Erase Fault Code		Y		
DS6		Automatic gearbox or controlled manual gearbox	BVA_AM6_AT6_EB005			Live Data		Y		
DS6		Automatic gearbox or controlled manual gearbox	BVA_AM6_AT6_EB005			Actuation Test		Y		
DS6		Automatic gearbox or controlled manual gearbox	BVA_AM6_AT6_EB005			Special Function	Configuration	Y		
DS6		Automatic gearbox or controlled manual gearbox	BVA_AM6_AT6_EB005			Special Function	Oil wear counter	Y		
DS6		Automatic gearbox or controlled manual gearbox	BVA_AM6_AT6_EB005			Special Function	Pack Repair	Y		
DS6		Automatic gearbox or controlled manual gearbox	BVA_AM6_AT6_IDS			Read ECU Information		Y		
DS6		Automatic gearbox or controlled manual gearbox	BVA_AM6_AT6_IDS			Read Fault Code		Y		
DS6		Automatic gearbox or controlled manual gearbox	BVA_AM6_AT6_IDS			Erase Fault Code		Y		
DS6		Automatic gearbox or controlled manual gearbox	BVA_AM6_AT6_IDS			Live Data		Y		
DS6		Automatic gearbox or controlled manual gearbox	BVA_AM6_AT6_IDS			Actuation Test		Y		
DS6		Automatic gearbox or controlled manual gearbox	BVA_AM6_AT6_IDS			Special Function	Configuration	Y		
DS6		Automatic gearbox or controlled manual gearbox	BVA_AM6_AT6_IDS			Special Function	Pack Repair	Y		
DS6		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP81			Read ECU Information		Y		
DS6		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP81			Read Fault Code		Y		
DS6		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP81			Erase Fault Code		Y		
DS6		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP81			Live Data		Y		
DS6		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP81			Actuation Test		Y		
DS6		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP81			Special Function	Pack Repair	Y		
DS6		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP90			Read ECU Information		Y		
DS6		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP90			Read Fault Code		Y		
DS6		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP90			Erase Fault Code		Y		
DS6		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP90			Live Data		Y		
DS6		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP90			Actuation Test		Y		
DS6		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP90			Special Function	Pack Repair	Y		
DS6		Air bags and pre-tensioners control unit				Read ECU Information		Y		
DS6		Air bags and pre-tensioners control unit				Read Fault Code		Y		
DS6		Air bags and pre-tensioners control unit				Erase Fault Code		Y		
DS6		Air bags and pre-tensioners control unit				Live Data		Y		
DS6		Air bags and pre-tensioners control unit				Special Function	Configuration	Y		
DS6		Air bags and pre-tensioners control unit				Special Function	Pack Repair	Y		
DS6		Power steering				Read ECU Information		Y		
DS6		Power steering				Read Fault Code		Y		
DS6		Power steering				Erase Fault Code		Y		
DS6		Power steering				Live Data		Y		
DS6		Power steering				Actuation Test		Y		
DS6		Voltage retaining device	DMTR			Read ECU Information		Y		
DS6		Voltage retaining device	DMTR			Read Fault Code		Y		
DS6		Voltage retaining device	DMTR			Erase Fault Code		Y		
DS6		Voltage retaining device	DMTR_DTC0B			Read ECU Information		Y		
DS6		Voltage retaining device	DMTR_DTC0B			Read Fault Code		Y		
DS6		Voltage retaining device	DMTR_DTC0B			Erase Fault Code		Y		
DS6		Multiplexed control panel	MON audio/navigation and automatic air conditioning			Read ECU Information		Y		
DS6		Multiplexed control panel	MON audio/navigation and automatic air conditioning			Read Fault Code		Y		
DS6		Multiplexed control panel	MON audio/navigation and automatic air conditioning			Erase Fault Code		Y		
DS6		Multiplexed control panel	MON audio/navigation and automatic air conditioning			Live Data		Y		
DS6		Multiplexed control panel	MON audio/navigation and automatic air conditioning			Actuation Test		Y		
DS6		Multiplexed control panel	RD45 audio system and automatic air conditioning			Read ECU Information		Y		
DS6		Multiplexed control panel	RD45 audio system and automatic air conditioning			Read Fault Code		Y		
DS6		Multiplexed control panel	RD45 audio system and automatic air conditioning			Erase Fault Code		Y		
DS6		Multiplexed control panel	RD45 audio system and automatic air conditioning			Live Data		Y		
DS6		Multiplexed control panel	RD45 audio system and manual air conditioning			Read ECU Information		Y		
DS6		Multiplexed control panel	RD45 audio system and manual air conditioning			Read Fault Code		Y		
DS6		Multiplexed control panel	RD45 audio system and manual air conditioning			Erase Fault Code		Y		
DS6		Multiplexed control panel	RD45 audio system and manual air conditioning			Live Data		Y		
DS6		Multiplexed control panel	RD45 audio system and manual air conditioning			Actuation Test		Y		
DS6		Supply protection and management unit				Read ECU Information		Y		
DS6		Supply protection and management unit				Read Fault Code		Y		
DS6		Supply protection and management unit				Erase Fault Code		Y		
DS6		Supply protection and management unit				Live Data		Y		
DS6		Electric steering lock				Read ECU Information		Y		
DS6		Electric steering lock				Read Fault Code		Y		
DS6		Electric steering lock				Erase Fault Code		Y		
DS6		Electric steering lock				Live Data		Y		
DS6		Electric steering lock				Actuation Test		Y		
DS6		Electronic key reader				Read ECU Information		Y		
DS6		Electronic key reader				Read Fault Code		Y		
DS6		Electronic key reader				Erase Fault Code		Y		
DS6		Electronic key reader				Live Data		Y		
DS6		Battery charge status unit				Read ECU Information		Y		
DS6		Battery charge status unit				Read Fault Code		Y		
DS6		Battery charge status unit				Erase Fault Code		Y		
DS6		Battery charge status unit				Live Data		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
DS6		Battery charge status unit				Special Function	Configuration	Y		
DS6		Hands-free control unit				Read ECU Information		Y		
DS6		Hands-free control unit				Read Fault Code		Y		
DS6		Hands-free control unit				Erase Fault Code		Y		
DS6		Hands-free control unit				Live Data		Y		
DS6		Hands-free control unit				Actuation Test		Y		
DS6		Hands-free control unit				Special Function	Configuration	Y		
DS6		Hands-free control unit				Special Function	Pack Repair	Y		
DS6		Electric secondary brake				Read ECU Information		Y		
DS6		Electric secondary brake				Read Fault Code		Y		
DS6		Electric secondary brake				Erase Fault Code		Y		
DS6		Electric secondary brake				Live Data		Y		
DS6		Electric secondary brake				Actuation Test		Y		
DS6		Electric secondary brake				Special Function	Pack Repair	Y		
DS6		Telematic unit (OTA) or audio-navigation				Read ECU Information		Y		
DS6		Telematic unit (OTA) or audio-navigation				Read Fault Code		Y		
DS6		Telematic unit (OTA) or audio-navigation				Erase Fault Code		Y		
DS6		Telematic unit (OTA) or audio-navigation				Live Data		Y		
DS6		Telematic unit (OTA) or audio-navigation				Actuation Test		Y		
DS6		Telematic unit (OTA) or audio-navigation				Special Function	Configuration	Y		
DS6		Under-inflation detection				Read ECU Information		Y		
DS6		Under-inflation detection				Read Fault Code		Y		
DS6		Under-inflation detection				Erase Fault Code		Y		
DS6		Under-inflation detection				Live Data		Y		
DS6		Under-inflation detection				Special Function	Pack Repair	Y		
DS6		Service module / Independent telematic unit				Read ECU Information		Y		
DS6		Service module / Independent telematic unit				Read Fault Code		Y		
DS6		Service module / Independent telematic unit				Erase Fault Code		Y		
DS6		Service module / Independent telematic unit				Live Data		Y		
DS6		Service module / Independent telematic unit				Actuation Test		Y		
DS6		Service module / Independent telematic unit				Special Function	Configuration	Y		
DS6		Service module / Independent telematic unit				Special Function	Pack Repair	Y		
DS6		Radio amplifier				Read ECU Information		Y		
DS6		Radio amplifier				Read Fault Code		Y		
DS6		Radio amplifier				Erase Fault Code		Y		
DS6		Radio amplifier				Actuation Test		Y		
DS6		Radio amplifier				Special Function	Configuration	Y		
DS6		Control panel dot matrix display	COLOR MATRIX SCREEN			Read ECU Information		Y		
DS6		Control panel dot matrix display	COLOR MATRIX SCREEN			Read Fault Code		Y		
DS6		Control panel dot matrix display	COLOR MATRIX SCREEN			Erase Fault Code		Y		
DS6		Control panel dot matrix display	COLOR MATRIX SCREEN			Actuation Test		Y		
DS6		Control panel dot matrix display	COLOR MATRIX SCREEN			Special Function	Configuration	Y		
DS6		Parking assistance	4 parking assistance sensors			Read ECU Information		Y		
DS6		Parking assistance	4 parking assistance sensors			Read Fault Code		Y		
DS6		Parking assistance	4 parking assistance sensors			Erase Fault Code		Y		
DS6		Parking assistance	4 parking assistance sensors			Live Data		Y		
DS6		Parking assistance	4 parking assistance sensors			Actuation Test		Y		
DS6		Parking assistance	4 parking assistance sensors			Special Function	Configuration	Y		
DS6		Parking assistance	12 parking assistance sensors			Read ECU Information		Y		
DS6		Parking assistance	12 parking assistance sensors			Read Fault Code		Y		
DS6		Parking assistance	12 parking assistance sensors			Erase Fault Code		Y		
DS6		Parking assistance	12 parking assistance sensors			Live Data		Y		
DS6		Parking assistance	12 parking assistance sensors			Actuation Test		Y		
DS6		Parking assistance	12 parking assistance sensors			Special Function	Configuration	Y		
DS6		Controls under the steering wheel				Read ECU Information		Y		
DS6		Controls under the steering wheel				Read Fault Code		Y		
DS6		Controls under the steering wheel				Erase Fault Code		Y		
DS6		Controls under the steering wheel				Live Data		Y		
DS6		Controls under the steering wheel				Actuation Test		Y		
DS6		Controls under the steering wheel				Special Function	Pack Repair	Y		
DS6		Controls on the steering wheel / integral controls steering wheel	Yes			Read ECU Information		Y		
DS6		Controls on the steering wheel / integral controls steering wheel	Yes			Read Fault Code		Y		
DS6		Controls on the steering wheel / integral controls steering wheel	Yes			Erase Fault Code		Y		
DS6		Controls on the steering wheel / integral controls steering wheel	Yes			Live Data		Y		
DS6		Controls on the steering wheel / integral controls steering wheel	Yes			Actuation Test		Y		
DS6		Controls on the steering wheel / integral controls steering wheel	No			Read ECU Information		Y		
DS6		Controls on the steering wheel / integral controls steering wheel	No			Read Fault Code		Y		
DS6		Controls on the steering wheel / integral controls steering wheel	No			Erase Fault Code		Y		
DS6		Controls on the steering wheel / integral controls steering wheel	No			Live Data		Y		
DS6		Controls on the steering wheel / integral controls steering wheel	No			Actuation Test		Y		
DS6		Anti-theft alarm				Read ECU Information		Y		
DS6		Anti-theft alarm				Read Fault Code		Y		
DS6		Anti-theft alarm				Erase Fault Code		Y		
DS6		Anti-theft alarm				Live Data		Y		
DS6		Anti-theft alarm				Actuation Test		Y		
DS6		Air conditioning	RFPA TWO ZONE			Read ECU Information		Y		
DS6		Air conditioning	RFPA TWO ZONE			Read Fault Code		Y		
DS6		Air conditioning	RFPA TWO ZONE			Erase Fault Code		Y		
DS6		Air conditioning	RFPA TWO ZONE			Live Data		Y		
DS6		Air conditioning	RFPA TWO ZONE			Actuation Test		Y		
DS6		Air conditioning	RFPA TWO ZONE			Special Function	Pack Repair	Y		
DS6		Dynamic headlamp height adjuster				Read ECU Information		Y		
DS6		Dynamic headlamp height adjuster				Read Fault Code		Y		
DS6		Dynamic headlamp height adjuster				Erase Fault Code		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Models	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function reasons	Add (Y/N)	Verification (Y/N)	Remarks
DS6		Dynamic headlamp height adjuster				Live Data		Y		
DS6		Dynamic headlamp height adjuster				Actuation Test		Y		
DS6		Rain and light sensor				Read ECU Information		Y		
DS6		Rain and light sensor				Read Fault Code		Y		
DS6		Rain and light sensor				Erase Fault Code		Y		
DS6		Rain and light sensor				Live Data		Y		
DS6		Rain and light sensor				Special Function	Pack Repair	Y		
DS6		Instrument panel				Read ECU Information		Y		
DS6		Instrument panel				Read Fault Code		Y		
DS6		Instrument panel				Erase Fault Code		Y		
DS6		Instrument panel				Live Data		Y		
DS6		Instrument panel				Actuation Test		Y		
DS6		Engine relay unit				Read ECU Information		Y		
DS6		Engine relay unit				Read Fault Code		Y		
DS6		Engine relay unit				Erase Fault Code		Y		
DS6		Engine relay unit				Live Data		Y		
DS6		Engine relay unit				Actuation Test		Y		
DS6		Engine relay unit				Special Function	Configuration	Y		
DS6		Signalling fuse box				Read ECU Information		Y		
DS6		Signalling fuse box				Read Fault Code		Y		
DS6		Signalling fuse box				Erase Fault Code		Y		
DS6		Signalling fuse box				Live Data		Y		
DS6		Signalling fuse box				Actuation Test		Y		
DS6		Traction control mode selector				Read ECU Information		Y		
DS6		Traction control mode selector				Read Fault Code		Y		
DS6		Traction control mode selector				Live Data		Y		
DS6		Traction control mode selector				Actuation Test		Y		
DS6		Motorised Boot ECU				Read ECU Information		Y		
DS6		Motorised Boot ECU				Read Fault Code		Y		
DS6		Motorised Boot ECU				Erase Fault Code		Y		
DS6		Motorised Boot ECU				Live Data		Y		
DS6		Motorised Boot ECU				Actuation Test		Y		
DS6		Motorised Boot ECU				Special Function	Configuration	Y		
BERLINGO (1996-2002)	Production date before 4 June 2000	Engine ECU	Petrol engine	1.1L HDV/HDZ BOSCH MA3.1		Read ECU Information		Y		
BERLINGO (1996-2002)	Production date before 4 June 2000	Engine ECU	Petrol engine	1.1L HDV/HDZ BOSCH MA3.1		Read Fault Code		Y		
BERLINGO (1996-2002)	Production date before 4 June 2000	Engine ECU	Petrol engine	1.1L HDV/HDZ BOSCH MA3.1		Erase Fault Code		Y		
BERLINGO (1996-2002)	Production date before 4 June 2000	Engine ECU	Petrol engine	1.1L HDV/HDZ BOSCH MA3.1		Live Data		Y		
BERLINGO (1996-2002)	Production date before 4 June 2000	Engine ECU	Petrol engine	1.4L KFX SAGER SL96		Read ECU Information		Y		
BERLINGO (1996-2002)	Production date before 4 June 2000	Engine ECU	Petrol engine	1.4L KFX SAGER SL96		Read Fault Code		Y		
BERLINGO (1996-2002)	Production date before 4 June 2000	Engine ECU	Petrol engine	1.4L KFX SAGER SL96		Erase Fault Code		Y		
BERLINGO (1996-2002)	Production date before 4 June 2000	Engine ECU	Petrol engine	1.4L KFX SAGER SL96		Live Data		Y		
BERLINGO (1996-2002)	Production date before 4 June 2000	Engine ECU	Petrol engine	1.4L KFX MUIAP		Read Fault Code		Y		
BERLINGO (1996-2002)	Production date before 4 June 2000	Engine ECU	Petrol engine	1.4L KFX MUIAP		Erase Fault Code		Y		
BERLINGO (1996-2002)	Production date before 4 June 2000	Engine ECU	Petrol engine	1.4L KFX BOSCH MP7.3		Read ECU Information		Y		
BERLINGO (1996-2002)	Production date before 4 June 2000	Engine ECU	Petrol engine	1.4L KFX BOSCH MP7.3		Read Fault Code		Y		
BERLINGO (1996-2002)	Production date before 4 June 2000	Engine ECU	Petrol engine	1.4L KFX BOSCH MP7.3		Erase Fault Code		Y		
BERLINGO (1996-2002)	Production date before 4 June 2000	Engine ECU	Petrol engine	1.4L KFX BOSCH MP7.3		Live Data		Y		
BERLINGO (1996-2002)	Production date before 4 June 2000	Engine ECU	Petrol engine	1.4L KFX BOSCH MP7.3		Actuation Test		Y		
BERLINGO (1996-2002)	Production date before 4 June 2000	Engine ECU	Petrol engine	1.8L LFX MUIAP		Read Fault Code		Y		
BERLINGO (1996-2002)	Production date before 4 June 2000	Engine ECU	Petrol engine	1.8L LFX MUIAP		Erase Fault Code		Y		
BERLINGO (1996-2002)	Production date before 4 June 2000	Engine ECU	Diesel engine	2.0L RHY BOSCH HDJ15C2		Read ECU Information		Y		
BERLINGO (1996-2002)	Production date before 4 June 2000	Engine ECU	Diesel engine	2.0L RHY BOSCH HDJ15C2		Live Data		Y		
BERLINGO (1996-2002)	Production date before 4 June 2000	Anti-lock brake system	ABS			Read ECU Information		Y		
BERLINGO (1996-2002)	Production date before 4 June 2000	Anti-lock brake system	ABS			Read Fault Code		Y		
BERLINGO (1996-2002)	Production date before 4 June 2000	Anti-lock brake system	ABS			Erase Fault Code		Y		
BERLINGO (1996-2002)	Production date before 4 June 2000	Anti-lock brake system	ABS			Live Data		Y		
BERLINGO (1996-2002)	Production date before 4 June 2000	Anti-lock brake system	ABS			Read ECU Information		Y		
BERLINGO (1996-2002)	Production date before 4 June 2000	Anti-lock brake system	ABS			Read Fault Code		Y		
BERLINGO (1996-2002)	Production date before 4 June 2000	Anti-lock brake system	ABS			Erase Fault Code		Y		
BERLINGO (1996-2002)	Production date before 4 June 2000	Anti-lock brake system	ABS			Live Data		Y		
BERLINGO (1996-2002)	Production date before 4 June 2000	Anti-lock brake system	ABS			Special Function	Bleeding	Y		
BERLINGO (1996-2002)	Production date before 4 June 2000	Airbag	Airbag/TW			Read ECU Information		Y		
BERLINGO (1996-2002)	Production date before 4 June 2000	Airbag	Airbag/TW			Read Fault Code		Y		
BERLINGO (1996-2002)	Production date before 4 June 2000	Airbag	Airbag/TW			Erase Fault Code		Y		
BERLINGO (1996-2002)	Production date before 4 June 2000	Airbag	Airbag/AUTOLIV			Read Fault Code		Y		
BERLINGO (1996-2002)	Production date before 4 June 2000	Airbag	Airbag/AUTOLIV			Erase Fault Code		Y		
BERLINGO (1996-2002)	Production date before 4 June 2000	Electrical vehicle				Read ECU Information		Y		
BERLINGO (1996-2002)	Production date before 4 June 2000	Electrical vehicle				Read Fault Code		Y		
BERLINGO (1996-2002)	Production date before 4 June 2000	Electrical vehicle				Erase Fault Code		Y		
BERLINGO (1996-2002)	Production date before 4 June 2000	Electrical vehicle				Live Data		Y		
BERLINGO (1996-2002)	Production date before 4 June 2000	Electrical vehicle				Actuation Test		Y		
BERLINGO (1996-2002)	Production date before 4 June 2000	Additional heating				Read ECU Information		Y		
BERLINGO (1996-2002)	Production date before 4 June 2000	Additional heating				Erase Fault Code		Y		
BERLINGO (1996-2002)	Production date before 4 June 2000	Additional heating				Live Data		Y		
BERLINGO (1996-2002)	Production date before 4 June 2000	Additional heating				Actuation Test		Y		
BERLINGO (1996-2002)	Production date before 4 June 2000	Transponder				Read ECU Information		Y		
BERLINGO (1996-2002)	Production date before 4 June 2000	Transponder				Read Fault Code		Y		
BERLINGO (1996-2002)	Production date before 4 June 2000	Transponder				Erase Fault Code		Y		
BERLINGO (1996-2002)	Production date before 4 June 2000	Transponder				Live Data		Y		
BERLINGO (1996-2002)	Production date before 4 June 2000	Code immobiliser				Read ECU Information		Y		
BERLINGO (1996-2002)	Production date before 4 June 2000	Code immobiliser				Read Fault Code		Y		
BERLINGO (1996-2002)	Production date before 4 June 2000	Code immobiliser				Erase Fault Code		Y		
BERLINGO (1996-2002)	Production date before 4 June 2000	Code immobiliser				Live Data		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
BERLINGO (2002-2008)		Engine ECU	Petrol engine	TUSA J34P		Read ECU Information		Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	TUSA J34P		Read Fault Code		Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	TUSA J34P		Erase Fault Code		Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	TUSA J34P		Live Data		Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	TUSA J34P		Actuation Test		Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	TUSA J34P		Special Function	Initialize auto-adaptives	Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	2.0L BFN M48P		Read ECU Information		Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	2.0L BFN M48P		Read Fault Code		Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	2.0L BFN M48P		Erase Fault Code		Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	2.0L BFN M48P		Live Data		Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	2.0L BFN M48P		Actuation Test		Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	2.0L BFN M48P		Special Function	Initialisation of the autoadaptive values	Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	NFU BOSCH ME744		Read ECU Information		Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	NFU BOSCH ME744		Read Fault Code		Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	NFU BOSCH ME744		Erase Fault Code		Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	NFU BOSCH ME744		Live Data		Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	NFU BOSCH ME744		Actuation Test		Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	NFU BOSCH ME744		Special Function	Initialisation of auto-adaptation	Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	NFU BOSCH ME744		Special Function	Matching	Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	KFV SAGEM S2000P1		Read ECU Information		Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	KFV SAGEM S2000P1		Read Fault Code		Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	KFV SAGEM S2000P1		Erase Fault Code		Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	KFV SAGEM S2000P1		Live Data		Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	KFV SAGEM S2000P1		Read ECU Information		Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	KFV SAGEM S2000P1		Read Fault Code		Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	KFV SAGEM S2000P1		Erase Fault Code		Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	KFV SAGEM S2000P1		Live Data		Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	KFV SAGEM S2000P2		Read ECU Information		Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	KFV SAGEM S2000P2		Read Fault Code		Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	KFV SAGEM S2000P2		Erase Fault Code		Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	KFV SAGEM S2000P2		Live Data		Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	KFV SAGEM S2000P2		Read ECU Information		Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	KFV SAGEM S2000P2		Erase Fault Code		Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	KFV SAGEM S2000P2		Live Data		Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	NFS BOSCH ME745		Read ECU Information		Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	NFS BOSCH ME745		Read Fault Code		Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	NFS BOSCH ME745		Erase Fault Code		Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	NFS BOSCH ME745		Live Data		Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	NFS BOSCH ME745		Actuation Test		Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	NFS BOSCH ME745		Special Function	Initialize auto-adaptives	Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	NFU BOSCH ME745		Read ECU Information		Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	NFU BOSCH ME745		Erase Fault Code		Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	NFU BOSCH ME745		Live Data		Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	NFU BOSCH ME745		Actuation Test		Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	NFU BOSCH ME745		Special Function	Initialize auto-adaptives	Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	NGA BOSCH ME745		Read ECU Information		Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	NGA BOSCH ME745		Read Fault Code		Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	NGA BOSCH ME745		Erase Fault Code		Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	NGA BOSCH ME745		Live Data		Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	NGA BOSCH ME745		Actuation Test		Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	NGA BOSCH ME745		Special Function	Initialize auto-adaptives	Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	NFR BOSCH ME745		Read ECU Information		Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	NFR BOSCH ME745		Read Fault Code		Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	NFR BOSCH ME745		Erase Fault Code		Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	NFR BOSCH ME745		Live Data		Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	NFR BOSCH ME745		Actuation Test		Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	NFR BOSCH ME745		Special Function	Initialize auto-adaptives	Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	OM6/N6B/NFU) BOSCH ME749		Read ECU Information		Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	OM6/N6B/NFU) BOSCH ME749		Read Fault Code		Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	OM6/N6B/NFU) BOSCH ME749		Erase Fault Code		Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	OM6/N6B/NFU) BOSCH ME749		Live Data		Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	OM6/N6B/NFU) BOSCH ME749		Actuation Test		Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	OM6/N6B/NFU) BOSCH ME749		Special Function	Initialisation of auto-adaptation	Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	OM6/N6B/NFU) BOSCH ME749 Bio Flex		Read ECU Information		Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	OM6/N6B/NFU) BOSCH ME749 Bio Flex		Read Fault Code		Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	OM6/N6B/NFU) BOSCH ME749 Bio Flex		Erase Fault Code		Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	OM6/N6B/NFU) BOSCH ME749 Bio Flex		Live Data		Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	OM6/N6B/NFU) BOSCH ME749 Bio Flex		Actuation Test		Y		
BERLINGO (2002-2008)		Engine ECU	Petrol engine	OM6/N6B/NFU) BOSCH ME749 Bio Flex		Special Function	Initialisation of auto-adaptation	Y		
BERLINGO (2002-2008)		Engine ECU	Diesel engine	9EL BOSCH EDC16C34 DV6ATED4		Read ECU Information		Y		
BERLINGO (2002-2008)		Engine ECU	Diesel engine	9EL BOSCH EDC16C34 DV6ATED4		Read Fault Code		Y		
BERLINGO (2002-2008)		Engine ECU	Diesel engine	9EL BOSCH EDC16C34 DV6ATED4		Live Data		Y		
BERLINGO (2002-2008)		Engine ECU	Diesel engine	9EL BOSCH EDC16C34 DV6ATED4		Actuation Test		Y		
BERLINGO (2002-2008)		Engine ECU	Diesel engine	9EL BOSCH EDC16C34 DV6ATED4		Special Function	Specific operation for maintenance and part replacement	Y		
BERLINGO (2002-2008)		Engine ECU	Diesel engine	9HW BOSCH EDC16C34 DV6B		Read ECU Information		Y		
BERLINGO (2002-2008)		Engine ECU	Diesel engine	9HW BOSCH EDC16C34 DV6B		Read Fault Code		Y		
BERLINGO (2002-2008)		Engine ECU	Diesel engine	9HW BOSCH EDC16C34 DV6B		Erase Fault Code		Y		
BERLINGO (2002-2008)		Engine ECU	Diesel engine	9HW BOSCH EDC16C34 DV6B		Live Data		Y		
BERLINGO (2002-2008)		Engine ECU	Diesel engine	9HW BOSCH EDC16C34 DV6B		Actuation Test		Y		
BERLINGO (2002-2008)		Engine ECU	Diesel engine	9HW BOSCH EDC16C34 DV6B		Special Function	Specific operation for maintenance and part replacement	Y		
BERLINGO (2002-2008)		Engine ECU	Diesel engine	RIV SIEMENS S10801		Read ECU Information		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function reasons	Add (Y/N)	Verification (Y/N)	Remarks
BERLINGO (2002-2008)		Engine ECU	Diesel engine	RHY SIEMENS S1801		Read Fault Code		Y		
BERLINGO (2002-2008)		Engine ECU	Diesel engine	RHY SIEMENS S1801		Erase Fault Code		Y		
BERLINGO (2002-2008)		Engine ECU	Diesel engine	RHY SIEMENS S1801		Live Data		Y		
BERLINGO (2002-2008)		Engine ECU	Diesel engine	RHY SIEMENS S1801		Actuation Test		Y		
BERLINGO (2002-2008)		Engine ECU	Diesel engine	RJY DCN2		Read ECU Information		Y		
BERLINGO (2002-2008)		Engine ECU	Diesel engine	RJY DCN2		Read Fault Code		Y		
BERLINGO (2002-2008)		Engine ECU	Diesel engine	RJY DCN2		Erase Fault Code		Y		
BERLINGO (2002-2008)		Engine ECU	Diesel engine	RJY DCN2		Live Data		Y		
BERLINGO (2002-2008)		Engine ECU	Diesel engine	RJY DCN2		Actuation Test		Y		
BERLINGO (2002-2008)		Engine ECU	Diesel engine	98J EDC17C10.BR2 - DWBTEEM - 92 CY		Read ECU Information		Y		
BERLINGO (2002-2008)		Engine ECU	Diesel engine	98J EDC17C10.BR2 - DWBTEEM - 92 CY		Read Fault Code		Y		
BERLINGO (2002-2008)		Engine ECU	Diesel engine	98J EDC17C10.BR2 - DWBTEEM - 92 CY		Erase Fault Code		Y		
BERLINGO (2002-2008)		Engine ECU	Diesel engine	98J EDC17C10.BR2 - DWBTEEM - 92 CY		Live Data		Y		
BERLINGO (2002-2008)		Engine ECU	Diesel engine	98J EDC17C10.BR2 - DWBTEEM - 92 CY		Special Function	Particulate filter after sales operation	Y		
BERLINGO (2002-2008)		Engine ECU	Diesel engine	98K EDC17C10.BR2 - DWBTEEM - 75 CY		Read ECU Information		Y		
BERLINGO (2002-2008)		Engine ECU	Diesel engine	98K EDC17C10.BR2 - DWBTEEM - 75 CY		Read Fault Code		Y		
BERLINGO (2002-2008)		Engine ECU	Diesel engine	98K EDC17C10.BR2 - DWBTEEM - 75 CY		Erase Fault Code		Y		
BERLINGO (2002-2008)		Engine ECU	Diesel engine	98K EDC17C10.BR2 - DWBTEEM - 75 CY		Live Data		Y		
BERLINGO (2002-2008)		Engine ECU	Diesel engine	98K EDC17C10.BR2 - DWBTEEM - 75 CY		Special Function	Particulate filter after sales operation	Y		
BERLINGO (2002-2008)		Engine ECU	Diesel engine	98E EDC17C10.BR2 - DWBTEEM - 89 CY		Read ECU Information		Y		
BERLINGO (2002-2008)		Engine ECU	Diesel engine	98E EDC17C10.BR2 - DWBTEEM - 89 CY		Read Fault Code		Y		
BERLINGO (2002-2008)		Engine ECU	Diesel engine	98E EDC17C10.BR2 - DWBTEEM - 89 CY		Erase Fault Code		Y		
BERLINGO (2002-2008)		Engine ECU	Diesel engine	98E EDC17C10.BR2 - DWBTEEM - 89 CY		Live Data		Y		
BERLINGO (2002-2008)		Engine ECU	Diesel engine	98E EDC17C10.BR2 - DWBTEEM - 89 CY		Special Function	Particulate filter after sales operation	Y		
BERLINGO (2002-2008)		Anti-lock brake system		ABS.1 BOSCH		Read ECU Information		Y		
BERLINGO (2002-2008)		Anti-lock brake system		ABS.1 BOSCH		Read Fault Code		Y		
BERLINGO (2002-2008)		Anti-lock brake system		ABS.1 BOSCH		Erase Fault Code		Y		
BERLINGO (2002-2008)		Anti-lock brake system		ABS.1 BOSCH		Live Data		Y		
BERLINGO (2002-2008)		Anti-lock brake system		ABS.1 BOSCH		Special Function	Bleeding	Y		
BERLINGO (2002-2008)		Anti-lock brake system		ABS.1 BOSCH		Read ECU Information		Y		
BERLINGO (2002-2008)		Anti-lock brake system		ABS.1 BOSCH		Read Fault Code		Y		
BERLINGO (2002-2008)		Anti-lock brake system		ABS.1 BOSCH		Erase Fault Code		Y		
BERLINGO (2002-2008)		Anti-lock brake system		ABS.1 BOSCH		Live Data		Y		
BERLINGO (2002-2008)		Anti-lock brake system		ABS.1 BOSCH		Actuation Test		Y		
BERLINGO (2002-2008)		Anti-lock brake system		ABS.3		Read ECU Information		Y		
BERLINGO (2002-2008)		Anti-lock brake system		ABS.3		Read Fault Code		Y		
BERLINGO (2002-2008)		Anti-lock brake system		ABS.3		Erase Fault Code		Y		
BERLINGO (2002-2008)		Anti-lock brake system		ABS.3		Live Data		Y		
BERLINGO (2002-2008)		Anti-lock brake system		ABS.3		Special Function	Bleeding	Y		
BERLINGO (2002-2008)		Anti-lock brake system		ESPR.1 BOSCH		Read ECU Information		Y		
BERLINGO (2002-2008)		Anti-lock brake system		ESPR.1 BOSCH		Read Fault Code		Y		
BERLINGO (2002-2008)		Anti-lock brake system		ESPR.1 BOSCH		Erase Fault Code		Y		
BERLINGO (2002-2008)		Anti-lock brake system		ESPR.1 BOSCH		Live Data		Y		
BERLINGO (2002-2008)		Anti-lock brake system		ESPR.1 BOSCH		Special Function	Bleeding	Y		
BERLINGO (2002-2008)		Anti-lock brake system		ESP_BOSCH.7		Read ECU Information		Y		
BERLINGO (2002-2008)		Anti-lock brake system		ESP_BOSCH.7		Read Fault Code		Y		
BERLINGO (2002-2008)		Anti-lock brake system		ESP_BOSCH.7		Erase Fault Code		Y		
BERLINGO (2002-2008)		Anti-lock brake system		ESP_BOSCH.7		Live Data		Y		
BERLINGO (2002-2008)		Anti-lock brake system		ESP_BOSCH.7		Actuation Test		Y		
BERLINGO (2002-2008)		Anti-lock brake system		ESP_BOSCH.7		Special Function	Bleeding	Y		
BERLINGO (2002-2008)		Anti-lock brake system		ESPR_BOSCH		Read ECU Information		Y		
BERLINGO (2002-2008)		Anti-lock brake system		ESPR_BOSCH		Read Fault Code		Y		
BERLINGO (2002-2008)		Anti-lock brake system		ESPR_BOSCH		Erase Fault Code		Y		
BERLINGO (2002-2008)		Anti-lock brake system		ESPR_BOSCH		Live Data		Y		
BERLINGO (2002-2008)		Anti-lock brake system		ESPR_BOSCH		Actuation Test		Y		
BERLINGO (2002-2008)		Anti-lock brake system		ESPR_BOSCH		Special Function	Bleeding	Y		
BERLINGO (2002-2008)		Airbag				Read ECU Information		Y		
BERLINGO (2002-2008)		Airbag				Read Fault Code		Y		
BERLINGO (2002-2008)		Airbag				Erase Fault Code		Y		
BERLINGO (2002-2008)		Built-in Systems Interface				Read ECU Information		Y		
BERLINGO (2002-2008)		Built-in Systems Interface				Read Fault Code		Y		
BERLINGO (2002-2008)		Built-in Systems Interface				Erase Fault Code		Y		
BERLINGO (2002-2008)		Built-in Systems Interface				Live Data		Y		
BERLINGO (2002-2008)		Built-in Systems Interface				Special Function	Maintenance-BSI operating mode	Y		
BERLINGO (2002-2008)		Built-in Systems Interface				Special Function	Key programming	Y		
BERLINGO (2002-2008)		Instrument panel				Read ECU Information		Y		
BERLINGO (2002-2008)		Instrument panel				Read Fault Code		Y		
BERLINGO (2002-2008)		Instrument panel				Erase Fault Code		Y		
BERLINGO (2002-2008)		Instrument panel				Live Data		Y		
BERLINGO (2002-2008)		Instrument panel				Actuation Test		Y		
BERLINGO (2002-2008)		Radio post-equipment		Radio post-equipment		Read ECU Information		Y		
BERLINGO (2002-2008)		Radio post-equipment		Radio post-equipment		Read Fault Code		Y		
BERLINGO (2002-2008)		Radio post-equipment		Radio post-equipment		Erase Fault Code		Y		
BERLINGO (2002-2008)		Radio post-equipment		Radio post-equipment		Live Data		Y		
BERLINGO (2002-2008)		Radio post-equipment		Radio post-equipment		Actuation Test		Y		
BERLINGO (2002-2008)		Radio post-equipment		Radio post-equipment Wire		Read ECU Information		Y		
BERLINGO (2002-2008)		Radio post-equipment		Radio post-equipment Wire		Read Fault Code		Y		
BERLINGO (2002-2008)		Radio post-equipment		Radio post-equipment Wire		Erase Fault Code		Y		
BERLINGO (2002-2008)		Radio post-equipment		Radio post-equipment Wire		Live Data		Y		
BERLINGO (2002-2008)		CD player				Read ECU Information		Y		
BERLINGO (2002-2008)		CD player				Read Fault Code		Y		
BERLINGO (2002-2008)		CD player				Erase Fault Code		Y		
BERLINGO (2002-2008)		CD player				Live Data		Y		
BERLINGO (2002-2008)		CD player				Actuation Test		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function reasons	Add (Y/N)	Verification (Y/N)	Remarks
BERLINGO (2002-2008)		Parking assistance				Read ECU Information		Y		
BERLINGO (2002-2008)		Parking assistance				Live Data		Y		
BERLINGO (2002-2008)		Parking assistance				Actuation Test		Y		
BERLINGO (2002-2008)		Alarm				Read ECU Information		Y		
BERLINGO (2002-2008)		Alarm				Actuation Test		Y		
BERLINGO (2002-2008)		Switch module at the steering wheel				Read ECU Information		Y		
BERLINGO (2002-2008)		Switch module at the steering wheel				Live Data		Y		
BERLINGO (2002-2008)		Rain sensor / Brightness				Read ECU Information		Y		
BERLINGO (2002-2008)		Display or Telematics	Multifunction display/SGEM A			Read ECU Information		Y		
BERLINGO (2002-2008)		Display or Telematics	Multifunction display/SGEM A			Read Fault Code		Y		
BERLINGO (2002-2008)		Display or Telematics	Multifunction display/SGEM A			Erase Fault Code		Y		
BERLINGO (2002-2008)		Display or Telematics	Multifunction display/SGEM A			Live Data		Y		
BERLINGO (2002-2008)		Display or Telematics	Multifunction display/SGEM A			Actuation Test		Y		
BERLINGO (2002-2008)		Display or Telematics	Multifunction display/SGEM B			Read ECU Information		Y		
BERLINGO (2002-2008)		Display or Telematics	Multifunction display/SGEM B			Read Fault Code		Y		
BERLINGO (2002-2008)		Display or Telematics	Multifunction display/SGEM B			Erase Fault Code		Y		
BERLINGO (2002-2008)		Display or Telematics	Multifunction display/SGEM B			Live Data		Y		
BERLINGO (2002-2008)		Display or Telematics	Multifunction display/SGEM B			Actuation Test		Y		
BERLINGO (2002-2008)		Display or Telematics	Telematics unit			Read ECU Information		Y		
BERLINGO (2002-2008)		Display or Telematics	Telematics unit			Read Fault Code		Y		
BERLINGO (2002-2008)		Display or Telematics	Telematics unit			Erase Fault Code		Y		
BERLINGO (2002-2008)		Display or Telematics	Telematics unit			Live Data		Y		
BERLINGO (2002-2008)		Display or Telematics	Telematics unit			Actuation Test		Y		
BERLINGO (2002-2008)		Gas injection				Read ECU Information		Y		
BERLINGO (2002-2008)		Gas injection				Read Fault Code		Y		
BERLINGO (2002-2008)		Gas injection				Erase Fault Code		Y		
BERLINGO (2002-2008)		Gas injection				Live Data		Y		
BERLINGO (2002-2008)		Additional heating				Read ECU Information		Y		
BERLINGO (2002-2008)		Additional heating				Read Fault Code		Y		
BERLINGO (2002-2008)		Additional heating				Erase Fault Code		Y		
BERLINGO (2002-2008)		Additional heating				Live Data		Y		
BERLINGO (2002-2008)		Additional heating				Actuation Test		Y		
BERLINGO (2002-2008)		Service module				Read ECU Information		Y		
BERLINGO (2002-2008)		Service module				Read Fault Code		Y		
BERLINGO (2002-2008)		Service module				Erase Fault Code		Y		
BERLINGO (2002-2008)		Service module				Live Data		Y		
BERLINGO (2002-2008)		Learning				Special Function	Key programming	Y		
BERLINGO (2002-2008)		Calibration of the steering wheel angle sensor : C2, C3, C3 pluraliel, New Look C5 with ESP M60ESP 8 & I				Special Function	Steering wheel angle sensor calibration	Y		
BERLINGO (2002-2008)		Calibration of the steering wheel angle sensor : C2, C3, C3 pluraliel, New Look C5 with ESP M60ESP BOSCH 7				Special Function	Steering wheel angle sensor calibration	Y		
BERLINGO (2002-2008)		Calibration of the steering wheel angle sensor : C2, C3, C3 pluraliel, New Look C5 with ESP M60ESP BOSCH 8				Special Function	Steering wheel angle sensor calibration	Y		
BERLINGO (M69)		Built-in Systems Interface				Read ECU Information		Y		
BERLINGO (M69)		Built-in Systems Interface				Read Fault Code		Y		
BERLINGO (M69)		Built-in Systems Interface				Erase Fault Code		Y		
BERLINGO (M69)		Built-in Systems Interface				Special Function	Maintenance/BSI operating mode	Y		
BERLINGO (M69)		Built-in Systems Interface				Special Function	Pack repair	Y		
BERLINGO (M69)		Engine ECU	Petrol engine	ME749_ECU_NFP		Read ECU Information		Y		
BERLINGO (M69)		Engine ECU	Petrol engine	ME749_ECU_NFP		Read Fault Code		Y		
BERLINGO (M69)		Engine ECU	Petrol engine	ME749_ECU_NFP		Erase Fault Code		Y		
BERLINGO (M69)		Engine ECU	Petrol engine	ME749_ECU_NFP		Live Data		Y		
BERLINGO (M69)		Engine ECU	Petrol engine	ME749_ECU_NFP		Actuation Test		Y		
BERLINGO (M69)		Engine ECU	Petrol engine	ME749_ECU_NFP		Special Function	Pack repair	Y		
BERLINGO (M69)		Engine ECU	Petrol engine	ME749_ECU_NFN		Read ECU Information		Y		
BERLINGO (M69)		Engine ECU	Petrol engine	ME749_ECU_NFN		Read Fault Code		Y		
BERLINGO (M69)		Engine ECU	Petrol engine	ME749_ECU_NFN		Erase Fault Code		Y		
BERLINGO (M69)		Engine ECU	Petrol engine	ME749_ECU_NFN		Live Data		Y		
BERLINGO (M69)		Engine ECU	Petrol engine	ME749_ECU_NFN		Actuation Test		Y		
BERLINGO (M69)		Engine ECU	Petrol engine	ME749_ECU_NFN		Special Function	Pack repair	Y		
BERLINGO (M69)		Engine ECU	Diesel engine	9HU - DV60TEHM - 90 CV		Read ECU Information		Y		
BERLINGO (M69)		Engine ECU	Diesel engine	9HU - DV60TEHM - 90 CV		Read Fault Code		Y		
BERLINGO (M69)		Engine ECU	Diesel engine	9HU - DV60TEHM - 90 CV		Erase Fault Code		Y		
BERLINGO (M69)		Engine ECU	Diesel engine	9HU - DV60TEHM - 90 CV		Live Data		Y		
BERLINGO (M69)		Engine ECU	Diesel engine	9HU - DV60TEHM - 90 CV		Actuation Test		Y		
BERLINGO (M69)		Engine ECU	Diesel engine	9HU - DV60TEHM - 90 CV		Special Function	Configuration	Y		
BERLINGO (M69)		Engine ECU	Diesel engine	9HU - DV60TEHM - 90 CV		Special Function	Pack repair	Y		
BERLINGO (M69)		Engine ECU	Diesel engine	9HE - DV60EM - 89 CV		Read ECU Information		Y		
BERLINGO (M69)		Engine ECU	Diesel engine	9HE - DV60EM - 89 CV		Read Fault Code		Y		
BERLINGO (M69)		Engine ECU	Diesel engine	9HE - DV60EM - 89 CV		Erase Fault Code		Y		
BERLINGO (M69)		Engine ECU	Diesel engine	9HE - DV60EM - 89 CV		Live Data		Y		
BERLINGO (M69)		Engine ECU	Diesel engine	9HE - DV60EM - 89 CV		Actuation Test		Y		
BERLINGO (M69)		Engine ECU	Diesel engine	9HE - DV60EM - 89 CV		Special Function	Configuration	Y		
BERLINGO (M69)		Engine ECU	Diesel engine	9HE - DV60EM - 89 CV		Special Function	Pack repair	Y		
BERLINGO (M69)		Engine ECU	Diesel engine	9HE - DV60TEHM - 75 CV		Read ECU Information		Y		
BERLINGO (M69)		Engine ECU	Diesel engine	9HE - DV60TEHM - 75 CV		Read Fault Code		Y		
BERLINGO (M69)		Engine ECU	Diesel engine	9HE - DV60TEHM - 75 CV		Erase Fault Code		Y		
BERLINGO (M69)		Engine ECU	Diesel engine	9HE - DV60TEHM - 75 CV		Live Data		Y		
BERLINGO (M69)		Engine ECU	Diesel engine	9HE - DV60TEHM - 75 CV		Actuation Test		Y		
BERLINGO (M69)		Engine ECU	Diesel engine	9HE - DV60TEHM - 75 CV		Special Function	Configuration	Y		
BERLINGO (M69)		Engine ECU	Diesel engine	9HE - DV60TEHM - 75 CV		Special Function	Pack repair	Y		
BERLINGO (M69)		ABS/Electronic stability program				Read ECU Information		Y		
BERLINGO (M69)		ABS/Electronic stability program				Read Fault Code		Y		
BERLINGO (M69)		ABS/Electronic stability program				Erase Fault Code		Y		
BERLINGO (M69)		ABS/Electronic stability program				Live Data		Y		
BERLINGO (M69)		ABS/Electronic stability program				Actuation Test		Y		
BERLINGO (M69)		ABS/Electronic stability program				Special Function	Pack repair	Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Models	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
BERLINGO (M69)		Airbag				Read ECU Information		Y		
BERLINGO (M69)		Airbag				Read Fault Code		Y		
BERLINGO (M69)		Airbag				Erase Fault Code		Y		
BERLINGO (M69)		Airbag				Live Data		Y		
BERLINGO (M69)		Instrument panel				Read ECU Information		Y		
BERLINGO (M69)		Instrument panel				Read Fault Code		Y		
BERLINGO (M69)		Instrument panel				Erase Fault Code		Y		
BERLINGO (M69)		Instrument panel				Live Data		Y		
BERLINGO (M69)		Instrument panel				Actuation Test		Y		
BERLINGO (M69)		Controls under the steering wheel				Read ECU Information		Y		
BERLINGO (M69)		Controls under the steering wheel				Read Fault Code		Y		
BERLINGO (M69)		Controls under the steering wheel				Erase Fault Code		Y		
BERLINGO (M69)		Controls under the steering wheel				Live Data		Y		
BERLINGO (M69)		Controls under the steering wheel				Actuation Test		Y		
BERLINGO (M69)		Telematic unit (OTA) or audio/navigation				Read ECU Information		Y		
BERLINGO (M69)		Telematic unit (OTA) or audio/navigation				Read Fault Code		Y		
BERLINGO (M69)		Telematic unit (OTA) or audio/navigation				Erase Fault Code		Y		
BERLINGO (M69)		Telematic unit (OTA) or audio/navigation				Live Data		Y		
BERLINGO (M69)		Telematic unit (OTA) or audio/navigation				Actuation Test		Y		
BERLINGO (M69)		Radio				Read ECU Information		Y		
BERLINGO (M69)		Radio				Read Fault Code		Y		
BERLINGO (M69)		Radio				Erase Fault Code		Y		
BERLINGO (M69)		Radio				Live Data		Y		
BERLINGO (M69)		Radio				Actuation Test		Y		
BERLINGO (D9)		BSI (Built-in System Interface)				Read ECU Information		Y		
BERLINGO (D9)		BSI (Built-in System Interface)				Read Fault Code		Y		
BERLINGO (D9)		BSI (Built-in System Interface)				Erase Fault Code		Y		
BERLINGO (D9)		BSI (Built-in System Interface)				Live Data		Y		
BERLINGO (D9)		BSI (Built-in System Interface)				Actuation Test		Y		
BERLINGO (D9)		Engine management ECU	Petrol	ME745	ME745 NGR	Read ECU Information		Y		
BERLINGO (D9)		Engine management ECU	Petrol	ME745	ME745 NGR	Read Fault Code		Y		
BERLINGO (D9)		Engine management ECU	Petrol	ME745	ME745 NGR	Erase Fault Code		Y		
BERLINGO (D9)		Engine management ECU	Petrol	ME745	ME745 NGR	Live Data		Y		
BERLINGO (D9)		Engine management ECU	Petrol	ME745	ME745 NGR	Actuation Test		Y		
BERLINGO (D9)		Engine management ECU	Petrol	ME745	ME745 NGR	Special Function	Configuration	Y		
BERLINGO (D9)		Engine management ECU	Petrol	ME745	ME745 NGR	Special Function	Pack Repair	Y		
BERLINGO (D9)		Engine management ECU	Petrol	ME745	ME745 NGA	Read ECU Information		Y		
BERLINGO (D9)		Engine management ECU	Petrol	ME745	ME745 NGA	Read Fault Code		Y		
BERLINGO (D9)		Engine management ECU	Petrol	ME745	ME745 NGA	Erase Fault Code		Y		
BERLINGO (D9)		Engine management ECU	Petrol	ME745	ME745 NGA	Live Data		Y		
BERLINGO (D9)		Engine management ECU	Petrol	ME745	ME745 NGA	Actuation Test		Y		
BERLINGO (D9)		Engine management ECU	Petrol	ME745	ME745 NGA	Special Function	Configuration	Y		
BERLINGO (D9)		Engine management ECU	Petrol	ME745	ME745 NGA	Special Function	Pack Repair	Y		
BERLINGO (D9)		Engine management ECU	Petrol	ME745	ME745 NFR	Read ECU Information		Y		
BERLINGO (D9)		Engine management ECU	Petrol	ME745	ME745 NFR	Read Fault Code		Y		
BERLINGO (D9)		Engine management ECU	Petrol	ME745	ME745 NFR	Erase Fault Code		Y		
BERLINGO (D9)		Engine management ECU	Petrol	ME745	ME745 NFR	Live Data		Y		
BERLINGO (D9)		Engine management ECU	Petrol	ME745	ME745 NFR	Actuation Test		Y		
BERLINGO (D9)		Engine management ECU	Petrol	ME745	ME745 NFR	Special Function	Configuration	Y		
BERLINGO (D9)		Engine management ECU	Petrol	ME745	ME745 NFR	Special Function	Pack Repair	Y		
BERLINGO (D9)		Engine management ECU	Petrol	ME745	ME745 NPU	Read ECU Information		Y		
BERLINGO (D9)		Engine management ECU	Petrol	ME745	ME745 NPU	Read Fault Code		Y		
BERLINGO (D9)		Engine management ECU	Petrol	ME745	ME745 NPU	Erase Fault Code		Y		
BERLINGO (D9)		Engine management ECU	Petrol	ME745	ME745 NPU	Live Data		Y		
BERLINGO (D9)		Engine management ECU	Petrol	ME745	ME745 NPU	Actuation Test		Y		
BERLINGO (D9)		Engine management ECU	Petrol	ME745	ME745 NPU	Special Function	Configuration	Y		
BERLINGO (D9)		Engine management ECU	Petrol	ME745	ME745 NPU	Special Function	Pack Repair	Y		
BERLINGO (D9)		Engine management ECU	Petrol	MEV17_4_EURO6	MEV17_4_EURO6 SFS	Read ECU Information		Y		
BERLINGO (D9)		Engine management ECU	Petrol	MEV17_4_EURO6	MEV17_4_EURO6 SFS	Read Fault Code		Y		
BERLINGO (D9)		Engine management ECU	Petrol	MEV17_4_EURO6	MEV17_4_EURO6 SFS	Erase Fault Code		Y		
BERLINGO (D9)		Engine management ECU	Petrol	MEV17_4_EURO6	MEV17_4_EURO6 SFS	Live Data		Y		
BERLINGO (D9)		Engine management ECU	Petrol	MEV17_4_EURO6	MEV17_4_EURO6 SFS	Actuation Test		Y		
BERLINGO (D9)		Engine management ECU	Petrol	MEV17_4_EURO6	MEV17_4_EURO6 SFS	Special Function	Configuration	Y		
BERLINGO (D9)		Engine management ECU	Petrol	MEV17_4_EURO6	MEV17_4_EURO6 SFS	Special Function	Pack Repair	Y		
BERLINGO (D9)		Engine management ECU	Petrol	MEV17_4_EURO6	MEV17_4_EURO6 SFX	Read ECU Information		Y		
BERLINGO (D9)		Engine management ECU	Petrol	MEV17_4_EURO6	MEV17_4_EURO6 SFX	Read Fault Code		Y		
BERLINGO (D9)		Engine management ECU	Petrol	MEV17_4_EURO6	MEV17_4_EURO6 SFX	Erase Fault Code		Y		
BERLINGO (D9)		Engine management ECU	Petrol	MEV17_4_EURO6	MEV17_4_EURO6 SFX	Live Data		Y		
BERLINGO (D9)		Engine management ECU	Petrol	MEV17_4_EURO6	MEV17_4_EURO6 SFX	Actuation Test		Y		
BERLINGO (D9)		Engine management ECU	Petrol	MEV17_4_EURO6	MEV17_4_EURO6 SFX	Special Function	Configuration	Y		
BERLINGO (D9)		Engine management ECU	Petrol	MEV17_4_EURO6	MEV17_4_EURO6 SFX	Special Function	Pack Repair	Y		
BERLINGO (D9)		Engine management ECU	Petrol	VD46		Read ECU Information		Y		
BERLINGO (D9)		Engine management ECU	Petrol	VD46		Read Fault Code		Y		
BERLINGO (D9)		Engine management ECU	Petrol	VD46		Erase Fault Code		Y		
BERLINGO (D9)		Engine management ECU	Petrol	VD46		Live Data		Y		
BERLINGO (D9)		Engine management ECU	Petrol	VD46		Actuation Test		Y		
BERLINGO (D9)		Engine management ECU	Petrol	VD46		Special Function	Pack Repair	Y		
BERLINGO (D9)		Engine management ECU	Diesel	EDC16C3	98T DV8BTEED4 - 75CV	Read ECU Information		Y		
BERLINGO (D9)		Engine management ECU	Diesel	EDC16C3	98T DV8BTEED4 - 75CV	Read Fault Code		Y		
BERLINGO (D9)		Engine management ECU	Diesel	EDC16C3	98T DV8BTEED4 - 75CV	Erase Fault Code		Y		
BERLINGO (D9)		Engine management ECU	Diesel	EDC16C3	98T DV8BTEED4 - 75CV	Live Data		Y		
BERLINGO (D9)		Engine management ECU	Diesel	EDC16C3	98T DV8BTEED4 - 75CV	Actuation Test		Y		
BERLINGO (D9)		Engine management ECU	Diesel	EDC16C3	98T DV8BTEED4 - 75CV	Special Function	Configuration	Y		
BERLINGO (D9)		Engine management ECU	Diesel	EDC16C3	98T DV8BTEED4 - 75CV	Special Function	Pack Repair	Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function reasons	Add (Y/N)	Verification (Y/N)	Remarks
BERLINGO (B9)		Engine management ECU	Diesel	HD1_S11807_BR2	HD1_S11807_BR2_9HL	Read ECU Information		Y		
BERLINGO (B9)		Engine management ECU	Diesel	HD1_S11807_BR2	HD1_S11807_BR2_9HL	Read Fault Code		Y		
BERLINGO (B9)		Engine management ECU	Diesel	HD1_S11807_BR2	HD1_S11807_BR2_9HL	Erase Fault Code		Y		
BERLINGO (B9)		Engine management ECU	Diesel	HD1_S11807_BR2	HD1_S11807_BR2_9HL	Live Data		Y		
BERLINGO (B9)		Engine management ECU	Diesel	HD1_S11807_BR2	HD1_S11807_BR2_9HL	Actuation Test		Y		
BERLINGO (B9)		Engine management ECU	Diesel	HD1_S11807_BR2	HD1_S11807_BR2_9HL	Special Function	Configuration	Y		
BERLINGO (B9)		Engine management ECU	Diesel	HD1_S11807_BR2	HD1_S11807_BR2_9HL	Special Function	Pack Repair	Y		
BERLINGO (B9)		Engine management ECU	Diesel	HD1_S11807	HD1_S11807_9HL	Read ECU Information		Y		
BERLINGO (B9)		Engine management ECU	Diesel	HD1_S11807	HD1_S11807_9HL	Read Fault Code		Y		
BERLINGO (B9)		Engine management ECU	Diesel	HD1_S11807	HD1_S11807_9HL	Erase Fault Code		Y		
BERLINGO (B9)		Engine management ECU	Diesel	HD1_S11807	HD1_S11807_9HL	Live Data		Y		
BERLINGO (B9)		Engine management ECU	Diesel	HD1_S11807	HD1_S11807_9HL	Actuation Test		Y		
BERLINGO (B9)		Engine management ECU	Diesel	HD1_S11807	HD1_S11807_9HL	Special Function	Configuration	Y		
BERLINGO (B9)		Engine management ECU	Diesel	HD1_S11807	HD1_S11807_9HL	Special Function	Pack Repair	Y		
BERLINGO (B9)		Engine management ECU	Diesel	EDC17G00		Read ECU Information		Y		
BERLINGO (B9)		Engine management ECU	Diesel	EDC17G00		Read Fault Code		Y		
BERLINGO (B9)		Engine management ECU	Diesel	EDC17G00		Erase Fault Code		Y		
BERLINGO (B9)		Engine management ECU	Diesel	EDC17G00		Live Data		Y		
BERLINGO (B9)		Engine management ECU	Diesel	EDC17G00		Actuation Test		Y		
BERLINGO (B9)		Engine management ECU	Diesel	EDC17G00		Special Function	Pack Repair	Y		
BERLINGO (B9)		Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	ABS 81			Read ECU Information		Y		
BERLINGO (B9)		Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	ABS 81			Read Fault Code		Y		
BERLINGO (B9)		Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	ABS 81			Erase Fault Code		Y		
BERLINGO (B9)		Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	ABS 81			Live Data		Y		
BERLINGO (B9)		Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	ABS 81			Actuation Test		Y		
BERLINGO (B9)		Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	ABS 81			Special Function	Configuration	Y		
BERLINGO (B9)		Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	ABS 81			Special Function	Pack Repair	Y		
BERLINGO (B9)		Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	81 ESP			Read ECU Information		Y		
BERLINGO (B9)		Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	81 ESP			Read Fault Code		Y		
BERLINGO (B9)		Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	81 ESP			Erase Fault Code		Y		
BERLINGO (B9)		Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	81 ESP			Live Data		Y		
BERLINGO (B9)		Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	81 ESP			Actuation Test		Y		
BERLINGO (B9)		Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	81 ESP			Special Function	Configuration	Y		
BERLINGO (B9)		Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	81 ESP			Special Function	Pack Repair	Y		
BERLINGO (B9)		Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	90 ESP			Read ECU Information		Y		
BERLINGO (B9)		Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	90 ESP			Read Fault Code		Y		
BERLINGO (B9)		Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	90 ESP			Erase Fault Code		Y		
BERLINGO (B9)		Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	90 ESP			Live Data		Y		
BERLINGO (B9)		Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	90 ESP			Actuation Test		Y		
BERLINGO (B9)		Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	90 ESP			Special Function	Pack Repair	Y		
BERLINGO (B9)		Automatic gearbox or controlled manual gearbox	CFC300P			Read ECU Information		Y		
BERLINGO (B9)		Automatic gearbox or controlled manual gearbox	CFC300P			Read Fault Code		Y		
BERLINGO (B9)		Automatic gearbox or controlled manual gearbox	CFC300P			Erase Fault Code		Y		
BERLINGO (B9)		Automatic gearbox or controlled manual gearbox	CFC300P			Live Data		Y		
BERLINGO (B9)		Automatic gearbox or controlled manual gearbox	CFC300P			Actuation Test		Y		
BERLINGO (B9)		Automatic gearbox or controlled manual gearbox	CFC300P			Special Function	Replacement parts	Y		
BERLINGO (B9)		Automatic gearbox or controlled manual gearbox	BWP_MCP_LDS			Read ECU Information		Y		
BERLINGO (B9)		Automatic gearbox or controlled manual gearbox	BWP_MCP_LDS			Read Fault Code		Y		
BERLINGO (B9)		Automatic gearbox or controlled manual gearbox	BWP_MCP_LDS			Erase Fault Code		Y		
BERLINGO (B9)		Automatic gearbox or controlled manual gearbox	BWP_MCP_LDS			Live Data		Y		
BERLINGO (B9)		Automatic gearbox or controlled manual gearbox	BWP_MCP_LDS			Actuation Test		Y		
BERLINGO (B9)		Automatic gearbox or controlled manual gearbox	BWP_MCP_LDS			Special Function	Replacement parts	Y		
BERLINGO (B9)		Automatic gearbox or controlled manual gearbox	BWP_MCP_LDS			Special Function	Counters	Y		
BERLINGO (B9)		Air bags and pre-tensioners control unit				Read ECU Information		Y		
BERLINGO (B9)		Air bags and pre-tensioners control unit				Read Fault Code		Y		
BERLINGO (B9)		Air bags and pre-tensioners control unit				Erase Fault Code		Y		
BERLINGO (B9)		Air bags and pre-tensioners control unit				Live Data		Y		
BERLINGO (B9)		Air bags and pre-tensioners control unit				Special Function	Configuration	Y		
BERLINGO (B9)		Air bags and pre-tensioners control unit				Special Function	Pack Repair	Y		
BERLINGO (B9)		Power steering				Read ECU Information		Y		
BERLINGO (B9)		Power steering				Read Fault Code		Y		
BERLINGO (B9)		Power steering				Erase Fault Code		Y		
BERLINGO (B9)		Power steering				Live Data		Y		
BERLINGO (B9)		Power steering				Actuation Test		Y		
BERLINGO (B9)		Diesel additive pump	PADEG0			Read ECU Information		Y		
BERLINGO (B9)		Diesel additive pump	PADEG0			Read Fault Code		Y		
BERLINGO (B9)		Diesel additive pump	PADEG0			Erase Fault Code		Y		
BERLINGO (B9)		Diesel additive pump	PADEG0			Live Data		Y		
BERLINGO (B9)		Diesel additive pump	PADEG0			Actuation Test		Y		
BERLINGO (B9)		Diesel additive pump	PADEG0			Special Function	Configuration	Y		
BERLINGO (B9)		Diesel additive pump	PADEG0			Special Function	Pack repair	Y		
BERLINGO (B9)		Diesel additive pump	POMPE_MUX_TI			Read ECU Information		Y		
BERLINGO (B9)		Diesel additive pump	POMPE_MUX_TI			Read Fault Code		Y		
BERLINGO (B9)		Diesel additive pump	POMPE_MUX_TI			Erase Fault Code		Y		
BERLINGO (B9)		Diesel additive pump	POMPE_MUX_TI			Live Data		Y		
BERLINGO (B9)		Diesel additive pump	POMPE_MUX_TI			Actuation Test		Y		
BERLINGO (B9)		Diesel additive pump	POMPE_MUX_TI			Special Function	Configuration	Y		
BERLINGO (B9)		Diesel additive pump	PADEG0_TI_E6			Read ECU Information		Y		
BERLINGO (B9)		Diesel additive pump	PADEG0_TI_E6			Read Fault Code		Y		
BERLINGO (B9)		Diesel additive pump	PADEG0_TI_E6			Erase Fault Code		Y		
BERLINGO (B9)		Diesel additive pump	PADEG0_TI_E6			Live Data		Y		
BERLINGO (B9)		Diesel additive pump	PADEG0_TI_E6			Actuation Test		Y		
BERLINGO (B9)		Diesel additive pump	PADEG0_TI_E6			Special Function	Configuration	Y		
BERLINGO (B9)		Under inflation detection	DSG_LDS			Read ECU Information		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Models	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
BERLINGO (B9)		Under inflation detection	DSG, IDS			Read Fault Code		Y		
BERLINGO (B9)		Under inflation detection	DSG, IDS			Erase Fault Code		Y		
BERLINGO (B9)		Under inflation detection	DSG, IDS			Live Data		Y		
BERLINGO (B9)		Under inflation detection	DSG, IDS			Special Function	Pack Reparation	Y		
BERLINGO (B9)		Under inflation detection	DSG			Read ECU Information		Y		
BERLINGO (B9)		Under inflation detection	DSG			Read Fault Code		Y		
BERLINGO (B9)		Under inflation detection	DSG			Erase Fault Code		Y		
BERLINGO (B9)		Under inflation detection	DSG			Live Data		Y		
BERLINGO (B9)		Under inflation detection	DSG			Special Function	Pack Reparation	Y		
BERLINGO (B9)		Battery charge status unit	BEBC			Read ECU Information		Y		
BERLINGO (B9)		Battery charge status unit	BEBC			Read Fault Code		Y		
BERLINGO (B9)		Battery charge status unit	BEBC			Erase Fault Code		Y		
BERLINGO (B9)		Battery charge status unit	BEBC			Live Data		Y		
BERLINGO (B9)		Battery charge status unit	BEBC, GEN2			Read ECU Information		Y		
BERLINGO (B9)		Battery charge status unit	BEBC, GEN2			Read Fault Code		Y		
BERLINGO (B9)		Battery charge status unit	BEBC, GEN2			Erase Fault Code		Y		
BERLINGO (B9)		Battery charge status unit	BEBC, GEN2			Live Data		Y		
BERLINGO (B9)		Battery charge status unit	BEBC, GEN2			Special Function	Configuration with displaying of the parameters	Y		
BERLINGO (B9)		Battery charge status unit	BEBC, GEN2			Special Function	Pack repair	Y		
BERLINGO (B9)		Engine relay unit				Read ECU Information		Y		
BERLINGO (B9)		Engine relay unit				Read Fault Code		Y		
BERLINGO (B9)		Engine relay unit				Erase Fault Code		Y		
BERLINGO (B9)		Engine relay unit				Live Data		Y		
BERLINGO (B9)		Engine relay unit				Actuation Test		Y		
BERLINGO (B9)		Bodywork Conversion Unit				Read ECU Information		Y		
BERLINGO (B9)		Bodywork Conversion Unit				Read Fault Code		Y		
BERLINGO (B9)		Bodywork Conversion Unit				Erase Fault Code		Y		
BERLINGO (B9)		Bodywork Conversion Unit				Live Data		Y		
BERLINGO (B9)		Bodywork Conversion Unit				Actuation Test		Y		
BERLINGO (B9)		Trailer relay unit				Read ECU Information		Y		
BERLINGO (B9)		Trailer relay unit				Read Fault Code		Y		
BERLINGO (B9)		Trailer relay unit				Erase Fault Code		Y		
BERLINGO (B9)		Trailer relay unit				Live Data		Y		
BERLINGO (B9)		Trailer relay unit				Actuation Test		Y		
BERLINGO (B9)		Air conditioning				Read ECU Information		Y		
BERLINGO (B9)		Air conditioning				Read Fault Code		Y		
BERLINGO (B9)		Air conditioning				Erase Fault Code		Y		
BERLINGO (B9)		Air conditioning				Live Data		Y		
BERLINGO (B9)		Air conditioning				Actuation Test		Y		
BERLINGO (B9)		Air conditioning				Special Function	Configuration	Y		
BERLINGO (B9)		Air conditioning				Special Function	Pack repair	Y		
BERLINGO (B9)		Multifunction screen	Type "A" (segments) With buttons			Read ECU Information		Y		
BERLINGO (B9)		Multifunction screen	Type "A" (segments) With buttons			Read Fault Code		Y		
BERLINGO (B9)		Multifunction screen	Type "A" (segments) With buttons			Erase Fault Code		Y		
BERLINGO (B9)		Multifunction screen	Type "A" (segments) With buttons			Live Data		Y		
BERLINGO (B9)		Multifunction screen	Type "A" (segments) With buttons			Actuation Test		Y		
BERLINGO (B9)		Multifunction screen	Type "A" (segments) With buttons			Special Function	Configuration	Y		
BERLINGO (B9)		Multifunction screen	Type "A" (segments) With buttons			Special Function	Pack Repair	Y		
BERLINGO (B9)		Multifunction screen	Type "A" (segments) Without button			Read ECU Information		Y		
BERLINGO (B9)		Multifunction screen	Type "A" (segments) Without button			Read Fault Code		Y		
BERLINGO (B9)		Multifunction screen	Type "A" (segments) Without button			Erase Fault Code		Y		
BERLINGO (B9)		Multifunction screen	Type "A" (segments) Without button			Live Data		Y		
BERLINGO (B9)		Multifunction screen	Type "A" (segments) Without button			Actuation Test		Y		
BERLINGO (B9)		Multifunction screen	Type "A" (segments) Without button			Special Function	Configuration	Y		
BERLINGO (B9)		Multifunction screen	Type "A" (segments) Without button			Special Function	Pack Repair	Y		
BERLINGO (B9)		Multifunction screen	Type "C" (dot matrix)			Read ECU Information		Y		
BERLINGO (B9)		Multifunction screen	Type "C" (dot matrix)			Read Fault Code		Y		
BERLINGO (B9)		Multifunction screen	Type "C" (dot matrix)			Erase Fault Code		Y		
BERLINGO (B9)		Multifunction screen	Type "C" (dot matrix)			Live Data		Y		
BERLINGO (B9)		Multifunction screen	Type "C" (dot matrix)			Actuation Test		Y		
BERLINGO (B9)		Multifunction screen	Type "C" (dot matrix)			Special Function	Configuration	Y		
BERLINGO (B9)		Multifunction screen	Type "C" (dot matrix)			Special Function	Pack Repair	Y		
BERLINGO (B9)		Multifunction screen	Type "C colour" (dot matrix)			Read ECU Information		Y		
BERLINGO (B9)		Multifunction screen	Type "C colour" (dot matrix)			Read Fault Code		Y		
BERLINGO (B9)		Multifunction screen	Type "C colour" (dot matrix)			Erase Fault Code		Y		
BERLINGO (B9)		Multifunction screen	Type "C colour" (dot matrix)			Live Data		Y		
BERLINGO (B9)		Multifunction screen	Type "C colour" (dot matrix)			Actuation Test		Y		
BERLINGO (B9)		Multifunction screen	Type "C colour" (dot matrix)			Special Function	Configuration	Y		
BERLINGO (B9)		Multifunction screen	Type "C colour" (dot matrix)			Special Function	Pack Repair	Y		
BERLINGO (B9)		Instrument panel				Read ECU Information		Y		
BERLINGO (B9)		Instrument panel				Read Fault Code		Y		
BERLINGO (B9)		Instrument panel				Erase Fault Code		Y		
BERLINGO (B9)		Instrument panel				Live Data		Y		
BERLINGO (B9)		Instrument panel				Actuation Test		Y		
BERLINGO (B9)		Instrument panel				Special Function	Configuration	Y		
BERLINGO (B9)		Parking assistance	AAS			Read ECU Information		Y		
BERLINGO (B9)		Parking assistance	AAS			Read Fault Code		Y		
BERLINGO (B9)		Parking assistance	AAS			Erase Fault Code		Y		
BERLINGO (B9)		Parking assistance	AAS			Live Data		Y		
BERLINGO (B9)		Parking assistance	AAS			Special Function	Configuration	Y		
BERLINGO (B9)		Parking assistance	AAS			Special Function	Pack repair	Y		
BERLINGO (B9)		Parking assistance	AAS, IDS	4 parking assistance sensors		Read ECU Information		Y		
BERLINGO (B9)		Parking assistance	AAS, IDS	4 parking assistance sensors		Read Fault Code		Y		
BERLINGO (B9)		Parking assistance	AAS, IDS	4 parking assistance sensors		Erase Fault Code		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function reasons	Add (Y/N)	Verification (Y/N)	Remarks
BERLINGO (B9)		Parking assistance	AAS_IDS	4 parking assistance sensors		Live Data		Y		
BERLINGO (B9)		Parking assistance	AAS_IDS	4 parking assistance sensors		Actuation Test		Y		
BERLINGO (B9)		Parking assistance	AAS_IDS	8 parking assistance sensors		Read ECU Information		Y		
BERLINGO (B9)		Parking assistance	AAS_IDS	8 parking assistance sensors		Read Fault Code		Y		
BERLINGO (B9)		Parking assistance	AAS_IDS	8 parking assistance sensors		Erase Fault Code		Y		
BERLINGO (B9)		Parking assistance	AAS_IDS	8 parking assistance sensors		Live Data		Y		
BERLINGO (B9)		Parking assistance	AAS_IDS	8 parking assistance sensors		Actuation Test		Y		
BERLINGO (B9)		Controls under the steering wheel				Read ECU Information		Y		
BERLINGO (B9)		Controls under the steering wheel				Read Fault Code		Y		
BERLINGO (B9)		Controls under the steering wheel				Erase Fault Code		Y		
BERLINGO (B9)		Controls under the steering wheel				Live Data		Y		
BERLINGO (B9)		Controls under the steering wheel				Actuation Test		Y		
BERLINGO (B9)		Controls under the steering wheel				Special Function	Pack Repair	Y		
BERLINGO (B9)		Hands-free Kit / Portable Unit	KML			Read ECU Information		Y		
BERLINGO (B9)		Hands-free Kit / Portable Unit	KML			Read Fault Code		Y		
BERLINGO (B9)		Hands-free Kit / Portable Unit	KML			Erase Fault Code		Y		
BERLINGO (B9)		Hands-free Kit / Portable Unit	KML			Live Data		Y		
BERLINGO (B9)		Hands-free Kit / Portable Unit	KML			Actuation Test		Y		
BERLINGO (B9)		Hands-free Kit / Portable Unit	KML			Special Function	Configuration	Y		
BERLINGO (B9)		Hands-free Kit / Portable Unit	KML			Special Function	Spare part	Y		
BERLINGO (B9)		Hands-free Kit / Portable Unit	BOITIER_NOMADE			Read ECU Information		Y		
BERLINGO (B9)		Hands-free Kit / Portable Unit	BOITIER_NOMADE			Read Fault Code		Y		
BERLINGO (B9)		Hands-free Kit / Portable Unit	BOITIER_NOMADE			Erase Fault Code		Y		
BERLINGO (B9)		Hands-free Kit / Portable Unit	BOITIER_NOMADE			Live Data		Y		
BERLINGO (B9)		Hands-free Kit / Portable Unit	BOITIER_NOMADE			Actuation Test		Y		
BERLINGO (B9)		Hands-free Kit / Portable Unit	BOITIER_NOMADE			Special Function	Configuration	Y		
BERLINGO (B9)		Hands-free Kit / Portable Unit	BOITIER_NOMADE			Special Function	Replacement parts	Y		
BERLINGO (B9)		Radio	RD4			Read ECU Information		Y		
BERLINGO (B9)		Radio	RD4			Read Fault Code		Y		
BERLINGO (B9)		Radio	RD4			Erase Fault Code		Y		
BERLINGO (B9)		Radio	RD4			Live Data		Y		
BERLINGO (B9)		Radio	RD4			Actuation Test		Y		
BERLINGO (B9)		Radio	RD4			Special Function	Configuration	Y		
BERLINGO (B9)		Radio	RD4			Special Function	Replacement parts	Y		
BERLINGO (B9)		Radio	RD45			Read ECU Information		Y		
BERLINGO (B9)		Radio	RD45			Read Fault Code		Y		
BERLINGO (B9)		Radio	RD45			Erase Fault Code		Y		
BERLINGO (B9)		Radio	RD45			Live Data		Y		
BERLINGO (B9)		Radio	RD45			Actuation Test		Y		
BERLINGO (B9)		Radio	RD45			Special Function	Configuration	Y		
BERLINGO (B9)		Radio	RD45			Special Function	Pack Repair	Y		
BERLINGO (B9)		Telematic unit (RTs) or audio/navigation	RADIONAV_ENEG			Read ECU Information		Y		
BERLINGO (B9)		Telematic unit (RTs) or audio/navigation	RADIONAV_ENEG			Read Fault Code		Y		
BERLINGO (B9)		Telematic unit (RTs) or audio/navigation	RADIONAV_ENEG			Erase Fault Code		Y		
BERLINGO (B9)		Telematic unit (RTs) or audio/navigation	RADIONAV_ENEG			Live Data		Y		
BERLINGO (B9)		Telematic unit (RTs) or audio/navigation	RADIONAV_ENEG			Actuation Test		Y		
BERLINGO (B9)		Telematic unit (RTs) or audio/navigation	RADIONAV_ENEG			Special Function	Configuration	Y		
BERLINGO (B9)		Telematic unit (RTs) or audio/navigation	ENEG2010			Read ECU Information		Y		
BERLINGO (B9)		Telematic unit (RTs) or audio/navigation	ENEG2010			Read Fault Code		Y		
BERLINGO (B9)		Telematic unit (RTs) or audio/navigation	ENEG2010			Erase Fault Code		Y		
BERLINGO (B9)		Telematic unit (RTs) or audio/navigation	ENEG2010			Live Data		Y		
BERLINGO (B9)		Telematic unit (RTs) or audio/navigation	ENEG2010			Actuation Test		Y		
BERLINGO (B9)		Telematic unit (RTs) or audio/navigation	ENEG2010			Special Function	Configuration	Y		
BERLINGO (B9)		Telematic unit (RTs) or audio/navigation	ENEG2010			Special Function	Pack Repair	Y		
BERLINGO (B9)		Telematic unit (RTs) or audio/navigation	SMES_PLUS			Read ECU Information		Y		
BERLINGO (B9)		Telematic unit (RTs) or audio/navigation	SMES_PLUS			Read Fault Code		Y		
BERLINGO (B9)		Telematic unit (RTs) or audio/navigation	SMES_PLUS			Erase Fault Code		Y		
BERLINGO (B9)		Telematic unit (RTs) or audio/navigation	SMES_PLUS			Live Data		Y		
BERLINGO (B9)		Telematic unit (RTs) or audio/navigation	SMES_PLUS			Actuation Test		Y		
BERLINGO (B9)		Telematic unit (RTs) or audio/navigation	SMES_PLUS			Special Function	Configuration	Y		
BERLINGO (B9)		Telematic unit (RTs) or audio/navigation	SMES_PLUS			Special Function	Pack Repair	Y		
BERLINGO (B9)		CD changer / external CD player				Read ECU Information		Y		
BERLINGO (B9)		CD changer / external CD player				Read Fault Code		Y		
BERLINGO (B9)		CD changer / external CD player				Erase Fault Code		Y		
BERLINGO (B9)		CD changer / external CD player				Actuation Test		Y		
BERLINGO (B9)		CD changer / external CD player				Special Function	Configuration	Y		
BERLINGO (B9)		Anti-theft alarm				Read ECU Information		Y		
BERLINGO (B9)		Anti-theft alarm				Read Fault Code		Y		
BERLINGO (B9)		Anti-theft alarm				Erase Fault Code		Y		
BERLINGO (B9)		Anti-theft alarm				Live Data		Y		
BERLINGO (B9)		Anti-theft alarm				Actuation Test		Y		
BERLINGO (B9)		Anti-theft alarm				Special Function	Configuration	Y		
BERLINGO (B9)		Anti-theft alarm				Special Function	Pack repair	Y		
BERLINGO (B9)		Traction control mode selector				Read ECU Information		Y		
BERLINGO (B9)		Traction control mode selector				Read Fault Code		Y		
BERLINGO (B9)		Traction control mode selector				Live Data		Y		
BERLINGO (B9)		Traction control mode selector				Actuation Test		Y		
BERLINGO (B9)		Service module / Independent telematic unit	BTA			Read ECU Information		Y		
BERLINGO (B9)		Service module / Independent telematic unit	BTA			Read Fault Code		Y		
BERLINGO (B9)		Service module / Independent telematic unit	BTA			Erase Fault Code		Y		
BERLINGO (B9)		Service module / Independent telematic unit	BTA			Live Data		Y		
BERLINGO (B9)		Service module / Independent telematic unit	BTA			Actuation Test		Y		
BERLINGO (B9)		Service module / Independent telematic unit	BTA			Special Function	Configuration	Y		
BERLINGO (B9)		Service module / Independent telematic unit	BTA			Special Function	Pack Repair	Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function reasons	Add (Y/N)	Verification (Y/N)	Remarks
BERLINGO (89)		Service module / Independent telematic unit	BTA_3R			Read ECU Information		Y		
BERLINGO (89)		Service module / Independent telematic unit	BTA_3R			Read Fault Code		Y		
BERLINGO (89)		Service module / Independent telematic unit	BTA_3R			Erase Fault Code		Y		
BERLINGO (89)		Service module / Independent telematic unit	BTA_3R			Live Data		Y		
BERLINGO (89)		Service module / Independent telematic unit	BTA_3R			Actuation Test		Y		
BERLINGO (89)		Rain and light sensor				Read ECU Information		Y		
BERLINGO (89)		Rain and light sensor				Read Fault Code		Y		
BERLINGO (89)		Rain and light sensor				Erase Fault Code		Y		
BERLINGO (89)		High frequency receiver				Read ECU Information		Y		
BERLINGO (89)		High frequency receiver				Read Fault Code		Y		
BERLINGO (89)		High frequency receiver				Erase Fault Code		Y		
BERLINGO (89)		High frequency receiver				Live Data		Y		
BERLINGO (89)		Voltage retaining device	DMTC			Read ECU Information		Y		
BERLINGO (89)		Voltage retaining device	DMTR			Read ECU Information		Y		
BERLINGO (89)		Voltage retaining device	DMTR			Read Fault Code		Y		
BERLINGO (89)		Voltage retaining device	DMTR			Erase Fault Code		Y		
BERLINGO (89)		Voltage retaining device	DMTR_DFC3B			Read ECU Information		Y		
BERLINGO (89)		Voltage retaining device	DMTR_DFC3B			Read Fault Code		Y		
BERLINGO (89)		Voltage retaining device	DMTR_DFC3B			Erase Fault Code		Y		
BERLINGO (89)		Voltage retaining device	DMTR_DFC3B			Read ECU Information		Y		
BERLINGO (89)		Vehicle Distance Assistance				Read ECU Information		Y		
BERLINGO (89)		Vehicle Distance Assistance				Read Fault Code		Y		
BERLINGO (89)		Vehicle Distance Assistance				Erase Fault Code		Y		
BERLINGO (89)		Vehicle Distance Assistance				Live Data		Y		
BERLINGO (89)		Vehicle Distance Assistance				Actuation Test		Y		
BERLINGO (89)		Vehicle Distance Assistance				Special Function	Pack repair	Y		
BERLINGO Electric (89e)		Built-in Systems Interface				Read ECU Information		Y		
BERLINGO Electric (89e)		Built-in Systems Interface				Read Fault Code		Y		
BERLINGO Electric (89e)		Built-in Systems Interface				Erase Fault Code		Y		
BERLINGO Electric (89e)		Built-in Systems Interface				Live Data		Y		
BERLINGO Electric (89e)		Built-in Systems Interface				Actuation Test		Y		
BERLINGO Electric (89e)		Built-in Systems Interface				Special Function	Maintenance - BSI operating mode	Y		
BERLINGO Electric (89e)		Built-in Systems Interface				Special Function	Pack Repair	Y		
BERLINGO Electric (89e)		Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	ESP81			Read ECU Information		Y		
BERLINGO Electric (89e)		Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	ESP81			Read Fault Code		Y		
BERLINGO Electric (89e)		Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	ESP81			Erase Fault Code		Y		
BERLINGO Electric (89e)		Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	ESP81			Live Data		Y		
BERLINGO Electric (89e)		Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	ESP81			Actuation Test		Y		
BERLINGO Electric (89e)		Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	ESP81			Special Function	Pack Repair	Y		
BERLINGO Electric (89e)		Air bags and pre-tensioners control unit				Read ECU Information		Y		
BERLINGO Electric (89e)		Air bags and pre-tensioners control unit				Read Fault Code		Y		
BERLINGO Electric (89e)		Air bags and pre-tensioners control unit				Erase Fault Code		Y		
BERLINGO Electric (89e)		Air bags and pre-tensioners control unit				Live Data		Y		
BERLINGO Electric (89e)		Air bags and pre-tensioners control unit				Special Function	Configuration	Y		
BERLINGO Electric (89e)		Air bags and pre-tensioners control unit				Special Function	Pack Repair	Y		
BERLINGO Electric (89e)		Radio	RD4			Read ECU Information		Y		
BERLINGO Electric (89e)		Radio	RD4			Read Fault Code		Y		
BERLINGO Electric (89e)		Radio	RD4			Erase Fault Code		Y		
BERLINGO Electric (89e)		Radio	RD4			Live Data		Y		
BERLINGO Electric (89e)		Radio	RD4			Actuation Test		Y		
BERLINGO Electric (89e)		Radio	RD4			Special Function	Configuration	Y		
BERLINGO Electric (89e)		Radio	RD4			Special Function	Replacement parts	Y		
BERLINGO Electric (89e)		Radio	RD45			Read ECU Information		Y		
BERLINGO Electric (89e)		Radio	RD45			Read Fault Code		Y		
BERLINGO Electric (89e)		Radio	RD45			Erase Fault Code		Y		
BERLINGO Electric (89e)		Radio	RD45			Live Data		Y		
BERLINGO Electric (89e)		Radio	RD45			Actuation Test		Y		
BERLINGO Electric (89e)		Radio	RD45			Special Function	Configuration	Y		
BERLINGO Electric (89e)		Radio	RD45			Special Function	Pack Repair	Y		
BERLINGO Electric (89e)		Parking assistance				Read ECU Information		Y		
BERLINGO Electric (89e)		Parking assistance				Read Fault Code		Y		
BERLINGO Electric (89e)		Parking assistance				Erase Fault Code		Y		
BERLINGO Electric (89e)		Parking assistance				Live Data		Y		
BERLINGO Electric (89e)		Parking assistance				Special Function	Configuration	Y		
BERLINGO Electric (89e)		Parking assistance				Special Function	Pack Repair	Y		
BERLINGO Electric (89e)		Air conditioning	CL1W			Read ECU Information		Y		
BERLINGO Electric (89e)		Air conditioning	CL1W			Read Fault Code		Y		
BERLINGO Electric (89e)		Air conditioning	CL1W			Erase Fault Code		Y		
BERLINGO Electric (89e)		Air conditioning	CL1W			Live Data		Y		
BERLINGO Electric (89e)		Air conditioning	CL1W			Actuation Test		Y		
BERLINGO Electric (89e)		Air conditioning	CL1W			Special Function	Pack Repair	Y		
BERLINGO Electric (89e)		Instrument panel				Read ECU Information		Y		
BERLINGO Electric (89e)		Instrument panel				Read Fault Code		Y		
BERLINGO Electric (89e)		Instrument panel				Erase Fault Code		Y		
BERLINGO Electric (89e)		Instrument panel				Live Data		Y		
BERLINGO Electric (89e)		Instrument panel				Actuation Test		Y		
BERLINGO Electric (89e)		Passenger compartment air heating resistor				Read ECU Information		Y		
BERLINGO Electric (89e)		Passenger compartment air heating resistor				Read Fault Code		Y		
BERLINGO Electric (89e)		Passenger compartment air heating resistor				Erase Fault Code		Y		
BERLINGO Electric (89e)		Passenger compartment air heating resistor				Live Data		Y		
BERLINGO Electric (89e)		Passenger compartment air heating resistor				Actuation Test		Y		
BERLINGO Electric (89e)		Air conditioning compressor				Read ECU Information		Y		
BERLINGO Electric (89e)		Air conditioning compressor				Read Fault Code		Y		
BERLINGO Electric (89e)		Air conditioning compressor				Erase Fault Code		Y		
BERLINGO Electric (89e)		Air conditioning compressor				Live Data		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
BEELINGO Electric (98e)		Air conditioning compressor				Actuation Test		Y		
BEELINGO Electric (98e)		Service module / Independent telematic unit				Read ECU Information		Y		
BEELINGO Electric (98e)		Service module / Independent telematic unit				Read Fault Code		Y		
BEELINGO Electric (98e)		Service module / Independent telematic unit				Erase Fault Code		Y		
BEELINGO Electric (98e)		Service module / Independent telematic unit				Live Data		Y		
BEELINGO Electric (98e)		Service module / Independent telematic unit				Actuation Test		Y		
BEELINGO Electric (98e)		Service module / Independent telematic unit				Special Function	Configuration	Y		
BEELINGO Electric (98e)		Service module / Independent telematic unit				Special Function	Pack Repair	Y		
BEELINGO Electric (98e)		Multifunction screen	Type "A" (segments) with buttons			Read ECU Information		Y		
BEELINGO Electric (98e)		Multifunction screen	Type "A" (segments) with buttons			Read Fault Code		Y		
BEELINGO Electric (98e)		Multifunction screen	Type "A" (segments) with buttons			Erase Fault Code		Y		
BEELINGO Electric (98e)		Multifunction screen	Type "A" (segments) with buttons			Live Data		Y		
BEELINGO Electric (98e)		Multifunction screen	Type "A" (segments) with buttons			Actuation Test		Y		
BEELINGO Electric (98e)		Multifunction screen	Type "A" (segments) with buttons			Special Function	Configuration	Y		
BEELINGO Electric (98e)		Multifunction screen	Type "A" (segments) with buttons			Special Function	Pack Repair	Y		
BEELINGO Electric (98e)		Multifunction screen	Type "A" (segments) without buttons			Read ECU Information		Y		
BEELINGO Electric (98e)		Multifunction screen	Type "A" (segments) without buttons			Read Fault Code		Y		
BEELINGO Electric (98e)		Multifunction screen	Type "A" (segments) without buttons			Erase Fault Code		Y		
BEELINGO Electric (98e)		Multifunction screen	Type "A" (segments) without buttons			Live Data		Y		
BEELINGO Electric (98e)		Multifunction screen	Type "A" (segments) without buttons			Actuation Test		Y		
BEELINGO Electric (98e)		Multifunction screen	Type "A" (segments) without buttons			Special Function	Configuration	Y		
BEELINGO Electric (98e)		Multifunction screen	Type "A" (segments) without buttons			Special Function	Pack Repair	Y		
BEELINGO Electric (98e)		Multifunction screen	Type "C" (dot matrix)			Read ECU Information		Y		
BEELINGO Electric (98e)		Multifunction screen	Type "C" (dot matrix)			Read Fault Code		Y		
BEELINGO Electric (98e)		Multifunction screen	Type "C" (dot matrix)			Erase Fault Code		Y		
BEELINGO Electric (98e)		Multifunction screen	Type "C" (dot matrix)			Live Data		Y		
BEELINGO Electric (98e)		Multifunction screen	Type "C" (dot matrix)			Actuation Test		Y		
BEELINGO Electric (98e)		Multifunction screen	Type "C" (dot matrix)			Special Function	Configuration	Y		
BEELINGO Electric (98e)		Multifunction screen	Type "C" (dot matrix)			Special Function	Pack Repair	Y		
BEELINGO Electric (98e)		Multifunction screen	Type "C colour" (dot matrix)			Read ECU Information		Y		
BEELINGO Electric (98e)		Multifunction screen	Type "C colour" (dot matrix)			Read Fault Code		Y		
BEELINGO Electric (98e)		Multifunction screen	Type "C colour" (dot matrix)			Erase Fault Code		Y		
BEELINGO Electric (98e)		Multifunction screen	Type "C colour" (dot matrix)			Live Data		Y		
BEELINGO Electric (98e)		Multifunction screen	Type "C colour" (dot matrix)			Actuation Test		Y		
BEELINGO Electric (98e)		Multifunction screen	Type "C colour" (dot matrix)			Special Function	Configuration	Y		
BEELINGO Electric (98e)		Multifunction screen	Type "C colour" (dot matrix)			Special Function	Pack Repair	Y		
BEELINGO Electric (98e)		Drive train interface ECU				Read ECU Information		Y		
BEELINGO Electric (98e)		Drive train interface ECU				Read Fault Code		Y		
BEELINGO Electric (98e)		Drive train interface ECU				Erase Fault Code		Y		
BEELINGO Electric (98e)		Drive train interface ECU				Live Data		Y		
BEELINGO Electric (98e)		Drive train interface ECU				Actuation Test		Y		
BEELINGO Electric (98e)		Drive train interface ECU				Special Function	Pack Repair	Y		
BEELINGO Electric (98e)		Anti-theft alarm				Read ECU Information		Y		
BEELINGO Electric (98e)		Anti-theft alarm				Read Fault Code		Y		
BEELINGO Electric (98e)		Anti-theft alarm				Erase Fault Code		Y		
BEELINGO Electric (98e)		Anti-theft alarm				Live Data		Y		
BEELINGO Electric (98e)		Anti-theft alarm				Actuation Test		Y		
BEELINGO Electric (98e)		Anti-theft alarm				Special Function	Configuration	Y		
BEELINGO Electric (98e)		Anti-theft alarm				Special Function	Pack Repair	Y		
BEELINGO Electric (98e)		Rain and light sensor				Read ECU Information		Y		
BEELINGO Electric (98e)		Rain and light sensor				Read Fault Code		Y		
BEELINGO Electric (98e)		Rain and light sensor				Erase Fault Code		Y		
BEELINGO Electric (98e)		Power steering				Read ECU Information		Y		
BEELINGO Electric (98e)		Power steering				Read Fault Code		Y		
BEELINGO Electric (98e)		Power steering				Erase Fault Code		Y		
BEELINGO Electric (98e)		Power steering				Live Data		Y		
BEELINGO Electric (98e)		Power steering				Actuation Test		Y		
BEELINGO Electric (98e)		Telematic unit (OTA) or audio-navigation	RADIONAV_INBEGC			Read ECU Information		Y		
BEELINGO Electric (98e)		Telematic unit (OTA) or audio-navigation	RADIONAV_INBEGC			Read Fault Code		Y		
BEELINGO Electric (98e)		Telematic unit (OTA) or audio-navigation	RADIONAV_INBEGC			Erase Fault Code		Y		
BEELINGO Electric (98e)		Telematic unit (OTA) or audio-navigation	RADIONAV_INBEGC			Live Data		Y		
BEELINGO Electric (98e)		Telematic unit (OTA) or audio-navigation	RADIONAV_INBEGC			Actuation Test		Y		
BEELINGO Electric (98e)		Telematic unit (OTA) or audio-navigation	RADIONAV_INBEGC			Special Function	Configuration	Y		
BEELINGO Electric (98e)		Telematic unit (OTA) or audio-navigation	INBEG2010			Read ECU Information		Y		
BEELINGO Electric (98e)		Telematic unit (OTA) or audio-navigation	INBEG2010			Read Fault Code		Y		
BEELINGO Electric (98e)		Telematic unit (OTA) or audio-navigation	INBEG2010			Erase Fault Code		Y		
BEELINGO Electric (98e)		Telematic unit (OTA) or audio-navigation	INBEG2010			Live Data		Y		
BEELINGO Electric (98e)		Telematic unit (OTA) or audio-navigation	INBEG2010			Actuation Test		Y		
BEELINGO Electric (98e)		Telematic unit (OTA) or audio-navigation	INBEG2010			Special Function	Configuration	Y		
BEELINGO Electric (98e)		Telematic unit (OTA) or audio-navigation	INBEG2010			Special Function	Pack Repair	Y		
BEELINGO Electric (98e)		Telematic unit (OTA) or audio-navigation	SMBE_PLUS			Read ECU Information		Y		
BEELINGO Electric (98e)		Telematic unit (OTA) or audio-navigation	SMBE_PLUS			Read Fault Code		Y		
BEELINGO Electric (98e)		Telematic unit (OTA) or audio-navigation	SMBE_PLUS			Erase Fault Code		Y		
BEELINGO Electric (98e)		Telematic unit (OTA) or audio-navigation	SMBE_PLUS			Live Data		Y		
BEELINGO Electric (98e)		Telematic unit (OTA) or audio-navigation	SMBE_PLUS			Actuation Test		Y		
BEELINGO Electric (98e)		Telematic unit (OTA) or audio-navigation	SMBE_PLUS			Special Function	Configuration	Y		
BEELINGO Electric (98e)		Telematic unit (OTA) or audio-navigation	SMBE_PLUS			Special Function	Pack Repair	Y		
BEELINGO Electric (98e)		Battery charge status unit				Read ECU Information		Y		
BEELINGO Electric (98e)		Battery charge status unit				Read Fault Code		Y		
BEELINGO Electric (98e)		Battery charge status unit				Erase Fault Code		Y		
BEELINGO Electric (98e)		Battery charge status unit				Live Data		Y		
BEELINGO Electric (98e)		Battery charge status unit				Special Function	Configuration	Y		
BEELINGO Electric (98e)		Battery charge status unit				Special Function	Pack Repair	Y		
BEELINGO Electric (98e)		Engine relay unit				Read ECU Information		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Models	Year classification	System	Subsystem or system type (YES stands for Citroen, NO stands for other wires)	Subsystem (YES stands for Citroen, NO stands for other wires)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
BERLINGO Electric (99e)		Engine relay unit				Read Fault Code		Y		
BERLINGO Electric (99e)		Engine relay unit				Erase Fault Code		Y		
BERLINGO Electric (99e)		Engine relay unit				Live Data		Y		
BERLINGO Electric (99e)		Engine relay unit				Actuation Test		Y		
BERLINGO Electric (99e)		Controls under the steering wheel				Read ECU Information		Y		
BERLINGO Electric (99e)		Controls under the steering wheel				Read Fault Code		Y		
BERLINGO Electric (99e)		Controls under the steering wheel				Erase Fault Code		Y		
BERLINGO Electric (99e)		Controls under the steering wheel				Live Data		Y		
BERLINGO Electric (99e)		Controls under the steering wheel				Actuation Test		Y		
BERLINGO Electric (99e)		Controls under the steering wheel				Special Function	Pack Repair	Y		
BERLINGO Electric (99e)		Onboard charger of the traction battery				Read ECU Information		Y		
BERLINGO Electric (99e)		Onboard charger of the traction battery				Read Fault Code		Y		
BERLINGO Electric (99e)		Onboard charger of the traction battery				Erase Fault Code		Y		
BERLINGO Electric (99e)		Onboard charger of the traction battery				Live Data		Y		
BERLINGO Electric (99e)		Traction battery ECU				Read ECU Information		Y		
BERLINGO Electric (99e)		Traction battery ECU				Read Fault Code		Y		
BERLINGO Electric (99e)		Traction battery ECU				Erase Fault Code		Y		
BERLINGO Electric (99e)		Traction battery ECU				Live Data		Y		
BERLINGO Electric (99e)		Electric machine management ECU				Read ECU Information		Y		
BERLINGO Electric (99e)		Electric machine management ECU				Read Fault Code		Y		
BERLINGO Electric (99e)		Electric machine management ECU				Erase Fault Code		Y		
BERLINGO Electric (99e)		Electric machine management ECU				Live Data		Y		
BERLINGO Electric (99e)		Electric machine management ECU				Special Function	Pack Repair	Y		
BERLINGO Electric (99e)		Electric vehicle ECU				Read ECU Information		Y		
BERLINGO Electric (99e)		Electric vehicle ECU				Read Fault Code		Y		
BERLINGO Electric (99e)		Electric vehicle ECU				Erase Fault Code		Y		
BERLINGO Electric (99e)		Electric vehicle ECU				Live Data		Y		
BERLINGO Electric (99e)		Electric vehicle ECU				Special Function	Pack Repair	Y		
BERLINGO (K9)		Built-in Systems Interface				Read ECU Information		Y		
BERLINGO (K9)		Built-in Systems Interface				Read Fault Code		Y		
BERLINGO (K9)		Built-in Systems Interface				Erase Fault Code		Y		
BERLINGO (K9)		Built-in Systems Interface				Special Function	Maintenance-BSI operating mode	Y		
BERLINGO (K9)		Built-in Systems Interface				Special Function	Pack repair	Y		
BERLINGO (K9)		Engine management ECU	EDC17C60			Read ECU Information		Y		
BERLINGO (K9)		Engine management ECU	EDC17C60			Read Fault Code		Y		
BERLINGO (K9)		Engine management ECU	EDC17C60			Erase Fault Code		Y		
BERLINGO (K9)		Engine management ECU	EDC17C60			Live Data		Y		
BERLINGO (K9)		Engine management ECU	EDC17C60			Actuation Test		Y		
BERLINGO (K9)		Engine management ECU	EDC17C60			Special Function	Pack repair	Y		
BERLINGO (K9)		Engine management ECU	V46_21			Read ECU Information		Y		
BERLINGO (K9)		Engine management ECU	V46_21			Read Fault Code		Y		
BERLINGO (K9)		Engine management ECU	V46_21			Erase Fault Code		Y		
BERLINGO (K9)		Engine management ECU	V46_21			Live Data		Y		
BERLINGO (K9)		Engine management ECU	V46_21			Actuation Test		Y		
BERLINGO (K9)		Engine management ECU	V46_21			Special Function	Pack repair	Y		
BERLINGO (K9)		Engine management ECU	CMV_V156			Read ECU Information		Y		
BERLINGO (K9)		Engine management ECU	CMV_V156			Read Fault Code		Y		
BERLINGO (K9)		Engine management ECU	CMV_V156			Erase Fault Code		Y		
BERLINGO (K9)		Engine management ECU	CMV_V156			Live Data		Y		
BERLINGO (K9)		Engine management ECU	CMV_V156			Actuation Test		Y		
BERLINGO (K9)		Engine management ECU	CMV_V156			Special Function	Pack repair	Y		
BERLINGO (K9)		Engine management ECU	98B - DV600			Read ECU Information		Y		
BERLINGO (K9)		Engine management ECU	98B - DV600			Read Fault Code		Y		
BERLINGO (K9)		Engine management ECU	98B - DV600			Erase Fault Code		Y		
BERLINGO (K9)		Engine management ECU	98B - DV600			Live Data		Y		
BERLINGO (K9)		Engine management ECU	98B - DV600			Actuation Test		Y		
BERLINGO (K9)		Engine management ECU	98B - DV600			Special Function	Pack repair	Y		
BERLINGO (K9)		Engine management ECU	98F - DV600ED - 89 CV			Read ECU Information		Y		
BERLINGO (K9)		Engine management ECU	98F - DV600ED - 89 CV			Read Fault Code		Y		
BERLINGO (K9)		Engine management ECU	98F - DV600ED - 89 CV			Erase Fault Code		Y		
BERLINGO (K9)		Engine management ECU	98F - DV600ED - 89 CV			Live Data		Y		
BERLINGO (K9)		Engine management ECU	98F - DV600ED - 89 CV			Actuation Test		Y		
BERLINGO (K9)		Engine management ECU	98F - DV600ED - 89 CV			Special Function	Pack repair	Y		
BERLINGO (K9)		Engine management ECU	CMV_M61CS003			Read ECU Information		Y		
BERLINGO (K9)		Engine management ECU	CMV_M61CS003			Read Fault Code		Y		
BERLINGO (K9)		Engine management ECU	CMV_M61CS003			Erase Fault Code		Y		
BERLINGO (K9)		Engine management ECU	CMV_M61CS003			Live Data		Y		
BERLINGO (K9)		Engine management ECU	CMV_M61CS003			Special Function	Pack repair	Y		
BERLINGO (K9)		Diesel additive pump				Read ECU Information		Y		
BERLINGO (K9)		Diesel additive pump				Read Fault Code		Y		
BERLINGO (K9)		Diesel additive pump				Erase Fault Code		Y		
BERLINGO (K9)		Diesel additive pump				Live Data		Y		
BERLINGO (K9)		Diesel additive pump				Actuation Test		Y		
BERLINGO (K9)		Automatic gearbox or controlled manual gearbox				Read ECU Information		Y		
BERLINGO (K9)		Automatic gearbox or controlled manual gearbox				Read Fault Code		Y		
BERLINGO (K9)		Automatic gearbox or controlled manual gearbox				Erase Fault Code		Y		
BERLINGO (K9)		Automatic gearbox or controlled manual gearbox				Live Data		Y		
BERLINGO (K9)		Power steering				Read ECU Information		Y		
BERLINGO (K9)		Power steering				Read Fault Code		Y		
BERLINGO (K9)		Power steering				Erase Fault Code		Y		
BERLINGO (K9)		Power steering				Live Data		Y		
BERLINGO (K9)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)				Read ECU Information		Y		
BERLINGO (K9)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)				Read Fault Code		Y		
BERLINGO (K9)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)				Erase Fault Code		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function reasons	Add (Y/N)	Verification (Y/N)	Remarks
BERLING (K9)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)				Live Data		Y		
BERLING (K9)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)				Actuation Test		Y		
BERLING (K9)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)				Special Function	Pack repair	Y		
BERLING (K9)		Overload indicator ECU				Read ECU Information		Y		
BERLING (K9)		Overload indicator ECU				Read Fault Code		Y		
BERLING (K9)		Overload indicator ECU				Erase Fault Code		Y		
BERLING (K9)		Overload indicator ECU				Live Data		Y		
BERLING (K9)		Trailer relay unit				Read ECU Information		Y		
BERLING (K9)		Trailer relay unit				Read Fault Code		Y		
BERLING (K9)		Trailer relay unit				Erase Fault Code		Y		
BERLING (K9)		Trailer relay unit				Live Data		Y		
BERLING (K9)		Bodywork conversion unit				Read ECU Information		Y		
BERLING (K9)		Bodywork conversion unit				Read Fault Code		Y		
BERLING (K9)		Bodywork conversion unit				Erase Fault Code		Y		
BERLING (K9)		Bodywork conversion unit				Live Data		Y		
BERLING (K9)		Battery charge status unit				Read ECU Information		Y		
BERLING (K9)		Battery charge status unit				Read Fault Code		Y		
BERLING (K9)		Battery charge status unit				Erase Fault Code		Y		
BERLING (K9)		Battery charge status unit				Live Data		Y		
BERLING (K9)		Electric steering lock				Read ECU Information		Y		
BERLING (K9)		Electric steering lock				Read Fault Code		Y		
BERLING (K9)		Electric steering lock				Erase Fault Code		Y		
BERLING (K9)		Electric steering lock				Live Data		Y		
BERLING (K9)		Instrument panel	without LCD display			Read ECU Information		Y		
BERLING (K9)		Instrument panel	without LCD display			Read Fault Code		Y		
BERLING (K9)		Instrument panel	without LCD display			Erase Fault Code		Y		
BERLING (K9)		Instrument panel	without LCD display			Live Data		Y		
BERLING (K9)		Instrument panel	without LCD display			Actuation Test		Y		
BERLING (K9)		Instrument panel	with LCD display			Read ECU Information		Y		
BERLING (K9)		Instrument panel	with LCD display			Read Fault Code		Y		
BERLING (K9)		Instrument panel	with LCD display			Erase Fault Code		Y		
BERLING (K9)		Instrument panel	with LCD display			Live Data		Y		
BERLING (K9)		Instrument panel	with LCD display			Actuation Test		Y		
BERLING (K9)		Head-Up Display				Read ECU Information		Y		
BERLING (K9)		Head-Up Display				Read Fault Code		Y		
BERLING (K9)		Head-Up Display				Erase Fault Code		Y		
BERLING (K9)		Head-Up Display				Live Data		Y		
BERLING (K9)		Head-Up Display				Actuation Test		Y		
BERLING (K9)		Controls under the steering wheel				Read ECU Information		Y		
BERLING (K9)		Controls under the steering wheel				Read Fault Code		Y		
BERLING (K9)		Controls under the steering wheel				Erase Fault Code		Y		
BERLING (K9)		Controls under the steering wheel				Live Data		Y		
BERLING (K9)		Controls under the steering wheel				Actuation Test		Y		
BERLING (K9)		Controls under the steering wheel				Special Function	Pack repair	Y		
BERLING (K9)		Control on the steering wheel / integral controls steering wheel				Read ECU Information		Y		
BERLING (K9)		Control on the steering wheel / integral controls steering wheel				Read Fault Code		Y		
BERLING (K9)		Control on the steering wheel / integral controls steering wheel				Erase Fault Code		Y		
BERLING (K9)		Control on the steering wheel / integral controls steering wheel				Live Data		Y		
BERLING (K9)		Traction control mode selector				Read ECU Information		Y		
BERLING (K9)		Traction control mode selector				Read Fault Code		Y		
BERLING (K9)		Traction control mode selector				Live Data		Y		
BERLING (K9)		Traction control mode selector				Actuation Test		Y		
BERLING (K9)		Multiplexed control panel	Accessory audio system and manual air conditioning			Read ECU Information		Y		
BERLING (K9)		Multiplexed control panel	Accessory audio system and manual air conditioning			Read Fault Code		Y		
BERLING (K9)		Multiplexed control panel	Accessory audio system and manual air conditioning			Erase Fault Code		Y		
BERLING (K9)		Multiplexed control panel	Accessory audio system and manual air conditioning			Live Data		Y		
BERLING (K9)		Multiplexed control panel	Accessory audio system and manual air conditioning			Actuation Test		Y		
BERLING (K9)		Multiplexed control panel	Accessory radio and dual-zone automatic air conditioning			Read ECU Information		Y		
BERLING (K9)		Multiplexed control panel	Accessory radio and dual-zone automatic air conditioning			Read Fault Code		Y		
BERLING (K9)		Multiplexed control panel	Accessory radio and dual-zone automatic air conditioning			Erase Fault Code		Y		
BERLING (K9)		Multiplexed control panel	Accessory radio and dual-zone automatic air conditioning			Live Data		Y		
BERLING (K9)		Multiplexed control panel	Accessory radio and dual-zone automatic air conditioning			Actuation Test		Y		
BERLING (K9)		Air bags and pre-tensioners control unit				Read ECU Information		Y		
BERLING (K9)		Air bags and pre-tensioners control unit				Read Fault Code		Y		
BERLING (K9)		Air bags and pre-tensioners control unit				Erase Fault Code		Y		
BERLING (K9)		Air bags and pre-tensioners control unit				Live Data		Y		
BERLING (K9)		Seat belt not fastened warning lights unit				Read ECU Information		Y		
BERLING (K9)		Seat belt not fastened warning lights unit				Actuation Test		Y		
BERLING (K9)		Rain and brightness sensor				Read ECU Information		Y		
BERLING (K9)		Rain and brightness sensor				Read Fault Code		Y		
BERLING (K9)		Rain and brightness sensor				Erase Fault Code		Y		
BERLING (K9)		Rain and brightness sensor				Live Data		Y		
BERLING (K9)		Interior mirror with screen				Read ECU Information		Y		
BERLING (K9)		Interior mirror with screen				Live Data		Y		
BERLING (K9)		Multifunction video camera				Read ECU Information		Y		
BERLING (K9)		Multifunction video camera				Read Fault Code		Y		
BERLING (K9)		Multifunction video camera				Erase Fault Code		Y		
BERLING (K9)		Multifunction video camera				Live Data		Y		
BERLING (K9)		Multifunction video camera				Actuation Test		Y		
BERLING (K9)		Parking assistance	Without Semi-automatic parking system/Monitoring of the blind spot			Read ECU Information		Y		
BERLING (K9)		Parking assistance	Without Semi-automatic parking system/Monitoring of the blind spot			Read Fault Code		Y		
BERLING (K9)		Parking assistance	Without Semi-automatic parking system/Monitoring of the blind spot			Erase Fault Code		Y		
BERLING (K9)		Parking assistance	Without Semi-automatic parking system/Monitoring of the blind spot			Live Data		Y		
BERLING (K9)		Parking assistance	Without Semi-automatic parking system/Monitoring of the blind spot			Actuation Test		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
BERLING (K9)		Parking assistance	With Semi-automatic parking system/Monitoring of the blind spot			Read ECU Information		Y		
BERLING (K9)		Parking assistance	With Semi-automatic parking system/Monitoring of the blind spot			Read Fault Code		Y		
BERLING (K9)		Parking assistance	With Semi-automatic parking system/Monitoring of the blind spot			Erase Fault Code		Y		
BERLING (K9)		Parking assistance	With Semi-automatic parking system/Monitoring of the blind spot			Live Data		Y		
BERLING (K9)		Parking assistance	With Semi-automatic parking system/Monitoring of the blind spot			Actuation Test		Y		
BERLING (K9)		Multifunction screen				Read ECU Information		Y		
BERLING (K9)		Multifunction screen				Read Fault Code		Y		
BERLING (K9)		Multifunction screen				Erase Fault Code		Y		
BERLING (K9)		Multifunction screen				Live Data		Y		
BERLING (K9)		Multifunction screen				Actuation Test		Y		
BERLING (K9)		Touch screen				Read ECU Information		Y		
BERLING (K9)		Touch screen				Read Fault Code		Y		
BERLING (K9)		Touch screen				Erase Fault Code		Y		
BERLING (K9)		Touch screen				Live Data		Y		
BERLING (K9)		Touch screen				Actuation Test		Y		
BERLING (K9)		Audio-navigation/telematic unit/connected audio system	NAC			Read ECU Information		Y		
BERLING (K9)		Audio-navigation/telematic unit/connected audio system	NAC			Read Fault Code		Y		
BERLING (K9)		Audio-navigation/telematic unit/connected audio system	NAC			Erase Fault Code		Y		
BERLING (K9)		Audio-navigation/telematic unit/connected audio system	NAC			Live Data		Y		
BERLING (K9)		Audio-navigation/telematic unit/connected audio system	NAC			Actuation Test		Y		
BERLING (K9)		Audio-navigation/telematic unit/connected audio system	EC			Read ECU Information		Y		
BERLING (K9)		Audio-navigation/telematic unit/connected audio system	EC			Read Fault Code		Y		
BERLING (K9)		Audio-navigation/telematic unit/connected audio system	EC			Erase Fault Code		Y		
BERLING (K9)		Audio-navigation/telematic unit/connected audio system	EC			Live Data		Y		
BERLING (K9)		Audio-navigation/telematic unit/connected audio system	EC			Actuation Test		Y		
BERLING (K9)		Radio				Read ECU Information		Y		
BERLING (K9)		Radio				Read Fault Code		Y		
BERLING (K9)		Radio				Erase Fault Code		Y		
BERLING (K9)		Radio				Live Data		Y		
BERLING (K9)		Radio				Actuation Test		Y		
BERLING (K9)		Control of the telematic unit				Read ECU Information		Y		
BERLING (K9)		Control of the telematic unit				Read Fault Code		Y		
BERLING (K9)		Service module / Independent telematic unit				Read ECU Information		Y		
BERLING (K9)		Service module / Independent telematic unit				Read Fault Code		Y		
BERLING (K9)		Service module / Independent telematic unit				Erase Fault Code		Y		
BERLING (K9)		Service module / Independent telematic unit				Live Data		Y		
BERLING (K9)		Service module / Independent telematic unit				Actuation Test		Y		
BERLING (K9)		External CD player				Read ECU Information		Y		
BERLING (K9)		External CD player				Read Fault Code		Y		
BERLING (K9)		External CD player				Erase Fault Code		Y		
BERLING (K9)		External CD player				Live Data		Y		
BERLING (K9)		External CD player				Actuation Test		Y		
BERLING (K9)		Anti-theft alarm				Read ECU Information		Y		
BERLING (K9)		Anti-theft alarm				Read Fault Code		Y		
BERLING (K9)		Anti-theft alarm				Erase Fault Code		Y		
BERLING (K9)		Anti-theft alarm				Live Data		Y		
BERLING (K9)		Intrusion alarm siren				Read ECU Information		Y		
BERLING (K9)		Intrusion alarm siren				Read Fault Code		Y		
BERLING (K9)		Intrusion alarm siren				Erase Fault Code		Y		
BERLING (K9)		Intrusion alarm siren				Live Data		Y		
BERLING (K9)		Intrusion alarm siren				Actuation Test		Y		
BERLING (K9)		Driver's door module				Read ECU Information		Y		
BERLING (K9)		Driver's door module				Read Fault Code		Y		
BERLING (K9)		Driver's door module				Erase Fault Code		Y		
BERLING (K9)		Driver's door module				Live Data		Y		
BERLING (K9)		Driver's door module				Actuation Test		Y		
BERLING (K9)		Air conditioning				Read ECU Information		Y		
BERLING (K9)		Air conditioning				Read Fault Code		Y		
BERLING (K9)		Air conditioning				Erase Fault Code		Y		
BERLING (K9)		Air conditioning				Live Data		Y		
BERLING (K9)		Air conditioning				Actuation Test		Y		
BERLING (K9)		Additional heating				Read ECU Information		Y		
BERLING (K9)		Additional heating				Read Fault Code		Y		
BERLING (K9)		Additional heating				Erase Fault Code		Y		
BERLING (K9)		Additional heating				Live Data		Y		
JUMPY (1995-2004)		Engine ECU	Petrol engine	2.0L BFN MM8P		Read ECU Information		Y		
JUMPY (1995-2004)		Engine ECU	Petrol engine	2.0L BFN MM8P		Read Fault Code		Y		
JUMPY (1995-2004)		Engine ECU	Petrol engine	2.0L BFN MM8P		Erase Fault Code		Y		
JUMPY (1995-2004)		Engine ECU	Petrol engine	2.0L BFN MM8P		Live Data		Y		
JUMPY (1995-2004)		Engine ECU	Petrol engine	2.0L BFN MM8P		Actuation Test		Y		
JUMPY (1995-2004)		Engine ECU	Petrol engine	2.0L BFN MM8P		Special Function	Initialisation of the adaptive values	Y		
JUMPY (1995-2004)		Engine ECU	Diesel engine	1.9L DMX BOSCH AS3-VF20		Read Fault Code		Y		
JUMPY (1995-2004)		Engine ECU	Diesel engine	1.9L DMX BOSCH AS3-VF20		Erase Fault Code		Y		
JUMPY (1995-2004)		Engine ECU	Diesel engine	1.9L DMX BOSCH AS3-VF20		Live Data		Y		
JUMPY (1995-2004)		Engine ECU	Diesel engine	2.0L RHV BOSCH EDC15C2		Read ECU Information		Y		
JUMPY (1995-2004)		Engine ECU	Diesel engine	2.0L RHV BOSCH EDC15C2		Read Fault Code		Y		
JUMPY (1995-2004)		Engine ECU	Diesel engine	2.0L RHV BOSCH EDC15C2		Erase Fault Code		Y		
JUMPY (1995-2004)		Engine ECU	Diesel engine	2.0L RHV BOSCH EDC15C2		Live Data		Y		
JUMPY (1995-2004)		Engine ECU	Diesel engine	2.0L RHV BOSCH EDC15C2		Actuation Test		Y		
JUMPY (1995-2004)		Engine ECU	Diesel engine	2.0L RHZ BOSCH EDC15C2		Read ECU Information		Y		
JUMPY (1995-2004)		Engine ECU	Diesel engine	2.0L RHZ BOSCH EDC15C2		Read Fault Code		Y		
JUMPY (1995-2004)		Engine ECU	Diesel engine	2.0L RHZ BOSCH EDC15C2		Erase Fault Code		Y		
JUMPY (1995-2004)		Engine ECU	Diesel engine	2.0L RHZ BOSCH EDC15C2		Live Data		Y		
JUMPY (1995-2004)		Engine ECU	Diesel engine	2.0L RHZ BOSCH EDC15C2		Actuation Test		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Models	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
JUMPY (1995-2004)		Engine ECU	Diesel engine	2.0L B18 BOSCH EDC15C2		Read ECU Information		Y		
JUMPY (1995-2004)		Engine ECU	Diesel engine	2.0L B18 BOSCH EDC15C2		Read Fault Code		Y		
JUMPY (1995-2004)		Engine ECU	Diesel engine	2.0L B18 BOSCH EDC15C2		Erase Fault Code		Y		
JUMPY (1995-2004)		Engine ECU	Diesel engine	2.0L B18 BOSCH EDC15C2		Live Data		Y		
JUMPY (1995-2004)		Engine ECU	Diesel engine	2.0L B18 BOSCH EDC15C2		Actuation Test		Y		
JUMPY (1995-2004)		Engine ECU	Diesel engine	1.9L R1J LUCAS DN2		Read ECU Information		Y		
JUMPY (1995-2004)		Engine ECU	Diesel engine	1.9L R1J LUCAS DN2		Read Fault Code		Y		
JUMPY (1995-2004)		Engine ECU	Diesel engine	1.9L R1J LUCAS DN2		Erase Fault Code		Y		
JUMPY (1995-2004)		Engine ECU	Diesel engine	1.9L R1J LUCAS DN2		Live Data		Y		
JUMPY (1995-2004)		Engine ECU	Diesel engine	1.9L R1J LUCAS DN2		Actuation Test		Y		
JUMPY (1995-2004)		Auto gearbox	Auto gearbox AL4.1			Read ECU Information		Y		
JUMPY (1995-2004)		Auto gearbox	Auto gearbox AL4.1			Read Fault Code		Y		
JUMPY (1995-2004)		Auto gearbox	Auto gearbox AL4.1			Erase Fault Code		Y		
JUMPY (1995-2004)		Auto gearbox	Auto gearbox AL4.1			Live Data		Y		
JUMPY (1995-2004)		Auto gearbox	Auto gearbox AL4.1			Actuation Test		Y		
JUMPY (1995-2004)		Auto gearbox	Auto gearbox AL4.1			Special Function	Initialisation of auto-adaptation	Y		
JUMPY (1995-2004)		Auto gearbox	Auto gearbox AL4.2			Read ECU Information		Y		
JUMPY (1995-2004)		Auto gearbox	Auto gearbox AL4.2			Read Fault Code		Y		
JUMPY (1995-2004)		Auto gearbox	Auto gearbox AL4.2			Erase Fault Code		Y		
JUMPY (1995-2004)		Auto gearbox	Auto gearbox AL4.2			Live Data		Y		
JUMPY (1995-2004)		Auto gearbox	Auto gearbox AL4.2			Actuation Test		Y		
JUMPY (1995-2004)		Auto gearbox	Auto gearbox AL4.2			Special Function	Pedal initialisation	Y		
JUMPY (1995-2004)		Auto gearbox	Auto gearbox AL4.2			Special Function	Initialisation of auto-adaptation	Y		
JUMPY (1995-2004)		Auto gearbox	Auto gearbox AL4.2			Special Function	Oil wear counter	Y		
JUMPY (1995-2004)		Auto gearbox	Auto gearbox AL4.3			Read ECU Information		Y		
JUMPY (1995-2004)		Auto gearbox	Auto gearbox AL4.3			Read Fault Code		Y		
JUMPY (1995-2004)		Auto gearbox	Auto gearbox AL4.3			Erase Fault Code		Y		
JUMPY (1995-2004)		Auto gearbox	Auto gearbox AL4.3			Live Data		Y		
JUMPY (1995-2004)		Auto gearbox	Auto gearbox AL4.3			Actuation Test		Y		
JUMPY (1995-2004)		Auto gearbox	Auto gearbox AL4.3			Special Function	Pedal initialisation	Y		
JUMPY (1995-2004)		Auto gearbox	Auto gearbox AL4.3			Special Function	Initialisation of auto-adaptation	Y		
JUMPY (1995-2004)		Auto gearbox	Auto gearbox AL4.3			Special Function	Oil wear counter	Y		
JUMPY (1995-2004)		Anti-lock brake system	ABSElectronic distribution			Read ECU Information		Y		
JUMPY (1995-2004)		Anti-lock brake system	ABSElectronic distribution			Read Fault Code		Y		
JUMPY (1995-2004)		Anti-lock brake system	ABSElectronic distribution			Erase Fault Code		Y		
JUMPY (1995-2004)		Anti-lock brake system	ABSElectronic distribution			Live Data		Y		
JUMPY (1995-2004)		Anti-lock brake system	ABSElectronic distribution			Special Function	Bleeding	Y		
JUMPY (1995-2004)		Airbag				Read ECU Information		Y		
JUMPY (1995-2004)		Airbag				Read Fault Code		Y		
JUMPY (1995-2004)		Airbag				Erase Fault Code		Y		
JUMPY (1995-2004)		Coded anti-theft device				Read ECU Information		Y		
JUMPY (1995-2004)		Coded anti-theft device				Read Fault Code		Y		
JUMPY (1995-2004)		Coded anti-theft device				Erase Fault Code		Y		
JUMPY (1995-2004)		Coded anti-theft device				Live Data		Y		
JUMPY (1995-2004)		Additional heating				Read ECU Information		Y		
JUMPY (1995-2004)		Additional heating				Read Fault Code		Y		
JUMPY (1995-2004)		Additional heating				Erase Fault Code		Y		
JUMPY (1995-2004)		Additional heating				Live Data		Y		
JUMPY (1995-2004)		Additional heating				Actuation Test		Y		
JUMPY (1995-2004)		CPH				Read ECU Information		Y		
JUMPY (1995-2004)		CPH				Live Data		Y		
JUMPY 2 (2004-2007)		Engine ECU	Petrol engine	2.0L BFN VM48P		Read ECU Information		Y		
JUMPY 2 (2004-2007)		Engine ECU	Petrol engine	2.0L BFN VM48P		Read Fault Code		Y		
JUMPY 2 (2004-2007)		Engine ECU	Petrol engine	2.0L BFN VM48P		Erase Fault Code		Y		
JUMPY 2 (2004-2007)		Engine ECU	Petrol engine	2.0L BFN VM48P		Live Data		Y		
JUMPY 2 (2004-2007)		Engine ECU	Petrol engine	2.0L BFN VM48P		Actuation Test		Y		
JUMPY 2 (2004-2007)		Engine ECU	Petrol engine	2.0L BFN VM48P		Special Function	Initialisation of the adaptive values	Y		
JUMPY 2 (2004-2007)		Engine ECU	Diesel engine	2.0L B18 BOSCH EDC15C2		Read ECU Information		Y		
JUMPY 2 (2004-2007)		Engine ECU	Diesel engine	2.0L B18 BOSCH EDC15C2		Live Data		Y		
JUMPY 2 (2004-2007)		Engine ECU	Diesel engine	2.0L B18 BOSCH EDC15C2		Read ECU Information		Y		
JUMPY 2 (2004-2007)		Engine ECU	Diesel engine	2.0L B18 BOSCH EDC15C2		Live Data		Y		
JUMPY 2 (2004-2007)		Engine ECU	Diesel engine	1.9L R1J LUCAS DN2		Read ECU Information		Y		
JUMPY 2 (2004-2007)		Engine ECU	Diesel engine	1.9L R1J LUCAS DN2		Read Fault Code		Y		
JUMPY 2 (2004-2007)		Engine ECU	Diesel engine	1.9L R1J LUCAS DN2		Erase Fault Code		Y		
JUMPY 2 (2004-2007)		Engine ECU	Diesel engine	1.9L R1J LUCAS DN2		Live Data		Y		
JUMPY 2 (2004-2007)		Engine ECU	Diesel engine	1.9L R1J LUCAS DN2		Actuation Test		Y		
JUMPY 2 (2004-2007)		Auto gearbox	Auto gearbox AL4.1			Read ECU Information		Y		
JUMPY 2 (2004-2007)		Auto gearbox	Auto gearbox AL4.1			Read Fault Code		Y		
JUMPY 2 (2004-2007)		Auto gearbox	Auto gearbox AL4.1			Erase Fault Code		Y		
JUMPY 2 (2004-2007)		Auto gearbox	Auto gearbox AL4.1			Live Data		Y		
JUMPY 2 (2004-2007)		Auto gearbox	Auto gearbox AL4.1			Actuation Test		Y		
JUMPY 2 (2004-2007)		Auto gearbox	Auto gearbox AL4.1			Special Function	Initialisation of auto-adaptation	Y		
JUMPY 2 (2004-2007)		Auto gearbox	Auto gearbox AL4.2			Read ECU Information		Y		
JUMPY 2 (2004-2007)		Auto gearbox	Auto gearbox AL4.2			Read Fault Code		Y		
JUMPY 2 (2004-2007)		Auto gearbox	Auto gearbox AL4.2			Erase Fault Code		Y		
JUMPY 2 (2004-2007)		Auto gearbox	Auto gearbox AL4.2			Live Data		Y		
JUMPY 2 (2004-2007)		Auto gearbox	Auto gearbox AL4.2			Actuation Test		Y		
JUMPY 2 (2004-2007)		Auto gearbox	Auto gearbox AL4.2			Special Function	Pedal initialisation	Y		
JUMPY 2 (2004-2007)		Auto gearbox	Auto gearbox AL4.2			Special Function	Initialisation of auto-adaptation	Y		
JUMPY 2 (2004-2007)		Auto gearbox	Auto gearbox AL4.2			Special Function	Oil wear counter	Y		
JUMPY 2 (2004-2007)		Auto gearbox	Auto gearbox AL4.3			Read ECU Information		Y		
JUMPY 2 (2004-2007)		Auto gearbox	Auto gearbox AL4.3			Read Fault Code		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Models	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
JMPP3 (After 2007)		ABS/Electronic stability program	ABS_BOSCH			Special Function	Display and printing of all the parameters	Y		
JMPP3 (After 2007)		ABS/Electronic stability program	ABS_BOSCH			Special Function	Configuration with displaying of the parameters	Y		
JMPP3 (After 2007)		ABS/Electronic stability program	ABS_BOSCH			Special Function	Steering wheel angle sensor calibration	Y		
JMPP3 (After 2007)		ABS/Electronic stability program	ABS_BOSCH			Special Function	Bleeding	Y		
JMPP3 (After 2007)		ABS/Electronic stability program	ESP_BOSCH			Read ECU Information	Read ECU Information	Y		
JMPP3 (After 2007)		ABS/Electronic stability program	ESP_BOSCH			Read Fault Code		Y		
JMPP3 (After 2007)		ABS/Electronic stability program	ESP_BOSCH			Erase Fault Code		Y		
JMPP3 (After 2007)		ABS/Electronic stability program	ESP_BOSCH			Live Data		Y		
JMPP3 (After 2007)		ABS/Electronic stability program	ESP_BOSCH			Actuation Test		Y		
JMPP3 (After 2007)		ABS/Electronic stability program	ESP_BOSCH			Special Function	Calibration of the steering wheel angle sensor	Y		
JMPP3 (After 2007)		ABS/Electronic stability program	ESP_BOSCH			Special Function	Bleeding	Y		
JMPP3 (After 2007)		ABS/Electronic stability program	ESP_BOSCH			Special Function	Longitudinal acceleration sensor calibration	Y		
JMPP3 (After 2007)		ABS/Electronic stability program	ESP_BOSCH			Special Function	Configuration	Y		
JMPP3 (After 2007)		ABS/Electronic stability program	ESPR.1_BOSCH			Read ECU Information		Y		
JMPP3 (After 2007)		ABS/Electronic stability program	ESPR.1_BOSCH			Read Fault Code		Y		
JMPP3 (After 2007)		ABS/Electronic stability program	ESPR.1_BOSCH			Erase Fault Code		Y		
JMPP3 (After 2007)		ABS/Electronic stability program	ESPR.1_BOSCH			Live Data		Y		
JMPP3 (After 2007)		ABS/Electronic stability program	ESPR.1_BOSCH			Actuation Test		Y		
JMPP3 (After 2007)		ABS/Electronic stability program	ESPR.1_BOSCH			Special Function	Configuration	Y		
JMPP3 (After 2007)		ABS/Electronic stability program	ESPR.1_BOSCH			Special Function	Replacement part	Y		
JMPP3 (After 2007)		Airbag				Read ECU Information		Y		
JMPP3 (After 2007)		Airbag				Read Fault Code		Y		
JMPP3 (After 2007)		Airbag				Erase Fault Code		Y		
JMPP3 (After 2007)		Airbag				Live Data		Y		
JMPP3 (After 2007)		Airbag				Special Function	Configuration	Y		
JMPP3 (After 2007)		Airbag				Special Function	Pack Repair	Y		
JMPP3 (After 2007)		BSI				Read ECU Information		Y		
JMPP3 (After 2007)		BSI				Read Fault Code		Y		
JMPP3 (After 2007)		BSI				Erase Fault Code		Y		
JMPP3 (After 2007)		BSI				Live Data		Y		
JMPP3 (After 2007)		BSI				Actuation Test		Y		
JMPP3 (After 2007)		BSI				Special Function	Maintenance-BSI operating mode	Y		
JMPP3 (After 2007)		BSI				Special Function	Replacement parts	Y		
JMPP3 (After 2007)		Instrument panel				Read ECU Information		Y		
JMPP3 (After 2007)		Instrument panel				Read Fault Code		Y		
JMPP3 (After 2007)		Instrument panel				Erase Fault Code		Y		
JMPP3 (After 2007)		Instrument panel				Live Data		Y		
JMPP3 (After 2007)		Instrument panel				Special Function	Configuration	Y		
JMPP3 (After 2007)		Radio				Read ECU Information		Y		
JMPP3 (After 2007)		Radio				Read Fault Code		Y		
JMPP3 (After 2007)		Radio				Erase Fault Code		Y		
JMPP3 (After 2007)		Radio				Live Data		Y		
JMPP3 (After 2007)		Radio				Actuation Test		Y		
JMPP3 (After 2007)		Radio				Special Function	Replacement parts	Y		
JMPP3 (After 2007)		Radio				Special Function	Configuration	Y		
JMPP3 (After 2007)		CD player				Read ECU Information		Y		
JMPP3 (After 2007)		CD player				Read Fault Code		Y		
JMPP3 (After 2007)		CD player				Erase Fault Code		Y		
JMPP3 (After 2007)		CD player				Live Data		Y		
JMPP3 (After 2007)		CD player				Actuation Test		Y		
JMPP3 (After 2007)		CD player				Special Function	Configuration	Y		
JMPP3 (After 2007)		Parking assistance				Read ECU Information		Y		
JMPP3 (After 2007)		Parking assistance				Read Fault Code		Y		
JMPP3 (After 2007)		Parking assistance				Erase Fault Code		Y		
JMPP3 (After 2007)		Parking assistance				Live Data		Y		
JMPP3 (After 2007)		Parking assistance				Actuation Test		Y		
JMPP3 (After 2007)		Parking assistance				Special Function	Overall check of the sensors	Y		
JMPP3 (After 2007)		Air conditioning				Read ECU Information		Y		
JMPP3 (After 2007)		Air conditioning				Read Fault Code		Y		
JMPP3 (After 2007)		Air conditioning				Erase Fault Code		Y		
JMPP3 (After 2007)		Air conditioning				Live Data		Y		
JMPP3 (After 2007)		Air conditioning				Special Function	Programming	Y		
JMPP3 (After 2007)		Air conditioning				Special Function	Configuration	Y		
JMPP3 (After 2007)		Air conditioning				Special Function	Pack repair	Y		
JMPP3 (After 2007)		Rear air conditioning table				Read ECU Information		Y		
JMPP3 (After 2007)		Rear air conditioning table				Read Fault Code		Y		
JMPP3 (After 2007)		Rear air conditioning table				Erase Fault Code		Y		
JMPP3 (After 2007)		Rear air conditioning table				Live Data		Y		
JMPP3 (After 2007)		Rear air conditioning table				Actuation Test		Y		
JMPP3 (After 2007)		Rear air conditioning table				Special Function	Pack repair	Y		
JMPP3 (After 2007)		Switch module under the steering wheel				Read ECU Information		Y		
JMPP3 (After 2007)		Switch module under the steering wheel				Read Fault Code		Y		
JMPP3 (After 2007)		Switch module under the steering wheel				Erase Fault Code		Y		
JMPP3 (After 2007)		Switch module under the steering wheel				Live Data		Y		
JMPP3 (After 2007)		Switch module under the steering wheel				Actuation Test		Y		
JMPP3 (After 2007)		Alarm				Read ECU Information		Y		
JMPP3 (After 2007)		Alarm				Read Fault Code		Y		
JMPP3 (After 2007)		Alarm				Erase Fault Code		Y		
JMPP3 (After 2007)		Alarm				Live Data		Y		
JMPP3 (After 2007)		Alarm				Actuation Test		Y		
JMPP3 (After 2007)		Alarm				Special Function	Configuration	Y		
JMPP3 (After 2007)		Rain sensor/Brightness				Read ECU Information		Y		
JMPP3 (After 2007)		Rain sensor/Brightness				Read Fault Code		Y		
JMPP3 (After 2007)		Rain sensor/Brightness				Erase Fault Code		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Models	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
JUMPY 3 (After 2007)		Multifunction screen	Multifunction screen A			Read ECU Information		Y		
JUMPY 3 (After 2007)		Multifunction screen	Multifunction screen A			Read Fault Code		Y		
JUMPY 3 (After 2007)		Multifunction screen	Multifunction screen A			Erase Fault Code		Y		
JUMPY 3 (After 2007)		Multifunction screen	Multifunction screen A			Live Data		Y		
JUMPY 3 (After 2007)		Multifunction screen	Multifunction screen A			Actuation Test		Y		
JUMPY 3 (After 2007)		Multifunction screen	Multifunction screen A			Special Function	Configuration	Y		
JUMPY 3 (After 2007)		Multifunction screen	Multifunction screen A			Special Function	Pack Repair	Y		
JUMPY 3 (After 2007)		Multifunction screen	Multifunction screen C			Read ECU Information		Y		
JUMPY 3 (After 2007)		Multifunction screen	Multifunction screen C			Read Fault Code		Y		
JUMPY 3 (After 2007)		Multifunction screen	Multifunction screen C			Erase Fault Code		Y		
JUMPY 3 (After 2007)		Multifunction screen	Multifunction screen C			Live Data		Y		
JUMPY 3 (After 2007)		Multifunction screen	Multifunction screen C			Actuation Test		Y		
JUMPY 3 (After 2007)		Multifunction screen	Multifunction screen C			Special Function	Configuration	Y		
JUMPY 3 (After 2007)		Multifunction screen	Multifunction screen C			Special Function	Pack Repair	Y		
JUMPY 3 (After 2007)		Telematic	Telematics (RE3)			Read ECU Information		Y		
JUMPY 3 (After 2007)		Telematic	Telematics (RE3)			Read Fault Code		Y		
JUMPY 3 (After 2007)		Telematic	Telematics (RE3)			Erase Fault Code		Y		
JUMPY 3 (After 2007)		Telematic	Telematics (RE3)			Live Data		Y		
JUMPY 3 (After 2007)		Telematic	Telematics (RE3)			Actuation Test		Y		
JUMPY 3 (After 2007)		Telematic	Telematic (RE4)			Read ECU Information		Y		
JUMPY 3 (After 2007)		Telematic	Telematic (RE4)			Read Fault Code		Y		
JUMPY 3 (After 2007)		Telematic	Telematic (RE4)			Erase Fault Code		Y		
JUMPY 3 (After 2007)		Telematic	Telematic (RE4)			Live Data		Y		
JUMPY 3 (After 2007)		Telematic	Telematic (RE4)			Actuation Test		Y		
JUMPY 3 (After 2007)		Telematic	Telematic (RE5)			Read ECU Information		Y		
JUMPY 3 (After 2007)		Telematic	Telematic (RE5)			Read Fault Code		Y		
JUMPY 3 (After 2007)		Telematic	Telematic (RE5)			Erase Fault Code		Y		
JUMPY 3 (After 2007)		Telematic	Telematic (RE5)			Live Data		Y		
JUMPY 3 (After 2007)		Telematic	Telematic (RE5)			Actuation Test		Y		
JUMPY 3 (After 2007)		Telematic	RNBS navigation radio			Read ECU Information		Y		
JUMPY 3 (After 2007)		Telematic	RNBS navigation radio			Read Fault Code		Y		
JUMPY 3 (After 2007)		Telematic	RNBS navigation radio			Erase Fault Code		Y		
JUMPY 3 (After 2007)		Telematic	RNBS navigation radio			Live Data		Y		
JUMPY 3 (After 2007)		Telematic	RNBS navigation radio			Actuation Test		Y		
JUMPY 3 (After 2007)		Telematic	RNBS navigation radio			Special Function	Configuration	Y		
JUMPY 3 (After 2007)		Power steering				Read ECU Information		Y		
JUMPY 3 (After 2007)		Power steering				Read Fault Code		Y		
JUMPY 3 (After 2007)		Power steering				Erase Fault Code		Y		
JUMPY 3 (After 2007)		Power steering				Live Data		Y		
JUMPY 3 (After 2007)		Power steering				Actuation Test		Y		
JUMPY 3 (After 2007)		Pneumatic suspension				Read ECU Information		Y		
JUMPY 3 (After 2007)		Pneumatic suspension				Read Fault Code		Y		
JUMPY 3 (After 2007)		Pneumatic suspension				Erase Fault Code		Y		
JUMPY 3 (After 2007)		Pneumatic suspension				Live Data		Y		
JUMPY 3 (After 2007)		Pneumatic suspension				Actuation Test		Y		
JUMPY 3 (After 2007)		Additional heating				Read ECU Information		Y		
JUMPY 3 (After 2007)		Additional heating				Read Fault Code		Y		
JUMPY 3 (After 2007)		Additional heating				Erase Fault Code		Y		
JUMPY 3 (After 2007)		Trailer relay unit				Read ECU Information		Y		
JUMPY 3 (After 2007)		Trailer relay unit				Read Fault Code		Y		
JUMPY 3 (After 2007)		Trailer relay unit				Erase Fault Code		Y		
JUMPY 3 (After 2007)		Trailer relay unit				Live Data		Y		
JUMPY 3 (After 2007)		Trailer relay unit				Actuation Test		Y		
JUMPY 3 (After 2007)		Engine relay unit				Read ECU Information		Y		
JUMPY 3 (After 2007)		Engine relay unit				Read Fault Code		Y		
JUMPY 3 (After 2007)		Engine relay unit				Erase Fault Code		Y		
JUMPY 3 (After 2007)		Engine relay unit				Live Data		Y		
JUMPY 3 (After 2007)		Engine relay unit				Actuation Test		Y		
JUMPY 3 (After 2007)		Hands Free Kit				Read ECU Information		Y		
JUMPY 3 (After 2007)		Hands Free Kit				Read Fault Code		Y		
JUMPY 3 (After 2007)		Hands Free Kit				Erase Fault Code		Y		
JUMPY 3 (After 2007)		Hands Free Kit				Live Data		Y		
JUMPY 3 (After 2007)		Hands Free Kit				Actuation Test		Y		
JUMPY 3 (After 2007)		Hands Free Kit				Special Function	Configuration	Y		
JUMPY 3 (After 2007)		Hands Free Kit				Special Function	Pack Repair	Y		
JUMPY 3 (After 2007)		Bodywork Conversion Unit				Read ECU Information		Y		
JUMPY 3 (After 2007)		Bodywork Conversion Unit				Read Fault Code		Y		
JUMPY 3 (After 2007)		Bodywork Conversion Unit				Erase Fault Code		Y		
JUMPY 3 (After 2007)		Bodywork Conversion Unit				Live Data		Y		
JUMPY 3 (After 2007)		Bodywork Conversion Unit				Actuation Test		Y		
JUMPY 3 (After 2007)		Learning				Special Function	Key programming	Y		
JUMPY 3 (After 2007)		Calibration of the steering wheel angle sensor : C2, C3, C3 pluraliel, New Look GS with ESP M60ESP M60G				Special Function	Calibration of the steering wheel angle sensor : C2, C3, C3 pluraliel, New	Y		
JUMPY 3 (After 2007)		Calibration of the steering wheel angle sensor : C2, C3, C3 pluraliel, New Look GS with ESP M60ESP & I				Special Function	Steering wheel angle sensor calibration	Y		
JUMPY 000		Built-in Systems Interface				Read ECU Information		Y		
JUMPY 000		Built-in Systems Interface				Read Fault Code		Y		
JUMPY 000		Built-in Systems Interface				Erase Fault Code		Y		
JUMPY 000		Built-in Systems Interface				Special Function	Maintenance-BSI operating mode	Y		
JUMPY 000		Built-in Systems Interface				Special Function	Pack repair	Y		
JUMPY 000		Engine ECU	DOM6.2			Read ECU Information		Y		
JUMPY 000		Engine ECU	DOM6.2			Read Fault Code		Y		
JUMPY 000		Engine ECU	DOM6.2			Erase Fault Code		Y		
JUMPY 000		Engine ECU	DOM6.2			Live Data		Y		
JUMPY 000		Engine ECU	DOM6.2			Actuation Test		Y		
JUMPY 000		Engine ECU	DOM6.2			Special Function	Pack Repair	Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Models	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
JUMPY (00)		Engine ECU	EDC17030			Read ECU Information		Y		
JUMPY (00)		Engine ECU	EDC17030			Read Fault Code		Y		
JUMPY (00)		Engine ECU	EDC17030			Erase Fault Code		Y		
JUMPY (00)		Engine ECU	EDC17030			Live Data		Y		
JUMPY (00)		Engine ECU	EDC17030			Actuation Test		Y		
JUMPY (00)		Engine ECU	EDC17030			Special Function	Pack Repair	Y		
JUMPY (00)		Engine ECU	EDC17C10_B82	S9B - DV8EU		Read ECU Information		Y		
JUMPY (00)		Engine ECU	EDC17C10_B82	S9B - DV8EU		Read Fault Code		Y		
JUMPY (00)		Engine ECU	EDC17C10_B82	S9B - DV8EU		Erase Fault Code		Y		
JUMPY (00)		Engine ECU	EDC17C10_B82	S9B - DV8EU		Live Data		Y		
JUMPY (00)		Engine ECU	EDC17C10_B82	S9B - DV8EU		Actuation Test		Y		
JUMPY (00)		Engine ECU	EDC17C10_B82	S9B - DV8EU		Special Function	Pack Repair	Y		
JUMPY (00)		Engine ECU	EDC17C10_B82	S9F - DV80TED - 89 CY		Read ECU Information		Y		
JUMPY (00)		Engine ECU	EDC17C10_B82	S9F - DV80TED - 89 CY		Read Fault Code		Y		
JUMPY (00)		Engine ECU	EDC17C10_B82	S9F - DV80TED - 89 CY		Erase Fault Code		Y		
JUMPY (00)		Engine ECU	EDC17C10_B82	S9F - DV80TED - 89 CY		Live Data		Y		
JUMPY (00)		Engine ECU	EDC17C10_B82	S9F - DV80TED - 89 CY		Actuation Test		Y		
JUMPY (00)		Engine ECU	EDC17C10_B82	S9F - DV80TED - 89 CY		Special Function	Pack Repair	Y		
JUMPY (00)		Engine ECU	CMU_BCM71			Read ECU Information		Y		
JUMPY (00)		Engine ECU	CMU_BCM71			Read Fault Code		Y		
JUMPY (00)		Engine ECU	CMU_BCM71			Erase Fault Code		Y		
JUMPY (00)		Engine ECU	CMU_BCM71			Live Data		Y		
JUMPY (00)		Engine ECU	CMU_BCM71			Actuation Test		Y		
JUMPY (00)		Engine ECU	CMU_BCM71			Special Function	Pack Repair	Y		
JUMPY (00)		Engine ECU	CMU_MUC5003			Read ECU Information		Y		
JUMPY (00)		Engine ECU	CMU_MUC5003			Read Fault Code		Y		
JUMPY (00)		Engine ECU	CMU_MUC5003			Erase Fault Code		Y		
JUMPY (00)		Engine ECU	CMU_MUC5003			Live Data		Y		
JUMPY (00)		Engine ECU	CMU_MUC5003			Special Function	Pack Repair	Y		
JUMPY (00)		Diesel additive pump				Read ECU Information		Y		
JUMPY (00)		Diesel additive pump				Read Fault Code		Y		
JUMPY (00)		Diesel additive pump				Erase Fault Code		Y		
JUMPY (00)		Diesel additive pump				Live Data		Y		
JUMPY (00)		Diesel additive pump				Actuation Test		Y		
JUMPY (00)		Voltage retaining device	DMTC			Read ECU Information		Y		
JUMPY (00)		Voltage retaining device	DMTR_DTC3B			Read ECU Information		Y		
JUMPY (00)		Voltage retaining device	DMTR_DTC3B			Read Fault Code		Y		
JUMPY (00)		Voltage retaining device	DMTR_DTC3B			Erase Fault Code		Y		
JUMPY (00)		Automatic gearbox or controlled manual gearbox	EVA_A338			Read ECU Information		Y		
JUMPY (00)		Automatic gearbox or controlled manual gearbox	EVA_A338			Read Fault Code		Y		
JUMPY (00)		Automatic gearbox or controlled manual gearbox	EVA_A338			Erase Fault Code		Y		
JUMPY (00)		Automatic gearbox or controlled manual gearbox	EVA_A338			Live Data		Y		
JUMPY (00)		Automatic gearbox or controlled manual gearbox	EVA_A86_A16_US			Read ECU Information		Y		
JUMPY (00)		Automatic gearbox or controlled manual gearbox	EVA_A86_A16_US			Read Fault Code		Y		
JUMPY (00)		Automatic gearbox or controlled manual gearbox	EVA_A86_A16_US			Erase Fault Code		Y		
JUMPY (00)		Automatic gearbox or controlled manual gearbox	EVA_A86_A16_US			Live Data		Y		
JUMPY (00)		Automatic gearbox or controlled manual gearbox	EVA_A86_A16_US			Actuation Test		Y		
JUMPY (00)		Automatic gearbox or controlled manual gearbox	EVWP_MCP_US			Read ECU Information		Y		
JUMPY (00)		Automatic gearbox or controlled manual gearbox	EVWP_MCP_US			Read Fault Code		Y		
JUMPY (00)		Automatic gearbox or controlled manual gearbox	EVWP_MCP_US			Erase Fault Code		Y		
JUMPY (00)		Automatic gearbox or controlled manual gearbox	EVWP_MCP_US			Live Data		Y		
JUMPY (00)		Automatic gearbox or controlled manual gearbox	EVWP_MCP_US			Actuation Test		Y		
JUMPY (00)		Automatic gearbox or controlled manual gearbox	EVWP_MCP_US			Special Function	Pack Repair	Y		
JUMPY (00)		Power steering				Read ECU Information		Y		
JUMPY (00)		Power steering				Read Fault Code		Y		
JUMPY (00)		Power steering				Erase Fault Code		Y		
JUMPY (00)		Power steering				Live Data		Y		
JUMPY (00)		Power steering				Actuation Test		Y		
JUMPY (00)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)				Read ECU Information		Y		
JUMPY (00)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)				Read Fault Code		Y		
JUMPY (00)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)				Erase Fault Code		Y		
JUMPY (00)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)				Live Data		Y		
JUMPY (00)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)				Actuation Test		Y		
JUMPY (00)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)				Special Function	Pack Repair	Y		
JUMPY (00)		Engine relay unit				Read ECU Information		Y		
JUMPY (00)		Engine relay unit				Read Fault Code		Y		
JUMPY (00)		Engine relay unit				Erase Fault Code		Y		
JUMPY (00)		Trailer relay unit				Read ECU Information		Y		
JUMPY (00)		Trailer relay unit				Read Fault Code		Y		
JUMPY (00)		Trailer relay unit				Erase Fault Code		Y		
JUMPY (00)		Trailer relay unit				Live Data		Y		
JUMPY (00)		Trailer relay unit				Actuation Test		Y		
JUMPY (00)		Bodywork conversion unit				Read ECU Information		Y		
JUMPY (00)		Bodywork conversion unit				Read Fault Code		Y		
JUMPY (00)		Bodywork conversion unit				Erase Fault Code		Y		
JUMPY (00)		Bodywork conversion unit				Live Data		Y		
JUMPY (00)		Battery charge status unit				Read ECU Information		Y		
JUMPY (00)		Battery charge status unit				Read Fault Code		Y		
JUMPY (00)		Battery charge status unit				Erase Fault Code		Y		
JUMPY (00)		Battery charge status unit				Live Data		Y		
JUMPY (00)		Supply protection and management unit				Read ECU Information		Y		
JUMPY (00)		Supply protection and management unit				Read Fault Code		Y		
JUMPY (00)		Supply protection and management unit				Erase Fault Code		Y		
JUMPY (00)		Supply protection and management unit				Live Data		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
JUMPY (00)		Electric steering lock				Read ECU Information		Y		
JUMPY (00)		Electric steering lock				Read Fault Code		Y		
JUMPY (00)		Electric steering lock				Erase Fault Code		Y		
JUMPY (00)		Electric steering lock				Live Data		Y		
JUMPY (00)		Instrument panel				Read ECU Information		Y		
JUMPY (00)		Instrument panel				Read Fault Code		Y		
JUMPY (00)		Instrument panel				Erase Fault Code		Y		
JUMPY (00)		Instrument panel				Live Data		Y		
JUMPY (00)		Instrument panel				Actuation Test		Y		
JUMPY (00)		Head-Up Display				Read ECU Information		Y		
JUMPY (00)		Head-Up Display				Read Fault Code		Y		
JUMPY (00)		Head-Up Display				Erase Fault Code		Y		
JUMPY (00)		Head-Up Display				Live Data		Y		
JUMPY (00)		Head-Up Display				Actuation Test		Y		
JUMPY (00)		Controls under the steering wheel				Read ECU Information		Y		
JUMPY (00)		Controls under the steering wheel				Read Fault Code		Y		
JUMPY (00)		Controls under the steering wheel				Erase Fault Code		Y		
JUMPY (00)		Controls under the steering wheel				Live Data		Y		
JUMPY (00)		Controls under the steering wheel				Actuation Test		Y		
JUMPY (00)		Controls under the steering wheel				Special Function	Pack Repair	Y		
JUMPY (00)		Control on the steering wheel / integral controls steering wheel				Read ECU Information		Y		
JUMPY (00)		Control on the steering wheel / integral controls steering wheel				Read Fault Code		Y		
JUMPY (00)		Control on the steering wheel / integral controls steering wheel				Erase Fault Code		Y		
JUMPY (00)		Control on the steering wheel / integral controls steering wheel				Live Data		Y		
JUMPY (00)		Traction control mode selector				Read ECU Information		Y		
JUMPY (00)		Traction control mode selector				Read Fault Code		Y		
JUMPY (00)		Traction control mode selector				Live Data		Y		
JUMPY (00)		Traction control mode selector				Actuation Test		Y		
JUMPY (00)		Automatic gearbox electric control				Read ECU Information		Y		
JUMPY (00)		Automatic gearbox electric control				Read Fault Code		Y		
JUMPY (00)		Automatic gearbox electric control				Erase Fault Code		Y		
JUMPY (00)		Automatic gearbox electric control				Live Data		Y		
JUMPY (00)		Automatic gearbox electric control				Actuation Test		Y		
JUMPY (00)		Multiplexed control panel				Read ECU Information		Y		
JUMPY (00)		Multiplexed control panel				Read Fault Code		Y		
JUMPY (00)		Multiplexed control panel				Erase Fault Code		Y		
JUMPY (00)		Multiplexed control panel				Live Data		Y		
JUMPY (00)		Multiplexed control panel				Actuation Test		Y		
JUMPY (00)		Air bags and pre-tensioners control unit				Read ECU Information		Y		
JUMPY (00)		Air bags and pre-tensioners control unit				Read Fault Code		Y		
JUMPY (00)		Air bags and pre-tensioners control unit				Erase Fault Code		Y		
JUMPY (00)		Air bags and pre-tensioners control unit				Live Data		Y		
JUMPY (00)		Seat belt not fastened warning lights unit				Read ECU Information		Y		
JUMPY (00)		Seat belt not fastened warning lights unit				Actuation Test		Y		
JUMPY (00)		Rain and brightness sensor				Read ECU Information		Y		
JUMPY (00)		Rain and brightness sensor				Read Fault Code		Y		
JUMPY (00)		Rain and brightness sensor				Erase Fault Code		Y		
JUMPY (00)		Rain and brightness sensor				Live Data		Y		
JUMPY (00)		Multifunction video camera(CMF)				Read ECU Information		Y		
JUMPY (00)		Multifunction video camera(CMF)				Read Fault Code		Y		
JUMPY (00)		Multifunction video camera(CMF)				Erase Fault Code		Y		
JUMPY (00)		Multifunction video camera(CMF)				Live Data		Y		
JUMPY (00)		Multifunction video camera(CMF)				Actuation Test		Y		
JUMPY (00)		Vehicle Distance Assistance				Read ECU Information		Y		
JUMPY (00)		Vehicle Distance Assistance				Read Fault Code		Y		
JUMPY (00)		Vehicle Distance Assistance				Erase Fault Code		Y		
JUMPY (00)		Vehicle Distance Assistance				Live Data		Y		
JUMPY (00)		Vehicle Distance Assistance				Actuation Test		Y		
JUMPY (00)		Parking assistance				Read ECU Information		Y		
JUMPY (00)		Parking assistance				Read Fault Code		Y		
JUMPY (00)		Parking assistance				Erase Fault Code		Y		
JUMPY (00)		Parking assistance				Live Data		Y		
JUMPY (00)		Parking assistance				Actuation Test		Y		
JUMPY (00)		Multifunction screen	EMF_A_IDS			Read ECU Information		Y		
JUMPY (00)		Multifunction screen	EMF_A_IDS			Read Fault Code		Y		
JUMPY (00)		Multifunction screen	EMF_A_IDS			Erase Fault Code		Y		
JUMPY (00)		Multifunction screen	EMF_A_IDS			Actuation Test		Y		
JUMPY (00)		Multifunction screen	EMF_C_IDS			Read ECU Information		Y		
JUMPY (00)		Multifunction screen	EMF_C_IDS			Read Fault Code		Y		
JUMPY (00)		Multifunction screen	EMF_C_IDS			Erase Fault Code		Y		
JUMPY (00)		Multifunction screen	EMF_C_IDS			Live Data		Y		
JUMPY (00)		Multifunction screen	EMF_C_IDS			Actuation Test		Y		
JUMPY (00)		Touch screen				Read ECU Information		Y		
JUMPY (00)		Touch screen				Read Fault Code		Y		
JUMPY (00)		Touch screen				Erase Fault Code		Y		
JUMPY (00)		Touch screen				Live Data		Y		
JUMPY (00)		Touch screen				Actuation Test		Y		
JUMPY (00)		Audio-navigation/telematic unit/connected audio system	NAC			Read ECU Information		Y		
JUMPY (00)		Audio-navigation/telematic unit/connected audio system	NAC			Read Fault Code		Y		
JUMPY (00)		Audio-navigation/telematic unit/connected audio system	NAC			Erase Fault Code		Y		
JUMPY (00)		Audio-navigation/telematic unit/connected audio system	NAC			Live Data		Y		
JUMPY (00)		Audio-navigation/telematic unit/connected audio system	NAC			Actuation Test		Y		
JUMPY (00)		Audio-navigation/telematic unit/connected audio system	BCX			Read ECU Information		Y		
JUMPY (00)		Audio-navigation/telematic unit/connected audio system	BCC			Read Fault Code		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
JUMPY (00)		Audio/navigation/telematic unit/connected audio system	BCC			Erase Fault Code		Y		
JUMPY (00)		Audio/navigation/telematic unit/connected audio system	BCC			Live Data		Y		
JUMPY (00)		Audio/navigation/telematic unit/connected audio system	BCC			Actuation Test		Y		
JUMPY (00)		Radio				Read ECU Information		Y		
JUMPY (00)		Radio				Read Fault Code		Y		
JUMPY (00)		Radio				Erase Fault Code		Y		
JUMPY (00)		Radio				Live Data		Y		
JUMPY (00)		Radio				Actuation Test		Y		
JUMPY (00)		Control of the telematic unit				Read ECU Information		Y		
JUMPY (00)		Control of the telematic unit				Read Fault Code		Y		
JUMPY (00)		Service module / Independent telematic unit	BTA_2			Read ECU Information		Y		
JUMPY (00)		Service module / Independent telematic unit	BTA_2			Read Fault Code		Y		
JUMPY (00)		Service module / Independent telematic unit	BTA_2			Erase Fault Code		Y		
JUMPY (00)		Service module / Independent telematic unit	BTA_2			Live Data		Y		
JUMPY (00)		Service module / Independent telematic unit	BTA_2			Actuation Test		Y		
JUMPY (00)		Service module / Independent telematic unit	BTA_3R			Read ECU Information		Y		
JUMPY (00)		Service module / Independent telematic unit	BTA_3R			Read Fault Code		Y		
JUMPY (00)		Service module / Independent telematic unit	BTA_3R			Erase Fault Code		Y		
JUMPY (00)		Service module / Independent telematic unit	BTA_3R			Live Data		Y		
JUMPY (00)		Service module / Independent telematic unit	BTA_3R			Actuation Test		Y		
JUMPY (00)		Service module / Independent telematic unit	BTA_3S			Read ECU Information		Y		
JUMPY (00)		Service module / Independent telematic unit	BTA_3S			Read Fault Code		Y		
JUMPY (00)		Service module / Independent telematic unit	BTA_3S			Erase Fault Code		Y		
JUMPY (00)		Service module / Independent telematic unit	BTA_3S			Live Data		Y		
JUMPY (00)		Service module / Independent telematic unit	BTA_3S			Actuation Test		Y		
JUMPY (00)		Anti-theft alarm				Read ECU Information		Y		
JUMPY (00)		Anti-theft alarm				Read Fault Code		Y		
JUMPY (00)		Anti-theft alarm				Erase Fault Code		Y		
JUMPY (00)		Anti-theft alarm				Live Data		Y		
JUMPY (00)		Anti-theft alarm				Actuation Test		Y		
JUMPY (00)		Intrusion alarm siren				Read ECU Information		Y		
JUMPY (00)		Intrusion alarm siren				Read Fault Code		Y		
JUMPY (00)		Intrusion alarm siren				Erase Fault Code		Y		
JUMPY (00)		Intrusion alarm siren				Live Data		Y		
JUMPY (00)		Intrusion alarm siren				Actuation Test		Y		
JUMPY (00)		Left-hand sliding side door ECU				Read ECU Information		Y		
JUMPY (00)		Left-hand sliding side door ECU				Read Fault Code		Y		
JUMPY (00)		Left-hand sliding side door ECU				Erase Fault Code		Y		
JUMPY (00)		Left-hand sliding side door ECU				Live Data		Y		
JUMPY (00)		Left-hand sliding side door ECU				Actuation Test		Y		
JUMPY (00)		Right-hand sliding side door ECU				Read ECU Information		Y		
JUMPY (00)		Right-hand sliding side door ECU				Read Fault Code		Y		
JUMPY (00)		Right-hand sliding side door ECU				Erase Fault Code		Y		
JUMPY (00)		Right-hand sliding side door ECU				Live Data		Y		
JUMPY (00)		Right-hand sliding side door ECU				Actuation Test		Y		
JUMPY (00)		Hands full access ECU, left				Read ECU Information		Y		
JUMPY (00)		Hands full access ECU, left				Read Fault Code		Y		
JUMPY (00)		Hands full access ECU, right-hand side or rear				Read ECU Information		Y		
JUMPY (00)		Hands full access ECU, right-hand side or rear				Read Fault Code		Y		
JUMPY (00)		Air conditioning				Read ECU Information		Y		
JUMPY (00)		Air conditioning				Read Fault Code		Y		
JUMPY (00)		Air conditioning				Erase Fault Code		Y		
JUMPY (00)		Air conditioning				Live Data		Y		
JUMPY (00)		Air conditioning				Actuation Test		Y		
JUMPY (00)		Rear air conditioning ECU				Read ECU Information		Y		
JUMPY (00)		Rear air conditioning ECU				Read Fault Code		Y		
JUMPY (00)		Rear air conditioning ECU				Erase Fault Code		Y		
JUMPY (00)		Rear air conditioning ECU				Live Data		Y		
JUMPY (00)		Rear air conditioning ECU				Actuation Test		Y		
JUMPY (00)		Rear air conditioning control panel				Read ECU Information		Y		
JUMPY (00)		Additional heating				Read ECU Information		Y		
JUMPY (00)		Additional heating				Read Fault Code		Y		
JUMPY (00)		Additional heating				Erase Fault Code		Y		
JUMPY (00)		Additional heating				Live Data		Y		
JUMPY (00)		Additional heating				Actuation Test		Y		
JUMPER		Engine	Diesel engine	2.8 L BOSCH EDC15C7		Read Fault Code		Y		
JUMPER		Engine	Diesel engine	2.8 L BOSCH EDC15C7		Erase Fault Code		Y		
JUMPER		Engine	Diesel engine	80V BOSCH EDC15C7		Read Fault Code		Y		
JUMPER		Engine	Diesel engine	80V BOSCH EDC15C7		Erase Fault Code		Y		
JUMPER		Engine	Diesel engine	40V L BOSCH EDC15C7		Read Fault Code		Y		
JUMPER		Engine	Diesel engine	40V L BOSCH EDC15C7		Erase Fault Code		Y		
JUMPER		Engine	Petrol engine	2.0 L BFL MM48P		Read ECU Information		Y		
JUMPER		Engine	Petrol engine	2.0 L BFL MM48P		Read Fault Code		Y		
JUMPER		Engine	Petrol engine	2.0 L BFL MM48P		Erase Fault Code		Y		
JUMPER		Engine	Petrol engine	2.0 L BFL MM48P		Live Data		Y		
JUMPER		Engine	Petrol engine	2.0 L BFL MM48P		Actuation Test		Y		
JUMPER		Engine	Petrol engine	2.0 L BFL MM48P		Special Function	Initialisation of the adaptive values	Y		
JUMPER 2		Engine ECU	Petrol engine	2.0L BFW MM48P		Read ECU Information		Y		
JUMPER 2		Engine ECU	Petrol engine	2.0L BFW MM48P		Read Fault Code		Y		
JUMPER 2		Engine ECU	Petrol engine	2.0L BFW MM48P		Erase Fault Code		Y		
JUMPER 2		Engine ECU	Petrol engine	2.0L BFW MM48P		Live Data		Y		
JUMPER 2		Engine ECU	Petrol engine	2.0L BFW MM48P		Actuation Test		Y		
JUMPER 2		Engine ECU	Petrol engine	2.0L BFW MM48P		Special Function	Initialisation of the adaptive values	Y		
JUMPER 2		Engine ECU	Diesel engine	EDC10C39 SOFIN 2.3		Read ECU Information		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function reasons	Add (Y/N)	Verification (Y/N)	Remarks
JUMPER 2		Engine ECU	Diesel engine	EDC16C39 SOFIM 2.3		Read Fault Code		Y		
JUMPER 2		Engine ECU	Diesel engine	EDC16C39 SOFIM 2.3		Erase Fault Code		Y		
JUMPER 2		Engine ECU	Diesel engine	EDC16C39 SOFIM 2.3		Live Data		Y		
JUMPER 2		Engine ECU	Diesel engine	2.8 L BOSCH EDC15C7		Read Fault Code		Y		
JUMPER 2		Engine ECU	Diesel engine	2.8 L BOSCH EDC15C7		Erase Fault Code		Y		
JUMPER 2		Engine ECU	Diesel engine	4HV BOSCH EDC15C7		Read Fault Code		Y		
JUMPER 2		Engine ECU	Diesel engine	4HV BOSCH EDC15C7		Erase Fault Code		Y		
JUMPER 2		Engine ECU	Diesel engine	4HV BOSCH EDC15C7		Read Fault Code		Y		
JUMPER 2		Engine ECU	Diesel engine	4HV BOSCH EDC15C7		Erase Fault Code		Y		
JUMPER 2		Auto gearbox				Read ECU Information		Y		
JUMPER 2		Auto gearbox				Read Fault Code		Y		
JUMPER 2		Auto gearbox				Erase Fault Code		Y		
JUMPER 2		Auto gearbox				Live Data		Y		
JUMPER 2		Additional heating				Read ECU Information		Y		
JUMPER 2		Additional heating				Read Fault Code		Y		
JUMPER 2		Additional heating				Erase Fault Code		Y		
JUMPER 2		Additional heating				Live Data		Y		
JUMPER 2		Service module				Read ECU Information		Y		
JUMPER 2		Service module				Read Fault Code		Y		
JUMPER 2		Service module				Erase Fault Code		Y		
JUMPER 2		Service module				Live Data		Y		
JUMPER 2		Immobiliser control module				Read ECU Information		Y		
JUMPER 2		Immobiliser control module				Read Fault Code		Y		
JUMPER 2		Immobiliser control module				Erase Fault Code		Y		
JUMPER 2		Immobiliser control module				Live Data		Y		
JUMPER 3 (2006-2011)		Built-in Systems Interface				Read ECU Information		Y		
JUMPER 3 (2006-2011)		Built-in Systems Interface				Read Fault Code		Y		
JUMPER 3 (2006-2011)		Built-in Systems Interface				Erase Fault Code		Y		
JUMPER 3 (2006-2011)		Built-in Systems Interface				Live Data		Y		
JUMPER 3 (2006-2011)		Built-in Systems Interface				Actuation Test		Y		
JUMPER 3 (2006-2011)		Built-in Systems Interface				Special Function	Configuration	Y		
JUMPER 3 (2006-2011)		Built-in Systems Interface				Special Function	Pack repair	Y		
JUMPER 3 (2006-2011)		Engine management ECU	PUMA	PUMA 4HV		Read ECU Information		Y		
JUMPER 3 (2006-2011)		Engine management ECU	PUMA	PUMA 4HV		Read Fault Code		Y		
JUMPER 3 (2006-2011)		Engine management ECU	PUMA	PUMA 4HV		Erase Fault Code		Y		
JUMPER 3 (2006-2011)		Engine management ECU	PUMA	PUMA 4HV		Live Data		Y		
JUMPER 3 (2006-2011)		Engine management ECU	PUMA	PUMA 4HV		Actuation Test		Y		
JUMPER 3 (2006-2011)		Engine management ECU	PUMA	PUMA 4HV		Special Function	Configuration	Y		
JUMPER 3 (2006-2011)		Engine management ECU	PUMA	PUMA 4HV		Special Function	Pack repair	Y		
JUMPER 3 (2006-2011)		Engine management ECU	PUMA	PUMA 4HV		Read ECU Information		Y		
JUMPER 3 (2006-2011)		Engine management ECU	PUMA	PUMA 4HV		Read Fault Code		Y		
JUMPER 3 (2006-2011)		Engine management ECU	PUMA	PUMA 4HV		Erase Fault Code		Y		
JUMPER 3 (2006-2011)		Engine management ECU	PUMA	PUMA 4HV		Live Data		Y		
JUMPER 3 (2006-2011)		Engine management ECU	PUMA	PUMA 4HV		Actuation Test		Y		
JUMPER 3 (2006-2011)		Engine management ECU	PUMA	PUMA 4HV		Special Function	Configuration	Y		
JUMPER 3 (2006-2011)		Engine management ECU	PUMA	PUMA 4HV		Special Function	Pack repair	Y		
JUMPER 3 (2006-2011)		Engine management ECU	EDC17CF52	Sofim euro5		Read ECU Information		Y		
JUMPER 3 (2006-2011)		Engine management ECU	EDC17CF52	Sofim euro5		Read Fault Code		Y		
JUMPER 3 (2006-2011)		Engine management ECU	EDC17CF52	Sofim euro5		Erase Fault Code		Y		
JUMPER 3 (2006-2011)		Engine management ECU	EDC17CF52	Sofim euro5		Live Data		Y		
JUMPER 3 (2006-2011)		Engine management ECU	EDC17CF52	Sofim euro5		Actuation Test		Y		
JUMPER 3 (2006-2011)		Engine management ECU	EDC17CF52	Sofim euro5		Special Function	Configuration	Y		
JUMPER 3 (2006-2011)		Engine management ECU	EDC17CF52	Sofim euro5		Special Function	Pack repair	Y		
JUMPER 3 (2006-2011)		Engine management ECU	EDC18C39	EDC18C39 TUB		Read ECU Information		Y		
JUMPER 3 (2006-2011)		Engine management ECU	EDC18C39	EDC18C39 TUB		Read Fault Code		Y		
JUMPER 3 (2006-2011)		Engine management ECU	EDC18C39	EDC18C39 TUB		Erase Fault Code		Y		
JUMPER 3 (2006-2011)		Engine management ECU	EDC18C39	EDC18C39 TUB		Live Data		Y		
JUMPER 3 (2006-2011)		Engine management ECU	EDC18C39	EDC18C39 TUB		Actuation Test		Y		
JUMPER 3 (2006-2011)		Engine management ECU	EDC18C39	EDC18C39 TUB		Special Function	Configuration	Y		
JUMPER 3 (2006-2011)		Engine management ECU	EDC18C39	EDC18C39 TUB		Special Function	Pack repair	Y		
JUMPER 3 (2006-2011)		Air bags and pre-tensioners control unit 1				Read ECU Information		Y		
JUMPER 3 (2006-2011)		Air bags and pre-tensioners control unit 1				Read Fault Code		Y		
JUMPER 3 (2006-2011)		Air bags and pre-tensioners control unit 1				Erase Fault Code		Y		
JUMPER 3 (2006-2011)		Air bags and pre-tensioners control unit 1				Live Data		Y		
JUMPER 3 (2006-2011)		Air bags and pre-tensioners control unit 1				Actuation Test		Y		
JUMPER 3 (2006-2011)		Air bags and pre-tensioners control unit 2	Air bags and pre-tensioners control unit			Read ECU Information		Y		
JUMPER 3 (2006-2011)		Air bags and pre-tensioners control unit 2	Air bags and pre-tensioners control unit			Read Fault Code		Y		
JUMPER 3 (2006-2011)		Air bags and pre-tensioners control unit 2	Air bags and pre-tensioners control unit			Erase Fault Code		Y		
JUMPER 3 (2006-2011)		Air bags and pre-tensioners control unit 2	Air bags and pre-tensioners control unit			Live Data		Y		
JUMPER 3 (2006-2011)		Air bags and pre-tensioners control unit 2	Air bags and pre-tensioners control unit			Actuation Test		Y		
JUMPER 3 (2006-2011)		Power steering				Read ECU Information		Y		
JUMPER 3 (2006-2011)		Power steering				Read Fault Code		Y		
JUMPER 3 (2006-2011)		Power steering				Erase Fault Code		Y		
JUMPER 3 (2006-2011)		Power steering				Live Data		Y		
JUMPER 3 (2006-2011)		Electronically managed suspension				Read ECU Information		Y		
JUMPER 3 (2006-2011)		Electronically managed suspension				Read Fault Code		Y		
JUMPER 3 (2006-2011)		Electronically managed suspension				Erase Fault Code		Y		
JUMPER 3 (2006-2011)		Electronically managed suspension				Live Data		Y		
JUMPER 3 (2006-2011)		Electronically managed suspension				Special Function	Pack repair	Y		
JUMPER 3 (2006-2011)		Additional heating				Read ECU Information		Y		
JUMPER 3 (2006-2011)		Additional heating				Read Fault Code		Y		
JUMPER 3 (2006-2011)		Additional heating				Erase Fault Code		Y		
JUMPER 3 (2006-2011)		Additional heating				Live Data		Y		
JUMPER 3 (2006-2011)		Additional heating				Actuation Test		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Models	Year classification	System	Subsystem or system type (YES stands for Citroen, NO stands for other cars)	Subsystem (YES stands for Citroen, NO stands for other cars)	Subsystem or system type	Function type	Special function reasons	Add (Y/N)	Verification (Y/N)	Remarks
JUMPER 3 (2006-2011)		Additional heating				Special Function	Pack Repair	Y		
JUMPER 3 (2006-2011)		Parking assistance				Read ECU Information		Y		
JUMPER 3 (2006-2011)		Parking assistance				Read Fault Code		Y		
JUMPER 3 (2006-2011)		Parking assistance				Erase Fault Code		Y		
JUMPER 3 (2006-2011)		Parking assistance				Live Data		Y		
JUMPER 3 (2006-2011)		Parking assistance				Special Function	Configuration	Y		
JUMPER 3 (2006-2011)		Parking assistance				Special Function	Pack Repair	Y		
JUMPER 3 (2006-2011)		Instrument panel				Read ECU Information		Y		
JUMPER 3 (2006-2011)		Instrument panel				Read Fault Code		Y		
JUMPER 3 (2006-2011)		Instrument panel				Erase Fault Code		Y		
JUMPER 3 (2006-2011)		Instrument panel				Live Data		Y		
JUMPER 3 (2006-2011)		Instrument panel				Actuation Test		Y		
JUMPER 3 (2006-2011)		Instrument panel				Special Function	Pack Repair	Y		
JUMPER 3 (2006-2011)		Air conditioning				Read ECU Information		Y		
JUMPER 3 (2006-2011)		Air conditioning				Read Fault Code		Y		
JUMPER 3 (2006-2011)		Air conditioning				Erase Fault Code		Y		
JUMPER 3 (2006-2011)		Air conditioning				Live Data		Y		
JUMPER 3 (2006-2011)		Air conditioning				Actuation Test		Y		
JUMPER 3 (2006-2011)		Air conditioning				Special Function	Learning	Y		
JUMPER 3 (2006-2011)		Air conditioning				Special Function	Pack Repair	Y		
JUMPER 3 (2006-2011)		Telematic unit (OTA) or audio-navigation				Read ECU Information		Y		
JUMPER 3 (2006-2011)		Telematic unit (OTA) or audio-navigation				Read Fault Code		Y		
JUMPER 3 (2006-2011)		Telematic unit (OTA) or audio-navigation				Erase Fault Code		Y		
JUMPER 3 (2006-2011)		Telematic unit (OTA) or audio-navigation				Live Data		Y		
JUMPER 3 (2006-2011)		Telematic unit (OTA) or audio-navigation				Actuation Test		Y		
JUMPER 3 (2006-2011)		Tachograph	Tachograph			Read ECU Information		Y		
JUMPER 3 (2006-2011)		Tachograph	Tachograph			Read Fault Code		Y		
JUMPER 3 (2006-2011)		Tachograph	Tachograph			Erase Fault Code		Y		
JUMPER 3 (2006-2011)		Tachograph	Tachograph			Live Data		Y		
JUMPER 3 (2006-2011)		Tachograph	Tachograph			Actuation Test		Y		
JUMPER 3 (2006-2011)		Tachograph	Tachograph			Special Function	Configuration	Y		
JUMPER 3 (2006-2011)		Tachograph	Tachograph			Special Function	Pack repair	Y		
JUMPER 3 MINIHES (After 2006)		BSI (Built-in System Interface)				Read ECU Information		Y		
JUMPER 3 MINIHES (After 2006)		BSI (Built-in System Interface)				Read Fault Code		Y		
JUMPER 3 MINIHES (After 2006)		BSI (Built-in System Interface)				Erase Fault Code		Y		
JUMPER 3 MINIHES (After 2006)		BSI (Built-in System Interface)				Live Data		Y		
JUMPER 3 MINIHES (After 2006)		BSI (Built-in System Interface)				Actuation Test		Y		
JUMPER 3 MINIHES (After 2006)		BSI (Built-in System Interface)				Special Function	Configuration	Y		
JUMPER 3 MINIHES (After 2006)		BSI (Built-in System Interface)				Special Function	Pack repair	Y		
JUMPER 3 MINIHES (After 2006)		Engine management ECU	PUMA	PUMA 40V		Read ECU Information		Y		
JUMPER 3 MINIHES (After 2006)		Engine management ECU	PUMA	PUMA 40V		Read Fault Code		Y		
JUMPER 3 MINIHES (After 2006)		Engine management ECU	PUMA	PUMA 40V		Erase Fault Code		Y		
JUMPER 3 MINIHES (After 2006)		Engine management ECU	PUMA	PUMA 40V		Live Data		Y		
JUMPER 3 MINIHES (After 2006)		Engine management ECU	PUMA	PUMA 40V		Actuation Test		Y		
JUMPER 3 MINIHES (After 2006)		Engine management ECU	PUMA	PUMA 40V		Special Function	Configuration	Y		
JUMPER 3 MINIHES (After 2006)		Engine management ECU	PUMA	PUMA 40V		Special Function	Pack repair	Y		
JUMPER 3 MINIHES (After 2006)		Engine management ECU	PUMA	PUMA 40H		Read ECU Information		Y		
JUMPER 3 MINIHES (After 2006)		Engine management ECU	PUMA	PUMA 40H		Read Fault Code		Y		
JUMPER 3 MINIHES (After 2006)		Engine management ECU	PUMA	PUMA 40H		Erase Fault Code		Y		
JUMPER 3 MINIHES (After 2006)		Engine management ECU	PUMA	PUMA 40H		Live Data		Y		
JUMPER 3 MINIHES (After 2006)		Engine management ECU	PUMA	PUMA 40H		Actuation Test		Y		
JUMPER 3 MINIHES (After 2006)		Engine management ECU	PUMA	PUMA 40H		Special Function	Configuration	Y		
JUMPER 3 MINIHES (After 2006)		Engine management ECU	PUMA	PUMA 40H		Special Function	Pack repair	Y		
JUMPER 3 MINIHES (After 2006)		Engine management ECU	ED16C39	ED16C39 TUB		Read ECU Information		Y		
JUMPER 3 MINIHES (After 2006)		Engine management ECU	ED16C39	ED16C39 TUB		Read Fault Code		Y		
JUMPER 3 MINIHES (After 2006)		Engine management ECU	ED16C39	ED16C39 TUB		Erase Fault Code		Y		
JUMPER 3 MINIHES (After 2006)		Engine management ECU	ED16C39	ED16C39 TUB		Live Data		Y		
JUMPER 3 MINIHES (After 2006)		Engine management ECU	ED16C39	ED16C39 TUB		Actuation Test		Y		
JUMPER 3 MINIHES (After 2006)		Engine management ECU	ED16C39	ED16C39 TUB		Special Function	Configuration	Y		
JUMPER 3 MINIHES (After 2006)		Engine management ECU	ED16C39	ED16C39 TUB		Special Function	Pack repair	Y		
JUMPER 3 MINIHES (After 2006)		Engine management ECU	ED170F52	Sofim euro6		Read ECU Information		Y		
JUMPER 3 MINIHES (After 2006)		Engine management ECU	ED170F52	Sofim euro6		Read Fault Code		Y		
JUMPER 3 MINIHES (After 2006)		Engine management ECU	ED170F52	Sofim euro6		Erase Fault Code		Y		
JUMPER 3 MINIHES (After 2006)		Engine management ECU	ED170F52	Sofim euro6		Live Data		Y		
JUMPER 3 MINIHES (After 2006)		Engine management ECU	ED170F52	Sofim euro6		Actuation Test		Y		
JUMPER 3 MINIHES (After 2006)		Engine management ECU	ED170F52	Sofim euro6		Special Function	Configuration	Y		
JUMPER 3 MINIHES (After 2006)		Engine management ECU	ED170F52	Sofim euro6		Special Function	Pack repair	Y		
JUMPER 3 MINIHES (After 2006)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	AS880			Read ECU Information		Y		
JUMPER 3 MINIHES (After 2006)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	AS880			Read Fault Code		Y		
JUMPER 3 MINIHES (After 2006)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	AS880			Erase Fault Code		Y		
JUMPER 3 MINIHES (After 2006)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	AS880			Live Data		Y		
JUMPER 3 MINIHES (After 2006)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	AS880			Actuation Test		Y		
JUMPER 3 MINIHES (After 2006)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP80			Read ECU Information		Y		
JUMPER 3 MINIHES (After 2006)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP80			Read Fault Code		Y		
JUMPER 3 MINIHES (After 2006)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP80			Erase Fault Code		Y		
JUMPER 3 MINIHES (After 2006)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP80			Live Data		Y		
JUMPER 3 MINIHES (After 2006)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP80			Actuation Test		Y		
JUMPER 3 MINIHES (After 2006)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP80			Special Function	Pack repair	Y		
JUMPER 3 MINIHES (After 2006)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	AS880			Read ECU Information		Y		
JUMPER 3 MINIHES (After 2006)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	AS880			Read Fault Code		Y		
JUMPER 3 MINIHES (After 2006)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	AS880			Live Data		Y		
JUMPER 3 MINIHES (After 2006)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	AS880			Actuation Test		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Models	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function reasons	Add (Y/N)	Verification (Y/N)	Remarks
JUMPER 3 MINIHES (After 2006)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ASBR0			Special Function	Pack repair	Y		
JUMPER 3 MINIHES (After 2006)		Air bags and pre-tensioners control unit 1				Read ECU Information		Y		
JUMPER 3 MINIHES (After 2006)		Air bags and pre-tensioners control unit 1				Read Fault Code		Y		
JUMPER 3 MINIHES (After 2006)		Air bags and pre-tensioners control unit 1				Erase Fault Code		Y		
JUMPER 3 MINIHES (After 2006)		Air bags and pre-tensioners control unit 1				Live Data		Y		
JUMPER 3 MINIHES (After 2006)		Air bags and pre-tensioners control unit 1				Actuation Test		Y		
JUMPER 3 MINIHES (After 2006)		Air bags and pre-tensioners control unit 2	Air bags and pre-tensioners control unit			Read ECU Information		Y		
JUMPER 3 MINIHES (After 2006)		Air bags and pre-tensioners control unit 2	Air bags and pre-tensioners control unit			Read Fault Code		Y		
JUMPER 3 MINIHES (After 2006)		Air bags and pre-tensioners control unit 2	Air bags and pre-tensioners control unit			Erase Fault Code		Y		
JUMPER 3 MINIHES (After 2006)		Air bags and pre-tensioners control unit 2	Air bags and pre-tensioners control unit			Live Data		Y		
JUMPER 3 MINIHES (After 2006)		Air bags and pre-tensioners control unit 2	Air bags and pre-tensioners control unit			Actuation Test		Y		
JUMPER 3 MINIHES (After 2006)		Power steering				Read ECU Information		Y		
JUMPER 3 MINIHES (After 2006)		Power steering				Read Fault Code		Y		
JUMPER 3 MINIHES (After 2006)		Power steering				Erase Fault Code		Y		
JUMPER 3 MINIHES (After 2006)		Power steering				Live Data		Y		
JUMPER 3 MINIHES (After 2006)		Electronically managed suspension				Read ECU Information		Y		
JUMPER 3 MINIHES (After 2006)		Electronically managed suspension				Read Fault Code		Y		
JUMPER 3 MINIHES (After 2006)		Electronically managed suspension				Erase Fault Code		Y		
JUMPER 3 MINIHES (After 2006)		Electronically managed suspension				Live Data		Y		
JUMPER 3 MINIHES (After 2006)		Electronically managed suspension				Special Function	Pack Repair	Y		
JUMPER 3 MINIHES (After 2006)		Additional heating				Read ECU Information		Y		
JUMPER 3 MINIHES (After 2006)		Additional heating				Read Fault Code		Y		
JUMPER 3 MINIHES (After 2006)		Additional heating				Live Data		Y		
JUMPER 3 MINIHES (After 2006)		Additional heating				Actuation Test		Y		
JUMPER 3 MINIHES (After 2006)		Additional heating				Special Function	Pack Repair	Y		
JUMPER 3 MINIHES (After 2006)		Parking assistance				Read ECU Information		Y		
JUMPER 3 MINIHES (After 2006)		Parking assistance				Read Fault Code		Y		
JUMPER 3 MINIHES (After 2006)		Parking assistance				Erase Fault Code		Y		
JUMPER 3 MINIHES (After 2006)		Parking assistance				Live Data		Y		
JUMPER 3 MINIHES (After 2006)		Parking assistance				Special Function	Configuration	Y		
JUMPER 3 MINIHES (After 2006)		Parking assistance				Special Function	Pack Repair	Y		
JUMPER 3 MINIHES (After 2006)		Instrument panel				Read ECU Information		Y		
JUMPER 3 MINIHES (After 2006)		Instrument panel				Read Fault Code		Y		
JUMPER 3 MINIHES (After 2006)		Instrument panel				Erase Fault Code		Y		
JUMPER 3 MINIHES (After 2006)		Instrument panel				Live Data		Y		
JUMPER 3 MINIHES (After 2006)		Instrument panel				Actuation Test		Y		
JUMPER 3 MINIHES (After 2006)		Instrument panel				Special Function	Pack Repair	Y		
JUMPER 3 MINIHES (After 2006)		Air conditioning				Read ECU Information		Y		
JUMPER 3 MINIHES (After 2006)		Air conditioning				Read Fault Code		Y		
JUMPER 3 MINIHES (After 2006)		Air conditioning				Erase Fault Code		Y		
JUMPER 3 MINIHES (After 2006)		Air conditioning				Live Data		Y		
JUMPER 3 MINIHES (After 2006)		Air conditioning				Actuation Test		Y		
JUMPER 3 MINIHES (After 2006)		Air conditioning				Special Function	Learning	Y		
JUMPER 3 MINIHES (After 2006)		Air conditioning				Special Function	Pack Repair	Y		
JUMPER 3 MINIHES (After 2006)		Telematic unit (BTX) or audio/navigation				Read ECU Information		Y		
JUMPER 3 MINIHES (After 2006)		Telematic unit (BTX) or audio/navigation				Read Fault Code		Y		
JUMPER 3 MINIHES (After 2006)		Telematic unit (BTX) or audio/navigation				Erase Fault Code		Y		
JUMPER 3 MINIHES (After 2006)		Telematic unit (BTX) or audio/navigation				Live Data		Y		
JUMPER 3 MINIHES (After 2006)		Telematic unit (BTX) or audio/navigation				Actuation Test		Y		
JUMPER 3 MINIHES (After 2006)		Telematic unit (BTX) or audio/navigation				Special Function	Configuration	Y		
JUMPER 3 MINIHES (After 2006)		Tachograph				Read ECU Information		Y		
JUMPER 3 MINIHES (After 2006)		Tachograph				Read Fault Code		Y		
JUMPER 3 MINIHES (After 2006)		Tachograph				Erase Fault Code		Y		
JUMPER 3 MINIHES (After 2006)		Tachograph				Live Data		Y		
JUMPER 3 MINIHES (After 2006)		Tachograph				Actuation Test		Y		
JUMPER 3 MINIHES (After 2006)		Tachograph				Special Function	Configuration	Y		
JUMPER 3 Euro 5 / Euro 6 (After 2006)		Built-in Systems Interface		Built-in Systems Interface		Read ECU Information		Y		
JUMPER 3 Euro 5 / Euro 6 (After 2006)		Built-in Systems Interface		Built-in Systems Interface		Read Fault Code		Y		
JUMPER 3 Euro 5 / Euro 6 (After 2006)		Built-in Systems Interface		Built-in Systems Interface		Erase Fault Code		Y		
JUMPER 3 Euro 5 / Euro 6 (After 2006)		Built-in Systems Interface		Built-in Systems Interface		Live Data		Y		
JUMPER 3 Euro 5 / Euro 6 (After 2006)		Built-in Systems Interface		Built-in Systems Interface		Actuation Test		Y		
JUMPER 3 Euro 5 / Euro 6 (After 2006)		Built-in Systems Interface		Built-in Systems Interface		Special Function	Configuration	Y		
JUMPER 3 Euro 5 / Euro 6 (After 2006)		Built-in Systems Interface		Built-in Systems Interface		Special Function	Pack repair	Y		
JUMPER 3 Euro 5 / Euro 6 (After 2006)		Engine management ECU	EC117P32_LDS	EC117P32_LDS.0 HDI 180CV ES		Read ECU Information		Y		
JUMPER 3 Euro 5 / Euro 6 (After 2006)		Engine management ECU	EC117P32_LDS	EC117P32_LDS.0 HDI 180CV ES		Read Fault Code		Y		
JUMPER 3 Euro 5 / Euro 6 (After 2006)		Engine management ECU	EC117P32_LDS	EC117P32_LDS.0 HDI 180CV ES		Erase Fault Code		Y		
JUMPER 3 Euro 5 / Euro 6 (After 2006)		Engine management ECU	EC117P32_LDS	EC117P32_LDS.0 HDI 180CV ES		Live Data		Y		
JUMPER 3 Euro 5 / Euro 6 (After 2006)		Engine management ECU	EC117P32_LDS	EC117P32_LDS.0 HDI 180CV ES		Actuation Test		Y		
JUMPER 3 Euro 5 / Euro 6 (After 2006)		Engine management ECU	EC117P32_LDS	EC117P32_LDS.0 HDI 180CV ES		Special Function	Configuration	Y		
JUMPER 3 Euro 5 / Euro 6 (After 2006)		Engine management ECU	EC117P32_LDS	EC117P32_LDS.0 HDI 180CV ES		Special Function	Pack repair	Y		
JUMPER 3 Euro 5 / Euro 6 (After 2006)		Engine management ECU	S1D208	S1D208 2.2 HDI 180CV ES		Read ECU Information		Y		
JUMPER 3 Euro 5 / Euro 6 (After 2006)		Engine management ECU	S1D208	S1D208 2.2 HDI 180CV ES		Read Fault Code		Y		
JUMPER 3 Euro 5 / Euro 6 (After 2006)		Engine management ECU	S1D208	S1D208 2.2 HDI 180CV ES		Erase Fault Code		Y		
JUMPER 3 Euro 5 / Euro 6 (After 2006)		Engine management ECU	S1D208	S1D208 2.2 HDI 180CV ES		Live Data		Y		
JUMPER 3 Euro 5 / Euro 6 (After 2006)		Engine management ECU	S1D208	S1D208 2.2 HDI 180CV ES		Actuation Test		Y		
JUMPER 3 Euro 5 / Euro 6 (After 2006)		Engine management ECU	S1D208	S1D208 2.2 HDI 180CV ES		Special Function	Configuration	Y		
JUMPER 3 Euro 5 / Euro 6 (After 2006)		Engine management ECU	S1D208	S1D208 2.2 HDI 180CV ES		Special Function	Pack repair	Y		
JUMPER 3 Euro 5 / Euro 6 (After 2006)		Engine management ECU	DCM62_F	DCM62_F AIM		Read ECU Information		Y		
JUMPER 3 Euro 5 / Euro 6 (After 2006)		Engine management ECU	DCM62_F	DCM62_F AIM		Read Fault Code		Y		
JUMPER 3 Euro 5 / Euro 6 (After 2006)		Engine management ECU	DCM62_F	DCM62_F AIM		Erase Fault Code		Y		
JUMPER 3 Euro 5 / Euro 6 (After 2006)		Engine management ECU	DCM62_F	DCM62_F AIM		Live Data		Y		
JUMPER 3 Euro 5 / Euro 6 (After 2006)		Engine management ECU	DCM62_F	DCM62_F AIM		Actuation Test		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Models	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function reasons	Add (Y/N)	Verification on (Y/N)	Remarks
JUMPER 3 Euro 5 / Euro 6 (After)		Engine management ECU	DCM62_F	DCM62_F AIN		Special Function	Pack repair	Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Engine management ECU	DCM62_F	DCM62_F AIN		Read ECU Information		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Engine management ECU	DCM62_F	DCM62_F AIN		Read Fault Code		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Engine management ECU	DCM62_F	DCM62_F AIN		Erase Fault Code		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Engine management ECU	DCM62_F	DCM62_F AIN		Live Data		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Engine management ECU	DCM62_F	DCM62_F AIN		Actuation Test		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Engine management ECU	DCM62_F	DCM62_F AIN		Special Function	Pack repair	Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Engine management ECU	DCM62_F	DCM62_F AIP		Read ECU Information		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Engine management ECU	DCM62_F	DCM62_F AIP		Read Fault Code		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Engine management ECU	DCM62_F	DCM62_F AIP		Erase Fault Code		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Engine management ECU	DCM62_F	DCM62_F AIP		Live Data		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Engine management ECU	DCM62_F	DCM62_F AIP		Actuation Test		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Engine management ECU	DCM62_F	DCM62_F AIP		Special Function	Pack repair	Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ABS90_F			Read ECU Information		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ABS90_F			Read Fault Code		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ABS90_F			Erase Fault Code		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ABS90_F			Live Data		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ABS90_F			Actuation Test		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ABS90_F			Special Function	Pack repair	Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP90_F			Read ECU Information		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP90_F			Read Fault Code		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP90_F			Erase Fault Code		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP90_F			Live Data		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP90_F			Actuation Test		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP90_F			Special Function	Pack repair	Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Air bags and pre-tensioners control unit		Air bags and pre-tensioners control unit		Read ECU Information		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Air bags and pre-tensioners control unit		Air bags and pre-tensioners control unit		Read Fault Code		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Air bags and pre-tensioners control unit		Air bags and pre-tensioners control unit		Erase Fault Code		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Air bags and pre-tensioners control unit		Air bags and pre-tensioners control unit		Live Data		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Air bags and pre-tensioners control unit		Air bags and pre-tensioners control unit		Actuation Test		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Trailer relay unit				Read ECU Information		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Trailer relay unit				Read Fault Code		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Trailer relay unit				Erase Fault Code		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Trailer relay unit				Live Data		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Trailer relay unit				Actuation Test		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Additional heating				Read ECU Information		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Additional heating				Read Fault Code		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Additional heating				Erase Fault Code		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Additional heating				Live Data		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Additional heating				Actuation Test		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Additional heating				Special Function	Pack Repair	Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Power steering				Read ECU Information		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Power steering				Read Fault Code		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Power steering				Erase Fault Code		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Power steering				Live Data		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Telematic unit (OTA) or audio-navigation				Read ECU Information		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Telematic unit (OTA) or audio-navigation				Read Fault Code		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Telematic unit (OTA) or audio-navigation				Erase Fault Code		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Telematic unit (OTA) or audio-navigation				Live Data		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Telematic unit (OTA) or audio-navigation				Actuation Test		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Telematic unit (OTA) or audio-navigation				Special Function	Test of the microphone	Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Audio/navigation ITM				Read ECU Information		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Audio/navigation ITM				Read Fault Code		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Audio/navigation ITM				Erase Fault Code		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Audio/navigation ITM				Live Data		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Audio/navigation ITM				Actuation Test		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Audio/navigation ITM				Special Function	Pack Repair	Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Air conditioning				Read ECU Information		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Air conditioning				Read Fault Code		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Air conditioning				Erase Fault Code		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Air conditioning				Live Data		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Air conditioning				Actuation Test		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Air conditioning				Special Function	Replacement parts	Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Parking assistance				Read ECU Information		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Parking assistance				Read Fault Code		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Parking assistance				Erase Fault Code		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Parking assistance				Live Data		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Parking assistance				Special Function	Configuration	Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Parking assistance				Special Function	Pack repair	Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Tachograph				Read ECU Information		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Tachograph				Read Fault Code		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Tachograph				Erase Fault Code		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Tachograph				Live Data		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Tachograph				Actuation Test		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Tachograph				Special Function	Configuration	Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Tachograph				Special Function	Pack repair	Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Electronically managed suspension				Read ECU Information		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Electronically managed suspension				Read Fault Code		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Electronically managed suspension				Erase Fault Code		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Electronically managed suspension				Live Data		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Electronically managed suspension				Actuation Test		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Electronically managed suspension				Special Function	Pack repair	Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Under-inflation detection				Read ECU Information		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Under-inflation detection				Read Fault Code		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Models	Year classification	System	Subsystem or system type (YES stands for Citroen, NO stands for other cars)	Subsystem (YES stands for Citroen, NO stands for other cars)	Subsystem or system type	Function type	Special function reasons	Add (Y/N)	Verification (Y/N)	Remarks
JUMPER 3 Euro 5 / Euro 6 (After)		Under-inflation detection				Erase Fault Code		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Under-inflation detection				Live Data		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Under-inflation detection				Special Function	Spare part	Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Radio				Read ECU Information		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Radio				Read Fault Code		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Radio				Erase Fault Code		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Radio				Live Data		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Radio				Actuation Test		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Radio				Special Function	Test routines	Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Lane departure warning system				Read ECU Information		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Lane departure warning system				Read Fault Code		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Lane departure warning system				Erase Fault Code		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Lane departure warning system				Live Data		Y		
JUMPER 3 Euro 5 / Euro 6 (After)		Lane departure warning system				Special Function	Pack repair	Y		
USABA (1997-2000)		Engine ECU	Petrol engine	1.4L KFX M10AP		Read ECU Information		Y		
USABA (1997-2000)		Engine ECU	Petrol engine	1.4L KFX M10AP		Read Fault Code		Y		
USABA (1997-2000)		Engine ECU	Petrol engine	1.4L KFX M10AP		Erase Fault Code		Y		
USABA (1997-2000)		Engine ECU	Petrol engine	1.4L KFX BOSCH MP7.3		Read ECU Information		Y		
USABA (1997-2000)		Engine ECU	Petrol engine	1.4L KFX BOSCH MP7.3		Read Fault Code		Y		
USABA (1997-2000)		Engine ECU	Petrol engine	1.4L KFX BOSCH MP7.3		Erase Fault Code		Y		
USABA (1997-2000)		Engine ECU	Petrol engine	1.4L KFX BOSCH MP7.3		Live Data		Y		
USABA (1997-2000)		Engine ECU	Petrol engine	1.4L KFX BOSCH MP7.3		Actuation Test		Y		
USABA (1997-2000)		Engine ECU	Petrol engine	1.4L KFX SAGEM SL96		Read ECU Information		Y		
USABA (1997-2000)		Engine ECU	Petrol engine	1.4L KFX SAGEM SL96		Read Fault Code		Y		
USABA (1997-2000)		Engine ECU	Petrol engine	1.4L KFX SAGEM SL96		Erase Fault Code		Y		
USABA (1997-2000)		Engine ECU	Petrol engine	1.4L KFX SAGEM SL96		Live Data		Y		
USABA (1997-2000)		Engine ECU	Petrol engine	1.4L KFX SAGEM SL96		Actuation Test		Y		
USABA (1997-2000)		Engine ECU	Petrol engine	1.6L NFZ BOSCH MFS.2		Read Fault Code		Y		
USABA (1997-2000)		Engine ECU	Petrol engine	1.6L NFZ BOSCH MFS.2		Erase Fault Code		Y		
USABA (1997-2000)		Engine ECU	Petrol engine	1.6L NFZ BOSCH MFS.2		Live Data		Y		
USABA (1997-2000)		Engine ECU	Petrol engine	1.6L NFZ BOSCH MFS.2		Read ECU Information		Y		
USABA (1997-2000)		Engine ECU	Petrol engine	1.6L NFZ BOSCH MFS.2		Read Fault Code		Y		
USABA (1997-2000)		Engine ECU	Petrol engine	1.6L NFZ BOSCH MFS.2		Erase Fault Code		Y		
USABA (1997-2000)		Engine ECU	Petrol engine	1.6L NFZ BOSCH MFS.2		Live Data		Y		
USABA (1997-2000)		Engine ECU	Petrol engine	1.6L NFZ BOSCH MFS.2		Actuation Test		Y		
USABA (1997-2000)		Engine ECU	Petrol engine	1.8L LFX M10AP		Read ECU Information		Y		
USABA (1997-2000)		Engine ECU	Petrol engine	1.8L LFX M10AP		Read Fault Code		Y		
USABA (1997-2000)		Engine ECU	Petrol engine	1.8L LFX M10AP		Erase Fault Code		Y		
USABA (1997-2000)		Engine ECU	Petrol engine	1.8L LFX SAGEM SL96		Read ECU Information		Y		
USABA (1997-2000)		Engine ECU	Petrol engine	1.8L LFX SAGEM SL96		Read Fault Code		Y		
USABA (1997-2000)		Engine ECU	Petrol engine	1.8L LFX SAGEM SL96		Erase Fault Code		Y		
USABA (1997-2000)		Engine ECU	Petrol engine	1.8L LFX SAGEM SL96		Live Data		Y		
USABA (1997-2000)		Engine ECU	Petrol engine	1.8L LFX SAGEM SL96		Actuation Test		Y		
USABA (1997-2000)		Engine ECU	Petrol engine	2.0L BFS M10AP		Read ECU Information		Y		
USABA (1997-2000)		Engine ECU	Petrol engine	2.0L BFS M10AP		Read Fault Code		Y		
USABA (1997-2000)		Engine ECU	Petrol engine	2.0L BFS M10AP		Erase Fault Code		Y		
USABA (1997-2000)		Engine ECU	Petrol engine	2.0L BFV BOSCH MFS.2		Read Fault Code		Y		
USABA (1997-2000)		Engine ECU	Petrol engine	2.0L BFV BOSCH MFS.2		Live Data		Y		
USABA (1997-2000)		Engine ECU	Petrol engine	2.0L BFE BOSCH MFS.2		Read Fault Code		Y		
USABA (1997-2000)		Engine ECU	Petrol engine	2.0L BFE BOSCH MFS.2		Erase Fault Code		Y		
USABA (1997-2000)		Engine ECU	Petrol engine	2.0L BFE BOSCH MFS.2		Live Data		Y		
USABA (1997-2000)		Engine ECU	Petrol engine	2.0L BFE BOSCH MFS.2		Actuation Test		Y		
USABA (1997-2000)		Engine ECU	Diesel engine	1.9L DMF BOSCH AS3-VF20		Read Fault Code		Y		
USABA (1997-2000)		Engine ECU	Diesel engine	1.9L DMF BOSCH AS3-VF20		Erase Fault Code		Y		
USABA (1997-2000)		Engine ECU	Diesel engine	1.9L DMF BOSCH AS3-VF20		Live Data		Y		
USABA (1997-2000)		Engine ECU	Diesel engine	2.0L RHY BOSCH EDC15C2		Read ECU Information		Y		
USABA (1997-2000)		Engine ECU	Diesel engine	2.0L RHY BOSCH EDC15C2		Read Fault Code		Y		
USABA (1997-2000)		Engine ECU	Diesel engine	2.0L RHY BOSCH EDC15C2		Erase Fault Code		Y		
USABA (1997-2000)		Engine ECU	Diesel engine	2.0L RHY BOSCH EDC15C2		Live Data		Y		
USABA (1997-2000)		Engine ECU	Diesel engine	2.0L RHY BOSCH EDC15C2		Actuation Test		Y		
USABA (1997-2000)		Auto gearbox				Read ECU Information		Y		
USABA (1997-2000)		Auto gearbox				Read Fault Code		Y		
USABA (1997-2000)		Auto gearbox				Erase Fault Code		Y		
USABA (1997-2000)		Auto gearbox				Live Data		Y		
USABA (1997-2000)		Auto gearbox				Actuation Test		Y		
USABA (1997-2000)		Anti-lock brake system				Read ECU Information		Y		
USABA (1997-2000)		Anti-lock brake system				Read Fault Code		Y		
USABA (1997-2000)		Anti-lock brake system				Erase Fault Code		Y		
USABA (1997-2000)		Anti-lock brake system				Live Data		Y		
USABA (1997-2000)		Anti-lock brake system				Actuation Test		Y		
USABA (1997-2000)		Anti-lock brake system				Special Function	Bleeding	Y		
USABA (1997-2000)		Airbag				Read ECU Information		Y		
USABA (1997-2000)		Airbag				Read Fault Code		Y		
USABA (1997-2000)		Airbag				Erase Fault Code		Y		
USABA (1997-2000)		Air conditioning				Read ECU Information		Y		
USABA (1997-2000)		Air conditioning				Read Fault Code		Y		
USABA (1997-2000)		Air conditioning				Erase Fault Code		Y		
USABA (1997-2000)		Additional heating				Read ECU Information		Y		
USABA (1997-2000)		Additional heating				Read Fault Code		Y		
USABA (1997-2000)		Additional heating				Erase Fault Code		Y		
USABA (1997-2000)		Additional heating				Live Data		Y		
USABA (1997-2000)		Additional heating				Actuation Test		Y		
USABA (1997-2000)		CPH				Read ECU Information		Y		
USABA (1997-2000)		CPH				Live Data		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Models	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function reasons	Add (Y/N)	Verification (Y/N)	Remarks
XSARA (1997-2000)		Left hand side airbag				Read ECU Information		Y		
XSARA (1997-2000)		Left hand side airbag				Read Fault Code		Y		
XSARA (1997-2000)		Left hand side airbag				Erase Fault Code		Y		
XSARA (1997-2000)		Left hand side airbag				Actuation Test		Y		
XSARA (1997-2000)		Right hand side airbag				Read ECU Information		Y		
XSARA (1997-2000)		Right hand side airbag				Read Fault Code		Y		
XSARA (1997-2000)		Right hand side airbag				Erase Fault Code		Y		
XSARA (1997-2000)		Right hand side airbag				Actuation Test		Y		
XSARA (1997-2000)		Built-in Systems Interface				Read ECU Information		Y		
XSARA (1997-2000)		Built-in Systems Interface				Read Fault Code		Y		
XSARA (1997-2000)		Built-in Systems Interface				Erase Fault Code		Y		
XSARA (1997-2000)		Built-in Systems Interface				Live Data		Y		
XSARA (1997-2000)		Built-in Systems Interface				Special Function	Learning	Y		
XSARA (1997-2000)		Radio post-equipment				Read ECU Information		Y		
XSARA (1997-2000)		Radio post-equipment				Read Fault Code		Y		
XSARA (1997-2000)		Radio post-equipment				Erase Fault Code		Y		
XSARA (1997-2000)		Radio post-equipment				Live Data		Y		
XSARA (1997-2000)		Radio post-equipment				Actuation Test		Y		
XSARA (1997-2000)		CD player				Read ECU Information		Y		
XSARA (1997-2000)		CD player				Read Fault Code		Y		
XSARA (1997-2000)		CD player				Erase Fault Code		Y		
XSARA (1997-2000)		CD player				Live Data		Y		
XSARA (1997-2000)		CD player				Actuation Test		Y		
XSARA (1997-2000)		Instrument panel				Read ECU Information		Y		
XSARA (1997-2000)		Instrument panel				Read Fault Code		Y		
XSARA (1997-2000)		Instrument panel				Erase Fault Code		Y		
XSARA (1997-2000)		Instrument panel				Actuation Test		Y		
XSARA 2 (2000-2006)		Engine ECU	Petrol engine	2.0L BFN MM48P		Read ECU Information		Y		
XSARA 2 (2000-2006)		Engine ECU	Petrol engine	2.0L BFN MM48P		Read Fault Code		Y		
XSARA 2 (2000-2006)		Engine ECU	Petrol engine	2.0L BFN MM48P		Erase Fault Code		Y		
XSARA 2 (2000-2006)		Engine ECU	Petrol engine	2.0L BFN MM48P		Live Data		Y		
XSARA 2 (2000-2006)		Engine ECU	Petrol engine	2.0L BFN MM48P		Actuation Test		Y		
XSARA 2 (2000-2006)		Engine ECU	Petrol engine	2.0L BFN MM48P		Special Function	Initialisation of the autoadaptive values	Y		
XSARA 2 (2000-2006)		Engine ECU	Petrol engine	2.0L BFN MM48P		Read ECU Information		Y		
XSARA 2 (2000-2006)		Engine ECU	Petrol engine	2.0L BFN MM48P		Read Fault Code		Y		
XSARA 2 (2000-2006)		Engine ECU	Petrol engine	2.0L BFN MM48P		Erase Fault Code		Y		
XSARA 2 (2000-2006)		Engine ECU	Petrol engine	2.0L BFN MM48P		Live Data		Y		
XSARA 2 (2000-2006)		Engine ECU	Petrol engine	2.0L BFN MM48P		Actuation Test		Y		
XSARA 2 (2000-2006)		Engine ECU	Petrol engine	2.0L BFN MM48P		Special Function	Initialisation of the autoadaptive values	Y		
XSARA 2 (2000-2006)		Engine ECU	Petrol engine	BFN MM48P2		Read ECU Information		Y		
XSARA 2 (2000-2006)		Engine ECU	Petrol engine	BFN MM48P2		Read Fault Code		Y		
XSARA 2 (2000-2006)		Engine ECU	Petrol engine	BFN MM48P2		Erase Fault Code		Y		
XSARA 2 (2000-2006)		Engine ECU	Petrol engine	BFN MM48P2		Live Data		Y		
XSARA 2 (2000-2006)		Engine ECU	Petrol engine	BFN MM48P2		Actuation Test		Y		
XSARA 2 (2000-2006)		Engine ECU	Petrol engine	BFN MM48P2		Special Function	Initialisation of auto-adaptation	Y		
XSARA 2 (2000-2006)		Engine ECU	Petrol engine	1.6L NPU BOSCH ME744		Read ECU Information		Y		
XSARA 2 (2000-2006)		Engine ECU	Petrol engine	1.6L NPU BOSCH ME744		Read Fault Code		Y		
XSARA 2 (2000-2006)		Engine ECU	Petrol engine	1.6L NPU BOSCH ME744		Erase Fault Code		Y		
XSARA 2 (2000-2006)		Engine ECU	Petrol engine	1.6L NPU BOSCH ME744		Live Data		Y		
XSARA 2 (2000-2006)		Engine ECU	Petrol engine	1.6L NPU BOSCH ME744		Actuation Test		Y		
XSARA 2 (2000-2006)		Engine ECU	Petrol engine	1.6L NPU BOSCH ME744		Special Function	Initialisation of auto-adaptation	Y		
XSARA 2 (2000-2006)		Engine ECU	Petrol engine	1.6L NPU BOSCH ME744		Special Function	Matching	Y		
XSARA 2 (2000-2006)		Engine ECU	Petrol engine	1.4L KPW SAGEM S2000P(SBPS)		Read ECU Information		Y		
XSARA 2 (2000-2006)		Engine ECU	Petrol engine	1.4L KPW SAGEM S2000P(SBPS)		Read Fault Code		Y		
XSARA 2 (2000-2006)		Engine ECU	Petrol engine	1.4L KPW SAGEM S2000P(SBPS)		Erase Fault Code		Y		
XSARA 2 (2000-2006)		Engine ECU	Petrol engine	1.4L KPW SAGEM S2000P(SBPS)		Live Data		Y		
XSARA 2 (2000-2006)		Engine ECU	Petrol engine	1.4L KPW SAGEM S2000P(SBPS)		Actuation Test		Y		
XSARA 2 (2000-2006)		Engine ECU	Petrol engine	1.4L KPW SAGEM S2000P(SBPS)		Special Function	Recentering of programming values	Y		
XSARA 2 (2000-2006)		Engine ECU	Petrol engine	1.4L KPW SAGEM S2000P		Read ECU Information		Y		
XSARA 2 (2000-2006)		Engine ECU	Petrol engine	1.4L KPW SAGEM S2000P		Read Fault Code		Y		
XSARA 2 (2000-2006)		Engine ECU	Petrol engine	1.4L KPW SAGEM S2000P		Erase Fault Code		Y		
XSARA 2 (2000-2006)		Engine ECU	Petrol engine	1.4L KPW SAGEM S2000P		Live Data		Y		
XSARA 2 (2000-2006)		Engine ECU	Petrol engine	1.4L KPW SAGEM S2000P		Actuation Test		Y		
XSARA 2 (2000-2006)		Engine ECU	Petrol engine	1.4L KPW SAGEM S2000P		Special Function	Recentering of programming values	Y		
XSARA 2 (2000-2006)		Engine ECU	Petrol engine	1.4L KPW SAGEM S2000P		Special Function	Programming / Matching	Y		
XSARA 2 (2000-2006)		Engine ECU	Diesel engine	2.0L RHY BOSCH EDC15C2		Read ECU Information		Y		
XSARA 2 (2000-2006)		Engine ECU	Diesel engine	2.0L RHY BOSCH EDC15C2		Read Fault Code		Y		
XSARA 2 (2000-2006)		Engine ECU	Diesel engine	2.0L RHY BOSCH EDC15C2		Erase Fault Code		Y		
XSARA 2 (2000-2006)		Engine ECU	Diesel engine	2.0L RHY BOSCH EDC15C2		Live Data		Y		
XSARA 2 (2000-2006)		Engine ECU	Diesel engine	2.0L RHY BOSCH EDC15C2		Actuation Test		Y		
XSARA 2 (2000-2006)		Engine ECU	Diesel engine	2.0L RHY BOSCH EDC15C2		Read ECU Information		Y		
XSARA 2 (2000-2006)		Engine ECU	Diesel engine	2.0L RHY BOSCH EDC15C2		Read Fault Code		Y		
XSARA 2 (2000-2006)		Engine ECU	Diesel engine	2.0L RHY BOSCH EDC15C2		Erase Fault Code		Y		
XSARA 2 (2000-2006)		Engine ECU	Diesel engine	2.0L RHY BOSCH EDC15C2		Live Data		Y		
XSARA 2 (2000-2006)		Engine ECU	Diesel engine	2.0L RHY BOSCH EDC15C2		Actuation Test		Y		
XSARA 2 (2000-2006)		Engine ECU	Diesel engine	1.9L RYJ LUCAS D02		Read ECU Information		Y		
XSARA 2 (2000-2006)		Engine ECU	Diesel engine	1.9L RYJ LUCAS D02		Read Fault Code		Y		
XSARA 2 (2000-2006)		Engine ECU	Diesel engine	1.9L RYJ LUCAS D02		Erase Fault Code		Y		
XSARA 2 (2000-2006)		Engine ECU	Diesel engine	1.9L RYJ LUCAS D02		Live Data		Y		
XSARA 2 (2000-2006)		Engine ECU	Diesel engine	1.9L RYJ LUCAS D02		Actuation Test		Y		
XSARA 2 (2000-2006)		Engine ECU	Diesel engine	RHY SIEMENS S1D801		Read ECU Information		Y		
XSARA 2 (2000-2006)		Engine ECU	Diesel engine	RHY SIEMENS S1D801		Read Fault Code		Y		
XSARA 2 (2000-2006)		Engine ECU	Diesel engine	RHY SIEMENS S1D801		Erase Fault Code		Y		
XSARA 2 (2000-2006)		Engine ECU	Diesel engine	RHY SIEMENS S1D801		Live Data		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function reasons	Add (Y/N)	Verification (Y/N)	Remarks
XSARA 2 (2000-2006)		Engine ECU	Diesel engine	HY SIEMENS SID801		Actuation Test		Y		
XSARA 2 (2000-2006)		Engine ECU	Diesel engine	HY SIEMENS SID801		Special Function	Programming / Matching	Y		
XSARA 2 (2000-2006)		Engine ECU	Diesel engine	802 BOSCH EDC16C3 (DV4)		Read ECU Information		Y		
XSARA 2 (2000-2006)		Engine ECU	Diesel engine	802 BOSCH EDC16C3 (DV4)		Read Fault Code		Y		
XSARA 2 (2000-2006)		Engine ECU	Diesel engine	802 BOSCH EDC16C3 (DV4)		Erase Fault Code		Y		
XSARA 2 (2000-2006)		Engine ECU	Diesel engine	802 BOSCH EDC16C3 (DV4)		Live Data		Y		
XSARA 2 (2000-2006)		Engine ECU	Diesel engine	802 BOSCH EDC16C3 (DV4)		Special Function	Programming / Matching	Y		
XSARA 2 (2000-2006)		Auto gearbox	Auto gearbox M4.1(24)			Read ECU Information		Y		
XSARA 2 (2000-2006)		Auto gearbox	Auto gearbox M4.1(24)			Read Fault Code		Y		
XSARA 2 (2000-2006)		Auto gearbox	Auto gearbox M4.1(24)			Erase Fault Code		Y		
XSARA 2 (2000-2006)		Auto gearbox	Auto gearbox M4.1(24)			Live Data		Y		
XSARA 2 (2000-2006)		Auto gearbox	Auto gearbox M4.1(24)			Actuation Test		Y		
XSARA 2 (2000-2006)		Auto gearbox	Auto gearbox M4.1(24)			Special Function	Initialisation of auto-adaptation	Y		
XSARA 2 (2000-2006)		Auto gearbox	Auto gearbox M4.1(24)			Special Function	Oil wear counter	Y		
XSARA 2 (2000-2006)		Auto gearbox	Auto gearbox M4.2(24)			Read ECU Information		Y		
XSARA 2 (2000-2006)		Auto gearbox	Auto gearbox M4.2(24)			Read Fault Code		Y		
XSARA 2 (2000-2006)		Auto gearbox	Auto gearbox M4.2(24)			Erase Fault Code		Y		
XSARA 2 (2000-2006)		Auto gearbox	Auto gearbox M4.2(24)			Live Data		Y		
XSARA 2 (2000-2006)		Auto gearbox	Auto gearbox M4.2(24)			Actuation Test		Y		
XSARA 2 (2000-2006)		Auto gearbox	Auto gearbox M4.2(24)			Special Function	Pedal initialisation	Y		
XSARA 2 (2000-2006)		Auto gearbox	Auto gearbox M4.2(24)			Special Function	Initialisation of auto-adaptation	Y		
XSARA 2 (2000-2006)		Auto gearbox	Auto gearbox M4.2(24)			Special Function	Oil wear counter	Y		
XSARA 2 (2000-2006)		Auto gearbox	Auto gearbox M4.3(44)			Read ECU Information		Y		
XSARA 2 (2000-2006)		Auto gearbox	Auto gearbox M4.3(44)			Read Fault Code		Y		
XSARA 2 (2000-2006)		Auto gearbox	Auto gearbox M4.3(44)			Erase Fault Code		Y		
XSARA 2 (2000-2006)		Auto gearbox	Auto gearbox M4.3(44)			Live Data		Y		
XSARA 2 (2000-2006)		Auto gearbox	Auto gearbox M4.3(44)			Actuation Test		Y		
XSARA 2 (2000-2006)		Auto gearbox	Auto gearbox M4.3(44)			Special Function	Pedal initialisation	Y		
XSARA 2 (2000-2006)		Auto gearbox	Auto gearbox M4.3(44)			Special Function	Initialisation of auto-adaptation	Y		
XSARA 2 (2000-2006)		Auto gearbox	Auto gearbox M4.3(44)			Special Function	Oil wear counter	Y		
XSARA 2 (2000-2006)		Anti-lock brake system	ABS 5.3			Read ECU Information		Y		
XSARA 2 (2000-2006)		Anti-lock brake system	ABS 5.3			Read Fault Code		Y		
XSARA 2 (2000-2006)		Anti-lock brake system	ABS 5.3			Erase Fault Code		Y		
XSARA 2 (2000-2006)		Anti-lock brake system	ABS 5.3			Live Data		Y		
XSARA 2 (2000-2006)		Anti-lock brake system	ABS 5.3			Actuation Test		Y		
XSARA 2 (2000-2006)		Anti-lock brake system	ABS 5.3			Special Function	Bleeding	Y		
XSARA 2 (2000-2006)		Anti-lock brake system	ESP_BOSCH 5.7			Read ECU Information		Y		
XSARA 2 (2000-2006)		Anti-lock brake system	ESP_BOSCH 5.7			Read Fault Code		Y		
XSARA 2 (2000-2006)		Anti-lock brake system	ESP_BOSCH 5.7			Erase Fault Code		Y		
XSARA 2 (2000-2006)		Anti-lock brake system	ESP_BOSCH 5.7			Live Data		Y		
XSARA 2 (2000-2006)		Anti-lock brake system	ESP_BOSCH 5.7			Actuation Test		Y		
XSARA 2 (2000-2006)		Anti-lock brake system	ESP_BOSCH 5.7			Special Function	Bleeding	Y		
XSARA 2 (2000-2006)		Anti-lock brake system	ESP_BOSCH 5.7			Special Function	Calibration/decalsibration of the steering wheel angle sensor	Y		
XSARA 2 (2000-2006)		Airbag				Read ECU Information		Y		
XSARA 2 (2000-2006)		Airbag				Read Fault Code		Y		
XSARA 2 (2000-2006)		Airbag				Erase Fault Code		Y		
XSARA 2 (2000-2006)		Built-in Systems Interface				Read ECU Information		Y		
XSARA 2 (2000-2006)		Built-in Systems Interface				Read Fault Code		Y		
XSARA 2 (2000-2006)		Built-in Systems Interface				Erase Fault Code		Y		
XSARA 2 (2000-2006)		Built-in Systems Interface				Live Data		Y		
XSARA 2 (2000-2006)		Built-in Systems Interface				Special Function	Key programming	Y		
XSARA 2 (2000-2006)		Navigation				Read ECU Information		Y		
XSARA 2 (2000-2006)		Navigation				Read Fault Code		Y		
XSARA 2 (2000-2006)		Navigation				Erase Fault Code		Y		
XSARA 2 (2000-2006)		Navigation				Live Data		Y		
XSARA 2 (2000-2006)		Instrument panel				Read ECU Information		Y		
XSARA 2 (2000-2006)		Instrument panel				Read Fault Code		Y		
XSARA 2 (2000-2006)		Instrument panel				Erase Fault Code		Y		
XSARA 2 (2000-2006)		Instrument panel				Live Data		Y		
XSARA 2 (2000-2006)		Instrument panel				Actuation Test		Y		
XSARA 2 (2000-2006)		Air conditioning				Read ECU Information		Y		
XSARA 2 (2000-2006)		Air conditioning				Read Fault Code		Y		
XSARA 2 (2000-2006)		Air conditioning				Erase Fault Code		Y		
XSARA 2 (2000-2006)		Air conditioning				Live Data		Y		
XSARA 2 (2000-2006)		Air conditioning				Actuation Test		Y		
XSARA 2 (2000-2006)		Radio post-equipment				Read ECU Information		Y		
XSARA 2 (2000-2006)		Radio post-equipment				Read Fault Code		Y		
XSARA 2 (2000-2006)		Radio post-equipment				Erase Fault Code		Y		
XSARA 2 (2000-2006)		Radio post-equipment				Live Data		Y		
XSARA 2 (2000-2006)		Radio post-equipment				Actuation Test		Y		
XSARA 2 (2000-2006)		Car phone				Read ECU Information		Y		
XSARA 2 (2000-2006)		Car phone				Read Fault Code		Y		
XSARA 2 (2000-2006)		Car phone				Erase Fault Code		Y		
XSARA 2 (2000-2006)		Car phone				Live Data		Y		
XSARA 2 (2000-2006)		Car phone				Actuation Test		Y		
XSARA 2 (2000-2006)		CD player				Read ECU Information		Y		
XSARA 2 (2000-2006)		CD player				Read Fault Code		Y		
XSARA 2 (2000-2006)		CD player				Erase Fault Code		Y		
XSARA 2 (2000-2006)		CD player				Live Data		Y		
XSARA 2 (2000-2006)		CD player				Actuation Test		Y		
XSARA 2 (2000-2006)		Parking assistance				Read ECU Information		Y		
XSARA 2 (2000-2006)		Parking assistance				Read Fault Code		Y		
XSARA 2 (2000-2006)		Parking assistance				Erase Fault Code		Y		
XSARA 2 (2000-2006)		Parking assistance				Live Data		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function reasons	Add (Y/N)	Verification (Y/N)	Remarks
XSARA 2 (2000-2006)		Parking assistance				Actuation Text		Y		
XSARA 2 (2000-2006)		Top of column				Read ECU Information		Y		
XSARA 2 (2000-2006)		Top of column				Live Data		Y		
XSARA 2 (2000-2006)		Alarm				Read ECU Information		Y		
XSARA 2 (2000-2006)		Alarm				Read Fault Code		Y		
XSARA 2 (2000-2006)		Alarm				Erase Fault Code		Y		
XSARA 2 (2000-2006)		Alarm				Live Data		Y		
XSARA 2 (2000-2006)		Alarm				Actuation Text		Y		
XSARA 2 (2000-2006)		Driving school mode				Read ECU Information		Y		
XSARA 2 (2000-2006)		Driving school mode				Live Data		Y		
XSARA 2 (2000-2006)		Driving school mode				Actuation Text		Y		
XSARA 2 (2000-2006)		Display or Autopoc	Multifunction display A			Read ECU Information		Y		
XSARA 2 (2000-2006)		Display or Autopoc	Multifunction display A			Read Fault Code		Y		
XSARA 2 (2000-2006)		Display or Autopoc	Multifunction display A			Erase Fault Code		Y		
XSARA 2 (2000-2006)		Display or Autopoc	Multifunction display A			Live Data		Y		
XSARA 2 (2000-2006)		Display or Autopoc	Multifunction display A			Actuation Text		Y		
XSARA 2 (2000-2006)		Display or Autopoc	Multifunction display B			Read ECU Information		Y		
XSARA 2 (2000-2006)		Display or Autopoc	Multifunction display B			Read Fault Code		Y		
XSARA 2 (2000-2006)		Display or Autopoc	Multifunction display B			Erase Fault Code		Y		
XSARA 2 (2000-2006)		Display or Autopoc	Multifunction display B			Live Data		Y		
XSARA 2 (2000-2006)		Display or Autopoc	Multifunction display B			Actuation Text		Y		
XSARA 2 (2000-2006)		Display or Autopoc	Multifunction display B			Read ECU Information		Y		
XSARA 2 (2000-2006)		Display or Autopoc	Multifunction display B			Erase Fault Code		Y		
XSARA 2 (2000-2006)		Display or Autopoc	Multifunction display B			Live Data		Y		
XSARA 2 (2000-2006)		Display or Autopoc	Multifunction display B			Actuation Text		Y		
XSARA 2 (2000-2006)		Display or Autopoc	Multifunction display C			Read ECU Information		Y		
XSARA 2 (2000-2006)		Display or Autopoc	Multifunction display C			Read Fault Code		Y		
XSARA 2 (2000-2006)		Display or Autopoc	Multifunction display C			Erase Fault Code		Y		
XSARA 2 (2000-2006)		Display or Autopoc	Multifunction display C			Live Data		Y		
XSARA 2 (2000-2006)		Display or Autopoc	Multifunction display C			Actuation Text		Y		
XSARA 2 (2000-2006)		Display or Autopoc	AUTOPOC			Read ECU Information		Y		
XSARA 2 (2000-2006)		Display or Autopoc	AUTOPOC			Read Fault Code		Y		
XSARA 2 (2000-2006)		Display or Autopoc	AUTOPOC			Erase Fault Code		Y		
XSARA 2 (2000-2006)		Display or Autopoc	AUTOPOC			Live Data		Y		
XSARA 2 (2000-2006)		Display or Autopoc	AUTOPOC			Actuation Text		Y		
XSARA 2 (2000-2006)		Additional heating				Read ECU Information		Y		
XSARA 2 (2000-2006)		Additional heating				Read Fault Code		Y		
XSARA 2 (2000-2006)		Additional heating				Erase Fault Code		Y		
XSARA 2 (2000-2006)		Additional heating				Live Data		Y		
XSARA 2 (2000-2006)		Additional heating				Actuation Text		Y		
XSARA 2 (2000-2006)		Rain sensor/Brightness				Read ECU Information		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	1.6L NFZ BOSCH MP7.2		Read ECU Information		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	1.6L NFZ BOSCH MP7.2		Read Fault Code		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	1.6L NFZ BOSCH MP7.2		Erase Fault Code		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	1.6L NFZ BOSCH MP7.2		Live Data		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	1.6L NFZ BOSCH MP7.2		Actuation Text		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	1.6L NPV BOSCH W744		Read ECU Information		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	1.6L NPV BOSCH W744		Read Fault Code		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	1.6L NPV BOSCH W744		Erase Fault Code		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	1.6L NPV BOSCH W744		Live Data		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	1.6L NPV BOSCH W744		Actuation Text		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	1.6L NPV BOSCH W744		Special Function	Initialization of auto-adaptation	Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	1.6L NPV BOSCH W744		Special Function	Matching	Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	2.0L BFW M48P		Read ECU Information		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	2.0L BFW M48P		Read Fault Code		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	2.0L BFW M48P		Erase Fault Code		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	2.0L BFW M48P		Live Data		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	2.0L BFW M48P		Actuation Text		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	2.0L BFW M48P		Special Function	Initialization of the autoadaptive values	Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	1.8L 6FZ SAGEM S2000P (8BPS)		Read ECU Information		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	1.8L 6FZ SAGEM S2000P (8BPS)		Read Fault Code		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	1.8L 6FZ SAGEM S2000P (8BPS)		Erase Fault Code		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	1.8L 6FZ SAGEM S2000P (8BPS)		Live Data		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	1.8L 6FZ SAGEM S2000P (8BPS)		Actuation Text		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	1.8L 6FZ SAGEM S2000P (8BPS)		Special Function	Recentring of programming values	Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	1.8L 6FZ SAGEM S2000P		Read ECU Information		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	1.8L 6FZ SAGEM S2000P		Read Fault Code		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	1.8L 6FZ SAGEM S2000P		Erase Fault Code		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	1.8L 6FZ SAGEM S2000P		Live Data		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	1.8L 6FZ SAGEM S2000P		Actuation Text		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	1.8L 6FZ SAGEM S2000P		Special Function	Recentring of programming values	Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	1.8L 6FZ SAGEM S2000P		Special Function	Programming / Matching	Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	6FZ SAGEM S2000PM (8BPS)		Read ECU Information		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	6FZ SAGEM S2000PM (8BPS)		Read Fault Code		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	6FZ SAGEM S2000PM (8BPS)		Erase Fault Code		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	6FZ SAGEM S2000PM (8BPS)		Live Data		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	6FZ SAGEM S2000PM (8BPS)		Actuation Text		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	6FZ SAGEM S2000PM (8BPS)		Special Function	Matching	Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	6FZ SAGEM S2000PM		Read ECU Information		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	6FZ SAGEM S2000PM		Read Fault Code		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	6FZ SAGEM S2000PM		Live Data		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	6FZ SAGEM S2000PM		Actuation Text		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	6FZ SAGEM S2000PM		Special Function	Matching	Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	6FZ SAGEM S2000PM2		Read ECU Information		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	6FZ SAGEM S2000PM2		Read Fault Code		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	6FZ SAGEM S2000PM2		Erase Fault Code		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	6FZ SAGEM S2000PM2		Live Data		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for Citroen, NO stands for other ones)	Subsystem (YES stands for Citroen, NO stands for other ones)	Subsystem or system type	Function type	Special function reasons	Add (Y/N)	Verification (Y/N)	Remarks
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	6FZ SAGEM S2000PQ2		Special Function	Matching	Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	NFS BOSCH ME745		Read ECU Information		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	NFS BOSCH ME745		Read Fault Code		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	NFS BOSCH ME745		Erase Fault Code		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	NFS BOSCH ME745		Live Data		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	NFS BOSCH ME745		Actuation Test		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	NFS BOSCH ME745		Special Function	Initialisation of auto-adaptation	Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	NFS BOSCH ME745		Special Function	Programming / Matching	Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	NFU BOSCH ME745		Read ECU Information		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	NFU BOSCH ME745		Read Fault Code		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	NFU BOSCH ME745		Erase Fault Code		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	NFU BOSCH ME745		Live Data		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	NFU BOSCH ME745		Actuation Test		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	NFU BOSCH ME745		Special Function	Initialisation of auto-adaptation	Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	NFU BOSCH ME745		Special Function	Programming / Matching	Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	NSA BOSCH ME745		Read ECU Information		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	NSA BOSCH ME745		Read Fault Code		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	NSA BOSCH ME745		Erase Fault Code		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	NSA BOSCH ME745		Live Data		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	NSA BOSCH ME745		Actuation Test		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	NSA BOSCH ME745		Special Function	Initialisation of auto-adaptation	Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	NSA BOSCH ME745		Special Function	Programming / Matching	Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	NFR BOSCH ME745		Read ECU Information		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	NFR BOSCH ME745		Read Fault Code		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	NFR BOSCH ME745		Erase Fault Code		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	NFR BOSCH ME745		Live Data		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	NFR BOSCH ME745		Actuation Test		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	NFR BOSCH ME745		Special Function	Initialisation of auto-adaptation	Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	NFR BOSCH ME745		Special Function	Programming / Matching	Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	RFN MB6LP		Read ECU Information		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	RFN MB6LP		Read Fault Code		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	RFN MB6LP		Erase Fault Code		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	RFN MB6LP		Live Data		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	RFN MB6LP		Actuation Test		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	NFS BOSCH ME749		Read ECU Information		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	NFS BOSCH ME749		Read Fault Code		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	NFS BOSCH ME749		Erase Fault Code		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	NFS BOSCH ME749		Live Data		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	NFS BOSCH ME749		Actuation Test		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	NFS BOSCH ME749		Special Function	Initialise auto-adaptives	Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	NFU BOSCH ME749		Read ECU Information		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	NFU BOSCH ME749		Read Fault Code		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	NFU BOSCH ME749		Erase Fault Code		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	NFU BOSCH ME749		Live Data		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	NFU BOSCH ME749		Actuation Test		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	NFU BOSCH ME749		Special Function	Initialise auto-adaptives	Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	NSA BOSCH ME749		Read ECU Information		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	NSA BOSCH ME749		Erase Fault Code		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	NSA BOSCH ME749		Live Data		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	NSA BOSCH ME749		Actuation Test		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Petrol engine	NSA BOSCH ME749		Special Function	Initialise auto-adaptives	Y		
XSARA PICASSO (1999-2006)		Engine ECU	Diesel engine	2.0L BOSCH EDC15C2		Read ECU Information		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Diesel engine	2.0L BOSCH EDC15C2		Read Fault Code		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Diesel engine	2.0L BOSCH EDC15C2		Erase Fault Code		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Diesel engine	2.0L BOSCH EDC15C2		Live Data		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Diesel engine	2.0L BOSCH EDC15C2		Actuation Test		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Diesel engine	9HY BOSCH EDC16C3 DV6TED4		Read ECU Information		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Diesel engine	9HY BOSCH EDC16C3 DV6TED4		Read Fault Code		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Diesel engine	9HY BOSCH EDC16C3 DV6TED4		Erase Fault Code		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Diesel engine	9HY BOSCH EDC16C3 DV6TED4		Live Data		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Diesel engine	9HY BOSCH EDC16C3 DV6TED4		Actuation Test		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Diesel engine	9HY BOSCH EDC16C3 DV6TED4		Special Function	Particle filter and diesel additive maintenance	Y		
XSARA PICASSO (1999-2006)		Engine ECU	Diesel engine	9HZ (FAP) BOSCH EDC16C34 DV6TED4		Read ECU Information		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Diesel engine	9HZ (FAP) BOSCH EDC16C34 DV6TED4		Read Fault Code		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Diesel engine	9HZ (FAP) BOSCH EDC16C34 DV6TED4		Erase Fault Code		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Diesel engine	9HZ (FAP) BOSCH EDC16C34 DV6TED4		Live Data		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Diesel engine	9HZ (FAP) BOSCH EDC16C34 DV6TED4		Actuation Test		Y		
XSARA PICASSO (1999-2006)		Engine ECU	Diesel engine	9HZ (FAP) BOSCH EDC16C34 DV6TED4		Special Function	Specific operation for maintenance and part replacement	Y		
XSARA PICASSO (1999-2006)		Auto gearbox	Auto gearbox M4,1 (24)			Read ECU Information		Y		
XSARA PICASSO (1999-2006)		Auto gearbox	Auto gearbox M4,1 (24)			Read Fault Code		Y		
XSARA PICASSO (1999-2006)		Auto gearbox	Auto gearbox M4,1 (24)			Erase Fault Code		Y		
XSARA PICASSO (1999-2006)		Auto gearbox	Auto gearbox M4,1 (24)			Live Data		Y		
XSARA PICASSO (1999-2006)		Auto gearbox	Auto gearbox M4,1 (24)			Actuation Test		Y		
XSARA PICASSO (1999-2006)		Auto gearbox	Auto gearbox M4,1 (24)			Special Function	Initialisation of auto-adaptation	Y		
XSARA PICASSO (1999-2006)		Auto gearbox	Auto gearbox M4,1 (24)			Special Function	Oil wear counter	Y		
XSARA PICASSO (1999-2006)		Auto gearbox	Auto gearbox M4,2 (24)			Read ECU Information		Y		
XSARA PICASSO (1999-2006)		Auto gearbox	Auto gearbox M4,2 (24)			Read Fault Code		Y		
XSARA PICASSO (1999-2006)		Auto gearbox	Auto gearbox M4,2 (24)			Erase Fault Code		Y		
XSARA PICASSO (1999-2006)		Auto gearbox	Auto gearbox M4,2 (24)			Live Data		Y		
XSARA PICASSO (1999-2006)		Auto gearbox	Auto gearbox M4,2 (24)			Actuation Test		Y		
XSARA PICASSO (1999-2006)		Auto gearbox	Auto gearbox M4,2 (24)			Special Function	Pedal initialisation	Y		
XSARA PICASSO (1999-2006)		Auto gearbox	Auto gearbox M4,2 (24)			Special Function	Initialisation of auto-adaptation	Y		
XSARA PICASSO (1999-2006)		Auto gearbox	Auto gearbox M4,2 (24)			Special Function	Oil wear counter	Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for Chion, NO stands for other ones)	Subsystem (YES stands for Chion, NO stands for other ones)	Subsystem or system type	Function type	Special function subname	Add (Y/N)	Verification (Y/N)	Remarks
XSARA PICASSO (1999-2006)		Auto gearbox	Auto gearbox M4_3(44)			Read ECU Information		Y		
XSARA PICASSO (1999-2006)		Auto gearbox	Auto gearbox M4_3(44)			Read Fault Code		Y		
XSARA PICASSO (1999-2006)		Auto gearbox	Auto gearbox M4_3(44)			Erase Fault Code		Y		
XSARA PICASSO (1999-2006)		Auto gearbox	Auto gearbox M4_3(44)			Live Data		Y		
XSARA PICASSO (1999-2006)		Auto gearbox	Auto gearbox M4_3(44)			Actuation Test		Y		
XSARA PICASSO (1999-2006)		Auto gearbox	Auto gearbox M4_3(44)			Special Function	Pedal initialisation	Y		
XSARA PICASSO (1999-2006)		Auto gearbox	Auto gearbox M4_3(44)			Special Function	Initialisation of auto-adaptation	Y		
XSARA PICASSO (1999-2006)		Auto gearbox	Auto gearbox M4_3(44)			Special Function	Oil wear counter	Y		
XSARA PICASSO (1999-2006)		Anti-lock brake system	ABS 5.3			Read ECU Information		Y		
XSARA PICASSO (1999-2006)		Anti-lock brake system	ABS 5.3			Read Fault Code		Y		
XSARA PICASSO (1999-2006)		Anti-lock brake system	ABS 5.3			Erase Fault Code		Y		
XSARA PICASSO (1999-2006)		Anti-lock brake system	ABS 5.3			Live Data		Y		
XSARA PICASSO (1999-2006)		Anti-lock brake system	ABS 5.3			Actuation Test		Y		
XSARA PICASSO (1999-2006)		Anti-lock brake system	ABS 5.3			Special Function	Bleeding	Y		
XSARA PICASSO (1999-2006)		Anti-lock brake system	ESP BOSCH 5.7			Read ECU Information		Y		
XSARA PICASSO (1999-2006)		Anti-lock brake system	ESP BOSCH 5.7			Read Fault Code		Y		
XSARA PICASSO (1999-2006)		Anti-lock brake system	ESP BOSCH 5.7			Erase Fault Code		Y		
XSARA PICASSO (1999-2006)		Anti-lock brake system	ESP BOSCH 5.7			Live Data		Y		
XSARA PICASSO (1999-2006)		Anti-lock brake system	ESP BOSCH 5.7			Actuation Test		Y		
XSARA PICASSO (1999-2006)		Anti-lock brake system	ESP BOSCH 5.7			Special Function	Bleeding	Y		
XSARA PICASSO (1999-2006)		Anti-lock brake system	ESP BOSCH 5.7			Special Function	Calibration/dec calibration of the steering wheel angle sensor	Y		
XSARA PICASSO (1999-2006)		Anti-lock brake system	ABS 1 BOSCH			Read ECU Information		Y		
XSARA PICASSO (1999-2006)		Anti-lock brake system	ABS 1 BOSCH			Read Fault Code		Y		
XSARA PICASSO (1999-2006)		Anti-lock brake system	ABS 1 BOSCH			Erase Fault Code		Y		
XSARA PICASSO (1999-2006)		Anti-lock brake system	ABS 1 BOSCH			Live Data		Y		
XSARA PICASSO (1999-2006)		Anti-lock brake system	ABS 1 BOSCH			Actuation Test		Y		
XSARA PICASSO (1999-2006)		Anti-lock brake system	ABS 1 BOSCH			Special Function	Bleeding	Y		
XSARA PICASSO (1999-2006)		Anti-lock brake system	ABS BOSCH			Read ECU Information		Y		
XSARA PICASSO (1999-2006)		Anti-lock brake system	ABS BOSCH			Read Fault Code		Y		
XSARA PICASSO (1999-2006)		Anti-lock brake system	ABS BOSCH			Erase Fault Code		Y		
XSARA PICASSO (1999-2006)		Anti-lock brake system	ABS BOSCH			Live Data		Y		
XSARA PICASSO (1999-2006)		Anti-lock brake system	ABS BOSCH			Actuation Test		Y		
XSARA PICASSO (1999-2006)		Anti-lock brake system	ABS BOSCH			Special Function	Bleeding	Y		
XSARA PICASSO (1999-2006)		Anti-lock brake system	ESPR 1 BOSCH			Read ECU Information		Y		
XSARA PICASSO (1999-2006)		Anti-lock brake system	ESPR 1 BOSCH			Read Fault Code		Y		
XSARA PICASSO (1999-2006)		Anti-lock brake system	ESPR 1 BOSCH			Erase Fault Code		Y		
XSARA PICASSO (1999-2006)		Anti-lock brake system	ESPR 1 BOSCH			Live Data		Y		
XSARA PICASSO (1999-2006)		Anti-lock brake system	ESPR 1 BOSCH			Actuation Test		Y		
XSARA PICASSO (1999-2006)		Anti-lock brake system	ESPR 1 BOSCH			Special Function	Steering wheel angle sensor calibration	Y		
XSARA PICASSO (1999-2006)		Anti-lock brake system	ESPR 1 BOSCH			Special Function	Longitudinal acceleration sensor calibration	Y		
XSARA PICASSO (1999-2006)		Anti-lock brake system	ESPR 1 BOSCH			Special Function	Bleeding	Y		
XSARA PICASSO (1999-2006)		Anti-lock brake system	ESPR BOSCH			Read ECU Information		Y		
XSARA PICASSO (1999-2006)		Anti-lock brake system	ESPR BOSCH			Read Fault Code		Y		
XSARA PICASSO (1999-2006)		Anti-lock brake system	ESPR BOSCH			Erase Fault Code		Y		
XSARA PICASSO (1999-2006)		Anti-lock brake system	ESPR BOSCH			Live Data		Y		
XSARA PICASSO (1999-2006)		Anti-lock brake system	ESPR BOSCH			Actuation Test		Y		
XSARA PICASSO (1999-2006)		Anti-lock brake system	ESPR BOSCH			Special Function	Calibration/dec calibration of the steering wheel angle sensor	Y		
XSARA PICASSO (1999-2006)		Anti-lock brake system	ESPR BOSCH			Special Function	Bleeding	Y		
XSARA PICASSO (1999-2006)		Airbag				Read ECU Information		Y		
XSARA PICASSO (1999-2006)		Airbag				Read Fault Code		Y		
XSARA PICASSO (1999-2006)		Airbag				Erase Fault Code		Y		
XSARA PICASSO (1999-2006)		Built-in Systems Interface				Read ECU Information		Y		
XSARA PICASSO (1999-2006)		Built-in Systems Interface				Read Fault Code		Y		
XSARA PICASSO (1999-2006)		Built-in Systems Interface				Erase Fault Code		Y		
XSARA PICASSO (1999-2006)		Built-in Systems Interface				Live Data		Y		
XSARA PICASSO (1999-2006)		Built-in Systems Interface				Special Function	Learning	Y		
XSARA PICASSO (1999-2006)		Navigation				Read ECU Information		Y		
XSARA PICASSO (1999-2006)		Navigation				Read Fault Code		Y		
XSARA PICASSO (1999-2006)		Navigation				Erase Fault Code		Y		
XSARA PICASSO (1999-2006)		Navigation				Live Data		Y		
XSARA PICASSO (1999-2006)		Multifunction display	Multifunction display YD0 B			Read ECU Information		Y		
XSARA PICASSO (1999-2006)		Multifunction display	Multifunction display YD0 B			Read Fault Code		Y		
XSARA PICASSO (1999-2006)		Multifunction display	Multifunction display YD0 B			Erase Fault Code		Y		
XSARA PICASSO (1999-2006)		Multifunction display	Multifunction display YD0 B			Live Data		Y		
XSARA PICASSO (1999-2006)		Multifunction display	Multifunction display YD0 B			Actuation Test		Y		
XSARA PICASSO (1999-2006)		Multifunction display	Multifunction display YD0 C			Read ECU Information		Y		
XSARA PICASSO (1999-2006)		Multifunction display	Multifunction display YD0 C			Read Fault Code		Y		
XSARA PICASSO (1999-2006)		Multifunction display	Multifunction display YD0 C			Erase Fault Code		Y		
XSARA PICASSO (1999-2006)		Multifunction display	Multifunction display YD0 C			Live Data		Y		
XSARA PICASSO (1999-2006)		Multifunction display	Multifunction display YD0 C			Actuation Test		Y		
XSARA PICASSO (1999-2006)		Air conditioning				Read ECU Information		Y		
XSARA PICASSO (1999-2006)		Air conditioning				Read Fault Code		Y		
XSARA PICASSO (1999-2006)		Air conditioning				Erase Fault Code		Y		
XSARA PICASSO (1999-2006)		Air conditioning				Live Data		Y		
XSARA PICASSO (1999-2006)		Air conditioning				Actuation Test		Y		
XSARA PICASSO (1999-2006)		Radio post-equipment				Read ECU Information		Y		
XSARA PICASSO (1999-2006)		Radio post-equipment				Read Fault Code		Y		
XSARA PICASSO (1999-2006)		Radio post-equipment				Erase Fault Code		Y		
XSARA PICASSO (1999-2006)		Radio post-equipment				Live Data		Y		
XSARA PICASSO (1999-2006)		Radio post-equipment				Actuation Test		Y		
XSARA PICASSO (1999-2006)		CD player				Read ECU Information		Y		
XSARA PICASSO (1999-2006)		CD player				Read Fault Code		Y		
XSARA PICASSO (1999-2006)		CD player				Erase Fault Code		Y		
XSARA PICASSO (1999-2006)		CD player				Live Data		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Models	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
XSARA PICASSO (1999-2006)		CD player				Actuation Text		Y		
XSARA PICASSO (1999-2006)		Instrument panel				Read ECU Information		Y		
XSARA PICASSO (1999-2006)		Instrument panel				Read Fault Code		Y		
XSARA PICASSO (1999-2006)		Instrument panel				Erase Fault Code		Y		
XSARA PICASSO (1999-2006)		Instrument panel				Live Data		Y		
XSARA PICASSO (1999-2006)		Instrument panel				Actuation Text		Y		
XSARA PICASSO (1999-2006)		Additional heating				Read ECU Information		Y		
XSARA PICASSO (1999-2006)		Additional heating				Read Fault Code		Y		
XSARA PICASSO (1999-2006)		Additional heating				Erase Fault Code		Y		
XSARA PICASSO (1999-2006)		Additional heating				Live Data		Y		
XSARA PICASSO (1999-2006)		Additional heating				Actuation Text		Y		
XSARA PICASSO (1999-2006)		Diesel additive function				Read ECU Information		Y		
XSARA PICASSO (1999-2006)		Diesel additive function				Read Fault Code		Y		
XSARA PICASSO (1999-2006)		Diesel additive function				Erase Fault Code		Y		
XSARA PICASSO (1999-2006)		Diesel additive function				Live Data		Y		
XSARA PICASSO (1999-2006)		Diesel additive function				Actuation Text		Y		
XSARA PICASSO (1999-2006)		Left hand side airbag				Read ECU Information		Y		
XSARA PICASSO (1999-2006)		Left hand side airbag				Read Fault Code		Y		
XSARA PICASSO (1999-2006)		Left hand side airbag				Erase Fault Code		Y		
XSARA PICASSO (1999-2006)		Left hand side airbag				Actuation Text		Y		
XSARA PICASSO (1999-2006)		Right hand side airbag				Read ECU Information		Y		
XSARA PICASSO (1999-2006)		Right hand side airbag				Read Fault Code		Y		
XSARA PICASSO (1999-2006)		Right hand side airbag				Erase Fault Code		Y		
XSARA PICASSO (1999-2006)		Right hand side airbag				Actuation Text		Y		
XSARA PICASSO (1999-2006)		Parking assistance				Read ECU Information		Y		
XSARA PICASSO (1999-2006)		Parking assistance				Read Fault Code		Y		
XSARA PICASSO (1999-2006)		Parking assistance				Erase Fault Code		Y		
XSARA PICASSO (1999-2006)		Parking assistance				Live Data		Y		
XSARA PICASSO (1999-2006)		Parking assistance				Actuation Text		Y		
XSARA PICASSO (1999-2006)		Alarm				Read ECU Information		Y		
XSARA PICASSO (1999-2006)		Alarm				Read Fault Code		Y		
XSARA PICASSO (1999-2006)		Alarm				Erase Fault Code		Y		
XSARA PICASSO (1999-2006)		Alarm				Actuation Text		Y		
XSARA PICASSO (1999-2006)		Switch module at the steering wheel				Read ECU Information		Y		
XSARA PICASSO (1999-2006)		Switch module at the steering wheel				Live Data		Y		
XSARA PICASSO (1999-2006)		Rain sensor/Brightness				Read ECU Information		Y		
XSARA PICASSO (1999-2006)		Telematic				Read ECU Information		Y		
XSARA PICASSO (1999-2006)		Telematic				Read Fault Code		Y		
XSARA PICASSO (1999-2006)		Telematic				Erase Fault Code		Y		
XSARA PICASSO (1999-2006)		Telematic				Live Data		Y		
XSARA PICASSO (1999-2006)		Telematic				Actuation Text		Y		
XSARA PICASSO (1999-2006)		Airbag				Read Fault Code		Y		
XANTIA		Airbag				Erase Fault Code		Y		
XANTIA		Coded anti-theft device				Read ECU Information		Y		
XANTIA		Coded anti-theft device				Read Fault Code		Y		
XANTIA		Coded anti-theft device				Erase Fault Code		Y		
XANTIA		Coded anti-theft device				Live Data		Y		
XANTIA		Air conditioning				Read ECU Information		Y		
XANTIA		Air conditioning				Read Fault Code		Y		
XANTIA		Air conditioning				Erase Fault Code		Y		
XANTIA 2		Engine ECU	Petrol engine	1.8L LFX M1AP		Read Fault Code		Y		
XANTIA 2		Engine ECU	Petrol engine	1.8L LFX M1AP		Erase Fault Code		Y		
XANTIA 2		Engine ECU	Petrol engine	1.8L LFX SAGEM SL96		Read ECU Information		Y		
XANTIA 2		Engine ECU	Petrol engine	1.8L LFX SAGEM SL96		Read Fault Code		Y		
XANTIA 2		Engine ECU	Petrol engine	1.8L LFX SAGEM SL96		Erase Fault Code		Y		
XANTIA 2		Engine ECU	Petrol engine	1.8L LFX SAGEM SL96		Live Data		Y		
XANTIA 2		Engine ECU	Petrol engine	1.8L LFX BOSCH MFS.2		Read Fault Code		Y		
XANTIA 2		Engine ECU	Petrol engine	1.8L LFX BOSCH MFS.2		Erase Fault Code		Y		
XANTIA 2		Engine ECU	Petrol engine	1.8L LFX BOSCH MFS.2		Live Data		Y		
XANTIA 2		Engine ECU	Petrol engine	1.8L LFX BOSCH MP7.3		Read ECU Information		Y		
XANTIA 2		Engine ECU	Petrol engine	1.8L LFX BOSCH MP7.3		Read Fault Code		Y		
XANTIA 2		Engine ECU	Petrol engine	1.8L LFX BOSCH MP7.3		Erase Fault Code		Y		
XANTIA 2		Engine ECU	Petrol engine	1.8L LFX BOSCH MP7.3		Live Data		Y		
XANTIA 2		Engine ECU	Petrol engine	1.8L LFX BOSCH MP7.3		Actuation Text		Y		
XANTIA 2		Engine ECU	Petrol engine	2.0L BBE BOSCH MFS.2		Read Fault Code		Y		
XANTIA 2		Engine ECU	Petrol engine	2.0L BBE BOSCH MFS.2		Erase Fault Code		Y		
XANTIA 2		Engine ECU	Petrol engine	2.0L BBE BOSCH MFS.2		Live Data		Y		
XANTIA 2		Engine ECU	Petrol engine	2.0L BPV BOSCH MFS.2		Read Fault Code		Y		
XANTIA 2		Engine ECU	Petrol engine	2.0L BPV BOSCH MFS.2		Erase Fault Code		Y		
XANTIA 2		Engine ECU	Petrol engine	2.0L BPV BOSCH MFS.2		Live Data		Y		
XANTIA 2		Engine ECU	Petrol engine	2.0L BXA BOSCH MFS.2		Read Fault Code		Y		
XANTIA 2		Engine ECU	Petrol engine	2.0L BXA BOSCH MFS.2		Erase Fault Code		Y		
XANTIA 2		Engine ECU	Petrol engine	3.0L NPZ BOSCH MP7.0		Read ECU Information		Y		
XANTIA 2		Engine ECU	Petrol engine	3.0L NPZ BOSCH MP7.0		Read Fault Code		Y		
XANTIA 2		Engine ECU	Petrol engine	3.0L NPZ BOSCH MP7.0		Erase Fault Code		Y		
XANTIA 2		Engine ECU	Diesel engine	1.9L DMX BOSCH AS3-VF20		Read Fault Code		Y		
XANTIA 2		Engine ECU	Diesel engine	1.9L DMX BOSCH AS3-VF20		Erase Fault Code		Y		
XANTIA 2		Engine ECU	Diesel engine	1.9L DMX BOSCH AS3-VF20		Live Data		Y		
XANTIA 2		Engine ECU	Diesel engine	2.1L P8C LUCAS EPIC		Read ECU Information		Y		
XANTIA 2		Engine ECU	Diesel engine	2.1L P8C LUCAS EPIC		Read Fault Code		Y		
XANTIA 2		Engine ECU	Diesel engine	2.1L P8C LUCAS EPIC		Erase Fault Code		Y		
XANTIA 2		Engine ECU	Diesel engine	2.1L P8C LUCAS EPIC		Live Data		Y		
XANTIA 2		Engine ECU	Diesel engine	2.0L RHZ BOSCH EDC15C2		Read ECU Information		Y		
XANTIA 2		Engine ECU	Diesel engine	2.0L RHZ BOSCH EDC15C2		Live Data		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function reasons	Add (Y/N)	Verification (Y/N)	Remarks
XANTIA 2		Engine ECU	Diesel engine	2.0L RHY BOSCH EDC15C2		Read ECU Information		Y		
XANTIA 2		Engine ECU	Diesel engine	2.0L RHY BOSCH EDC15C2		Live Data		Y		
XANTIA 2		Anti-lock brake system				Read Fault Code		Y		
XANTIA 2		Anti-lock brake system				Erase Fault Code		Y		
XANTIA 2		Anti-lock brake system				Special Function	Bleeding	Y		
XANTIA 2		Airbag				Read Fault Code		Y		
XANTIA 2		Airbag				Erase Fault Code		Y		
XANTIA 2		Air conditioning				Read ECU Information		Y		
XANTIA 2		Air conditioning				Read Fault Code		Y		
XANTIA 2		Air conditioning				Erase Fault Code		Y		
XANTIA 2		Additional heating				Read ECU Information		Y		
XANTIA 2		Additional heating				Read Fault Code		Y		
XANTIA 2		Additional heating				Erase Fault Code		Y		
XANTIA 2		Additional heating				Live Data		Y		
XANTIA 2		Additional heating				Actuation Test		Y		
XANTIA 2		Right hand side airbag				Read Fault Code		Y		
XANTIA 2		Right hand side airbag				Erase Fault Code		Y		
XANTIA 2		Left hand side airbag				Read Fault Code		Y		
XANTIA 2		Left hand side airbag				Erase Fault Code		Y		
XANTIA 2		CPH				Read ECU Information		Y		
XANTIA 2		CPH				Live Data		Y		
XM	Production date after 31 May 1994	Engine ECU	Petrol engine	2.0L RBE BOSCH MFS.2		Read Fault Code		Y		
XM	Production date after 31 May 1994	Engine ECU	Petrol engine	2.0L RBE BOSCH MFS.2		Erase Fault Code		Y		
XM	Production date after 31 May 1994	Engine ECU	Petrol engine	2.0L RHY BOSCH MFS.1.1		Read Fault Code		Y		
XM	Production date after 31 May 1994	Engine ECU	Petrol engine	2.0L RHY BOSCH MFS.1.1		Erase Fault Code		Y		
XM	Production date after 31 May 1994	Engine ECU	Petrol engine	2.0L RHY BOSCH MFS.2		Read Fault Code		Y		
XM	Production date after 31 May 1994	Engine ECU	Petrol engine	2.0L RHY BOSCH MFS.2		Erase Fault Code		Y		
XM	Production date after 31 May 1994	Engine ECU	Petrol engine	2.0L RYZ BOSCH MFS.1		Read Fault Code		Y		
XM	Production date after 31 May 1994	Engine ECU	Petrol engine	2.0L RYZ BOSCH MFS.1		Erase Fault Code		Y		
XM	Production date after 31 May 1994	Engine ECU	Petrol engine	2.0L REX BOSCH MFS.2		Read Fault Code		Y		
XM	Production date after 31 May 1994	Engine ECU	Petrol engine	2.0L REX BOSCH MFS.2		Erase Fault Code		Y		
XM	Production date after 31 May 1994	Engine ECU	Petrol engine	2.0L RBY BOSCH MFS.2		Read Fault Code		Y		
XM	Production date after 31 May 1994	Engine ECU	Petrol engine	2.0L RBY BOSCH MFS.2		Erase Fault Code		Y		
XM	Production date after 31 May 1994	Engine ECU	Petrol engine	3.0L XZ BOSCH MP7.0		Read ECU Information		Y		
XM	Production date after 31 May 1994	Engine ECU	Petrol engine	3.0L XZ BOSCH MP7.0		Read Fault Code		Y		
XM	Production date after 31 May 1994	Engine ECU	Petrol engine	3.0L XZ BOSCH MP7.0		Erase Fault Code		Y		
XM	Production date after 31 May 1994	Engine ECU	Petrol engine	3.0L XZ BOSCH MP7.0		Read Fault Code		Y		
XM	Production date after 31 May 1994	Engine ECU	Diesel engine	1.9L DHR BOSCH AS3-VF20		Read ECU Information		Y		
XM	Production date after 31 May 1994	Engine ECU	Diesel engine	1.9L DHR BOSCH AS3-VF20		Read Fault Code		Y		
XM	Production date after 31 May 1994	Engine ECU	Diesel engine	1.9L DHR BOSCH AS3-VF20		Erase Fault Code		Y		
XM	Production date after 31 May 1994	Engine ECU	Diesel engine	1.9L DHR BOSCH AS3-VF20		Live Data		Y		
XM	Production date after 31 May 1994	Engine ECU	Diesel engine	2.0L RHW BOSCH EDC15C2		Read Fault Code		Y		
XM	Production date after 31 May 1994	Engine ECU	Diesel engine	2.0L RHW BOSCH EDC15C2		Erase Fault Code		Y		
XM	Production date after 31 May 1994	ABS	ABS			Read Fault Code		Y		
XM	Production date after 31 May 1994	ABS	ABS			Erase Fault Code		Y		
XM	Production date after 31 May 1994	ABS	ABS			Special Function	Bleeding	Y		
XM	Production date after 31 May 1994	Coded anti-theft device				Read ECU Information		Y		
XM	Production date after 31 May 1994	Coded anti-theft device				Read Fault Code		Y		
XM	Production date after 31 May 1994	Coded anti-theft device				Erase Fault Code		Y		
XM	Production date after 31 May 1994	Coded anti-theft device				Live Data		Y		
XM	Production date after 31 May 1994	Suspension				Read ECU Information		Y		
XM	Production date after 31 May 1994	Suspension				Live Data		Y		
XM	Production date after 31 May 1994	Left hand side airbag				Read Fault Code		Y		
XM	Production date after 31 May 1994	Left hand side airbag				Erase Fault Code		Y		
XM	Production date after 31 May 1994	Right hand side airbag				Read Fault Code		Y		
XM	Production date after 31 May 1994	Right hand side airbag				Erase Fault Code		Y		
XM mix		Engine ECU	Petrol engine	2.0L RBE BOSCH MFS.2		Read Fault Code		Y		
XM mix		Engine ECU	Petrol engine	2.0L RBE BOSCH MFS.2		Erase Fault Code		Y		
XM mix		Engine ECU	Petrol engine	2.0L RHY BOSCH MFS.1.1		Read Fault Code		Y		
XM mix		Engine ECU	Petrol engine	2.0L RHY BOSCH MFS.1.1		Erase Fault Code		Y		
XM mix		Engine ECU	Petrol engine	2.0L RHY BOSCH MFS.2		Read Fault Code		Y		
XM mix		Engine ECU	Petrol engine	2.0L RHY BOSCH MFS.2		Erase Fault Code		Y		
XM mix		Engine ECU	Petrol engine	2.0L RYZ BOSCH MFS.1		Read Fault Code		Y		
XM mix		Engine ECU	Petrol engine	2.0L RYZ BOSCH MFS.1		Erase Fault Code		Y		
XM mix		Engine ECU	Petrol engine	2.0L REX BOSCH MFS.2		Read Fault Code		Y		
XM mix		Engine ECU	Petrol engine	2.0L REX BOSCH MFS.2		Erase Fault Code		Y		
XM mix		Engine ECU	Petrol engine	2.0L RBY BOSCH MFS.2		Read Fault Code		Y		
XM mix		Engine ECU	Petrol engine	2.0L RBY BOSCH MFS.2		Erase Fault Code		Y		
XM mix		Engine ECU	Petrol engine	3.0L XZ BOSCH MP7.0		Read ECU Information		Y		
XM mix		Engine ECU	Petrol engine	3.0L XZ BOSCH MP7.0		Read Fault Code		Y		
XM mix		Engine ECU	Petrol engine	3.0L XZ BOSCH MP7.0		Erase Fault Code		Y		
XM mix		Engine ECU	Diesel engine	1.9L DHR BOSCH AS3-VF20		Read ECU Information		Y		
XM mix		Engine ECU	Diesel engine	1.9L DHR BOSCH AS3-VF20		Read Fault Code		Y		
XM mix		Engine ECU	Diesel engine	1.9L DHR BOSCH AS3-VF20		Erase Fault Code		Y		
XM mix		Engine ECU	Diesel engine	1.9L DHR BOSCH AS3-VF20		Live Data		Y		
XM mix		Engine ECU	Diesel engine	2.0L RHW BOSCH EDC15C2		Read Fault Code		Y		
XM mix		Engine ECU	Diesel engine	2.0L RHW BOSCH EDC15C2		Erase Fault Code		Y		
XM mix		ABS	ABS			Read Fault Code		Y		
XM mix		ABS	ABS			Erase Fault Code		Y		
XM mix		ABS	ABS			Special Function	Bleeding	Y		
XM mix		Coded anti-theft device				Read ECU Information		Y		
XM mix		Coded anti-theft device				Read Fault Code		Y		
XM mix		Coded anti-theft device				Erase Fault Code		Y		
XM mix		Coded anti-theft device				Live Data		Y		
XM mix		Suspension				Read ECU Information		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
XM mix		Suspension				Live Data		Y		
XM mix		Left hand side airbag				Read Fault Code		Y		
XM mix		Left hand side airbag				Erase Fault Code		Y		
XM mix		Right hand side airbag				Read Fault Code		Y		
XM mix		Right hand side airbag				Erase Fault Code		Y		
Fokang		Gearbox ECU	Auto gearbox AL4.1			Read ECU Information		Y		
Fokang		Gearbox ECU	Auto gearbox AL4.1			Read Fault Code		Y		
Fokang		Gearbox ECU	Auto gearbox AL4.1			Erase Fault Code		Y		
Fokang		Gearbox ECU	Auto gearbox AL4.1			Live Data		Y		
Fokang		Gearbox ECU	Auto gearbox AL4.1			Actuation Test		Y		
Fokang		Gearbox ECU	Auto gearbox AL4.1			Special Function	Initialisation of auto-adaptation	Y		
Fokang		Gearbox ECU	Auto gearbox AL4.2			Read ECU Information		Y		
Fokang		Gearbox ECU	Auto gearbox AL4.2			Read Fault Code		Y		
Fokang		Gearbox ECU	Auto gearbox AL4.2			Erase Fault Code		Y		
Fokang		Gearbox ECU	Auto gearbox AL4.2			Live Data		Y		
Fokang		Gearbox ECU	Auto gearbox AL4.2			Actuation Test		Y		
Fokang		Gearbox ECU	Auto gearbox AL4.2			Special Function	Pedal initialisation	Y		
Fokang		Gearbox ECU	Auto gearbox AL4.2			Special Function	Initialisation of auto-adaptation	Y		
Fokang		Gearbox ECU	Auto gearbox AL4.2			Special Function	Oil wear counter	Y		
Fokang		Gearbox ECU	Auto gearbox AL4 TA2000			Read ECU Information		Y		
Fokang		Gearbox ECU	Auto gearbox AL4 TA2000			Read Fault Code		Y		
Fokang		Gearbox ECU	Auto gearbox AL4 TA2000			Erase Fault Code		Y		
Fokang		Gearbox ECU	Auto gearbox AL4 TA2000			Live Data		Y		
Fokang		Gearbox ECU	Auto gearbox AL4 TA2000			Actuation Test		Y		
Fokang		Gearbox ECU	Auto gearbox AL4 TA2000			Special Function	Pedal initialisation	Y		
Fokang		Gearbox ECU	Auto gearbox AL4 TA2000			Special Function	Initialisation of auto-adaptation	Y		
Fokang		Gearbox ECU	Auto gearbox AL4 TA2000			Special Function	Oil wear counter	Y		
Fokang		Gearbox ECU	Auto gearbox AL4 TH96			Read ECU Information		Y		
Fokang		Gearbox ECU	Auto gearbox AL4 TH96			Read Fault Code		Y		
Fokang		Gearbox ECU	Auto gearbox AL4 TH96			Erase Fault Code		Y		
Fokang		Gearbox ECU	Auto gearbox AL4 TH96			Live Data		Y		
Fokang		Anti-lock brake system	ABS Bosch 5.3			Read ECU Information		Y		
Fokang		Anti-lock brake system	ABS Bosch 5.3			Read Fault Code		Y		
Fokang		Anti-lock brake system	ABS Bosch 5.3			Erase Fault Code		Y		
Fokang		Anti-lock brake system	ABS Bosch 5.3			Live Data		Y		
Fokang		Anti-lock brake system	ABS Bosch 5.3			Special Function	Bleeding	Y		
Fokang		Anti-lock brake system	ABS 8.1 BOSCH			Read ECU Information		Y		
Fokang		Anti-lock brake system	ABS 8.1 BOSCH			Read Fault Code		Y		
Fokang		Anti-lock brake system	ABS 8.1 BOSCH			Erase Fault Code		Y		
Fokang		Anti-lock brake system	ABS 8.1 BOSCH			Live Data		Y		
Fokang		Anti-lock brake system	ABS 8.1 BOSCH			Actuation Test		Y		
Fokang		Anti-lock brake system	ABS 8.1 BOSCH			Special Function	Bleeding	Y		
Fokang		Transponder				Read ECU Information		Y		
Fokang		Transponder				Read Fault Code		Y		
Fokang		Transponder				Erase Fault Code		Y		
Fokang		Transponder				Live Data		Y		
Fokang 988		Gearbox ECU	Auto gearbox AL4.1			Read ECU Information		Y		
Fokang 988		Gearbox ECU	Auto gearbox AL4.1			Read Fault Code		Y		
Fokang 988		Gearbox ECU	Auto gearbox AL4.1			Erase Fault Code		Y		
Fokang 988		Gearbox ECU	Auto gearbox AL4.1			Live Data		Y		
Fokang 988		Gearbox ECU	Auto gearbox AL4.1			Actuation Test		Y		
Fokang 988		Gearbox ECU	Auto gearbox AL4.1			Special Function	Initialisation of auto-adaptation	Y		
Fokang 988		Gearbox ECU	Auto gearbox AL4.2			Read ECU Information		Y		
Fokang 988		Gearbox ECU	Auto gearbox AL4.2			Read Fault Code		Y		
Fokang 988		Gearbox ECU	Auto gearbox AL4.2			Erase Fault Code		Y		
Fokang 988		Gearbox ECU	Auto gearbox AL4.2			Live Data		Y		
Fokang 988		Gearbox ECU	Auto gearbox AL4.2			Actuation Test		Y		
Fokang 988		Gearbox ECU	Auto gearbox AL4.2			Special Function	Pedal initialisation	Y		
Fokang 988		Gearbox ECU	Auto gearbox AL4.2			Special Function	Initialisation of auto-adaptation	Y		
Fokang 988		Gearbox ECU	Auto gearbox AL4.2			Special Function	Oil wear counter	Y		
Fokang 988		Gearbox ECU	Auto gearbox AL4 TA2000			Read ECU Information		Y		
Fokang 988		Gearbox ECU	Auto gearbox AL4 TA2000			Read Fault Code		Y		
Fokang 988		Gearbox ECU	Auto gearbox AL4 TA2000			Erase Fault Code		Y		
Fokang 988		Gearbox ECU	Auto gearbox AL4 TA2000			Live Data		Y		
Fokang 988		Gearbox ECU	Auto gearbox AL4 TA2000			Actuation Test		Y		
Fokang 988		Gearbox ECU	Auto gearbox AL4 TA2000			Special Function	Pedal initialisation	Y		
Fokang 988		Gearbox ECU	Auto gearbox AL4 TA2000			Special Function	Initialisation of auto-adaptation	Y		
Fokang 988		Gearbox ECU	Auto gearbox AL4 TA2000			Special Function	Oil wear counter	Y		
Fokang 988		Gearbox ECU	Auto gearbox AL4 TH96			Read ECU Information		Y		
Fokang 988		Gearbox ECU	Auto gearbox AL4 TH96			Read Fault Code		Y		
Fokang 988		Gearbox ECU	Auto gearbox AL4 TH96			Erase Fault Code		Y		
Fokang 988		Gearbox ECU	Auto gearbox AL4 TH96			Live Data		Y		
Fokang 988		Anti-lock brake system	ABS Bosch 5.3			Read ECU Information		Y		
Fokang 988		Anti-lock brake system	ABS Bosch 5.3			Read Fault Code		Y		
Fokang 988		Anti-lock brake system	ABS Bosch 5.3			Erase Fault Code		Y		
Fokang 988		Anti-lock brake system	ABS Bosch 5.3			Live Data		Y		
Fokang 988		Anti-lock brake system	ABS Bosch 5.3			Special Function	Bleeding	Y		
Fokang 988		Anti-lock brake system	ABS 8.1 BOSCH			Read ECU Information		Y		
Fokang 988		Anti-lock brake system	ABS 8.1 BOSCH			Read Fault Code		Y		
Fokang 988		Anti-lock brake system	ABS 8.1 BOSCH			Erase Fault Code		Y		
Fokang 988		Anti-lock brake system	ABS 8.1 BOSCH			Live Data		Y		
Fokang 988		Anti-lock brake system	ABS 8.1 BOSCH			Actuation Test		Y		
Fokang 988		Anti-lock brake system	ABS 8.1 BOSCH			Special Function	Bleeding	Y		
Fokang 988		Transponder				Read ECU Information		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Models	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function reasons	Add (Y/N)	Verification (Y/N)	Remarks
Fukang 988		Transponder				Read Fault Code		Y		
Fukang 988		Transponder				Erase Fault Code		Y		
Fukang 988		Transponder				Live Data		Y		
ELYSEE (2008)		Gearbox ECU	Auto gearbox AL4,1			Read ECU Information		Y		
ELYSEE (2008)		Gearbox ECU	Auto gearbox AL4,1			Read Fault Code		Y		
ELYSEE (2008)		Gearbox ECU	Auto gearbox AL4,1			Erase Fault Code		Y		
ELYSEE (2008)		Gearbox ECU	Auto gearbox AL4,1			Live Data		Y		
ELYSEE (2008)		Gearbox ECU	Auto gearbox AL4,1			Actuation Test		Y		
ELYSEE (2008)		Gearbox ECU	Auto gearbox AL4,1			Special Function	Initialisation of auto-adaptation	Y		
ELYSEE (2008)		Gearbox ECU	Auto gearbox AL4, T42000(24)			Read ECU Information		Y		
ELYSEE (2008)		Gearbox ECU	Auto gearbox AL4, T42000(24)			Read Fault Code		Y		
ELYSEE (2008)		Gearbox ECU	Auto gearbox AL4, T42000(24)			Erase Fault Code		Y		
ELYSEE (2008)		Gearbox ECU	Auto gearbox AL4, T42000(24)			Live Data		Y		
ELYSEE (2008)		Gearbox ECU	Auto gearbox AL4, T42000(24)			Actuation Test		Y		
ELYSEE (2008)		Gearbox ECU	Auto gearbox AL4, T42000(24)			Special Function	Pedal initialisation	Y		
ELYSEE (2008)		Gearbox ECU	Auto gearbox AL4, T42000(24)			Special Function	Initialisation of auto-adaptation	Y		
ELYSEE (2008)		Gearbox ECU	Auto gearbox AL4, T42000(24)			Special Function	Oil wear counter	Y		
ELYSEE (2008)		Gearbox ECU	Auto gearbox AL4, T42000(44)			Read ECU Information		Y		
ELYSEE (2008)		Gearbox ECU	Auto gearbox AL4, T42000(44)			Read Fault Code		Y		
ELYSEE (2008)		Gearbox ECU	Auto gearbox AL4, T42000(44)			Erase Fault Code		Y		
ELYSEE (2008)		Gearbox ECU	Auto gearbox AL4, T42000(44)			Live Data		Y		
ELYSEE (2008)		Gearbox ECU	Auto gearbox AL4, T42000(44)			Actuation Test		Y		
ELYSEE (2008)		Gearbox ECU	Auto gearbox AL4, T42000(44)			Special Function	Pedal initialisation	Y		
ELYSEE (2008)		Gearbox ECU	Auto gearbox AL4, T42000(44)			Special Function	Initialisation of auto-adaptation	Y		
ELYSEE (2008)		Gearbox ECU	Auto gearbox AL4, T42000(44)			Special Function	Oil wear counter	Y		
ELYSEE (2008)		Gearbox ECU	Auto gearbox AL4, T436			Read ECU Information		Y		
ELYSEE (2008)		Gearbox ECU	Auto gearbox AL4, T436			Read Fault Code		Y		
ELYSEE (2008)		Gearbox ECU	Auto gearbox AL4, T436			Erase Fault Code		Y		
ELYSEE (2008)		Gearbox ECU	Auto gearbox AL4, T436			Live Data		Y		
ELYSEE (2008)		Anti-lock brake system				Read ECU Information		Y		
ELYSEE (2008)		Anti-lock brake system				Read Fault Code		Y		
ELYSEE (2008)		Anti-lock brake system				Erase Fault Code		Y		
ELYSEE (2008)		Anti-lock brake system				Live Data		Y		
ELYSEE (2008)		Anti-lock brake system				Special Function	Bleeding	Y		
ELYSEE (2008)		Airbag	SAC SIEMENS 1			Read ECU Information		Y		
ELYSEE (2008)		Airbag	SAC SIEMENS 1			Read Fault Code		Y		
ELYSEE (2008)		Airbag	SAC SIEMENS 1			Erase Fault Code		Y		
ELYSEE (2008)		Airbag	SAC SIEMENS 1			Live Data		Y		
ELYSEE (2008)		Airbag	Airbag			Read ECU Information		Y		
ELYSEE (2008)		Airbag	Airbag			Read Fault Code		Y		
ELYSEE (2008)		Airbag	Airbag			Erase Fault Code		Y		
ELYSEE (2008)		Transponder				Read ECU Information		Y		
ELYSEE (2008)		Transponder				Read Fault Code		Y		
ELYSEE (2008)		Transponder				Erase Fault Code		Y		
ELYSEE (2008)		Transponder				Live Data		Y		
ELYSEE (2008)		Remote control by HF chip				Read ECU Information		Y		
C-ELYSEE (043)		Built-in Systems Interface				Read ECU Information		Y		
C-ELYSEE (043)		Built-in Systems Interface				Read Fault Code		Y		
C-ELYSEE (043)		Built-in Systems Interface				Erase Fault Code		Y		
C-ELYSEE (043)		Built-in Systems Interface				Live Data		Y		
C-ELYSEE (043)		Built-in Systems Interface				Actuation Test		Y		
C-ELYSEE (043)		Built-in Systems Interface				Special Function	Maintenance-BSI operating mode	Y		
C-ELYSEE (043)		Built-in Systems Interface				Special Function	Learning	Y		
C-ELYSEE (043)		Engine management ECU	Petrol	ME745_ECS		Read ECU Information		Y		
C-ELYSEE (043)		Engine management ECU	Petrol	ME745_ECS		Read Fault Code		Y		
C-ELYSEE (043)		Engine management ECU	Petrol	ME745_ECS		Erase Fault Code		Y		
C-ELYSEE (043)		Engine management ECU	Petrol	ME745_ECS		Live Data		Y		
C-ELYSEE (043)		Engine management ECU	Petrol	ME745_ECS		Actuation Test		Y		
C-ELYSEE (043)		Engine management ECU	Petrol	ME745_ECS		Special Function	Configuration	Y		
C-ELYSEE (043)		Engine management ECU	Petrol	ME745_ECS		Special Function	Pack Repair	Y		
C-ELYSEE (043)		Engine management ECU	Petrol	V46_S2		Read ECU Information		Y		
C-ELYSEE (043)		Engine management ECU	Petrol	V46_S2		Read Fault Code		Y		
C-ELYSEE (043)		Engine management ECU	Petrol	V46_S2		Erase Fault Code		Y		
C-ELYSEE (043)		Engine management ECU	Petrol	V46_S2		Live Data		Y		
C-ELYSEE (043)		Engine management ECU	Petrol	V46_S2		Actuation Test		Y		
C-ELYSEE (043)		Engine management ECU	Petrol	V46_S2		Special Function	Initializing the autoadpives	Y		
C-ELYSEE (043)		Engine management ECU	Petrol	V46_S2		Special Function	Replacement parts	Y		
C-ELYSEE (043)		Engine management ECU	Petrol	V46_21		Read ECU Information		Y		
C-ELYSEE (043)		Engine management ECU	Petrol	V46_21		Read Fault Code		Y		
C-ELYSEE (043)		Engine management ECU	Petrol	V46_21		Erase Fault Code		Y		
C-ELYSEE (043)		Engine management ECU	Petrol	V46_21		Live Data		Y		
C-ELYSEE (043)		Engine management ECU	Petrol	V46_21		Actuation Test		Y		
C-ELYSEE (043)		Engine management ECU	Petrol	V46_21		Special Function	Configuration	Y		
C-ELYSEE (043)		Engine management ECU	Petrol	V46_21		Special Function	Pack Repair	Y		
C-ELYSEE (043)		Engine management ECU	Petrol	V46		Read ECU Information		Y		
C-ELYSEE (043)		Engine management ECU	Petrol	V46		Read Fault Code		Y		
C-ELYSEE (043)		Engine management ECU	Petrol	V46		Erase Fault Code		Y		
C-ELYSEE (043)		Engine management ECU	Petrol	V46		Live Data		Y		
C-ELYSEE (043)		Engine management ECU	Petrol	V46		Actuation Test		Y		
C-ELYSEE (043)		Engine management ECU	Petrol	V46		Special Function	Pack Repair	Y		
C-ELYSEE (043)		Engine management ECU	Diesel	EC17C10_BR2	9HP-DV8DTE9-92 CV	Read ECU Information		Y		
C-ELYSEE (043)		Engine management ECU	Diesel	EC17C10_BR2	9HP-DV8DTE9-92 CV	Read Fault Code		Y		
C-ELYSEE (043)		Engine management ECU	Diesel	EC17C10_BR2	9HP-DV8DTE9-92 CV	Erase Fault Code		Y		
C-ELYSEE (043)		Engine management ECU	Diesel	EC17C10_BR2	9HP-DV8DTE9-92 CV	Live Data		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function reasons	Add (Y/N)	Verification (Y/N)	Remarks
C-ELISEE (M43)		Engine management ECU	Diesel	ED17C10_BB2	9HP-DV8DTE2-92 CV	Actuation Test		Y		
C-ELISEE (M43)		Engine management ECU	Diesel	ED17C10_BB2	9HP-DV8DTE2-92 CV	Special Function	Configuration	Y		
C-ELISEE (M43)		Engine management ECU	Diesel	ED17C10_BB2	9HP-DV8DTE2-92 CV	Special Function	Pack Repair	Y		
C-ELISEE (M43)		Engine management ECU	Diesel	ED17C10_BB2	9UJ-DV8DTE9M-90 CV	Read ECU Information		Y		
C-ELISEE (M43)		Engine management ECU	Diesel	ED17C10_BB2	9UJ-DV8DTE9M-90 CV	Read Fault Code		Y		
C-ELISEE (M43)		Engine management ECU	Diesel	ED17C10_BB2	9UJ-DV8DTE9M-90 CV	Erase Fault Code		Y		
C-ELISEE (M43)		Engine management ECU	Diesel	ED17C10_BB2	9UJ-DV8DTE9M-90 CV	Live Data		Y		
C-ELISEE (M43)		Engine management ECU	Diesel	ED17C10_BB2	9UJ-DV8DTE9M-90 CV	Actuation Test		Y		
C-ELISEE (M43)		Engine management ECU	Diesel	ED17C10_BB2	9UJ-DV8DTE9M-90 CV	Special Function	Configuration	Y		
C-ELISEE (M43)		Engine management ECU	Diesel	ED17C10_BB2	9UJ-DV8DTE9M-90 CV	Special Function	Pack Repair	Y		
C-ELISEE (M43)		Engine management ECU	Diesel	ED17C30		Read ECU Information		Y		
C-ELISEE (M43)		Engine management ECU	Diesel	ED17C30		Read Fault Code		Y		
C-ELISEE (M43)		Engine management ECU	Diesel	ED17C30		Erase Fault Code		Y		
C-ELISEE (M43)		Engine management ECU	Diesel	ED17C30		Live Data		Y		
C-ELISEE (M43)		Engine management ECU	Diesel	ED17C30		Actuation Test		Y		
C-ELISEE (M43)		Engine management ECU	Diesel	ED17C30		Special Function	Pack Repair	Y		
C-ELISEE (M43)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ABS MK100			Read ECU Information		Y		
C-ELISEE (M43)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ABS MK100			Read Fault Code		Y		
C-ELISEE (M43)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ABS MK100			Erase Fault Code		Y		
C-ELISEE (M43)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ABS MK100			Live Data		Y		
C-ELISEE (M43)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ABS MK100			Actuation Test		Y		
C-ELISEE (M43)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ABS MK100			Special Function		Y		
C-ELISEE (M43)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP MK100			Read ECU Information		Y		
C-ELISEE (M43)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP MK100			Read Fault Code		Y		
C-ELISEE (M43)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP MK100			Erase Fault Code		Y		
C-ELISEE (M43)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP MK100			Live Data		Y		
C-ELISEE (M43)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP MK100			Actuation Test		Y		
C-ELISEE (M43)		Anti-lock Braking System(ABS) or Electronic Stability Program(ESP)	ESP MK100			Special Function		Y		
C-ELISEE (M43)		Automatic gearbox or controlled manual gearbox	BVA_A18			Read ECU Information		Y		
C-ELISEE (M43)		Automatic gearbox or controlled manual gearbox	BVA_A18			Read Fault Code		Y		
C-ELISEE (M43)		Automatic gearbox or controlled manual gearbox	BVA_A18			Erase Fault Code		Y		
C-ELISEE (M43)		Automatic gearbox or controlled manual gearbox	BVA_A18			Live Data		Y		
C-ELISEE (M43)		Automatic gearbox or controlled manual gearbox	BVA_A18			Actuation Test		Y		
C-ELISEE (M43)		Automatic gearbox or controlled manual gearbox	BVA_A18			Special Function	Configuration	Y		
C-ELISEE (M43)		Automatic gearbox or controlled manual gearbox	BVA_A18			Special Function	Pack Repair	Y		
C-ELISEE (M43)		Automatic gearbox or controlled manual gearbox	MUPS_IDS			Read ECU Information		Y		
C-ELISEE (M43)		Automatic gearbox or controlled manual gearbox	MUPS_IDS			Read Fault Code		Y		
C-ELISEE (M43)		Automatic gearbox or controlled manual gearbox	MUPS_IDS			Erase Fault Code		Y		
C-ELISEE (M43)		Automatic gearbox or controlled manual gearbox	MUPS_IDS			Live Data		Y		
C-ELISEE (M43)		Automatic gearbox or controlled manual gearbox	MUPS_IDS			Actuation Test		Y		
C-ELISEE (M43)		Automatic gearbox or controlled manual gearbox	MUPS_IDS			Special Function	Setting of the actuator	Y		
C-ELISEE (M43)		Automatic gearbox or controlled manual gearbox	MUPS_IDS			Special Function	Counters	Y		
C-ELISEE (M43)		Automatic gearbox or controlled manual gearbox	MUPS_IDS			Special Function	Programming	Y		
C-ELISEE (M43)		Automatic gearbox or controlled manual gearbox	MUPS_IDS			Special Function	Replacement parts	Y		
C-ELISEE (M43)		Automatic gearbox or controlled manual gearbox	BVA_A8M_A16_IDS			Read ECU Information		Y		
C-ELISEE (M43)		Automatic gearbox or controlled manual gearbox	BVA_A8M_A16_IDS			Read Fault Code		Y		
C-ELISEE (M43)		Automatic gearbox or controlled manual gearbox	BVA_A8M_A16_IDS			Erase Fault Code		Y		
C-ELISEE (M43)		Automatic gearbox or controlled manual gearbox	BVA_A8M_A16_IDS			Live Data		Y		
C-ELISEE (M43)		Automatic gearbox or controlled manual gearbox	BVA_A8M_A16_IDS			Actuation Test		Y		
C-ELISEE (M43)		Automatic gearbox or controlled manual gearbox	BVA_A8M_A16_IDS			Special Function	Pack Repair	Y		
C-ELISEE (M43)		Air bags and pre-tensioners control unit				Read ECU Information		Y		
C-ELISEE (M43)		Air bags and pre-tensioners control unit				Read Fault Code		Y		
C-ELISEE (M43)		Air bags and pre-tensioners control unit				Erase Fault Code		Y		
C-ELISEE (M43)		Air bags and pre-tensioners control unit				Live Data		Y		
C-ELISEE (M43)		Air bags and pre-tensioners control unit				Special Function	Pack Repair	Y		
C-ELISEE (M43)		Multifunction screen	EMF_A_IDS			Read ECU Information		Y		
C-ELISEE (M43)		Multifunction screen	EMF_A_IDS			Read Fault Code		Y		
C-ELISEE (M43)		Multifunction screen	EMF_A_IDS			Erase Fault Code		Y		
C-ELISEE (M43)		Multifunction screen	EMF_A_IDS			Actuation Test		Y		
C-ELISEE (M43)		Multifunction screen	EMF_A_IDS			Special Function	Configuration	Y		
C-ELISEE (M43)		Multifunction screen	EMF_A_IDS			Special Function	Pack Repair	Y		
C-ELISEE (M43)		Multifunction screen	EMF_C_IDS			Read ECU Information		Y		
C-ELISEE (M43)		Multifunction screen	EMF_C_IDS			Read Fault Code		Y		
C-ELISEE (M43)		Multifunction screen	EMF_C_IDS			Erase Fault Code		Y		
C-ELISEE (M43)		Multifunction screen	EMF_C_IDS			Actuation Test		Y		
C-ELISEE (M43)		Multifunction screen	EMF_C_IDS			Special Function	Configuration	Y		
C-ELISEE (M43)		Electronic key reader				Read ECU Information		Y		
C-ELISEE (M43)		Electronic key reader				Read Fault Code		Y		
C-ELISEE (M43)		Electronic key reader				Erase Fault Code		Y		
C-ELISEE (M43)		Electronic key reader				Live Data		Y		
C-ELISEE (M43)		Electric steering lock				Read ECU Information		Y		
C-ELISEE (M43)		Electric steering lock				Read Fault Code		Y		
C-ELISEE (M43)		Electric steering lock				Erase Fault Code		Y		
C-ELISEE (M43)		Electric steering lock				Live Data		Y		
C-ELISEE (M43)		Electric steering lock				Actuation Test		Y		
C-ELISEE (M43)		Controls under the steering wheel				Read ECU Information		Y		
C-ELISEE (M43)		Controls under the steering wheel				Read Fault Code		Y		
C-ELISEE (M43)		Controls under the steering wheel				Erase Fault Code		Y		
C-ELISEE (M43)		Controls under the steering wheel				Live Data		Y		
C-ELISEE (M43)		Controls under the steering wheel				Actuation Test		Y		
C-ELISEE (M43)		Power steering	DAE			Read ECU Information		Y		
C-ELISEE (M43)		Power steering	DAE			Read Fault Code		Y		
C-ELISEE (M43)		Power steering	DAE			Erase Fault Code		Y		
C-ELISEE (M43)		Power steering	DAE			Live Data		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
C-ELYSEE (M43)		Parking assistance				Read ECU Information		Y		
C-ELYSEE (M43)		Parking assistance				Read Fault Code		Y		
C-ELYSEE (M43)		Parking assistance				Erase Fault Code		Y		
C-ELYSEE (M43)		Parking assistance				Live Data		Y		
C-ELYSEE (M43)		Parking assistance				Actuation Test		Y		
C-ELYSEE (M43)		Parking assistance				Special Function	Configuration	Y		
C-ELYSEE (M43)		Parking assistance				Special Function	Pack Repair	Y		
C-ELYSEE (M43)		Hands-free control unit				Read ECU Information		Y		
C-ELYSEE (M43)		Hands-free control unit				Read Fault Code		Y		
C-ELYSEE (M43)		Hands-free control unit				Erase Fault Code		Y		
C-ELYSEE (M43)		Hands-free control unit				Live Data		Y		
C-ELYSEE (M43)		Hands-free control unit				Special Function	Configuration	Y		
C-ELYSEE (M43)		Hands-free control unit				Special Function	Pack Repair	Y		
C-ELYSEE (M43)		Multiplexed control panel				Read ECU Information		Y		
C-ELYSEE (M43)		Multiplexed control panel				Read Fault Code		Y		
C-ELYSEE (M43)		Multiplexed control panel				Erase Fault Code		Y		
C-ELYSEE (M43)		Multiplexed control panel				Live Data		Y		
C-ELYSEE (M43)		Multiplexed control panel				Actuation Test		Y		
C-ELYSEE (M43)		Radio	RDE_CN			Read ECU Information		Y		
C-ELYSEE (M43)		Radio	RDE_CN			Read Fault Code		Y		
C-ELYSEE (M43)		Radio	RDE_CN			Erase Fault Code		Y		
C-ELYSEE (M43)		Radio	RDE_CN			Live Data		Y		
C-ELYSEE (M43)		Radio	RDE_CN			Actuation Test		Y		
C-ELYSEE (M43)		Radio	RDE_CN			Special Function	Configuration	Y		
C-ELYSEE (M43)		Radio	RDE			Read ECU Information		Y		
C-ELYSEE (M43)		Radio	RDE			Read Fault Code		Y		
C-ELYSEE (M43)		Radio	RDE			Erase Fault Code		Y		
C-ELYSEE (M43)		Radio	RDE			Live Data		Y		
C-ELYSEE (M43)		Radio	RDE			Actuation Test		Y		
C-ELYSEE (M43)		Radio	RDE			Special Function	Configuration	Y		
C-ELYSEE (M43)		Radio	RD45			Read ECU Information		Y		
C-ELYSEE (M43)		Radio	RD45			Read Fault Code		Y		
C-ELYSEE (M43)		Radio	RD45			Erase Fault Code		Y		
C-ELYSEE (M43)		Radio	RD45			Live Data		Y		
C-ELYSEE (M43)		Radio	RD45			Actuation Test		Y		
C-ELYSEE (M43)		Radio	RD45			Special Function	Configuration	Y		
C-ELYSEE (M43)		Radio	RD45			Special Function	Pack Repair	Y		
C-ELYSEE (M43)		Telematic unit (OTA) or audio-navigation	BCC			Read ECU Information		Y		
C-ELYSEE (M43)		Telematic unit (OTA) or audio-navigation	BCC			Read Fault Code		Y		
C-ELYSEE (M43)		Telematic unit (OTA) or audio-navigation	BCC			Erase Fault Code		Y		
C-ELYSEE (M43)		Telematic unit (OTA) or audio-navigation	BCC			Live Data		Y		
C-ELYSEE (M43)		Telematic unit (OTA) or audio-navigation	BCC			Actuation Test		Y		
C-ELYSEE (M43)		Telematic unit (OTA) or audio-navigation	NAC			Read ECU Information		Y		
C-ELYSEE (M43)		Telematic unit (OTA) or audio-navigation	NAC			Read Fault Code		Y		
C-ELYSEE (M43)		Telematic unit (OTA) or audio-navigation	NAC			Erase Fault Code		Y		
C-ELYSEE (M43)		Telematic unit (OTA) or audio-navigation	NAC			Live Data		Y		
C-ELYSEE (M43)		Telematic unit (OTA) or audio-navigation	NAC			Actuation Test		Y		
C-ELYSEE (M43)		Control on the steering wheel / integral controls steering wheel				Read ECU Information		Y		
C-ELYSEE (M43)		Control on the steering wheel / integral controls steering wheel				Read Fault Code		Y		
C-ELYSEE (M43)		Control on the steering wheel / integral controls steering wheel				Erase Fault Code		Y		
C-ELYSEE (M43)		Control on the steering wheel / integral controls steering wheel				Live Data		Y		
C-ELYSEE (M43)		Trailer relay unit				Read ECU Information		Y		
C-ELYSEE (M43)		Trailer relay unit				Read Fault Code		Y		
C-ELYSEE (M43)		Trailer relay unit				Erase Fault Code		Y		
C-ELYSEE (M43)		Trailer relay unit				Live Data		Y		
C-ELYSEE (M43)		Intrusion alarm siren				Read ECU Information		Y		
C-ELYSEE (M43)		Intrusion alarm siren				Read Fault Code		Y		
C-ELYSEE (M43)		Intrusion alarm siren				Erase Fault Code		Y		
C-ELYSEE (M43)		Intrusion alarm siren				Live Data		Y		
C-ELYSEE (M43)		Intrusion alarm siren				Actuation Test		Y		
C-ELYSEE (M43)		Intrusion alarm siren				Special Function	Configuration	Y		
C-ELYSEE (M43)		Diesel additive pump	PADEGO			Read ECU Information		Y		
C-ELYSEE (M43)		Diesel additive pump	PADEGO			Read Fault Code		Y		
C-ELYSEE (M43)		Diesel additive pump	PADEGO			Erase Fault Code		Y		
C-ELYSEE (M43)		Diesel additive pump	PADEGO			Live Data		Y		
C-ELYSEE (M43)		Diesel additive pump	PADEGO			Actuation Test		Y		
C-ELYSEE (M43)		Diesel additive pump	PADEGO			Special Function	Configuration	Y		
C-ELYSEE (M43)		Diesel additive pump	PADEGO			Special Function	Pack Repair	Y		
C-ELYSEE (M43)		Diesel additive pump	PADEGO_TI_E6			Read ECU Information		Y		
C-ELYSEE (M43)		Diesel additive pump	PADEGO_TI_E6			Read Fault Code		Y		
C-ELYSEE (M43)		Diesel additive pump	PADEGO_TI_E6			Erase Fault Code		Y		
C-ELYSEE (M43)		Diesel additive pump	PADEGO_TI_E6			Live Data		Y		
C-ELYSEE (M43)		Diesel additive pump	PADEGO_TI_E6			Special Function	Configuration	Y		
C-ELYSEE (M43)		Voltage retaining device	DMTR			Read ECU Information		Y		
C-ELYSEE (M43)		Voltage retaining device	DMTR			Read Fault Code		Y		
C-ELYSEE (M43)		Voltage retaining device	DMTR			Erase Fault Code		Y		
C-ELYSEE (M43)		Voltage retaining device	DMTR_DTC3B			Read ECU Information		Y		
C-ELYSEE (M43)		Voltage retaining device	DMTR_DTC3B			Read Fault Code		Y		
C-ELYSEE (M43)		Voltage retaining device	DMTR_DTC3B			Erase Fault Code		Y		
C-ELYSEE (M43)		Voltage retaining device	DMTR_DTC3B			Live Data		Y		
C-ELYSEE 4		Engine ECU	Petrol engine	1.6L NPV BOSCH ME744		Read ECU Information		Y		
C-ELYSEE 4		Engine ECU	Petrol engine	1.6L NPV BOSCH ME744		Read Fault Code		Y		
C-ELYSEE 4		Engine ECU	Petrol engine	1.6L NPV BOSCH ME744		Erase Fault Code		Y		
C-ELYSEE 4		Engine ECU	Petrol engine	1.6L NPV BOSCH ME744		Live Data		Y		
C-ELYSEE 4		Engine ECU	Petrol engine	1.6L NPV BOSCH ME744		Actuation Test		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Models	Year classification	System	Subsystem or system type (YES stands for Citro. NO stands for other ones)	Subsystem (YES stands for Citro. NO stands for other ones)	Subsystem or system type	Function type	Special function subname	Add (Y/N)	Verification (Y/N)	Remarks
C-ELYSEE 4		Engine ECU	Petrol engine	1.6L NPU BOSCH ME744		Special Function	Initialisation of auto-adaptation	Y		
C-ELYSEE 4		Engine ECU	Petrol engine	1.6L NPU BOSCH ME744		Special Function	Matching	Y		
C-ELYSEE 4		Engine ECU	Petrol engine	NPU J35		Read ECU Information		Y		
C-ELYSEE 4		Engine ECU	Petrol engine	NPU J35		Read Fault Code		Y		
C-ELYSEE 4		Engine ECU	Petrol engine	NPU J35		Erase Fault Code		Y		
C-ELYSEE 4		Engine ECU	Petrol engine	NPU J35		Live Data		Y		
C-ELYSEE 4		Engine ECU	Petrol engine	NPU J35		Actuation Test		Y		
C-ELYSEE 4		Engine ECU	Petrol engine	NPU J35		Special Function	Initialise auto-adaptives	Y		
C-ELYSEE 4		Gearbox ECU	Auto gearbox AL4,1			Read ECU Information		Y		
C-ELYSEE 4		Gearbox ECU	Auto gearbox AL4,1			Read Fault Code		Y		
C-ELYSEE 4		Gearbox ECU	Auto gearbox AL4,1			Erase Fault Code		Y		
C-ELYSEE 4		Gearbox ECU	Auto gearbox AL4,1			Live Data		Y		
C-ELYSEE 4		Gearbox ECU	Auto gearbox AL4,1			Actuation Test		Y		
C-ELYSEE 4		Gearbox ECU	Auto gearbox AL4,1			Special Function	Initialisation of auto-adaptation	Y		
C-ELYSEE 4		Gearbox ECU	Auto gearbox AL4, TAD2000(24)			Read ECU Information		Y		
C-ELYSEE 4		Gearbox ECU	Auto gearbox AL4, TAD2000(24)			Read Fault Code		Y		
C-ELYSEE 4		Gearbox ECU	Auto gearbox AL4, TAD2000(24)			Erase Fault Code		Y		
C-ELYSEE 4		Gearbox ECU	Auto gearbox AL4, TAD2000(24)			Live Data		Y		
C-ELYSEE 4		Gearbox ECU	Auto gearbox AL4, TAD2000(24)			Actuation Test		Y		
C-ELYSEE 4		Gearbox ECU	Auto gearbox AL4, TAD2000(24)			Special Function	Pedal initialisation	Y		
C-ELYSEE 4		Gearbox ECU	Auto gearbox AL4, TAD2000(24)			Special Function	Initialisation of auto-adaptation	Y		
C-ELYSEE 4		Gearbox ECU	Auto gearbox AL4, TAD2000(24)			Special Function	Oil wear counter	Y		
C-ELYSEE 4		Gearbox ECU	Auto gearbox AL4, TAD2000(44)			Read ECU Information		Y		
C-ELYSEE 4		Gearbox ECU	Auto gearbox AL4, TAD2000(44)			Read Fault Code		Y		
C-ELYSEE 4		Gearbox ECU	Auto gearbox AL4, TAD2000(44)			Erase Fault Code		Y		
C-ELYSEE 4		Gearbox ECU	Auto gearbox AL4, TAD2000(44)			Live Data		Y		
C-ELYSEE 4		Gearbox ECU	Auto gearbox AL4, TAD2000(44)			Actuation Test		Y		
C-ELYSEE 4		Gearbox ECU	Auto gearbox AL4, TAD2000(44)			Special Function	Pedal initialisation	Y		
C-ELYSEE 4		Gearbox ECU	Auto gearbox AL4, TAD2000(44)			Special Function	Initialisation of auto-adaptation	Y		
C-ELYSEE 4		Gearbox ECU	Auto gearbox AL4, TAD2000(44)			Special Function	Oil wear counter	Y		
C-ELYSEE 4		ABS				Read ECU Information		Y		
C-ELYSEE 4		ABS				Read Fault Code		Y		
C-ELYSEE 4		ABS				Erase Fault Code		Y		
C-ELYSEE 4		ABS				Live Data		Y		
C-ELYSEE 4		ABS				Actuation Test		Y		
C-ELYSEE 4		ABS				Special Function	Bleeding	Y		
C-ELYSEE 4		Airbag				Read ECU Information		Y		
C-ELYSEE 4		Airbag				Read Fault Code		Y		
C-ELYSEE 4		Airbag				Erase Fault Code		Y		
C-ELYSEE 4		Airbag				Live Data		Y		
C-ELYSEE 4		Electronic key				Read ECU Information		Y		
C-ELYSEE 4		Electronic key				Read Fault Code		Y		
C-ELYSEE 4		Electronic key				Erase Fault Code		Y		
C-ELYSEE 4		Electronic key				Live Data		Y		
C-ELYSEE 4		Central locking control unit				Read ECU Information		Y		
C-ELYSEE 4		Central locking control unit				Read Fault Code		Y		
C-ELYSEE 4		Central locking control unit				Erase Fault Code		Y		
C-ELYSEE 4		Central locking control unit				Live Data		Y		
C-ELYSEE 5		Engine ECU	Petrol engine	1.6L NPU BOSCH ME744		Read ECU Information		Y		
C-ELYSEE 5		Engine ECU	Petrol engine	1.6L NPU BOSCH ME744		Read Fault Code		Y		
C-ELYSEE 5		Engine ECU	Petrol engine	1.6L NPU BOSCH ME744		Erase Fault Code		Y		
C-ELYSEE 5		Engine ECU	Petrol engine	1.6L NPU BOSCH ME744		Live Data		Y		
C-ELYSEE 5		Engine ECU	Petrol engine	1.6L NPU BOSCH ME744		Actuation Test		Y		
C-ELYSEE 5		Engine ECU	Petrol engine	1.6L NPU BOSCH ME744		Special Function	Initialisation of auto-adaptation	Y		
C-ELYSEE 5		Engine ECU	Petrol engine	1.6L NPU BOSCH ME744		Special Function	Matching	Y		
C-ELYSEE 5		Engine ECU	Petrol engine	NPU J35		Read ECU Information		Y		
C-ELYSEE 5		Engine ECU	Petrol engine	NPU J35		Read Fault Code		Y		
C-ELYSEE 5		Engine ECU	Petrol engine	NPU J35		Erase Fault Code		Y		
C-ELYSEE 5		Engine ECU	Petrol engine	NPU J35		Live Data		Y		
C-ELYSEE 5		Engine ECU	Petrol engine	NPU J35		Actuation Test		Y		
C-ELYSEE 5		Engine ECU	Petrol engine	NPU J35		Special Function	Initialise auto-adaptives	Y		
C-ELYSEE 5		Gearbox ECU	Auto gearbox AL4,1			Read ECU Information		Y		
C-ELYSEE 5		Gearbox ECU	Auto gearbox AL4,1			Read Fault Code		Y		
C-ELYSEE 5		Gearbox ECU	Auto gearbox AL4,1			Erase Fault Code		Y		
C-ELYSEE 5		Gearbox ECU	Auto gearbox AL4,1			Live Data		Y		
C-ELYSEE 5		Gearbox ECU	Auto gearbox AL4,1			Actuation Test		Y		
C-ELYSEE 5		Gearbox ECU	Auto gearbox AL4,1			Special Function	Initialisation of auto-adaptation	Y		
C-ELYSEE 5		Gearbox ECU	Auto gearbox AL4, TAD2000(24)			Read ECU Information		Y		
C-ELYSEE 5		Gearbox ECU	Auto gearbox AL4, TAD2000(24)			Read Fault Code		Y		
C-ELYSEE 5		Gearbox ECU	Auto gearbox AL4, TAD2000(24)			Erase Fault Code		Y		
C-ELYSEE 5		Gearbox ECU	Auto gearbox AL4, TAD2000(24)			Live Data		Y		
C-ELYSEE 5		Gearbox ECU	Auto gearbox AL4, TAD2000(24)			Actuation Test		Y		
C-ELYSEE 5		Gearbox ECU	Auto gearbox AL4, TAD2000(24)			Special Function	Pedal initialisation	Y		
C-ELYSEE 5		Gearbox ECU	Auto gearbox AL4, TAD2000(24)			Special Function	Initialisation of auto-adaptation	Y		
C-ELYSEE 5		Gearbox ECU	Auto gearbox AL4, TAD2000(24)			Special Function	Oil wear counter	Y		
C-ELYSEE 5		Gearbox ECU	Auto gearbox AL4, TAD2000(44)			Read ECU Information		Y		
C-ELYSEE 5		Gearbox ECU	Auto gearbox AL4, TAD2000(44)			Read Fault Code		Y		
C-ELYSEE 5		Gearbox ECU	Auto gearbox AL4, TAD2000(44)			Erase Fault Code		Y		
C-ELYSEE 5		Gearbox ECU	Auto gearbox AL4, TAD2000(44)			Live Data		Y		
C-ELYSEE 5		Gearbox ECU	Auto gearbox AL4, TAD2000(44)			Actuation Test		Y		
C-ELYSEE 5		Gearbox ECU	Auto gearbox AL4, TAD2000(44)			Special Function	Pedal initialisation	Y		
C-ELYSEE 5		Gearbox ECU	Auto gearbox AL4, TAD2000(44)			Special Function	Initialisation of auto-adaptation	Y		
C-ELYSEE 5		Gearbox ECU	Auto gearbox AL4, TAD2000(44)			Special Function	Oil wear counter	Y		
C-ELYSEE 5		ABS				Read ECU Information		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
C-QUATRE 4		AIS	ABSS, 1, BOSCH			Special Function	Configuration	Y		
C-QUATRE 4		AIS	ABSS, 1, BOSCH			Special Function	Replacement part	Y		
C-QUATRE 4		Airbag				Read ECU Information		Y		
C-QUATRE 4		Airbag				Read Fault Code		Y		
C-QUATRE 4		Airbag				Erase Fault Code		Y		
C-QUATRE 4		Airbag				Live Data		Y		
C-QUATRE 4		Airbag				Special Function	Configuration	Y		
C-QUATRE 4		Airbag				Special Function	Unlocking	Y		
C-QUATRE 4		Instrument panel				Read ECU Information		Y		
C-QUATRE 4		Instrument panel				Read Fault Code		Y		
C-QUATRE 4		Instrument panel				Erase Fault Code		Y		
C-QUATRE 4		Instrument panel				Live Data		Y		
C-QUATRE 4		Instrument panel				Actuation Test		Y		
C-QUATRE 4		Instrument panel				Special Function	Configuration	Y		
C-QUATRE 4		Radio	Yes	RD43		Read ECU Information		Y		
C-QUATRE 4		Radio	Yes	RD43		Read Fault Code		Y		
C-QUATRE 4		Radio	Yes	RD43		Erase Fault Code		Y		
C-QUATRE 4		Radio	Yes	RD43		Live Data		Y		
C-QUATRE 4		Radio	Yes	RD43		Actuation Test		Y		
C-QUATRE 4		Radio	Yes	RD43		Special Function	Configuration	Y		
C-QUATRE 4		Radio	Yes	RD4		Read ECU Information		Y		
C-QUATRE 4		Radio	Yes	RD4		Read Fault Code		Y		
C-QUATRE 4		Radio	Yes	RD4		Erase Fault Code		Y		
C-QUATRE 4		Radio	Yes	RD4		Live Data		Y		
C-QUATRE 4		Radio	Yes	RD4		Actuation Test		Y		
C-QUATRE 4		Radio	Yes	RD4		Special Function	Configuration	Y		
C-QUATRE 4		Radio	Yes	RD45		Read ECU Information		Y		
C-QUATRE 4		Radio	Yes	RD45		Read Fault Code		Y		
C-QUATRE 4		Radio	Yes	RD45		Erase Fault Code		Y		
C-QUATRE 4		Radio	Yes	RD45		Live Data		Y		
C-QUATRE 4		Radio	Yes	RD45		Actuation Test		Y		
C-QUATRE 4		Radio	Yes	RD45		Special Function	Configuration	Y		
C-QUATRE 4		CD player				Read ECU Information		Y		
C-QUATRE 4		CD player				Read Fault Code		Y		
C-QUATRE 4		CD player				Erase Fault Code		Y		
C-QUATRE 4		CD player				Live Data		Y		
C-QUATRE 4		CD player				Actuation Test		Y		
C-QUATRE 4		Parking assistance				Read ECU Information		Y		
C-QUATRE 4		Parking assistance				Read Fault Code		Y		
C-QUATRE 4		Parking assistance				Erase Fault Code		Y		
C-QUATRE 4		Parking assistance				Live Data		Y		
C-QUATRE 4		Parking assistance				Actuation Test		Y		
C-QUATRE 4		Parking assistance				Special Function	Configuration	Y		
C-QUATRE 4		Air conditioning				Read ECU Information		Y		
C-QUATRE 4		Air conditioning				Read Fault Code		Y		
C-QUATRE 4		Air conditioning				Erase Fault Code		Y		
C-QUATRE 4		Air conditioning				Live Data		Y		
C-QUATRE 4		Air conditioning				Actuation Test		Y		
C-QUATRE 4		Alarm				Read ECU Information		Y		
C-QUATRE 4		Alarm				Read Fault Code		Y		
C-QUATRE 4		Alarm				Erase Fault Code		Y		
C-QUATRE 4		Alarm				Live Data		Y		
C-QUATRE 4		Alarm				Actuation Test		Y		
C-QUATRE 4		Alarm				Special Function	Configuration	Y		
C-QUATRE 4		Steering wheel with fixed central controls				Read ECU Information		Y		
C-QUATRE 4		Steering wheel with fixed central controls				Read Fault Code		Y		
C-QUATRE 4		Steering wheel with fixed central controls				Erase Fault Code		Y		
C-QUATRE 4		Steering wheel with fixed central controls				Live Data		Y		
C-QUATRE 4		Steering wheel with fixed central controls				Actuation Test		Y		
C-QUATRE 4		Multifunction screen				Read ECU Information		Y		
C-QUATRE 4		Multifunction screen				Read Fault Code		Y		
C-QUATRE 4		Multifunction screen				Erase Fault Code		Y		
C-QUATRE 4		Multifunction screen				Live Data		Y		
C-QUATRE 4		Multifunction screen				Actuation Test		Y		
C-QUATRE 4		Multifunction screen				Special Function	Configuration	Y		
C-QUATRE 4		Telematic	Telematic (RT3)			Read ECU Information		Y		
C-QUATRE 4		Telematic	Telematic (RT3)			Read Fault Code		Y		
C-QUATRE 4		Telematic	Telematic (RT3)			Erase Fault Code		Y		
C-QUATRE 4		Telematic	Telematic (RT3)			Live Data		Y		
C-QUATRE 4		Telematic	Telematic (RT3)			Actuation Test		Y		
C-QUATRE 4		Telematic	Telematic (RT3)			Special Function	Function test	Y		
C-QUATRE 4		Telematic	Telematic (RT3)			Special Function	Configuration	Y		
C-QUATRE 4		Telematic	Telematic (RT3)			Special Function	Emergency battery / Change battery	Y		
C-QUATRE 4		Telematic	Telematic (RT4)			Read ECU Information		Y		
C-QUATRE 4		Telematic	Telematic (RT4)			Read Fault Code		Y		
C-QUATRE 4		Telematic	Telematic (RT4)			Erase Fault Code		Y		
C-QUATRE 4		Telematic	Telematic (RT4)			Live Data		Y		
C-QUATRE 4		Telematic	Telematic (RT4)			Actuation Test		Y		
C-QUATRE 4		Telematic	Telematic (RT4)			Special Function	Function test	Y		
C-QUATRE 4		Telematic	Telematic (RT4)			Special Function	Configuration	Y		
C-QUATRE 4		Telematic	Telematic (RT4)			Special Function	Emergency battery / Change battery	Y		
C-QUATRE 4		Telematic	Telematic (RT5)			Read ECU Information		Y		
C-QUATRE 4		Telematic	Telematic (RT5)			Read Fault Code		Y		
C-QUATRE 4		Telematic	Telematic (RT5)			Erase Fault Code		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
C-QUATRE 4		Telematic	Telematic (RTS)			Live Data		Y		
C-QUATRE 4		Telematic	Telematic (RTS)			Actuation Test		Y		
C-QUATRE 4		Telematic	Telematic (RTS)			Special Function	Function test	Y		
C-QUATRE 4		Telematic	Telematic (RTS)			Special Function	Configuration	Y		
C-QUATRE 4		Telematic	Telematic (RTS)			Special Function	Emergency battery / Charge battery	Y		
C-QUATRE 4		Trailer relay unit				Read ECU Information		Y		
C-QUATRE 4		Trailer relay unit				Read Fault Code		Y		
C-QUATRE 4		Trailer relay unit				Erase Fault Code		Y		
C-QUATRE 4		Trailer relay unit				Live Data		Y		
C-QUATRE 4		Trailer relay unit				Actuation Test		Y		
C-QUATRE 4		Engine relay unit				Read ECU Information		Y		
C-QUATRE 4		Engine relay unit				Read Fault Code		Y		
C-QUATRE 4		Engine relay unit				Erase Fault Code		Y		
C-QUATRE 4		Engine relay unit				Live Data		Y		
C-QUATRE 4		Engine relay unit				Actuation Test		Y		
C-QUATRE 4		Power steering				Read ECU Information		Y		
C-QUATRE 4		Power steering				Read Fault Code		Y		
C-QUATRE 4		Power steering				Erase Fault Code		Y		
C-QUATRE 4		Power steering				Live Data		Y		
C-QUATRE 4		Power steering				Special Function	Configuration	Y		
C-QUATRE 4		Hands Free Kit				Read ECU Information		Y		
C-QUATRE 4		Hands Free Kit				Read Fault Code		Y		
C-QUATRE 4		Hands Free Kit				Erase Fault Code		Y		
C-QUATRE 4		Hands Free Kit				Live Data		Y		
C-QUATRE 4		Hands Free Kit				Actuation Test		Y		
C-QUATRE 4		Hands Free Kit				Special Function	Configuration	Y		
C-QUATRE 4		Driver's door module				Read ECU Information		Y		
C-QUATRE 4		Driver's door module				Read Fault Code		Y		
C-QUATRE 4		Driver's door module				Erase Fault Code		Y		
C-QUATRE 4		Driver's door module				Live Data		Y		
C-QUATRE 4		Driver's door module				Actuation Test		Y		
C-QUATRE 4		Passenger's door module				Read ECU Information		Y		
C-QUATRE 4		Passenger's door module				Read Fault Code		Y		
C-QUATRE 4		Passenger's door module				Erase Fault Code		Y		
C-QUATRE 4		Passenger's door module				Live Data		Y		
C-QUATRE 4		Passenger's door module				Actuation Test		Y		
C-QUATRE 4		Learning				Special Function	Key programming	Y		
C-QUATRE 4		Calibration of the steering wheel angle sensor : C2, C3, C3 pluraliel, New Look C5 with ESP MK00ESP & 1				Special Function	Steering wheel angle sensor calibration	Y		
C-QUATRE 5		Built-in Systems Interface				Read ECU Information		Y		
C-QUATRE 5		Built-in Systems Interface				Read Fault Code		Y		
C-QUATRE 5		Built-in Systems Interface				Erase Fault Code		Y		
C-QUATRE 5		Built-in Systems Interface				Live Data		Y		
C-QUATRE 5		Built-in Systems Interface				Actuation Test		Y		
C-QUATRE 5		Built-in Systems Interface				Special Function	Maintenance-BSI operating mode	Y		
C-QUATRE 5		Engine ECU	Petrol engine	BFJ M06LFB		Read ECU Information		Y		
C-QUATRE 5		Engine ECU	Petrol engine	BFJ M06LFB		Read Fault Code		Y		
C-QUATRE 5		Engine ECU	Petrol engine	BFJ M06LFB		Erase Fault Code		Y		
C-QUATRE 5		Engine ECU	Petrol engine	BFJ M06LFB		Live Data		Y		
C-QUATRE 5		Engine ECU	Petrol engine	BFJ M06LFB		Actuation Test		Y		
C-QUATRE 5		Engine ECU	Petrol engine	BFJ M06LFB		Special Function	Configuration	Y		
C-QUATRE 5		Engine ECU	Petrol engine	BFJ M06LFB		Special Function	Initialisation of auto-adaptation	Y		
C-QUATRE 5		Engine ECU	Petrol engine	BFJ M06LFB		Special Function	Matching	Y		
C-QUATRE 5		Engine ECU	Petrol engine	NGA BOSCH ME745		Read ECU Information		Y		
C-QUATRE 5		Engine ECU	Petrol engine	NGA BOSCH ME745		Read Fault Code		Y		
C-QUATRE 5		Engine ECU	Petrol engine	NGA BOSCH ME745		Erase Fault Code		Y		
C-QUATRE 5		Engine ECU	Petrol engine	NGA BOSCH ME745		Live Data		Y		
C-QUATRE 5		Engine ECU	Petrol engine	NGA BOSCH ME745		Actuation Test		Y		
C-QUATRE 5		Engine ECU	Petrol engine	NGA BOSCH ME745		Special Function	Initialise auto-adaptives	Y		
C-QUATRE 5		Engine ECU	Petrol engine	NGA BOSCH ME745		Special Function	Configuration	Y		
C-QUATRE 5		Engine ECU	Petrol engine	NGA BOSCH ME745		Special Function	Programming / Matching	Y		
C-QUATRE 5		Engine ECU	Petrol engine	NFP BOSCH ME745, BCS		Read ECU Information		Y		
C-QUATRE 5		Engine ECU	Petrol engine	NFP BOSCH ME745, BCS		Read Fault Code		Y		
C-QUATRE 5		Engine ECU	Petrol engine	NFP BOSCH ME745, BCS		Erase Fault Code		Y		
C-QUATRE 5		Engine ECU	Petrol engine	NFP BOSCH ME745, BCS		Live Data		Y		
C-QUATRE 5		Engine ECU	Petrol engine	NFP BOSCH ME745, BCS		Actuation Test		Y		
C-QUATRE 5		Engine ECU	Petrol engine	NFP BOSCH ME745, BCS		Special Function	Configuration	Y		
C-QUATRE 5		Engine ECU	Petrol engine	NFP BOSCH ME745, BCS		Special Function	Initialisation of the autoadaptive values	Y		
C-QUATRE 5		Gearbox ECU	Auto gearbox AL4			Read ECU Information		Y		
C-QUATRE 5		Gearbox ECU	Auto gearbox AL4			Read Fault Code		Y		
C-QUATRE 5		Gearbox ECU	Auto gearbox AL4			Erase Fault Code		Y		
C-QUATRE 5		Gearbox ECU	Auto gearbox AL4			Live Data		Y		
C-QUATRE 5		Gearbox ECU	Auto gearbox AL4			Actuation Test		Y		
C-QUATRE 5		Gearbox ECU	Auto gearbox AL4			Special Function	Configuration	Y		
C-QUATRE 5		Gearbox ECU	Auto gearbox AL4			Special Function	Pedal initialisation	Y		
C-QUATRE 5		Gearbox ECU	Auto gearbox AL4			Special Function	Initialisation of auto-adaptation	Y		
C-QUATRE 5		Gearbox ECU	Auto gearbox AL4			Special Function	Oil wear counter	Y		
C-QUATRE 5		ABS	ESPR. 1, BOSCH			Read ECU Information		Y		
C-QUATRE 5		ABS	ESPR. 1, BOSCH			Read Fault Code		Y		
C-QUATRE 5		ABS	ESPR. 1, BOSCH			Erase Fault Code		Y		
C-QUATRE 5		ABS	ESPR. 1, BOSCH			Live Data		Y		
C-QUATRE 5		ABS	ESPR. 1, BOSCH			Actuation Test		Y		
C-QUATRE 5		ABS	ESPR. 1, BOSCH			Special Function	Configuration	Y		
C-QUATRE 5		ABS	ESPR. 1, BOSCH			Special Function	Replacement part	Y		
C-QUATRE 5		ABS	ABS. 1, BOSCH			Read ECU Information		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function subname	Add (Y/N)	Verification (Y/N)	Remarks
C-QUATRE 5		ABS	ABSS, 1, BOSCH			Read Fault Code		Y		
C-QUATRE 5		ABS	ABSS, 1, BOSCH			Erase Fault Code		Y		
C-QUATRE 5		ABS	ABSS, 1, BOSCH			Live Data		Y		
C-QUATRE 5		ABS	ABSS, 1, BOSCH			Actuation Test		Y		
C-QUATRE 5		ABS	ABSS, 1, BOSCH			Special Function	Configuration	Y		
C-QUATRE 5		ABS	ABSS, 1, BOSCH			Special Function	Replacement part	Y		
C-QUATRE 5		Airbag				Read ECU Information		Y		
C-QUATRE 5		Airbag				Read Fault Code		Y		
C-QUATRE 5		Airbag				Erase Fault Code		Y		
C-QUATRE 5		Airbag				Live Data		Y		
C-QUATRE 5		Airbag				Special Function	Configuration	Y		
C-QUATRE 5		Airbag				Special Function	Unlocking	Y		
C-QUATRE 5		Instrument panel				Read ECU Information		Y		
C-QUATRE 5		Instrument panel				Read Fault Code		Y		
C-QUATRE 5		Instrument panel				Erase Fault Code		Y		
C-QUATRE 5		Instrument panel				Live Data		Y		
C-QUATRE 5		Instrument panel				Actuation Test		Y		
C-QUATRE 5		Instrument panel				Special Function	Configuration	Y		
C-QUATRE 5		Radio	Yes	RD43		Read ECU Information		Y		
C-QUATRE 5		Radio	Yes	RD43		Read Fault Code		Y		
C-QUATRE 5		Radio	Yes	RD43		Erase Fault Code		Y		
C-QUATRE 5		Radio	Yes	RD43		Live Data		Y		
C-QUATRE 5		Radio	Yes	RD43		Actuation Test		Y		
C-QUATRE 5		Radio	Yes	RD43		Special Function	Configuration	Y		
C-QUATRE 5		Radio	Yes	RD4		Read ECU Information		Y		
C-QUATRE 5		Radio	Yes	RD4		Read Fault Code		Y		
C-QUATRE 5		Radio	Yes	RD4		Erase Fault Code		Y		
C-QUATRE 5		Radio	Yes	RD4		Live Data		Y		
C-QUATRE 5		Radio	Yes	RD4		Actuation Test		Y		
C-QUATRE 5		Radio	Yes	RD4		Special Function	Configuration	Y		
C-QUATRE 5		Radio	Yes	RD45		Read ECU Information		Y		
C-QUATRE 5		Radio	Yes	RD45		Read Fault Code		Y		
C-QUATRE 5		Radio	Yes	RD45		Erase Fault Code		Y		
C-QUATRE 5		Radio	Yes	RD45		Live Data		Y		
C-QUATRE 5		Radio	Yes	RD45		Actuation Test		Y		
C-QUATRE 5		Radio	Yes	RD45		Special Function	Configuration	Y		
C-QUATRE 5		CD player				Read ECU Information		Y		
C-QUATRE 5		CD player				Read Fault Code		Y		
C-QUATRE 5		CD player				Erase Fault Code		Y		
C-QUATRE 5		CD player				Live Data		Y		
C-QUATRE 5		CD player				Actuation Test		Y		
C-QUATRE 5		Parking assistance				Read ECU Information		Y		
C-QUATRE 5		Parking assistance				Read Fault Code		Y		
C-QUATRE 5		Parking assistance				Erase Fault Code		Y		
C-QUATRE 5		Parking assistance				Live Data		Y		
C-QUATRE 5		Parking assistance				Actuation Test		Y		
C-QUATRE 5		Parking assistance				Special Function	Configuration	Y		
C-QUATRE 5		Air conditioning				Read ECU Information		Y		
C-QUATRE 5		Air conditioning				Read Fault Code		Y		
C-QUATRE 5		Air conditioning				Erase Fault Code		Y		
C-QUATRE 5		Air conditioning				Live Data		Y		
C-QUATRE 5		Air conditioning				Actuation Test		Y		
C-QUATRE 5		Alarm				Read ECU Information		Y		
C-QUATRE 5		Alarm				Read Fault Code		Y		
C-QUATRE 5		Alarm				Erase Fault Code		Y		
C-QUATRE 5		Alarm				Live Data		Y		
C-QUATRE 5		Alarm				Actuation Test		Y		
C-QUATRE 5		Alarm				Special Function	Configuration	Y		
C-QUATRE 5		Steering wheel with fixed central controls				Read ECU Information		Y		
C-QUATRE 5		Steering wheel with fixed central controls				Read Fault Code		Y		
C-QUATRE 5		Steering wheel with fixed central controls				Erase Fault Code		Y		
C-QUATRE 5		Steering wheel with fixed central controls				Live Data		Y		
C-QUATRE 5		Steering wheel with fixed central controls				Actuation Test		Y		
C-QUATRE 5		Rain sensor / Brightness				Read ECU Information		Y		
C-QUATRE 5		Rain sensor / Brightness				Read Fault Code		Y		
C-QUATRE 5		Rain sensor / Brightness				Erase Fault Code		Y		
C-QUATRE 5		Multifunction screen				Read ECU Information		Y		
C-QUATRE 5		Multifunction screen				Read Fault Code		Y		
C-QUATRE 5		Multifunction screen				Erase Fault Code		Y		
C-QUATRE 5		Multifunction screen				Live Data		Y		
C-QUATRE 5		Multifunction screen				Actuation Test		Y		
C-QUATRE 5		Multifunction screen				Special Function	Configuration	Y		
C-QUATRE 5		Telematic	Telematics (RT3)			Read ECU Information		Y		
C-QUATRE 5		Telematic	Telematics (RT3)			Read Fault Code		Y		
C-QUATRE 5		Telematic	Telematics (RT3)			Erase Fault Code		Y		
C-QUATRE 5		Telematic	Telematics (RT3)			Live Data		Y		
C-QUATRE 5		Telematic	Telematics (RT3)			Actuation Test		Y		
C-QUATRE 5		Telematic	Telematics (RT3)			Special Function	Function test	Y		
C-QUATRE 5		Telematic	Telematics (RT3)			Special Function	Configuration	Y		
C-QUATRE 5		Telematic	Telematics (RT3)			Special Function	Emergency battery / Change battery	Y		
C-QUATRE 5		Telematic	Telematic (RT4)			Read ECU Information		Y		
C-QUATRE 5		Telematic	Telematic (RT4)			Read Fault Code		Y		
C-QUATRE 5		Telematic	Telematic (RT4)			Erase Fault Code		Y		
C-QUATRE 5		Telematic	Telematic (RT4)			Live Data		Y		

CITROËN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
C-QUATRE S		Telematic	Telematic (07F4)			Actuation Test		Y		
C-QUATRE S		Telematic	Telematic (07F4)			Special Function	Function test	Y		
C-QUATRE S		Telematic	Telematic (07F4)			Special Function	Configuration	Y		
C-QUATRE S		Telematic	Telematic (07F4)			Special Function	Emergency battery / Charge battery	Y		
C-QUATRE S		Telematic	Telematic (07F5)			Read ECU Information		Y		
C-QUATRE S		Telematic	Telematic (07F5)			Read Fault Code		Y		
C-QUATRE S		Telematic	Telematic (07F5)			Erase Fault Code		Y		
C-QUATRE S		Telematic	Telematic (07F5)			Live Data		Y		
C-QUATRE S		Telematic	Telematic (07F5)			Special Function	Function test	Y		
C-QUATRE S		Telematic	Telematic (07F5)			Special Function	Configuration	Y		
C-QUATRE S		Telematic	Telematic (07F5)			Special Function	Emergency battery / Charge battery	Y		
C-QUATRE S		Trailer relay unit				Read ECU Information		Y		
C-QUATRE S		Trailer relay unit				Read Fault Code		Y		
C-QUATRE S		Trailer relay unit				Erase Fault Code		Y		
C-QUATRE S		Trailer relay unit				Live Data		Y		
C-QUATRE S		Trailer relay unit				Actuation Test		Y		
C-QUATRE S		Engine relay unit				Read ECU Information		Y		
C-QUATRE S		Engine relay unit				Read Fault Code		Y		
C-QUATRE S		Engine relay unit				Erase Fault Code		Y		
C-QUATRE S		Engine relay unit				Live Data		Y		
C-QUATRE S		Engine relay unit				Actuation Test		Y		
C-QUATRE S		Power steering				Read ECU Information		Y		
C-QUATRE S		Power steering				Read Fault Code		Y		
C-QUATRE S		Power steering				Erase Fault Code		Y		
C-QUATRE S		Power steering				Live Data		Y		
C-QUATRE S		Power steering				Special Function	Configuration	Y		
C-QUATRE S		Hands Free Kit				Read ECU Information		Y		
C-QUATRE S		Hands Free Kit				Read Fault Code		Y		
C-QUATRE S		Hands Free Kit				Erase Fault Code		Y		
C-QUATRE S		Hands Free Kit				Live Data		Y		
C-QUATRE S		Hands Free Kit				Actuation Test		Y		
C-QUATRE S		Hands Free Kit				Special Function	Configuration	Y		
C-QUATRE S		Driver's door module				Read ECU Information		Y		
C-QUATRE S		Driver's door module				Read Fault Code		Y		
C-QUATRE S		Driver's door module				Erase Fault Code		Y		
C-QUATRE S		Driver's door module				Live Data		Y		
C-QUATRE S		Driver's door module				Actuation Test		Y		
C-QUATRE S		Passenger's door module				Read ECU Information		Y		
C-QUATRE S		Passenger's door module				Read Fault Code		Y		
C-QUATRE S		Passenger's door module				Erase Fault Code		Y		
C-QUATRE S		Passenger's door module				Live Data		Y		
C-QUATRE S		Passenger's door module				Actuation Test		Y		
C-QUATRE S		Learning				Special Function	Key programming	Y		
C-TRIO MPSE		Built-in Systems Interface				Read ECU Information		Y		
C-TRIO MPSE		Built-in Systems Interface				Read Fault Code		Y		
C-TRIO MPSE		Built-in Systems Interface				Erase Fault Code		Y		
C-TRIO MPSE		Built-in Systems Interface				Live Data		Y		
C-TRIO MPSE		Built-in Systems Interface				Actuation Test		Y		
C-TRIO MPSE		Built-in Systems Interface				Special Function	Maintenance - BSI operating mode	Y		
C-TRIO MPSE		Built-in Systems Interface				Special Function	Key programming	Y		
C-TRIO MPSE		Engine ECU	Petrol engine	RFJ M06LFB		Read ECU Information		Y		
C-TRIO MPSE		Engine ECU	Petrol engine	RFJ M06LFB		Read Fault Code		Y		
C-TRIO MPSE		Engine ECU	Petrol engine	RFJ M06LFB		Erase Fault Code		Y		
C-TRIO MPSE		Engine ECU	Petrol engine	RFJ M06LFB		Live Data		Y		
C-TRIO MPSE		Engine ECU	Petrol engine	RFJ M06LFB		Actuation Test		Y		
C-TRIO MPSE		Engine ECU	Petrol engine	RFJ M06LFB		Special Function	Configuration	Y		
C-TRIO MPSE		Engine ECU	Petrol engine	RFJ M06LFB		Special Function	Initialisation of auto-adaptation	Y		
C-TRIO MPSE		Engine ECU	Petrol engine	RFJ M06LFB		Special Function	Matching	Y		
C-TRIO MPSE		Gearbox ECU	Auto gearbox AL4			Read ECU Information		Y		
C-TRIO MPSE		Gearbox ECU	Auto gearbox AL4			Read Fault Code		Y		
C-TRIO MPSE		Gearbox ECU	Auto gearbox AL4			Erase Fault Code		Y		
C-TRIO MPSE		Gearbox ECU	Auto gearbox AL4			Live Data		Y		
C-TRIO MPSE		Gearbox ECU	Auto gearbox AL4			Actuation Test		Y		
C-TRIO MPSE		Gearbox ECU	Auto gearbox AL4			Special Function	Configuration	Y		
C-TRIO MPSE		Gearbox ECU	Auto gearbox AL4			Special Function	Pedal initialisation	Y		
C-TRIO MPSE		Gearbox ECU	Auto gearbox AL4			Special Function	Initialisation of auto-adaptation	Y		
C-TRIO MPSE		Gearbox ECU	Auto gearbox AL4			Special Function	Oil wear counter	Y		
C-TRIO MPSE		ABS	ESP8_1 BOSCH			Read ECU Information		Y		
C-TRIO MPSE		ABS	ESP8_1 BOSCH			Read Fault Code		Y		
C-TRIO MPSE		ABS	ESP8_1 BOSCH			Erase Fault Code		Y		
C-TRIO MPSE		ABS	ESP8_1 BOSCH			Live Data		Y		
C-TRIO MPSE		ABS	ESP8_1 BOSCH			Actuation Test		Y		
C-TRIO MPSE		ABS	ESP8_1 BOSCH			Special Function	Configuration	Y		
C-TRIO MPSE		ABS	ESP8_1 BOSCH			Special Function	Replacement part	Y		
C-TRIO MPSE		ABS	ESP8_BOSCH			Read ECU Information		Y		
C-TRIO MPSE		ABS	ESP8_BOSCH			Read Fault Code		Y		
C-TRIO MPSE		ABS	ESP8_BOSCH			Erase Fault Code		Y		
C-TRIO MPSE		ABS	ESP8_BOSCH			Live Data		Y		
C-TRIO MPSE		ABS	ESP8_BOSCH			Actuation Test		Y		
C-TRIO MPSE		ABS	ESP8_BOSCH			Special Function	Configuration	Y		
C-TRIO MPSE		ABS	ESP8_BOSCH			Special Function	Calibration of the steering wheel angle sensor	Y		
C-TRIO MPSE		ABS	ESP8_BOSCH			Special Function	Bleeding	Y		
C-TRIO MPSE		ABS	ABS8_1 BOSCH			Read ECU Information		Y		
C-TRIO MPSE		ABS	ABS8_1 BOSCH			Read Fault Code		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
C-TRAMPER		ABS	AESS_1_BOSCH			Erase Fault Code		Y		
C-TRAMPER		ABS	AESS_1_BOSCH			Live Data		Y		
C-TRAMPER		ABS	AESS_1_BOSCH			Actuation Test		Y		
C-TRAMPER		ABS	AESS_1_BOSCH			Special Function	Configuration	Y		
C-TRAMPER		ABS	AESS_1_BOSCH			Special Function	Replacement part	Y		
C-TRAMPER		ABS	AESS_BOSCH			Read ECU Information		Y		
C-TRAMPER		ABS	AESS_BOSCH			Read Fault Code		Y		
C-TRAMPER		ABS	AESS_BOSCH			Erase Fault Code		Y		
C-TRAMPER		ABS	AESS_BOSCH			Live Data		Y		
C-TRAMPER		ABS	AESS_BOSCH			Actuation Test		Y		
C-TRAMPER		ABS	AESS_BOSCH			Special Function	Configuration	Y		
C-TRAMPER		ABS	AESS_BOSCH			Special Function	Bleeding	Y		
C-TRAMPER		Airbag				Read ECU Information		Y		
C-TRAMPER		Airbag				Read Fault Code		Y		
C-TRAMPER		Airbag				Erase Fault Code		Y		
C-TRAMPER		Airbag				Live Data		Y		
C-TRAMPER		Airbag				Special Function	Configuration	Y		
C-TRAMPER		Airbag				Special Function	Unlocking	Y		
C-TRAMPER		Instrument panel				Read ECU Information		Y		
C-TRAMPER		Instrument panel				Read Fault Code		Y		
C-TRAMPER		Instrument panel				Erase Fault Code		Y		
C-TRAMPER		Instrument panel				Live Data		Y		
C-TRAMPER		Instrument panel				Actuation Test		Y		
C-TRAMPER		Instrument panel				Special Function	Configuration	Y		
C-TRAMPER		Radio				Read ECU Information		Y		
C-TRAMPER		Radio				Read Fault Code		Y		
C-TRAMPER		Radio				Erase Fault Code		Y		
C-TRAMPER		Radio				Live Data		Y		
C-TRAMPER		Radio				Actuation Test		Y		
C-TRAMPER		Radio				Special Function	Configuration	Y		
C-TRAMPER		CD player				Read ECU Information		Y		
C-TRAMPER		CD player				Read Fault Code		Y		
C-TRAMPER		CD player				Erase Fault Code		Y		
C-TRAMPER		CD player				Live Data		Y		
C-TRAMPER		CD player				Actuation Test		Y		
C-TRAMPER		Parking assistance				Read ECU Information		Y		
C-TRAMPER		Parking assistance				Read Fault Code		Y		
C-TRAMPER		Parking assistance				Erase Fault Code		Y		
C-TRAMPER		Parking assistance				Live Data		Y		
C-TRAMPER		Parking assistance				Actuation Test		Y		
C-TRAMPER		Parking assistance				Special Function	Configuration	Y		
C-TRAMPER		Air conditioning				Read ECU Information		Y		
C-TRAMPER		Air conditioning				Read Fault Code		Y		
C-TRAMPER		Air conditioning				Erase Fault Code		Y		
C-TRAMPER		Air conditioning				Live Data		Y		
C-TRAMPER		Air conditioning				Actuation Test		Y		
C-TRAMPER		Alarm				Read ECU Information		Y		
C-TRAMPER		Alarm				Read Fault Code		Y		
C-TRAMPER		Alarm				Erase Fault Code		Y		
C-TRAMPER		Alarm				Live Data		Y		
C-TRAMPER		Alarm				Actuation Test		Y		
C-TRAMPER		Alarm				Special Function	Configuration	Y		
C-TRAMPER		Steering wheel with fixed central controls				Read ECU Information		Y		
C-TRAMPER		Steering wheel with fixed central controls				Read Fault Code		Y		
C-TRAMPER		Steering wheel with fixed central controls				Erase Fault Code		Y		
C-TRAMPER		Steering wheel with fixed central controls				Live Data		Y		
C-TRAMPER		Steering wheel with fixed central controls				Actuation Test		Y		
C-TRAMPER		Rain sensor / Brightness				Read ECU Information		Y		
C-TRAMPER		Rain sensor / Brightness				Read Fault Code		Y		
C-TRAMPER		Rain sensor / Brightness				Erase Fault Code		Y		
C-TRAMPER		Multifunction screen				Read ECU Information		Y		
C-TRAMPER		Multifunction screen				Read Fault Code		Y		
C-TRAMPER		Multifunction screen				Erase Fault Code		Y		
C-TRAMPER		Multifunction screen				Live Data		Y		
C-TRAMPER		Multifunction screen				Actuation Test		Y		
C-TRAMPER		Multifunction screen				Special Function	Configuration	Y		
C-TRAMPER		Telematic	Telematic (RT3)			Read ECU Information		Y		
C-TRAMPER		Telematic	Telematic (RT3)			Read Fault Code		Y		
C-TRAMPER		Telematic	Telematic (RT3)			Erase Fault Code		Y		
C-TRAMPER		Telematic	Telematic (RT3)			Live Data		Y		
C-TRAMPER		Telematic	Telematic (RT3)			Actuation Test		Y		
C-TRAMPER		Telematic	Telematic (RT3)			Special Function	Function test	Y		
C-TRAMPER		Telematic	Telematic (RT3)			Special Function	Configuration	Y		
C-TRAMPER		Telematic	Telematic (RT3)			Special Function	Emergency battery / Change battery	Y		
C-TRAMPER		Telematic	Telematic (RT4)			Read ECU Information		Y		
C-TRAMPER		Telematic	Telematic (RT4)			Read Fault Code		Y		
C-TRAMPER		Telematic	Telematic (RT4)			Erase Fault Code		Y		
C-TRAMPER		Telematic	Telematic (RT4)			Live Data		Y		
C-TRAMPER		Telematic	Telematic (RT4)			Actuation Test		Y		
C-TRAMPER		Telematic	Telematic (RT4)			Special Function	Function test	Y		
C-TRAMPER		Telematic	Telematic (RT4)			Special Function	Configuration	Y		
C-TRAMPER		Telematic	Telematic (RT4)			Special Function	Emergency battery / Change battery	Y		
C-TRAMPER		Telematic	Telematic (RT5)			Read ECU Information		Y		
C-TRAMPER		Telematic	Telematic (RT5)			Read Fault Code		Y		

CITROËN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function reasons	Add (Y/N)	Verification (Y/N)	Remarks
C-TRAMPHÉ		Telematic	Telematic (RTS)			Erase Fault Code		Y		
C-TRAMPHÉ		Telematic	Telematic (RTS)			Live Data		Y		
C-TRAMPHÉ		Telematic	Telematic (RTS)			Actuation Test		Y		
C-TRAMPHÉ		Telematic	Telematic (RTS)			Special Function	Function test	Y		
C-TRAMPHÉ		Telematic	Telematic (RTS)			Special Function	Configuration	Y		
C-TRAMPHÉ		Telematic	Telematic (RTS)			Special Function	Emergency battery / Change battery	Y		
C-TRAMPHÉ		Trailer relay unit				Read ECU Information		Y		
C-TRAMPHÉ		Trailer relay unit				Read Fault Code		Y		
C-TRAMPHÉ		Trailer relay unit				Erase Fault Code		Y		
C-TRAMPHÉ		Trailer relay unit				Live Data		Y		
C-TRAMPHÉ		Trailer relay unit				Actuation Test		Y		
C-TRAMPHÉ		Engine relay unit				Read ECU Information		Y		
C-TRAMPHÉ		Engine relay unit				Read Fault Code		Y		
C-TRAMPHÉ		Engine relay unit				Erase Fault Code		Y		
C-TRAMPHÉ		Engine relay unit				Live Data		Y		
C-TRAMPHÉ		Engine relay unit				Actuation Test		Y		
C-TRAMPHÉ		Power steering				Read ECU Information		Y		
C-TRAMPHÉ		Power steering				Read Fault Code		Y		
C-TRAMPHÉ		Power steering				Erase Fault Code		Y		
C-TRAMPHÉ		Power steering				Live Data		Y		
C-TRAMPHÉ		Power steering				Special Function	Configuration	Y		
C-TRAMPHÉ		Directional headlamps				Read ECU Information		Y		
C-TRAMPHÉ		Directional headlamps				Read Fault Code		Y		
C-TRAMPHÉ		Directional headlamps				Erase Fault Code		Y		
C-TRAMPHÉ		Directional headlamps				Live Data		Y		
C-TRAMPHÉ		Directional headlamps				Actuation Test		Y		
C-TRAMPHÉ		Directional headlamps				Special Function	Configuration	Y		
C-TRAMPHÉ		Directional headlamps				Special Function	Vehicle height sensor programming	Y		
C-TRAMPHÉ		Hands Free Kit				Read ECU Information		Y		
C-TRAMPHÉ		Hands Free Kit				Read Fault Code		Y		
C-TRAMPHÉ		Hands Free Kit				Erase Fault Code		Y		
C-TRAMPHÉ		Hands Free Kit				Live Data		Y		
C-TRAMPHÉ		Hands Free Kit				Actuation Test		Y		
C-TRAMPHÉ		Hands Free Kit				Special Function	Configuration	Y		
C-TRAMPHÉ		Driver's door module				Read ECU Information		Y		
C-TRAMPHÉ		Driver's door module				Read Fault Code		Y		
C-TRAMPHÉ		Driver's door module				Erase Fault Code		Y		
C-TRAMPHÉ		Driver's door module				Live Data		Y		
C-TRAMPHÉ		Driver's door module				Actuation Test		Y		
C-TRAMPHÉ		Passenger's door module				Read ECU Information		Y		
C-TRAMPHÉ		Passenger's door module				Read Fault Code		Y		
C-TRAMPHÉ		Passenger's door module				Erase Fault Code		Y		
C-TRAMPHÉ		Passenger's door module				Live Data		Y		
C-TRAMPHÉ		Passenger's door module				Actuation Test		Y		
C-TRAMPHÉ		Passenger's door module				Special Function	Configuration	Y		
C-TRAMPHÉ		Calibration of the steering wheel angle sensor : C2, C3, C3 pluralis, New Look GS with ESP MGOESP MGO				Special Function	Calibration of the steering wheel angle sensor : C2, C3, C3 pluralis, New	Y		
C-TRAMPHÉ		Calibration of the steering wheel angle sensor : C2, C3, C3 pluralis, New Look GS with ESP MGOESP 8.1				Special Function	Steering wheel angle sensor calibration	Y		
C-CROSSER		Engine ECU / Ignition	Petrol engine	SFZ 4H2 MVEVC EUROM .		Read ECU Information		Y		
C-CROSSER		Engine ECU / Ignition	Petrol engine	SFZ 4H2 MVEVC EUROM .		Read Fault Code		Y		
C-CROSSER		Engine ECU / Ignition	Petrol engine	SFZ 4H2 MVEVC EUROM .		Erase Fault Code		Y		
C-CROSSER		Engine ECU / Ignition	Petrol engine	SFZ 4H2 MVEVC EUROM .		Live Data		Y		
C-CROSSER		Engine ECU / Ignition	Petrol engine	SFZ 4H2 MVEVC EUROM .		Actuation Test		Y		
C-CROSSER		Engine ECU / Ignition	Petrol engine	SFZ 4H2 MVEVC EUROM .		Special Function	Pack Repair	Y		
C-CROSSER		Engine ECU / Ignition	Petrol engine	AFZ 4H1 MVEVC EUROM .		Read ECU Information		Y		
C-CROSSER		Engine ECU / Ignition	Petrol engine	AFZ 4H1 MVEVC EUROM .		Read Fault Code		Y		
C-CROSSER		Engine ECU / Ignition	Petrol engine	AFZ 4H1 MVEVC EUROM .		Erase Fault Code		Y		
C-CROSSER		Engine ECU / Ignition	Petrol engine	AFZ 4H1 MVEVC EUROM .		Live Data		Y		
C-CROSSER		Engine ECU / Ignition	Petrol engine	AFZ 4H1 MVEVC EUROM .		Actuation Test		Y		
C-CROSSER		Engine ECU / Ignition	Petrol engine	AFZ 4H1 MVEVC EUROM .		Special Function	Pack Repair	Y		
C-CROSSER		Engine ECU / Ignition	Petrol engine	SFY 4H2 MVEVC EUROS .		Read ECU Information		Y		
C-CROSSER		Engine ECU / Ignition	Petrol engine	SFY 4H2 MVEVC EUROS .		Read Fault Code		Y		
C-CROSSER		Engine ECU / Ignition	Petrol engine	SFY 4H2 MVEVC EUROS .		Live Data		Y		
C-CROSSER		Engine ECU / Ignition	Petrol engine	SFY 4H2 MVEVC EUROS .		Actuation Test		Y		
C-CROSSER		Engine ECU / Ignition	Petrol engine	SFY 4H2 MVEVC EUROS .		Special Function	Pack Repair	Y		
C-CROSSER		Engine ECU / Ignition	Petrol engine	4HN EDC16CP39 .		Read ECU Information		Y		
C-CROSSER		Engine ECU / Ignition	Diesel engine	4HN EDC16CP39 .		Read Fault Code		Y		
C-CROSSER		Engine ECU / Ignition	Diesel engine	4HN EDC16CP39 .		Erase Fault Code		Y		
C-CROSSER		Engine ECU / Ignition	Diesel engine	4HN EDC16CP39 .		Live Data		Y		
C-CROSSER		Engine ECU / Ignition	Diesel engine	4HN EDC16CP39 .		Actuation Test		Y		
C-CROSSER		Engine ECU / Ignition	Diesel engine	4HN EDC16CP39 .		Special Function	After sales operation (particulate filter and fuel additive)	Y		
C-CROSSER		Engine ECU / Ignition	Diesel engine	4HN EDC16CP39 .		Special Function	Replacement parts	Y		
C-CROSSER		Engine ECU / Ignition	Diesel engine	4HN EDC16CP39 .		Special Function	Learning	Y		
C-CROSSER		Engine ECU / Ignition	Diesel engine	4HR EDC16CP39 EUROS .		Read ECU Information		Y		
C-CROSSER		Engine ECU / Ignition	Diesel engine	4HR EDC16CP39 EUROS .		Read Fault Code		Y		
C-CROSSER		Engine ECU / Ignition	Diesel engine	4HR EDC16CP39 EUROS .		Erase Fault Code		Y		
C-CROSSER		Engine ECU / Ignition	Diesel engine	4HR EDC16CP39 EUROS .		Live Data		Y		
C-CROSSER		Engine ECU / Ignition	Diesel engine	4HR EDC16CP39 EUROS .		Actuation Test		Y		
C-CROSSER		Engine ECU / Ignition	Diesel engine	4HR EDC16CP39 EUROS .		Special Function	After sales operation (particulate filter and fuel additive)	Y		
C-CROSSER		Engine ECU / Ignition	Diesel engine	4HR EDC16CP39 EUROS .		Special Function	Replacement parts	Y		
C-CROSSER		Engine ECU / Ignition	Diesel engine	4HR EDC16CP39 EUROS .		Special Function	Learning	Y		
C-CROSSER		Gearbox	GearboxCT			Read ECU Information		Y		
C-CROSSER		Gearbox	GearboxCT			Read Fault Code		Y		
C-CROSSER		Gearbox	GearboxCT			Erase Fault Code		Y		
C-CROSSER		Gearbox	GearboxCT			Live Data		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
C-CROSSER		Gearbox	GearboxCT			Special Function	Pack Repair	Y		
C-CROSSER		Gearbox	BOITE_GETREG			Read ECU Information		Y		
C-CROSSER		Gearbox	BOITE_GETREG			Read Fault Code		Y		
C-CROSSER		Gearbox	BOITE_GETREG			Erase Fault Code		Y		
C-CROSSER		Gearbox	BOITE_GETREG			Live Data		Y		
C-CROSSER		ABS / Electronic stability program	ABS.			Read ECU Information		Y		
C-CROSSER		ABS / Electronic stability program	ABS.			Read Fault Code		Y		
C-CROSSER		ABS / Electronic stability program	ABS.			Erase Fault Code		Y		
C-CROSSER		ABS / Electronic stability program	ABS.			Live Data		Y		
C-CROSSER		ABS / Electronic stability program	ABS.			Actuation Test		Y		
C-CROSSER		ABS / Electronic stability program	ABS.			Special Function	Pack Repair	Y		
C-CROSSER		ABS / Electronic stability program	ESP.			Read ECU Information		Y		
C-CROSSER		ABS / Electronic stability program	ESP.			Read Fault Code		Y		
C-CROSSER		ABS / Electronic stability program	ESP.			Erase Fault Code		Y		
C-CROSSER		ABS / Electronic stability program	ESP.			Live Data		Y		
C-CROSSER		ABS / Electronic stability program	ESP.			Special Function	Pack Repair	Y		
C-CROSSER		Airbag				Read ECU Information		Y		
C-CROSSER		Airbag				Read Fault Code		Y		
C-CROSSER		Airbag				Erase Fault Code		Y		
C-CROSSER		Airbag				Live Data		Y		
C-CROSSER		Airbag				Actuation Test		Y		
C-CROSSER		BSI				Read ECU Information		Y		
C-CROSSER		BSI				Read Fault Code		Y		
C-CROSSER		BSI				Erase Fault Code		Y		
C-CROSSER		BSI				Live Data		Y		
C-CROSSER		BSI				Special Function	Pack Repair	Y		
C-CROSSER		Rear final drive piloted clutch				Read ECU Information		Y		
C-CROSSER		Rear final drive piloted clutch				Read Fault Code		Y		
C-CROSSER		Rear final drive piloted clutch				Erase Fault Code		Y		
C-CROSSER		Rear final drive piloted clutch				Live Data		Y		
C-CROSSER		Rear final drive piloted clutch				Actuation Test		Y		
C-CROSSER		Steering wheel angle sensor				Read ECU Information		Y		
C-CROSSER		Steering wheel angle sensor				Read Fault Code		Y		
C-CROSSER		Steering wheel angle sensor				Erase Fault Code		Y		
C-CROSSER		Steering wheel angle sensor				Special Function	Pack Repair	Y		
C-CROSSER		Locking and immobiliser control module				Read ECU Information		Y		
C-CROSSER		Locking and immobiliser control module				Read Fault Code		Y		
C-CROSSER		Locking and immobiliser control module				Erase Fault Code		Y		
C-CROSSER		Locking and immobiliser control module				Live Data		Y		
C-CROSSER		Locking and immobiliser control module				Special Function	Configuration	Y		
C-CROSSER		Instrument panel				Read ECU Information		Y		
C-CROSSER		Instrument panel				Read Fault Code		Y		
C-CROSSER		Instrument panel				Erase Fault Code		Y		
C-CROSSER		Instrument panel				Live Data		Y		
C-CROSSER		Instrument panel				Actuation Test		Y		
C-CROSSER		Instrument panel				Special Function	Configuration	Y		
C-CROSSER		Instrument panel				Special Function	Pack Repair	Y		
C-CROSSER		Air conditioning				Read ECU Information		Y		
C-CROSSER		Air conditioning				Read Fault Code		Y		
C-CROSSER		Air conditioning				Erase Fault Code		Y		
C-CROSSER		Air conditioning				Live Data		Y		
C-CROSSER		Air conditioning				Actuation Test		Y		
C-CROSSER		Radio				Read ECU Information		Y		
C-CROSSER		Radio				Read Fault Code		Y		
C-CROSSER		Radio				Erase Fault Code		Y		
C-CROSSER		Radio				Live Data		Y		
C-CROSSER		Radio				Actuation Test		Y		
C-CROSSER		Hands Free Kit				Read ECU Information		Y		
C-CROSSER		Hands Free Kit				Read Fault Code		Y		
C-CROSSER		Hands Free Kit				Erase Fault Code		Y		
C-CROSSER		Hands Free Kit				Live Data		Y		
C-CROSSER		Hands Free Kit				Actuation Test		Y		
C-CROSSER		Navigation				Read ECU Information		Y		
C-CROSSER		Navigation				Read Fault Code		Y		
C-CROSSER		Navigation				Erase Fault Code		Y		
C-CROSSER		Driver's door control panel				Read ECU Information		Y		
C-CROSSER		Driver's door control panel				Read Fault Code		Y		
C-CROSSER		Driver's door control panel				Erase Fault Code		Y		
C-CROSSER		Driver's door control panel				Live Data		Y		
C-CROSSER		Passenger's door switch panel				Read ECU Information		Y		
C-CROSSER		Passenger's door switch panel				Read Fault Code		Y		
C-CROSSER		Passenger's door switch panel				Erase Fault Code		Y		
C-CROSSER		Passenger's door switch panel				Live Data		Y		
C-CROSSER		Headlamp beam corrector				Read ECU Information		Y		
C-CROSSER		Headlamp beam corrector				Read Fault Code		Y		
C-CROSSER		Headlamp beam corrector				Erase Fault Code		Y		
C-CROSSER		Headlamp beam corrector				Live Data		Y		
C-CROSSER		Headlamp beam corrector				Actuation Test		Y		
C-CROSSER		Rear LH door switch panel				Read ECU Information		Y		
C-CROSSER		Rear LH door switch panel				Read Fault Code		Y		
C-CROSSER		Rear LH door switch panel				Erase Fault Code		Y		
C-CROSSER		Rear LH door switch panel				Live Data		Y		
C-CROSSER		Rear RH door switch panel				Read ECU Information		Y		
C-CROSSER		Rear RH door switch panel				Read Fault Code		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function reasons	Add (Y/N)	Verification (Y/N)	Remarks
C-CROSSER		Rear RH door switch panel				Erase Fault Code		Y		
C-CROSSER		Rear RH door switch panel				Live Data		Y		
C-CROSSER		Sun roof				Read ECU Information		Y		
C-CROSSER		Sun roof				Read Fault Code		Y		
C-CROSSER		Sun roof				Erase Fault Code		Y		
C-CROSSER		Sun roof				Live Data		Y		
C-CROSSER		Gear lever (DCT)				Read ECU Information		Y		
C-CROSSER		Gear lever (DCT)				Read Fault Code		Y		
C-CROSSER		Gear lever (DCT)				Erase Fault Code		Y		
C-CROSSER		Gear lever (DCT)				Live Data		Y		
C-CROSSER		Gear lever (DCT)				Actuation Test		Y		
C-CROSSER		Rain and light sensor				Read ECU Information		Y		
C-CROSSER		Rain and light sensor				Read Fault Code		Y		
C-CROSSER		Rain and light sensor				Erase Fault Code		Y		
C-CROSSER		Rain and light sensor				Live Data		Y		
C-CROSSER		Rain and light sensor				Special Function	Replacement parts	Y		
NEMO		Engine ECU / Ignition	Petrol engine	RFV V34P		Read ECU Information		Y		
NEMO		Engine ECU / Ignition	Petrol engine	RFV V34P		Read Fault Code		Y		
NEMO		Engine ECU / Ignition	Petrol engine	RFV V34P		Erase Fault Code		Y		
NEMO		Engine ECU / Ignition	Petrol engine	RFV V34P		Live Data		Y		
NEMO		Engine ECU / Ignition	Petrol engine	RFV V34P		Actuation Test		Y		
NEMO		Engine ECU / Ignition	Petrol engine	RFV V34P		Special Function	Pack Repair	Y		
NEMO		Engine ECU / Ignition	Petrol engine	KPT V34.2		Read ECU Information		Y		
NEMO		Engine ECU / Ignition	Petrol engine	KPT V34.2		Read Fault Code		Y		
NEMO		Engine ECU / Ignition	Petrol engine	KPT V34.2		Erase Fault Code		Y		
NEMO		Engine ECU / Ignition	Petrol engine	KPT V34.2		Live Data		Y		
NEMO		Engine ECU / Ignition	Petrol engine	KPT V34.2		Actuation Test		Y		
NEMO		Engine ECU / Ignition	Petrol engine	KPT V34.2		Special Function	Pack Repair	Y		
NEMO		Gearbox	Gearbox	GearboxVMP_MUP		Read ECU Information		Y		
NEMO		Gearbox	Gearbox	GearboxVMP_MUP		Read Fault Code		Y		
NEMO		Gearbox	Gearbox	GearboxVMP_MUP		Erase Fault Code		Y		
NEMO		Gearbox	Gearbox	GearboxVMP_MUP		Live Data		Y		
NEMO		Gearbox	Gearbox	GearboxVMP_MUP		Actuation Test		Y		
NEMO		Gearbox	Gearbox	GearboxVMP_MUP		Special Function	Pack Repair	Y		
NEMO		Gearbox	Controlled manual gearboxMTA			Read ECU Information		Y		
NEMO		Gearbox	Controlled manual gearboxMTA			Read Fault Code		Y		
NEMO		Gearbox	Controlled manual gearboxMTA			Erase Fault Code		Y		
NEMO		Gearbox	Controlled manual gearboxMTA			Live Data		Y		
NEMO		Gearbox	Controlled manual gearboxMTA			Actuation Test		Y		
NEMO		Gearbox	Controlled manual gearboxMTA			Special Function	Pack Repair	Y		
NEMO		Gearbox	Controlled manual gearboxMTA			Special Function	Configuration	Y		
NEMO		Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	ABS			Read ECU Information		Y		
NEMO		Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	ABS			Read Fault Code		Y		
NEMO		Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	ABS			Erase Fault Code		Y		
NEMO		Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	ABS			Live Data		Y		
NEMO		Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	ABS			Actuation Test		Y		
NEMO		Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	ESP 8.1			Read ECU Information		Y		
NEMO		Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	ESP 8.1			Read Fault Code		Y		
NEMO		Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	ESP 8.1			Erase Fault Code		Y		
NEMO		Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	ESP 8.1			Live Data		Y		
NEMO		Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	ESP 8.1			Actuation Test		Y		
NEMO		Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	ESP 8.1			Special Function	Pack Repair	Y		
NEMO		Built-in Systems Interface				Read ECU Information		Y		
NEMO		Built-in Systems Interface				Read Fault Code		Y		
NEMO		Built-in Systems Interface				Erase Fault Code		Y		
NEMO		Built-in Systems Interface				Live Data		Y		
NEMO		Built-in Systems Interface				Actuation Test		Y		
NEMO		Built-in Systems Interface				Special Function	Pack Repair	Y		
NEMO		Built-in Systems Interface				Special Function	Configuration	Y		
NEMO		Driver's and passenger's airbags				Read ECU Information		Y		
NEMO		Driver's and passenger's airbags				Read Fault Code		Y		
NEMO		Driver's and passenger's airbags				Erase Fault Code		Y		
NEMO		Driver's and passenger's airbags				Live Data		Y		
NEMO		Driver's and passenger's airbags				Actuation Test		Y		
NEMO		Instrument panel				Read ECU Information		Y		
NEMO		Instrument panel				Read Fault Code		Y		
NEMO		Instrument panel				Erase Fault Code		Y		
NEMO		Instrument panel				Live Data		Y		
NEMO		Instrument panel				Actuation Test		Y		
NEMO		Instrument panel				Special Function	Pack Repair	Y		
NEMO		Parking assistance				Read ECU Information		Y		
NEMO		Parking assistance				Read Fault Code		Y		
NEMO		Parking assistance				Erase Fault Code		Y		
NEMO		Parking assistance				Live Data		Y		
NEMO		Parking assistance				Special Function	Pack Repair	Y		
SAXO	16 way central socket	Engine ECU	Petrol engine	1.0L CIV/CDZ BOSCH MA3.1		Read ECU Information		Y		
SAXO	16 way central socket	Engine ECU	Petrol engine	1.0L CIV/CDZ BOSCH MA3.1		Read Fault Code		Y		
SAXO	16 way central socket	Engine ECU	Petrol engine	1.0L CIV/CDZ BOSCH MA3.1		Erase Fault Code		Y		
SAXO	16 way central socket	Engine ECU	Petrol engine	1.0L CIV/CDZ BOSCH MA3.1		Live Data		Y		
SAXO	16 way central socket	Engine ECU	Petrol engine	1.1L HDV/HDZ BOSCH MA3.1		Read ECU Information		Y		
SAXO	16 way central socket	Engine ECU	Petrol engine	1.1L HDV/HDZ BOSCH MA3.1		Read Fault Code		Y		
SAXO	16 way central socket	Engine ECU	Petrol engine	1.1L HDV/HDZ BOSCH MA3.1		Erase Fault Code		Y		
SAXO	16 way central socket	Engine ECU	Petrol engine	1.1L HDV/HDZ BOSCH MA3.1		Live Data		Y		
SAXO	16 way central socket	Engine ECU	Petrol engine	1.1L HDV/HDZ BOSCH MA3.1		Read ECU Information		Y		

CITROËN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for Citroën, NO stands for other users)	Subsystem (YES stands for Citroën, NO stands for other users)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
SAXO	16 way central socket	Engine ECU	Petrol engine	1. H. HFX BOSCH M7.4.4		Read Fault Code		Y		
SAXO	16 way central socket	Engine ECU	Petrol engine	1. H. HFX BOSCH M7.4.4		Erase Fault Code		Y		
SAXO	16 way central socket	Engine ECU	Petrol engine	1. H. HFX BOSCH M7.4.4		Live Data		Y		
SAXO	16 way central socket	Engine ECU	Petrol engine	1. H. HFX BOSCH M7.4.4		Actuation Test		Y		
SAXO	16 way central socket	Engine ECU	Petrol engine	1. H. HFX BOSCH M7.4.4		Special Function	Initialisation of auto-adaptation	Y		
SAXO	16 way central socket	Engine ECU	Petrol engine	1. 4L. KPW SAGEM S2000		Read ECU Information		Y		
SAXO	16 way central socket	Engine ECU	Petrol engine	1. 4L. KPW SAGEM S2000		Read Fault Code		Y		
SAXO	16 way central socket	Engine ECU	Petrol engine	1. 4L. KPW SAGEM S2000		Erase Fault Code		Y		
SAXO	16 way central socket	Engine ECU	Petrol engine	1. 4L. KPW SAGEM S2000		Live Data		Y		
SAXO	16 way central socket	Engine ECU	Petrol engine	1. 4L. KPW SAGEM S2000		Actuation Test		Y		
SAXO	16 way central socket	Engine ECU	Petrol engine	1. 4L. KPW SAGEM S2000		Read ECU Information		Y		
SAXO	16 way central socket	Engine ECU	Petrol engine	1. 4L. KPW SAGEM S2000		Read Fault Code		Y		
SAXO	16 way central socket	Engine ECU	Petrol engine	1. 4L. KPW SAGEM S2000		Erase Fault Code		Y		
SAXO	16 way central socket	Engine ECU	Petrol engine	1. 4L. KPW SAGEM S2000		Live Data		Y		
SAXO	16 way central socket	Engine ECU	Petrol engine	1. 4L. KFX MM1AP		Read Fault Code		Y		
SAXO	16 way central socket	Engine ECU	Petrol engine	1. 4L. KFX MM1AP		Erase Fault Code		Y		
SAXO	16 way central socket	Engine ECU	Petrol engine	1. 4L. KFX BOSCH MP7.3		Read ECU Information		Y		
SAXO	16 way central socket	Engine ECU	Petrol engine	1. 4L. KFX BOSCH MP7.3		Read Fault Code		Y		
SAXO	16 way central socket	Engine ECU	Petrol engine	1. 4L. KFX BOSCH MP7.3		Erase Fault Code		Y		
SAXO	16 way central socket	Engine ECU	Petrol engine	1. 4L. KFX BOSCH MP7.3		Live Data		Y		
SAXO	16 way central socket	Engine ECU	Petrol engine	1. 4L. KFX BOSCH MP7.3		Actuation Test		Y		
SAXO	16 way central socket	Engine ECU	Petrol engine	1. 6L. NFX MM48P		Read ECU Information		Y		
SAXO	16 way central socket	Engine ECU	Petrol engine	1. 6L. NFX MM48P		Read Fault Code		Y		
SAXO	16 way central socket	Engine ECU	Petrol engine	1. 6L. NFX MM48P		Erase Fault Code		Y		
SAXO	16 way central socket	Engine ECU	Petrol engine	1. 6L. NFX MM48P		Live Data		Y		
SAXO	16 way central socket	Engine ECU	Petrol engine	1. 6L. NFX MM48P		Actuation Test		Y		
SAXO	16 way central socket	Engine ECU	Petrol engine	1. 6L. NFX MM48P		Special Function	Initialisation of the autoadaptive values	Y		
SAXO	16 way central socket	Engine ECU	Petrol engine	1. 6L. NFX BOSCH M7.4.4		Read ECU Information		Y		
SAXO	16 way central socket	Engine ECU	Petrol engine	1. 6L. NFX BOSCH M7.4.4		Read Fault Code		Y		
SAXO	16 way central socket	Engine ECU	Petrol engine	1. 6L. NFX BOSCH M7.4.4		Erase Fault Code		Y		
SAXO	16 way central socket	Engine ECU	Petrol engine	1. 6L. NFX BOSCH M7.4.4		Live Data		Y		
SAXO	16 way central socket	Engine ECU	Petrol engine	1. 6L. NFX BOSCH M7.4.4		Actuation Test		Y		
SAXO	16 way central socket	Engine ECU	Petrol engine	1. 6L. NFX BOSCH M7.4.4		Special Function	Initialisation of auto-adaptation	Y		
SAXO	16 way central socket	Engine ECU	Petrol engine	1. 6L. NFX MM1AP		Read Fault Code		Y		
SAXO	16 way central socket	Engine ECU	Petrol engine	1. 6L. NFX MM1AP		Erase Fault Code		Y		
SAXO	16 way central socket	Engine ECU	Petrol engine	1. 6L. NFX BOSCH MFS.2		Read Fault Code		Y		
SAXO	16 way central socket	Engine ECU	Petrol engine	1. 6L. NFX BOSCH MFS.2		Erase Fault Code		Y		
SAXO	16 way central socket	Engine ECU	Petrol engine	1. 6L. NFX BOSCH MFS.2		Live Data		Y		
SAXO	16 way central socket	Engine ECU	Petrol engine	1. 6L. NFX BOSCH MFS.2		Read ECU Information		Y		
SAXO	16 way central socket	Engine ECU	Petrol engine	1. 6L. NFX BOSCH MFS.2		Read Fault Code		Y		
SAXO	16 way central socket	Engine ECU	Petrol engine	1. 6L. NFX BOSCH MFS.2		Erase Fault Code		Y		
SAXO	16 way central socket	Engine ECU	Petrol engine	1. 6L. NFX BOSCH MFS.2		Actuation Test		Y		
SAXO	16 way central socket	Anti-lock brake system				Read Fault Code		Y		
SAXO	16 way central socket	Anti-lock brake system				Erase Fault Code		Y		
SAXO	16 way central socket	Anti-lock brake system				Special Function	Bleeding	Y		
SAXO	16 way central socket	Airbag				Read ECU Information		Y		
SAXO	16 way central socket	Airbag				Read Fault Code		Y		
SAXO	16 way central socket	Airbag				Erase Fault Code		Y		
SAXO	16 way central socket	Electrical vehicle				Read ECU Information		Y		
SAXO	16 way central socket	Electrical vehicle				Read Fault Code		Y		
SAXO	16 way central socket	Electrical vehicle				Erase Fault Code		Y		
SAXO	16 way central socket	Electrical vehicle				Live Data		Y		
SAXO	16 way central socket	Electrical vehicle				Actuation Test		Y		
SAXO	16 way central socket	Additional heating				Read ECU Information		Y		
SAXO	16 way central socket	Additional heating				Read Fault Code		Y		
SAXO	16 way central socket	Additional heating				Erase Fault Code		Y		
SAXO	16 way central socket	Additional heating				Live Data		Y		
SAXO	16 way central socket	Additional heating				Actuation Test		Y		
SAXO	16 way central socket	Transponder				Read ECU Information		Y		
SAXO	16 way central socket	Transponder				Read Fault Code		Y		
SAXO	16 way central socket	Transponder				Erase Fault Code		Y		
SAXO	16 way central socket	Transponder				Live Data		Y		
SAXO	30 way central socket	Engine ECU	Petrol engine	1. 0L. CDV/CDZ BOSCH M33.1		Read ECU Information		Y		
SAXO	30 way central socket	Engine ECU	Petrol engine	1. 0L. CDV/CDZ BOSCH M33.1		Read Fault Code		Y		
SAXO	30 way central socket	Engine ECU	Petrol engine	1. 0L. CDV/CDZ BOSCH M33.1		Erase Fault Code		Y		
SAXO	30 way central socket	Engine ECU	Petrol engine	1. 0L. CDV/CDZ BOSCH M33.1		Live Data		Y		
SAXO	30 way central socket	Engine ECU	Petrol engine	1. 1L. HDV/HDZ BOSCH M33.1		Read ECU Information		Y		
SAXO	30 way central socket	Engine ECU	Petrol engine	1. 1L. HDV/HDZ BOSCH M33.1		Read Fault Code		Y		
SAXO	30 way central socket	Engine ECU	Petrol engine	1. 1L. HDV/HDZ BOSCH M33.1		Erase Fault Code		Y		
SAXO	30 way central socket	Engine ECU	Petrol engine	1. 1L. HDV/HDZ BOSCH M33.1		Live Data		Y		
SAXO	30 way central socket	Engine ECU	Petrol engine	1. 4L. KFX MM1AP		Read Fault Code		Y		
SAXO	30 way central socket	Engine ECU	Petrol engine	1. 4L. KFX MM1AP		Erase Fault Code		Y		
SAXO	30 way central socket	Engine ECU	Petrol engine	1. 6L. NFX MM1AP		Read Fault Code		Y		
SAXO	30 way central socket	Engine ECU	Petrol engine	1. 6L. NFX MM1AP		Erase Fault Code		Y		
SAXO	30 way central socket	Engine ECU	Petrol engine	1. 6L. NFX BOSCH MFS.2		Read Fault Code		Y		
SAXO	30 way central socket	Engine ECU	Petrol engine	1. 6L. NFX BOSCH MFS.2		Erase Fault Code		Y		
SAXO	30 way central socket	Engine ECU	Petrol engine	1. 6L. NFX BOSCH MFS.2		Live Data		Y		
SAXO	30 way central socket	Anti-lock brake system				Read Fault Code		Y		
SAXO	30 way central socket	Anti-lock brake system				Erase Fault Code		Y		
SAXO	30 way central socket	Airbag				Read Fault Code		Y		
SAXO	30 way central socket	Airbag				Erase Fault Code		Y		
SAXO	30 way central socket	Electrical vehicle				Read ECU Information		Y		
SAXO	30 way central socket	Electrical vehicle				Read Fault Code		Y		
SAXO	30 way central socket	Electrical vehicle				Erase Fault Code		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
SAXO	30 way central socket	Electrical vehicle				Live Data		Y		
SAXO	30 way central socket	Electrical vehicle				Actuation Test		Y		
SAXO	30 way central socket	Coded anti-theft device				Read ECU Information		Y		
SAXO	30 way central socket	Coded anti-theft device				Read Fault Code		Y		
SAXO	30 way central socket	Coded anti-theft device				Erase Fault Code		Y		
SAXO	30 way central socket	Coded anti-theft device				Live Data		Y		
ZX		Engine	Diesel engine	1.8L LFY BOSCH MFS.2		Read Fault Code		Y		
ZX		Engine	Diesel engine	1.8L LFY BOSCH MFS.2		Erase Fault Code		Y		
ZX		Engine	Diesel engine	1.8L LFY BOSCH MFS.2		Live Data		Y		
ZX		Engine	Diesel engine	1.9L DRE BOSCH MAS.1		Read ECU Information		Y		
ZX		Engine	Diesel engine	1.9L DRE BOSCH MAS.1		Read Fault Code		Y		
ZX		Engine	Diesel engine	1.9L DRE BOSCH MAS.1		Erase Fault Code		Y		
ZX		Engine	Diesel engine	1.9L DRE BOSCH MAS.1		Live Data		Y		
ZX		Engine	Diesel engine	2.0L BPS MUIAP		Read Fault Code		Y		
ZX		Engine	Diesel engine	2.0L BPS MUIAP		Erase Fault Code		Y		
ZX		Engine	Diesel engine	1.6L BFX SAGEM COMGJ		Read ECU Information		Y		
ZX		Engine	Diesel engine	1.6L BFX SAGEM COMGJ		Read Fault Code		Y		
ZX		Engine	Diesel engine	1.6L BFX SAGEM COMGJ		Erase Fault Code		Y		
ZX		Driving assistance	ABS BOSCH 5			Read ECU Information		Y		
ZX		Driving assistance	ABS BOSCH 5			Read Fault Code		Y		
ZX		Driving assistance	ABS BOSCH 5			Erase Fault Code		Y		
ZX		Driving assistance	ABS BOSCH 5			Live Data		Y		
EVASION		Engine ECU	Petrol engine	2.0L BFN MM8RP		Read ECU Information		Y		
EVASION		Engine ECU	Petrol engine	2.0L BFN MM8RP		Read Fault Code		Y		
EVASION		Engine ECU	Petrol engine	2.0L BFN MM8RP		Erase Fault Code		Y		
EVASION		Engine ECU	Petrol engine	2.0L BFN MM8RP		Live Data		Y		
EVASION		Engine ECU	Petrol engine	2.0L BFN MM8RP		Actuation Test		Y		
EVASION		Engine ECU	Petrol engine	2.0L BFN MM8RP		Special Function	Initialisation of the autoadaptive values	Y		
EVASION		Engine ECU	Petrol engine	2.0L BFX BOSCH MFS.2		Read Fault Code		Y		
EVASION		Engine ECU	Petrol engine	2.0L BFX BOSCH MFS.2		Erase Fault Code		Y		
EVASION		Engine ECU	Petrol engine	2.0L BFX BOSCH MFS.2		Read ECU Information		Y		
EVASION		Engine ECU	Petrol engine	2.0L BFX BOSCH MFS.2		Read Fault Code		Y		
EVASION		Engine ECU	Petrol engine	2.0L BFX BOSCH MFS.2		Erase Fault Code		Y		
EVASION		Engine ECU	Petrol engine	2.0L BFX BOSCH MFS.2		Live Data		Y		
EVASION		Engine ECU	Petrol engine	2.0L BFX BOSCH MFS.2		Actuation Test		Y		
EVASION		Engine ECU	Diesel engine	1.9 L DRX BOSCH AS3-VP20		Read Fault Code		Y		
EVASION		Engine ECU	Diesel engine	1.9 L DRX BOSCH AS3-VP20		Erase Fault Code		Y		
EVASION		Engine ECU	Diesel engine	1.9 L DRX BOSCH AS3-VP20		Live Data		Y		
EVASION		Engine ECU	Diesel engine	2.1 L PRC LUCAS EPIC		Read ECU Information		Y		
EVASION		Engine ECU	Diesel engine	2.1 L PRC LUCAS EPIC		Read Fault Code		Y		
EVASION		Engine ECU	Diesel engine	2.1 L PRC LUCAS EPIC		Erase Fault Code		Y		
EVASION		Engine ECU	Diesel engine	2.1 L PRC LUCAS EPIC		Live Data		Y		
EVASION		Engine ECU	Diesel engine	2.0 L RHZ BOSCH EDC13C2		Read ECU Information		Y		
EVASION		Engine ECU	Diesel engine	2.0 L RHZ BOSCH EDC13C2		Live Data		Y		
EVASION		Engine ECU	Diesel engine	2.0 L RHZ BOSCH EDC13C2		Actuation Test		Y		
EVASION		Engine ECU	Diesel engine	2.0 L RHZ BOSCH EDC13C2		Read ECU Information		Y		
EVASION		Engine ECU	Diesel engine	2.0 L RHZ BOSCH EDC13C2		Read Fault Code		Y		
EVASION		Engine ECU	Diesel engine	2.0 L RHZ BOSCH EDC13C2		Erase Fault Code		Y		
EVASION		Engine ECU	Diesel engine	2.0 L RHZ BOSCH EDC13C2		Live Data		Y		
EVASION		Engine ECU	Diesel engine	2.0 L RHZ BOSCH EDC13C2		Read ECU Information		Y		
EVASION		Engine ECU	Diesel engine	2.0 L RHZ BOSCH EDC13C2		Live Data		Y		
EVASION		Engine ECU	Diesel engine	2.0 L RHZ BOSCH EDC13C2		Actuation Test		Y		
EVASION		Anti-lock brake system				Read ECU Information		Y		
EVASION		Anti-lock brake system				Read Fault Code		Y		
EVASION		Anti-lock brake system				Erase Fault Code		Y		
EVASION		Anti-lock brake system				Live Data		Y		
EVASION		Anti-lock brake system				Special Function	Bleeding	Y		
EVASION		Gearbox ECU	Auto gearbox AL4.1			Read ECU Information		Y		
EVASION		Gearbox ECU	Auto gearbox AL4.1			Read Fault Code		Y		
EVASION		Gearbox ECU	Auto gearbox AL4.1			Erase Fault Code		Y		
EVASION		Gearbox ECU	Auto gearbox AL4.1			Live Data		Y		
EVASION		Gearbox ECU	Auto gearbox AL4.1			Actuation Test		Y		
EVASION		Gearbox ECU	Auto gearbox AL4.1			Special Function	Initialisation of auto-adaptation	Y		
EVASION		Gearbox ECU	Auto gearbox AL4.2			Read ECU Information		Y		
EVASION		Gearbox ECU	Auto gearbox AL4.2			Read Fault Code		Y		
EVASION		Gearbox ECU	Auto gearbox AL4.2			Erase Fault Code		Y		
EVASION		Gearbox ECU	Auto gearbox AL4.2			Live Data		Y		
EVASION		Gearbox ECU	Auto gearbox AL4.2			Actuation Test		Y		
EVASION		Gearbox ECU	Auto gearbox AL4.2			Special Function	Pedal initialisation	Y		
EVASION		Gearbox ECU	Auto gearbox AL4.2			Special Function	Initialisation of auto-adaptation	Y		
EVASION		Gearbox ECU	Auto gearbox AL4.2			Special Function	Oil wear counter	Y		
EVASION		Gearbox ECU	Auto gearbox AL4.3			Read ECU Information		Y		
EVASION		Gearbox ECU	Auto gearbox AL4.3			Read Fault Code		Y		
EVASION		Gearbox ECU	Auto gearbox AL4.3			Erase Fault Code		Y		
EVASION		Gearbox ECU	Auto gearbox AL4.3			Live Data		Y		
EVASION		Gearbox ECU	Auto gearbox AL4.3			Actuation Test		Y		
EVASION		Gearbox ECU	Auto gearbox AL4.3			Special Function	Pedal initialisation	Y		
EVASION		Gearbox ECU	Auto gearbox AL4.3			Special Function	Initialisation of auto-adaptation	Y		
EVASION		Gearbox ECU	Auto gearbox AL4.3			Special Function	Oil wear counter	Y		
EVASION		Airbag	Communication: CAN mte			Read ECU Information		Y		
EVASION		Airbag	Communication: CAN mte			Read Fault Code		Y		
EVASION		Airbag	Communication: CAN mte			Erase Fault Code		Y		
EVASION		Additional heating				Read ECU Information		Y		
EVASION		Additional heating				Read Fault Code		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
EVASION		Additional heating				Erase Fault Code		Y		
EVASION		Additional heating				Live Data		Y		
EVASION		Additional heating				Actuation Test		Y		
EVASION		Coded anti-theft device				Read ECU Information		Y		
EVASION		Coded anti-theft device				Read Fault Code		Y		
EVASION		Coded anti-theft device				Erase Fault Code		Y		
EVASION		Coded anti-theft device				Live Data		Y		
EVASION		CHI				Read ECU Information		Y		
EVASION		CHI				Live Data		Y		
SPACEFORER		Built-in Systems Interface				Read ECU Information		Y		
SPACEFORER		Built-in Systems Interface				Read Fault Code		Y		
SPACEFORER		Built-in Systems Interface				Erase Fault Code		Y		
SPACEFORER		Built-in Systems Interface				Special Function	Maintenance-BSI operating mode	Y		
SPACEFORER		Built-in Systems Interface				Special Function	Pack repair	Y		
SPACEFORER		Engine ECU	DOM6.2			Read ECU Information		Y		
SPACEFORER		Engine ECU	DOM6.2			Read Fault Code		Y		
SPACEFORER		Engine ECU	DOM6.2			Erase Fault Code		Y		
SPACEFORER		Engine ECU	DOM6.2			Live Data		Y		
SPACEFORER		Engine ECU	DOM6.2			Actuation Test		Y		
SPACEFORER		Engine ECU	DOM6.2			Special Function	Pack repair	Y		
SPACEFORER		Engine ECU	EDC17000			Read ECU Information		Y		
SPACEFORER		Engine ECU	EDC17000			Read Fault Code		Y		
SPACEFORER		Engine ECU	EDC17000			Erase Fault Code		Y		
SPACEFORER		Engine ECU	EDC17000			Live Data		Y		
SPACEFORER		Engine ECU	EDC17000			Actuation Test		Y		
SPACEFORER		Engine ECU	EDC17000			Special Function	Pack repair	Y		
SPACEFORER		Engine ECU	EDC17C10_B82	98B - DV80U		Read ECU Information		Y		
SPACEFORER		Engine ECU	EDC17C10_B82	98B - DV80U		Read Fault Code		Y		
SPACEFORER		Engine ECU	EDC17C10_B82	98B - DV80U		Erase Fault Code		Y		
SPACEFORER		Engine ECU	EDC17C10_B82	98B - DV80U		Live Data		Y		
SPACEFORER		Engine ECU	EDC17C10_B82	98B - DV80U		Actuation Test		Y		
SPACEFORER		Engine ECU	EDC17C10_B82	98B - DV80U		Special Function	Pack repair	Y		
SPACEFORER		Engine ECU	EDC17C10_B82	98F - DV80TED - 89 CY		Read ECU Information		Y		
SPACEFORER		Engine ECU	EDC17C10_B82	98F - DV80TED - 89 CY		Read Fault Code		Y		
SPACEFORER		Engine ECU	EDC17C10_B82	98F - DV80TED - 89 CY		Erase Fault Code		Y		
SPACEFORER		Engine ECU	EDC17C10_B82	98F - DV80TED - 89 CY		Live Data		Y		
SPACEFORER		Engine ECU	EDC17C10_B82	98F - DV80TED - 89 CY		Actuation Test		Y		
SPACEFORER		Engine ECU	EDC17C10_B82	98F - DV80TED - 89 CY		Special Function	Pack repair	Y		
SPACEFORER		Engine ECU	OMU_B0G71			Read ECU Information		Y		
SPACEFORER		Engine ECU	OMU_B0G71			Read Fault Code		Y		
SPACEFORER		Engine ECU	OMU_B0G71			Erase Fault Code		Y		
SPACEFORER		Engine ECU	OMU_B0G71			Live Data		Y		
SPACEFORER		Engine ECU	OMU_B0G71			Actuation Test		Y		
SPACEFORER		Engine ECU	OMU_B0G71			Special Function	Pack repair	Y		
SPACEFORER		Engine ECU	OMU_MU1CS003			Read ECU Information		Y		
SPACEFORER		Engine ECU	OMU_MU1CS003			Read Fault Code		Y		
SPACEFORER		Engine ECU	OMU_MU1CS003			Erase Fault Code		Y		
SPACEFORER		Engine ECU	OMU_MU1CS003			Live Data		Y		
SPACEFORER		Engine ECU	OMU_MU1CS003			Special Function	Pack repair	Y		
SPACEFORER		Diesel additive pump				Read ECU Information		Y		
SPACEFORER		Diesel additive pump				Read Fault Code		Y		
SPACEFORER		Diesel additive pump				Erase Fault Code		Y		
SPACEFORER		Diesel additive pump				Live Data		Y		
SPACEFORER		Diesel additive pump				Actuation Test		Y		
SPACEFORER		Voltage retaining device	DMTC			Read ECU Information		Y		
SPACEFORER		Voltage retaining device	DMTR_DTC3B			Read ECU Information		Y		
SPACEFORER		Voltage retaining device	DMTR_DTC3B			Read Fault Code		Y		
SPACEFORER		Voltage retaining device	DMTR_DTC3B			Erase Fault Code		Y		
SPACEFORER		Automatic gearbox or controlled manual gearbox	EVA_A3N8			Read ECU Information		Y		
SPACEFORER		Automatic gearbox or controlled manual gearbox	EVA_A3N8			Read Fault Code		Y		
SPACEFORER		Automatic gearbox or controlled manual gearbox	EVA_A3N8			Erase Fault Code		Y		
SPACEFORER		Automatic gearbox or controlled manual gearbox	EVA_A3N8			Live Data		Y		
SPACEFORER		Automatic gearbox or controlled manual gearbox	EVA_A86_A16_ID5			Read ECU Information		Y		
SPACEFORER		Automatic gearbox or controlled manual gearbox	EVA_A86_A16_ID5			Read Fault Code		Y		
SPACEFORER		Automatic gearbox or controlled manual gearbox	EVA_A86_A16_ID5			Erase Fault Code		Y		
SPACEFORER		Automatic gearbox or controlled manual gearbox	EVA_A86_A16_ID5			Live Data		Y		
SPACEFORER		Automatic gearbox or controlled manual gearbox	EVA_A86_A16_ID5			Actuation Test		Y		
SPACEFORER		Automatic gearbox or controlled manual gearbox	BVWP_MCP_ID5			Read ECU Information		Y		
SPACEFORER		Automatic gearbox or controlled manual gearbox	BVWP_MCP_ID5			Read Fault Code		Y		
SPACEFORER		Automatic gearbox or controlled manual gearbox	BVWP_MCP_ID5			Erase Fault Code		Y		
SPACEFORER		Automatic gearbox or controlled manual gearbox	BVWP_MCP_ID5			Live Data		Y		
SPACEFORER		Automatic gearbox or controlled manual gearbox	BVWP_MCP_ID5			Actuation Test		Y		
SPACEFORER		Automatic gearbox or controlled manual gearbox	BVWP_MCP_ID5			Special Function	Pack repair	Y		
SPACEFORER		Power steering				Read ECU Information		Y		
SPACEFORER		Power steering				Read Fault Code		Y		
SPACEFORER		Power steering				Erase Fault Code		Y		
SPACEFORER		Power steering				Live Data		Y		
SPACEFORER		Power steering				Actuation Test		Y		
SPACEFORER		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)				Read ECU Information		Y		
SPACEFORER		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)				Read Fault Code		Y		
SPACEFORER		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)				Erase Fault Code		Y		
SPACEFORER		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)				Live Data		Y		
SPACEFORER		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)				Actuation Test		Y		
SPACEFORER		Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)				Special Function	Pack repair	Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Models	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification on (Y/N)	Remarks
SPACEFORER		Engine relay unit				Read ECU Information		Y		
SPACEFORER		Engine relay unit				Read Fault Code		Y		
SPACEFORER		Engine relay unit				Erase Fault Code		Y		
SPACEFORER		Trailer relay unit				Read ECU Information		Y		
SPACEFORER		Trailer relay unit				Read Fault Code		Y		
SPACEFORER		Trailer relay unit				Erase Fault Code		Y		
SPACEFORER		Trailer relay unit				Live Data		Y		
SPACEFORER		Trailer relay unit				Actuation Test		Y		
SPACEFORER		Bodywork conversion unit				Read ECU Information		Y		
SPACEFORER		Bodywork conversion unit				Read Fault Code		Y		
SPACEFORER		Bodywork conversion unit				Erase Fault Code		Y		
SPACEFORER		Bodywork conversion unit				Live Data		Y		
SPACEFORER		Battery charge status unit				Read ECU Information		Y		
SPACEFORER		Battery charge status unit				Read Fault Code		Y		
SPACEFORER		Battery charge status unit				Erase Fault Code		Y		
SPACEFORER		Battery charge status unit				Live Data		Y		
SPACEFORER		Supply protection and management unit				Read ECU Information		Y		
SPACEFORER		Supply protection and management unit				Read Fault Code		Y		
SPACEFORER		Supply protection and management unit				Erase Fault Code		Y		
SPACEFORER		Supply protection and management unit				Live Data		Y		
SPACEFORER		Electric steering lock				Read ECU Information		Y		
SPACEFORER		Electric steering lock				Read Fault Code		Y		
SPACEFORER		Electric steering lock				Erase Fault Code		Y		
SPACEFORER		Electric steering lock				Live Data		Y		
SPACEFORER		Instrument panel				Read ECU Information		Y		
SPACEFORER		Instrument panel				Read Fault Code		Y		
SPACEFORER		Instrument panel				Erase Fault Code		Y		
SPACEFORER		Instrument panel				Live Data		Y		
SPACEFORER		Instrument panel				Actuation Test		Y		
SPACEFORER		Head-Up Display				Read ECU Information		Y		
SPACEFORER		Head-Up Display				Read Fault Code		Y		
SPACEFORER		Head-Up Display				Erase Fault Code		Y		
SPACEFORER		Head-Up Display				Live Data		Y		
SPACEFORER		Head-Up Display				Actuation Test		Y		
SPACEFORER		Controls under the steering wheel				Read ECU Information		Y		
SPACEFORER		Controls under the steering wheel				Read Fault Code		Y		
SPACEFORER		Controls under the steering wheel				Erase Fault Code		Y		
SPACEFORER		Controls under the steering wheel				Live Data		Y		
SPACEFORER		Controls under the steering wheel				Actuation Test		Y		
SPACEFORER		Controls under the steering wheel				Special Function	Pack repair	Y		
SPACEFORER		Control on the steering wheel / integral controls steering wheel				Read ECU Information		Y		
SPACEFORER		Control on the steering wheel / integral controls steering wheel				Read Fault Code		Y		
SPACEFORER		Control on the steering wheel / integral controls steering wheel				Erase Fault Code		Y		
SPACEFORER		Control on the steering wheel / integral controls steering wheel				Live Data		Y		
SPACEFORER		Traction control mode selector				Read ECU Information		Y		
SPACEFORER		Traction control mode selector				Read Fault Code		Y		
SPACEFORER		Traction control mode selector				Live Data		Y		
SPACEFORER		Traction control mode selector				Actuation Test		Y		
SPACEFORER		Automatic gearbox electric control				Read ECU Information		Y		
SPACEFORER		Automatic gearbox electric control				Read Fault Code		Y		
SPACEFORER		Automatic gearbox electric control				Erase Fault Code		Y		
SPACEFORER		Automatic gearbox electric control				Live Data		Y		
SPACEFORER		Automatic gearbox electric control				Actuation Test		Y		
SPACEFORER		Multiplexed control panel				Read ECU Information		Y		
SPACEFORER		Multiplexed control panel				Read Fault Code		Y		
SPACEFORER		Multiplexed control panel				Erase Fault Code		Y		
SPACEFORER		Multiplexed control panel				Live Data		Y		
SPACEFORER		Multiplexed control panel				Actuation Test		Y		
SPACEFORER		Air bags and pre-tensioners control unit				Read ECU Information		Y		
SPACEFORER		Air bags and pre-tensioners control unit				Read Fault Code		Y		
SPACEFORER		Air bags and pre-tensioners control unit				Erase Fault Code		Y		
SPACEFORER		Air bags and pre-tensioners control unit				Live Data		Y		
SPACEFORER		Seat belt not fastened warning lights unit				Read ECU Information		Y		
SPACEFORER		Seat belt not fastened warning lights unit				Actuation Test		Y		
SPACEFORER		Rain and brightness sensor				Read ECU Information		Y		
SPACEFORER		Rain and brightness sensor				Read Fault Code		Y		
SPACEFORER		Rain and brightness sensor				Erase Fault Code		Y		
SPACEFORER		Rain and brightness sensor				Live Data		Y		
SPACEFORER		Multifunction video camera(CMF)				Read ECU Information		Y		
SPACEFORER		Multifunction video camera(CMF)				Read Fault Code		Y		
SPACEFORER		Multifunction video camera(CMF)				Erase Fault Code		Y		
SPACEFORER		Multifunction video camera(CMF)				Live Data		Y		
SPACEFORER		Multifunction video camera(CMF)				Actuation Test		Y		
SPACEFORER		Vehicle Distance Assistance				Read ECU Information		Y		
SPACEFORER		Vehicle Distance Assistance				Read Fault Code		Y		
SPACEFORER		Vehicle Distance Assistance				Erase Fault Code		Y		
SPACEFORER		Vehicle Distance Assistance				Live Data		Y		
SPACEFORER		Vehicle Distance Assistance				Actuation Test		Y		
SPACEFORER		Parking assistance				Read ECU Information		Y		
SPACEFORER		Parking assistance				Read Fault Code		Y		
SPACEFORER		Parking assistance				Erase Fault Code		Y		
SPACEFORER		Parking assistance				Live Data		Y		
SPACEFORER		Parking assistance				Actuation Test		Y		
SPACEFORER		Multifunction screen		EMF A, B, G		Read ECU Information		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function sub-items	Add (Y/N)	Verification (Y/N)	Remarks
SPACEFORER		Multifunction screen	EMF_A_IDS			Read Fault Code		Y		
SPACEFORER		Multifunction screen	EMF_A_IDS			Erase Fault Code		Y		
SPACEFORER		Multifunction screen	EMF_A_IDS			Actuation Test		Y		
SPACEFORER		Multifunction screen	EMF_C_IDS			Read ECU Information		Y		
SPACEFORER		Multifunction screen	EMF_C_IDS			Read Fault Code		Y		
SPACEFORER		Multifunction screen	EMF_C_IDS			Erase Fault Code		Y		
SPACEFORER		Multifunction screen	EMF_C_IDS			Live Data		Y		
SPACEFORER		Multifunction screen	EMF_C_IDS			Actuation Test		Y		
SPACEFORER		Touch screen				Read ECU Information		Y		
SPACEFORER		Touch screen				Read Fault Code		Y		
SPACEFORER		Touch screen				Erase Fault Code		Y		
SPACEFORER		Touch screen				Live Data		Y		
SPACEFORER		Touch screen				Actuation Test		Y		
SPACEFORER		Audio-navigation/telematic unit/connected audio system	NAC			Read ECU Information		Y		
SPACEFORER		Audio-navigation/telematic unit/connected audio system	NAC			Read Fault Code		Y		
SPACEFORER		Audio-navigation/telematic unit/connected audio system	NAC			Erase Fault Code		Y		
SPACEFORER		Audio-navigation/telematic unit/connected audio system	NAC			Live Data		Y		
SPACEFORER		Audio-navigation/telematic unit/connected audio system	NAC			Actuation Test		Y		
SPACEFORER		Audio-navigation/telematic unit/connected audio system	BCC			Read ECU Information		Y		
SPACEFORER		Audio-navigation/telematic unit/connected audio system	BCC			Read Fault Code		Y		
SPACEFORER		Audio-navigation/telematic unit/connected audio system	BCC			Erase Fault Code		Y		
SPACEFORER		Audio-navigation/telematic unit/connected audio system	BCC			Live Data		Y		
SPACEFORER		Audio-navigation/telematic unit/connected audio system	BCC			Actuation Test		Y		
SPACEFORER		Radio				Read ECU Information		Y		
SPACEFORER		Radio				Read Fault Code		Y		
SPACEFORER		Radio				Erase Fault Code		Y		
SPACEFORER		Radio				Live Data		Y		
SPACEFORER		Radio				Actuation Test		Y		
SPACEFORER		Control of the telematic unit				Read ECU Information		Y		
SPACEFORER		Control of the telematic unit				Read Fault Code		Y		
SPACEFORER		Service module / Independent telematic unit	BTA_2			Read ECU Information		Y		
SPACEFORER		Service module / Independent telematic unit	BTA_2			Read Fault Code		Y		
SPACEFORER		Service module / Independent telematic unit	BTA_2			Erase Fault Code		Y		
SPACEFORER		Service module / Independent telematic unit	BTA_2			Live Data		Y		
SPACEFORER		Service module / Independent telematic unit	BTA_2			Actuation Test		Y		
SPACEFORER		Service module / Independent telematic unit	BTA_3R			Read ECU Information		Y		
SPACEFORER		Service module / Independent telematic unit	BTA_3R			Read Fault Code		Y		
SPACEFORER		Service module / Independent telematic unit	BTA_3R			Erase Fault Code		Y		
SPACEFORER		Service module / Independent telematic unit	BTA_3R			Live Data		Y		
SPACEFORER		Service module / Independent telematic unit	BTA_3R			Actuation Test		Y		
SPACEFORER		Service module / Independent telematic unit	BTA_3S			Read ECU Information		Y		
SPACEFORER		Service module / Independent telematic unit	BTA_3S			Read Fault Code		Y		
SPACEFORER		Service module / Independent telematic unit	BTA_3S			Erase Fault Code		Y		
SPACEFORER		Service module / Independent telematic unit	BTA_3S			Live Data		Y		
SPACEFORER		Service module / Independent telematic unit	BTA_3S			Actuation Test		Y		
SPACEFORER		Anti-theft alarm				Read ECU Information		Y		
SPACEFORER		Anti-theft alarm				Read Fault Code		Y		
SPACEFORER		Anti-theft alarm				Erase Fault Code		Y		
SPACEFORER		Anti-theft alarm				Live Data		Y		
SPACEFORER		Anti-theft alarm				Actuation Test		Y		
SPACEFORER		Intrusion alarm siren				Read ECU Information		Y		
SPACEFORER		Intrusion alarm siren				Read Fault Code		Y		
SPACEFORER		Intrusion alarm siren				Erase Fault Code		Y		
SPACEFORER		Intrusion alarm siren				Live Data		Y		
SPACEFORER		Intrusion alarm siren				Actuation Test		Y		
SPACEFORER		Left-hand sliding side door ECU				Read ECU Information		Y		
SPACEFORER		Left-hand sliding side door ECU				Read Fault Code		Y		
SPACEFORER		Left-hand sliding side door ECU				Erase Fault Code		Y		
SPACEFORER		Left-hand sliding side door ECU				Live Data		Y		
SPACEFORER		Left-hand sliding side door ECU				Actuation Test		Y		
SPACEFORER		Right-hand sliding side door ECU				Read ECU Information		Y		
SPACEFORER		Right-hand sliding side door ECU				Read Fault Code		Y		
SPACEFORER		Right-hand sliding side door ECU				Erase Fault Code		Y		
SPACEFORER		Right-hand sliding side door ECU				Live Data		Y		
SPACEFORER		Right-hand sliding side door ECU				Actuation Test		Y		
SPACEFORER		Hands full access ECU, left				Read ECU Information		Y		
SPACEFORER		Hands full access ECU, left				Read Fault Code		Y		
SPACEFORER		Hands full access ECU, right-hand side or rear				Read ECU Information		Y		
SPACEFORER		Hands full access ECU, right-hand side or rear				Read Fault Code		Y		
SPACEFORER		Air conditioning				Read ECU Information		Y		
SPACEFORER		Air conditioning				Read Fault Code		Y		
SPACEFORER		Air conditioning				Erase Fault Code		Y		
SPACEFORER		Air conditioning				Live Data		Y		
SPACEFORER		Air conditioning				Actuation Test		Y		
SPACEFORER		Rear air conditioning ECU				Read ECU Information		Y		
SPACEFORER		Rear air conditioning ECU				Read Fault Code		Y		
SPACEFORER		Rear air conditioning ECU				Erase Fault Code		Y		
SPACEFORER		Rear air conditioning ECU				Live Data		Y		
SPACEFORER		Rear air conditioning ECU				Actuation Test		Y		
SPACEFORER		Rear air conditioning control panel				Read ECU Information		Y		
SPACEFORER		Additional heating				Read ECU Information		Y		
SPACEFORER		Additional heating				Read Fault Code		Y		
SPACEFORER		Additional heating				Erase Fault Code		Y		
SPACEFORER		Additional heating				Live Data		Y		

CITROEN_V10.33 Model function table

Note: New features are marked in red in color compared to the previous version.

Model	Year classification	System	Subsystem or system type (YES stands for China, NO stands for other areas)	Subsystem (YES stands for China, NO stands for other areas)	Subsystem or system type	Function type	Special function subname	Add (Y/N)	Verification (Y/N)	Remarks
SPACEFORCE		Additional heating				Actuation Text		Y		