

SUPERNOVA	INJECTION	EMS 3125 INJECTION	Erase Fault Code	
SUPERNOVA	INJECTION	EMS 3125 INJECTION	Read ECU Information	
SUPERNOVA	INJECTION	EMS 3125 INJECTION	Live Data	
SUPERNOVA	INJECTION	EMS 3125 INJECTION	Read Configuration	
SUPERNOVA	INJECTION	EMS 3125 INJECTION	Actuation Test	
SUPERNOVA	CONNECTION UNIT	CONNECTION UNIT	Read Fault Code	
SUPERNOVA	CONNECTION UNIT	CONNECTION UNIT	Erase Fault Code	
SUPERNOVA	CONNECTION UNIT	CONNECTION UNIT	Read ECU Information	
SUPERNOVA	CONNECTION UNIT	CONNECTION UNIT	Live Data	
SUPERNOVA	CONNECTION UNIT	CONNECTION UNIT	Read Configuration	
SUPERNOVA	CONNECTION UNIT	CONNECTION UNIT	Actuation Test	
SUPERNOVA	ENGINE IMMOBILISER	ENGINE IMMOBILISER	Read Fault Code	
SUPERNOVA	ENGINE IMMOBILISER	ENGINE IMMOBILISER	Erase Fault Code	
SUPERNOVA	ENGINE IMMOBILISER	ENGINE IMMOBILISER	Read ECU Information	
SUPERNOVA	ENGINE IMMOBILISER	ENGINE IMMOBILISER	Live Data	
SUPERNOVA	ENGINE IMMOBILISER	ENGINE IMMOBILISER	Read Configuration	
SUPERNOVA	ENGINE IMMOBILISER	ENGINE IMMOBILISER	Actuation Test	
SOLENZA	INJECTION	EMS 3125 INJECTION	Read Fault Code	
SOLENZA	INJECTION	EMS 3125 INJECTION	Erase Fault Code	
SOLENZA	INJECTION	EMS 3125 INJECTION	Read ECU Information	
SOLENZA	INJECTION	EMS 3125 INJECTION	Live Data	
SOLENZA	INJECTION	EMS 3125 INJECTION	Read Configuration	
SOLENZA	INJECTION	EMS 3125 INJECTION	Actuation Test	
SOLENZA	AIRBAG / PRETENSIONERS	AIRBAG / PRETENSIONERS	Read Fault Code	
SOLENZA	AIRBAG / PRETENSIONERS	AIRBAG / PRETENSIONERS	Erase Fault Code	
SOLENZA	AIRBAG / PRETENSIONERS	AIRBAG / PRETENSIONERS	Read ECU Information	
SOLENZA	AIRBAG / PRETENSIONERS	AIRBAG / PRETENSIONERS	Live Data	
SOLENZA	AIRBAG / PRETENSIONERS	AIRBAG / PRETENSIONERS	Read Configuration	
SOLENZA	AIRBAG / PRETENSIONERS	AIRBAG / PRETENSIONERS	Actuation Test	
SOLENZA	CONNECTION UNIT	CONNECTION UNIT	Read Fault Code	
SOLENZA	CONNECTION UNIT	CONNECTION UNIT	Erase Fault Code	
SOLENZA	CONNECTION UNIT	CONNECTION UNIT	Read ECU Information	
SOLENZA	CONNECTION UNIT	CONNECTION UNIT	Live Data	
SOLENZA	CONNECTION UNIT	CONNECTION UNIT	Read Configuration	
SOLENZA	CONNECTION UNIT	CONNECTION UNIT	Actuation Test	
SOLENZA	ENGINE IMMOBILISER	ENGINE IMMOBILISER	Read Fault Code	
SOLENZA	ENGINE IMMOBILISER	ENGINE IMMOBILISER	Erase Fault Code	
SOLENZA	ENGINE IMMOBILISER	ENGINE IMMOBILISER	Read ECU Information	
SOLENZA	ENGINE IMMOBILISER	ENGINE IMMOBILISER	Live Data	
SOLENZA	ENGINE IMMOBILISER	ENGINE IMMOBILISER	Read Configuration	
SOLENZA	ENGINE IMMOBILISER	ENGINE IMMOBILISER	Actuation Test	
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3125 INJECTION	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3125 INJECTION	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3125 INJECTION	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3125 INJECTION	Live Data	
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3125 INJECTION	Read Configuration	
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3125 INJECTION	Actuation Test	
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3125 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3125 INJECTION	Other Configuration	VP010 WRITE V. I. N.
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3125 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3125 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3125 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3125 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3125 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3125 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3125 INJECTION	Erase	RZ001 FAULT MEMORY
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3125 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3125 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3125 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3125 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3125 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3125 INJECTION	Erase	RZ064 ALCOHOL LEVEL PROG.
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3125 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3125 INJECTION	Erase	RZ046 INJECTOR ADAPTIVES
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3125 INJECTION	Erase	RZ099 STOP AND START FUNCTION
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3125 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3125 INJECTION	Erase	RZ091 WASTE GATE REGULATION
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3125 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3125 INJECTION	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3125 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3125 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
CAPTUR/KAPTUR BR/IN/RU	INJECTION	SID 306 INJECTION	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	INJECTION	SID 306 INJECTION	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	INJECTION	SID 306 INJECTION	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	INJECTION	SID 306 INJECTION	Live Data	
CAPTUR/KAPTUR BR/IN/RU	INJECTION	SID 306 INJECTION	Read Configuration	
CAPTUR/KAPTUR BR/IN/RU	INJECTION	SID 306 INJECTION	Actuation Test	
CAPTUR/KAPTUR BR/IN/RU	INJECTION	SID 306 INJECTION	Other Configuration	VP010 WRITE V. I. N.
CAPTUR/KAPTUR BR/IN/RU	INJECTION	SID 306 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
CAPTUR/KAPTUR BR/IN/RU	INJECTION	SID 306 INJECTION	Other Configuration	VP305 PARAMETRAGE PRIVE 250
CAPTUR/KAPTUR BR/IN/RU	INJECTION	SID 306 INJECTION	Other Configuration	VP022 INJECTION PROHIBITION
CAPTUR/KAPTUR BR/IN/RU	INJECTION	SID 306 INJECTION	Erase	RZ001 FAULT MEMORY
CAPTUR/KAPTUR BR/IN/RU	INJECTION	SID 306 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
CAPTUR/KAPTUR BR/IN/RU	INJECTION	SID 306 INJECTION	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
CAPTUR/KAPTUR BR/IN/RU	INJECTION	SID 306 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
CAPTUR/KAPTUR BR/IN/RU	INJECTION	SID 306 INJECTION	Erase	RZ036 PARTICLE FILTER RELATIVE PRESSURE SENSOR
CAPTUR/KAPTUR BR/IN/RU	INJECTION	SID 306 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
CAPTUR/KAPTUR BR/IN/RU	INJECTION	SID 306 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
CAPTUR/KAPTUR BR/IN/RU	INJECTION	SID 306 INJECTION	Erase	RZ084 EGR BYPASS PROGRAMMING
CAPTUR/KAPTUR BR/IN/RU	INJECTION	SID 306 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
CAPTUR/KAPTUR BR/IN/RU	INJECTION	SID 306 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
CAPTUR/KAPTUR BR/IN/RU	INJECTION	SID 306 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
CAPTUR/KAPTUR BR/IN/RU	INJECTION	SID 306 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
CAPTUR/KAPTUR BR/IN/RU	INJECTION	SID 306 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION

CAPTUR/KAPTUR BR/IN/RU	INJECTION	SID 306 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS) : DILUTION
CAPTUR/KAPTUR BR/IN/RU	A.B.S.	ABS	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	A.B.S.	ABS	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	A.B.S.	ABS	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	A.B.S.	ABS	Live Data	
CAPTUR/KAPTUR BR/IN/RU	A.B.S.	ABS	Read Configuration	
CAPTUR/KAPTUR BR/IN/RU	A.B.S.	ABS	Actuation Test	
CAPTUR/KAPTUR BR/IN/RU	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
CAPTUR/KAPTUR BR/IN/RU	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
CAPTUR/KAPTUR BR/IN/RU	A.B.S.	ABS	Other Configuration	VP003 STEERING WHEEL ANGLE SENSOR
CAPTUR/KAPTUR BR/IN/RU	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
CAPTUR/KAPTUR BR/IN/RU	A.B.S.	ABS	Other Configuration	VP044 ACCELERATION SENSOR
CAPTUR/KAPTUR BR/IN/RU	A.B.S.	ABS	Other Configuration	VP045 HILL START
CAPTUR/KAPTUR BR/IN/RU	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
CAPTUR/KAPTUR BR/IN/RU	A.B.S.	ABS	Erase	RZ008 TRANSVERSE ACCELERATION OFFSET SENSOR
CAPTUR/KAPTUR BR/IN/RU	A.B.S.	ABS	Erase	RZ007 STEERING WHEEL ANGLE OFFSET SENSOR
CAPTUR/KAPTUR BR/IN/RU	A.B.S.	ABS	Erase	RZ009 BRAKE PRESSURE OFFSET SENSOR
CAPTUR/KAPTUR BR/IN/RU	A.B.S.	ABS	Erase	RZ012 RESET
CAPTUR/KAPTUR BR/IN/RU	A.B.S.	ABS	Erase	RZ010 LONGITUDINAL ACCELERATION SENSOR OFFSET
CAPTUR/KAPTUR BR/IN/RU	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
CAPTUR/KAPTUR BR/IN/RU	A.B.S.	ABS	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	A.B.S.	ABS	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	A.B.S.	ABS	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	A.B.S.	ABS	Live Data	
CAPTUR/KAPTUR BR/IN/RU	A.B.S.	ABS	Actuation Test	
CAPTUR/KAPTUR BR/IN/RU	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
CAPTUR/KAPTUR BR/IN/RU	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
CAPTUR/KAPTUR BR/IN/RU	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
CAPTUR/KAPTUR BR/IN/RU	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
CAPTUR/KAPTUR BR/IN/RU	A.B.S.	ABS	Erase	RZ012 RESET
CAPTUR/KAPTUR BR/IN/RU	A.B.S.	ABS	Erase	RZ010 LONGITUDINAL ACCELERATION SENSOR OFFSET
CAPTUR/KAPTUR BR/IN/RU	A.B.S.	ABS	Erase	RZ008 TRANSVERSE ACCELERATION OFFSET SENSOR
CAPTUR/KAPTUR BR/IN/RU	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
CAPTUR/KAPTUR BR/IN/RU	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
CAPTUR/KAPTUR BR/IN/RU	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
CAPTUR/KAPTUR BR/IN/RU	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
CAPTUR/KAPTUR BR/IN/RU	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF199 COMPUTER INITIALISATION
CAPTUR/KAPTUR BR/IN/RU	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
CAPTUR/KAPTUR BR/IN/RU	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
CAPTUR/KAPTUR BR/IN/RU	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
CAPTUR/KAPTUR BR/IN/RU	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION.
CAPTUR/KAPTUR BR/IN/RU	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
CAPTUR/KAPTUR BR/IN/RU	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP051 ODOMETER IN KM
CAPTUR/KAPTUR BR/IN/RU	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP030 ODOMETER IN MILES
CAPTUR/KAPTUR BR/IN/RU	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Live Data	
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Read Configuration	
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Actuation Test	
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Write Configuration	CF229 ALARM
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Write Configuration	CF314 STOP AND START FUNCTION
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Write Configuration	CF299 ACCESS/STARTER TYPE
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Other Configuration	VP001 WRITE V. I. N.
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Erase	RZ001 FAULT MEMORY
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Erase	RZ013 HIGH PRESSURE PUMP COUNTER
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Erase	RZ014 NUMBER OF STARTING CYCLES
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Erase	RZ018 HIGH PRESSURE PUMP COUNTER
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Erase	RZ017 NUMBER OF STARTING CYCLES
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Erase	RZ016 STOP AND START FUNCTION
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
CAPTUR/KAPTUR BR/IN/RU	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
CAPTUR/KAPTUR BR/IN/RU	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
CAPTUR/KAPTUR BR/IN/RU	AIRBAG / PRETENSIONERS	AIRBAG	Actuation Test	
CAPTUR/KAPTUR BR/IN/RU	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF249 COMMANDE PRIVEE 7
CAPTUR/KAPTUR BR/IN/RU	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF250 COMMANDE PRIVEE 8
CAPTUR/KAPTUR BR/IN/RU	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF052 SENSOR CONFIGURATION
CAPTUR/KAPTUR BR/IN/RU	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
CAPTUR/KAPTUR BR/IN/RU	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
CAPTUR/KAPTUR BR/IN/RU	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
CAPTUR/KAPTUR BR/IN/RU	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP015 PARAMETRAGE PRIVE 1
CAPTUR/KAPTUR BR/IN/RU	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
CAPTUR/KAPTUR BR/IN/RU	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
CAPTUR/KAPTUR BR/IN/RU	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC005 CONFIGURATION OF SYSTEM COMPONENTS
CAPTUR/KAPTUR BR/IN/RU	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC013 SENSOR CONFIGURATION
CAPTUR/KAPTUR BR/IN/RU	AIR CONDITIONING	AIR CONDITIONING	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	AIR CONDITIONING	AIR CONDITIONING	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	AIR CONDITIONING	AIR CONDITIONING	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	AIR CONDITIONING	AIR CONDITIONING	Live Data	
CAPTUR/KAPTUR BR/IN/RU	AIR CONDITIONING	AIR CONDITIONING	Actuation Test	
CAPTUR/KAPTUR BR/IN/RU	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ001 FAULT MEMORY
CAPTUR/KAPTUR BR/IN/RU	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ002 COMPUTER REINITIALISATION
CAPTUR/KAPTUR BR/IN/RU	AUTOMATIC GEARBOX	DPO TA2005 ATX	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	AUTOMATIC GEARBOX	DPO TA2005 ATX	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	AUTOMATIC GEARBOX	DPO TA2005 ATX	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	AUTOMATIC GEARBOX	DPO TA2005 ATX	Live Data	

CAPTUR/KAPTUR BR/IN/RU	AUTOMATIC GEARBOX	DPO TA2005 ATX	Actuation Test	
CAPTUR/KAPTUR BR/IN/RU	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VPO15 NOTE OIL WEAR COUNTER
CAPTUR/KAPTUR BR/IN/RU	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VPO16 WRITE TRANSMISSION OIL CHANGE DATE
CAPTUR/KAPTUR BR/IN/RU	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VPO09 WRITE DATE OF LAST AFTER SALES OPERATION
CAPTUR/KAPTUR BR/IN/RU	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VPO01 WRITE VIN
CAPTUR/KAPTUR BR/IN/RU	AUTOMATIC GEARBOX	DPO TA2005 ATX	Erase	RZ004 FAULT MEMORY
CAPTUR/KAPTUR BR/IN/RU	AUTOMATIC GEARBOX	DPO TA2005 ATX	Erase	RZ005 AUTO-ADAPTIVES
CAPTUR/KAPTUR BR/IN/RU	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Live Data	
CAPTUR/KAPTUR BR/IN/RU	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Actuation Test	
CAPTUR/KAPTUR BR/IN/RU	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Other Configuration	VPO01 WRITE VIN
CAPTUR/KAPTUR BR/IN/RU	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Other Configuration	VPO09 WRITE DATE OF LAST AFTER SALES OPERATION
CAPTUR/KAPTUR BR/IN/RU	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Other Configuration	VPO30 GEARBOX VEHICLE ACCELERATION SENSOR INIT.
CAPTUR/KAPTUR BR/IN/RU	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Erase	RZ004 FAULT MEMORY
CAPTUR/KAPTUR BR/IN/RU	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Erase	RZ009 ERASE AUTO-ADAPTIVE VALUES
CAPTUR/KAPTUR BR/IN/RU	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Live Data	
CAPTUR/KAPTUR BR/IN/RU	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Actuation Test	
CAPTUR/KAPTUR BR/IN/RU	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Other Configuration	VPO01 WRITE VIN
CAPTUR/KAPTUR BR/IN/RU	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ004 FAULT MEMORY
CAPTUR/KAPTUR BR/IN/RU	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ014 RESET CLUTCH DATA PROTECTION
CAPTUR/KAPTUR BR/IN/RU	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ015 RESET GEARBOX DATA
CAPTUR/KAPTUR BR/IN/RU	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ013 RESET CLUTCH DATA
CAPTUR/KAPTUR BR/IN/RU	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Configuration	SCO11 BLEED CLUTCH HYDRAULIC CIRCUIT
CAPTUR/KAPTUR BR/IN/RU	VARIABLE P.A.S.	PAS PUMP ASS.	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	VARIABLE P.A.S.	PAS PUMP ASS.	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	VARIABLE P.A.S.	PAS PUMP ASS.	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	VARIABLE P.A.S.	PAS PUMP ASS.	Live Data	
CAPTUR/KAPTUR BR/IN/RU	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VPO01 WRITE VIN
CAPTUR/KAPTUR BR/IN/RU	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VPO05 WRITE DATE OF AFTER SALES OPERATION
CAPTUR/KAPTUR BR/IN/RU	VARIABLE P.A.S.	PAS PUMP ASS.	Erase	RZ001 FAULT MEMORY
CAPTUR/KAPTUR BR/IN/RU	UPC	UPC COMP. TYPE	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	UPC	UPC COMP. TYPE	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	UPC	UPC COMP. TYPE	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	UPC	UPC COMP. TYPE	Live Data	
CAPTUR/KAPTUR BR/IN/RU	UPC	UPC COMP. TYPE	Read Configuration	
CAPTUR/KAPTUR BR/IN/RU	UPC	UPC COMP. TYPE	Actuation Test	
CAPTUR/KAPTUR BR/IN/RU	UPC	UPC COMP. TYPE	Other Configuration	VPO03 WRITE VIN
CAPTUR/KAPTUR BR/IN/RU	UPC	UPC COMP. TYPE	Other Configuration	VPO07 COMPUTER INITIALISATION
CAPTUR/KAPTUR BR/IN/RU	UPC	UPC COMP. TYPE	Other Configuration	VPO06 RESETTING INTERNAL PROTECTION
CAPTUR/KAPTUR BR/IN/RU	UPC	UPC COMP. TYPE	Configuration	SC008 WRITE SAVED DATA
CAPTUR/KAPTUR BR/IN/RU	UPC	UPC COMP. TYPE	Configuration	SC007 SAVE COMPUTER DATA
CAPTUR/KAPTUR BR/IN/RU	UPC	UPC COMP. TYPE	Configuration	SCO15 COUNTRY MODEL
CAPTUR/KAPTUR BR/IN/RU	UPC	UPC COMP. TYPE	Erase	RZ004 DTC reset
CAPTUR/KAPTUR BR/IN/RU	4 WHEELS DRIVE	4 WHEELS DRIVE	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	4 WHEELS DRIVE	4 WHEELS DRIVE	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	4 WHEELS DRIVE	4 WHEELS DRIVE	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	4 WHEELS DRIVE	4 WHEELS DRIVE	Live Data	
CAPTUR/KAPTUR BR/IN/RU	4 WHEELS DRIVE	4 WHEELS DRIVE	Actuation Test	
CAPTUR/KAPTUR BR/IN/RU	4 WHEELS DRIVE	4 WHEELS DRIVE	Other Configuration	VPO02 SPEEDO INDEX
CAPTUR/KAPTUR BR/IN/RU	4 WHEELS DRIVE	4 WHEELS DRIVE	Other Configuration	VPO04 COMPUTER INITIALISATION
CAPTUR/KAPTUR BR/IN/RU	4 WHEELS DRIVE	4 WHEELS DRIVE	Other Configuration	VPO07 MODIFICATION OF PARAMETERS AFTER INITIALISATION
CAPTUR/KAPTUR BR/IN/RU	4 WHEELS DRIVE	4 WHEELS DRIVE	Other Configuration	VPO03 WRITE VIN
CAPTUR/KAPTUR BR/IN/RU	4 WHEELS DRIVE	4 WHEELS DRIVE	Erase	RZ001 FAULT MEMORY
CAPTUR/KAPTUR BR/IN/RU	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
CAPTUR/KAPTUR BR/IN/RU	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test	
CAPTUR/KAPTUR BR/IN/RU	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VPO01 WRITE VIN
CAPTUR/KAPTUR BR/IN/RU	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003 FAULT MEMORY
CAPTUR/KAPTUR BR/IN/RU	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
CAPTUR/KAPTUR BR/IN/RU	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ004 EMERGENCY CALL SERVICE
CAPTUR/KAPTUR BR/IN/RU	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
CAPTUR/KAPTUR BR/IN/RU	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test	
CAPTUR/KAPTUR BR/IN/RU	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VPO01 WRITE VIN
CAPTUR/KAPTUR BR/IN/RU	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003 FAULT MEMORY
CAPTUR/KAPTUR BR/IN/RU	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
CAPTUR/KAPTUR BR/IN/RU	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	HANDS-FREE MODULE	HANDS-FREE MODULE	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	HANDS-FREE MODULE	HANDS-FREE MODULE	Live Data	
CAPTUR/KAPTUR BR/IN/RU	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Configuration	
CAPTUR/KAPTUR BR/IN/RU	HANDS-FREE MODULE	HANDS-FREE MODULE	Actuation Test	
CAPTUR/KAPTUR BR/IN/RU	HANDS-FREE MODULE	HANDS-FREE MODULE	Other Configuration	VPO02 WRITE V. I. N.
CAPTUR/KAPTUR BR/IN/RU	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase	RZ001 FAULT MEMORY
CAPTUR/KAPTUR BR/IN/RU	HANDS-FREE MODULE	HANDS-FREE MODULE	Configuration	SC003 CARD TESTING
CAPTUR/KAPTUR BR/IN/RU	HANDS-FREE MODULE	HANDS-FREE MODULE	Configuration	SC007 REMOTE LOCKING BUZZER
CAPTUR/KAPTUR BR/IN/RU	RADIO	RADIO	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	RADIO	RADIO	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	RADIO	RADIO	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	RADIO	RADIO	Live Data	
CAPTUR/KAPTUR BR/IN/RU	RADIO	RADIO	Read Configuration	
CAPTUR/KAPTUR BR/IN/RU	RADIO	RADIO	Actuation Test	
CAPTUR/KAPTUR BR/IN/RU	RADIO	RADIO	Write Configuration	CF053 REAR LOUD SPEAKER
CAPTUR/KAPTUR BR/IN/RU	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
CAPTUR/KAPTUR BR/IN/RU	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
CAPTUR/KAPTUR BR/IN/RU	RADIO	RADIO	Erase	RZ003 FAULT MEMORY

CAPTUR/KAPTUR BR/IN/RU	RADIO	RADIO	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	RADIO	RADIO	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	RADIO	RADIO	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	RADIO	RADIO	Live Data	
CAPTUR/KAPTUR BR/IN/RU	RADIO	RADIO	Read Configuration	
CAPTUR/KAPTUR BR/IN/RU	RADIO	RADIO	Actuation Test	
CAPTUR/KAPTUR BR/IN/RU	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
CAPTUR/KAPTUR BR/IN/RU	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
CAPTUR/KAPTUR BR/IN/RU	RADIO	RADIO	Write Configuration	CF066 GUIDELINES
CAPTUR/KAPTUR BR/IN/RU	RADIO	RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
CAPTUR/KAPTUR BR/IN/RU	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
CAPTUR/KAPTUR BR/IN/RU	RADIO	RADIO	Erase	RZ005 FAULT MEMORY
CAPTUR/KAPTUR BR/IN/RU	RADIO	RADIO	Configuration	SC005 SYSTEM CONFIGURATION
CAPTUR/KAPTUR BR/IN/RU	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Live Data	
CAPTUR/KAPTUR BR/IN/RU	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Actuation Test	
CAPTUR/KAPTUR BR/IN/RU	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Other Configuration	VP001 WRITE VIN
CAPTUR/KAPTUR BR/IN/RU	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase	RZ001 FAULT MEMORY
CAPTUR/KAPTUR BR/IN/RU	LIGHTING	HEAD LAMP LEVELLING SYSTEM	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	LIGHTING	HEAD LAMP LEVELLING SYSTEM	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	LIGHTING	HEAD LAMP LEVELLING SYSTEM	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	LIGHTING	HEAD LAMP LEVELLING SYSTEM	Live Data	
CAPTUR/KAPTUR BR/IN/RU	LIGHTING	HEAD LAMP LEVELLING SYSTEM	Actuation Test	
CAPTUR/KAPTUR BR/IN/RU	LIGHTING	HEAD LAMP LEVELLING SYSTEM	Other Configuration	VP002 SYSTEM INITIALISATION
CAPTUR/KAPTUR BR/IN/RU	LIGHTING	HEAD LAMP LEVELLING SYSTEM	Erase	RZ001 FAULT MEMORY
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3140 INJECTION	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3140 INJECTION	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3140 INJECTION	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3140 INJECTION	Live Data	
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3140 INJECTION	Function Test	
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3140 INJECTION	Read Configuration	
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3140 INJECTION	Actuation Test	
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3140 INJECTION	Write Configuration	CF196 STOP AND START FUNCTION
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3140 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3140 INJECTION	Other Configuration	VP010 WRITE V.I.N.
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3140 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3140 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3140 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3140 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3140 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3140 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3140 INJECTION	Erase	RZ070 TURBOCHARGER PROGRAMMING
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3140 INJECTION	Erase	RZ091 WASTE GATE REGULATION
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3140 INJECTION	Erase	RZ122 FLYWHEEL TARGET PROGRAMMING
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3140 INJECTION	Erase	RZ102 FLYWHEEL TARGET PROGRAMMING
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3140 INJECTION	Erase	RZ042 IGNITION COIL ADAPTIVE
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3140 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3140 INJECTION	Configuration	SC001 WRITE SAVED DATA
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3140 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3140 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3140 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Live Data	
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Function Test	
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Read Configuration	
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Actuation Test	
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Write Configuration	CF229 ALARM
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Write Configuration	CF036 SELECTIVE OPENING OF DOORS
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Write Configuration	CF015 ILLUMINATE HAZARD LAMPS UPON IMPACT
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Write Configuration	CF314 STOP AND START FUNCTION
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Write Configuration	CF009 DEADLOCKING
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Write Configuration	CF316 AUTOMATIC REAR WIPER FUNCTION
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Write Configuration	CF299 ACCESS/STARTER TYPE
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Other Configuration	VP001 WRITE V.I.N.
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Erase	RZ013 HIGH PRESSURE PUMP COUNTER
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Erase	RZ014 NUMBER OF STARTING CYCLES
CAPTUR/KAPTUR BR/IN/RU	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
CAPTUR/KAPTUR BR/IN/RU	AIRBAG / PRETENSIONERS	AIRBAG	Function Test	
CAPTUR/KAPTUR BR/IN/RU	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
CAPTUR/KAPTUR BR/IN/RU	AIRBAG / PRETENSIONERS	AIRBAG	Actuation Test	
CAPTUR/KAPTUR BR/IN/RU	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
CAPTUR/KAPTUR BR/IN/RU	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
CAPTUR/KAPTUR BR/IN/RU	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
CAPTUR/KAPTUR BR/IN/RU	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
CAPTUR/KAPTUR BR/IN/RU	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC013 SENSOR CONFIGURATION
CAPTUR/KAPTUR BR/IN/RU	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Live Data	
CAPTUR/KAPTUR BR/IN/RU	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Function Test	
CAPTUR/KAPTUR BR/IN/RU	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Configuration	
CAPTUR/KAPTUR BR/IN/RU	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Actuation Test	
CAPTUR/KAPTUR BR/IN/RU	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Other Configuration	VP002 WRITE VIN
CAPTUR/KAPTUR BR/IN/RU	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Erase	RZ002 ECU MEMORY
CAPTUR/KAPTUR BR/IN/RU	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Configuration	SC002 REVERSING CAMERA CALIBRATION
CAPTUR/KAPTUR BR/IN/RU	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Configuration	SC007 SYSTEM CONFIGURATION

CAPTUR/KAPTUR BR/IN/RU	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Configuration	SC008 WRITE SAVED DATA
CAPTUR/KAPTUR BR/IN/RU	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Configuration	SC009 SAVE COMPUTER DATA
CAPTUR/KAPTUR BR/IN/RU	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Live Data	
CAPTUR/KAPTUR BR/IN/RU	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Function Test	
CAPTUR/KAPTUR BR/IN/RU	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Actuation Test	
CAPTUR/KAPTUR BR/IN/RU	VARIABLE P. A. S.	VARIABLE P. A. S.	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	VARIABLE P. A. S.	VARIABLE P. A. S.	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	VARIABLE P. A. S.	VARIABLE P. A. S.	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	VARIABLE P. A. S.	VARIABLE P. A. S.	Live Data	
CAPTUR/KAPTUR BR/IN/RU	VARIABLE P. A. S.	VARIABLE P. A. S.	Function Test	
CAPTUR/KAPTUR BR/IN/RU	VARIABLE P. A. S.	VARIABLE P. A. S.	Other Configuration	VPO01 WRITE VIN
CAPTUR/KAPTUR BR/IN/RU	VARIABLE P. A. S.	VARIABLE P. A. S.	Other Configuration	VPO11 STEERING WHEEL ANGLE CALIB.
CAPTUR/KAPTUR BR/IN/RU	VARIABLE P. A. S.	VARIABLE P. A. S.	Other Configuration	VPO13 HAND OFF DETECTION LEARNING
CAPTUR/KAPTUR BR/IN/RU	VARIABLE P. A. S.	VARIABLE P. A. S.	Other Configuration	VPO12 COMPUTER RESET
CAPTUR/KAPTUR BR/IN/RU	UPC	UPC	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	UPC	UPC	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	UPC	UPC	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	UPC	UPC	Live Data	
CAPTUR/KAPTUR BR/IN/RU	UPC	UPC	Function Test	
CAPTUR/KAPTUR BR/IN/RU	UPC	UPC	Actuation Test	
CAPTUR/KAPTUR BR/IN/RU	UPC	UPC	Other Configuration	VPO07 COMPUTER INITIALISATION
CAPTUR/KAPTUR BR/IN/RU	UPC	UPC	Other Configuration	VPO03 WRITE VIN
CAPTUR/KAPTUR BR/IN/RU	UPC	UPC	Other Configuration	VPO06 RESETTING INTERNAL PROTECTION
CAPTUR/KAPTUR BR/IN/RU	UPC	UPC	Other Configuration	VPO26 CONTROL HEADLIGHT MOTORS
CAPTUR/KAPTUR BR/IN/RU	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Live Data	
CAPTUR/KAPTUR BR/IN/RU	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Function Test	
CAPTUR/KAPTUR BR/IN/RU	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Actuation Test	
CAPTUR/KAPTUR BR/IN/RU	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Other Configuration	VPO01 WRITE VIN
CAPTUR/KAPTUR BR/IN/RU	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Erase	RZ002 COMPUTER RESET
CAPTUR/KAPTUR BR/IN/RU	SCENE RECORDER	SCENE RECORDER	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	SCENE RECORDER	SCENE RECORDER	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	SCENE RECORDER	SCENE RECORDER	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	SCENE RECORDER	SCENE RECORDER	Actuation Test	
CAPTUR/KAPTUR BR/IN/RU	SCENE RECORDER	SCENE RECORDER	Other Configuration	VPO02 WRITE VIN
CAPTUR/KAPTUR BR/IN/RU	SCENE RECORDER	SCENE RECORDER	Erase	RZ002 COMPUTER RESET
CAPTUR/KAPTUR BR/IN/RU	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
CAPTUR/KAPTUR BR/IN/RU	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Function Test	
CAPTUR/KAPTUR BR/IN/RU	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Write Configuration	CF003 COMPUTER CONFIGURATION
CAPTUR/KAPTUR BR/IN/RU	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VPO01 WRITE VIN
CAPTUR/KAPTUR BR/IN/RU	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
CAPTUR/KAPTUR BR/IN/RU	AMPLIFIER	AMPLIFIER	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	AMPLIFIER	AMPLIFIER	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	AMPLIFIER	AMPLIFIER	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	AMPLIFIER	AMPLIFIER	Live Data	
CAPTUR/KAPTUR BR/IN/RU	AMPLIFIER	AMPLIFIER	Function Test	
CAPTUR/KAPTUR BR/IN/RU	AMPLIFIER	AMPLIFIER	Actuation Test	
CAPTUR/KAPTUR BR/IN/RU	AMPLIFIER	AMPLIFIER	Other Configuration	VPO01 WRITE VIN
CAPTUR/KAPTUR BR/IN/RU	AMPLIFIER	AMPLIFIER	Erase	RZ004 AMPLIFIER RESET
CAPTUR/KAPTUR BR/IN/RU	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	HANDS-FREE MODULE	HANDS-FREE MODULE	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	HANDS-FREE MODULE	HANDS-FREE MODULE	Live Data	
CAPTUR/KAPTUR BR/IN/RU	HANDS-FREE MODULE	HANDS-FREE MODULE	Function Test	
CAPTUR/KAPTUR BR/IN/RU	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Configuration	
CAPTUR/KAPTUR BR/IN/RU	HANDS-FREE MODULE	HANDS-FREE MODULE	Actuation Test	
CAPTUR/KAPTUR BR/IN/RU	HANDS-FREE MODULE	HANDS-FREE MODULE	Write Configuration	CF028 TESTING CARD PRESENTED
CAPTUR/KAPTUR BR/IN/RU	HANDS-FREE MODULE	HANDS-FREE MODULE	Other Configuration	VPO01 WRITE VIN
CAPTUR/KAPTUR BR/IN/RU	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase	RZ002 AFTER SALES CODE
CAPTUR/KAPTUR BR/IN/RU	CENTRAL GATEWAY	CENTRAL GATEWAY	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	CENTRAL GATEWAY	CENTRAL GATEWAY	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	CENTRAL GATEWAY	CENTRAL GATEWAY	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	CENTRAL GATEWAY	CENTRAL GATEWAY	Live Data	
CAPTUR/KAPTUR BR/IN/RU	CENTRAL GATEWAY	CENTRAL GATEWAY	Function Test	
CAPTUR/KAPTUR BR/IN/RU	CENTRAL GATEWAY	CENTRAL GATEWAY	Read Configuration	
CAPTUR/KAPTUR BR/IN/RU	CENTRAL GATEWAY	CENTRAL GATEWAY	Write Configuration	CF001 CENTRAL GATEWAY
CAPTUR/KAPTUR BR/IN/RU	CENTRAL GATEWAY	CENTRAL GATEWAY	Other Configuration	VPO02 WRITE VIN
CAPTUR/KAPTUR BR/IN/RU	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
CAPTUR/KAPTUR BR/IN/RU	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
CAPTUR/KAPTUR BR/IN/RU	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
CAPTUR/KAPTUR BR/IN/RU	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF199 COMPUTER INITIALISATION
CAPTUR/KAPTUR BR/IN/RU	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
CAPTUR/KAPTUR BR/IN/RU	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
CAPTUR/KAPTUR BR/IN/RU	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
CAPTUR/KAPTUR BR/IN/RU	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION.
CAPTUR/KAPTUR BR/IN/RU	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF255 LANGUAGE VERSION.
CAPTUR/KAPTUR BR/IN/RU	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
CAPTUR/KAPTUR BR/IN/RU	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP006 OIL CHANGE INTERVAL IN KM
CAPTUR/KAPTUR BR/IN/RU	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP028 OIL CHANGE FREQUENCY IN DAYS
CAPTUR/KAPTUR BR/IN/RU	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP008 OIL CHANGE RANGE:CURRENT VALUE IN KM
CAPTUR/KAPTUR BR/IN/RU	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP027 OIL SERVICE INTERVAL IN DAYS
CAPTUR/KAPTUR BR/IN/RU	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP010 UPDATE ODOMETER
CAPTUR/KAPTUR BR/IN/RU	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP037 MAINTENANCE AUTONOMY INTERVAL IN KM
CAPTUR/KAPTUR BR/IN/RU	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP043 MAINTENANCE AUTONOMY INTERVAL IN DAYS

CAPTUR/KAPTUR BR/IN/RU	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP040 MAINTENANCE AUTONOMY:CURRENT VALUE IN KM
CAPTUR/KAPTUR BR/IN/RU	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP044 MAINTENANCE AUTONOMY:CURRENT VALUE DAYS
CAPTUR/KAPTUR BR/IN/RU	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	HANDS-FREE MODULE	HANDS-FREE MODULE	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	HANDS-FREE MODULE	HANDS-FREE MODULE	Live Data	
CAPTUR/KAPTUR BR/IN/RU	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Configuration	
CAPTUR/KAPTUR BR/IN/RU	HANDS-FREE MODULE	HANDS-FREE MODULE	Actuation Test	
CAPTUR/KAPTUR BR/IN/RU	HANDS-FREE MODULE	HANDS-FREE MODULE	Write Configuration	CF035 TELEPHONE INDUCTION CHARGER
CAPTUR/KAPTUR BR/IN/RU	HANDS-FREE MODULE	HANDS-FREE MODULE	Write Configuration	CF031 REMOTE LOCKING BUZZER
CAPTUR/KAPTUR BR/IN/RU	HANDS-FREE MODULE	HANDS-FREE MODULE	Other Configuration	VP002 WRITE V.I.N.
DOKKER/KANGOO	INJECTION	V42 INJECTION	Read Fault Code	
DOKKER/KANGOO	INJECTION	V42 INJECTION	Erase Fault Code	
DOKKER/KANGOO	INJECTION	V42 INJECTION	Read ECU Information	
DOKKER/KANGOO	INJECTION	V42 INJECTION	Live Data	
DOKKER/KANGOO	INJECTION	V42 INJECTION	Read Configuration	
DOKKER/KANGOO	INJECTION	V42 INJECTION	Actuation Test	
DOKKER/KANGOO	INJECTION	V42 INJECTION	Other Configuration	VP010 WRITE V. I. N.
DOKKER/KANGOO	INJECTION	V42 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
DOKKER/KANGOO	INJECTION	V42 INJECTION	Erase	RZ001 FAULT MEMORY
DOKKER/KANGOO	INJECTION	V42 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
DOKKER/KANGOO	INJECTION	V42 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
DOKKER/KANGOO	INJECTION	V42 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
DOKKER/KANGOO	INJECTION	V42 INJECTION	Erase	RZ064 ALCOHOL LEVEL PROG.
DOKKER/KANGOO	INJECTION	V42 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
DOKKER/KANGOO	INJECTION	V42 INJECTION	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
DOKKER/KANGOO	INJECTION	V42 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
DOKKER/KANGOO	INJECTION	V42 INJECTION	Configuration	SC001 WRITE SAVED DATA
DOKKER/KANGOO	INJECTION	V42 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
DOKKER/KANGOO	INJECTION	V42 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
DOKKER/KANGOO	INJECTION	EMS 3150 INJECTION	Read Fault Code	
DOKKER/KANGOO	INJECTION	EMS 3150 INJECTION	Erase Fault Code	
DOKKER/KANGOO	INJECTION	EMS 3150 INJECTION	Read ECU Information	
DOKKER/KANGOO	INJECTION	EMS 3150 INJECTION	Live Data	
DOKKER/KANGOO	INJECTION	EMS 3150 INJECTION	Read Configuration	
DOKKER/KANGOO	INJECTION	EMS 3150 INJECTION	Actuation Test	
DOKKER/KANGOO	INJECTION	EMS 3150 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
DOKKER/KANGOO	INJECTION	EMS 3150 INJECTION	Other Configuration	VP010 WRITE V. I. N.
DOKKER/KANGOO	INJECTION	EMS 3150 INJECTION	Other Configuration	VP067 STATIC TEST
DOKKER/KANGOO	INJECTION	EMS 3150 INJECTION	Other Configuration	VP214 PARAMETRAGE PRIVE 159
DOKKER/KANGOO	INJECTION	EMS 3150 INJECTION	Other Configuration	VP215 PARAMETRAGE PRIVE 160
DOKKER/KANGOO	INJECTION	EMS 3150 INJECTION	Other Configuration	VP342 VACUUM PUMP OPERATION REQUEST
DOKKER/KANGOO	INJECTION	EMS 3150 INJECTION	Erase	RZ001 FAULT MEMORY
DOKKER/KANGOO	INJECTION	EMS 3150 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
DOKKER/KANGOO	INJECTION	EMS 3150 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
DOKKER/KANGOO	INJECTION	EMS 3150 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
DOKKER/KANGOO	INJECTION	EMS 3150 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
DOKKER/KANGOO	INJECTION	EMS 3150 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
DOKKER/KANGOO	INJECTION	EMS 3150 INJECTION	Erase	RZ075 CAMSHAFT NO. 2 SENSOR PROGRAMMING
DOKKER/KANGOO	INJECTION	EMS 3150 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
DOKKER/KANGOO	INJECTION	EMS 3150 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
DOKKER/KANGOO	INJECTION	EMS 3150 INJECTION	Erase	RZ091 WASTE GATE REGULATION
DOKKER/KANGOO	INJECTION	EMS 3150 INJECTION	Erase	RZ089 INHIBIT EVAP STRATEGY
DOKKER/KANGOO	INJECTION	EMS 3150 INJECTION	Erase	RZ090 ACTIVATE EVAP PROGRAMMING
DOKKER/KANGOO	INJECTION	EMS 3150 INJECTION	Erase	RZ036 PARTICLE FILTER RELATIVE PRESSURE SENSOR
DOKKER/KANGOO	INJECTION	EMS 3150 INJECTION	Erase	RZ061 FLYWHEEL TARGET PROGRAMMING
DOKKER/KANGOO	INJECTION	EMS 3150 INJECTION	Erase	RZ046 INJECTOR ADAPTIVES
DOKKER/KANGOO	INJECTION	EMS 3150 INJECTION	Erase	RZ100 PROGRAMMING THROTTLE LIMITS
DOKKER/KANGOO	INJECTION	EMS 3150 INJECTION	Erase	RZ117 RICHNESS REGULATION PROGRAMMING
DOKKER/KANGOO	INJECTION	EMS 3150 INJECTION	Erase	RZ065 FLYWHEEL TARGET PROGRAMMING
DOKKER/KANGOO	INJECTION	EMS 3150 INJECTION	Erase	RZ102 FLYWHEEL TARGET PROGRAMMING
DOKKER/KANGOO	INJECTION	EMS 3150 INJECTION	Erase	RZ103 FLYWHEEL TARGET PROGRAMMING
DOKKER/KANGOO	INJECTION	EMS 3150 INJECTION	Erase	RZ104 FLYWHEEL TARGET PROGRAMMING
DOKKER/KANGOO	INJECTION	EMS 3150 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
DOKKER/KANGOO	INJECTION	EMS 3150 INJECTION	Configuration	SC001 WRITE SAVED DATA
DOKKER/KANGOO	INJECTION	EMS 3150 INJECTION	Configuration	SC040 SPEED LIMITER
DOKKER/KANGOO	INJECTION	EMS 3150 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
DOKKER/KANGOO	INJECTION	EMS 3150 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Read Fault Code	
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Erase Fault Code	
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Read ECU Information	
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Live Data	
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Read Configuration	
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Actuation Test	
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP010 WRITE V. I. N.
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Erase	RZ001 FAULT MEMORY
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Erase	RZ071 MANIFOLD PRESSURE SENSOR PROGRAMMING
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Erase	RZ032 AIR PATH PROGRAMMING

DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Erase	RZ002	EGR ADAPTIVES
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Erase	RZ036	PARTICLE FILTER RELATIVE PRESSURE SENSOR
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Erase	RZ045	RAIL PRESSURE SENSOR ADAPTIVES
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Erase	RZ088	AIR DAMPER VALVE PROGRAMMING
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Erase	RZ017	EGR PROGRAMMING
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Erase	RZ062	PROPORTIONAL RICHNESS SENSOR PROGRAMMING
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Erase	RZ005	PROGRAMMED VALUES
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Configuration	SC001	WRITE SAVED DATA
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Configuration	SC002	ENTER INJECTOR CODES
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Configuration	SC003	SAVE COMPUTER DATA
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Configuration	SC017	PARTICLE FILTER REGENERATION
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Configuration	SC031	CYLINDER FUNCTION FAULT FINDING
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Configuration	SC035	HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Configuration	SC040	SPEED LIMITER
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Configuration	SC042	FAST IDLE SPEED MODIFICATION
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Configuration	SC051	ADAPTIVES AFTER REPLACING PARTICLE FILTER
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Configuration	SC060	PARTICLE FILTER REGENERATION
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Configuration	SC061	INTERVAL OF OIL CHANGE (OCS) OXIDATION
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Configuration	SC062	OIL CHANGE INTERVAL (OCS): DILUTION
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Configuration	SC068	PARTICLE FILTER REGENERATION
DOKKER/KANGOO	INJECTION	INJECTION DCM 3.4	Read Fault Code		
DOKKER/KANGOO	INJECTION	INJECTION DCM 3.4	Erase Fault Code		
DOKKER/KANGOO	INJECTION	INJECTION DCM 3.4	Read ECU Information		
DOKKER/KANGOO	INJECTION	INJECTION DCM 3.4	Live Data		
DOKKER/KANGOO	INJECTION	INJECTION DCM 3.4	Read Configuration		
DOKKER/KANGOO	INJECTION	INJECTION DCM 3.4	Actuation Test		
DOKKER/KANGOO	INJECTION	INJECTION DCM 3.4	Other Configuration	VP036	FUEL SUPPLY PREVENTION
DOKKER/KANGOO	INJECTION	INJECTION DCM 3.4	Other Configuration	VP010	WRITE V. I. N.
DOKKER/KANGOO	INJECTION	INJECTION DCM 3.4	Erase	RZ001	FAULT MEMORY
DOKKER/KANGOO	INJECTION	INJECTION DCM 3.4	Erase	RZ045	RAIL PRESSURE SENSOR ADAPTIVES
DOKKER/KANGOO	INJECTION	INJECTION DCM 3.4	Erase	RZ004	PRESSURE REGULATION ADAPTIVES
DOKKER/KANGOO	INJECTION	INJECTION DCM 3.4	Erase	RZ012	EGR VALVE PROGRAMMING
DOKKER/KANGOO	INJECTION	INJECTION DCM 3.4	Erase	RZ041	FUEL FLOW REGULATOR
DOKKER/KANGOO	INJECTION	INJECTION DCM 3.4	Erase	RZ003	ENGINE ADAPTIVES
DOKKER/KANGOO	INJECTION	INJECTION DCM 3.4	Erase	RZ039	CAMSHAFT SENSOR PROGRAMMING
DOKKER/KANGOO	INJECTION	INJECTION DCM 3.4	Erase	RZ037	FLYWHEEL TARGET PROGRAMMING
DOKKER/KANGOO	INJECTION	INJECTION DCM 3.4	Erase	RZ047	CRUISE CONTROL/SPEED LIMITER PROGRAMMING
DOKKER/KANGOO	INJECTION	INJECTION DCM 3.4	Erase	RZ051	INJECTOR ADAPTIVES NO. 1
DOKKER/KANGOO	INJECTION	INJECTION DCM 3.4	Erase	RZ052	INJECTOR ADAPTIVES NO. 2
DOKKER/KANGOO	INJECTION	INJECTION DCM 3.4	Erase	RZ053	INJECTOR ADAPTIVES NO. 3
DOKKER/KANGOO	INJECTION	INJECTION DCM 3.4	Erase	RZ054	INJECTOR ADAPTIVES NO. 4
DOKKER/KANGOO	INJECTION	INJECTION DCM 3.4	Configuration	SC001	WRITE SAVED DATA
DOKKER/KANGOO	INJECTION	INJECTION DCM 3.4	Configuration	SC002	ENTER INJECTOR CODES
DOKKER/KANGOO	INJECTION	INJECTION DCM 3.4	Configuration	SC003	SAVE COMPUTER DATA
DOKKER/KANGOO	INJECTION	INJECTION DCM 3.4	Configuration	SC053	INJECTOR ADAPTIVES
DOKKER/KANGOO	INJECTION	INJECTION DCM 3.4	Configuration	SC061	INTERVAL OF OIL CHANGE (OCS) OXIDATION
DOKKER/KANGOO	INJECTION	INJECTION DCM 3.4	Configuration	SC042	FAST IDLE SPEED MODIFICATION
DOKKER/KANGOO	INJECTION	INJECTION DCM 3.4	Configuration	SC040	SPEED LIMITER
DOKKER/KANGOO	INJECTION	EMS 3125 INJECTION	Read Fault Code		
DOKKER/KANGOO	INJECTION	EMS 3125 INJECTION	Erase Fault Code		
DOKKER/KANGOO	INJECTION	EMS 3125 INJECTION	Read ECU Information		
DOKKER/KANGOO	INJECTION	EMS 3125 INJECTION	Live Data		
DOKKER/KANGOO	INJECTION	EMS 3125 INJECTION	Read Configuration		
DOKKER/KANGOO	INJECTION	EMS 3125 INJECTION	Actuation Test		
DOKKER/KANGOO	INJECTION	EMS 3125 INJECTION	Other Configuration	VP036	FUEL SUPPLY PREVENTION
DOKKER/KANGOO	INJECTION	EMS 3125 INJECTION	Other Configuration	VP010	WRITE V. I. N.
DOKKER/KANGOO	INJECTION	EMS 3125 INJECTION	Other Configuration	VP310	ALTERNATOR SETPOINT VOLTAGE
DOKKER/KANGOO	INJECTION	EMS 3125 INJECTION	Other Configuration	VP343	NUMBER OF STARTING CYCLES
DOKKER/KANGOO	INJECTION	EMS 3125 INJECTION	Other Configuration	VP306	NUMBER OF STARTING 1
DOKKER/KANGOO	INJECTION	EMS 3125 INJECTION	Other Configuration	VP307	NUMBER OF STARTING 2
DOKKER/KANGOO	INJECTION	EMS 3125 INJECTION	Other Configuration	VP308	NUMBER OF STARTING 3
DOKKER/KANGOO	INJECTION	EMS 3125 INJECTION	Other Configuration	VP309	NUMBER OF STARTING 4
DOKKER/KANGOO	INJECTION	EMS 3125 INJECTION	Erase	RZ001	FAULT MEMORY
DOKKER/KANGOO	INJECTION	EMS 3125 INJECTION	Erase	RZ033	RICHNESS REGULATION PROGRAMMING
DOKKER/KANGOO	INJECTION	EMS 3125 INJECTION	Erase	RZ039	CAMSHAFT SENSOR PROGRAMMING
DOKKER/KANGOO	INJECTION	EMS 3125 INJECTION	Erase	RZ031	PROGRAMMING THROTTLE LIMITS
DOKKER/KANGOO	INJECTION	EMS 3125 INJECTION	Erase	RZ003	ENGINE ADAPTIVES
DOKKER/KANGOO	INJECTION	EMS 3125 INJECTION	Erase	RZ047	CRUISE CONTROL/SPEED LIMITER PROGRAMMING
DOKKER/KANGOO	INJECTION	EMS 3125 INJECTION	Erase	RZ064	ALCOHOL LEVEL PROG.
DOKKER/KANGOO	INJECTION	EMS 3125 INJECTION	Erase	RZ062	PROPORTIONAL RICHNESS SENSOR PROGRAMMING
DOKKER/KANGOO	INJECTION	EMS 3125 INJECTION	Erase	RZ046	INJECTOR ADAPTIVES
DOKKER/KANGOO	INJECTION	EMS 3125 INJECTION	Erase	RZ099	STOP AND START FUNCTION
DOKKER/KANGOO	INJECTION	EMS 3125 INJECTION	Erase	RZ079	NUMBER OF STARTING CYCLES
DOKKER/KANGOO	INJECTION	EMS 3125 INJECTION	Erase	RZ091	WASTE GATE REGULATION
DOKKER/KANGOO	INJECTION	EMS 3125 INJECTION	Erase	RZ097	HIGH PRESSURE PUMP COUNTER
DOKKER/KANGOO	INJECTION	EMS 3125 INJECTION	Configuration	SC006	START OBD TEST: CATALYTIC CONVERTER
DOKKER/KANGOO	INJECTION	EMS 3125 INJECTION	Configuration	SC007	START OBD TEST: O2 SENSORS
DOKKER/KANGOO	INJECTION	EMS 3125 INJECTION	Configuration	SC061	INTERVAL OF OIL CHANGE (OCS) OXIDATION
DOKKER/KANGOO	INJECTION	EMS 3125 INJECTION	Configuration	SC040	SPEED LIMITER
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Read Fault Code		
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Erase Fault Code		
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Read ECU Information		
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Live Data		
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Read Configuration		
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Actuation Test		
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Other Configuration	VP036	FUEL SUPPLY PREVENTION
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Other Configuration	VP342	VACUUM PUMP OPERATION REQUEST
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Other Configuration	VP010	WRITE V. I. N.
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Other Configuration	VP344	HIGH PRESSURE PUMP COUNTER
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Other Configuration	VP343	NUMBER OF STARTING CYCLES
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Other Configuration	VP310	ALTERNATOR SETPOINT VOLTAGE
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Other Configuration	VP386	VACUUM PUMP OPERATION REQUEST
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Other Configuration	VP387	VACUUM PUMP OPERATION REQUEST
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Erase	RZ001	FAULT MEMORY
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Erase	RZ037	FLYWHEEL TARGET PROGRAMMING

DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Erase	RZ031	PROGRAMMING THROTTLE LIMITS
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Erase	RZ003	ENGINE ADAPTIVES
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Erase	RZ047	CRUISE CONTROL/SPEED LIMITER PROGRAMMING
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Erase	RZ075	CAMSHAFT NO. 2 SENSOR PROGRAMMING
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Erase	RZ093	INJECTION PUMP ADAPTIVES
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Erase	RZ039	CAMSHAFT SENSOR PROGRAMMING
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Erase	RZ091	WASTE GATE REGULATION
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Erase	RZ061	FLYWHEEL TARGET PROGRAMMING
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Erase	RZ079	NUMBER OF STARTING CYCLES
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Erase	RZ062	PROPORTIONAL RICHNESS SENSOR PROGRAMMING
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Erase	RZ077	INJECTION PUMP ADAPTIVES
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Erase	RZ033	RICHNESS REGULATION PROGRAMMING
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Erase	RZ099	STOP AND START FUNCTION
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Erase	RZ097	HIGH PRESSURE PUMP COUNTER
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Erase	RZ065	FLYWHEEL TARGET PROGRAMMING
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Erase	RZ102	FLYWHEEL TARGET PROGRAMMING
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Erase	RZ103	FLYWHEEL TARGET PROGRAMMING
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Erase	RZ104	FLYWHEEL TARGET PROGRAMMING
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Erase	RZ105	FLYWHEEL TARGET PROGRAMMING
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Configuration	SC007	START OBD TEST: O2 SENSORS
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Configuration	SC001	WRITE SAVED DATA
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Configuration	SC003	SAVE COMPUTER DATA
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Configuration	SC061	INTERVAL OF OIL CHANGE (OCS) OXIDATION
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Configuration	SC040	SPEED LIMITER
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Configuration	SC042	FAST IDLE SPEED MODIFICATION
DOKKER/KANGOO	INJECTION	EMS 3120 INJECTION	Read Fault Code		
DOKKER/KANGOO	INJECTION	EMS 3120 INJECTION	Erase Fault Code		
DOKKER/KANGOO	INJECTION	EMS 3120 INJECTION	Read ECU Information		
DOKKER/KANGOO	INJECTION	EMS 3120 INJECTION	Live Data		
DOKKER/KANGOO	INJECTION	EMS 3120 INJECTION	Read Configuration		
DOKKER/KANGOO	INJECTION	EMS 3120 INJECTION	Actuation Test		
DOKKER/KANGOO	INJECTION	EMS 3120 INJECTION	Other Configuration	VP036	FUEL SUPPLY PREVENTION
DOKKER/KANGOO	INJECTION	EMS 3120 INJECTION	Other Configuration	VP010	WRITE V. L. N.
DOKKER/KANGOO	INJECTION	EMS 3120 INJECTION	Erase	RZ001	FAULT MEMORY
DOKKER/KANGOO	INJECTION	EMS 3120 INJECTION	Erase	RZ033	RICHNESS REGULATION PROGRAMMING
DOKKER/KANGOO	INJECTION	EMS 3120 INJECTION	Erase	RZ039	CAMSHAFT SENSOR PROGRAMMING
DOKKER/KANGOO	INJECTION	EMS 3120 INJECTION	Erase	RZ031	PROGRAMMING THROTTLE LIMITS
DOKKER/KANGOO	INJECTION	EMS 3120 INJECTION	Erase	RZ003	ENGINE ADAPTIVES
DOKKER/KANGOO	INJECTION	EMS 3120 INJECTION	Erase	RZ047	CRUISE CONTROL/SPEED LIMITER PROGRAMMING
DOKKER/KANGOO	INJECTION	EMS 3120 INJECTION	Erase	RZ064	ALCOHOL LEVEL PROG.
DOKKER/KANGOO	INJECTION	EMS 3120 INJECTION	Erase	RZ062	PROPORTIONAL RICHNESS SENSOR PROGRAMMING
DOKKER/KANGOO	INJECTION	EMS 3120 INJECTION	Erase	RZ046	INJECTOR ADAPTIVES
DOKKER/KANGOO	INJECTION	EMS 3120 INJECTION	Configuration	SC001	WRITE SAVED DATA
DOKKER/KANGOO	INJECTION	EMS 3120 INJECTION	Configuration	SC003	SAVE COMPUTER DATA
DOKKER/KANGOO	INJECTION	EMS 3120 INJECTION	Configuration	SC007	START OBD TEST: O2 SENSORS
DOKKER/KANGOO	INJECTION	EMS 3120 INJECTION	Configuration	SC047	SAVE COMPUTER DATA
DOKKER/KANGOO	INJECTION	EMS 3120 INJECTION	Configuration	SC048	WRITE SAVED DATA
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Read Fault Code		
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Erase Fault Code		
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Read ECU Information		
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Live Data		
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Read Configuration		
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Actuation Test		
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP036	FUEL SUPPLY PREVENTION
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP001	CYLINDER 1 INJECTOR CODE
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP002	CYLINDER 2 INJECTOR CODE
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP003	CYLINDER 3 INJECTOR CODE
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP004	CYLINDER 4 INJECTOR CODE
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP310	ALTERNATOR SETPOINT VOLTAGE
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP343	NUMBER OF STARTING CYCLES
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP344	HIGH PRESSURE PUMP COUNTER
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP010	WRITE V. L. N.
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP306	NUMBER OF STARTING 1
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP307	NUMBER OF STARTING 2
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP308	NUMBER OF STARTING 3
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP309	NUMBER OF STARTING 4
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Erase	RZ007	FAULT MEMORY
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Erase	RZ079	NUMBER OF STARTING CYCLES
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Erase	RZ099	STOP AND START FUNCTION
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Erase	RZ047	CRUISE CONTROL/SPEED LIMITER PROGRAMMING
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Erase	RZ003	ENGINE ADAPTIVES
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Erase	RZ012	EGR VALVE PROGRAMMING
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Erase	RZ044	AIR DAMPER VALVE PROGRAMMING
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Erase	RZ066	EXHAUST FLAP LOW SETTING
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Erase	RZ067	LOW PRESSURE EGR VALVE PROGRAMMING
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Erase	RZ069	FUEL PUMP PROGRAMMING
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Erase	RZ072	AIR FLOWMETER PROGRAMMING
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Erase	RZ084	EGR BYPASS PROGRAMMING
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Erase	RZ077	INJECTION PUMP ADAPTIVES
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Erase	RZ045	RAIL PRESSURE SENSOR ADAPTIVES
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Erase	RZ005	PROGRAMMED VALUES
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Erase	RZ062	PROPORTIONAL RICHNESS SENSOR PROGRAMMING
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Erase	RZ073	PARTICLE FILTER PRESSURE DIFF. SENSOR
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Erase	RZ014	ADAPTIVES ON AIR INTAKE FLAP FAULT
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Erase	RZ037	FLYWHEEL TARGET PROGRAMMING
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Erase	RZ097	HIGH PRESSURE PUMP COUNTER
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Erase	RZ078	STARTER ADAPTIVES
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Erase	RZ087	CATALYTIC CONVERTER
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Erase	RZ093	INJECTION PUMP ADAPTIVES
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Erase	RZ095	INJECTION TIME PROGRAMMING
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Configuration	SC001	WRITE SAVED DATA
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Configuration	SC003	SAVE COMPUTER DATA
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Configuration	SC017	PARTICLE FILTER REGENERATION
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Configuration	SC031	CYLINDER FUNCTION FAULT FINDING
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Configuration	SC040	SPEED LIMITER

DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS) : DILUTION
DOKKER/KANGOO	A.B.S.	ESP	Read Fault Code	
DOKKER/KANGOO	A.B.S.	ESP	Erase Fault Code	
DOKKER/KANGOO	A.B.S.	ESP	Read ECU Information	
DOKKER/KANGOO	A.B.S.	ESP	Live Data	
DOKKER/KANGOO	A.B.S.	ESP	Read Configuration	
DOKKER/KANGOO	A.B.S.	ESP	Actuation Test	
DOKKER/KANGOO	A.B.S.	ESP	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
DOKKER/KANGOO	A.B.S.	ESP	Other Configuration	VP001 WRITE VIN
DOKKER/KANGOO	A.B.S.	ESP	Other Configuration	VP007 SPEEDO INDEX
DOKKER/KANGOO	A.B.S.	ESP	Other Configuration	VP003 STEERING WHEEL ANGLE SENSOR
DOKKER/KANGOO	A.B.S.	ESP	Other Configuration	VP045 HILL START
DOKKER/KANGOO	A.B.S.	ESP	Erase	RZ001 FAULT MEMORY
DOKKER/KANGOO	A.B.S.	ESP	Erase	RZ008 TRANSVERSE ACCELERATION OFFSET SENSOR
DOKKER/KANGOO	A.B.S.	ESP	Erase	RZ009 BRAKE PRESSURE OFFSET SENSOR
DOKKER/KANGOO	A.B.S.	ESP	Erase	RZ007 STEERING WHEEL ANGLE OFFSET SENSOR
DOKKER/KANGOO	A.B.S.	ESP	Erase	RZ010 LONGITUDINAL ACCELERATION SENSOR OFFSET
DOKKER/KANGOO	A.B.S.	ESP	Configuration	SC001 CHECK TARGET TEETH
DOKKER/KANGOO	A.B.S.	ABS	Read Fault Code	
DOKKER/KANGOO	A.B.S.	ABS	Erase Fault Code	
DOKKER/KANGOO	A.B.S.	ABS	Read ECU Information	
DOKKER/KANGOO	A.B.S.	ABS	Live Data	
DOKKER/KANGOO	A.B.S.	ABS	Actuation Test	
DOKKER/KANGOO	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
DOKKER/KANGOO	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
DOKKER/KANGOO	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
DOKKER/KANGOO	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
DOKKER/KANGOO	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF149 GEARBOX TYPE
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF199 COMPUTER INITIALISATION
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF160 OVERSPEED ALARM
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF180 EXTERNAL TEMPERATURE
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF225 BATTERY CHARGE WARNING INFORMATION
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF158 SEAT BELT REMINDER BUZZER
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP010 UPDATE ODOMETER
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ002 RESET OIL CHANGE COUNTER
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF149 GEARBOX TYPE
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF150 CRUISE CTRL/SPD LIMITER
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF199 COMPUTER INITIALISATION
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF160 OVERSPEED ALARM
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF180 EXTERNAL TEMPERATURE
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF225 BATTERY CHARGE WARNING INFORMATION
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP010 UPDATE ODOMETER
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
DOKKER/KANGOO	UCH	UCH	Read Fault Code	
DOKKER/KANGOO	UCH	UCH	Erase Fault Code	
DOKKER/KANGOO	UCH	UCH	Read ECU Information	
DOKKER/KANGOO	UCH	UCH	Live Data	
DOKKER/KANGOO	UCH	UCH	Read Configuration	
DOKKER/KANGOO	UCH	UCH	Actuation Test	
DOKKER/KANGOO	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
DOKKER/KANGOO	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
DOKKER/KANGOO	UCH	UCH	Write Configuration	CF229 ALARM
DOKKER/KANGOO	UCH	UCH	Write Configuration	CF299 ACCESS/STARTER TYPE
DOKKER/KANGOO	UCH	UCH	Other Configuration	VP001 WRITE V. I. N.
DOKKER/KANGOO	UCH	UCH	Erase	RZ001 FAULT MEMORY
DOKKER/KANGOO	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
DOKKER/KANGOO	UCH	UCH	Read Fault Code	
DOKKER/KANGOO	UCH	UCH	Erase Fault Code	
DOKKER/KANGOO	UCH	UCH	Read ECU Information	
DOKKER/KANGOO	UCH	UCH	Live Data	
DOKKER/KANGOO	UCH	UCH	Read Configuration	
DOKKER/KANGOO	UCH	UCH	Actuation Test	
DOKKER/KANGOO	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
DOKKER/KANGOO	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
DOKKER/KANGOO	UCH	UCH	Write Configuration	CF229 ALARM
DOKKER/KANGOO	UCH	UCH	Write Configuration	CF314 STOP AND START FUNCTION
DOKKER/KANGOO	UCH	UCH	Write Configuration	CF299 ACCESS/STARTER TYPE
DOKKER/KANGOO	UCH	UCH	Other Configuration	VP001 WRITE V. I. N.
DOKKER/KANGOO	UCH	UCH	Erase	RZ001 FAULT MEMORY
DOKKER/KANGOO	UCH	UCH	Erase	RZ013 HIGH PRESSURE PUMP COUNTER

DOKKER/KANGOO	UCH	UCH	Erase	RZ014	NUMBER OF STARTING CYCLES
DOKKER/KANGOO	UCH	UCH	Erase	RZ016	STOP AND START FUNCTION
DOKKER/KANGOO	UCH	UCH	Configuration	SC002	PROGRAMMING THE CODES OF THE FOUR VALVES
DOKKER/KANGOO	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code		
DOKKER/KANGOO	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code		
DOKKER/KANGOO	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information		
DOKKER/KANGOO	AIRBAG / PRETENSIONERS	AIRBAG	Live Data		
DOKKER/KANGOO	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration		
DOKKER/KANGOO	AIRBAG / PRETENSIONERS	AIRBAG	Actuation Test		
DOKKER/KANGOO	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010	WRITE VIN
DOKKER/KANGOO	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006	LOCK COMPUTER
DOKKER/KANGOO	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007	UNLOCK COMPUTER
DOKKER/KANGOO	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001	FAULT MEMORY
DOKKER/KANGOO	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004	READING IMPACT CONTEXTS
DOKKER/KANGOO	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC005	CONFIGURATION OF SYSTEM COMPONENTS
DOKKER/KANGOO	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC013	SENSOR CONFIGURATION
DOKKER/KANGOO	VARIABLE P.A.S.	PAS PUMP ASS.	Read Fault Code		
DOKKER/KANGOO	VARIABLE P.A.S.	PAS PUMP ASS.	Erase Fault Code		
DOKKER/KANGOO	VARIABLE P.A.S.	PAS PUMP ASS.	Read ECU Information		
DOKKER/KANGOO	VARIABLE P.A.S.	PAS PUMP ASS.	Live Data		
DOKKER/KANGOO	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP001	WRITE VIN
DOKKER/KANGOO	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP005	WRITE DATE OF AFTER SALES OPERATION
DOKKER/KANGOO	VARIABLE P.A.S.	PAS PUMP ASS.	Erase	RZ001	FAULT MEMORY
DOKKER/KANGOO	RADIO	RADIO	Read Fault Code		
DOKKER/KANGOO	RADIO	RADIO	Erase Fault Code		
DOKKER/KANGOO	RADIO	RADIO	Read ECU Information		
DOKKER/KANGOO	RADIO	RADIO	Live Data		
DOKKER/KANGOO	RADIO	RADIO	Read Configuration		
DOKKER/KANGOO	RADIO	RADIO	Actuation Test		
DOKKER/KANGOO	RADIO	RADIO	Write Configuration	CF016	COUNTRY MODEL
DOKKER/KANGOO	RADIO	RADIO	Write Configuration	CF027	LANGUAGE
DOKKER/KANGOO	RADIO	RADIO	Other Configuration	VP001	WRITE VIN
DOKKER/KANGOO	RADIO	RADIO	Configuration	SC002	COMP CONFIGURAION
DOKKER/KANGOO	RADIO	RADIO	Erase	RZ003	FAULT MEMORY
DOKKER/KANGOO	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code		
DOKKER/KANGOO	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code		
DOKKER/KANGOO	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information		
DOKKER/KANGOO	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data		
DOKKER/KANGOO	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test		
DOKKER/KANGOO	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VP001	WRITE VIN
DOKKER/KANGOO	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003	FAULT MEMORY
DOKKER/KANGOO	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001	COMPUTER RESET
DOKKER/KANGOO	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ004	EMERGENCY CALL SERVICE
DOKKER/KANGOO	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code		
DOKKER/KANGOO	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code		
DOKKER/KANGOO	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information		
DOKKER/KANGOO	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data		
DOKKER/KANGOO	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test		
DOKKER/KANGOO	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VP001	WRITE VIN
DOKKER/KANGOO	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003	FAULT MEMORY
DOKKER/KANGOO	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001	COMPUTER RESET
DOKKER/KANGOO	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Fault Code		
DOKKER/KANGOO	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase Fault Code		
DOKKER/KANGOO	HANDS-FREE MODULE	HANDS-FREE MODULE	Read ECU Information		
DOKKER/KANGOO	HANDS-FREE MODULE	HANDS-FREE MODULE	Live Data		
DOKKER/KANGOO	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Configuration		
DOKKER/KANGOO	HANDS-FREE MODULE	HANDS-FREE MODULE	Actuation Test		
DOKKER/KANGOO	HANDS-FREE MODULE	HANDS-FREE MODULE	Other Configuration	VP002	WRITE V. I. N.
DOKKER/KANGOO	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase	RZ001	FAULT MEMORY
DOKKER/KANGOO	RADIO	RADIO	Read Fault Code		
DOKKER/KANGOO	RADIO	RADIO	Erase Fault Code		
DOKKER/KANGOO	RADIO	RADIO	Read ECU Information		
DOKKER/KANGOO	RADIO	RADIO	Live Data		
DOKKER/KANGOO	RADIO	RADIO	Read Configuration		
DOKKER/KANGOO	RADIO	RADIO	Actuation Test		
DOKKER/KANGOO	RADIO	RADIO	Write Configuration	CF053	REAR LOUD SPEAKER
DOKKER/KANGOO	RADIO	RADIO	Write Configuration	CF016	COUNTRY MODEL
DOKKER/KANGOO	RADIO	RADIO	Write Configuration	CF027	LANGUAGE
DOKKER/KANGOO	RADIO	RADIO	Other Configuration	VP003	WRITE DATE OF AFTER SALES OPERATION
DOKKER/KANGOO	RADIO	RADIO	Erase	RZ003	FAULT MEMORY
DOKKER/KANGOO	RADIO	RADIO	Read Fault Code		
DOKKER/KANGOO	RADIO	RADIO	Erase Fault Code		
DOKKER/KANGOO	RADIO	RADIO	Read ECU Information		
DOKKER/KANGOO	RADIO	RADIO	Live Data		
DOKKER/KANGOO	RADIO	RADIO	Read Configuration		
DOKKER/KANGOO	RADIO	RADIO	Actuation Test		
DOKKER/KANGOO	RADIO	RADIO	Write Configuration	CF016	COUNTRY MODEL
DOKKER/KANGOO	RADIO	RADIO	Write Configuration	CF027	LANGUAGE
DOKKER/KANGOO	RADIO	RADIO	Write Configuration	CF066	GUIDELINES
DOKKER/KANGOO	RADIO	RADIO	Other Configuration	VP003	WRITE DATE OF AFTER SALES OPERATION
DOKKER/KANGOO	RADIO	RADIO	Other Configuration	VP001	WRITE VIN
DOKKER/KANGOO	RADIO	RADIO	Erase	RZ005	FAULT MEMORY
DOKKER/KANGOO	RADIO	RADIO	Configuration	SC005	SYSTEM CONFIGURATION
DOKKER/KANGOO	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read Fault Code		
DOKKER/KANGOO	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase Fault Code		
DOKKER/KANGOO	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read ECU Information		
DOKKER/KANGOO	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Live Data		
DOKKER/KANGOO	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Actuation Test		
DOKKER/KANGOO	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Other Configuration	VP001	WRITE VIN
DOKKER/KANGOO	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase	RZ001	FAULT MEMORY
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Read Fault Code		
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Erase Fault Code		
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Read ECU Information		
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Live Data		
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Function Test		

DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Read Configuration	
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Actuation Test	
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Write Configuration	CF196 STOP AND START FUNCTION
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Other Configuration	VPO36 FUEL SUPPLY PREVENTION
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Other Configuration	VPO10 WRITE V. I. N.
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Other Configuration	VPO52 BOOST PRESSURE WASTEGATE PROGRAMMING
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Other Configuration	VP403 STATIC REGENERATION (IN WORKSHOP)
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Erase	RZ125 COMPUTER RESET
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Erase	RZ133 RAIL PRESSURE LIMITER
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Erase	RZ126 CYLINDER PRESSURE SENSOR
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Erase	RZ118 STARTING AUTHORIZATION
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Erase	RZ132 FUEL PUMP PRIMING COMPLETE
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Erase	RZ136 UPSTREAM OXYGEN SENSOR RESET
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Erase	RZ137 DOWNSTREAM OXYGEN SENSOR RESET
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Erase	RZ148 DOWNSTREAM OXYGEN SENSOR RESET
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Erase	RZ147 UPSTREAM OXYGEN SENSOR RESET
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Erase	RZ070 TURBOCHARGER PROGRAMMING
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Erase	RZ084 EGR BYPASS PROGRAMMING
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Erase	RZ135 AIR DAMPER VALVE PROGRAMMING
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Erase	RZ168 SCR OUTLET AMMONIA LEAK METER
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Erase	RZ099 STOP AND START FUNCTION
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Erase	RZ088 AIR DAMPER VALVE PROGRAMMING
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Erase	RZ152 TURBOCHARGER FUNCTION
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Configuration	SC001 WRITE SAVED DATA
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Configuration	SC040 SPEED LIMITER
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Configuration	SC083 ADBLUE SYSTEM PERFORMANCE
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Configuration	SC071 CYLINDER FUNCTION FAULT FINDING
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
DOKKER/KANGOO	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read Fault Code	
DOKKER/KANGOO	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase Fault Code	
DOKKER/KANGOO	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read ECU Information	
DOKKER/KANGOO	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Live Data	
DOKKER/KANGOO	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Function Test	
DOKKER/KANGOO	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Actuation Test	
DOKKER/KANGOO	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VPO57 ADBLUE MODULE ELECTRICAL CHECK
DOKKER/KANGOO	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VPO50 ADBLUE FIRST FILLING TEST
DOKKER/KANGOO	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VPO51 ADBLUE EMPTYING TEST
DOKKER/KANGOO	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VPO56 ADBLUE INJECTOR SOUND TEST
DOKKER/KANGOO	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VPO55 ADBLUE INJECTOR RELEASE TEST
DOKKER/KANGOO	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VPO12 WRITE VIN
DOKKER/KANGOO	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VPO52 FLOW RATE FUNCTION
DOKKER/KANGOO	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VPO58 OVERALL RESULT
DOKKER/KANGOO	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ008 INJECTOR HEATING
DOKKER/KANGOO	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ012 OVERALL QUANTITY OF ADBLUE INJECTED
DOKKER/KANGOO	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ011 RESET OF THE HEATING COUNTER ACTIVE TIME
DOKKER/KANGOO	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Configuration	SC001 WRITE SAVED DATA
DOKKER/KANGOO	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Configuration	SC002 SAVE COMPUTER DATA
DUSTER	INJECTION	V42 INJECTION	Read Fault Code	
DUSTER	INJECTION	V42 INJECTION	Erase Fault Code	
DUSTER	INJECTION	V42 INJECTION	Read ECU Information	
DUSTER	INJECTION	V42 INJECTION	Live Data	
DUSTER	INJECTION	V42 INJECTION	Actuation Test	
DUSTER	INJECTION	V42 INJECTION	Other Configuration	VPO10 WRITE V. I. N.
DUSTER	INJECTION	V42 INJECTION	Other Configuration	VPO36 FUEL SUPPLY PREVENTION
DUSTER	INJECTION	V42 INJECTION	Erase	RZ001 FAULT MEMORY
DUSTER	INJECTION	V42 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
DUSTER	INJECTION	V42 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
DUSTER	INJECTION	V42 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
DUSTER	INJECTION	V42 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
DUSTER	INJECTION	V42 INJECTION	Erase	RZ064 ALCOHOL LEVEL PROG.
DUSTER	INJECTION	V42 INJECTION	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
DUSTER	INJECTION	V42 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
DUSTER	INJECTION	V42 INJECTION	Configuration	SC001 WRITE SAVED DATA
DUSTER	INJECTION	V42 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
DUSTER	INJECTION	V42 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
DUSTER	INJECTION	INJECTION DCM 3.4	Read Fault Code	
DUSTER	INJECTION	INJECTION DCM 3.4	Erase Fault Code	
DUSTER	INJECTION	INJECTION DCM 3.4	Read ECU Information	
DUSTER	INJECTION	INJECTION DCM 3.4	Live Data	
DUSTER	INJECTION	INJECTION DCM 3.4	Read Configuration	
DUSTER	INJECTION	INJECTION DCM 3.4	Actuation Test	
DUSTER	INJECTION	INJECTION DCM 3.4	Other Configuration	VPO36 FUEL SUPPLY PREVENTION
DUSTER	INJECTION	INJECTION DCM 3.4	Other Configuration	VPO37 STOP FUEL SUPPLY PREVENTION
DUSTER	INJECTION	INJECTION DCM 3.4	Other Configuration	VPO10 WRITE V. I. N.
DUSTER	INJECTION	INJECTION DCM 3.4	Other Configuration	VP292 PARAMETRAGE PRIVE 237
DUSTER	INJECTION	INJECTION DCM 3.4	Other Configuration	VP293 PARAMETRAGE PRIVE 238

DUSTER	INJECTION	INJECTION DCM 3.4	Other Configuration	VP294	PARAMETRAGE PRIVE 239
DUSTER	INJECTION	INJECTION DCM 3.4	Other Configuration	VP295	PARAMETRAGE PRIVE 240
DUSTER	INJECTION	INJECTION DCM 3.4	Erase	RZ001	FAULT MEMORY
DUSTER	INJECTION	INJECTION DCM 3.4	Erase	RZ045	RAIL PRESSURE SENSOR ADAPTIVES
DUSTER	INJECTION	INJECTION DCM 3.4	Erase	RZ004	PRESSURE REGULATION ADAPTIVES
DUSTER	INJECTION	INJECTION DCM 3.4	Erase	RZ012	EGR VALVE PROGRAMMING
DUSTER	INJECTION	INJECTION DCM 3.4	Erase	RZ032	AIR PATH PROGRAMMING
DUSTER	INJECTION	INJECTION DCM 3.4	Erase	RZ036	PARTICLE FILTER RELATIVE PRESSURE SENSOR
DUSTER	INJECTION	INJECTION DCM 3.4	Erase	RZ041	FUEL FLOW REGULATOR
DUSTER	INJECTION	INJECTION DCM 3.4	Erase	RZ043	EXHAUST INJECTOR CIRCUIT
DUSTER	INJECTION	INJECTION DCM 3.4	Erase	RZ044	AIR DAMPER VALVE PROGRAMMING
DUSTER	INJECTION	INJECTION DCM 3.4	Erase	RZ003	ENGINE ADAPTIVES
DUSTER	INJECTION	INJECTION DCM 3.4	Erase	RZ039	CAMSHAFT SENSOR PROGRAMMING
DUSTER	INJECTION	INJECTION DCM 3.4	Erase	RZ037	FLYWHEEL TARGET PROGRAMMING
DUSTER	INJECTION	INJECTION DCM 3.4	Erase	RZ047	CRUISE CONTROL/SPEED LIMITER PROGRAMMING
DUSTER	INJECTION	INJECTION DCM 3.4	Configuration	SC002	ENTER INJECTOR CODES
DUSTER	INJECTION	INJECTION DCM 3.4	Configuration	SC017	PARTICLE FILTER REGENERATION
DUSTER	INJECTION	INJECTION DCM 3.4	Configuration	SC040	SPEED LIMITER
DUSTER	INJECTION	INJECTION DCM 3.4	Configuration	SC041	COMMERCIAL VEHICLE IDLE SPEED MODIFICATION
DUSTER	INJECTION	INJECTION DCM 3.4	Configuration	SC051	ADAPTIVES AFTER REPLACING PARTICLE FILTER
DUSTER	INJECTION	INJECTION DCM 3.4	Configuration	SC052	ADAPTIVES AFTER REGENERATING PARTICLE FILTER
DUSTER	INJECTION	INJECTION DCM 3.4	Configuration	SC053	INJECTOR ADAPTIVES
DUSTER	INJECTION	INJECTION DCM 3.4	Configuration	SC054	INJECTOR ADAPTIVES
DUSTER	INJECTION	INJECTION DCM 3.4	Configuration	SC060	PARTICLE FILTER REGENERATION
DUSTER	INJECTION	INJECTION DCM 3.4	Configuration	SC061	INTERVAL OF OIL CHANGE (OCS) OXIDATION
DUSTER	INJECTION	INJECTION DCM 3.4	Configuration	SC062	OIL CHANGE INTERVAL (OCS) : DILUTION
DUSTER	INJECTION	INJECTION DCM 3.4	Configuration	SC044	ENTER INJECTOR CODES
DUSTER	INJECTION	SID 305 INJECTION	Read Fault Code		
DUSTER	INJECTION	SID 305 INJECTION	Erase Fault Code		
DUSTER	INJECTION	SID 305 INJECTION	Read ECU Information		
DUSTER	INJECTION	SID 305 INJECTION	Live Data		
DUSTER	INJECTION	SID 305 INJECTION	Read Configuration		
DUSTER	INJECTION	SID 305 INJECTION	Actuation Test		
DUSTER	INJECTION	SID 305 INJECTION	Other Configuration	VP010	WRITE V. I. N.
DUSTER	INJECTION	SID 305 INJECTION	Other Configuration	VP036	FUEL SUPPLY PREVENTION
DUSTER	INJECTION	SID 305 INJECTION	Other Configuration	VP037	STOP FUEL SUPPLY PREVENTION
DUSTER	INJECTION	SID 305 INJECTION	Erase	RZ001	FAULT MEMORY
DUSTER	INJECTION	SID 305 INJECTION	Erase	RZ003	ENGINE ADAPTIVES
DUSTER	INJECTION	SID 305 INJECTION	Erase	RZ004	PRESSURE REGULATION ADAPTIVES
DUSTER	INJECTION	SID 305 INJECTION	Erase	RZ012	EGR VALVE PROGRAMMING
DUSTER	INJECTION	SID 305 INJECTION	Erase	RZ036	PARTICLE FILTER RELATIVE PRESSURE SENSOR
DUSTER	INJECTION	SID 305 INJECTION	Erase	RZ043	EXHAUST INJECTOR CIRCUIT
DUSTER	INJECTION	SID 305 INJECTION	Erase	RZ044	AIR DAMPER VALVE PROGRAMMING
DUSTER	INJECTION	SID 305 INJECTION	Erase	RZ047	CRUISE CONTROL/SPEED LIMITER PROGRAMMING
DUSTER	INJECTION	SID 305 INJECTION	Configuration	SC001	WRITE SAVED DATA
DUSTER	INJECTION	SID 305 INJECTION	Configuration	SC002	ENTER INJECTOR CODES
DUSTER	INJECTION	SID 305 INJECTION	Configuration	SC003	SAVE COMPUTER DATA
DUSTER	INJECTION	SID 305 INJECTION	Configuration	SC004	HIGH PRESSURE CIRCUIT LEAK TEST
DUSTER	INJECTION	SID 305 INJECTION	Configuration	SC017	PARTICLE FILTER REGENERATION
DUSTER	INJECTION	SID 305 INJECTION	Configuration	SC040	SPEED LIMITER
DUSTER	INJECTION	SID 305 INJECTION	Configuration	SC041	COMMERCIAL VEHICLE IDLE SPEED MODIFICATION
DUSTER	INJECTION	SID 305 INJECTION	Configuration	SC051	ADAPTIVES AFTER REPLACING PARTICLE FILTER
DUSTER	INJECTION	SID 305 INJECTION	Configuration	SC052	ADAPTIVES AFTER REGENERATING PARTICLE FILTER
DUSTER	INJECTION	SID 305 INJECTION	Configuration	SC060	PARTICLE FILTER REGENERATION
DUSTER	INJECTION	SID 305 INJECTION	Configuration	SC061	INTERVAL OF OIL CHANGE (OCS) OXIDATION
DUSTER	INJECTION	SID 305 INJECTION	Configuration	SC062	OIL CHANGE INTERVAL (OCS) : DILUTION
DUSTER	AUTOMATIC GEARBOX	DPO TA2005 ATX	Read Fault Code		
DUSTER	AUTOMATIC GEARBOX	DPO TA2005 ATX	Erase Fault Code		
DUSTER	AUTOMATIC GEARBOX	DPO TA2005 ATX	Read ECU Information		
DUSTER	AUTOMATIC GEARBOX	DPO TA2005 ATX	Live Data		
DUSTER	AUTOMATIC GEARBOX	DPO TA2005 ATX	Actuation Test		
DUSTER	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP009	WRITE DATE OF LAST AFTER SALES OPERATION
DUSTER	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP016	WRITE TRANSMISSION OIL CHANGE DATE
DUSTER	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP001	WRITE VIN
DUSTER	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP015	NOTE OIL WEAR COUNTER
DUSTER	AUTOMATIC GEARBOX	DPO TA2005 ATX	Erase	RZ004	FAULT MEMORY
DUSTER	AUTOMATIC GEARBOX	DPO TA2005 ATX	Erase	RZ005	AUTO-ADAPTIVES
DUSTER	4 WHEELS DRIVE	4 WHEELS DRIVE	Read Fault Code		
DUSTER	4 WHEELS DRIVE	4 WHEELS DRIVE	Erase Fault Code		
DUSTER	4 WHEELS DRIVE	4 WHEELS DRIVE	Read ECU Information		
DUSTER	4 WHEELS DRIVE	4 WHEELS DRIVE	Live Data		
DUSTER	4 WHEELS DRIVE	4 WHEELS DRIVE	Actuation Test		
DUSTER	4 WHEELS DRIVE	4 WHEELS DRIVE	Write Configuration	CF001	VEHICLE TYPE
DUSTER	4 WHEELS DRIVE	4 WHEELS DRIVE	Write Configuration	CF002	GEARBOX TYPE
DUSTER	4 WHEELS DRIVE	4 WHEELS DRIVE	Other Configuration	VP003	WRITE VIN
DUSTER	4 WHEELS DRIVE	4 WHEELS DRIVE	Other Configuration	VP002	SPEEDO INDEX
DUSTER	4 WHEELS DRIVE	4 WHEELS DRIVE	Other Configuration	VP004	COMPUTER INITIALISATION
DUSTER	4 WHEELS DRIVE	4 WHEELS DRIVE	Other Configuration	VP007	MODIFICATION OF PARAMETERS AFTER INITIALISATION
DUSTER	4 WHEELS DRIVE	4 WHEELS DRIVE	Other Configuration	VP001	VEHICLE PARAMETERS
DUSTER	4 WHEELS DRIVE	4 WHEELS DRIVE	Erase	RZ001	FAULT MEMORY
DUSTER	4 WHEELS DRIVE	4 WHEELS DRIVE	Configuration	SC001	CHECK TARGET TEETH
DUSTER	RADIO	RADIO	Read Fault Code		
DUSTER	RADIO	RADIO	Erase Fault Code		
DUSTER	RADIO	RADIO	Read ECU Information		
DUSTER	RADIO	RADIO	Live Data		
DUSTER	RADIO	RADIO	Read Configuration		
DUSTER	RADIO	RADIO	Actuation Test		
DUSTER	RADIO	RADIO	Other Configuration	VP003	WRITE DATE OF AFTER SALES OPERATION
DUSTER	RADIO	RADIO	Other Configuration	VP016	CONFIGURING THE MULTIMEDIA COMPUTER
DUSTER	RADIO	RADIO	Erase	RZ003	FAULT MEMORY
DUSTER	RADIO	RADIO	Configuration	SC002	COMP CONFIGURATION
DUSTER	RADIO	RADIO	Configuration	SC003	COMP CONFIGURATION
DUSTER	RADIO	RADIO	Read Fault Code		
DUSTER	RADIO	RADIO	Erase Fault Code		
DUSTER	RADIO	RADIO	Read ECU Information		

DUSTER	RADIO	RADIO	Live Data	
DUSTER	RADIO	RADIO	Read Configuration	
DUSTER	RADIO	RADIO	Actuation Test	
DUSTER	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
DUSTER	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
DUSTER	RADIO	RADIO	Write Configuration	CF014 DRIVING TYPE
DUSTER	RADIO	RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
DUSTER	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
DUSTER	RADIO	RADIO	Erase	RZ005 FAULT MEMORY
DUSTER	RADIO	RADIO	Erase	RZ004 RESET RADIO
DUSTER	RADIO	RADIO	Configuration	SC002 COMP CONFIGURATION
DUSTER	INJECTION	INJECTION DCM 1.2	Read Fault Code	
DUSTER	INJECTION	INJECTION DCM 1.2	Erase Fault Code	
DUSTER	INJECTION	INJECTION DCM 1.2	Read ECU Information	
DUSTER	INJECTION	INJECTION DCM 1.2	Live Data	
DUSTER	INJECTION	INJECTION DCM 1.2	Actuation Test	
DUSTER	INJECTION	INJECTION DCM 1.2	Other Configuration	VP010 WRITE V. I. N.
DUSTER	INJECTION	INJECTION DCM 1.2	Other Configuration	VP001 CYLINDER 1 INJECTOR CODE
DUSTER	INJECTION	INJECTION DCM 1.2	Other Configuration	VP002 CYLINDER 2 INJECTOR CODE
DUSTER	INJECTION	INJECTION DCM 1.2	Other Configuration	VP003 CYLINDER 3 INJECTOR CODE
DUSTER	INJECTION	INJECTION DCM 1.2	Other Configuration	VP004 CYLINDER 4 INJECTOR CODE
DUSTER	INJECTION	INJECTION DCM 1.2	Other Configuration	VP013 LOCK INJECTOR CONTROL
DUSTER	INJECTION	INJECTION DCM 1.2	Erase	RZ001 FAULT MEMORY
DUSTER	INJECTION	INJECTION DCM 1.2	Erase	RZ002 EGR ADAPTIVES
DUSTER	INJECTION	INJECTION DCM 1.2	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
DUSTER	INJECTION	INJECTION DCM 1.2	Erase	RZ007 FAULT MEMORY
DUSTER	INJECTION	INJECTION DCM 1.2	Configuration	SC002 ENTER INJECTOR CODES
DUSTER	INJECTION	EMS 3130 INJECTION	Read Fault Code	
DUSTER	INJECTION	EMS 3130 INJECTION	Erase Fault Code	
DUSTER	INJECTION	EMS 3130 INJECTION	Read ECU Information	
DUSTER	INJECTION	EMS 3130 INJECTION	Live Data	
DUSTER	INJECTION	EMS 3130 INJECTION	Read Configuration	
DUSTER	INJECTION	EMS 3130 INJECTION	Actuation Test	
DUSTER	INJECTION	EMS 3130 INJECTION	Other Configuration	VP020 WRITE VIN
DUSTER	INJECTION	EMS 3130 INJECTION	Erase	RZ007 FAULT MEMORY
DUSTER	INJECTION	EMS 3130 INJECTION	Erase	RZ019 PROGRAMMING REINITIALISATION
DUSTER	A.B.S.	ESP	Read Fault Code	
DUSTER	A.B.S.	ESP	Erase Fault Code	
DUSTER	A.B.S.	ESP	Read ECU Information	
DUSTER	A.B.S.	ESP	Live Data	
DUSTER	A.B.S.	ESP	Actuation Test	
DUSTER	A.B.S.	ESP	Other Configuration	VP001 WRITE VIN
DUSTER	A.B.S.	ESP	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
DUSTER	A.B.S.	ESP	Other Configuration	VP004 VEHICLE PARAMETERS
DUSTER	A.B.S.	ESP	Other Configuration	VP007 SPEEDO INDEX
DUSTER	A.B.S.	ESP	Erase	RZ001 FAULT MEMORY
DUSTER	A.B.S.	ESP	Erase	RZ011 SENSOR OFFSETS
DUSTER	A.B.S.	ESP	Configuration	SC001 CHECK TARGET TEETH
DUSTER	A.B.S.	ESP	Configuration	SC006 BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS
DUSTER	A.B.S.	ABS	Read Fault Code	
DUSTER	A.B.S.	ABS	Erase Fault Code	
DUSTER	A.B.S.	ABS	Read ECU Information	
DUSTER	A.B.S.	ABS	Live Data	
DUSTER	A.B.S.	ABS	Actuation Test	
DUSTER	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
DUSTER	A.B.S.	ABS	Other Configuration	VP004 VEHICLE PARAMETERS
DUSTER	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
DUSTER	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
DUSTER	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
DUSTER	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
DUSTER	A.B.S.	ABS	Configuration	SC006 BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS
DUSTER	UCH	UCH	Read Fault Code	
DUSTER	UCH	UCH	Erase Fault Code	
DUSTER	UCH	UCH	Read ECU Information	
DUSTER	UCH	UCH	Live Data	
DUSTER	UCH	UCH	Read Configuration	
DUSTER	UCH	UCH	Actuation Test	
DUSTER	UCH	UCH	Write Configuration	CF167 FLASHING BUZZER
DUSTER	UCH	UCH	Other Configuration	VP004 WRITE VIN
DUSTER	UCH	UCH	Erase	RZ001 FAULT MEMORY
DUSTER	UCH	UCH	Configuration	SC008 UCH TYPE
DUSTER	UCH	UCH	Read Fault Code	
DUSTER	UCH	UCH	Erase Fault Code	
DUSTER	UCH	UCH	Read ECU Information	
DUSTER	UCH	UCH	Live Data	
DUSTER	UCH	UCH	Read Configuration	
DUSTER	UCH	UCH	Actuation Test	
DUSTER	UCH	UCH	Write Configuration	CF167 FLASHING BUZZER
DUSTER	UCH	UCH	Write Configuration	CF272 SDO
DUSTER	UCH	UCH	Other Configuration	VP004 WRITE VIN
DUSTER	UCH	UCH	Erase	RZ001 FAULT MEMORY
DUSTER	UCH	UCH	Configuration	SC008 UCH TYPE
DUSTER	UCH	UCH	Read Fault Code	
DUSTER	UCH	UCH	Erase Fault Code	
DUSTER	UCH	UCH	Read ECU Information	
DUSTER	UCH	UCH	Live Data	
DUSTER	UCH	UCH	Read Configuration	
DUSTER	UCH	UCH	Actuation Test	
DUSTER	UCH	UCH	Write Configuration	CF167 FLASHING BUZZER
DUSTER	UCH	UCH	Write Configuration	CF272 SDO
DUSTER	UCH	UCH	Other Configuration	VP004 WRITE VIN
DUSTER	UCH	UCH	Erase	RZ001 FAULT MEMORY
DUSTER	UCH	UCH	Configuration	SC008 UCH TYPE
DUSTER	UCH	UCH	Read Fault Code	
DUSTER	UCH	UCH	Erase Fault Code	
DUSTER	UCH	UCH	Read ECU Information	

DUSTER	UCH	UCH	Live Data	
DUSTER	UCH	UCH	Read Configuration	
DUSTER	UCH	UCH	Actuation Test	
DUSTER	UCH	UCH	Write Configuration	CF167 FLASHING BUZZER
DUSTER	UCH	UCH	Write Configuration	CF272 SDO
DUSTER	UCH	UCH	Other Configuration	VP004 WRITE VIN
DUSTER	UCH	UCH	Erase	RZ001 FAULT MEMORY
DUSTER	UCH	UCH	Configuration	SC008 UCH TYPE
DUSTER	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
DUSTER	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
DUSTER	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
DUSTER	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
DUSTER	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
DUSTER	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF209 DRIVER'S FRONT AIRBAG
DUSTER	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF210 PASSENGER'S FRONT AIRBAG
DUSTER	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF223 FRONT THORAX SIDE AIR BAG, DRIVER SIDE
DUSTER	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF224 FRONT THORAX SIDE AIR BAG, PASSENGER SIDE
DUSTER	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF285 DRIVER'S FRONT SIDE IMPACT SENSOR
DUSTER	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF286 PASSENGER'S FRONT SIDE IMPACT SENSOR
DUSTER	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF273 DRIVER'S SEAT BUCKLE SENSOR
DUSTER	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF248 PASSENGER AIR BAG LOCKING MODE
DUSTER	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF291 SIDE ON WHICH STEERING WHEEL FITTED
DUSTER	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF036 PASS AIRBAG DEACTIVATION WARNING LIGHT
DUSTER	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF211 IMPACT INFORMATION CONNECTION
DUSTER	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF050 DRIVER'S FRONT INERTIA REEL
DUSTER	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF051 PASSENGER'S FRONT INERTIA REEL
DUSTER	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF049 SEAT BELT LIGHT
DUSTER	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF048 SEAT BELT REMINDER BUZZER
DUSTER	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF274 PASSENGER'S SEAT BUCKLE SENSOR
DUSTER	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF275 PASSENGER PRESENCE DETECTION SENSOR
DUSTER	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
DUSTER	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
DUSTER	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
DUSTER	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
DUSTER	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
DUSTER	VARIABLE P.A.S.	PAS PUMP ASS.	Read Fault Code	
DUSTER	VARIABLE P.A.S.	PAS PUMP ASS.	Erase Fault Code	
DUSTER	VARIABLE P.A.S.	PAS PUMP ASS.	Read ECU Information	
DUSTER	VARIABLE P.A.S.	PAS PUMP ASS.	Live Data	
DUSTER	VARIABLE P.A.S.	PAS PUMP ASS.	Read Configuration	
DUSTER	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP001 WRITE VIN
DUSTER	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP005 WRITE DATE OF AFTER SALES OPERATION
DUSTER	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP006 COMPUTER CALIBRATION
DUSTER	VARIABLE P.A.S.	PAS PUMP ASS.	Erase	RZ001 FAULT MEMORY
DUSTER	VARIABLE P.A.S.	PAS PUMP ASS.	Read Fault Code	
DUSTER	VARIABLE P.A.S.	PAS PUMP ASS.	Erase Fault Code	
DUSTER	VARIABLE P.A.S.	PAS PUMP ASS.	Read ECU Information	
DUSTER	VARIABLE P.A.S.	PAS PUMP ASS.	Live Data	
DUSTER	VARIABLE P.A.S.	PAS PUMP ASS.	Read Configuration	
DUSTER	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP001 WRITE VIN
DUSTER	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP005 WRITE DATE OF AFTER SALES OPERATION
DUSTER	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP006 COMPUTER CALIBRATION
DUSTER	VARIABLE P.A.S.	PAS PUMP ASS.	Erase	RZ001 FAULT MEMORY
DUSTER	TRACKER	TRACKER	Read Fault Code	
DUSTER	TRACKER	TRACKER	Erase Fault Code	
DUSTER	TRACKER	TRACKER	Read ECU Information	
DUSTER	TRACKER	TRACKER	Live Data	
DUSTER	TRACKER	TRACKER	Read Configuration	
DUSTER	TRACKER	TRACKER	Write Configuration	CF001 SVT CONFIGURATION
DUSTER	TRACKER	TRACKER	Other Configuration	VP001 WRITE V. I. N.
DUSTER	TRACKER	TRACKER	Erase	RZ001 FAULT MEMORY
DUSTER ph2	INJECTION	INJECTION DCM 3.4	Read Fault Code	
DUSTER ph2	INJECTION	INJECTION DCM 3.4	Erase Fault Code	
DUSTER ph2	INJECTION	INJECTION DCM 3.4	Read ECU Information	
DUSTER ph2	INJECTION	INJECTION DCM 3.4	Live Data	
DUSTER ph2	INJECTION	INJECTION DCM 3.4	Read Configuration	
DUSTER ph2	INJECTION	INJECTION DCM 3.4	Actuation Test	
DUSTER ph2	INJECTION	INJECTION DCM 3.4	Other Configuration	VP036 FUEL SUPPLY PREVENTION
DUSTER ph2	INJECTION	INJECTION DCM 3.4	Other Configuration	VP010 WRITE V. I. N.
DUSTER ph2	INJECTION	INJECTION DCM 3.4	Erase	RZ001 FAULT MEMORY
DUSTER ph2	INJECTION	INJECTION DCM 3.4	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
DUSTER ph2	INJECTION	INJECTION DCM 3.4	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
DUSTER ph2	INJECTION	INJECTION DCM 3.4	Erase	RZ012 EGR VALVE PROGRAMMING
DUSTER ph2	INJECTION	INJECTION DCM 3.4	Erase	RZ041 FUEL FLOW REGULATOR
DUSTER ph2	INJECTION	INJECTION DCM 3.4	Erase	RZ003 ENGINE ADAPTIVES
DUSTER ph2	INJECTION	INJECTION DCM 3.4	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
DUSTER ph2	INJECTION	INJECTION DCM 3.4	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
DUSTER ph2	INJECTION	INJECTION DCM 3.4	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
DUSTER ph2	INJECTION	INJECTION DCM 3.4	Erase	RZ051 INJECTOR ADAPTIVES NO. 1
DUSTER ph2	INJECTION	INJECTION DCM 3.4	Erase	RZ052 INJECTOR ADAPTIVES NO. 2
DUSTER ph2	INJECTION	INJECTION DCM 3.4	Erase	RZ053 INJECTOR ADAPTIVES NO. 3
DUSTER ph2	INJECTION	INJECTION DCM 3.4	Erase	RZ054 INJECTOR ADAPTIVES NO. 4
DUSTER ph2	INJECTION	INJECTION DCM 3.4	Configuration	SC001 WRITE SAVED DATA
DUSTER ph2	INJECTION	INJECTION DCM 3.4	Configuration	SC002 ENTER INJECTOR CODES
DUSTER ph2	INJECTION	INJECTION DCM 3.4	Configuration	SC003 SAVE COMPUTER DATA
DUSTER ph2	INJECTION	INJECTION DCM 3.4	Configuration	SC053 INJECTOR ADAPTIVES
DUSTER ph2	INJECTION	INJECTION DCM 3.4	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
DUSTER ph2	INJECTION	INJECTION DCM 3.4	Configuration	SC042 FAST IDLE SPEED MODIFICATION
DUSTER ph2	INJECTION	INJECTION DCM 3.4	Configuration	SC040 SPEED LIMITER
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Read Fault Code	
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Erase Fault Code	
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Read ECU Information	
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Live Data	
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Read Configuration	
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Actuation Test	

DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP010 WRITE V. I. N.
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ001 FAULT MEMORY
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ071 MANIFOLD PRESSURE SENSOR PROGRAMMING
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ032 AIR PATH PROGRAMMING
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ002 EGR ADAPTIVES
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ036 PARTICLE FILTER RELATIVE PRESSURE SENSOR
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ088 AIR DAMPER VALVE PROGRAMMING
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ017 EGR PROGRAMMING
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ005 PROGRAMMED VALUES
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Configuration	SC001 WRITE SAVED DATA
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Configuration	SC040 SPEED LIMITER
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Configuration	SC060 PARTICLE FILTER REGENERATION
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS) : DILUTION
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Configuration	SC068 PARTICLE FILTER REGENERATION
DUSTER ph2	INJECTION	SID 306 INJECTION	Read Fault Code	
DUSTER ph2	INJECTION	SID 306 INJECTION	Erase Fault Code	
DUSTER ph2	INJECTION	SID 306 INJECTION	Read ECU Information	
DUSTER ph2	INJECTION	SID 306 INJECTION	Live Data	
DUSTER ph2	INJECTION	SID 306 INJECTION	Read Configuration	
DUSTER ph2	INJECTION	SID 306 INJECTION	Actuation Test	
DUSTER ph2	INJECTION	SID 306 INJECTION	Other Configuration	VP010 WRITE V. I. N.
DUSTER ph2	INJECTION	SID 306 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
DUSTER ph2	INJECTION	SID 306 INJECTION	Other Configuration	VP305 PARAMETRAGE PRIVE 250
DUSTER ph2	INJECTION	SID 306 INJECTION	Other Configuration	VP022 INJECTION PROHIBITION
DUSTER ph2	INJECTION	SID 306 INJECTION	Erase	RZ001 FAULT MEMORY
DUSTER ph2	INJECTION	SID 306 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
DUSTER ph2	INJECTION	SID 306 INJECTION	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
DUSTER ph2	INJECTION	SID 306 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
DUSTER ph2	INJECTION	SID 306 INJECTION	Erase	RZ036 PARTICLE FILTER RELATIVE PRESSURE SENSOR
DUSTER ph2	INJECTION	SID 306 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
DUSTER ph2	INJECTION	SID 306 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
DUSTER ph2	INJECTION	SID 306 INJECTION	Erase	RZ084 EGR BYPASS PROGRAMMING
DUSTER ph2	INJECTION	SID 306 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
DUSTER ph2	INJECTION	SID 306 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
DUSTER ph2	INJECTION	SID 306 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
DUSTER ph2	INJECTION	SID 306 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
DUSTER ph2	INJECTION	SID 306 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
DUSTER ph2	INJECTION	SID 306 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS) : DILUTION
DUSTER ph2	INJECTION	EMS 3120 INJECTION	Read Fault Code	
DUSTER ph2	INJECTION	EMS 3120 INJECTION	Erase Fault Code	
DUSTER ph2	INJECTION	EMS 3120 INJECTION	Read ECU Information	
DUSTER ph2	INJECTION	EMS 3120 INJECTION	Live Data	
DUSTER ph2	INJECTION	EMS 3120 INJECTION	Read Configuration	
DUSTER ph2	INJECTION	EMS 3120 INJECTION	Actuation Test	
DUSTER ph2	INJECTION	EMS 3120 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
DUSTER ph2	INJECTION	EMS 3120 INJECTION	Other Configuration	VP010 WRITE V. I. N.
DUSTER ph2	INJECTION	EMS 3120 INJECTION	Erase	RZ001 FAULT MEMORY
DUSTER ph2	INJECTION	EMS 3120 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
DUSTER ph2	INJECTION	EMS 3120 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
DUSTER ph2	INJECTION	EMS 3120 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
DUSTER ph2	INJECTION	EMS 3120 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
DUSTER ph2	INJECTION	EMS 3120 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
DUSTER ph2	INJECTION	EMS 3120 INJECTION	Erase	RZ064 ALCOHOL LEVEL PROG.
DUSTER ph2	INJECTION	EMS 3120 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
DUSTER ph2	INJECTION	EMS 3120 INJECTION	Erase	RZ046 INJECTOR ADAPTIVES
DUSTER ph2	INJECTION	EMS 3120 INJECTION	Configuration	SC001 WRITE SAVED DATA
DUSTER ph2	INJECTION	EMS 3120 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
DUSTER ph2	INJECTION	EMS 3120 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
DUSTER ph2	INJECTION	EMS 3120 INJECTION	Configuration	SC047 SAVE COMPUTER DATA
DUSTER ph2	INJECTION	EMS 3120 INJECTION	Configuration	SC048 WRITE SAVED DATA
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Read Fault Code	
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Erase Fault Code	
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Read ECU Information	
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Live Data	
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Read Configuration	
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Actuation Test	
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Other Configuration	VP010 WRITE V. I. N.

DUSTER ph2	INJECTION	EMS 3150 INJECTION	Other Configuration	VP067	STATIC TEST
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Other Configuration	VP214	PARAMETRAGE PRIVE 159
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Other Configuration	VP215	PARAMETRAGE PRIVE 160
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Other Configuration	VP342	VACUUM PUMP OPERATION REQUEST
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Erase	RZ001	FAULT MEMORY
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Erase	RZ037	FLYWHEEL TARGET PROGRAMMING
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Erase	RZ033	RICHNESS REGULATION PROGRAMMING
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Erase	RZ031	PROGRAMMING THROTTLE LIMITS
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Erase	RZ003	ENGINE ADAPTIVES
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Erase	RZ047	CRUISE CONTROL/SPEED LIMITER PROGRAMMING
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Erase	RZ075	CAMSHAFT NO. 2 SENSOR PROGRAMMING
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Erase	RZ077	INJECTION PUMP ADAPTATIVES
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Erase	RZ039	CAMSHAFT SENSOR PROGRAMMING
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Erase	RZ091	WASTE GATE REGULATION
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Erase	RZ089	INHIBIT EVAP STRATEGY
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Erase	RZ090	ACTIVATE EVAP PROGRAMMING
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Erase	RZ036	PARTICLE FILTER RELATIVE PRESSURE SENSOR
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Erase	RZ061	FLYWHEEL TARGET PROGRAMMING
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Erase	RZ046	INJECTOR ADAPTIVES
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Erase	RZ100	PROGRAMMING THROTTLE LIMITS
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Erase	RZ117	RICHNESS REGULATION PROGRAMMING
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Erase	RZ065	FLYWHEEL TARGET PROGRAMMING
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Erase	RZ102	FLYWHEEL TARGET PROGRAMMING
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Erase	RZ103	FLYWHEEL TARGET PROGRAMMING
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Erase	RZ104	FLYWHEEL TARGET PROGRAMMING
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Configuration	SC007	START OBD TEST: O2 SENSORS
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Configuration	SC001	WRITE SAVED DATA
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Configuration	SC040	SPEED LIMITER
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Configuration	SC003	SAVE COMPUTER DATA
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Configuration	SC035	HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Configuration	SC061	INTERVAL OF OIL CHANGE (OCS) OXIDATION
DUSTER ph2	INJECTION	SID 310 INJECTION	Read Fault Code		
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase Fault Code		
DUSTER ph2	INJECTION	SID 310 INJECTION	Read ECU Information		
DUSTER ph2	INJECTION	SID 310 INJECTION	Live Data		
DUSTER ph2	INJECTION	SID 310 INJECTION	Read Configuration		
DUSTER ph2	INJECTION	SID 310 INJECTION	Actuation Test		
DUSTER ph2	INJECTION	SID 310 INJECTION	Other Configuration	VP343	NUMBER OF STARTING CYCLES
DUSTER ph2	INJECTION	SID 310 INJECTION	Other Configuration	VP344	HIGH PRESSURE PUMP COUNTER
DUSTER ph2	INJECTION	SID 310 INJECTION	Other Configuration	VP036	FUEL SUPPLY PREVENTION
DUSTER ph2	INJECTION	SID 310 INJECTION	Other Configuration	VP306	NUMBER OF STARTING 1
DUSTER ph2	INJECTION	SID 310 INJECTION	Other Configuration	VP307	NUMBER OF STARTING 2
DUSTER ph2	INJECTION	SID 310 INJECTION	Other Configuration	VP308	NUMBER OF STARTING 3
DUSTER ph2	INJECTION	SID 310 INJECTION	Other Configuration	VP309	NUMBER OF STARTING 4
DUSTER ph2	INJECTION	SID 310 INJECTION	Other Configuration	VP310	ALTERNATOR SETPOINT VOLTAGE
DUSTER ph2	INJECTION	SID 310 INJECTION	Other Configuration	VP010	WRITE V. I. N.
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ007	FAULT MEMORY
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ072	AIR FLOWMETER PROGRAMMING
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ077	INJECTION PUMP ADAPTATIVES
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ069	FUEL PUMP PROGRAMMING
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ012	EGR VALVE PROGRAMMING
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ044	AIR DAMPER VALVE PROGRAMMING
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ002	EGR ADAPTIVES
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ003	ENGINE ADAPTIVES
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ067	LOW PRESSURE EGR VALVE PROGRAMMING
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ066	EXHAUST FLAP LOW SETTING
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ014	ADAPTIVES ON AIR INTAKE FLAP FAULT
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ099	STOP AND START FUNCTION
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ079	NUMBER OF STARTING CYCLES
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ097	HIGH PRESSURE PUMP COUNTER
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ093	INJECTION PUMP ADAPTATIVES
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ073	PARTICLE FILTER PRESSURE DIFF. SENSOR
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ062	PROPORTIONAL RICHNESS SENSOR PROGRAMMING
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ087	CATALYTIC CONVERTER
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ047	CRUISE CONTROL/SPEED LIMITER PROGRAMMING
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ120	INJECTION PUMP ADAPTATIVES
DUSTER ph2	INJECTION	SID 310 INJECTION	Configuration	SC001	WRITE SAVED DATA
DUSTER ph2	INJECTION	SID 310 INJECTION	Configuration	SC002	ENTER INJECTOR CODES
DUSTER ph2	INJECTION	SID 310 INJECTION	Configuration	SC003	SAVE COMPUTER DATA
DUSTER ph2	INJECTION	SID 310 INJECTION	Configuration	SC017	PARTICLE FILTER REGENERATION
DUSTER ph2	INJECTION	SID 310 INJECTION	Configuration	SC051	ADAPTIVES AFTER REPLACING PARTICLE FILTER
DUSTER ph2	INJECTION	SID 310 INJECTION	Configuration	SC061	INTERVAL OF OIL CHANGE (OCS) OXIDATION
DUSTER ph2	INJECTION	SID 310 INJECTION	Configuration	SC062	OIL CHANGE INTERVAL (OCS): DILUTION
DUSTER ph2	INJECTION	SID 310 INJECTION	Configuration	SC017	PARTICLE FILTER REGENERATION
DUSTER ph2	INJECTION	SID 310 INJECTION	Configuration	SC051	ADAPTIVES AFTER REPLACING PARTICLE FILTER
DUSTER ph2	INJECTION	SID 310 INJECTION	Configuration	SC061	INTERVAL OF OIL CHANGE (OCS) OXIDATION
DUSTER ph2	INJECTION	SID 310 INJECTION	Configuration	SC062	OIL CHANGE INTERVAL (OCS): DILUTION
DUSTER ph2	INJECTION	SID 310 INJECTION	Configuration	SC040	SPEED LIMITER
DUSTER ph2	INJECTION	SID 310 INJECTION	Configuration	SC042	FAST IDLE SPEED MODIFICATION
DUSTER ph2	INJECTION	SID 310 INJECTION	Configuration	SC017	PARTICLE FILTER REGENERATION
DUSTER ph2	INJECTION	SID 310 INJECTION	Configuration	SC051	ADAPTIVES AFTER REPLACING PARTICLE FILTER
DUSTER ph2	INJECTION	SID 310 INJECTION	Configuration	SC061	INTERVAL OF OIL CHANGE (OCS) OXIDATION
DUSTER ph2	INJECTION	SID 310 INJECTION	Configuration	SC062	OIL CHANGE INTERVAL (OCS): DILUTION
DUSTER ph2	INJECTION	EMS 3125 INJECTION	Read Fault Code		
DUSTER ph2	INJECTION	EMS 3125 INJECTION	Erase Fault Code		
DUSTER ph2	INJECTION	EMS 3125 INJECTION	Read ECU Information		
DUSTER ph2	INJECTION	EMS 3125 INJECTION	Live Data		
DUSTER ph2	INJECTION	EMS 3125 INJECTION	Read Configuration		
DUSTER ph2	INJECTION	EMS 3125 INJECTION	Actuation Test		
DUSTER ph2	INJECTION	EMS 3125 INJECTION	Other Configuration	VP036	FUEL SUPPLY PREVENTION
DUSTER ph2	INJECTION	EMS 3125 INJECTION	Other Configuration	VP010	WRITE V. I. N.
DUSTER ph2	INJECTION	EMS 3125 INJECTION	Other Configuration	VP310	ALTERNATOR SETPOINT VOLTAGE
DUSTER ph2	INJECTION	EMS 3125 INJECTION	Other Configuration	VP343	NUMBER OF STARTING CYCLES
DUSTER ph2	INJECTION	EMS 3125 INJECTION	Other Configuration	VP306	NUMBER OF STARTING 1
DUSTER ph2	INJECTION	EMS 3125 INJECTION	Other Configuration	VP307	NUMBER OF STARTING 2

DUSTER ph2	INJECTION	EMS 3125 INJECTION	Other Configuration	VP308	NUMBER OF STARTING 3
DUSTER ph2	INJECTION	EMS 3125 INJECTION	Other Configuration	VP309	NUMBER OF STARTING 4
DUSTER ph2	INJECTION	EMS 3125 INJECTION	Erase	RZ001	FAULT MEMORY
DUSTER ph2	INJECTION	EMS 3125 INJECTION	Erase	RZ033	RICHNESS REGULATION PROGRAMMING
DUSTER ph2	INJECTION	EMS 3125 INJECTION	Erase	RZ039	CAMSHAFT SENSOR PROGRAMMING
DUSTER ph2	INJECTION	EMS 3125 INJECTION	Erase	RZ031	PROGRAMMING THROTTLE LIMITS
DUSTER ph2	INJECTION	EMS 3125 INJECTION	Erase	RZ003	ENGINE ADAPTIVES
DUSTER ph2	INJECTION	EMS 3125 INJECTION	Erase	RZ047	CRUISE CONTROL/SPEED LIMITER PROGRAMMING
DUSTER ph2	INJECTION	EMS 3125 INJECTION	Erase	RZ064	ALCOHOL LEVEL PROG.
DUSTER ph2	INJECTION	EMS 3125 INJECTION	Erase	RZ062	PROPORTIONAL RICHNESS SENSOR PROGRAMMING
DUSTER ph2	INJECTION	EMS 3125 INJECTION	Erase	RZ046	INJECTOR ADAPTIVES
DUSTER ph2	INJECTION	EMS 3125 INJECTION	Erase	RZ099	STOP AND START FUNCTION
DUSTER ph2	INJECTION	EMS 3125 INJECTION	Erase	RZ079	NUMBER OF STARTING CYCLES
DUSTER ph2	INJECTION	EMS 3125 INJECTION	Erase	RZ091	WASTE GATE REGULATION
DUSTER ph2	INJECTION	EMS 3125 INJECTION	Erase	RZ097	HIGH PRESSURE PUMP COUNTER
DUSTER ph2	INJECTION	EMS 3125 INJECTION	Configuration	SC006	START OBD TEST: CATALYTIC CONVERTER
DUSTER ph2	INJECTION	EMS 3125 INJECTION	Configuration	SC007	START OBD TEST: O2 SENSORS
DUSTER ph2	INJECTION	EMS 3125 INJECTION	Configuration	SC061	INTERVAL OF OIL CHANGE (OCS) OXIDATION
DUSTER ph2	INJECTION	EMS 3125 INJECTION	Configuration	SC040	SPEED LIMITER
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Read Fault Code		
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Erase Fault Code		
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Read ECU Information		
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Live Data		
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Read Configuration		
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Actuation Test		
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Other Configuration	VPO36	FUEL SUPPLY PREVENTION
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Other Configuration	VP342	VACUUM PUMP OPERATION REQUEST
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Other Configuration	VP010	WRITE V. I. N.
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Other Configuration	VP344	HIGH PRESSURE PUMP COUNTER
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Other Configuration	VP343	NUMBER OF STARTING CYCLES
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Other Configuration	VP310	ALTERNATOR SETPOINT VOLTAGE
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Other Configuration	VP386	VACUUM PUMP OPERATION REQUEST
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Other Configuration	VP387	VACUUM PUMP OPERATION REQUEST
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Erase	RZ001	FAULT MEMORY
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Erase	RZ037	FLYWHEEL TARGET PROGRAMMING
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Erase	RZ031	PROGRAMMING THROTTLE LIMITS
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Erase	RZ003	ENGINE ADAPTIVES
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Erase	RZ047	CRUISE CONTROL/SPEED LIMITER PROGRAMMING
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Erase	RZ075	CAMSHAFT NO. 2 SENSOR PROGRAMMING
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Erase	RZ093	INJECTION PUMP ADAPTIVES
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Erase	RZ039	CAMSHAFT SENSOR PROGRAMMING
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Erase	RZ091	WASTE GATE REGULATION
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Erase	RZ061	FLYWHEEL TARGET PROGRAMMING
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Erase	RZ079	NUMBER OF STARTING CYCLES
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Erase	RZ062	PROPORTIONAL RICHNESS SENSOR PROGRAMMING
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Erase	RZ077	INJECTION PUMP ADAPTIVES
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Erase	RZ033	RICHNESS REGULATION PROGRAMMING
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Erase	RZ099	STOP AND START FUNCTION
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Erase	RZ097	HIGH PRESSURE PUMP COUNTER
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Erase	RZ065	FLYWHEEL TARGET PROGRAMMING
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Erase	RZ102	FLYWHEEL TARGET PROGRAMMING
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Erase	RZ103	FLYWHEEL TARGET PROGRAMMING
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Erase	RZ104	FLYWHEEL TARGET PROGRAMMING
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Erase	RZ105	FLYWHEEL TARGET PROGRAMMING
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Configuration	SC007	START OBD TEST: O2 SENSORS
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Configuration	SC001	WRITE SAVED DATA
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Configuration	SC003	SAVE COMPUTER DATA
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Configuration	SC061	INTERVAL OF OIL CHANGE (OCS) OXIDATION
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Configuration	SC040	SPEED LIMITER
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Configuration	SC042	FAST IDLE SPEED MODIFICATION
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Read Fault Code		
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Erase Fault Code		
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Read ECU Information		
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Live Data		
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Read Configuration		
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Actuation Test		
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Other Configuration	VPO36	FUEL SUPPLY PREVENTION
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP001	CYLINDER 1 INJECTOR CODE
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP002	CYLINDER 2 INJECTOR CODE
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP003	CYLINDER 3 INJECTOR CODE
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP004	CYLINDER 4 INJECTOR CODE
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP310	ALTERNATOR SETPOINT VOLTAGE
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP343	NUMBER OF STARTING CYCLES
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP344	HIGH PRESSURE PUMP COUNTER
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP010	WRITE V. I. N.
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP306	NUMBER OF STARTING 1
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP307	NUMBER OF STARTING 2
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP308	NUMBER OF STARTING 3
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP309	NUMBER OF STARTING 4
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ007	FAULT MEMORY
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ079	NUMBER OF STARTING CYCLES
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ099	STOP AND START FUNCTION
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ047	CRUISE CONTROL/SPEED LIMITER PROGRAMMING
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ003	ENGINE ADAPTIVES
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ012	EGR VALVE PROGRAMMING
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ044	AIR DAMPER VALVE PROGRAMMING
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ066	EXHAUST FLAP LOW SETTING
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ067	LOW PRESSURE EGR VALVE PROGRAMMING
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ069	FUEL PUMP PROGRAMMING
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ072	AIR FLOWMETER PROGRAMMING
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ084	EGR BYPASS PROGRAMMING
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ077	INJECTION PUMP ADAPTIVES
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ045	RAIL PRESSURE SENSOR ADAPTIVES
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ005	PROGRAMMED VALUES
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ062	PROPORTIONAL RICHNESS SENSOR PROGRAMMING

DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ073	PARTICLE FILTER PRESSURE DIFF. SENSOR
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ014	ADAPTIVES ON AIR INTAKE FLAP FAULT
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ037	FLYWHEEL TARGET PROGRAMMING
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ097	HIGH PRESSURE PUMP COUNTER
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ078	STARTER ADAPTATIVES
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ087	CATALYTIC CONVERTER
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ093	INJECTION PUMP ADAPTATIVES
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ095	INJECTION TIME PROGRAMMING
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Configuration	SC001	WRITE SAVED DATA
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Configuration	SC003	SAVE COMPUTER DATA
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Configuration	SC017	PARTICLE FILTER REGENERATION
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Configuration	SC031	CYLINDER FUNCTION FAULT FINDING
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Configuration	SC040	SPEED LIMITER
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Configuration	SC051	ADAPTIVES AFTER REPLACING PARTICLE FILTER
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Configuration	SC035	HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Configuration	SC061	INTERVAL OF OIL CHANGE (OCS) OXIDATION
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Configuration	SC062	OIL CHANGE INTERVAL (OCS) : DILUTION
DUSTER ph2	INJECTION	SID 310 INJECTION	Read Fault Code		
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase Fault Code		
DUSTER ph2	INJECTION	SID 310 INJECTION	Read ECU Information		
DUSTER ph2	INJECTION	SID 310 INJECTION	Live Data		
DUSTER ph2	INJECTION	SID 310 INJECTION	Read Configuration		
DUSTER ph2	INJECTION	SID 310 INJECTION	Actuation Test		
DUSTER ph2	INJECTION	SID 310 INJECTION	Other Configuration	VP343	NUMBER OF STARTING CYCLES
DUSTER ph2	INJECTION	SID 310 INJECTION	Other Configuration	VP344	HIGH PRESSURE PUMP COUNTER
DUSTER ph2	INJECTION	SID 310 INJECTION	Other Configuration	VPO36	FUEL SUPPLY PREVENTION
DUSTER ph2	INJECTION	SID 310 INJECTION	Other Configuration	VP306	NUMBER OF STARTING 1
DUSTER ph2	INJECTION	SID 310 INJECTION	Other Configuration	VP307	NUMBER OF STARTING 2
DUSTER ph2	INJECTION	SID 310 INJECTION	Other Configuration	VP308	NUMBER OF STARTING 3
DUSTER ph2	INJECTION	SID 310 INJECTION	Other Configuration	VP309	NUMBER OF STARTING 4
DUSTER ph2	INJECTION	SID 310 INJECTION	Other Configuration	VP310	ALTERNATOR SETPOINT VOLTAGE
DUSTER ph2	INJECTION	SID 310 INJECTION	Other Configuration	VPO10	WRITE V. I. N.
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ007	FAULT MEMORY
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ072	AIR FLOWMETER PROGRAMMING
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ077	INJECTION PUMP ADAPTATIVES
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ069	FUEL PUMP PROGRAMMING
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ012	EGR VALVE PROGRAMMING
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ044	AIR DAMPER VALVE PROGRAMMING
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ002	EGR ADAPTIVES
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ003	ENGINE ADAPTIVES
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ067	LOW PRESSURE EGR VALVE PROGRAMMING
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ066	EXHAUST FLAP LOW SETTING
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ014	ADAPTIVES ON AIR INTAKE FLAP FAULT
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ099	STOP AND START FUNCTION
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ079	NUMBER OF STARTING CYCLES
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ097	HIGH PRESSURE PUMP COUNTER
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ093	INJECTION PUMP ADAPTATIVES
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ073	PARTICLE FILTER PRESSURE DIFF. SENSOR
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ062	PROPORTIONAL RICHNESS SENSOR PROGRAMMING
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ087	CATALYTIC CONVERTER
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ047	CRUISE CONTROL/SPEED LIMITER PROGRAMMING
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ120	INJECTION PUMP ADAPTATIVES
DUSTER ph2	INJECTION	SID 310 INJECTION	Configuration	SC001	WRITE SAVED DATA
DUSTER ph2	INJECTION	SID 310 INJECTION	Configuration	SC002	ENTER INJECTOR CODES
DUSTER ph2	INJECTION	SID 310 INJECTION	Configuration	SC003	SAVE COMPUTER DATA
DUSTER ph2	INJECTION	SID 310 INJECTION	Configuration	SC017	PARTICLE FILTER REGENERATION
DUSTER ph2	INJECTION	SID 310 INJECTION	Configuration	SC051	ADAPTIVES AFTER REPLACING PARTICLE FILTER
DUSTER ph2	INJECTION	SID 310 INJECTION	Configuration	SC061	INTERVAL OF OIL CHANGE (OCS) OXIDATION
DUSTER ph2	INJECTION	SID 310 INJECTION	Configuration	SC062	OIL CHANGE INTERVAL (OCS) : DILUTION
DUSTER ph2	INJECTION	SID 310 INJECTION	Configuration	SC040	SPEED LIMITER
DUSTER ph2	A.B.S.	ABS	Read Fault Code		
DUSTER ph2	A.B.S.	ABS	Erase Fault Code		
DUSTER ph2	A.B.S.	ABS	Read ECU Information		
DUSTER ph2	A.B.S.	ABS	Live Data		
DUSTER ph2	A.B.S.	ABS	Read Configuration		
DUSTER ph2	A.B.S.	ABS	Actuation Test		
DUSTER ph2	A.B.S.	ABS	Other Configuration	VPO07	SPEEDO INDEX
DUSTER ph2	A.B.S.	ABS	Other Configuration	VPO06	WRITE DATE OF LAST AFTER SALES OPERATION
DUSTER ph2	A.B.S.	ABS	Other Configuration	VPO03	STEERING WHEEL ANGLE SENSOR
DUSTER ph2	A.B.S.	ABS	Other Configuration	VPO01	WRITE VIN
DUSTER ph2	A.B.S.	ABS	Other Configuration	VPO44	ACCELERATION SENSOR
DUSTER ph2	A.B.S.	ABS	Other Configuration	VPO45	HILL START
DUSTER ph2	A.B.S.	ABS	Erase	RZ001	FAULT MEMORY
DUSTER ph2	A.B.S.	ABS	Erase	RZ008	TRANSVERSE ACCELERATION OFFSET SENSOR
DUSTER ph2	A.B.S.	ABS	Erase	RZ007	STEERING WHEEL ANGLE OFFSET SENSOR
DUSTER ph2	A.B.S.	ABS	Erase	RZ009	BRAKE PRESSURE OFFSET SENSOR
DUSTER ph2	A.B.S.	ABS	Erase	RZ012	RESET
DUSTER ph2	A.B.S.	ABS	Erase	RZ010	LONGITUDINAL ACCELERATION SENSOR OFFSET
DUSTER ph2	A.B.S.	ABS	Configuration	SC001	CHECK TARGET TEETH
DUSTER ph2	A.B.S.	ABS	Read Fault Code		
DUSTER ph2	A.B.S.	ABS	Erase Fault Code		
DUSTER ph2	A.B.S.	ABS	Read ECU Information		
DUSTER ph2	A.B.S.	ABS	Live Data		
DUSTER ph2	A.B.S.	ABS	Actuation Test		
DUSTER ph2	A.B.S.	ABS	Other Configuration	VPO07	SPEEDO INDEX
DUSTER ph2	A.B.S.	ABS	Other Configuration	VPO06	WRITE DATE OF LAST AFTER SALES OPERATION
DUSTER ph2	A.B.S.	ABS	Other Configuration	VPO01	WRITE VIN
DUSTER ph2	A.B.S.	ABS	Erase	RZ001	FAULT MEMORY
DUSTER ph2	A.B.S.	ABS	Erase	RZ012	RESET
DUSTER ph2	A.B.S.	ABS	Erase	RZ010	LONGITUDINAL ACCELERATION SENSOR OFFSET
DUSTER ph2	A.B.S.	ABS	Erase	RZ008	TRANSVERSE ACCELERATION OFFSET SENSOR
DUSTER ph2	A.B.S.	ABS	Configuration	SC001	CHECK TARGET TEETH
DUSTER ph2	A.B.S.	ABS	Read Fault Code		
DUSTER ph2	A.B.S.	ABS	Erase Fault Code		
DUSTER ph2	A.B.S.	ABS	Read ECU Information		

DUSTER ph2	A.B.S.	ABS	Live Data	
DUSTER ph2	A.B.S.	ABS	Read Configuration	
DUSTER ph2	A.B.S.	ABS	Actuation Test	
DUSTER ph2	A.B.S.	ABS	Other Configuration	VPO07 SPEEDO INDEX
DUSTER ph2	A.B.S.	ABS	Other Configuration	VPO06 WRITE DATE OF LAST AFTER SALES OPERATION
DUSTER ph2	A.B.S.	ABS	Other Configuration	VPO03 STEERING WHEEL ANGLE SENSOR
DUSTER ph2	A.B.S.	ABS	Other Configuration	VPO01 WRITE VIN
DUSTER ph2	A.B.S.	ABS	Other Configuration	VPO44 ACCELERATION SENSOR
DUSTER ph2	A.B.S.	ABS	Other Configuration	VPO45 HILL START
DUSTER ph2	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
DUSTER ph2	A.B.S.	ABS	Erase	RZ008 TRANSVERSE ACCELERATION OFFSET SENSOR
DUSTER ph2	A.B.S.	ABS	Erase	RZ007 STEERING WHEEL ANGLE OFFSET SENSOR
DUSTER ph2	A.B.S.	ABS	Erase	RZ009 BRAKE PRESSURE OFFSET SENSOR
DUSTER ph2	A.B.S.	ABS	Erase	RZ012 RESET
DUSTER ph2	A.B.S.	ABS	Erase	RZ010 LONGITUDINAL ACCELERATION SENSOR OFFSET
DUSTER ph2	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF149 GEARBOX TYPE
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF199 COMPUTER INITIALISATION
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF160 OVERSPEED ALARM
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF180 EXTERNAL TEMPERATURE
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF225 BATTERY CHARGE WARNING INFORMATION
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF158 SEAT BELT REMINDER BUZZER
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VPO02 WRITE VIN
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VPO10 UPDATE ODOMETER
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF149 GEARBOX TYPE
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF150 CRUISE CTRL/SPD LIMITER
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF199 COMPUTER INITIALISATION
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF160 OVERSPEED ALARM
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF180 EXTERNAL TEMPERATURE
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF225 BATTERY CHARGE WARNING INFORMATION
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VPO02 WRITE VIN
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VPO10 UPDATE ODOMETER
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
DUSTER ph2	UCH	UCH	Read Fault Code	
DUSTER ph2	UCH	UCH	Erase Fault Code	
DUSTER ph2	UCH	UCH	Read ECU Information	
DUSTER ph2	UCH	UCH	Live Data	
DUSTER ph2	UCH	UCH	Read Configuration	
DUSTER ph2	UCH	UCH	Actuation Test	
DUSTER ph2	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
DUSTER ph2	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
DUSTER ph2	UCH	UCH	Write Configuration	CF229 ALARM
DUSTER ph2	UCH	UCH	Write Configuration	CF299 ACCESS/STARTER TYPE
DUSTER ph2	UCH	UCH	Other Configuration	VPO01 WRITE V. I. N.
DUSTER ph2	UCH	UCH	Erase	RZ001 FAULT MEMORY
DUSTER ph2	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
DUSTER ph2	UCH	UCH	Read Fault Code	
DUSTER ph2	UCH	UCH	Erase Fault Code	
DUSTER ph2	UCH	UCH	Read ECU Information	
DUSTER ph2	UCH	UCH	Live Data	
DUSTER ph2	UCH	UCH	Read Configuration	
DUSTER ph2	UCH	UCH	Actuation Test	
DUSTER ph2	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
DUSTER ph2	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
DUSTER ph2	UCH	UCH	Write Configuration	CF229 ALARM
DUSTER ph2	UCH	UCH	Write Configuration	CF314 STOP AND START FUNCTION
DUSTER ph2	UCH	UCH	Other Configuration	VPO01 WRITE V. I. N.
DUSTER ph2	UCH	UCH	Erase	RZ001 FAULT MEMORY
DUSTER ph2	UCH	UCH	Erase	RZ013 HIGH PRESSURE PUMP COUNTER
DUSTER ph2	UCH	UCH	Erase	RZ014 NUMBER OF STARTING CYCLES
DUSTER ph2	UCH	UCH	Erase	RZ018 HIGH PRESSURE PUMP COUNTER
DUSTER ph2	UCH	UCH	Erase	RZ017 NUMBER OF STARTING CYCLES
DUSTER ph2	UCH	UCH	Erase	RZ016 STOP AND START FUNCTION
DUSTER ph2	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
DUSTER ph2	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
DUSTER ph2	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
DUSTER ph2	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
DUSTER ph2	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
DUSTER ph2	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
DUSTER ph2	AIRBAG / PRETENSIONERS	AIRBAG	Actuation Test	
DUSTER ph2	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF249 COMMANDE PRIVEE 7
DUSTER ph2	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF250 COMMANDE PRIVEE 8
DUSTER ph2	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF052 SENSOR CONFIGURATION
DUSTER ph2	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VPO10 WRITE VIN
DUSTER ph2	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VPO06 LOCK COMPUTER
DUSTER ph2	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VPO07 UNLOCK COMPUTER

DUSTER ph2	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP015	PARAMETRAGE PRIVE 1
DUSTER ph2	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001	FAULT MEMORY
DUSTER ph2	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004	READING IMPACT CONTEXTS
DUSTER ph2	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC005	CONFIGURATION OF SYSTEM COMPONENTS
DUSTER ph2	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC013	SENSOR CONFIGURATION
DUSTER ph2	AIR CONDITIONING	AIR CONDITIONING	Read Fault Code		
DUSTER ph2	AIR CONDITIONING	AIR CONDITIONING	Erase Fault Code		
DUSTER ph2	AIR CONDITIONING	AIR CONDITIONING	Read ECU Information		
DUSTER ph2	AIR CONDITIONING	AIR CONDITIONING	Live Data		
DUSTER ph2	AIR CONDITIONING	AIR CONDITIONING	Actuation Test		
DUSTER ph2	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ001	FAULT MEMORY
DUSTER ph2	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ002	COMPUTER REINITIALISATION
DUSTER ph2	AUTOMATIC GEARBOX	DPO TA2005 ATX	Read Fault Code		
DUSTER ph2	AUTOMATIC GEARBOX	DPO TA2005 ATX	Erase Fault Code		
DUSTER ph2	AUTOMATIC GEARBOX	DPO TA2005 ATX	Read ECU Information		
DUSTER ph2	AUTOMATIC GEARBOX	DPO TA2005 ATX	Live Data		
DUSTER ph2	AUTOMATIC GEARBOX	DPO TA2005 ATX	Actuation Test		
DUSTER ph2	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP015	NOTE OIL WEAR COUNTER
DUSTER ph2	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP016	WRITE TRANSMISSION OIL CHANGE DATE
DUSTER ph2	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP009	WRITE DATE OF LAST AFTER SALES OPERATION
DUSTER ph2	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP001	WRITE VIN
DUSTER ph2	AUTOMATIC GEARBOX	DPO TA2005 ATX	Erase	RZ004	FAULT MEMORY
DUSTER ph2	AUTOMATIC GEARBOX	DPO TA2005 ATX	Erase	RZ005	AUTO-ADAPTIVES
DUSTER ph2	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Read Fault Code		
DUSTER ph2	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Erase Fault Code		
DUSTER ph2	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Read ECU Information		
DUSTER ph2	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Live Data		
DUSTER ph2	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Actuation Test		
DUSTER ph2	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Other Configuration	VP001	WRITE VIN
DUSTER ph2	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Other Configuration	VP009	WRITE DATE OF LAST AFTER SALES OPERATION
DUSTER ph2	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Other Configuration	VP030	GEARBOX VEHICLE ACCELERATION SENSOR INIT.
DUSTER ph2	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Erase	RZ004	FAULT MEMORY
DUSTER ph2	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Erase	RZ009	ERASE AUTO-ADAPTIVE VALUES
DUSTER ph2	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Read Fault Code		
DUSTER ph2	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase Fault Code		
DUSTER ph2	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Read ECU Information		
DUSTER ph2	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Live Data		
DUSTER ph2	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Actuation Test		
DUSTER ph2	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ004	FAULT MEMORY
DUSTER ph2	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ014	RESET CLUTCH DATA PROTECTION
DUSTER ph2	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ015	RESET GEARBOX DATA
DUSTER ph2	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ013	RESET CLUTCH DATA
DUSTER ph2	AUTOMATIC GEARBOX	AUTO GEARBOX	Read Fault Code		
DUSTER ph2	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase Fault Code		
DUSTER ph2	AUTOMATIC GEARBOX	AUTO GEARBOX	Read ECU Information		
DUSTER ph2	AUTOMATIC GEARBOX	AUTO GEARBOX	Live Data		
DUSTER ph2	AUTOMATIC GEARBOX	AUTO GEARBOX	Actuation Test		
DUSTER ph2	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP008	PROGRAMMING SELECTION/ENGAGING ZONES
DUSTER ph2	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP023	SHIFT DRUM REFERENCE POSITION
DUSTER ph2	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP025	PROGRAM CLUTCH ADJUSTEMENT
DUSTER ph2	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP026	PROGRAMME CLUTCH POSITION
DUSTER ph2	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP027	PROGRAM CLUTCH 1 ADJUSTEMENT
DUSTER ph2	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP028	PROGRAM CLUTCH 2 ADJUSTEMENT
DUSTER ph2	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ004	FAULT MEMORY
DUSTER ph2	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ003	PROGRAMME SLIP POINT
DUSTER ph2	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ012	CLUTCH WEAR
DUSTER ph2	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ009	ERASE AUTO-ADAPTIVE VALUES
DUSTER ph2	VARIABLE P.A.S.	PAS PUMP ASS.	Read Fault Code		
DUSTER ph2	VARIABLE P.A.S.	PAS PUMP ASS.	Erase Fault Code		
DUSTER ph2	VARIABLE P.A.S.	PAS PUMP ASS.	Read ECU Information		
DUSTER ph2	VARIABLE P.A.S.	PAS PUMP ASS.	Live Data		
DUSTER ph2	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP001	WRITE VIN
DUSTER ph2	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP005	WRITE DATE OF AFTER SALES OPERATION
DUSTER ph2	VARIABLE P.A.S.	PAS PUMP ASS.	Erase	RZ001	FAULT MEMORY
DUSTER ph2	4 WHEELS DRIVE	4 WHEELS DRIVE	Read Fault Code		
DUSTER ph2	4 WHEELS DRIVE	4 WHEELS DRIVE	Erase Fault Code		
DUSTER ph2	4 WHEELS DRIVE	4 WHEELS DRIVE	Read ECU Information		
DUSTER ph2	4 WHEELS DRIVE	4 WHEELS DRIVE	Live Data		
DUSTER ph2	4 WHEELS DRIVE	4 WHEELS DRIVE	Actuation Test		
DUSTER ph2	4 WHEELS DRIVE	4 WHEELS DRIVE	Write Configuration	CF001	VEHICLE TYPE
DUSTER ph2	4 WHEELS DRIVE	4 WHEELS DRIVE	Other Configuration	VP002	SPEEDO INDEX
DUSTER ph2	4 WHEELS DRIVE	4 WHEELS DRIVE	Other Configuration	VP004	COMPUTER INITIALISATION
DUSTER ph2	4 WHEELS DRIVE	4 WHEELS DRIVE	Other Configuration	VP007	MODIFICATION OF PARAMETERS AFTER INITIALISATION
DUSTER ph2	4 WHEELS DRIVE	4 WHEELS DRIVE	Other Configuration	VP003	WRITE VIN
DUSTER ph2	4 WHEELS DRIVE	4 WHEELS DRIVE	Erase	RZ001	FAULT MEMORY
DUSTER ph2	RADIO	RADIO	Read Fault Code		
DUSTER ph2	RADIO	RADIO	Erase Fault Code		
DUSTER ph2	RADIO	RADIO	Read ECU Information		
DUSTER ph2	RADIO	RADIO	Live Data		
DUSTER ph2	RADIO	RADIO	Read Configuration		
DUSTER ph2	RADIO	RADIO	Actuation Test		
DUSTER ph2	RADIO	RADIO	Write Configuration	CF016	COUNTRY MODEL
DUSTER ph2	RADIO	RADIO	Write Configuration	CF027	LANGUAGE
DUSTER ph2	RADIO	RADIO	Other Configuration	VP001	WRITE VIN
DUSTER ph2	RADIO	RADIO	Configuration	SC002	COMP CONFIGURATION
DUSTER ph2	RADIO	RADIO	Erase	RZ003	FAULT MEMORY
DUSTER ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code		
DUSTER ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code		
DUSTER ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information		
DUSTER ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data		
DUSTER ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test		
DUSTER ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VP001	WRITE VIN
DUSTER ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003	FAULT MEMORY
DUSTER ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001	COMPUTER RESET
DUSTER ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ004	EMERGENCY CALL SERVICE

DUSTER ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
DUSTER ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
DUSTER ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
DUSTER ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
DUSTER ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test	
DUSTER ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VP001 WRITE VIN
DUSTER ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003 FAULT MEMORY
DUSTER ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
DUSTER ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Fault Code	
DUSTER ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase Fault Code	
DUSTER ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Read ECU Information	
DUSTER ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Live Data	
DUSTER ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Configuration	
DUSTER ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Actuation Test	
DUSTER ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Other Configuration	VP002 WRITE V. I. N.
DUSTER ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase	RZ001 FAULT MEMORY
DUSTER ph2	RADIO	RADIO	Read Fault Code	
DUSTER ph2	RADIO	RADIO	Erase Fault Code	
DUSTER ph2	RADIO	RADIO	Read ECU Information	
DUSTER ph2	RADIO	RADIO	Live Data	
DUSTER ph2	RADIO	RADIO	Read Configuration	
DUSTER ph2	RADIO	RADIO	Actuation Test	
DUSTER ph2	RADIO	RADIO	Write Configuration	CF053 REAR LOUD SPEAKER
DUSTER ph2	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
DUSTER ph2	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
DUSTER ph2	RADIO	RADIO	Erase	RZ003 FAULT MEMORY
DUSTER ph2	RADIO	RADIO	Read Fault Code	
DUSTER ph2	RADIO	RADIO	Erase Fault Code	
DUSTER ph2	RADIO	RADIO	Read ECU Information	
DUSTER ph2	RADIO	RADIO	Live Data	
DUSTER ph2	RADIO	RADIO	Read Configuration	
DUSTER ph2	RADIO	RADIO	Actuation Test	
DUSTER ph2	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
DUSTER ph2	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
DUSTER ph2	RADIO	RADIO	Write Configuration	CF066 GUIDELINES
DUSTER ph2	RADIO	RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
DUSTER ph2	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
DUSTER ph2	RADIO	RADIO	Erase	RZ005 FAULT MEMORY
DUSTER ph2	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read Fault Code	
DUSTER ph2	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase Fault Code	
DUSTER ph2	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read ECU Information	
DUSTER ph2	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Live Data	
DUSTER ph2	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Actuation Test	
DUSTER ph2	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Other Configuration	VP001 WRITE VIN
DUSTER ph2	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase	RZ001 FAULT MEMORY
DUSTER ph2	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
DUSTER ph2	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
DUSTER ph2	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
DUSTER ph2	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
DUSTER ph2	AIRBAG / PRETENSIONERS	AIRBAG	Function Test	
DUSTER ph2	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
DUSTER ph2	AIRBAG / PRETENSIONERS	AIRBAG	Actuation Test	
DUSTER ph2	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
DUSTER ph2	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
DUSTER ph2	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
DUSTER ph2	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
DUSTER ph2	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC013 SENSOR CONFIGURATION
DUSTER ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Fault Code	
DUSTER ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Erase Fault Code	
DUSTER ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read ECU Information	
DUSTER ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Live Data	
DUSTER ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Configuration	
DUSTER ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Actuation Test	
DUSTER ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Write Configuration	CF002 COUNTRY MODEL
DUSTER ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Write Configuration	CF046 LANGUAGE
DUSTER ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Other Configuration	VP002 WRITE VIN
DUSTER ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Configuration	SC007 SYSTEM CONFIGURATION
LODGY	INJECTION	V42 INJECTION	Read Fault Code	
LODGY	INJECTION	V42 INJECTION	Erase Fault Code	
LODGY	INJECTION	V42 INJECTION	Read ECU Information	
LODGY	INJECTION	V42 INJECTION	Live Data	
LODGY	INJECTION	V42 INJECTION	Read Configuration	
LODGY	INJECTION	V42 INJECTION	Actuation Test	
LODGY	INJECTION	V42 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LODGY	INJECTION	V42 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LODGY	INJECTION	V42 INJECTION	Erase	RZ001 FAULT MEMORY
LODGY	INJECTION	V42 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
LODGY	INJECTION	V42 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
LODGY	INJECTION	V42 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
LODGY	INJECTION	V42 INJECTION	Erase	RZ064 ALCOHOL LEVEL PROG.
LODGY	INJECTION	V42 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
LODGY	INJECTION	V42 INJECTION	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
LODGY	INJECTION	V42 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
LODGY	INJECTION	V42 INJECTION	Configuration	SC001 WRITE SAVED DATA
LODGY	INJECTION	V42 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
LODGY	INJECTION	V42 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
LODGY	INJECTION	EMS 3150 INJECTION	Read Fault Code	
LODGY	INJECTION	EMS 3150 INJECTION	Erase Fault Code	
LODGY	INJECTION	EMS 3150 INJECTION	Read ECU Information	
LODGY	INJECTION	EMS 3150 INJECTION	Live Data	
LODGY	INJECTION	EMS 3150 INJECTION	Read Configuration	
LODGY	INJECTION	EMS 3150 INJECTION	Actuation Test	
LODGY	INJECTION	EMS 3150 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LODGY	INJECTION	EMS 3150 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LODGY	INJECTION	EMS 3150 INJECTION	Other Configuration	VP067 STATIC TEST

LODGY	INJECTION	EMS 3150 INJECTION	Other Configuration	VP214 PARAMETRAGE PRIVE 159
LODGY	INJECTION	EMS 3150 INJECTION	Other Configuration	VP215 PARAMETRAGE PRIVE 160
LODGY	INJECTION	EMS 3150 INJECTION	Other Configuration	VP342 VACUUM PUMP OPERATION REQUEST
LODGY	INJECTION	EMS 3150 INJECTION	Erase	RZ001 FAULT MEMORY
LODGY	INJECTION	EMS 3150 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
LODGY	INJECTION	EMS 3150 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
LODGY	INJECTION	EMS 3150 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
LODGY	INJECTION	EMS 3150 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
LODGY	INJECTION	EMS 3150 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
LODGY	INJECTION	EMS 3150 INJECTION	Erase	RZ075 CAMSHAFT NO. 2 SENSOR PROGRAMMING
LODGY	INJECTION	EMS 3150 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
LODGY	INJECTION	EMS 3150 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
LODGY	INJECTION	EMS 3150 INJECTION	Erase	RZ091 WASTE GATE REGULATION
LODGY	INJECTION	EMS 3150 INJECTION	Erase	RZ089 INHIBIT EVAP STRATEGY
LODGY	INJECTION	EMS 3150 INJECTION	Erase	RZ090 ACTIVATE EVAP PROGRAMMING
LODGY	INJECTION	EMS 3150 INJECTION	Erase	RZ036 PARTICLE FILTER RELATIVE PRESSURE SENSOR
LODGY	INJECTION	EMS 3150 INJECTION	Erase	RZ061 FLYWHEEL TARGET PROGRAMMING
LODGY	INJECTION	EMS 3150 INJECTION	Erase	RZ046 INJECTOR ADAPTIVES
LODGY	INJECTION	EMS 3150 INJECTION	Erase	RZ100 PROGRAMMING THROTTLE LIMITS
LODGY	INJECTION	EMS 3150 INJECTION	Erase	RZ117 RICHNESS REGULATION PROGRAMMING
LODGY	INJECTION	EMS 3150 INJECTION	Erase	RZ065 FLYWHEEL TARGET PROGRAMMING
LODGY	INJECTION	EMS 3150 INJECTION	Erase	RZ102 FLYWHEEL TARGET PROGRAMMING
LODGY	INJECTION	EMS 3150 INJECTION	Erase	RZ103 FLYWHEEL TARGET PROGRAMMING
LODGY	INJECTION	EMS 3150 INJECTION	Erase	RZ104 FLYWHEEL TARGET PROGRAMMING
LODGY	INJECTION	EMS 3150 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
LODGY	INJECTION	EMS 3150 INJECTION	Configuration	SC001 WRITE SAVED DATA
LODGY	INJECTION	EMS 3150 INJECTION	Configuration	SC040 SPEED LIMITER
LODGY	INJECTION	EMS 3150 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
LODGY	INJECTION	EMS 3150 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
LODGY	INJECTION	EMS 3150 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
LODGY	INJECTION	INJECTION DCM 3.4	Read Fault Code	
LODGY	INJECTION	INJECTION DCM 3.4	Erase Fault Code	
LODGY	INJECTION	INJECTION DCM 3.4	Read ECU Information	
LODGY	INJECTION	INJECTION DCM 3.4	Live Data	
LODGY	INJECTION	INJECTION DCM 3.4	Read Configuration	
LODGY	INJECTION	INJECTION DCM 3.4	Actuation Test	
LODGY	INJECTION	INJECTION DCM 3.4	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LODGY	INJECTION	INJECTION DCM 3.4	Other Configuration	VP010 WRITE V.I.N.
LODGY	INJECTION	INJECTION DCM 3.4	Erase	RZ001 FAULT MEMORY
LODGY	INJECTION	INJECTION DCM 3.4	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
LODGY	INJECTION	INJECTION DCM 3.4	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
LODGY	INJECTION	INJECTION DCM 3.4	Erase	RZ012 EGR VALVE PROGRAMMING
LODGY	INJECTION	INJECTION DCM 3.4	Erase	RZ041 FUEL FLOW REGULATOR
LODGY	INJECTION	INJECTION DCM 3.4	Erase	RZ003 ENGINE ADAPTIVES
LODGY	INJECTION	INJECTION DCM 3.4	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
LODGY	INJECTION	INJECTION DCM 3.4	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
LODGY	INJECTION	INJECTION DCM 3.4	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
LODGY	INJECTION	INJECTION DCM 3.4	Erase	RZ051 INJECTOR ADAPTIVES NO. 1
LODGY	INJECTION	INJECTION DCM 3.4	Erase	RZ052 INJECTOR ADAPTIVES NO. 2
LODGY	INJECTION	INJECTION DCM 3.4	Erase	RZ053 INJECTOR ADAPTIVES NO. 3
LODGY	INJECTION	INJECTION DCM 3.4	Erase	RZ054 INJECTOR ADAPTIVES NO. 4
LODGY	INJECTION	INJECTION DCM 3.4	Configuration	SC001 WRITE SAVED DATA
LODGY	INJECTION	INJECTION DCM 3.4	Configuration	SC002 ENTER INJECTOR CODES
LODGY	INJECTION	INJECTION DCM 3.4	Configuration	SC003 SAVE COMPUTER DATA
LODGY	INJECTION	INJECTION DCM 3.4	Configuration	SC053 INJECTOR ADAPTIVES
LODGY	INJECTION	INJECTION DCM 3.4	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
LODGY	INJECTION	INJECTION DCM 3.4	Configuration	SC042 FAST IDLE SPEED MODIFICATION
LODGY	INJECTION	INJECTION DCM 3.4	Configuration	SC040 SPEED LIMITER
LODGY	INJECTION	EDC17 C42 INJECTION	Read Fault Code	
LODGY	INJECTION	EDC17 C42 INJECTION	Erase Fault Code	
LODGY	INJECTION	EDC17 C42 INJECTION	Read ECU Information	
LODGY	INJECTION	EDC17 C42 INJECTION	Live Data	
LODGY	INJECTION	EDC17 C42 INJECTION	Read Configuration	
LODGY	INJECTION	EDC17 C42 INJECTION	Actuation Test	
LODGY	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LODGY	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LODGY	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
LODGY	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
LODGY	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
LODGY	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
LODGY	INJECTION	EDC17 C42 INJECTION	Erase	RZ001 FAULT MEMORY
LODGY	INJECTION	EDC17 C42 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
LODGY	INJECTION	EDC17 C42 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
LODGY	INJECTION	EDC17 C42 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
LODGY	INJECTION	EDC17 C42 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
LODGY	INJECTION	EDC17 C42 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
LODGY	INJECTION	EDC17 C42 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
LODGY	INJECTION	EDC17 C42 INJECTION	Erase	RZ071 MANIFOLD PRESSURE SENSOR PROGRAMMING
LODGY	INJECTION	EDC17 C42 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
LODGY	INJECTION	EDC17 C42 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
LODGY	INJECTION	EDC17 C42 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
LODGY	INJECTION	EDC17 C42 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
LODGY	INJECTION	EDC17 C42 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
LODGY	INJECTION	EDC17 C42 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
LODGY	INJECTION	EDC17 C42 INJECTION	Erase	RZ032 AIR PATH PROGRAMMING
LODGY	INJECTION	EDC17 C42 INJECTION	Erase	RZ002 EGR ADAPTIVES
LODGY	INJECTION	EDC17 C42 INJECTION	Erase	RZ036 PARTICLE FILTER RELATIVE PRESSURE SENSOR
LODGY	INJECTION	EDC17 C42 INJECTION	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
LODGY	INJECTION	EDC17 C42 INJECTION	Erase	RZ088 AIR DAMPER VALVE PROGRAMMING
LODGY	INJECTION	EDC17 C42 INJECTION	Erase	RZ017 EGR PROGRAMMING
LODGY	INJECTION	EDC17 C42 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
LODGY	INJECTION	EDC17 C42 INJECTION	Erase	RZ005 PROGRAMMED VALUES
LODGY	INJECTION	EDC17 C42 INJECTION	Configuration	SC001 WRITE SAVED DATA
LODGY	INJECTION	EDC17 C42 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
LODGY	INJECTION	EDC17 C42 INJECTION	Configuration	SC003 SAVE COMPUTER DATA

LODGY	INJECTION	EDC17 C42 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
LODGY	INJECTION	EDC17 C42 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
LODGY	INJECTION	EDC17 C42 INJECTION	Configuration	SC040 SPEED LIMITER
LODGY	INJECTION	EDC17 C42 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
LODGY	INJECTION	EDC17 C42 INJECTION	Configuration	SC060 PARTICLE FILTER REGENERATION
LODGY	INJECTION	EDC17 C42 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
LODGY	INJECTION	EDC17 C42 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
LODGY	INJECTION	SID 306 INJECTION	Read Fault Code	
LODGY	INJECTION	SID 306 INJECTION	Erase Fault Code	
LODGY	INJECTION	SID 306 INJECTION	Read ECU Information	
LODGY	INJECTION	SID 306 INJECTION	Live Data	
LODGY	INJECTION	SID 306 INJECTION	Read Configuration	
LODGY	INJECTION	SID 306 INJECTION	Actuation Test	
LODGY	INJECTION	SID 306 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LODGY	INJECTION	SID 306 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LODGY	INJECTION	SID 306 INJECTION	Other Configuration	VP305 PARAMETRAGE PRIVE 250
LODGY	INJECTION	SID 306 INJECTION	Other Configuration	VP022 INJECTION PROHIBITION
LODGY	INJECTION	SID 306 INJECTION	Erase	RZ001 FAULT MEMORY
LODGY	INJECTION	SID 306 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
LODGY	INJECTION	SID 306 INJECTION	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
LODGY	INJECTION	SID 306 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
LODGY	INJECTION	SID 306 INJECTION	Erase	RZ036 PARTICLE FILTER RELATIVE PRESSURE SENSOR
LODGY	INJECTION	SID 306 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
LODGY	INJECTION	SID 306 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
LODGY	INJECTION	SID 306 INJECTION	Erase	RZ084 EGR BYPASS PROGRAMMING
LODGY	INJECTION	SID 306 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
LODGY	INJECTION	SID 306 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
LODGY	INJECTION	SID 306 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
LODGY	INJECTION	SID 306 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
LODGY	INJECTION	SID 306 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
LODGY	INJECTION	SID 306 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
LODGY	INJECTION	SID 310 INJECTION	Read Fault Code	
LODGY	INJECTION	SID 310 INJECTION	Erase Fault Code	
LODGY	INJECTION	SID 310 INJECTION	Read ECU Information	
LODGY	INJECTION	SID 310 INJECTION	Live Data	
LODGY	INJECTION	SID 310 INJECTION	Read Configuration	
LODGY	INJECTION	SID 310 INJECTION	Actuation Test	
LODGY	INJECTION	SID 310 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
LODGY	INJECTION	SID 310 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
LODGY	INJECTION	SID 310 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LODGY	INJECTION	SID 310 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
LODGY	INJECTION	SID 310 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
LODGY	INJECTION	SID 310 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
LODGY	INJECTION	SID 310 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
LODGY	INJECTION	SID 310 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
LODGY	INJECTION	SID 310 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LODGY	INJECTION	SID 310 INJECTION	Erase	RZ007 FAULT MEMORY
LODGY	INJECTION	SID 310 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
LODGY	INJECTION	SID 310 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
LODGY	INJECTION	SID 310 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
LODGY	INJECTION	SID 310 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
LODGY	INJECTION	SID 310 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
LODGY	INJECTION	SID 310 INJECTION	Erase	RZ002 EGR ADAPTIVES
LODGY	INJECTION	SID 310 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
LODGY	INJECTION	SID 310 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
LODGY	INJECTION	SID 310 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
LODGY	INJECTION	SID 310 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
LODGY	INJECTION	SID 310 INJECTION	Erase	RZ099 STOP AND START FUNCTION
LODGY	INJECTION	SID 310 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
LODGY	INJECTION	SID 310 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
LODGY	INJECTION	SID 310 INJECTION	Erase	RZ093 INJECTION PUMP ADAPTIVES
LODGY	INJECTION	SID 310 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
LODGY	INJECTION	SID 310 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
LODGY	INJECTION	SID 310 INJECTION	Erase	RZ087 CATALYTIC CONVERTER
LODGY	INJECTION	SID 310 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
LODGY	INJECTION	SID 310 INJECTION	Erase	RZ120 INJECTION PUMP ADAPTIVES
LODGY	INJECTION	SID 310 INJECTION	Configuration	SC001 WRITE SAVED DATA
LODGY	INJECTION	SID 310 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
LODGY	INJECTION	SID 310 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
LODGY	INJECTION	SID 310 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
LODGY	INJECTION	SID 310 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
LODGY	INJECTION	SID 310 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
LODGY	INJECTION	SID 310 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
LODGY	INJECTION	SID 310 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
LODGY	INJECTION	SID 310 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
LODGY	INJECTION	SID 310 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
LODGY	INJECTION	SID 310 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
LODGY	INJECTION	SID 310 INJECTION	Configuration	SC040 SPEED LIMITER
LODGY	INJECTION	SID 310 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
LODGY	INJECTION	SID 310 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
LODGY	INJECTION	SID 310 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
LODGY	INJECTION	SID 310 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
LODGY	INJECTION	SID 310 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
LODGY	INJECTION	EMS 3125 INJECTION	Read Fault Code	
LODGY	INJECTION	EMS 3125 INJECTION	Erase Fault Code	
LODGY	INJECTION	EMS 3125 INJECTION	Read ECU Information	
LODGY	INJECTION	EMS 3125 INJECTION	Live Data	
LODGY	INJECTION	EMS 3125 INJECTION	Read Configuration	
LODGY	INJECTION	EMS 3125 INJECTION	Actuation Test	
LODGY	INJECTION	EMS 3125 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LODGY	INJECTION	EMS 3125 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LODGY	INJECTION	EMS 3125 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
LODGY	INJECTION	EMS 3125 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
LODGY	INJECTION	EMS 3125 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
LODGY	INJECTION	EMS 3125 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2

LODGY	INJECTION	EMS 3125 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
LODGY	INJECTION	EMS 3125 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
LODGY	INJECTION	EMS 3125 INJECTION	Erase	RZ001 FAULT MEMORY
LODGY	INJECTION	EMS 3125 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
LODGY	INJECTION	EMS 3125 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
LODGY	INJECTION	EMS 3125 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
LODGY	INJECTION	EMS 3125 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
LODGY	INJECTION	EMS 3125 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
LODGY	INJECTION	EMS 3125 INJECTION	Erase	RZ064 ALCOHOL LEVEL PROG.
LODGY	INJECTION	EMS 3125 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
LODGY	INJECTION	EMS 3125 INJECTION	Erase	RZ046 INJECTOR ADAPTIVES
LODGY	INJECTION	EMS 3125 INJECTION	Erase	RZ099 STOP AND START FUNCTION
LODGY	INJECTION	EMS 3125 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
LODGY	INJECTION	EMS 3125 INJECTION	Erase	RZ091 WASTE GATE REGULATION
LODGY	INJECTION	EMS 3125 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
LODGY	INJECTION	EMS 3125 INJECTION	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
LODGY	INJECTION	EMS 3125 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
LODGY	INJECTION	EMS 3125 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
LODGY	INJECTION	EMS 3125 INJECTION	Configuration	SC040 SPEED LIMITER
LODGY	INJECTION	EMS 3155 INJECTION	Read Fault Code	
LODGY	INJECTION	EMS 3155 INJECTION	Erase Fault Code	
LODGY	INJECTION	EMS 3155 INJECTION	Read ECU Information	
LODGY	INJECTION	EMS 3155 INJECTION	Live Data	
LODGY	INJECTION	EMS 3155 INJECTION	Read Configuration	
LODGY	INJECTION	EMS 3155 INJECTION	Actuation Test	
LODGY	INJECTION	EMS 3155 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LODGY	INJECTION	EMS 3155 INJECTION	Other Configuration	VP342 VACUUM PUMP OPERATION REQUEST
LODGY	INJECTION	EMS 3155 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LODGY	INJECTION	EMS 3155 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
LODGY	INJECTION	EMS 3155 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
LODGY	INJECTION	EMS 3155 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
LODGY	INJECTION	EMS 3155 INJECTION	Other Configuration	VP386 VACUUM PUMP OPERATION REQUEST
LODGY	INJECTION	EMS 3155 INJECTION	Other Configuration	VP387 VACUUM PUMP OPERATION REQUEST
LODGY	INJECTION	EMS 3155 INJECTION	Erase	RZ001 FAULT MEMORY
LODGY	INJECTION	EMS 3155 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
LODGY	INJECTION	EMS 3155 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
LODGY	INJECTION	EMS 3155 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
LODGY	INJECTION	EMS 3155 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
LODGY	INJECTION	EMS 3155 INJECTION	Erase	RZ075 CAMSHAFT NO. 2 SENSOR PROGRAMMING
LODGY	INJECTION	EMS 3155 INJECTION	Erase	RZ093 INJECTION PUMP ADAPTIVES
LODGY	INJECTION	EMS 3155 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
LODGY	INJECTION	EMS 3155 INJECTION	Erase	RZ091 WASTE GATE REGULATION
LODGY	INJECTION	EMS 3155 INJECTION	Erase	RZ061 FLYWHEEL TARGET PROGRAMMING
LODGY	INJECTION	EMS 3155 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
LODGY	INJECTION	EMS 3155 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
LODGY	INJECTION	EMS 3155 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
LODGY	INJECTION	EMS 3155 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
LODGY	INJECTION	EMS 3155 INJECTION	Erase	RZ099 STOP AND START FUNCTION
LODGY	INJECTION	EMS 3155 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
LODGY	INJECTION	EMS 3155 INJECTION	Erase	RZ065 FLYWHEEL TARGET PROGRAMMING
LODGY	INJECTION	EMS 3155 INJECTION	Erase	RZ102 FLYWHEEL TARGET PROGRAMMING
LODGY	INJECTION	EMS 3155 INJECTION	Erase	RZ103 FLYWHEEL TARGET PROGRAMMING
LODGY	INJECTION	EMS 3155 INJECTION	Erase	RZ104 FLYWHEEL TARGET PROGRAMMING
LODGY	INJECTION	EMS 3155 INJECTION	Erase	RZ105 FLYWHEEL TARGET PROGRAMMING
LODGY	INJECTION	EMS 3155 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
LODGY	INJECTION	EMS 3155 INJECTION	Configuration	SC001 WRITE SAVED DATA
LODGY	INJECTION	EMS 3155 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
LODGY	INJECTION	EMS 3155 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
LODGY	INJECTION	EMS 3155 INJECTION	Configuration	SC040 SPEED LIMITER
LODGY	INJECTION	EMS 3155 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
LODGY	INJECTION	EMS 3120 INJECTION	Read Fault Code	
LODGY	INJECTION	EMS 3120 INJECTION	Erase Fault Code	
LODGY	INJECTION	EMS 3120 INJECTION	Read ECU Information	
LODGY	INJECTION	EMS 3120 INJECTION	Live Data	
LODGY	INJECTION	EMS 3120 INJECTION	Read Configuration	
LODGY	INJECTION	EMS 3120 INJECTION	Actuation Test	
LODGY	INJECTION	EMS 3120 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LODGY	INJECTION	EMS 3120 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LODGY	INJECTION	EMS 3120 INJECTION	Erase	RZ001 FAULT MEMORY
LODGY	INJECTION	EMS 3120 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
LODGY	INJECTION	EMS 3120 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
LODGY	INJECTION	EMS 3120 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
LODGY	INJECTION	EMS 3120 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
LODGY	INJECTION	EMS 3120 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
LODGY	INJECTION	EMS 3120 INJECTION	Erase	RZ064 ALCOHOL LEVEL PROG.
LODGY	INJECTION	EMS 3120 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
LODGY	INJECTION	EMS 3120 INJECTION	Erase	RZ046 INJECTOR ADAPTIVES
LODGY	INJECTION	EMS 3120 INJECTION	Configuration	SC001 WRITE SAVED DATA
LODGY	INJECTION	EMS 3120 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
LODGY	INJECTION	EMS 3120 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
LODGY	INJECTION	EMS 3120 INJECTION	Configuration	SC047 SAVE COMPUTER DATA
LODGY	INJECTION	EMS 3120 INJECTION	Configuration	SC048 WRITE SAVED DATA
LODGY	INJECTION	EDC17 C84 INJECTION	Read Fault Code	
LODGY	INJECTION	EDC17 C84 INJECTION	Erase Fault Code	
LODGY	INJECTION	EDC17 C84 INJECTION	Read ECU Information	
LODGY	INJECTION	EDC17 C84 INJECTION	Live Data	
LODGY	INJECTION	EDC17 C84 INJECTION	Read Configuration	
LODGY	INJECTION	EDC17 C84 INJECTION	Actuation Test	
LODGY	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LODGY	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP001 CYLINDER 1 INJECTOR CODE
LODGY	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP002 CYLINDER 2 INJECTOR CODE
LODGY	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP003 CYLINDER 3 INJECTOR CODE
LODGY	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP004 CYLINDER 4 INJECTOR CODE
LODGY	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
LODGY	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES

LODGY	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
LODGY	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LODGY	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
LODGY	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
LODGY	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
LODGY	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
LODGY	INJECTION	EDC17 C84 INJECTION	Erase	RZ007 FAULT MEMORY
LODGY	INJECTION	EDC17 C84 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
LODGY	INJECTION	EDC17 C84 INJECTION	Erase	RZ099 STOP AND START FUNCTION
LODGY	INJECTION	EDC17 C84 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
LODGY	INJECTION	EDC17 C84 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
LODGY	INJECTION	EDC17 C84 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
LODGY	INJECTION	EDC17 C84 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
LODGY	INJECTION	EDC17 C84 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
LODGY	INJECTION	EDC17 C84 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
LODGY	INJECTION	EDC17 C84 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
LODGY	INJECTION	EDC17 C84 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
LODGY	INJECTION	EDC17 C84 INJECTION	Erase	RZ084 EGR BYPASS PROGRAMMING
LODGY	INJECTION	EDC17 C84 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTATIVES
LODGY	INJECTION	EDC17 C84 INJECTION	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
LODGY	INJECTION	EDC17 C84 INJECTION	Erase	RZ005 PROGRAMMED VALUES
LODGY	INJECTION	EDC17 C84 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
LODGY	INJECTION	EDC17 C84 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
LODGY	INJECTION	EDC17 C84 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
LODGY	INJECTION	EDC17 C84 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
LODGY	INJECTION	EDC17 C84 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
LODGY	INJECTION	EDC17 C84 INJECTION	Erase	RZ078 STARTER ADAPTATIVES
LODGY	INJECTION	EDC17 C84 INJECTION	Erase	RZ087 CATALYTIC CONVERTER
LODGY	INJECTION	EDC17 C84 INJECTION	Erase	RZ093 INJECTION PUMP ADAPTATIVES
LODGY	INJECTION	EDC17 C84 INJECTION	Erase	RZ095 INJECTION TIME PROGRAMMING
LODGY	INJECTION	EDC17 C84 INJECTION	Configuration	SC001 WRITE SAVED DATA
LODGY	INJECTION	EDC17 C84 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
LODGY	INJECTION	EDC17 C84 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
LODGY	INJECTION	EDC17 C84 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
LODGY	INJECTION	EDC17 C84 INJECTION	Configuration	SC040 SPEED LIMITER
LODGY	INJECTION	EDC17 C84 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
LODGY	INJECTION	EDC17 C84 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
LODGY	INJECTION	EDC17 C84 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
LODGY	INJECTION	EDC17 C84 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
LODGY	A.B.S.	ESP	Read Fault Code	
LODGY	A.B.S.	ESP	Erase Fault Code	
LODGY	A.B.S.	ESP	Read ECU Information	
LODGY	A.B.S.	ESP	Live Data	
LODGY	A.B.S.	ESP	Read Configuration	
LODGY	A.B.S.	ESP	Actuation Test	
LODGY	A.B.S.	ESP	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
LODGY	A.B.S.	ESP	Other Configuration	VP001 WRITE VIN
LODGY	A.B.S.	ESP	Other Configuration	VP007 SPEEDO INDEX
LODGY	A.B.S.	ESP	Other Configuration	VP003 STEERING WHEEL ANGLE SENSOR
LODGY	A.B.S.	ESP	Other Configuration	VP045 HILL START
LODGY	A.B.S.	ESP	Erase	RZ001 FAULT MEMORY
LODGY	A.B.S.	ESP	Erase	RZ008 TRANSVERSE ACCELERATION OFFSET SENSOR
LODGY	A.B.S.	ESP	Erase	RZ009 BRAKE PRESSURE OFFSET SENSOR
LODGY	A.B.S.	ESP	Erase	RZ007 STEERING WHEEL ANGLE OFFSET SENSOR
LODGY	A.B.S.	ESP	Erase	RZ010 LONGITUDINAL ACCELERATION SENSOR OFFSET
LODGY	A.B.S.	ESP	Configuration	SC001 CHECK TARGET TEETH
LODGY	A.B.S.	ABS	Read Fault Code	
LODGY	A.B.S.	ABS	Erase Fault Code	
LODGY	A.B.S.	ABS	Read ECU Information	
LODGY	A.B.S.	ABS	Live Data	
LODGY	A.B.S.	ABS	Actuation Test	
LODGY	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
LODGY	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
LODGY	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
LODGY	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
LODGY	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
LODGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
LODGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
LODGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
LODGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
LODGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
LODGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
LODGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF149 GEARBOX TYPE
LODGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
LODGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
LODGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
LODGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF199 COMPUTER INITIALISATION
LODGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF160 OVERSPEED ALARM
LODGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF180 EXTERNAL TEMPERATURE
LODGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF225 BATTERY CHARGE WARNING INFORMATION
LODGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF158 SEAT BELT REMINDER BUZZER
LODGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
LODGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP010 UPDATE ODOMETER
LODGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
LODGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
LODGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
LODGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
LODGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
LODGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
LODGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
LODGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF149 GEARBOX TYPE
LODGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
LODGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
LODGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
LODGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF150 CRUISE CTRL/SPD LIMITER

LODGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF199 COMPUTER INITIALISATION
LODGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF160 OVERSPEED ALARM
LODGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF180 EXTERNAL TEMPERATURE
LODGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF225 BATTERY CHARGE WARNING INFORMATION
LODGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
LODGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP010 UPDATE ODOMETER
LODGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
LODGY	UCH	UCH	Read Fault Code	
LODGY	UCH	UCH	Erase Fault Code	
LODGY	UCH	UCH	Read ECU Information	
LODGY	UCH	UCH	Live Data	
LODGY	UCH	UCH	Read Configuration	
LODGY	UCH	UCH	Actuation Test	
LODGY	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
LODGY	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
LODGY	UCH	UCH	Write Configuration	CF229 ALARM
LODGY	UCH	UCH	Write Configuration	CF299 ACCESS/STARTER TYPE
LODGY	UCH	UCH	Other Configuration	VP001 WRITE V.I.N.
LODGY	UCH	UCH	Erase	RZ001 FAULT MEMORY
LODGY	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
LODGY	UCH	UCH	Read Fault Code	
LODGY	UCH	UCH	Erase Fault Code	
LODGY	UCH	UCH	Read ECU Information	
LODGY	UCH	UCH	Live Data	
LODGY	UCH	UCH	Read Configuration	
LODGY	UCH	UCH	Actuation Test	
LODGY	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
LODGY	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
LODGY	UCH	UCH	Write Configuration	CF229 ALARM
LODGY	UCH	UCH	Write Configuration	CF314 STOP AND START FUNCTION
LODGY	UCH	UCH	Write Configuration	CF299 ACCESS/STARTER TYPE
LODGY	UCH	UCH	Other Configuration	VP001 WRITE V.I.N.
LODGY	UCH	UCH	Erase	RZ001 FAULT MEMORY
LODGY	UCH	UCH	Erase	RZ013 HIGH PRESSURE PUMP COUNTER
LODGY	UCH	UCH	Erase	RZ014 NUMBER OF STARTING CYCLES
LODGY	UCH	UCH	Erase	RZ018 HIGH PRESSURE PUMP COUNTER
LODGY	UCH	UCH	Erase	RZ017 NUMBER OF STARTING CYCLES
LODGY	UCH	UCH	Erase	RZ016 STOP AND START FUNCTION
LODGY	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
LODGY	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
LODGY	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
LODGY	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
LODGY	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
LODGY	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
LODGY	AIRBAG / PRETENSIONERS	AIRBAG	Actuation Test	
LODGY	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
LODGY	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
LODGY	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
LODGY	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
LODGY	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
LODGY	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC005 CONFIGURATION OF SYSTEM COMPONENTS
LODGY	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC013 SENSOR CONFIGURATION
LODGY	AUTOMATIC GEARBOX	DPO TA2005 ATX	Read Fault Code	
LODGY	AUTOMATIC GEARBOX	DPO TA2005 ATX	Erase Fault Code	
LODGY	AUTOMATIC GEARBOX	DPO TA2005 ATX	Read ECU Information	
LODGY	AUTOMATIC GEARBOX	DPO TA2005 ATX	Live Data	
LODGY	AUTOMATIC GEARBOX	DPO TA2005 ATX	Actuation Test	
LODGY	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP015 NOTE OIL WEAR COUNTER
LODGY	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP016 WRITE TRANSMISSION OIL CHANGE DATE
LODGY	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP009 WRITE DATE OF LAST AFTER SALES OPERATION
LODGY	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP001 WRITE VIN
LODGY	AUTOMATIC GEARBOX	DPO TA2005 ATX	Erase	RZ004 FAULT MEMORY
LODGY	AUTOMATIC GEARBOX	DPO TA2005 ATX	Erase	RZ005 AUTO-ADAPTIVES
LODGY	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Read Fault Code	
LODGY	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase Fault Code	
LODGY	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Read ECU Information	
LODGY	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Live Data	
LODGY	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Actuation Test	
LODGY	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Other Configuration	VP001 WRITE VIN
LODGY	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ004 FAULT MEMORY
LODGY	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ014 RESET CLUTCH DATA PROTECTION
LODGY	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ015 RESET GEARBOX DATA
LODGY	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ013 RESET CLUTCH DATA
LODGY	VARIABLE P.A.S.	PAS PUMP ASS.	Read Fault Code	
LODGY	VARIABLE P.A.S.	PAS PUMP ASS.	Erase Fault Code	
LODGY	VARIABLE P.A.S.	PAS PUMP ASS.	Read ECU Information	
LODGY	VARIABLE P.A.S.	PAS PUMP ASS.	Live Data	
LODGY	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP001 WRITE VIN
LODGY	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP005 WRITE DATE OF AFTER SALES OPERATION
LODGY	VARIABLE P.A.S.	PAS PUMP ASS.	Erase	RZ001 FAULT MEMORY
LODGY	RADIO	RADIO	Read Fault Code	
LODGY	RADIO	RADIO	Erase Fault Code	
LODGY	RADIO	RADIO	Read ECU Information	
LODGY	RADIO	RADIO	Live Data	
LODGY	RADIO	RADIO	Read Configuration	
LODGY	RADIO	RADIO	Actuation Test	
LODGY	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
LODGY	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
LODGY	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
LODGY	RADIO	RADIO	Configuration	SC002 COMP CONFIGURAION
LODGY	RADIO	RADIO	Erase	RZ003 FAULT MEMORY
LODGY	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Fault Code	
LODGY	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase Fault Code	
LODGY	HANDS-FREE MODULE	HANDS-FREE MODULE	Read ECU Information	
LODGY	HANDS-FREE MODULE	HANDS-FREE MODULE	Live Data	

LODGY	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Configuration	
LODGY	HANDS-FREE MODULE	HANDS-FREE MODULE	Actuation Test	
LODGY	HANDS-FREE MODULE	HANDS-FREE MODULE	Other Configuration	VP002 WRITE V.I.N.
LODGY	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase	RZ001 FAULT MEMORY
LODGY	HANDS-FREE MODULE	HANDS-FREE MODULE	Configuration	SC003 CARD TESTING
LODGY	HANDS-FREE MODULE	HANDS-FREE MODULE	Configuration	SC007 REMOTE LOCKING BUZZER
LODGY	RADIO	RADIO	Read Fault Code	
LODGY	RADIO	RADIO	Erase Fault Code	
LODGY	RADIO	RADIO	Read ECU Information	
LODGY	RADIO	RADIO	Live Data	
LODGY	RADIO	RADIO	Read Configuration	
LODGY	RADIO	RADIO	Actuation Test	
LODGY	RADIO	RADIO	Write Configuration	CF053 REAR LOUD SPEAKER
LODGY	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
LODGY	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
LODGY	RADIO	RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
LODGY	RADIO	RADIO	Erase	RZ003 FAULT MEMORY
LODGY	RADIO	RADIO	Read Fault Code	
LODGY	RADIO	RADIO	Erase Fault Code	
LODGY	RADIO	RADIO	Read ECU Information	
LODGY	RADIO	RADIO	Live Data	
LODGY	RADIO	RADIO	Read Configuration	
LODGY	RADIO	RADIO	Actuation Test	
LODGY	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
LODGY	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
LODGY	RADIO	RADIO	Write Configuration	CF066 GUIDELINES
LODGY	RADIO	RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
LODGY	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
LODGY	RADIO	RADIO	Erase	RZ005 FAULT MEMORY
LODGY	RADIO	RADIO	Configuration	SC005 SYSTEM CONFIGURATION
LODGY	INJECTION	MDG1 INJECTION	Read Fault Code	
LODGY	INJECTION	MDG1 INJECTION	Erase Fault Code	
LODGY	INJECTION	MDG1 INJECTION	Read ECU Information	
LODGY	INJECTION	MDG1 INJECTION	Live Data	
LODGY	INJECTION	MDG1 INJECTION	Function Test	
LODGY	INJECTION	MDG1 INJECTION	Read Configuration	
LODGY	INJECTION	MDG1 INJECTION	Actuation Test	
LODGY	INJECTION	MDG1 INJECTION	Write Configuration	CF196 STOP AND START FUNCTION
LODGY	INJECTION	MDG1 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LODGY	INJECTION	MDG1 INJECTION	Other Configuration	VP010 WRITE V. I. N.
LODGY	INJECTION	MDG1 INJECTION	Other Configuration	VP052 BOOST PRESSURE WASTEGATE PROGRAMMING
LODGY	INJECTION	MDG1 INJECTION	Other Configuration	VP403 STATIC REGENERATION (IN WORKSHOP)
LODGY	INJECTION	MDG1 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
LODGY	INJECTION	MDG1 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
LODGY	INJECTION	MDG1 INJECTION	Erase	RZ125 COMPUTER RESET
LODGY	INJECTION	MDG1 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
LODGY	INJECTION	MDG1 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
LODGY	INJECTION	MDG1 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
LODGY	INJECTION	MDG1 INJECTION	Erase	RZ133 RAIL PRESSURE LIMITER
LODGY	INJECTION	MDG1 INJECTION	Erase	RZ126 CYLINDER PRESSURE SENSOR
LODGY	INJECTION	MDG1 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
LODGY	INJECTION	MDG1 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
LODGY	INJECTION	MDG1 INJECTION	Erase	RZ118 STARTING AUTHORIZATION
LODGY	INJECTION	MDG1 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
LODGY	INJECTION	MDG1 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
LODGY	INJECTION	MDG1 INJECTION	Erase	RZ132 FUEL PUMP PRIMING COMPLETE
LODGY	INJECTION	MDG1 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
LODGY	INJECTION	MDG1 INJECTION	Erase	RZ136 UPSTREAM OXYGEN SENSOR RESET
LODGY	INJECTION	MDG1 INJECTION	Erase	RZ137 DOWNSTREAM OXYGEN SENSOR RESET
LODGY	INJECTION	MDG1 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
LODGY	INJECTION	MDG1 INJECTION	Erase	RZ148 DOWNSTREAM OXYGEN SENSOR RESET
LODGY	INJECTION	MDG1 INJECTION	Erase	RZ147 UPSTREAM OXYGEN SENSOR RESET
LODGY	INJECTION	MDG1 INJECTION	Erase	RZ070 TURBOCHARGER PROGRAMMING
LODGY	INJECTION	MDG1 INJECTION	Erase	RZ084 EGR BYPASS PROGRAMMING
LODGY	INJECTION	MDG1 INJECTION	Erase	RZ135 AIR DAMPER VALVE PROGRAMMING
LODGY	INJECTION	MDG1 INJECTION	Erase	RZ168 SCR OUTLET AMMONIA LEAK METER
LODGY	INJECTION	MDG1 INJECTION	Erase	RZ099 STOP AND START FUNCTION
LODGY	INJECTION	MDG1 INJECTION	Erase	RZ088 AIR DAMPER VALVE PROGRAMMING
LODGY	INJECTION	MDG1 INJECTION	Erase	RZ152 TURBOCHARGER FUNCTION
LODGY	INJECTION	MDG1 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
LODGY	INJECTION	MDG1 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
LODGY	INJECTION	MDG1 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
LODGY	INJECTION	MDG1 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
LODGY	INJECTION	MDG1 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
LODGY	INJECTION	MDG1 INJECTION	Configuration	SC001 WRITE SAVED DATA
LODGY	INJECTION	MDG1 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
LODGY	INJECTION	MDG1 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
LODGY	INJECTION	MDG1 INJECTION	Configuration	SC040 SPEED LIMITER
LODGY	INJECTION	MDG1 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
LODGY	INJECTION	MDG1 INJECTION	Configuration	SC083 ADBLUE SYSTEM PERFORMANCE
LODGY	INJECTION	MDG1 INJECTION	Configuration	SC071 CYLINDER FUNCTION FAULT FINDING
LODGY	INJECTION	MDG1 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
LODGY	INJECTION	EMS 3160 INJECTION	Read Fault Code	
LODGY	INJECTION	EMS 3160 INJECTION	Erase Fault Code	
LODGY	INJECTION	EMS 3160 INJECTION	Read ECU Information	
LODGY	INJECTION	EMS 3160 INJECTION	Live Data	
LODGY	INJECTION	EMS 3160 INJECTION	Function Test	
LODGY	INJECTION	EMS 3160 INJECTION	Read Configuration	
LODGY	INJECTION	EMS 3160 INJECTION	Actuation Test	
LODGY	INJECTION	EMS 3160 INJECTION	Write Configuration	CF196 STOP AND START FUNCTION
LODGY	INJECTION	EMS 3160 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
LODGY	INJECTION	EMS 3160 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LODGY	INJECTION	EMS 3160 INJECTION	Other Configuration	VP010 WRITE V. I. N.
LODGY	INJECTION	EMS 3160 INJECTION	Other Configuration	VP073 FUEL PUMP FORCED CONVERSION
LODGY	INJECTION	EMS 3160 INJECTION	Erase	RZ003 ENGINE ADAPTIVES

LOGDY	INJECTION	EMS 3160 INJECTION	Erase	RZ091 WASTE GATE REGULATION
LOGDY	INJECTION	EMS 3160 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
LOGDY	INJECTION	EMS 3160 INJECTION	Erase	RZ019 PROGRAMMING REINITIALISATION
LOGDY	INJECTION	EMS 3160 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
LOGDY	INJECTION	EMS 3160 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
LOGDY	INJECTION	EMS 3160 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
LOGDY	INJECTION	EMS 3160 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
LOGDY	INJECTION	EMS 3160 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
LOGDY	INJECTION	EMS 3160 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
LOGDY	INJECTION	EMS 3160 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
LOGDY	INJECTION	EMS 3160 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
LOGDY	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read Fault Code	
LOGDY	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase Fault Code	
LOGDY	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read ECU Information	
LOGDY	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Live Data	
LOGDY	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Function Test	
LOGDY	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Actuation Test	
LOGAN	INJECTION	V42 INJECTION	Read Fault Code	
LOGAN	INJECTION	V42 INJECTION	Erase Fault Code	
LOGAN	INJECTION	V42 INJECTION	Read ECU Information	
LOGAN	INJECTION	V42 INJECTION	Live Data	
LOGAN	INJECTION	V42 INJECTION	Actuation Test	
LOGAN	INJECTION	V42 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LOGAN	INJECTION	V42 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LOGAN	INJECTION	V42 INJECTION	Erase	RZ001 FAULT MEMORY
LOGAN	INJECTION	V42 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
LOGAN	INJECTION	V42 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
LOGAN	INJECTION	V42 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
LOGAN	INJECTION	V42 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
LOGAN	INJECTION	V42 INJECTION	Erase	RZ064 ALCOHOL LEVEL PROG.
LOGAN	INJECTION	V42 INJECTION	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
LOGAN	INJECTION	V42 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
LOGAN	INJECTION	V42 INJECTION	Configuration	SC001 WRITE SAVED DATA
LOGAN	INJECTION	V42 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
LOGAN	INJECTION	V42 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
LOGAN	INJECTION	INJECTION DCM 3.4	Read Fault Code	
LOGAN	INJECTION	INJECTION DCM 3.4	Erase Fault Code	
LOGAN	INJECTION	INJECTION DCM 3.4	Read ECU Information	
LOGAN	INJECTION	INJECTION DCM 3.4	Live Data	
LOGAN	INJECTION	INJECTION DCM 3.4	Read Configuration	
LOGAN	INJECTION	INJECTION DCM 3.4	Actuation Test	
LOGAN	INJECTION	INJECTION DCM 3.4	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LOGAN	INJECTION	INJECTION DCM 3.4	Other Configuration	VP037 STOP FUEL SUPPLY PREVENTION
LOGAN	INJECTION	INJECTION DCM 3.4	Other Configuration	VP010 WRITE V.I.N.
LOGAN	INJECTION	INJECTION DCM 3.4	Other Configuration	VP292 PARAMETRAGE PRIVE 237
LOGAN	INJECTION	INJECTION DCM 3.4	Other Configuration	VP293 PARAMETRAGE PRIVE 238
LOGAN	INJECTION	INJECTION DCM 3.4	Other Configuration	VP294 PARAMETRAGE PRIVE 239
LOGAN	INJECTION	INJECTION DCM 3.4	Other Configuration	VP295 PARAMETRAGE PRIVE 240
LOGAN	INJECTION	INJECTION DCM 3.4	Erase	RZ001 FAULT MEMORY
LOGAN	INJECTION	INJECTION DCM 3.4	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
LOGAN	INJECTION	INJECTION DCM 3.4	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
LOGAN	INJECTION	INJECTION DCM 3.4	Erase	RZ012 EGR VALVE PROGRAMMING
LOGAN	INJECTION	INJECTION DCM 3.4	Erase	RZ032 AIR PATH PROGRAMMING
LOGAN	INJECTION	INJECTION DCM 3.4	Erase	RZ036 PARTICLE FILTER RELATIVE PRESSURE SENSOR
LOGAN	INJECTION	INJECTION DCM 3.4	Erase	RZ041 FUEL FLOW REGULATOR
LOGAN	INJECTION	INJECTION DCM 3.4	Erase	RZ043 EXHAUST INJECTOR CIRCUIT
LOGAN	INJECTION	INJECTION DCM 3.4	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
LOGAN	INJECTION	INJECTION DCM 3.4	Erase	RZ003 ENGINE ADAPTIVES
LOGAN	INJECTION	INJECTION DCM 3.4	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
LOGAN	INJECTION	INJECTION DCM 3.4	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
LOGAN	INJECTION	INJECTION DCM 3.4	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
LOGAN	INJECTION	INJECTION DCM 3.4	Configuration	SC002 ENTER INJECTOR CODES
LOGAN	INJECTION	INJECTION DCM 3.4	Configuration	SC017 PARTICLE FILTER REGENERATION
LOGAN	INJECTION	INJECTION DCM 3.4	Configuration	SC040 SPEED LIMITER
LOGAN	INJECTION	INJECTION DCM 3.4	Configuration	SC041 COMMERCIAL VEHICLE IDLE SPEED MODIFICATION
LOGAN	INJECTION	INJECTION DCM 3.4	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
LOGAN	INJECTION	INJECTION DCM 3.4	Configuration	SC052 ADAPTIVES AFTER REGENERATING PARTICLE FILTER
LOGAN	INJECTION	INJECTION DCM 3.4	Configuration	SC053 INJECTOR ADAPTIVES
LOGAN	INJECTION	INJECTION DCM 3.4	Configuration	SC054 INJECTOR ADAPTIVES
LOGAN	INJECTION	INJECTION DCM 3.4	Configuration	SC060 PARTICLE FILTER REGENERATION
LOGAN	INJECTION	INJECTION DCM 3.4	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
LOGAN	INJECTION	INJECTION DCM 3.4	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
LOGAN	INJECTION	INJECTION DCM 3.4	Configuration	SC044 ENTER INJECTOR CODES
LOGAN	AUTOMATIC GEARBOX	DPO TA2005 ATX	Read Fault Code	
LOGAN	AUTOMATIC GEARBOX	DPO TA2005 ATX	Erase Fault Code	
LOGAN	AUTOMATIC GEARBOX	DPO TA2005 ATX	Read ECU Information	
LOGAN	AUTOMATIC GEARBOX	DPO TA2005 ATX	Live Data	
LOGAN	AUTOMATIC GEARBOX	DPO TA2005 ATX	Actuation Test	
LOGAN	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP009 WRITE DATE OF LAST AFTER SALES OPERATION
LOGAN	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP016 WRITE TRANSMISSION OIL CHANGE DATE
LOGAN	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP001 WRITE VIN
LOGAN	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP015 NOTE OIL WEAR COUNTER
LOGAN	AUTOMATIC GEARBOX	DPO TA2005 ATX	Erase	RZ004 FAULT MEMORY
LOGAN	AUTOMATIC GEARBOX	DPO TA2005 ATX	Erase	RZ005 AUTO-ADAPTIVES
LOGAN	RADIO	RADIO	Read Fault Code	
LOGAN	RADIO	RADIO	Erase Fault Code	
LOGAN	RADIO	RADIO	Read ECU Information	
LOGAN	RADIO	RADIO	Live Data	
LOGAN	RADIO	RADIO	Read Configuration	
LOGAN	RADIO	RADIO	Actuation Test	
LOGAN	RADIO	RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
LOGAN	RADIO	RADIO	Other Configuration	VP016 CONFIGURING THE MULTIMEDIA COMPUTER
LOGAN	RADIO	RADIO	Erase	RZ003 FAULT MEMORY
LOGAN	RADIO	RADIO	Configuration	SC002 COMP CONFIGURATION
LOGAN	RADIO	RADIO	Configuration	SC003 COMP CONFIGURATION

LOGAN	RADIO	RADIO	Configuration	SC009 COMP CONFIGURATION
LOGAN	RADIO	RADIO	Read Fault Code	
LOGAN	RADIO	RADIO	Erase Fault Code	
LOGAN	RADIO	RADIO	Read ECU Information	
LOGAN	RADIO	RADIO	Live Data	
LOGAN	RADIO	RADIO	Read Configuration	
LOGAN	RADIO	RADIO	Actuation Test	
LOGAN	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
LOGAN	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
LOGAN	RADIO	RADIO	Write Configuration	CF014 DRIVING TYPE
LOGAN	RADIO	RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
LOGAN	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
LOGAN	RADIO	RADIO	Erase	RZ005 FAULT MEMORY
LOGAN	RADIO	RADIO	Erase	RZ004 RESET RADIO
LOGAN	RADIO	RADIO	Configuration	SC002 COMP CONFIGURATION
LOGAN	INJECTION	INJECTION DCM 1.2	Read Fault Code	
LOGAN	INJECTION	INJECTION DCM 1.2	Erase Fault Code	
LOGAN	INJECTION	INJECTION DCM 1.2	Read ECU Information	
LOGAN	INJECTION	INJECTION DCM 1.2	Live Data	
LOGAN	INJECTION	INJECTION DCM 1.2	Actuation Test	
LOGAN	INJECTION	INJECTION DCM 1.2	Other Configuration	VP010 WRITE V.I.N.
LOGAN	INJECTION	INJECTION DCM 1.2	Other Configuration	VP001 CYLINDER 1 INJECTOR CODE
LOGAN	INJECTION	INJECTION DCM 1.2	Other Configuration	VP002 CYLINDER 2 INJECTOR CODE
LOGAN	INJECTION	INJECTION DCM 1.2	Other Configuration	VP003 CYLINDER 3 INJECTOR CODE
LOGAN	INJECTION	INJECTION DCM 1.2	Other Configuration	VP004 CYLINDER 4 INJECTOR CODE
LOGAN	INJECTION	INJECTION DCM 1.2	Other Configuration	VP013 LOCK INJECTOR CONTROL
LOGAN	INJECTION	INJECTION DCM 1.2	Erase	RZ001 FAULT MEMORY
LOGAN	INJECTION	INJECTION DCM 1.2	Erase	RZ002 EGR ADAPTIVES
LOGAN	INJECTION	INJECTION DCM 1.2	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
LOGAN	INJECTION	INJECTION DCM 1.2	Erase	RZ007 FAULT MEMORY
LOGAN	INJECTION	INJECTION DCM 1.2	Configuration	SC002 ENTER INJECTOR CODES
LOGAN	INJECTION	SIM 32 INJECTOR	Read Fault Code	
LOGAN	INJECTION	SIM 32 INJECTOR	Erase Fault Code	
LOGAN	INJECTION	SIM 32 INJECTOR	Read ECU Information	
LOGAN	INJECTION	SIM 32 INJECTOR	Live Data	
LOGAN	INJECTION	SIM 32 INJECTOR	Read Configuration	
LOGAN	INJECTION	SIM 32 INJECTOR	Actuation Test	
LOGAN	INJECTION	SIM 32 INJECTOR	Other Configuration	VP020 WRITE VIN
LOGAN	INJECTION	SIM 32 INJECTOR	Erase	RZ007 FAULT MEMORY
LOGAN	INJECTION	SIM 32 INJECTOR	Erase	RZ019 PROGRAMMING REINITIALISATION
LOGAN	INJECTION	SIRIUS 32 INJECTION	Read Fault Code	
LOGAN	INJECTION	SIRIUS 32 INJECTION	Erase Fault Code	
LOGAN	INJECTION	SIRIUS 32 INJECTION	Read ECU Information	
LOGAN	INJECTION	SIRIUS 32 INJECTION	Live Data	
LOGAN	INJECTION	SIRIUS 32 INJECTION	Read Configuration	
LOGAN	INJECTION	SIRIUS 32 INJECTION	Actuation Test	
LOGAN	INJECTION	SIRIUS 32 INJECTION	Other Configuration	VP020 WRITE VIN
LOGAN	INJECTION	SIRIUS 32 INJECTION	Erase	RZ007 FAULT MEMORY
LOGAN	INJECTION	SIRIUS 32 INJECTION	Erase	RZ019 PROGRAMMING REINITIALISATION
LOGAN	INJECTION	SIRIUS 32 INJECTION	Erase	RZ094 IDLE SPEED LEARNING
LOGAN	INJECTION	SIRIUS 32 INJECTION	Erase	RZ095 INJECTION TIME PROGRAMMING
LOGAN	INJECTION	SIRIUS 32 INJECTION	Erase	RZ096 TORQUE LEARNING
LOGAN	INJECTION	SIRIUS 35 INJECTION	Read Fault Code	
LOGAN	INJECTION	SIRIUS 35 INJECTION	Erase Fault Code	
LOGAN	INJECTION	SIRIUS 35 INJECTION	Read ECU Information	
LOGAN	INJECTION	SIRIUS 35 INJECTION	Live Data	
LOGAN	INJECTION	SIRIUS 35 INJECTION	Read Configuration	
LOGAN	INJECTION	SIRIUS 35 INJECTION	Actuation Test	
LOGAN	INJECTION	SIRIUS 35 INJECTION	Other Configuration	VP020 WRITE VIN
LOGAN	INJECTION	SIRIUS 35 INJECTION	Erase	RZ007 FAULT MEMORY
LOGAN	INJECTION	SIRIUS 35 INJECTION	Erase	RZ019 PROGRAMMING REINITIALISATION
LOGAN	INJECTION	EMS 3130 INJECTION	Read Fault Code	
LOGAN	INJECTION	EMS 3130 INJECTION	Erase Fault Code	
LOGAN	INJECTION	EMS 3130 INJECTION	Read ECU Information	
LOGAN	INJECTION	EMS 3130 INJECTION	Live Data	
LOGAN	INJECTION	EMS 3130 INJECTION	Read Configuration	
LOGAN	INJECTION	EMS 3130 INJECTION	Actuation Test	
LOGAN	INJECTION	EMS 3130 INJECTION	Other Configuration	VP020 WRITE VIN
LOGAN	INJECTION	EMS 3130 INJECTION	Erase	RZ007 FAULT MEMORY
LOGAN	INJECTION	EMS 3130 INJECTION	Erase	RZ019 PROGRAMMING REINITIALISATION
LOGAN	INJECTION	EMS 3130 INJECTION	Read Fault Code	
LOGAN	INJECTION	EMS 3130 INJECTION	Erase Fault Code	
LOGAN	INJECTION	EMS 3130 INJECTION	Read ECU Information	
LOGAN	INJECTION	EMS 3130 INJECTION	Live Data	
LOGAN	INJECTION	EMS 3130 INJECTION	Read Configuration	
LOGAN	INJECTION	EMS 3130 INJECTION	Actuation Test	
LOGAN	INJECTION	EMS 3130 INJECTION	Other Configuration	VP020 WRITE VIN
LOGAN	INJECTION	EMS 3130 INJECTION	Erase	RZ007 FAULT MEMORY
LOGAN	INJECTION	EMS 3130 INJECTION	Erase	RZ019 PROGRAMMING REINITIALISATION
LOGAN	A.B.S.	ABS	Read Fault Code	
LOGAN	A.B.S.	ABS	Erase Fault Code	
LOGAN	A.B.S.	ABS	Read ECU Information	
LOGAN	A.B.S.	ABS	Live Data	
LOGAN	A.B.S.	ABS	Actuation Test	
LOGAN	A.B.S.	ABS	Other Configuration	VP004 VEHICLE PARAMETERS
LOGAN	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
LOGAN	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
LOGAN	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
LOGAN	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
LOGAN	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
LOGAN	A.B.S.	ABS	Configuration	SC006 BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS
LOGAN	A.B.S.	ABS	Read Fault Code	
LOGAN	A.B.S.	ABS	Erase Fault Code	
LOGAN	A.B.S.	ABS	Read ECU Information	
LOGAN	A.B.S.	ABS	Live Data	

LOGAN	A.B.S.	ABS	Actuation Test	
LOGAN	A.B.S.	ABS	Other Configuration	VP004 VEHICLE PARAMETERS
LOGAN	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
LOGAN	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
LOGAN	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
LOGAN	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
LOGAN	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
LOGAN	A.B.S.	ABS	Configuration	SC006 BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS
LOGAN	UCH	UCH	Read Fault Code	
LOGAN	UCH	UCH	Erase Fault Code	
LOGAN	UCH	UCH	Read ECU Information	
LOGAN	UCH	UCH	Live Data	
LOGAN	UCH	UCH	Read Configuration	
LOGAN	UCH	UCH	Actuation Test	
LOGAN	UCH	UCH	Write Configuration	CF167 FLASHING BUZZER
LOGAN	UCH	UCH	Other Configuration	VP004 WRITE VIN
LOGAN	UCH	UCH	Erase	RZ001 FAULT MEMORY
LOGAN	UCH	UCH	Configuration	SC008 UCH TYPE
LOGAN	UCH	UCH	Read Fault Code	
LOGAN	UCH	UCH	Erase Fault Code	
LOGAN	UCH	UCH	Read ECU Information	
LOGAN	UCH	UCH	Live Data	
LOGAN	UCH	UCH	Read Configuration	
LOGAN	UCH	UCH	Actuation Test	
LOGAN	UCH	UCH	Write Configuration	CF167 FLASHING BUZZER
LOGAN	UCH	UCH	Other Configuration	VP004 WRITE VIN
LOGAN	UCH	UCH	Erase	RZ001 FAULT MEMORY
LOGAN	UCH	UCH	Configuration	SC008 UCH TYPE
LOGAN	UCH	UCH	Read Fault Code	
LOGAN	UCH	UCH	Erase Fault Code	
LOGAN	UCH	UCH	Read ECU Information	
LOGAN	UCH	UCH	Live Data	
LOGAN	UCH	UCH	Read Configuration	
LOGAN	UCH	UCH	Actuation Test	
LOGAN	UCH	UCH	Write Configuration	CF167 FLASHING BUZZER
LOGAN	UCH	UCH	Other Configuration	VP004 WRITE VIN
LOGAN	UCH	UCH	Erase	RZ001 FAULT MEMORY
LOGAN	UCH	UCH	Configuration	SC008 UCH TYPE
LOGAN	UCH	UCH	Read Fault Code	
LOGAN	UCH	UCH	Erase Fault Code	
LOGAN	UCH	UCH	Read ECU Information	
LOGAN	UCH	UCH	Live Data	
LOGAN	UCH	UCH	Read Configuration	
LOGAN	UCH	UCH	Actuation Test	
LOGAN	UCH	UCH	Write Configuration	CF167 FLASHING BUZZER
LOGAN	UCH	UCH	Other Configuration	VP004 WRITE VIN
LOGAN	UCH	UCH	Erase	RZ001 FAULT MEMORY
LOGAN	UCH	UCH	Configuration	SC008 UCH TYPE
LOGAN	UCH	UCH	Read Fault Code	
LOGAN	UCH	UCH	Erase Fault Code	
LOGAN	UCH	UCH	Read ECU Information	
LOGAN	UCH	UCH	Live Data	
LOGAN	UCH	UCH	Read Configuration	
LOGAN	UCH	UCH	Actuation Test	
LOGAN	UCH	UCH	Write Configuration	CF167 FLASHING BUZZER
LOGAN	UCH	UCH	Other Configuration	VP004 WRITE VIN
LOGAN	UCH	UCH	Erase	RZ001 FAULT MEMORY
LOGAN	UCH	UCH	Configuration	SC008 UCH TYPE
LOGAN	UCH	UCH	Read Fault Code	
LOGAN	UCH	UCH	Erase Fault Code	
LOGAN	UCH	UCH	Read ECU Information	
LOGAN	UCH	UCH	Live Data	
LOGAN	UCH	UCH	Read Configuration	
LOGAN	UCH	UCH	Actuation Test	
LOGAN	UCH	UCH	Write Configuration	CF167 FLASHING BUZZER
LOGAN	UCH	UCH	Other Configuration	VP004 WRITE VIN
LOGAN	UCH	UCH	Erase	RZ001 FAULT MEMORY
LOGAN	UCH	UCH	Configuration	SC008 UCH TYPE
LOGAN	UCH	UCH	Read Fault Code	
LOGAN	UCH	UCH	Erase Fault Code	
LOGAN	UCH	UCH	Read ECU Information	
LOGAN	UCH	UCH	Live Data	
LOGAN	UCH	UCH	Read Configuration	
LOGAN	UCH	UCH	Actuation Test	
LOGAN	UCH	UCH	Write Configuration	CF167 FLASHING BUZZER
LOGAN	UCH	UCH	Other Configuration	VP004 WRITE VIN
LOGAN	UCH	UCH	Erase	RZ001 FAULT MEMORY
LOGAN	UCH	UCH	Configuration	SC008 UCH TYPE
LOGAN	UCH	UCH	Read Fault Code	
LOGAN	UCH	UCH	Erase Fault Code	
LOGAN	UCH	UCH	Read ECU Information	
LOGAN	UCH	UCH	Live Data	
LOGAN	UCH	UCH	Read Configuration	
LOGAN	UCH	UCH	Actuation Test	
LOGAN	UCH	UCH	Write Configuration	CF167 FLASHING BUZZER
LOGAN	UCH	UCH	Other Configuration	VP004 WRITE VIN
LOGAN	UCH	UCH	Erase	RZ001 FAULT MEMORY
LOGAN	UCH	UCH	Configuration	SC008 UCH TYPE
LOGAN	UCH	UCH	Read Fault Code	
LOGAN	UCH	UCH	Erase Fault Code	
LOGAN	UCH	UCH	Read ECU Information	
LOGAN	UCH	UCH	Live Data	
LOGAN	UCH	UCH	Read Configuration	
LOGAN	UCH	UCH	Actuation Test	
LOGAN	UCH	UCH	Write Configuration	CF167 FLASHING BUZZER
LOGAN	UCH	UCH	Other Configuration	VP004 WRITE VIN
LOGAN	UCH	UCH	Erase	RZ001 FAULT MEMORY
LOGAN	UCH	UCH	Configuration	SC008 UCH TYPE
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF209 DRIVER'S FRONT AIRBAG
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF210 PASSENGER'S FRONT AIRBAG
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF223 FRONT THORAX SIDE AIR BAG, DRIVER SIDE
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF224 FRONT THORAX SIDE AIR BAG, PASSENGER SIDE
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF265 DRIVER'S FRONT BUCKLE PRETENSIONER
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF266 PASSENGER'S FRONT BUCKLE PRETENSIONER
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF285 DRIVER'S FRONT SIDE IMPACT SENSOR
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF286 PASSENGER'S FRONT SIDE IMPACT SENSOR
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF273 DRIVER'S SEAT BUCKLE SENSOR
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF248 PASSENGER AIR BAG LOCKING MODE
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF291 SIDE ON WHICH STEERING WHEEL FITTED
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF036 PASS AIRBAG DEACTIVATION WARNING LIGHT
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF211 IMPACT INFORMATION CONNECTION
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF020 FRONT LEFT-HAND INERTIA WHEEL
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF021 FRONT RIGHT-HAND INERTIA WHEEL
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF049 SEAT BELT LIGHT
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF048 SEAT BELT REMINDER BUZZER
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER

LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC005 CONFIGURATION OF SYSTEM COMPONENTS
LOGAN	AUTOMATIC GEARBOX	DPO TA2005 ATX	Read Fault Code	
LOGAN	AUTOMATIC GEARBOX	DPO TA2005 ATX	Erase Fault Code	
LOGAN	AUTOMATIC GEARBOX	DPO TA2005 ATX	Read ECU Information	
LOGAN	AUTOMATIC GEARBOX	DPO TA2005 ATX	Live Data	
LOGAN	AUTOMATIC GEARBOX	DPO TA2005 ATX	Actuation Test	
LOGAN	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP009 WRITE DATE OF LAST AFTER SALES OPERATION
LOGAN	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP016 WRITE TRANSMISSION OIL CHANGE DATE
LOGAN	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP001 WRITE VIN
LOGAN	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP015 NOTE OIL WEAR COUNTER
LOGAN	AUTOMATIC GEARBOX	DPO TA2005 ATX	Erase	RZ004 FAULT MEMORY
LOGAN	AUTOMATIC GEARBOX	DPO TA2005 ATX	Erase	RZ005 AUTO-ADAPTIVES
LOGAN	GAS INJ.	GAS INJECTION 3000	Read Fault Code	
LOGAN	GAS INJ.	GAS INJECTION 3000	Erase Fault Code	
LOGAN	GAS INJ.	GAS INJECTION 3000	Read ECU Information	
LOGAN	GAS INJ.	GAS INJECTION 3000	Live Data	
LOGAN	GAS INJ.	GAS INJECTION 3000	Read Configuration	
LOGAN	GAS INJ.	GAS INJECTION 3000	Actuation Test	
LOGAN	GAS INJ.	GAS INJECTION 3000	Other Configuration	VP001 WRITE VIN
LOGAN	GAS INJ.	GAS INJECTION 3000	Erase	RZ001 FAULT MEMORY
LOGAN	VARIABLE P.A.S.	PAS PUMP ASS.	Read Fault Code	
LOGAN	VARIABLE P.A.S.	PAS PUMP ASS.	Erase Fault Code	
LOGAN	VARIABLE P.A.S.	PAS PUMP ASS.	Read ECU Information	
LOGAN	VARIABLE P.A.S.	PAS PUMP ASS.	Live Data	
LOGAN	VARIABLE P.A.S.	PAS PUMP ASS.	Read Configuration	
LOGAN	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP001 WRITE VIN
LOGAN	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP005 WRITE DATE OF AFTER SALES OPERATION
LOGAN	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP006 COMPUTER CALIBRATION
LOGAN	VARIABLE P.A.S.	PAS PUMP ASS.	Erase	RZ001 FAULT MEMORY
LOGAN	VARIABLE P.A.S.	PAS PUMP ASS.	Read Fault Code	
LOGAN	VARIABLE P.A.S.	PAS PUMP ASS.	Erase Fault Code	
LOGAN	VARIABLE P.A.S.	PAS PUMP ASS.	Read ECU Information	
LOGAN	VARIABLE P.A.S.	PAS PUMP ASS.	Live Data	
LOGAN	VARIABLE P.A.S.	PAS PUMP ASS.	Read Configuration	
LOGAN	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP001 WRITE VIN
LOGAN	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP005 WRITE DATE OF AFTER SALES OPERATION
LOGAN	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP006 COMPUTER CALIBRATION
LOGAN	VARIABLE P.A.S.	PAS PUMP ASS.	Erase	RZ001 FAULT MEMORY
LOGAN	VARIABLE P.A.S.	PAS PUMP ASS.	Read Fault Code	
LOGAN	VARIABLE P.A.S.	PAS PUMP ASS.	Erase Fault Code	
LOGAN	VARIABLE P.A.S.	PAS PUMP ASS.	Read ECU Information	
LOGAN	VARIABLE P.A.S.	PAS PUMP ASS.	Live Data	
LOGAN	VARIABLE P.A.S.	PAS PUMP ASS.	Read Configuration	
LOGAN	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP001 WRITE VIN
LOGAN	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP005 WRITE DATE OF AFTER SALES OPERATION
LOGAN	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP006 COMPUTER CALIBRATION
LOGAN	VARIABLE P.A.S.	PAS PUMP ASS.	Erase	RZ001 FAULT MEMORY
LOGAN	TRACKER	TRACKER	Read Fault Code	
LOGAN	TRACKER	TRACKER	Erase Fault Code	
LOGAN	TRACKER	TRACKER	Read ECU Information	
LOGAN	TRACKER	TRACKER	Live Data	
LOGAN	TRACKER	TRACKER	Read Configuration	
LOGAN	TRACKER	TRACKER	Write Configuration	CF001 SVT CONFIGURATION
LOGAN	TRACKER	TRACKER	Other Configuration	VP001 WRITE V.I.N.
LOGAN	TRACKER	TRACKER	Erase	RZ001 FAULT MEMORY
LOGAN	INJECTION	EMS 3120 INJECTION	Read Fault Code	
LOGAN	INJECTION	EMS 3120 INJECTION	Erase Fault Code	
LOGAN	INJECTION	EMS 3120 INJECTION	Read ECU Information	
LOGAN	INJECTION	EMS 3120 INJECTION	Live Data	
LOGAN	INJECTION	EMS 3120 INJECTION	Function Test	
LOGAN	INJECTION	EMS 3120 INJECTION	Read Configuration	
LOGAN	INJECTION	EMS 3120 INJECTION	Actuation Test	
LOGAN	INJECTION	EMS 3120 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LOGAN	INJECTION	EMS 3120 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LOGAN	INJECTION	EMS 3120 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
LOGAN	INJECTION	EMS 3120 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
LOGAN	INJECTION	EMS 3120 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
LOGAN	INJECTION	EMS 3120 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
LOGAN	INJECTION	EMS 3120 INJECTION	Erase	RZ064 ALCOHOL LEVEL PROG.
LOGAN	INJECTION	EMS 3120 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
LOGAN	INJECTION	EMS 3120 INJECTION	Erase	RZ046 INJECTOR ADAPTIVES
LOGAN	INJECTION	EMS 3120 INJECTION	Configuration	SC001 WRITE SAVED DATA
LOGAN	INJECTION	EMS 3120 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
LOGAN	INJECTION	EMS 3120 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
LOGAN II/SANDERO II	INJECTION	V42 INJECTION	Read Fault Code	
LOGAN II/SANDERO II	INJECTION	V42 INJECTION	Erase Fault Code	
LOGAN II/SANDERO II	INJECTION	V42 INJECTION	Read ECU Information	
LOGAN II/SANDERO II	INJECTION	V42 INJECTION	Live Data	
LOGAN II/SANDERO II	INJECTION	V42 INJECTION	Read Configuration	
LOGAN II/SANDERO II	INJECTION	V42 INJECTION	Actuation Test	
LOGAN II/SANDERO II	INJECTION	V42 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LOGAN II/SANDERO II	INJECTION	V42 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LOGAN II/SANDERO II	INJECTION	V42 INJECTION	Erase	RZ001 FAULT MEMORY
LOGAN II/SANDERO II	INJECTION	V42 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
LOGAN II/SANDERO II	INJECTION	V42 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
LOGAN II/SANDERO II	INJECTION	V42 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
LOGAN II/SANDERO II	INJECTION	V42 INJECTION	Erase	RZ064 ALCOHOL LEVEL PROG.
LOGAN II/SANDERO II	INJECTION	V42 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
LOGAN II/SANDERO II	INJECTION	V42 INJECTION	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
LOGAN II/SANDERO II	INJECTION	V42 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
LOGAN II/SANDERO II	INJECTION	V42 INJECTION	Configuration	SC001 WRITE SAVED DATA
LOGAN II/SANDERO II	INJECTION	V42 INJECTION	Configuration	SC003 SAVE COMPUTER DATA

LOGAN II/SANDERO II	INJECTION	V42 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
LOGAN II/SANDERO II	INJECTION	INJECTION DCM 3.4	Read Fault Code	
LOGAN II/SANDERO II	INJECTION	INJECTION DCM 3.4	Erase Fault Code	
LOGAN II/SANDERO II	INJECTION	INJECTION DCM 3.4	Read ECU Information	
LOGAN II/SANDERO II	INJECTION	INJECTION DCM 3.4	Live Data	
LOGAN II/SANDERO II	INJECTION	INJECTION DCM 3.4	Read Configuration	
LOGAN II/SANDERO II	INJECTION	INJECTION DCM 3.4	Actuation Test	
LOGAN II/SANDERO II	INJECTION	INJECTION DCM 3.4	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LOGAN II/SANDERO II	INJECTION	INJECTION DCM 3.4	Other Configuration	VP010 WRITE V.I.N.
LOGAN II/SANDERO II	INJECTION	INJECTION DCM 3.4	Erase	RZ001 FAULT MEMORY
LOGAN II/SANDERO II	INJECTION	INJECTION DCM 3.4	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
LOGAN II/SANDERO II	INJECTION	INJECTION DCM 3.4	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
LOGAN II/SANDERO II	INJECTION	INJECTION DCM 3.4	Erase	RZ012 EGR VALVE PROGRAMMING
LOGAN II/SANDERO II	INJECTION	INJECTION DCM 3.4	Erase	RZ041 FUEL FLOW REGULATOR
LOGAN II/SANDERO II	INJECTION	INJECTION DCM 3.4	Erase	RZ003 ENGINE ADAPTIVES
LOGAN II/SANDERO II	INJECTION	INJECTION DCM 3.4	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
LOGAN II/SANDERO II	INJECTION	INJECTION DCM 3.4	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
LOGAN II/SANDERO II	INJECTION	INJECTION DCM 3.4	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
LOGAN II/SANDERO II	INJECTION	INJECTION DCM 3.4	Erase	RZ051 INJECTOR ADAPTIVES NO. 1
LOGAN II/SANDERO II	INJECTION	INJECTION DCM 3.4	Erase	RZ052 INJECTOR ADAPTIVES NO. 2
LOGAN II/SANDERO II	INJECTION	INJECTION DCM 3.4	Erase	RZ053 INJECTOR ADAPTIVES NO. 3
LOGAN II/SANDERO II	INJECTION	INJECTION DCM 3.4	Erase	RZ054 INJECTOR ADAPTIVES NO. 4
LOGAN II/SANDERO II	INJECTION	INJECTION DCM 3.4	Configuration	SC001 WRITE SAVED DATA
LOGAN II/SANDERO II	INJECTION	INJECTION DCM 3.4	Configuration	SC002 ENTER INJECTOR CODES
LOGAN II/SANDERO II	INJECTION	INJECTION DCM 3.4	Configuration	SC003 SAVE COMPUTER DATA
LOGAN II/SANDERO II	INJECTION	INJECTION DCM 3.4	Configuration	SC053 INJECTOR ADAPTIVES
LOGAN II/SANDERO II	INJECTION	INJECTION DCM 3.4	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
LOGAN II/SANDERO II	INJECTION	INJECTION DCM 3.4	Configuration	SC042 FAST IDLE SPEED MODIFICATION
LOGAN II/SANDERO II	INJECTION	INJECTION DCM 3.4	Configuration	SC040 SPEED LIMITER
LOGAN II/SANDERO II	INJECTION	EDC17 C42 INJECTION	Read Fault Code	
LOGAN II/SANDERO II	INJECTION	EDC17 C42 INJECTION	Erase Fault Code	
LOGAN II/SANDERO II	INJECTION	EDC17 C42 INJECTION	Read ECU Information	
LOGAN II/SANDERO II	INJECTION	EDC17 C42 INJECTION	Live Data	
LOGAN II/SANDERO II	INJECTION	EDC17 C42 INJECTION	Read Configuration	
LOGAN II/SANDERO II	INJECTION	EDC17 C42 INJECTION	Actuation Test	
LOGAN II/SANDERO II	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LOGAN II/SANDERO II	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LOGAN II/SANDERO II	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
LOGAN II/SANDERO II	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
LOGAN II/SANDERO II	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
LOGAN II/SANDERO II	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
LOGAN II/SANDERO II	INJECTION	EDC17 C42 INJECTION	Erase	RZ001 FAULT MEMORY
LOGAN II/SANDERO II	INJECTION	EDC17 C42 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
LOGAN II/SANDERO II	INJECTION	EDC17 C42 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
LOGAN II/SANDERO II	INJECTION	EDC17 C42 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
LOGAN II/SANDERO II	INJECTION	EDC17 C42 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
LOGAN II/SANDERO II	INJECTION	EDC17 C42 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
LOGAN II/SANDERO II	INJECTION	EDC17 C42 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
LOGAN II/SANDERO II	INJECTION	EDC17 C42 INJECTION	Erase	RZ071 MANIFOLD PRESSURE SENSOR PROGRAMMING
LOGAN II/SANDERO II	INJECTION	EDC17 C42 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
LOGAN II/SANDERO II	INJECTION	EDC17 C42 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
LOGAN II/SANDERO II	INJECTION	EDC17 C42 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
LOGAN II/SANDERO II	INJECTION	EDC17 C42 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
LOGAN II/SANDERO II	INJECTION	EDC17 C42 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
LOGAN II/SANDERO II	INJECTION	EDC17 C42 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
LOGAN II/SANDERO II	INJECTION	EDC17 C42 INJECTION	Erase	RZ032 AIR PATH PROGRAMMING
LOGAN II/SANDERO II	INJECTION	EDC17 C42 INJECTION	Erase	RZ002 EGR ADAPTIVES
LOGAN II/SANDERO II	INJECTION	EDC17 C42 INJECTION	Erase	RZ036 PARTICLE FILTER RELATIVE PRESSURE SENSOR
LOGAN II/SANDERO II	INJECTION	EDC17 C42 INJECTION	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
LOGAN II/SANDERO II	INJECTION	EDC17 C42 INJECTION	Erase	RZ088 AIR DAMPER VALVE PROGRAMMING
LOGAN II/SANDERO II	INJECTION	EDC17 C42 INJECTION	Erase	RZ017 EGR PROGRAMMING
LOGAN II/SANDERO II	INJECTION	EDC17 C42 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
LOGAN II/SANDERO II	INJECTION	EDC17 C42 INJECTION	Erase	RZ005 PROGRAMMED VALUES
LOGAN II/SANDERO II	INJECTION	EDC17 C42 INJECTION	Configuration	SC001 WRITE SAVED DATA
LOGAN II/SANDERO II	INJECTION	EDC17 C42 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
LOGAN II/SANDERO II	INJECTION	EDC17 C42 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
LOGAN II/SANDERO II	INJECTION	EDC17 C42 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
LOGAN II/SANDERO II	INJECTION	EDC17 C42 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
LOGAN II/SANDERO II	INJECTION	EDC17 C42 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
LOGAN II/SANDERO II	INJECTION	EDC17 C42 INJECTION	Configuration	SC040 SPEED LIMITER
LOGAN II/SANDERO II	INJECTION	EDC17 C42 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
LOGAN II/SANDERO II	INJECTION	EDC17 C42 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
LOGAN II/SANDERO II	INJECTION	EDC17 C42 INJECTION	Configuration	SC060 PARTICLE FILTER REGENERATION
LOGAN II/SANDERO II	INJECTION	EDC17 C42 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
LOGAN II/SANDERO II	INJECTION	EDC17 C42 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
LOGAN II/SANDERO II	INJECTION	EDC17 C42 INJECTION	Configuration	SC068 PARTICLE FILTER REGENERATION
LOGAN II/SANDERO II	INJECTION	EMS 3120 INJECTION	Read Fault Code	
LOGAN II/SANDERO II	INJECTION	EMS 3120 INJECTION	Erase Fault Code	
LOGAN II/SANDERO II	INJECTION	EMS 3120 INJECTION	Read ECU Information	
LOGAN II/SANDERO II	INJECTION	EMS 3120 INJECTION	Live Data	
LOGAN II/SANDERO II	INJECTION	EMS 3120 INJECTION	Read Configuration	
LOGAN II/SANDERO II	INJECTION	EMS 3120 INJECTION	Actuation Test	
LOGAN II/SANDERO II	INJECTION	EMS 3120 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LOGAN II/SANDERO II	INJECTION	EMS 3120 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LOGAN II/SANDERO II	INJECTION	EMS 3120 INJECTION	Erase	RZ001 FAULT MEMORY
LOGAN II/SANDERO II	INJECTION	EMS 3120 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
LOGAN II/SANDERO II	INJECTION	EMS 3120 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
LOGAN II/SANDERO II	INJECTION	EMS 3120 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
LOGAN II/SANDERO II	INJECTION	EMS 3120 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
LOGAN II/SANDERO II	INJECTION	EMS 3120 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
LOGAN II/SANDERO II	INJECTION	EMS 3120 INJECTION	Erase	RZ064 ALCOHOL LEVEL PROG.
LOGAN II/SANDERO II	INJECTION	EMS 3120 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
LOGAN II/SANDERO II	INJECTION	EMS 3120 INJECTION	Erase	RZ046 INJECTOR ADAPTIVES
LOGAN II/SANDERO II	INJECTION	EMS 3120 INJECTION	Configuration	SC001 WRITE SAVED DATA
LOGAN II/SANDERO II	INJECTION	EMS 3120 INJECTION	Configuration	SC003 SAVE COMPUTER DATA

LOGAN II/SANDERO II	INJECTION	EMS 3120 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
LOGAN II/SANDERO II	INJECTION	EMS 3120 INJECTION	Configuration	SC047 SAVE COMPUTER DATA
LOGAN II/SANDERO II	INJECTION	EMS 3120 INJECTION	Configuration	SC048 WRITE SAVED DATA
LOGAN II/SANDERO II	INJECTION	V50 INJECTION	Read Fault Code	
LOGAN II/SANDERO II	INJECTION	V50 INJECTION	Erase Fault Code	
LOGAN II/SANDERO II	INJECTION	V50 INJECTION	Read ECU Information	
LOGAN II/SANDERO II	INJECTION	V50 INJECTION	Live Data	
LOGAN II/SANDERO II	INJECTION	V50 INJECTION	Read Configuration	
LOGAN II/SANDERO II	INJECTION	V50 INJECTION	Actuation Test	
LOGAN II/SANDERO II	INJECTION	V50 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LOGAN II/SANDERO II	INJECTION	V50 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LOGAN II/SANDERO II	INJECTION	V50 INJECTION	Erase	RZ001 FAULT MEMORY
LOGAN II/SANDERO II	INJECTION	V50 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
LOGAN II/SANDERO II	INJECTION	V50 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
LOGAN II/SANDERO II	INJECTION	V50 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
LOGAN II/SANDERO II	INJECTION	V50 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
LOGAN II/SANDERO II	INJECTION	V50 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
LOGAN II/SANDERO II	INJECTION	V50 INJECTION	Erase	RZ091 WASTE GATE REGULATION
LOGAN II/SANDERO II	INJECTION	V50 INJECTION	Erase	RZ116 CLUTCH END OF TRAVEL WIRING SWITCH
LOGAN II/SANDERO II	INJECTION	V50 INJECTION	Configuration	SC001 WRITE SAVED DATA
LOGAN II/SANDERO II	INJECTION	V50 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
LOGAN II/SANDERO II	INJECTION	V50 INJECTION	Configuration	SC048 WRITE SAVED DATA
LOGAN II/SANDERO II	INJECTION	V50 INJECTION	Configuration	SC047 SAVE COMPUTER DATA
LOGAN II/SANDERO II	INJECTION	V50 INJECTION	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
LOGAN II/SANDERO II	INJECTION	V50 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
LOGAN II/SANDERO II	INJECTION	V50 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
LOGAN II/SANDERO II	INJECTION	EMS 3125 INJECTION	Read Fault Code	
LOGAN II/SANDERO II	INJECTION	EMS 3125 INJECTION	Erase Fault Code	
LOGAN II/SANDERO II	INJECTION	EMS 3125 INJECTION	Read ECU Information	
LOGAN II/SANDERO II	INJECTION	EMS 3125 INJECTION	Live Data	
LOGAN II/SANDERO II	INJECTION	EMS 3125 INJECTION	Read Configuration	
LOGAN II/SANDERO II	INJECTION	EMS 3125 INJECTION	Actuation Test	
LOGAN II/SANDERO II	INJECTION	EMS 3125 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LOGAN II/SANDERO II	INJECTION	EMS 3125 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LOGAN II/SANDERO II	INJECTION	EMS 3125 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
LOGAN II/SANDERO II	INJECTION	EMS 3125 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
LOGAN II/SANDERO II	INJECTION	EMS 3125 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
LOGAN II/SANDERO II	INJECTION	EMS 3125 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
LOGAN II/SANDERO II	INJECTION	EMS 3125 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
LOGAN II/SANDERO II	INJECTION	EMS 3125 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
LOGAN II/SANDERO II	INJECTION	EMS 3125 INJECTION	Erase	RZ001 FAULT MEMORY
LOGAN II/SANDERO II	INJECTION	EMS 3125 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
LOGAN II/SANDERO II	INJECTION	EMS 3125 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
LOGAN II/SANDERO II	INJECTION	EMS 3125 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
LOGAN II/SANDERO II	INJECTION	EMS 3125 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
LOGAN II/SANDERO II	INJECTION	EMS 3125 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
LOGAN II/SANDERO II	INJECTION	EMS 3125 INJECTION	Erase	RZ064 ALCOHOL LEVEL PROG.
LOGAN II/SANDERO II	INJECTION	EMS 3125 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
LOGAN II/SANDERO II	INJECTION	EMS 3125 INJECTION	Erase	RZ046 INJECTOR ADAPTIVES
LOGAN II/SANDERO II	INJECTION	EMS 3125 INJECTION	Erase	RZ099 STOP AND START FUNCTION
LOGAN II/SANDERO II	INJECTION	EMS 3125 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
LOGAN II/SANDERO II	INJECTION	EMS 3125 INJECTION	Erase	RZ091 WASTE GATE REGULATION
LOGAN II/SANDERO II	INJECTION	EMS 3125 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
LOGAN II/SANDERO II	INJECTION	EMS 3125 INJECTION	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
LOGAN II/SANDERO II	INJECTION	EMS 3125 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
LOGAN II/SANDERO II	INJECTION	EMS 3125 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
LOGAN II/SANDERO II	INJECTION	EMS 3125 INJECTION	Configuration	SC040 SPEED LIMITER
LOGAN II/SANDERO II	INJECTION	EDC17 C84 INJECTION	Read Fault Code	
LOGAN II/SANDERO II	INJECTION	EDC17 C84 INJECTION	Erase Fault Code	
LOGAN II/SANDERO II	INJECTION	EDC17 C84 INJECTION	Read ECU Information	
LOGAN II/SANDERO II	INJECTION	EDC17 C84 INJECTION	Live Data	
LOGAN II/SANDERO II	INJECTION	EDC17 C84 INJECTION	Read Configuration	
LOGAN II/SANDERO II	INJECTION	EDC17 C84 INJECTION	Actuation Test	
LOGAN II/SANDERO II	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LOGAN II/SANDERO II	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP001 CYLINDER 1 INJECTOR CODE
LOGAN II/SANDERO II	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP002 CYLINDER 2 INJECTOR CODE
LOGAN II/SANDERO II	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP003 CYLINDER 3 INJECTOR CODE
LOGAN II/SANDERO II	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP004 CYLINDER 4 INJECTOR CODE
LOGAN II/SANDERO II	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
LOGAN II/SANDERO II	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
LOGAN II/SANDERO II	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
LOGAN II/SANDERO II	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LOGAN II/SANDERO II	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
LOGAN II/SANDERO II	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
LOGAN II/SANDERO II	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
LOGAN II/SANDERO II	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
LOGAN II/SANDERO II	INJECTION	EDC17 C84 INJECTION	Erase	RZ007 FAULT MEMORY
LOGAN II/SANDERO II	INJECTION	EDC17 C84 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
LOGAN II/SANDERO II	INJECTION	EDC17 C84 INJECTION	Erase	RZ099 STOP AND START FUNCTION
LOGAN II/SANDERO II	INJECTION	EDC17 C84 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
LOGAN II/SANDERO II	INJECTION	EDC17 C84 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
LOGAN II/SANDERO II	INJECTION	EDC17 C84 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
LOGAN II/SANDERO II	INJECTION	EDC17 C84 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
LOGAN II/SANDERO II	INJECTION	EDC17 C84 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
LOGAN II/SANDERO II	INJECTION	EDC17 C84 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
LOGAN II/SANDERO II	INJECTION	EDC17 C84 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
LOGAN II/SANDERO II	INJECTION	EDC17 C84 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
LOGAN II/SANDERO II	INJECTION	EDC17 C84 INJECTION	Erase	RZ084 EGR BYPASS PROGRAMMING
LOGAN II/SANDERO II	INJECTION	EDC17 C84 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
LOGAN II/SANDERO II	INJECTION	EDC17 C84 INJECTION	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
LOGAN II/SANDERO II	INJECTION	EDC17 C84 INJECTION	Erase	RZ005 PROGRAMMED VALUES
LOGAN II/SANDERO II	INJECTION	EDC17 C84 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
LOGAN II/SANDERO II	INJECTION	EDC17 C84 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
LOGAN II/SANDERO II	INJECTION	EDC17 C84 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
LOGAN II/SANDERO II	INJECTION	EDC17 C84 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING

LOGAN II/SANDERO II	INJECTION	EDC17 C84 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
LOGAN II/SANDERO II	INJECTION	EDC17 C84 INJECTION	Erase	RZ078 STARTER ADAPTATIVES
LOGAN II/SANDERO II	INJECTION	EDC17 C84 INJECTION	Erase	RZ087 CATALYTIC CONVERTER
LOGAN II/SANDERO II	INJECTION	EDC17 C84 INJECTION	Erase	RZ093 INJECTION PUMP ADAPTATIVES
LOGAN II/SANDERO II	INJECTION	EDC17 C84 INJECTION	Erase	RZ095 INJECTION TIME PROGRAMMING
LOGAN II/SANDERO II	INJECTION	EDC17 C84 INJECTION	Configuration	SC001 WRITE SAVED DATA
LOGAN II/SANDERO II	INJECTION	EDC17 C84 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
LOGAN II/SANDERO II	INJECTION	EDC17 C84 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
LOGAN II/SANDERO II	INJECTION	EDC17 C84 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
LOGAN II/SANDERO II	INJECTION	EDC17 C84 INJECTION	Configuration	SC040 SPEED LIMITER
LOGAN II/SANDERO II	INJECTION	EDC17 C84 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
LOGAN II/SANDERO II	INJECTION	EDC17 C84 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
LOGAN II/SANDERO II	INJECTION	EDC17 C84 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
LOGAN II/SANDERO II	INJECTION	EDC17 C84 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
LOGAN II/SANDERO II	A.B.S.	ABS	Read Fault Code	
LOGAN II/SANDERO II	A.B.S.	ABS	Erase Fault Code	
LOGAN II/SANDERO II	A.B.S.	ABS	Read ECU Information	
LOGAN II/SANDERO II	A.B.S.	ABS	Live Data	
LOGAN II/SANDERO II	A.B.S.	ABS	Read Configuration	
LOGAN II/SANDERO II	A.B.S.	ABS	Actuation Test	
LOGAN II/SANDERO II	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
LOGAN II/SANDERO II	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
LOGAN II/SANDERO II	A.B.S.	ABS	Other Configuration	VP003 STEERING WHEEL ANGLE SENSOR
LOGAN II/SANDERO II	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
LOGAN II/SANDERO II	A.B.S.	ABS	Other Configuration	VP044 ACCELERATION SENSOR
LOGAN II/SANDERO II	A.B.S.	ABS	Other Configuration	VP045 HILL START
LOGAN II/SANDERO II	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
LOGAN II/SANDERO II	A.B.S.	ABS	Erase	RZ008 TRANSVERSE ACCELERATION OFFSET SENSOR
LOGAN II/SANDERO II	A.B.S.	ABS	Erase	RZ007 STEERING WHEEL ANGLE OFFSET SENSOR
LOGAN II/SANDERO II	A.B.S.	ABS	Erase	RZ009 BRAKE PRESSURE OFFSET SENSOR
LOGAN II/SANDERO II	A.B.S.	ABS	Erase	RZ012 RESET
LOGAN II/SANDERO II	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
LOGAN II/SANDERO II	A.B.S.	ABS	Read Fault Code	
LOGAN II/SANDERO II	A.B.S.	ABS	Erase Fault Code	
LOGAN II/SANDERO II	A.B.S.	ABS	Read ECU Information	
LOGAN II/SANDERO II	A.B.S.	ABS	Live Data	
LOGAN II/SANDERO II	A.B.S.	ABS	Actuation Test	
LOGAN II/SANDERO II	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
LOGAN II/SANDERO II	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
LOGAN II/SANDERO II	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
LOGAN II/SANDERO II	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
LOGAN II/SANDERO II	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
LOGAN II/SANDERO II	A.B.S.	ABS	Read Fault Code	
LOGAN II/SANDERO II	A.B.S.	ABS	Erase Fault Code	
LOGAN II/SANDERO II	A.B.S.	ABS	Read ECU Information	
LOGAN II/SANDERO II	A.B.S.	ABS	Live Data	
LOGAN II/SANDERO II	A.B.S.	ABS	Read Configuration	
LOGAN II/SANDERO II	A.B.S.	ABS	Actuation Test	
LOGAN II/SANDERO II	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
LOGAN II/SANDERO II	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
LOGAN II/SANDERO II	A.B.S.	ABS	Other Configuration	VP003 STEERING WHEEL ANGLE SENSOR
LOGAN II/SANDERO II	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
LOGAN II/SANDERO II	A.B.S.	ABS	Other Configuration	VP044 ACCELERATION SENSOR
LOGAN II/SANDERO II	A.B.S.	ABS	Other Configuration	VP045 HILL START
LOGAN II/SANDERO II	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
LOGAN II/SANDERO II	A.B.S.	ABS	Erase	RZ008 TRANSVERSE ACCELERATION OFFSET SENSOR
LOGAN II/SANDERO II	A.B.S.	ABS	Erase	RZ007 STEERING WHEEL ANGLE OFFSET SENSOR
LOGAN II/SANDERO II	A.B.S.	ABS	Erase	RZ009 BRAKE PRESSURE OFFSET SENSOR
LOGAN II/SANDERO II	A.B.S.	ABS	Erase	RZ012 RESET
LOGAN II/SANDERO II	A.B.S.	ABS	Erase	RZ010 LONGITUDINAL ACCELERATION SENSOR OFFSET
LOGAN II/SANDERO II	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
LOGAN II/SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
LOGAN II/SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
LOGAN II/SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
LOGAN II/SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
LOGAN II/SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
LOGAN II/SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
LOGAN II/SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF149 GEARBOX TYPE
LOGAN II/SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
LOGAN II/SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
LOGAN II/SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
LOGAN II/SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF199 COMPUTER INITIALISATION
LOGAN II/SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF160 OVERSPEED ALARM
LOGAN II/SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF180 EXTERNAL TEMPERATURE
LOGAN II/SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF225 BATTERY CHARGE WARNING INFORMATION
LOGAN II/SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF158 SEAT BELT REMINDER BUZZER
LOGAN II/SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
LOGAN II/SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP010 UPDATE ODOMETER
LOGAN II/SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
LOGAN II/SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
LOGAN II/SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
LOGAN II/SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
LOGAN II/SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
LOGAN II/SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
LOGAN II/SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
LOGAN II/SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF149 GEARBOX TYPE
LOGAN II/SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
LOGAN II/SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
LOGAN II/SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
LOGAN II/SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF150 CRUISE CTRL/SPD LIMITER
LOGAN II/SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF199 COMPUTER INITIALISATION
LOGAN II/SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF160 OVERSPEED ALARM
LOGAN II/SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF180 EXTERNAL TEMPERATURE
LOGAN II/SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF225 BATTERY CHARGE WARNING INFORMATION
LOGAN II/SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN

LOGAN II/SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP010 UPDATE ODOMETER
LOGAN II/SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
LOGAN II/SANDERO II	UCH	UCH	Read Fault Code	
LOGAN II/SANDERO II	UCH	UCH	Erase Fault Code	
LOGAN II/SANDERO II	UCH	UCH	Read ECU Information	
LOGAN II/SANDERO II	UCH	UCH	Live Data	
LOGAN II/SANDERO II	UCH	UCH	Read Configuration	
LOGAN II/SANDERO II	UCH	UCH	Actuation Test	
LOGAN II/SANDERO II	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
LOGAN II/SANDERO II	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
LOGAN II/SANDERO II	UCH	UCH	Write Configuration	CF229 ALARM
LOGAN II/SANDERO II	UCH	UCH	Write Configuration	CF299 ACCESS/STARTER TYPE
LOGAN II/SANDERO II	UCH	UCH	Other Configuration	VP001 WRITE V.I.N.
LOGAN II/SANDERO II	UCH	UCH	Erase	RZ001 FAULT MEMORY
LOGAN II/SANDERO II	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
LOGAN II/SANDERO II	UCH	UCH	Read Fault Code	
LOGAN II/SANDERO II	UCH	UCH	Erase Fault Code	
LOGAN II/SANDERO II	UCH	UCH	Read ECU Information	
LOGAN II/SANDERO II	UCH	UCH	Live Data	
LOGAN II/SANDERO II	UCH	UCH	Read Configuration	
LOGAN II/SANDERO II	UCH	UCH	Actuation Test	
LOGAN II/SANDERO II	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
LOGAN II/SANDERO II	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
LOGAN II/SANDERO II	UCH	UCH	Write Configuration	CF229 ALARM
LOGAN II/SANDERO II	UCH	UCH	Write Configuration	CF036 SELECTIVE OPENING OF DOORS
LOGAN II/SANDERO II	UCH	UCH	Other Configuration	VP001 WRITE V.I.N.
LOGAN II/SANDERO II	UCH	UCH	Erase	RZ001 FAULT MEMORY
LOGAN II/SANDERO II	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
LOGAN II/SANDERO II	UCH	UCH	Read Fault Code	
LOGAN II/SANDERO II	UCH	UCH	Erase Fault Code	
LOGAN II/SANDERO II	UCH	UCH	Read ECU Information	
LOGAN II/SANDERO II	UCH	UCH	Live Data	
LOGAN II/SANDERO II	UCH	UCH	Read Configuration	
LOGAN II/SANDERO II	UCH	UCH	Actuation Test	
LOGAN II/SANDERO II	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
LOGAN II/SANDERO II	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
LOGAN II/SANDERO II	UCH	UCH	Write Configuration	CF229 ALARM
LOGAN II/SANDERO II	UCH	UCH	Write Configuration	CF229 ALARM
LOGAN II/SANDERO II	UCH	UCH	Write Configuration	CF314 STOP AND START FUNCTION
LOGAN II/SANDERO II	UCH	UCH	Other Configuration	VP001 WRITE V.I.N.
LOGAN II/SANDERO II	UCH	UCH	Erase	RZ001 FAULT MEMORY
LOGAN II/SANDERO II	UCH	UCH	Erase	RZ013 HIGH PRESSURE PUMP COUNTER
LOGAN II/SANDERO II	UCH	UCH	Erase	RZ014 NUMBER OF STARTING CYCLES
LOGAN II/SANDERO II	UCH	UCH	Erase	RZ016 STOP AND START FUNCTION
LOGAN II/SANDERO II	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
LOGAN II/SANDERO II	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
LOGAN II/SANDERO II	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
LOGAN II/SANDERO II	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
LOGAN II/SANDERO II	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
LOGAN II/SANDERO II	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
LOGAN II/SANDERO II	AIRBAG / PRETENSIONERS	AIRBAG	Actuation Test	
LOGAN II/SANDERO II	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
LOGAN II/SANDERO II	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
LOGAN II/SANDERO II	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
LOGAN II/SANDERO II	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
LOGAN II/SANDERO II	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
LOGAN II/SANDERO II	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC005 CONFIGURATION OF SYSTEM COMPONENTS
LOGAN II/SANDERO II	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC013 SENSOR CONFIGURATION
LOGAN II/SANDERO II	AIR CONDITIONING	AIR CONDITIONING	Read Fault Code	
LOGAN II/SANDERO II	AIR CONDITIONING	AIR CONDITIONING	Erase Fault Code	
LOGAN II/SANDERO II	AIR CONDITIONING	AIR CONDITIONING	Read ECU Information	
LOGAN II/SANDERO II	AIR CONDITIONING	AIR CONDITIONING	Live Data	
LOGAN II/SANDERO II	AIR CONDITIONING	AIR CONDITIONING	Read Configuration	
LOGAN II/SANDERO II	AIR CONDITIONING	AIR CONDITIONING	Actuation Test	
LOGAN II/SANDERO II	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VP001 WRITE VIN
LOGAN II/SANDERO II	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VP004 COMPUTER REINITIALISATION
LOGAN II/SANDERO II	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ001 FAULT MEMORY
LOGAN II/SANDERO II	AIR CONDITIONING	AIR CONDITIONING	Read Fault Code	
LOGAN II/SANDERO II	AIR CONDITIONING	AIR CONDITIONING	Erase Fault Code	
LOGAN II/SANDERO II	AIR CONDITIONING	AIR CONDITIONING	Read ECU Information	
LOGAN II/SANDERO II	AIR CONDITIONING	AIR CONDITIONING	Live Data	
LOGAN II/SANDERO II	AIR CONDITIONING	AIR CONDITIONING	Actuation Test	
LOGAN II/SANDERO II	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VP001 WRITE VIN
LOGAN II/SANDERO II	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ001 FAULT MEMORY
LOGAN II/SANDERO II	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ002 COMPUTER REINITIALISATION
LOGAN II/SANDERO II	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ003 ACTUATOR RELAY CONTROL
LOGAN II/SANDERO II	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Read Fault Code	
LOGAN II/SANDERO II	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase Fault Code	
LOGAN II/SANDERO II	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Read ECU Information	
LOGAN II/SANDERO II	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Live Data	
LOGAN II/SANDERO II	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Actuation Test	
LOGAN II/SANDERO II	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Other Configuration	VP001 WRITE VIN
LOGAN II/SANDERO II	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ004 FAULT MEMORY
LOGAN II/SANDERO II	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ014 RESET CLUTCH DATA PROTECTION
LOGAN II/SANDERO II	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ015 RESET GEARBOX DATA
LOGAN II/SANDERO II	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ013 RESET CLUTCH DATA
LOGAN II/SANDERO II	AUTOMATIC GEARBOX	DPO TA2005 ATX	Read Fault Code	
LOGAN II/SANDERO II	AUTOMATIC GEARBOX	DPO TA2005 ATX	Erase Fault Code	
LOGAN II/SANDERO II	AUTOMATIC GEARBOX	DPO TA2005 ATX	Read ECU Information	
LOGAN II/SANDERO II	AUTOMATIC GEARBOX	DPO TA2005 ATX	Live Data	
LOGAN II/SANDERO II	AUTOMATIC GEARBOX	DPO TA2005 ATX	Actuation Test	
LOGAN II/SANDERO II	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP015 NOTE OIL WEAR COUNTER
LOGAN II/SANDERO II	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP016 WRITE TRANSMISSION OIL CHANGE DATE
LOGAN II/SANDERO II	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP009 WRITE DATE OF LAST AFTER SALES OPERATION
LOGAN II/SANDERO II	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP001 WRITE VIN

LOGAN II/SANDERO II	AUTOMATIC GEARBOX	DPO TA2005 ATX	Erase	RZ004 FAULT MEMORY
LOGAN II/SANDERO II	AUTOMATIC GEARBOX	DPO TA2005 ATX	Erase	RZ005 AUTO-ADAPTIVES
LOGAN II/SANDERO II	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Read Fault Code	
LOGAN II/SANDERO II	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase Fault Code	
LOGAN II/SANDERO II	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Read ECU Information	
LOGAN II/SANDERO II	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Live Data	
LOGAN II/SANDERO II	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Actuation Test	
LOGAN II/SANDERO II	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Other Configuration	VP001 WRITE VIN
LOGAN II/SANDERO II	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ004 FAULT MEMORY
LOGAN II/SANDERO II	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ014 RESET CLUTCH DATA PROTECTION
LOGAN II/SANDERO II	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ015 RESET GEARBOX DATA
LOGAN II/SANDERO II	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ013 RESET CLUTCH DATA
LOGAN II/SANDERO II	VARIABLE P.A.S.	PAS PUMP ASS.	Read Fault Code	
LOGAN II/SANDERO II	VARIABLE P.A.S.	PAS PUMP ASS.	Erase Fault Code	
LOGAN II/SANDERO II	VARIABLE P.A.S.	PAS PUMP ASS.	Read ECU Information	
LOGAN II/SANDERO II	VARIABLE P.A.S.	PAS PUMP ASS.	Live Data	
LOGAN II/SANDERO II	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP001 WRITE VIN
LOGAN II/SANDERO II	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP005 WRITE DATE OF AFTER SALES OPERATION
LOGAN II/SANDERO II	VARIABLE P.A.S.	PAS PUMP ASS.	Erase	RZ001 FAULT MEMORY
LOGAN II/SANDERO II	RADIO	RADIO	Read Fault Code	
LOGAN II/SANDERO II	RADIO	RADIO	Erase Fault Code	
LOGAN II/SANDERO II	RADIO	RADIO	Read ECU Information	
LOGAN II/SANDERO II	RADIO	RADIO	Live Data	
LOGAN II/SANDERO II	RADIO	RADIO	Read Configuration	
LOGAN II/SANDERO II	RADIO	RADIO	Actuation Test	
LOGAN II/SANDERO II	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
LOGAN II/SANDERO II	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
LOGAN II/SANDERO II	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
LOGAN II/SANDERO II	RADIO	RADIO	Configuration	SC002 COMP CONFIGURAION
LOGAN II/SANDERO II	RADIO	RADIO	Erase	RZ003 FAULT MEMORY
LOGAN II/SANDERO II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
LOGAN II/SANDERO II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
LOGAN II/SANDERO II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
LOGAN II/SANDERO II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
LOGAN II/SANDERO II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test	
LOGAN II/SANDERO II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VP001 WRITE VIN
LOGAN II/SANDERO II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003 FAULT MEMORY
LOGAN II/SANDERO II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
LOGAN II/SANDERO II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ004 EMERGENCY CALL SERVICE
LOGAN II/SANDERO II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
LOGAN II/SANDERO II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
LOGAN II/SANDERO II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
LOGAN II/SANDERO II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
LOGAN II/SANDERO II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test	
LOGAN II/SANDERO II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003 FAULT MEMORY
LOGAN II/SANDERO II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
LOGAN II/SANDERO II	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Fault Code	
LOGAN II/SANDERO II	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase Fault Code	
LOGAN II/SANDERO II	HANDS-FREE MODULE	HANDS-FREE MODULE	Read ECU Information	
LOGAN II/SANDERO II	HANDS-FREE MODULE	HANDS-FREE MODULE	Live Data	
LOGAN II/SANDERO II	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Configuration	
LOGAN II/SANDERO II	HANDS-FREE MODULE	HANDS-FREE MODULE	Actuation Test	
LOGAN II/SANDERO II	HANDS-FREE MODULE	HANDS-FREE MODULE	Other Configuration	VP002 WRITE V.I.N.
LOGAN II/SANDERO II	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase	RZ001 FAULT MEMORY
LOGAN II/SANDERO II	HANDS-FREE MODULE	HANDS-FREE MODULE	Configuration	SC003 CARD TESTING
LOGAN II/SANDERO II	HANDS-FREE MODULE	HANDS-FREE MODULE	Configuration	SC007 REMOTE LOCKING BUZZER
LOGAN II/SANDERO II	RADIO	RADIO	Read Fault Code	
LOGAN II/SANDERO II	RADIO	RADIO	Erase Fault Code	
LOGAN II/SANDERO II	RADIO	RADIO	Read ECU Information	
LOGAN II/SANDERO II	RADIO	RADIO	Live Data	
LOGAN II/SANDERO II	RADIO	RADIO	Read Configuration	
LOGAN II/SANDERO II	RADIO	RADIO	Actuation Test	
LOGAN II/SANDERO II	RADIO	RADIO	Write Configuration	CF053 REAR LOUD SPEAKER
LOGAN II/SANDERO II	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
LOGAN II/SANDERO II	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
LOGAN II/SANDERO II	RADIO	RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
LOGAN II/SANDERO II	RADIO	RADIO	Erase	RZ003 FAULT MEMORY
LOGAN II/SANDERO II	RADIO	RADIO	Read Fault Code	
LOGAN II/SANDERO II	RADIO	RADIO	Erase Fault Code	
LOGAN II/SANDERO II	RADIO	RADIO	Read ECU Information	
LOGAN II/SANDERO II	RADIO	RADIO	Live Data	
LOGAN II/SANDERO II	RADIO	RADIO	Read Configuration	
LOGAN II/SANDERO II	RADIO	RADIO	Actuation Test	
LOGAN II/SANDERO II	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
LOGAN II/SANDERO II	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
LOGAN II/SANDERO II	RADIO	RADIO	Write Configuration	CF066 GUIDELINES
LOGAN II/SANDERO II	RADIO	RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
LOGAN II/SANDERO II	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
LOGAN II/SANDERO II	RADIO	RADIO	Erase	RZ005 FAULT MEMORY
LOGAN II/SANDERO II	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read Fault Code	
LOGAN II/SANDERO II	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase Fault Code	
LOGAN II/SANDERO II	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read ECU Information	
LOGAN II/SANDERO II	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Live Data	
LOGAN II/SANDERO II	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Actuation Test	
LOGAN II/SANDERO II	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Other Configuration	VP001 WRITE VIN
LOGAN II/SANDERO II	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase	RZ001 FAULT MEMORY
LOGAN II/SANDERO II	TRACKER	TRACKER	Read Fault Code	
LOGAN II/SANDERO II	TRACKER	TRACKER	Erase Fault Code	
LOGAN II/SANDERO II	TRACKER	TRACKER	Read ECU Information	
LOGAN II/SANDERO II	TRACKER	TRACKER	Live Data	
LOGAN II/SANDERO II	TRACKER	TRACKER	Read Configuration	
LOGAN II/SANDERO II	TRACKER	TRACKER	Write Configuration	CF001 SVT CONFIGURATION
LOGAN II/SANDERO II	TRACKER	TRACKER	Other Configuration	VP001 WRITE V.I.N.
LOGAN II/SANDERO II	TRACKER	TRACKER	Erase	RZ001 FAULT MEMORY
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Read Fault Code	

LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Erase Fault Code	
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Read ECU Information	
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Live Data	
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Function Test	
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Read Configuration	
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Actuation Test	
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Write Configuration	CF196 STOP AND START FUNCTION
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Other Configuration	VP052 BOOST PRESSURE WASTEGATE PROGRAMMING
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Other Configuration	VP403 STATIC REGENERATION (IN WORKSHOP)
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTATIVES
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Erase	RZ125 COMPUTER RESET
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Erase	RZ133 RAIL PRESSURE LIMITER
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Erase	RZ126 CYLINDER PRESSURE SENSOR
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Erase	RZ118 STARTING AUTHORIZATION
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Erase	RZ132 FUEL PUMP PRIMING COMPLETE
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Erase	RZ136 UPSTREAM OXYGEN SENSOR RESET
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Erase	RZ137 DOWNSTREAM OXYGEN SENSOR RESET
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Erase	RZ148 DOWNSTREAM OXYGEN SENSOR RESET
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Erase	RZ147 UPSTREAM OXYGEN SENSOR RESET
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Erase	RZ070 TURBOCHARGER PROGRAMMING
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Erase	RZ084 EGR BYPASS PROGRAMMING
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Erase	RZ135 AIR DAMPER VALVE PROGRAMMING
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Erase	RZ168 SCR OUTLET AMMONIA LEAK METER
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Erase	RZ099 STOP AND START FUNCTION
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Erase	RZ088 AIR DAMPER VALVE PROGRAMMING
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Erase	RZ152 TURBOCHARGER FUNCTION
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Configuration	SC001 WRITE SAVED DATA
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Configuration	SC040 SPEED LIMITER
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Configuration	SC083 ADBLUE SYSTEM PERFORMANCE
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Configuration	SC071 CYLINDER FUNCTION FAULT FINDING
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
LOGAN II/SANDERO II	INJECTION	EMS 3140 INJECTION	Read Fault Code	
LOGAN II/SANDERO II	INJECTION	EMS 3140 INJECTION	Erase Fault Code	
LOGAN II/SANDERO II	INJECTION	EMS 3140 INJECTION	Read ECU Information	
LOGAN II/SANDERO II	INJECTION	EMS 3140 INJECTION	Live Data	
LOGAN II/SANDERO II	INJECTION	EMS 3140 INJECTION	Function Test	
LOGAN II/SANDERO II	INJECTION	EMS 3140 INJECTION	Read Configuration	
LOGAN II/SANDERO II	INJECTION	EMS 3140 INJECTION	Actuation Test	
LOGAN II/SANDERO II	INJECTION	EMS 3140 INJECTION	Write Configuration	CF196 STOP AND START FUNCTION
LOGAN II/SANDERO II	INJECTION	EMS 3140 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LOGAN II/SANDERO II	INJECTION	EMS 3140 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LOGAN II/SANDERO II	INJECTION	EMS 3140 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
LOGAN II/SANDERO II	INJECTION	EMS 3140 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
LOGAN II/SANDERO II	INJECTION	EMS 3140 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
LOGAN II/SANDERO II	INJECTION	EMS 3140 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
LOGAN II/SANDERO II	INJECTION	EMS 3140 INJECTION	Erase	RZ061 FLYWHEEL TARGET PROGRAMMING
LOGAN II/SANDERO II	INJECTION	EMS 3140 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
LOGAN II/SANDERO II	INJECTION	EMS 3140 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
LOGAN II/SANDERO II	INJECTION	EMS 3140 INJECTION	Erase	RZ070 TURBOCHARGER PROGRAMMING
LOGAN II/SANDERO II	INJECTION	EMS 3140 INJECTION	Erase	RZ042 IGNITION COIL ADAPTIVE
LOGAN II/SANDERO II	INJECTION	EMS 3140 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
LOGAN II/SANDERO II	INJECTION	EMS 3140 INJECTION	Configuration	SC001 WRITE SAVED DATA
LOGAN II/SANDERO II	INJECTION	EMS 3140 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
LOGAN II/SANDERO II	INJECTION	EMS 3140 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
LOGAN II/SANDERO II	INJECTION	EMS 3140 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
LOGAN II/SANDERO II	INJECTION	EMS 3140 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
LOGAN II/SANDERO II	INJECTION	EMS 3140 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
LOGAN II/SANDERO II	UCH	UCH	Read Fault Code	
LOGAN II/SANDERO II	UCH	UCH	Erase Fault Code	
LOGAN II/SANDERO II	UCH	UCH	Read ECU Information	
LOGAN II/SANDERO II	UCH	UCH	Live Data	
LOGAN II/SANDERO II	UCH	UCH	Function Test	
LOGAN II/SANDERO II	UCH	UCH	Read Configuration	
LOGAN II/SANDERO II	UCH	UCH	Actuation Test	
LOGAN II/SANDERO II	AIR CONDITIONING	AIR CONDITIONING	Read Fault Code	
LOGAN II/SANDERO II	AIR CONDITIONING	AIR CONDITIONING	Erase Fault Code	
LOGAN II/SANDERO II	AIR CONDITIONING	AIR CONDITIONING	Read ECU Information	
LOGAN II/SANDERO II	AIR CONDITIONING	AIR CONDITIONING	Live Data	
LOGAN II/SANDERO II	AIR CONDITIONING	AIR CONDITIONING	Function Test	
LOGAN II/SANDERO II	AIR CONDITIONING	AIR CONDITIONING	Actuation Test	
LOGAN II/SANDERO II	UPC	UPC	Read Fault Code	
LOGAN II/SANDERO II	UPC	UPC	Erase Fault Code	
LOGAN II/SANDERO II	UPC	UPC	Read ECU Information	
LOGAN II/SANDERO II	UPC	UPC	Live Data	
LOGAN II/SANDERO II	UPC	UPC	Function Test	

LOGAN II/SANDERO II	UPC	UPC	Actuation Test	
LOGAN II/SANDERO II	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read Fault Code	
LOGAN II/SANDERO II	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase Fault Code	
LOGAN II/SANDERO II	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read ECU Information	
LOGAN II/SANDERO II	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Live Data	
LOGAN II/SANDERO II	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Function Test	
LOGAN II/SANDERO II	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Actuation Test	
LOGAN II/SANDERO II	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP057 ADBLUE MODULE ELECTRICAL CHECK
LOGAN II/SANDERO II	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP050 ADBLUE FIRST FILLING TEST
LOGAN II/SANDERO II	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP051 ADBLUE EMPTYING TEST
LOGAN II/SANDERO II	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP056 ADBLUE INJECTOR SOUND TEST
LOGAN II/SANDERO II	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP055 ADBLUE INJECTOR RELEASE TEST
LOGAN II/SANDERO II	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP012 WRITE VIN
LOGAN II/SANDERO II	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP052 FLOW RATE FUNCTION
LOGAN II/SANDERO II	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP058 OVERALL RESULT
LOGAN II/SANDERO II	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ008 INJECTOR HEATING
LOGAN II/SANDERO II	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ012 OVERALL QUANTITY OF ADBLUE INJECTED
LOGAN II/SANDERO II	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ011 RESET OF THE HEATING COUNTER ACTIVE TIME
LOGAN II/SANDERO II	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Configuration	SC001 WRITE SAVED DATA
LOGAN II/SANDERO II	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Configuration	SC002 SAVE COMPUTER DATA
SANDERO	INJECTION	V42 INJECTION	Read Fault Code	
SANDERO	INJECTION	V42 INJECTION	Erase Fault Code	
SANDERO	INJECTION	V42 INJECTION	Read ECU Information	
SANDERO	INJECTION	V42 INJECTION	Live Data	
SANDERO	INJECTION	V42 INJECTION	Actuation Test	
SANDERO	INJECTION	V42 INJECTION	Other Configuration	VP010 WRITE V.I.N.
SANDERO	INJECTION	V42 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
SANDERO	INJECTION	V42 INJECTION	Erase	RZ001 FAULT MEMORY
SANDERO	INJECTION	V42 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
SANDERO	INJECTION	V42 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
SANDERO	INJECTION	V42 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
SANDERO	INJECTION	V42 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
SANDERO	INJECTION	V42 INJECTION	Erase	RZ064 ALCOHOL LEVEL PROG.
SANDERO	INJECTION	V42 INJECTION	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
SANDERO	INJECTION	V42 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
SANDERO	INJECTION	V42 INJECTION	Configuration	SC001 WRITE SAVED DATA
SANDERO	INJECTION	V42 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
SANDERO	INJECTION	V42 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
SANDERO	INJECTION	INJECTION DCM 3.4	Read Fault Code	
SANDERO	INJECTION	INJECTION DCM 3.4	Erase Fault Code	
SANDERO	INJECTION	INJECTION DCM 3.4	Read ECU Information	
SANDERO	INJECTION	INJECTION DCM 3.4	Live Data	
SANDERO	INJECTION	INJECTION DCM 3.4	Read Configuration	
SANDERO	INJECTION	INJECTION DCM 3.4	Actuation Test	
SANDERO	INJECTION	INJECTION DCM 3.4	Other Configuration	VP036 FUEL SUPPLY PREVENTION
SANDERO	INJECTION	INJECTION DCM 3.4	Other Configuration	VP037 STOP FUEL SUPPLY PREVENTION
SANDERO	INJECTION	INJECTION DCM 3.4	Other Configuration	VP010 WRITE V.I.N.
SANDERO	INJECTION	INJECTION DCM 3.4	Other Configuration	VP292 PARAMETRAGE PRIVE 237
SANDERO	INJECTION	INJECTION DCM 3.4	Other Configuration	VP293 PARAMETRAGE PRIVE 238
SANDERO	INJECTION	INJECTION DCM 3.4	Other Configuration	VP294 PARAMETRAGE PRIVE 239
SANDERO	INJECTION	INJECTION DCM 3.4	Other Configuration	VP295 PARAMETRAGE PRIVE 240
SANDERO	INJECTION	INJECTION DCM 3.4	Erase	RZ001 FAULT MEMORY
SANDERO	INJECTION	INJECTION DCM 3.4	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
SANDERO	INJECTION	INJECTION DCM 3.4	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
SANDERO	INJECTION	INJECTION DCM 3.4	Erase	RZ012 EGR VALVE PROGRAMMING
SANDERO	INJECTION	INJECTION DCM 3.4	Erase	RZ032 AIR PATH PROGRAMMING
SANDERO	INJECTION	INJECTION DCM 3.4	Erase	RZ036 PARTICLE FILTER RELATIVE PRESSURE SENSOR
SANDERO	INJECTION	INJECTION DCM 3.4	Erase	RZ041 FUEL FLOW REGULATOR
SANDERO	INJECTION	INJECTION DCM 3.4	Erase	RZ043 EXHAUST INJECTOR CIRCUIT
SANDERO	INJECTION	INJECTION DCM 3.4	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
SANDERO	INJECTION	INJECTION DCM 3.4	Erase	RZ003 ENGINE ADAPTIVES
SANDERO	INJECTION	INJECTION DCM 3.4	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
SANDERO	INJECTION	INJECTION DCM 3.4	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
SANDERO	INJECTION	INJECTION DCM 3.4	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
SANDERO	INJECTION	INJECTION DCM 3.4	Configuration	SC002 ENTER INJECTOR CODES
SANDERO	INJECTION	INJECTION DCM 3.4	Configuration	SC040 SPEED LIMITER
SANDERO	INJECTION	INJECTION DCM 3.4	Configuration	SC041 COMMERCIAL VEHICLE IDLE SPEED MODIFICATION
SANDERO	INJECTION	INJECTION DCM 3.4	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
SANDERO	INJECTION	INJECTION DCM 3.4	Configuration	SC052 ADAPTIVES AFTER REGENERATING PARTICLE FILTER
SANDERO	INJECTION	INJECTION DCM 3.4	Configuration	SC053 INJECTOR ADAPTIVES
SANDERO	INJECTION	INJECTION DCM 3.4	Configuration	SC054 INJECTOR ADAPTIVES
SANDERO	INJECTION	INJECTION DCM 3.4	Configuration	SC017 PARTICLE FILTER REGENERATION
SANDERO	INJECTION	INJECTION DCM 3.4	Configuration	SC060 PARTICLE FILTER REGENERATION
SANDERO	INJECTION	INJECTION DCM 3.4	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
SANDERO	INJECTION	INJECTION DCM 3.4	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
SANDERO	INJECTION	INJECTION DCM 3.4	Configuration	SC044 ENTER INJECTOR CODES
SANDERO	AUTOMATIC GEARBOX	DPO TA2005 ATX	Read Fault Code	
SANDERO	AUTOMATIC GEARBOX	DPO TA2005 ATX	Erase Fault Code	
SANDERO	AUTOMATIC GEARBOX	DPO TA2005 ATX	Read ECU Information	
SANDERO	AUTOMATIC GEARBOX	DPO TA2005 ATX	Live Data	
SANDERO	AUTOMATIC GEARBOX	DPO TA2005 ATX	Actuation Test	
SANDERO	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP009 WRITE DATE OF LAST AFTER SALES OPERATION
SANDERO	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP016 WRITE TRANSMISSION OIL CHANGE DATE
SANDERO	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP001 WRITE VIN
SANDERO	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP015 NOTE OIL WEAR COUNTER
SANDERO	AUTOMATIC GEARBOX	DPO TA2005 ATX	Erase	RZ004 FAULT MEMORY
SANDERO	AUTOMATIC GEARBOX	DPO TA2005 ATX	Erase	RZ005 AUTO-ADAPTIVES
SANDERO	RADIO	RADIO	Read Fault Code	
SANDERO	RADIO	RADIO	Erase Fault Code	
SANDERO	RADIO	RADIO	Read ECU Information	
SANDERO	RADIO	RADIO	Live Data	
SANDERO	RADIO	RADIO	Read Configuration	
SANDERO	RADIO	RADIO	Actuation Test	
SANDERO	RADIO	RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
SANDERO	RADIO	RADIO	Other Configuration	VP016 CONFIGURING THE MULTIMEDIA COMPUTER

SANDERO	RADIO	RADIO	Erase	RZ003 FAULT MEMORY
SANDERO	RADIO	RADIO	Configuration	SC002 COMP CONFIGURATION
SANDERO	RADIO	RADIO	Configuration	SC003 COMP CONFIGURATION
SANDERO	RADIO	RADIO	Configuration	SC009 COMP CONFIGURATION
SANDERO	RADIO	RADIO	Read Fault Code	
SANDERO	RADIO	RADIO	Erase Fault Code	
SANDERO	RADIO	RADIO	Read ECU Information	
SANDERO	RADIO	RADIO	Live Data	
SANDERO	RADIO	RADIO	Read Configuration	
SANDERO	RADIO	RADIO	Actuation Test	
SANDERO	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
SANDERO	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
SANDERO	RADIO	RADIO	Write Configuration	CF014 DRIVING TYPE
SANDERO	RADIO	RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
SANDERO	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
SANDERO	RADIO	RADIO	Erase	RZ005 FAULT MEMORY
SANDERO	RADIO	RADIO	Erase	RZ004 RESET RADIO
SANDERO	RADIO	RADIO	Configuration	SC002 COMP CONFIGURATION
SANDERO	INJECTION	INJECTION DCM 1.2	Read Fault Code	
SANDERO	INJECTION	INJECTION DCM 1.2	Erase Fault Code	
SANDERO	INJECTION	INJECTION DCM 1.2	Read ECU Information	
SANDERO	INJECTION	INJECTION DCM 1.2	Live Data	
SANDERO	INJECTION	INJECTION DCM 1.2	Actuation Test	
SANDERO	INJECTION	INJECTION DCM 1.2	Other Configuration	VP010 WRITE V.I.N.
SANDERO	INJECTION	INJECTION DCM 1.2	Other Configuration	VP001 CYLINDER 1 INJECTOR CODE
SANDERO	INJECTION	INJECTION DCM 1.2	Other Configuration	VP002 CYLINDER 2 INJECTOR CODE
SANDERO	INJECTION	INJECTION DCM 1.2	Other Configuration	VP003 CYLINDER 3 INJECTOR CODE
SANDERO	INJECTION	INJECTION DCM 1.2	Other Configuration	VP004 CYLINDER 4 INJECTOR CODE
SANDERO	INJECTION	INJECTION DCM 1.2	Other Configuration	VP013 LOCK INJECTOR CONTROL
SANDERO	INJECTION	INJECTION DCM 1.2	Erase	RZ001 FAULT MEMORY
SANDERO	INJECTION	INJECTION DCM 1.2	Erase	RZ002 EGR ADAPTIVES
SANDERO	INJECTION	INJECTION DCM 1.2	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
SANDERO	INJECTION	INJECTION DCM 1.2	Erase	RZ007 FAULT MEMORY
SANDERO	INJECTION	INJECTION DCM 1.2	Configuration	SC002 ENTER INJECTOR CODES
SANDERO	INJECTION	SIM 32 INJECTOR	Read Fault Code	
SANDERO	INJECTION	SIM 32 INJECTOR	Erase Fault Code	
SANDERO	INJECTION	SIM 32 INJECTOR	Read ECU Information	
SANDERO	INJECTION	SIM 32 INJECTOR	Live Data	
SANDERO	INJECTION	SIM 32 INJECTOR	Read Configuration	
SANDERO	INJECTION	SIM 32 INJECTOR	Actuation Test	
SANDERO	INJECTION	SIM 32 INJECTOR	Other Configuration	VP020 WRITE VIN
SANDERO	INJECTION	SIM 32 INJECTOR	Erase	RZ007 FAULT MEMORY
SANDERO	INJECTION	SIM 32 INJECTOR	Erase	RZ019 PROGRAMMING REINITIALISATION
SANDERO	INJECTION	SIRIUS 32 INJECTION	Read Fault Code	
SANDERO	INJECTION	SIRIUS 32 INJECTION	Erase Fault Code	
SANDERO	INJECTION	SIRIUS 32 INJECTION	Read ECU Information	
SANDERO	INJECTION	SIRIUS 32 INJECTION	Live Data	
SANDERO	INJECTION	SIRIUS 32 INJECTION	Read Configuration	
SANDERO	INJECTION	SIRIUS 32 INJECTION	Actuation Test	
SANDERO	INJECTION	SIRIUS 32 INJECTION	Other Configuration	VP020 WRITE VIN
SANDERO	INJECTION	SIRIUS 32 INJECTION	Erase	RZ007 FAULT MEMORY
SANDERO	INJECTION	SIRIUS 32 INJECTION	Erase	RZ019 PROGRAMMING REINITIALISATION
SANDERO	INJECTION	SIRIUS 32 INJECTION	Erase	RZ094 IDLE SPEED LEARNING
SANDERO	INJECTION	SIRIUS 32 INJECTION	Erase	RZ095 INJECTION TIME PROGRAMMING
SANDERO	INJECTION	SIRIUS 32 INJECTION	Erase	RZ096 TORQUE LEARNING
SANDERO	INJECTION	SIRIUS 35 INJECTION	Read Fault Code	
SANDERO	INJECTION	SIRIUS 35 INJECTION	Erase Fault Code	
SANDERO	INJECTION	SIRIUS 35 INJECTION	Read ECU Information	
SANDERO	INJECTION	SIRIUS 35 INJECTION	Live Data	
SANDERO	INJECTION	SIRIUS 35 INJECTION	Read Configuration	
SANDERO	INJECTION	SIRIUS 35 INJECTION	Actuation Test	
SANDERO	INJECTION	SIRIUS 35 INJECTION	Other Configuration	VP020 WRITE VIN
SANDERO	INJECTION	SIRIUS 35 INJECTION	Erase	RZ007 FAULT MEMORY
SANDERO	INJECTION	SIRIUS 35 INJECTION	Erase	RZ019 PROGRAMMING REINITIALISATION
SANDERO	INJECTION	EMS 3130 INJECTION	Read Fault Code	
SANDERO	INJECTION	EMS 3130 INJECTION	Erase Fault Code	
SANDERO	INJECTION	EMS 3130 INJECTION	Read ECU Information	
SANDERO	INJECTION	EMS 3130 INJECTION	Live Data	
SANDERO	INJECTION	EMS 3130 INJECTION	Read Configuration	
SANDERO	INJECTION	EMS 3130 INJECTION	Actuation Test	
SANDERO	INJECTION	EMS 3130 INJECTION	Other Configuration	VP020 WRITE VIN
SANDERO	INJECTION	EMS 3130 INJECTION	Erase	RZ007 FAULT MEMORY
SANDERO	INJECTION	EMS 3130 INJECTION	Erase	RZ019 PROGRAMMING REINITIALISATION
SANDERO	INJECTION	EMS 3130 INJECTION	Read Fault Code	
SANDERO	INJECTION	EMS 3130 INJECTION	Erase Fault Code	
SANDERO	INJECTION	EMS 3130 INJECTION	Read ECU Information	
SANDERO	INJECTION	EMS 3130 INJECTION	Live Data	
SANDERO	INJECTION	EMS 3130 INJECTION	Read Configuration	
SANDERO	INJECTION	EMS 3130 INJECTION	Actuation Test	
SANDERO	INJECTION	EMS 3130 INJECTION	Other Configuration	VP020 WRITE VIN
SANDERO	INJECTION	EMS 3130 INJECTION	Erase	RZ007 FAULT MEMORY
SANDERO	INJECTION	EMS 3130 INJECTION	Erase	RZ019 PROGRAMMING REINITIALISATION
SANDERO	A.B.S.	ABS	Read Fault Code	
SANDERO	A.B.S.	ABS	Erase Fault Code	
SANDERO	A.B.S.	ABS	Read ECU Information	
SANDERO	A.B.S.	ABS	Live Data	
SANDERO	A.B.S.	ABS	Actuation Test	
SANDERO	A.B.S.	ABS	Other Configuration	VP004 VEHICLE PARAMETERS
SANDERO	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
SANDERO	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
SANDERO	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
SANDERO	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
SANDERO	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
SANDERO	A.B.S.	ABS	Configuration	SC006 BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS
SANDERO	A.B.S.	ABS	Read Fault Code	

SANDERO	A.B.S.	ABS	Erase Fault Code	
SANDERO	A.B.S.	ABS	Read ECU Information	
SANDERO	A.B.S.	ABS	Live Data	
SANDERO	A.B.S.	ABS	Actuation Test	
SANDERO	A.B.S.	ABS	Other Configuration	VP004 VEHICLE PARAMETERS
SANDERO	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
SANDERO	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
SANDERO	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
SANDERO	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
SANDERO	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
SANDERO	A.B.S.	ABS	Configuration	SC006 BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS
SANDERO	UCH	UCH	Read Fault Code	
SANDERO	UCH	UCH	Erase Fault Code	
SANDERO	UCH	UCH	Read ECU Information	
SANDERO	UCH	UCH	Live Data	
SANDERO	UCH	UCH	Read Configuration	
SANDERO	UCH	UCH	Actuation Test	
SANDERO	UCH	UCH	Write Configuration	CF167 FLASHING BUZZER
SANDERO	UCH	UCH	Other Configuration	VP004 WRITE VIN
SANDERO	UCH	UCH	Erase	RZ001 FAULT MEMORY
SANDERO	UCH	UCH	Configuration	SC008 UCH TYPE
SANDERO	UCH	UCH	Read Fault Code	
SANDERO	UCH	UCH	Erase Fault Code	
SANDERO	UCH	UCH	Read ECU Information	
SANDERO	UCH	UCH	Live Data	
SANDERO	UCH	UCH	Read Configuration	
SANDERO	UCH	UCH	Actuation Test	
SANDERO	UCH	UCH	Write Configuration	CF167 FLASHING BUZZER
SANDERO	UCH	UCH	Other Configuration	VP004 WRITE VIN
SANDERO	UCH	UCH	Erase	RZ001 FAULT MEMORY
SANDERO	UCH	UCH	Configuration	SC008 UCH TYPE
SANDERO	UCH	UCH	Read Fault Code	
SANDERO	UCH	UCH	Erase Fault Code	
SANDERO	UCH	UCH	Read ECU Information	
SANDERO	UCH	UCH	Live Data	
SANDERO	UCH	UCH	Read Configuration	
SANDERO	UCH	UCH	Actuation Test	
SANDERO	UCH	UCH	Write Configuration	CF167 FLASHING BUZZER
SANDERO	UCH	UCH	Other Configuration	VP004 WRITE VIN
SANDERO	UCH	UCH	Erase	RZ001 FAULT MEMORY
SANDERO	UCH	UCH	Configuration	SC008 UCH TYPE
SANDERO	UCH	UCH	Read Fault Code	
SANDERO	UCH	UCH	Erase Fault Code	
SANDERO	UCH	UCH	Read ECU Information	
SANDERO	UCH	UCH	Live Data	
SANDERO	UCH	UCH	Read Configuration	
SANDERO	UCH	UCH	Actuation Test	
SANDERO	UCH	UCH	Write Configuration	CF167 FLASHING BUZZER
SANDERO	UCH	UCH	Other Configuration	VP004 WRITE VIN
SANDERO	UCH	UCH	Erase	RZ001 FAULT MEMORY
SANDERO	UCH	UCH	Configuration	SC008 UCH TYPE
SANDERO	UCH	UCH	Read Fault Code	
SANDERO	UCH	UCH	Erase Fault Code	
SANDERO	UCH	UCH	Read ECU Information	
SANDERO	UCH	UCH	Live Data	
SANDERO	UCH	UCH	Read Configuration	
SANDERO	UCH	UCH	Actuation Test	
SANDERO	UCH	UCH	Write Configuration	CF167 FLASHING BUZZER
SANDERO	UCH	UCH	Other Configuration	VP004 WRITE VIN
SANDERO	UCH	UCH	Erase	RZ001 FAULT MEMORY
SANDERO	UCH	UCH	Configuration	SC008 UCH TYPE
SANDERO	UCH	UCH	Read Fault Code	
SANDERO	UCH	UCH	Erase Fault Code	
SANDERO	UCH	UCH	Read ECU Information	
SANDERO	UCH	UCH	Live Data	
SANDERO	UCH	UCH	Read Configuration	
SANDERO	UCH	UCH	Actuation Test	
SANDERO	UCH	UCH	Write Configuration	CF167 FLASHING BUZZER
SANDERO	UCH	UCH	Other Configuration	VP004 WRITE VIN
SANDERO	UCH	UCH	Erase	RZ001 FAULT MEMORY
SANDERO	UCH	UCH	Configuration	SC008 UCH TYPE
SANDERO	UCH	UCH	Read Fault Code	
SANDERO	UCH	UCH	Erase Fault Code	
SANDERO	UCH	UCH	Read ECU Information	
SANDERO	UCH	UCH	Live Data	
SANDERO	UCH	UCH	Read Configuration	
SANDERO	UCH	UCH	Actuation Test	
SANDERO	UCH	UCH	Write Configuration	CF167 FLASHING BUZZER
SANDERO	UCH	UCH	Other Configuration	VP004 WRITE VIN
SANDERO	UCH	UCH	Erase	RZ001 FAULT MEMORY
SANDERO	UCH	UCH	Configuration	SC008 UCH TYPE
SANDERO	UCH	UCH	Read Fault Code	
SANDERO	UCH	UCH	Erase Fault Code	
SANDERO	UCH	UCH	Read ECU Information	
SANDERO	UCH	UCH	Live Data	
SANDERO	UCH	UCH	Read Configuration	
SANDERO	UCH	UCH	Actuation Test	
SANDERO	UCH	UCH	Write Configuration	CF167 FLASHING BUZZER
SANDERO	UCH	UCH	Other Configuration	VP004 WRITE VIN
SANDERO	UCH	UCH	Erase	RZ001 FAULT MEMORY
SANDERO	UCH	UCH	Configuration	SC008 UCH TYPE
SANDERO	UCH	UCH	Read Fault Code	
SANDERO	UCH	UCH	Erase Fault Code	
SANDERO	UCH	UCH	Read ECU Information	
SANDERO	UCH	UCH	Live Data	
SANDERO	UCH	UCH	Read Configuration	
SANDERO	UCH	UCH	Actuation Test	
SANDERO	UCH	UCH	Write Configuration	CF167 FLASHING BUZZER
SANDERO	UCH	UCH	Other Configuration	VP004 WRITE VIN
SANDERO	UCH	UCH	Erase	RZ001 FAULT MEMORY
SANDERO	UCH	UCH	Configuration	SC008 UCH TYPE
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF209 DRIVER'S FRONT AIRBAG
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF210 PASSENGER'S FRONT AIRBAG
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF223 FRONT THORAX SIDE AIR BAG, DRIVER SIDE
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF224 FRONT THORAX SIDE AIR BAG, PASSENGER SIDE
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF265 DRIVER'S FRONT BUCKLE PRETENSIONER
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF266 PASSENGER'S FRONT BUCKLE PRETENSIONER
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF285 DRIVER'S FRONT SIDE IMPACT SENSOR
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF286 PASSENGER'S FRONT SIDE IMPACT SENSOR
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF273 DRIVER'S SEAT BUCKLE SENSOR
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF248 PASSENGER AIR BAG LOCKING MODE
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF291 SIDE ON WHICH STEERING WHEEL FITTED
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF036 PASS AIRBAG DEACTIVATION WARNING LIGHT
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF211 IMPACT INFORMATION CONNECTION
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF020 FRONT LEFT-HAND INERTIA WHEEL
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF021 FRONT RIGHT-HAND INERTIA WHEEL
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF049 SEAT BELT LIGHT

SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF048 SEAT BELT REMINDER BUZZER
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC005 CONFIGURATION OF SYSTEM COMPONENTS
SANDERO	AUTOMATIC GEARBOX	DPO TA2005 ATX	Read Fault Code	
SANDERO	AUTOMATIC GEARBOX	DPO TA2005 ATX	Erase Fault Code	
SANDERO	AUTOMATIC GEARBOX	DPO TA2005 ATX	Read ECU Information	
SANDERO	AUTOMATIC GEARBOX	DPO TA2005 ATX	Live Data	
SANDERO	AUTOMATIC GEARBOX	DPO TA2005 ATX	Actuation Test	
SANDERO	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP009 WRITE DATE OF LAST AFTER SALES OPERATION
SANDERO	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP016 WRITE TRANSMISSION OIL CHANGE DATE
SANDERO	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP001 WRITE VIN
SANDERO	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP015 NOTE OIL WEAR COUNTER
SANDERO	AUTOMATIC GEARBOX	DPO TA2005 ATX	Erase	RZ004 FAULT MEMORY
SANDERO	AUTOMATIC GEARBOX	DPO TA2005 ATX	Erase	RZ005 AUTO-ADAPTIVES
SANDERO	GAS INJ.	GAS INJECTION 3000	Read Fault Code	
SANDERO	GAS INJ.	GAS INJECTION 3000	Erase Fault Code	
SANDERO	GAS INJ.	GAS INJECTION 3000	Read ECU Information	
SANDERO	GAS INJ.	GAS INJECTION 3000	Live Data	
SANDERO	GAS INJ.	GAS INJECTION 3000	Read Configuration	
SANDERO	GAS INJ.	GAS INJECTION 3000	Actuation Test	
SANDERO	GAS INJ.	GAS INJECTION 3000	Other Configuration	VP001 WRITE VIN
SANDERO	GAS INJ.	GAS INJECTION 3000	Erase	RZ001 FAULT MEMORY
SANDERO	VARIABLE P.A.S.	PAS PUMP ASS.	Read Fault Code	
SANDERO	VARIABLE P.A.S.	PAS PUMP ASS.	Erase Fault Code	
SANDERO	VARIABLE P.A.S.	PAS PUMP ASS.	Read ECU Information	
SANDERO	VARIABLE P.A.S.	PAS PUMP ASS.	Live Data	
SANDERO	VARIABLE P.A.S.	PAS PUMP ASS.	Read Configuration	
SANDERO	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP001 WRITE VIN
SANDERO	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP005 WRITE DATE OF AFTER SALES OPERATION
SANDERO	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP006 COMPUTER CALIBRATION
SANDERO	VARIABLE P.A.S.	PAS PUMP ASS.	Erase	RZ001 FAULT MEMORY
SANDERO	VARIABLE P.A.S.	PAS PUMP ASS.	Read Fault Code	
SANDERO	VARIABLE P.A.S.	PAS PUMP ASS.	Erase Fault Code	
SANDERO	VARIABLE P.A.S.	PAS PUMP ASS.	Read ECU Information	
SANDERO	VARIABLE P.A.S.	PAS PUMP ASS.	Live Data	
SANDERO	VARIABLE P.A.S.	PAS PUMP ASS.	Read Configuration	
SANDERO	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP001 WRITE VIN
SANDERO	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP005 WRITE DATE OF AFTER SALES OPERATION
SANDERO	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP006 COMPUTER CALIBRATION
SANDERO	VARIABLE P.A.S.	PAS PUMP ASS.	Erase	RZ001 FAULT MEMORY
SANDERO	TRACKER	TRACKER	Read Fault Code	
SANDERO	TRACKER	TRACKER	Erase Fault Code	
SANDERO	TRACKER	TRACKER	Read ECU Information	
SANDERO	TRACKER	TRACKER	Live Data	
SANDERO	TRACKER	TRACKER	Read Configuration	
SANDERO	TRACKER	TRACKER	Write Configuration	CF001 SVT CONFIGURATION
SANDERO	TRACKER	TRACKER	Other Configuration	VP001 WRITE V.I.N.
SANDERO	TRACKER	TRACKER	Erase	RZ001 FAULT MEMORY
SANDERO	INJECTION	EMS 3120 INJECTION	Read Fault Code	
SANDERO	INJECTION	EMS 3120 INJECTION	Erase Fault Code	
SANDERO	INJECTION	EMS 3120 INJECTION	Read ECU Information	
SANDERO	INJECTION	EMS 3120 INJECTION	Live Data	
SANDERO	INJECTION	EMS 3120 INJECTION	Function Test	
SANDERO	INJECTION	EMS 3120 INJECTION	Read Configuration	
SANDERO	INJECTION	EMS 3120 INJECTION	Actuation Test	
SANDERO	INJECTION	EMS 3120 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
SANDERO	INJECTION	EMS 3120 INJECTION	Other Configuration	VP010 WRITE V. I. N.
SANDERO	INJECTION	EMS 3120 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
SANDERO	INJECTION	EMS 3120 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
SANDERO	INJECTION	EMS 3120 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
SANDERO	INJECTION	EMS 3120 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
SANDERO	INJECTION	EMS 3120 INJECTION	Erase	RZ064 ALCOHOL LEVEL PROG.
SANDERO	INJECTION	EMS 3120 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
SANDERO	INJECTION	EMS 3120 INJECTION	Erase	RZ046 INJECTOR ADAPTIVES
SANDERO	INJECTION	EMS 3120 INJECTION	Configuration	SC001 WRITE SAVED DATA
SANDERO	INJECTION	EMS 3120 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
SANDERO	INJECTION	EMS 3120 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
DUSTER_ph3	INJECTION	MDG1 INJECTION	Read Fault Code	
DUSTER_ph3	INJECTION	MDG1 INJECTION	Erase Fault Code	
DUSTER_ph3	INJECTION	MDG1 INJECTION	Read ECU Information	
DUSTER_ph3	INJECTION	MDG1 INJECTION	Live Data	
DUSTER_ph3	INJECTION	MDG1 INJECTION	Function Test	
DUSTER_ph3	INJECTION	MDG1 INJECTION	Read Configuration	
DUSTER_ph3	INJECTION	MDG1 INJECTION	Actuation Test	
DUSTER_ph3	INJECTION	MDG1 INJECTION	Write Configuration	CF196 STOP AND START FUNCTION
DUSTER_ph3	INJECTION	MDG1 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
DUSTER_ph3	INJECTION	MDG1 INJECTION	Other Configuration	VP010 WRITE V. I. N.
DUSTER_ph3	INJECTION	MDG1 INJECTION	Other Configuration	VP052 BOOST PRESSURE WASTEGATE PROGRAMMING
DUSTER_ph3	INJECTION	MDG1 INJECTION	Other Configuration	VP403 STATIC REGENERATION (IN WORKSHOP)
DUSTER_ph3	INJECTION	MDG1 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
DUSTER_ph3	INJECTION	MDG1 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
DUSTER_ph3	INJECTION	MDG1 INJECTION	Erase	RZ125 COMPUTER RESET

DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ133 RAIL PRESSURE LIMITER
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ126 CYLINDER PRESSURE SENSOR
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ118 STARTING AUTHORIZATION
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ132 FUEL PUMP PRIMING COMPLETE
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ136 UPSTREAM OXYGEN SENSOR RESET
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ137 DOWNSTREAM OXYGEN SENSOR RESET
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ148 DOWNSTREAM OXYGEN SENSOR RESET
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ147 UPSTREAM OXYGEN SENSOR RESET
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ070 TURBOCHARGER PROGRAMMING
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ084 EGR BYPASS PROGRAMMING
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ135 AIR DAMPER VALVE PROGRAMMING
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ168 SCR OUTLET AMMONIA LEAK METER
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ099 STOP AND START FUNCTION
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ088 AIR DAMPER VALVE PROGRAMMING
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ152 TURBOCHARGER FUNCTION
DUSTER ph3	INJECTION	MDG1 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
DUSTER ph3	INJECTION	MDG1 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
DUSTER ph3	INJECTION	MDG1 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
DUSTER ph3	INJECTION	MDG1 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
DUSTER ph3	INJECTION	MDG1 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
DUSTER ph3	INJECTION	MDG1 INJECTION	Configuration	SC001 WRITE SAVED DATA
DUSTER ph3	INJECTION	MDG1 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
DUSTER ph3	INJECTION	MDG1 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
DUSTER ph3	INJECTION	MDG1 INJECTION	Configuration	SC040 SPEED LIMITER
DUSTER ph3	INJECTION	MDG1 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
DUSTER ph3	INJECTION	MDG1 INJECTION	Configuration	SC083 ADBLUE SYSTEM PERFORMANCE
DUSTER ph3	INJECTION	MDG1 INJECTION	Configuration	SC071 CYLINDER FUNCTION FAULT FINDING
DUSTER ph3	INJECTION	MDG1 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Read Fault Code	
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Erase Fault Code	
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Read ECU Information	
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Live Data	
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Function Test	
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Read Configuration	
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Actuation Test	
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Write Configuration	CF196 STOP AND START FUNCTION
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Other Configuration	VP010 WRITE V. I. N.
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Erase	RZ061 FLYWHEEL TARGET PROGRAMMING
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Erase	RZ070 TURBOCHARGER PROGRAMMING
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Erase	RZ042 IGNITION COIL ADAPTIVE
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Configuration	SC001 WRITE SAVED DATA
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Read Fault Code	
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Erase Fault Code	
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Read ECU Information	
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Live Data	
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Function Test	
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Read Configuration	
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Actuation Test	
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Write Configuration	CF196 STOP AND START FUNCTION
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Other Configuration	VP010 WRITE V. I. N.
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Erase	RZ070 TURBOCHARGER PROGRAMMING
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Erase	RZ091 WASTE GATE REGULATION
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Erase	RZ122 FLYWHEEL TARGET PROGRAMMING
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Erase	RZ102 FLYWHEEL TARGET PROGRAMMING
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Erase	RZ042 IGNITION COIL ADAPTIVE
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Configuration	SC001 WRITE SAVED DATA
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
DUSTER ph3	INJECTION	MDG1 INJECTION	Read Fault Code	
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase Fault Code	
DUSTER ph3	INJECTION	MDG1 INJECTION	Read ECU Information	
DUSTER ph3	INJECTION	MDG1 INJECTION	Live Data	
DUSTER ph3	INJECTION	MDG1 INJECTION	Function Test	
DUSTER ph3	INJECTION	MDG1 INJECTION	Read Configuration	

DUSTER_ph3	INJECTION	MDG1 INJECTION	Actuation Test	
DUSTER_ph3	INJECTION	MDG1 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
DUSTER_ph3	INJECTION	MDG1 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
DUSTER_ph3	INJECTION	MDG1 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
DUSTER_ph3	INJECTION	MDG1 INJECTION	Other Configuration	VP010 WRITE V.I.N.
DUSTER_ph3	INJECTION	MDG1 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
DUSTER_ph3	INJECTION	MDG1 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTATIVES
DUSTER_ph3	INJECTION	MDG1 INJECTION	Erase	RZ125 COMPUTER RESET
DUSTER_ph3	INJECTION	MDG1 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
DUSTER_ph3	INJECTION	MDG1 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
DUSTER_ph3	INJECTION	MDG1 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
DUSTER_ph3	INJECTION	MDG1 INJECTION	Erase	RZ133 RAIL PRESSURE LIMITER
DUSTER_ph3	INJECTION	MDG1 INJECTION	Erase	RZ126 CYLINDER PRESSURE SENSOR
DUSTER_ph3	INJECTION	MDG1 INJECTION	Erase	RZ044 ATR DAMPER VALVE PROGRAMMING
DUSTER_ph3	INJECTION	MDG1 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
DUSTER_ph3	INJECTION	MDG1 INJECTION	Erase	RZ118 STARTING AUTHORIZATION
DUSTER_ph3	INJECTION	MDG1 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
DUSTER_ph3	INJECTION	MDG1 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
DUSTER_ph3	INJECTION	MDG1 INJECTION	Erase	RZ132 FUEL PUMP PRIMING COMPLETE
DUSTER_ph3	INJECTION	MDG1 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
DUSTER_ph3	INJECTION	MDG1 INJECTION	Erase	RZ136 UPSTREAM OXYGEN SENSOR RESET
DUSTER_ph3	INJECTION	MDG1 INJECTION	Erase	RZ137 DOWNSTREAM OXYGEN SENSOR RESET
DUSTER_ph3	INJECTION	MDG1 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
DUSTER_ph3	INJECTION	MDG1 INJECTION	Erase	RZ148 DOWNSTREAM OXYGEN SENSOR RESET
DUSTER_ph3	INJECTION	MDG1 INJECTION	Erase	RZ147 UPSTREAM OXYGEN SENSOR RESET
DUSTER_ph3	INJECTION	MDG1 INJECTION	Erase	RZ070 TURBOCHARGER PROGRAMMING
DUSTER_ph3	INJECTION	MDG1 INJECTION	Erase	RZ084 EGR BYPASS PROGRAMMING
DUSTER_ph3	INJECTION	MDG1 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
DUSTER_ph3	INJECTION	MDG1 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
DUSTER_ph3	INJECTION	MDG1 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
DUSTER_ph3	INJECTION	MDG1 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
DUSTER_ph3	INJECTION	MDG1 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
DUSTER_ph3	INJECTION	MDG1 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
DUSTER_ph3	INJECTION	MDG1 INJECTION	Configuration	SC040 SPEED LIMITER
DUSTER_ph3	INJECTION	MDG1 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
DUSTER_ph3	INJECTION	MDG1 INJECTION	Configuration	SC083 ADBLUE SYSTEM PERFORMANCE
DUSTER_ph3	INJECTION	MDG1 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
DUSTER_ph3	INJECTION	EMS 3160 INJECTION	Read Fault Code	
DUSTER_ph3	INJECTION	EMS 3160 INJECTION	Erase Fault Code	
DUSTER_ph3	INJECTION	EMS 3160 INJECTION	Read ECU Information	
DUSTER_ph3	INJECTION	EMS 3160 INJECTION	Live Data	
DUSTER_ph3	INJECTION	EMS 3160 INJECTION	Function Test	
DUSTER_ph3	INJECTION	EMS 3160 INJECTION	Read Configuration	
DUSTER_ph3	INJECTION	EMS 3160 INJECTION	Actuation Test	
DUSTER_ph3	INJECTION	EMS 3160 INJECTION	Write Configuration	CF196 STOP AND START FUNCTION
DUSTER_ph3	INJECTION	EMS 3160 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
DUSTER_ph3	INJECTION	EMS 3160 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
DUSTER_ph3	INJECTION	EMS 3160 INJECTION	Other Configuration	VP010 WRITE V.I.N.
DUSTER_ph3	INJECTION	EMS 3160 INJECTION	Other Configuration	VP073 FUEL PUMP FORCED CONVERSION
DUSTER_ph3	INJECTION	EMS 3160 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
DUSTER_ph3	INJECTION	EMS 3160 INJECTION	Erase	RZ091 WASTE GATE REGULATION
DUSTER_ph3	INJECTION	EMS 3160 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
DUSTER_ph3	INJECTION	EMS 3160 INJECTION	Erase	RZ019 PROGRAMMING REINITIALISATION
DUSTER_ph3	INJECTION	EMS 3160 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
DUSTER_ph3	INJECTION	EMS 3160 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
DUSTER_ph3	INJECTION	EMS 3160 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
DUSTER_ph3	INJECTION	EMS 3160 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
DUSTER_ph3	INJECTION	EMS 3160 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
DUSTER_ph3	INJECTION	EMS 3160 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
DUSTER_ph3	INJECTION	EMS 3160 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
DUSTER_ph3	INJECTION	EMS 3160 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
DUSTER_ph3	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
DUSTER_ph3	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
DUSTER_ph3	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
DUSTER_ph3	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
DUSTER_ph3	INSTRUMENT PANEL	INSTRUMENT PANEL	Function Test	
DUSTER_ph3	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
DUSTER_ph3	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
DUSTER_ph3	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
DUSTER_ph3	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
DUSTER_ph3	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
DUSTER_ph3	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
DUSTER_ph3	INSTRUMENT PANEL	INSTRUMENT PANEL	Function Test	
DUSTER_ph3	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
DUSTER_ph3	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
DUSTER_ph3	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF199 COMPUTER INITIALISATION
DUSTER_ph3	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
DUSTER_ph3	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION.
DUSTER_ph3	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
DUSTER_ph3	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
DUSTER_ph3	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF136 TYRE PRESSURE UNITS
DUSTER_ph3	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF141 OVERSPEED FUNCTION - ARABIA
DUSTER_ph3	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF060 ENGINE TYPE
DUSTER_ph3	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF234 BLIND SPOT DETECTION
DUSTER_ph3	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
DUSTER_ph3	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP052 ODOMETER IN KM
DUSTER_ph3	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP053 ODOMETER IN MILES
DUSTER_ph3	UCH	UCH	Read Fault Code	
DUSTER_ph3	UCH	UCH	Erase Fault Code	
DUSTER_ph3	UCH	UCH	Read ECU Information	
DUSTER_ph3	UCH	UCH	Live Data	
DUSTER_ph3	UCH	UCH	Function Test	
DUSTER_ph3	UCH	UCH	Read Configuration	
DUSTER_ph3	UCH	UCH	Actuation Test	
DUSTER_ph3	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS

DUSTER ph3	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
DUSTER ph3	UCH	UCH	Write Configuration	CF229 ALARM
DUSTER ph3	UCH	UCH	Write Configuration	CF036 SELECTIVE OPENING OF DOORS
DUSTER ph3	UCH	UCH	Write Configuration	CF015 ILLUMINATE HAZARD LAMPS UPON IMPACT
DUSTER ph3	UCH	UCH	Write Configuration	CF314 STOP AND START FUNCTION
DUSTER ph3	UCH	UCH	Write Configuration	CF009 DEADLOCKING
DUSTER ph3	UCH	UCH	Write Configuration	CF316 AUTOMATIC REAR WIPER FUNCTION
DUSTER ph3	UCH	UCH	Write Configuration	CF299 ACCESS/STARTER TYPE
DUSTER ph3	UCH	UCH	Other Configuration	VPO01 WRITE V. I. N.
DUSTER ph3	UCH	UCH	Erase	RZ013 HIGH PRESSURE PUMP COUNTER
DUSTER ph3	UCH	UCH	Erase	RZ014 NUMBER OF STARTING CYCLES
DUSTER ph3	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Fault Code	
DUSTER ph3	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Erase Fault Code	
DUSTER ph3	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read ECU Information	
DUSTER ph3	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Live Data	
DUSTER ph3	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Function Test	
DUSTER ph3	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Configuration	
DUSTER ph3	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Actuation Test	
DUSTER ph3	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Other Configuration	VPO02 WRITE VIN
DUSTER ph3	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Erase	RZ002 ECU MEMORY
DUSTER ph3	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Configuration	SC002 REVERSING CAMERA CALIBRATION
DUSTER ph3	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Configuration	SC007 SYSTEM CONFIGURATION
DUSTER ph3	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Configuration	SC008 WRITE SAVED DATA
DUSTER ph3	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Configuration	SC009 SAVE COMPUTER DATA
DUSTER ph3	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Read Fault Code	
DUSTER ph3	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Erase Fault Code	
DUSTER ph3	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Read ECU Information	
DUSTER ph3	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Live Data	
DUSTER ph3	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Function Test	
DUSTER ph3	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Actuation Test	
DUSTER ph3	VARIABLE P. A. S.	VARIABLE P. A. S.	Read Fault Code	
DUSTER ph3	VARIABLE P. A. S.	VARIABLE P. A. S.	Erase Fault Code	
DUSTER ph3	VARIABLE P. A. S.	VARIABLE P. A. S.	Read ECU Information	
DUSTER ph3	VARIABLE P. A. S.	VARIABLE P. A. S.	Live Data	
DUSTER ph3	VARIABLE P. A. S.	VARIABLE P. A. S.	Function Test	
DUSTER ph3	VARIABLE P. A. S.	VARIABLE P. A. S.	Other Configuration	VPO01 WRITE VIN
DUSTER ph3	VARIABLE P. A. S.	VARIABLE P. A. S.	Other Configuration	VPO11 STEERING WHEEL ANGLE CALIB.
DUSTER ph3	VARIABLE P. A. S.	VARIABLE P. A. S.	Other Configuration	VPO13 HAND OFF DETECTION LEARNING
DUSTER ph3	VARIABLE P. A. S.	VARIABLE P. A. S.	Other Configuration	VPO12 COMPUTER RESET
DUSTER ph3	UPC	UPC	Read Fault Code	
DUSTER ph3	UPC	UPC	Erase Fault Code	
DUSTER ph3	UPC	UPC	Read ECU Information	
DUSTER ph3	UPC	UPC	Live Data	
DUSTER ph3	UPC	UPC	Function Test	
DUSTER ph3	UPC	UPC	Actuation Test	
DUSTER ph3	UPC	UPC	Other Configuration	VPO07 COMPUTER INITIALISATION
DUSTER ph3	UPC	UPC	Other Configuration	VPO03 WRITE VIN
DUSTER ph3	UPC	UPC	Other Configuration	VPO06 RESETTING INTERNAL PROTECTION
DUSTER ph3	UPC	UPC	Other Configuration	VPO26 CONTROL HEADLIGHT MOTORS
DUSTER ph3	SCENE RECORDER	SCENE RECORDER	Read Fault Code	
DUSTER ph3	SCENE RECORDER	SCENE RECORDER	Erase Fault Code	
DUSTER ph3	SCENE RECORDER	SCENE RECORDER	Read ECU Information	
DUSTER ph3	SCENE RECORDER	SCENE RECORDER	Actuation Test	
DUSTER ph3	SCENE RECORDER	SCENE RECORDER	Other Configuration	VPO02 WRITE VIN
DUSTER ph3	SCENE RECORDER	SCENE RECORDER	Erase	RZ002 COMPUTER RESET
DUSTER ph3	RADIO	RADIO	Read Fault Code	
DUSTER ph3	RADIO	RADIO	Erase Fault Code	
DUSTER ph3	RADIO	RADIO	Read ECU Information	
DUSTER ph3	RADIO	RADIO	Live Data	
DUSTER ph3	RADIO	RADIO	Function Test	
DUSTER ph3	RADIO	RADIO	Read Configuration	
DUSTER ph3	RADIO	RADIO	Actuation Test	
DUSTER ph3	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
DUSTER ph3	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
DUSTER ph3	RADIO	RADIO	Other Configuration	VPO01 WRITE VIN
DUSTER ph3	RADIO	RADIO	Configuration	SC002 COMP CONFIGURATION
DUSTER ph3	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
DUSTER ph3	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
DUSTER ph3	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
DUSTER ph3	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
DUSTER ph3	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Function Test	
DUSTER ph3	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Write Configuration	CF003 COMPUTER CONFIGURATION
DUSTER ph3	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VPO01 WRITE VIN
DUSTER ph3	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
DUSTER ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read Fault Code	
DUSTER ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase Fault Code	
DUSTER ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read ECU Information	
DUSTER ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Live Data	
DUSTER ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Function Test	
DUSTER ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Actuation Test	
DUSTER ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VPO57 ADBLUE MODULE ELECTRICAL CHECK
DUSTER ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VPO50 ADBLUE FIRST FILLING TEST
DUSTER ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VPO51 ADBLUE EMPTYING TEST
DUSTER ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VPO56 ADBLUE INJECTOR SOUND TEST
DUSTER ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VPO55 ADBLUE INJECTOR RELEASE TEST
DUSTER ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VPO12 WRITE VIN
DUSTER ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VPO52 FLOW RATE FUNCTION
DUSTER ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VPO58 OVERALL RESULT
DUSTER ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ008 INJECTOR HEATING
DUSTER ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ012 OVERALL QUANTITY OF ADBLUE INJECTED
DUSTER ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ011 RESET OF THE HEATING COUNTER ACTIVE TIME
DUSTER ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Configuration	SC001 WRITE SAVED DATA
DUSTER ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Configuration	SC002 SAVE COMPUTER DATA
DUSTER ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read Fault Code	
DUSTER ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase Fault Code	
DUSTER ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read ECU Information	
DUSTER ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Live Data	

DUSTER_ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Function Test	
DUSTER_ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VPO12 WRITE VIN
DUSTER_ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VPO06 ADBLUE EMPTYING TEST
DUSTER_ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VPO81 ADBLUE PURGE TEST
DUSTER_ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VPO63 ADBLUE TANK HEATER
DUSTER_ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VPO62 PRESSURE LINE ADBLUE HEATER
DUSTER_ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VPO74 ADDITIONAL TANK HEATER
DUSTER_ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VPO77 ADBLUE UPSTREAM INJECTOR PERFORMANCE TEST
DUSTER_ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VPO07 ADBLUE LEAK TEST
DUSTER_ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VPO69 HIGH PRESSURE CIRCUIT LEAK TEST
DUSTER_ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VPO78 ADBLUE DOWNSTREAM INJECTOR PERFORMANCE TEST
DUSTER_ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VPO79 ADBLUE UPSTREAM INJECTOR PROGRAMMING
DUSTER_ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VPO80 ADBLUE DOWNSTREAM INJECTOR PROGRAMMING
DUSTER_ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VPO70 ADBLUE PUMP SETPOINT
DUSTER_ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VPO71 ADBLUE TANK PROGRAMMING
DUSTER_ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VPO10 ADBLUE FIRST FILLING TEST
DUSTER_ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Configuration	SC002 SAVE COMPUTER DATA
DUSTER_ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Configuration	SC001 WRITE SAVED DATA
DUSTER_ph3	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Fault Code	
DUSTER_ph3	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase Fault Code	
DUSTER_ph3	HANDS-FREE MODULE	HANDS-FREE MODULE	Read ECU Information	
DUSTER_ph3	HANDS-FREE MODULE	HANDS-FREE MODULE	Live Data	
DUSTER_ph3	HANDS-FREE MODULE	HANDS-FREE MODULE	Function Test	
DUSTER_ph3	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Configuration	
DUSTER_ph3	HANDS-FREE MODULE	HANDS-FREE MODULE	Actuation Test	
DUSTER_ph3	HANDS-FREE MODULE	HANDS-FREE MODULE	Write Configuration	CF028 TESTING CARD PRESENTED
DUSTER_ph3	HANDS-FREE MODULE	HANDS-FREE MODULE	Other Configuration	VPO01 WRITE VIN
DUSTER_ph3	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase	RZ002 AFTER SALES CODE
DUSTER_ph3	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Read Fault Code	
DUSTER_ph3	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Erase Fault Code	
DUSTER_ph3	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Read ECU Information	
DUSTER_ph3	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Live Data	
DUSTER_ph3	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Function Test	
DUSTER_ph3	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Actuation Test	
DUSTER_ph3	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Other Configuration	VPO01 WRITE VIN
DUSTER_ph3	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Erase	RZ002 COMPUTER RESET
DUSTER_ph3	CENTRAL GATEWAY	CENTRAL GATEWAY	Read Fault Code	
DUSTER_ph3	CENTRAL GATEWAY	CENTRAL GATEWAY	Erase Fault Code	
DUSTER_ph3	CENTRAL GATEWAY	CENTRAL GATEWAY	Read ECU Information	
DUSTER_ph3	CENTRAL GATEWAY	CENTRAL GATEWAY	Live Data	
DUSTER_ph3	CENTRAL GATEWAY	CENTRAL GATEWAY	Function Test	
DUSTER_ph3	CENTRAL GATEWAY	CENTRAL GATEWAY	Read Configuration	
DUSTER_ph3	CENTRAL GATEWAY	CENTRAL GATEWAY	Write Configuration	CF001 CENTRAL GATEWAY
DUSTER_ph3	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Fault Code	
DUSTER_ph3	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Erase Fault Code	
DUSTER_ph3	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read ECU Information	
DUSTER_ph3	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Live Data	
DUSTER_ph3	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Configuration	
DUSTER_ph3	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Actuation Test	
DUSTER_ph3	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Write Configuration	CF002 COUNTRY MODEL
DUSTER_ph3	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Write Configuration	CF046 LANGUAGE
DUSTER_ph3	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Other Configuration	VPO02 WRITE VIN
DUSTER_ph3	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Configuration	SC007 SYSTEM CONFIGURATION
DUSTER_ph3	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Fault Code	
DUSTER_ph3	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase Fault Code	
DUSTER_ph3	HANDS-FREE MODULE	HANDS-FREE MODULE	Read ECU Information	
DUSTER_ph3	HANDS-FREE MODULE	HANDS-FREE MODULE	Live Data	
DUSTER_ph3	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Configuration	
DUSTER_ph3	HANDS-FREE MODULE	HANDS-FREE MODULE	Actuation Test	
DUSTER_ph3	HANDS-FREE MODULE	HANDS-FREE MODULE	Write Configuration	CF035 TELEPHONE INDUCTION CHARGER
DUSTER_ph3	HANDS-FREE MODULE	HANDS-FREE MODULE	Write Configuration	CF031 REMOTE LOCKING BUZZER
DUSTER_ph3	HANDS-FREE MODULE	HANDS-FREE MODULE	Other Configuration	VPO02 WRITE V.I.N.
DUSTER_ph3	CENTRAL GATEWAY	CENTRAL GATEWAY	Other Configuration	VPO02 WRITE VIN
ARKANA	INJECTION	EMS 3140 INJECTION	Read Fault Code	
ARKANA	INJECTION	EMS 3140 INJECTION	Erase Fault Code	
ARKANA	INJECTION	EMS 3140 INJECTION	Read ECU Information	
ARKANA	INJECTION	EMS 3140 INJECTION	Live Data	
ARKANA	INJECTION	EMS 3140 INJECTION	Function Test	
ARKANA	INJECTION	EMS 3140 INJECTION	Read Configuration	
ARKANA	INJECTION	EMS 3140 INJECTION	Actuation Test	
ARKANA	INJECTION	EMS 3140 INJECTION	Write Configuration	CF196 STOP AND START FUNCTION
ARKANA	INJECTION	EMS 3140 INJECTION	Other Configuration	VPO36 FUEL SUPPLY PREVENTION
ARKANA	INJECTION	EMS 3140 INJECTION	Other Configuration	VPO10 WRITE V. I. N.
ARKANA	INJECTION	EMS 3140 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
ARKANA	INJECTION	EMS 3140 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
ARKANA	INJECTION	EMS 3140 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
ARKANA	INJECTION	EMS 3140 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
ARKANA	INJECTION	EMS 3140 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
ARKANA	INJECTION	EMS 3140 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
ARKANA	INJECTION	EMS 3140 INJECTION	Erase	RZ070 TURBOCHARGER PROGRAMMING
ARKANA	INJECTION	EMS 3140 INJECTION	Erase	RZ091 WASTE GATE REGULATION
ARKANA	INJECTION	EMS 3140 INJECTION	Erase	RZ122 FLYWHEEL TARGET PROGRAMMING
ARKANA	INJECTION	EMS 3140 INJECTION	Erase	RZ102 FLYWHEEL TARGET PROGRAMMING
ARKANA	INJECTION	EMS 3140 INJECTION	Erase	RZ042 IGNITION COIL ADAPTIVE
ARKANA	INJECTION	EMS 3140 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
ARKANA	INJECTION	EMS 3140 INJECTION	Configuration	SC001 WRITE SAVED DATA
ARKANA	INJECTION	EMS 3140 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
ARKANA	INJECTION	EMS 3140 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
ARKANA	INJECTION	EMS 3140 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
ARKANA	ABS	ABS	Read Fault Code	
ARKANA	ABS	ABS	Erase Fault Code	
ARKANA	ABS	ABS	Read ECU Information	
ARKANA	ABS	ABS	Live Data	
ARKANA	ABS	ABS	Function Test	
ARKANA	ABS	ABS	Read Configuration	

ARKANA	ABS	ABS	Actuation Test	
ARKANA	ABS	ABS	Other Configuration	VP007 SPEEDO INDEX
ARKANA	ABS	ABS	Other Configuration	VP045 HILL START
ARKANA	ABS	ABS	Other Configuration	VP001 WRITE VIN
ARKANA	ABS	ABS	Other Configuration	VP038 LONGITUDINAL ACCELERATION SENSOR
ARKANA	ABS	ABS	Other Configuration	VP025 TRANSVERSE ACCELERATION SENSOR
ARKANA	ABS	ABS	Erase	RZ012 RESET
ARKANA	ABS	ABS	Erase	RZ008 TRANSVERSE ACCELERATION OFFSET SENSOR
ARKANA	ABS	ABS	Erase	RZ009 BRAKE PRESSURE OFFSET SENSOR
ARKANA	ABS	ABS	Erase	RZ010 LONGITUDINAL ACCELERATION SENSOR OFFSET
ARKANA	ABS	ABS	Configuration	SC001 CHECK TARGET TEETH
ARKANA	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
ARKANA	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
ARKANA	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
ARKANA	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
ARKANA	INSTRUMENT PANEL	INSTRUMENT PANEL	Function Test	
ARKANA	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
ARKANA	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
ARKANA	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF199 COMPUTER INITIALISATION
ARKANA	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
ARKANA	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION.
ARKANA	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
ARKANA	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
ARKANA	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF136 TYRE PRESSURE UNITS
ARKANA	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF141 OVERSPEED FUNCTION - ARABIA
ARKANA	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
ARKANA	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP052 ODOMETER IN KM
ARKANA	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP053 ODOMETER IN MILES
ARKANA	UCH	UCH	Read Fault Code	
ARKANA	UCH	UCH	Erase Fault Code	
ARKANA	UCH	UCH	Read ECU Information	
ARKANA	UCH	UCH	Live Data	
ARKANA	UCH	UCH	Function Test	
ARKANA	UCH	UCH	Read Configuration	
ARKANA	UCH	UCH	Actuation Test	
ARKANA	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
ARKANA	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
ARKANA	UCH	UCH	Write Configuration	CF229 ALARM
ARKANA	UCH	UCH	Write Configuration	CF036 SELECTIVE OPENING OF DOORS
ARKANA	UCH	UCH	Write Configuration	CF015 ILLUMINATE HAZARD LAMPS UPON IMPACT
ARKANA	UCH	UCH	Write Configuration	CF314 STOP AND START FUNCTION
ARKANA	UCH	UCH	Write Configuration	CF009 DEADLOCKING
ARKANA	UCH	UCH	Write Configuration	CF316 AUTOMATIC REAR WIPER FUNCTION
ARKANA	UCH	UCH	Write Configuration	CF299 ACCESS/STARTER TYPE
ARKANA	UCH	UCH	Other Configuration	VP001 WRITE V. I. N.
ARKANA	UCH	UCH	Erase	RZ013 HIGH PRESSURE PUMP COUNTER
ARKANA	UCH	UCH	Erase	RZ014 NUMBER OF STARTING CYCLES
ARKANA	AIR CONDITIONING	AIR CONDITIONING	Read Fault Code	
ARKANA	AIR CONDITIONING	AIR CONDITIONING	Erase Fault Code	
ARKANA	AIR CONDITIONING	AIR CONDITIONING	Read ECU Information	
ARKANA	AIR CONDITIONING	AIR CONDITIONING	Live Data	
ARKANA	AIR CONDITIONING	AIR CONDITIONING	Function Test	
ARKANA	AIR CONDITIONING	AIR CONDITIONING	Actuation Test	
ARKANA	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VP001 WRITE VIN
ARKANA	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VP005 GEOGRAPHICAL ZONE
ARKANA	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VP006 AIR RECIRCULATION FLAP MOTOR
ARKANA	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ002 COMPUTER REINITIALISATION
ARKANA	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ003 ACTUATOR RELAY CONTROL
ARKANA	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Fault Code	
ARKANA	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Erase Fault Code	
ARKANA	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read ECU Information	
ARKANA	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Live Data	
ARKANA	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Function Test	
ARKANA	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Configuration	
ARKANA	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Actuation Test	
ARKANA	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Other Configuration	VP002 WRITE VIN
ARKANA	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Erase	RZ002 ECU MEMORY
ARKANA	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Configuration	SC002 REVERSING CAMERA CALIBRATION
ARKANA	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Configuration	SC007 SYSTEM CONFIGURATION
ARKANA	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Configuration	SC008 WRITE SAVED DATA
ARKANA	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Configuration	SC009 SAVE COMPUTER DATA
ARKANA	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Read Fault Code	
ARKANA	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Erase Fault Code	
ARKANA	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Read ECU Information	
ARKANA	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Live Data	
ARKANA	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Function Test	
ARKANA	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Actuation Test	
ARKANA	VARIABLE P. A. S.	VARIABLE P. A. S.	Read Fault Code	
ARKANA	VARIABLE P. A. S.	VARIABLE P. A. S.	Erase Fault Code	
ARKANA	VARIABLE P. A. S.	VARIABLE P. A. S.	Read ECU Information	
ARKANA	VARIABLE P. A. S.	VARIABLE P. A. S.	Live Data	
ARKANA	VARIABLE P. A. S.	VARIABLE P. A. S.	Function Test	
ARKANA	VARIABLE P. A. S.	VARIABLE P. A. S.	Other Configuration	VP001 WRITE VIN
ARKANA	VARIABLE P. A. S.	VARIABLE P. A. S.	Other Configuration	VP011 STEERING WHEEL ANGLE CALIB.
ARKANA	VARIABLE P. A. S.	VARIABLE P. A. S.	Other Configuration	VP013 HAND OFF DETECTION LEARNING
ARKANA	VARIABLE P. A. S.	VARIABLE P. A. S.	Other Configuration	VP012 COMPUTER RESET
ARKANA	UPC	UPC	Read Fault Code	
ARKANA	UPC	UPC	Erase Fault Code	
ARKANA	UPC	UPC	Read ECU Information	
ARKANA	UPC	UPC	Live Data	
ARKANA	UPC	UPC	Function Test	
ARKANA	UPC	UPC	Actuation Test	
ARKANA	UPC	UPC	Other Configuration	VP007 COMPUTER INITIALISATION
ARKANA	UPC	UPC	Other Configuration	VP003 WRITE VIN
ARKANA	UPC	UPC	Other Configuration	VP006 RESETTING INTERNAL PROTECTION
ARKANA	UPC	UPC	Other Configuration	VP026 CONTROL HEADLIGHT MOTORS

ARKANA	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Read Fault Code	
ARKANA	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Erase Fault Code	
ARKANA	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Read ECU Information	
ARKANA	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Live Data	
ARKANA	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Function Test	
ARKANA	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Actuation Test	
ARKANA	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Other Configuration	VPO01 WRITE VIN
ARKANA	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Erase	RZ002 COMPUTER RESET
ARKANA	SCENE RECORDER	SCENE RECORDER	Read Fault Code	
ARKANA	SCENE RECORDER	SCENE RECORDER	Erase Fault Code	
ARKANA	SCENE RECORDER	SCENE RECORDER	Read ECU Information	
ARKANA	SCENE RECORDER	SCENE RECORDER	Actuation Test	
ARKANA	SCENE RECORDER	SCENE RECORDER	Other Configuration	VPO02 WRITE VIN
ARKANA	SCENE RECORDER	SCENE RECORDER	Erase	RZ002 COMPUTER RESET
ARKANA	RADIO	RADIO	Read Fault Code	
ARKANA	RADIO	RADIO	Erase Fault Code	
ARKANA	RADIO	RADIO	Read ECU Information	
ARKANA	RADIO	RADIO	Live Data	
ARKANA	RADIO	RADIO	Function Test	
ARKANA	RADIO	RADIO	Read Configuration	
ARKANA	RADIO	RADIO	Actuation Test	
ARKANA	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
ARKANA	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
ARKANA	RADIO	RADIO	Other Configuration	VPO01 WRITE VIN
ARKANA	RADIO	RADIO	Configuration	SC002 COMP CONFIGURATION
ARKANA	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
ARKANA	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
ARKANA	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
ARKANA	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
ARKANA	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Function Test	
ARKANA	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Write Configuration	CF003 COMPUTER CONFIGURATION
ARKANA	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VPO01 WRITE VIN
ARKANA	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
ARKANA	AMPLIFIER	AMPLIFIER	Read Fault Code	
ARKANA	AMPLIFIER	AMPLIFIER	Erase Fault Code	
ARKANA	AMPLIFIER	AMPLIFIER	Read ECU Information	
ARKANA	AMPLIFIER	AMPLIFIER	Live Data	
ARKANA	AMPLIFIER	AMPLIFIER	Function Test	
ARKANA	AMPLIFIER	AMPLIFIER	Actuation Test	
ARKANA	AMPLIFIER	AMPLIFIER	Other Configuration	VPO01 WRITE VIN
ARKANA	AMPLIFIER	AMPLIFIER	Erase	RZ004 AMPLIFIER RESET
ARKANA	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Fault Code	
ARKANA	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase Fault Code	
ARKANA	HANDS-FREE MODULE	HANDS-FREE MODULE	Read ECU Information	
ARKANA	HANDS-FREE MODULE	HANDS-FREE MODULE	Live Data	
ARKANA	HANDS-FREE MODULE	HANDS-FREE MODULE	Function Test	
ARKANA	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Configuration	
ARKANA	HANDS-FREE MODULE	HANDS-FREE MODULE	Actuation Test	
ARKANA	HANDS-FREE MODULE	HANDS-FREE MODULE	Write Configuration	CF028 TESTING CARD PRESENTED
ARKANA	HANDS-FREE MODULE	HANDS-FREE MODULE	Other Configuration	VPO01 WRITE VIN
ARKANA	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase	RZ002 AFTER SALES CODE
ARKANA	CENTRAL GATEWAY	CENTRAL GATEWAY	Read Fault Code	
ARKANA	CENTRAL GATEWAY	CENTRAL GATEWAY	Erase Fault Code	
ARKANA	CENTRAL GATEWAY	CENTRAL GATEWAY	Read ECU Information	
ARKANA	CENTRAL GATEWAY	CENTRAL GATEWAY	Live Data	
ARKANA	CENTRAL GATEWAY	CENTRAL GATEWAY	Function Test	
ARKANA	CENTRAL GATEWAY	CENTRAL GATEWAY	Read Configuration	
ARKANA	CENTRAL GATEWAY	CENTRAL GATEWAY	Write Configuration	CF001 CENTRAL GATEWAY
ARKANA	CENTRAL GATEWAY	CENTRAL GATEWAY	Other Configuration	VPO02 WRITE VIN
ARKANA	UCH	UCH	Read Fault Code	
ARKANA	UCH	UCH	Erase Fault Code	
ARKANA	UCH	UCH	Read ECU Information	
ARKANA	UCH	UCH	Live Data	
ARKANA	UCH	UCH	Function Test	
ARKANA	UCH	UCH	Read Configuration	
ARKANA	UCH	UCH	Actuation Test	
ARKANA	UCH	UCH	Write Configuration	CF036 SELECTIVE OPENING OF DOORS
ARKANA	UCH	UCH	Write Configuration	CF015 ILLUMINATE HAZARD LAMPS UPON IMPACT
ARKANA	UCH	UCH	Write Configuration	CF014 DAYTIME RUNNING LIGHTS
ARKANA	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
ARKANA	UCH	UCH	Write Configuration	CF315 POWER BACK DOOR
ARKANA	UCH	UCH	Write Configuration	CF317 AUTOMATIC HIGH/LOW BEAM
ARKANA	UCH	UCH	Other Configuration	VPO01 WRITE V.I.N.
ARKANA	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
EXPRESS II	INJECTION	EMS 3125 INJECTION	Read Fault Code	
EXPRESS II	INJECTION	EMS 3125 INJECTION	Erase Fault Code	
EXPRESS II	INJECTION	EMS 3125 INJECTION	Read ECU Information	
EXPRESS II	INJECTION	EMS 3125 INJECTION	Live Data	
EXPRESS II	INJECTION	EMS 3125 INJECTION	Read Configuration	
EXPRESS II	INJECTION	EMS 3125 INJECTION	Actuation Test	
EXPRESS II	INJECTION	MDG1 INJECTION	Read Fault Code	
EXPRESS II	INJECTION	MDG1 INJECTION	Erase Fault Code	
EXPRESS II	INJECTION	MDG1 INJECTION	Read ECU Information	
EXPRESS II	INJECTION	MDG1 INJECTION	Live Data	
EXPRESS II	INJECTION	MDG1 INJECTION	Read Configuration	
EXPRESS II	INJECTION	MDG1 INJECTION	Actuation Test	
EXPRESS II	INJECTION	EMS 3160 INJECTION	Read Fault Code	
EXPRESS II	INJECTION	EMS 3160 INJECTION	Erase Fault Code	
EXPRESS II	INJECTION	EMS 3160 INJECTION	Read ECU Information	
EXPRESS II	INJECTION	EMS 3160 INJECTION	Live Data	
EXPRESS II	INJECTION	EMS 3160 INJECTION	Read Configuration	
EXPRESS II	INJECTION	EMS 3160 INJECTION	Actuation Test	
EXPRESS II	INJECTION	STD 310 INJECTION	Read Fault Code	
EXPRESS II	INJECTION	STD 310 INJECTION	Erase Fault Code	
EXPRESS II	INJECTION	STD 310 INJECTION	Read ECU Information	
EXPRESS II	INJECTION	STD 310 INJECTION	Live Data	
EXPRESS II	INJECTION	STD 310 INJECTION	Read Configuration	
EXPRESS II	INJECTION	STD 310 INJECTION	Actuation Test	
EXPRESS II	ABS	ABS	Read Fault Code	

EXPRESS II	ABS	ABS	Erase Fault Code	
EXPRESS II	ABS	ABS	Read ECU Information	
EXPRESS II	ABS	ABS	Live Data	
EXPRESS II	ABS	ABS	Actuation Test	
EXPRESS II	ABS	ABS	Read Configuration	
EXPRESS II	ABS	ABS	Other Configuration	VP001 WRITE VIN
EXPRESS II	ABS	ABS	Other Configuration	VP003 STEERING WHEEL ANGLE SENSOR
EXPRESS II	ABS	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
EXPRESS II	ABS	ABS	Other Configuration	VP007 SPEEDO INDEX
EXPRESS II	ABS	ABS	Other Configuration	VP045 HILL START
EXPRESS II	ABS	ABS	Erase	RZ001 FAULT MEMORY
EXPRESS II	ABS	ABS	Erase	RZ007 STEERING WHEEL ANGLE OFFSET SENSOR
EXPRESS II	ABS	ABS	Erase	RZ008 TRANSVERSE ACCELERATION OFFSET SENSOR
EXPRESS II	ABS	ABS	Erase	RZ009 BRAKE PRESSURE OFFSET SENSOR
EXPRESS II	ABS	ABS	Erase	RZ010 LONGITUDINAL ACCELERATION SENSOR OFFSET
EXPRESS II	ABS	ABS	Erase	RZ012 RESET
EXPRESS II	ABS	ABS	Configuration	SC001 CHECK TARGET TEETH
EXPRESS II	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
EXPRESS II	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
EXPRESS II	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
EXPRESS II	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
EXPRESS II	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
EXPRESS II	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
EXPRESS II	UCH	UCH	Read Fault Code	
EXPRESS II	UCH	UCH	Erase Fault Code	
EXPRESS II	UCH	UCH	Read ECU Information	
EXPRESS II	UCH	UCH	Live Data	
EXPRESS II	UCH	UCH	Read Configuration	
EXPRESS II	UCH	UCH	Actuation Test	
EXPRESS II	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
EXPRESS II	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
EXPRESS II	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
EXPRESS II	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
EXPRESS II	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
EXPRESS II	AIRBAG / PRETENSIONERS	AIRBAG	Actuation Test	
EXPRESS II	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Fault Code	
EXPRESS II	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Erase Fault Code	
EXPRESS II	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read ECU Information	
EXPRESS II	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Live Data	
EXPRESS II	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Configuration	
EXPRESS II	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Actuation Test	
EXPRESS II	POWER ASSISTED STEERING	PAS PUMP ASS.	Read Fault Code	
EXPRESS II	POWER ASSISTED STEERING	PAS PUMP ASS.	Erase Fault Code	
EXPRESS II	POWER ASSISTED STEERING	PAS PUMP ASS.	Read ECU Information	
EXPRESS II	POWER ASSISTED STEERING	PAS PUMP ASS.	Live Data	
EXPRESS II	POWER ASSISTED STEERING	PAS PUMP ASS.	Other Configuration	VP001 WRITE VIN
EXPRESS II	POWER ASSISTED STEERING	PAS PUMP ASS.	Other Configuration	VP005 WRITE DATE OF AFTER SALES OPERATION
EXPRESS II	UPC	UPC	Read Fault Code	
EXPRESS II	UPC	UPC	Erase Fault Code	
EXPRESS II	UPC	UPC	Read ECU Information	
EXPRESS II	UPC	UPC	Live Data	
EXPRESS II	UPC	UPC	Actuation Test	
EXPRESS II	PARKING PROX CAN	PARKING AID	Read Fault Code	
EXPRESS II	PARKING PROX CAN	PARKING AID	Erase Fault Code	
EXPRESS II	PARKING PROX CAN	PARKING AID	Read ECU Information	
EXPRESS II	PARKING PROX CAN	PARKING AID	Live Data	
EXPRESS II	PARKING PROX CAN	PARKING AID	Read Configuration	
EXPRESS II	PARKING PROX CAN	PARKING AID	Actuation Test	
EXPRESS II	RADIO	RADIO	Read Fault Code	
EXPRESS II	RADIO	RADIO	Erase Fault Code	
EXPRESS II	RADIO	RADIO	Read ECU Information	
EXPRESS II	RADIO	RADIO	Live Data	
EXPRESS II	RADIO	RADIO	Read Configuration	
EXPRESS II	RADIO	RADIO	Actuation Test	
EXPRESS II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
EXPRESS II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
EXPRESS II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
EXPRESS II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
EXPRESS II	UREA DOSING CONTROL MODUL	UREA DOSING CONTROL MODULE	Read Fault Code	
EXPRESS II	UREA DOSING CONTROL MODUL	UREA DOSING CONTROL MODULE	Erase Fault Code	
EXPRESS II	UREA DOSING CONTROL MODUL	UREA DOSING CONTROL MODULE	Read ECU Information	
EXPRESS II	UREA DOSING CONTROL MODUL	UREA DOSING CONTROL MODULE	Live Data	
EXPRESS II	UREA DOSING CONTROL MODUL	UREA DOSING CONTROL MODULE	Actuation Test	
EXPRESS II	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Fault Code	
EXPRESS II	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase Fault Code	
EXPRESS II	HANDS-FREE MODULE	HANDS-FREE MODULE	Read ECU Information	
EXPRESS II	HANDS-FREE MODULE	HANDS-FREE MODULE	Live Data	
EXPRESS II	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Configuration	
EXPRESS II	HANDS-FREE MODULE	HANDS-FREE MODULE	Actuation Test	
EXPRESS II	HANDS-FREE MODULE	HANDS-FREE MODULE	Write Configuration	CF035 TELEPHONE INDUCTION CHARGER
EXPRESS II	HANDS-FREE MODULE	HANDS-FREE MODULE	Write Configuration	CF031 REMOTE LOCKING BUZZER
EXPRESS II	HANDS-FREE MODULE	HANDS-FREE MODULE	Other Configuration	VP002 WRITE V.I.N.
EXPRESS II	CENTRAL GATEWAY	CENTRAL GATEWAY	Read Fault Code	
EXPRESS II	CENTRAL GATEWAY	CENTRAL GATEWAY	Erase Fault Code	
EXPRESS II	CENTRAL GATEWAY	CENTRAL GATEWAY	Read ECU Information	
EXPRESS II	CENTRAL GATEWAY	CENTRAL GATEWAY	Live Data	
EXPRESS II	CENTRAL GATEWAY	CENTRAL GATEWAY	Read Configuration	
SANDERO/LOGAN III FAMILY	INJECTION	MDG1 INJECTION	Read Fault Code	
SANDERO/LOGAN III FAMILY	INJECTION	MDG1 INJECTION	Erase Fault Code	
SANDERO/LOGAN III FAMILY	INJECTION	MDG1 INJECTION	Read ECU Information	
SANDERO/LOGAN III FAMILY	INJECTION	MDG1 INJECTION	Live Data	
SANDERO/LOGAN III FAMILY	INJECTION	MDG1 INJECTION	Read Configuration	
SANDERO/LOGAN III FAMILY	INJECTION	MDG1 INJECTION	Actuation Test	
SANDERO/LOGAN III FAMILY	INJECTION	INJECTION	Read Fault Code	
SANDERO/LOGAN III FAMILY	INJECTION	INJECTION	Erase Fault Code	
SANDERO/LOGAN III FAMILY	INJECTION	INJECTION	Read ECU Information	
SANDERO/LOGAN III FAMILY	INJECTION	INJECTION	Live Data	
SANDERO/LOGAN III FAMILY	INJECTION	INJECTION	Actuation Test	
SANDERO/LOGAN III FAMILY	INJECTION	EMS 3140 INJECTION	Read Fault Code	
SANDERO/LOGAN III FAMILY	INJECTION	EMS 3140 INJECTION	Erase Fault Code	
SANDERO/LOGAN III FAMILY	INJECTION	EMS 3140 INJECTION	Read ECU Information	
SANDERO/LOGAN III FAMILY	INJECTION	EMS 3140 INJECTION	Live Data	
SANDERO/LOGAN III FAMILY	INJECTION	EMS 3140 INJECTION	Read Configuration	
SANDERO/LOGAN III FAMILY	INJECTION	EMS 3140 INJECTION	Actuation Test	
SANDERO/LOGAN III FAMILY	INJECTION	EMS 3160 INJECTION	Read Fault Code	
SANDERO/LOGAN III FAMILY	INJECTION	EMS 3160 INJECTION	Erase Fault Code	
SANDERO/LOGAN III FAMILY	INJECTION	EMS 3160 INJECTION	Read ECU Information	

SANDERO/LOGAN III FAMILY	INJECTION	EMS 3160 INJECTION	Live Data	
SANDERO/LOGAN III FAMILY	INJECTION	EMS 3160 INJECTION	Read Configuration	
SANDERO/LOGAN III FAMILY	INJECTION	EMS 3160 INJECTION	Actuation Test	
SANDERO/LOGAN III FAMILY	INJECTION	EMS 3160 INJECTION	Write Configuration	CF196 STOP AND START FUNCTION
SANDERO/LOGAN III FAMILY	INJECTION	EMS 3160 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
SANDERO/LOGAN III FAMILY	INJECTION	EMS 3160 INJECTION	Other Configuration	VP010 WRITE V.I.N.
SANDERO/LOGAN III FAMILY	INJECTION	EMS 3160 INJECTION	Other Configuration	VP073 FUEL PUMP FORCED CONVERSION
SANDERO/LOGAN III FAMILY	INJECTION	EMS 3160 INJECTION	Other Configuration	VP404 BSG SETPOINT VOLTAGE
SANDERO/LOGAN III FAMILY	INJECTION	EMS 3160 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
SANDERO/LOGAN III FAMILY	INJECTION	EMS 3160 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
SANDERO/LOGAN III FAMILY	INJECTION	EMS 3160 INJECTION	Erase	RZ091 WASTE GATE REGULATION
SANDERO/LOGAN III FAMILY	INJECTION	EMS 3160 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
SANDERO/LOGAN III FAMILY	INJECTION	EMS 3160 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
SANDERO/LOGAN III FAMILY	INJECTION	EMS 3160 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
SANDERO/LOGAN III FAMILY	INJECTION	EMS 3160 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
SANDERO/LOGAN III FAMILY	INJECTION	EMS 3160 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
SANDERO/LOGAN III FAMILY	INJECTION	EMS 3160 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
SANDERO/LOGAN III FAMILY	INJECTION	EMS 3160 INJECTION	Configuration	SC001 WRITE SAVED DATA
SANDERO/LOGAN III FAMILY	INJECTION	EMS 3160 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
SANDERO/LOGAN III FAMILY	INJECTION	EMS 3160 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
SANDERO/LOGAN III FAMILY	INJECTION	EMS 3160 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
SANDERO/LOGAN III FAMILY	INJECTION	EMS 3160 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
SANDERO/LOGAN III FAMILY	INJECTION	EMS 3160 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
SANDERO/LOGAN III FAMILY	INJECTION	EMS 3160 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
SANDERO/LOGAN III FAMILY	ABS	ABS	Read Fault Code	
SANDERO/LOGAN III FAMILY	ABS	ABS	Erase Fault Code	
SANDERO/LOGAN III FAMILY	ABS	ABS	Read ECU Information	
SANDERO/LOGAN III FAMILY	ABS	ABS	Live Data	
SANDERO/LOGAN III FAMILY	ABS	ABS	Read Configuration	
SANDERO/LOGAN III FAMILY	ABS	ABS	Actuation Test	
SANDERO/LOGAN III FAMILY	ABS	ABS	Other Configuration	VP001 WRITE VIN
SANDERO/LOGAN III FAMILY	ABS	ABS	Other Configuration	VP007 SPEEDO INDEX
SANDERO/LOGAN III FAMILY	ABS	ABS	Other Configuration	VP054 ACTIVATE MAINTENANCE MODE
SANDERO/LOGAN III FAMILY	ABS	ABS	Other Configuration	VP055 DEACTIVATE MAINTENANCE MODE
SANDERO/LOGAN III FAMILY	ABS	ABS	Other Configuration	VP060 ACCELEROMETER
SANDERO/LOGAN III FAMILY	ABS	ABS	Erase	RZ012 RESET
SANDERO/LOGAN III FAMILY	ABS	ABS	Configuration	SC001 CHECK TARGET TEETH
SANDERO/LOGAN III FAMILY	ABS	ABS	Configuration	SC010 PARKING BRAKE TYPE CONFIGURATION
SANDERO/LOGAN III FAMILY	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
SANDERO/LOGAN III FAMILY	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
SANDERO/LOGAN III FAMILY	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
SANDERO/LOGAN III FAMILY	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
SANDERO/LOGAN III FAMILY	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
SANDERO/LOGAN III FAMILY	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
SANDERO/LOGAN III FAMILY	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
SANDERO/LOGAN III FAMILY	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION
SANDERO/LOGAN III FAMILY	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF136 TYRE PRESSURE UNITS
SANDERO/LOGAN III FAMILY	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
SANDERO/LOGAN III FAMILY	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
SANDERO/LOGAN III FAMILY	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF199 COMPUTER INITIALISATION
SANDERO/LOGAN III FAMILY	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF141 OVERSPEED FUNCTION - ARABIA
SANDERO/LOGAN III FAMILY	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
SANDERO/LOGAN III FAMILY	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP052 ODOMETER IN KM
SANDERO/LOGAN III FAMILY	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP053 ODOMETER IN MILES
SANDERO/LOGAN III FAMILY	UCH	UCH	Read Fault Code	
SANDERO/LOGAN III FAMILY	UCH	UCH	Erase Fault Code	
SANDERO/LOGAN III FAMILY	UCH	UCH	Read ECU Information	
SANDERO/LOGAN III FAMILY	UCH	UCH	Live Data	
SANDERO/LOGAN III FAMILY	UCH	UCH	Read Configuration	
SANDERO/LOGAN III FAMILY	UCH	UCH	Actuation Test	
SANDERO/LOGAN III FAMILY	UCH	UCH	Write Configuration	CF036 SELECTIVE OPENING OF DOORS
SANDERO/LOGAN III FAMILY	UCH	UCH	Write Configuration	CF015 ILLUMINATE HAZARD LAMPS UPON IMPACT
SANDERO/LOGAN III FAMILY	UCH	UCH	Write Configuration	CF014 DAYTIME RUNNING LIGHTS
SANDERO/LOGAN III FAMILY	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
SANDERO/LOGAN III FAMILY	UCH	UCH	Write Configuration	CF315 POWER BACK DOOR
SANDERO/LOGAN III FAMILY	UCH	UCH	Write Configuration	CF317 AUTOMATIC HIGH/LOW BEAM
SANDERO/LOGAN III FAMILY	UCH	UCH	Other Configuration	VP001 WRITE V.I.N.
SANDERO/LOGAN III FAMILY	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
SANDERO/LOGAN III FAMILY	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
SANDERO/LOGAN III FAMILY	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
SANDERO/LOGAN III FAMILY	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
SANDERO/LOGAN III FAMILY	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
SANDERO/LOGAN III FAMILY	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
SANDERO/LOGAN III FAMILY	AIRBAG / PRETENSIONERS	AIRBAG	Actuation Test	
SANDERO/LOGAN III FAMILY	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
SANDERO/LOGAN III FAMILY	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
SANDERO/LOGAN III FAMILY	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
SANDERO/LOGAN III FAMILY	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC013 SENSOR CONFIGURATION
SANDERO/LOGAN III FAMILY	FRONT RADAR	FRONT RADAR	Read Fault Code	
SANDERO/LOGAN III FAMILY	FRONT RADAR	FRONT RADAR	Erase Fault Code	
SANDERO/LOGAN III FAMILY	FRONT RADAR	FRONT RADAR	Read ECU Information	
SANDERO/LOGAN III FAMILY	FRONT RADAR	FRONT RADAR	Live Data	
SANDERO/LOGAN III FAMILY	FRONT RADAR	FRONT RADAR	Read Configuration	
SANDERO/LOGAN III FAMILY	AIR CONDITIONING	AIR CONDITIONING	Read Fault Code	
SANDERO/LOGAN III FAMILY	AIR CONDITIONING	AIR CONDITIONING	Erase Fault Code	
SANDERO/LOGAN III FAMILY	AIR CONDITIONING	AIR CONDITIONING	Read ECU Information	
SANDERO/LOGAN III FAMILY	AIR CONDITIONING	AIR CONDITIONING	Live Data	
SANDERO/LOGAN III FAMILY	AIR CONDITIONING	AIR CONDITIONING	Actuation Test	
SANDERO/LOGAN III FAMILY	AUTOMATIC TRANSMISSION	AUTOMATIC TRANSMISSION	Read Fault Code	
SANDERO/LOGAN III FAMILY	AUTOMATIC TRANSMISSION	AUTOMATIC TRANSMISSION	Erase Fault Code	
SANDERO/LOGAN III FAMILY	AUTOMATIC TRANSMISSION	AUTOMATIC TRANSMISSION	Read ECU Information	
SANDERO/LOGAN III FAMILY	AUTOMATIC TRANSMISSION	AUTOMATIC TRANSMISSION	Live Data	
SANDERO/LOGAN III FAMILY	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Fault Code	
SANDERO/LOGAN III FAMILY	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Erase Fault Code	
SANDERO/LOGAN III FAMILY	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read ECU Information	
SANDERO/LOGAN III FAMILY	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Live Data	
SANDERO/LOGAN III FAMILY	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Configuration	
SANDERO/LOGAN III FAMILY	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Actuation Test	
SANDERO/LOGAN III FAMILY	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Write Configuration	CF002 COUNTRY MODEL
SANDERO/LOGAN III FAMILY	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Write Configuration	CF046 LANGUAGE
SANDERO/LOGAN III FAMILY	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Other Configuration	VP002 WRITE VIN
SANDERO/LOGAN III FAMILY	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Configuration	SC007 SYSTEM CONFIGURATION
SANDERO/LOGAN III FAMILY	PARKING BRAKE	PARKING BRAKE	Read Fault Code	
SANDERO/LOGAN III FAMILY	PARKING BRAKE	PARKING BRAKE	Erase Fault Code	
SANDERO/LOGAN III FAMILY	PARKING BRAKE	PARKING BRAKE	Read ECU Information	
SANDERO/LOGAN III FAMILY	PARKING BRAKE	PARKING BRAKE	Live Data	
SANDERO/LOGAN III FAMILY	PARKING BRAKE	PARKING BRAKE	Read Configuration	

SANDERO/LOGAN III FAMILY	PARKING BRAKE	PARKING BRAKE	Actuation Test	
SANDERO/LOGAN III FAMILY	SUPERVISOR or DCDC	SUPERVISOR or DCDC	Read Fault Code	
SANDERO/LOGAN III FAMILY	SUPERVISOR or DCDC	SUPERVISOR or DCDC	Erase Fault Code	
SANDERO/LOGAN III FAMILY	SUPERVISOR or DCDC	SUPERVISOR or DCDC	Read ECU Information	
SANDERO/LOGAN III FAMILY	SUPERVISOR or DCDC	SUPERVISOR or DCDC	Live Data	
SANDERO/LOGAN III FAMILY	POWER ASSISTED STEERING	POWER ASSISTED STEERING	Read Fault Code	
SANDERO/LOGAN III FAMILY	POWER ASSISTED STEERING	POWER ASSISTED STEERING	Erase Fault Code	
SANDERO/LOGAN III FAMILY	POWER ASSISTED STEERING	POWER ASSISTED STEERING	Read ECU Information	
SANDERO/LOGAN III FAMILY	POWER ASSISTED STEERING	POWER ASSISTED STEERING	Live Data	
SANDERO/LOGAN III FAMILY	UPC	UPC	Read Fault Code	
SANDERO/LOGAN III FAMILY	UPC	UPC	Erase Fault Code	
SANDERO/LOGAN III FAMILY	UPC	UPC	Read ECU Information	
SANDERO/LOGAN III FAMILY	UPC	UPC	Live Data	
SANDERO/LOGAN III FAMILY	UPC	UPC	Actuation Test	
SANDERO/LOGAN III FAMILY	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Read Fault Code	
SANDERO/LOGAN III FAMILY	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Erase Fault Code	
SANDERO/LOGAN III FAMILY	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Read ECU Information	
SANDERO/LOGAN III FAMILY	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Live Data	
SANDERO/LOGAN III FAMILY	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Actuation Test	
SANDERO/LOGAN III FAMILY	CHECK CHASSIS	CHECK CHASSIS	Read Fault Code	
SANDERO/LOGAN III FAMILY	CHECK CHASSIS	CHECK CHASSIS	Erase Fault Code	
SANDERO/LOGAN III FAMILY	CHECK CHASSIS	CHECK CHASSIS	Read ECU Information	
SANDERO/LOGAN III FAMILY	CHECK CHASSIS	CHECK CHASSIS	Live Data	
SANDERO/LOGAN III FAMILY	4 WHEELS DRIVE	4 WHEELS DRIVE	Read Fault Code	
SANDERO/LOGAN III FAMILY	4 WHEELS DRIVE	4 WHEELS DRIVE	Erase Fault Code	
SANDERO/LOGAN III FAMILY	4 WHEELS DRIVE	4 WHEELS DRIVE	Read ECU Information	
SANDERO/LOGAN III FAMILY	4 WHEELS DRIVE	4 WHEELS DRIVE	Live Data	
SANDERO/LOGAN III FAMILY	CENTRAL GATEWAY	CENTRAL GATEWAY	Read Fault Code	
SANDERO/LOGAN III FAMILY	CENTRAL GATEWAY	CENTRAL GATEWAY	Erase Fault Code	
SANDERO/LOGAN III FAMILY	CENTRAL GATEWAY	CENTRAL GATEWAY	Read ECU Information	
SANDERO/LOGAN III FAMILY	CENTRAL GATEWAY	CENTRAL GATEWAY	Live Data	
SANDERO/LOGAN III FAMILY	CENTRAL GATEWAY	CENTRAL GATEWAY	Read Configuration	
SANDERO/LOGAN III FAMILY	PARKING PROX CAN	PARKING AID	Read Fault Code	
SANDERO/LOGAN III FAMILY	PARKING PROX CAN	PARKING AID	Erase Fault Code	
SANDERO/LOGAN III FAMILY	PARKING PROX CAN	PARKING AID	Read ECU Information	
SANDERO/LOGAN III FAMILY	PARKING PROX CAN	PARKING AID	Live Data	
SANDERO/LOGAN III FAMILY	PARKING PROX CAN	PARKING AID	Read Configuration	
SANDERO/LOGAN III FAMILY	PARKING PROX CAN	PARKING AID	Actuation Test	
SANDERO/LOGAN III FAMILY	PARKING PROX CAN	PARKING AID	Write Configuration	CF001 BUZZER VOLUME
SANDERO/LOGAN III FAMILY	PARKING PROX CAN	PARKING AID	Write Configuration	CF013 REAR DETECTION
SANDERO/LOGAN III FAMILY	PARKING PROX CAN	PARKING AID	Write Configuration	CF012 FRONT DETECTION
SANDERO/LOGAN III FAMILY	PARKING PROX CAN	PARKING AID	Write Configuration	CF014 SIDE DETECTION
SANDERO/LOGAN III FAMILY	PARKING PROX CAN	PARKING AID	Write Configuration	CF006 TONE ADJUSTMENT
SANDERO/LOGAN III FAMILY	PARKING PROX CAN	PARKING AID	Other Configuration	VP003 CARAVAN TOWING DISTANCE
SANDERO/LOGAN III FAMILY	PARKING PROX CAN	PARKING AID	Other Configuration	VP001 WRITE VIN
SANDERO/LOGAN III FAMILY	TELEPHONE INDUCTION CHARGE	TELEPHONE INDUCTION CHARGER	Read Fault Code	
SANDERO/LOGAN III FAMILY	TELEPHONE INDUCTION CHARGE	TELEPHONE INDUCTION CHARGER	Erase Fault Code	
SANDERO/LOGAN III FAMILY	TELEPHONE INDUCTION CHARGE	TELEPHONE INDUCTION CHARGER	Read ECU Information	
SANDERO/LOGAN III FAMILY	TELEPHONE INDUCTION CHARGE	TELEPHONE INDUCTION CHARGER	Live Data	
SANDERO/LOGAN III FAMILY	DRIVING ASSISTANCE SUPERVISOR	DRIVING ASSISTANCE SUPERVISOR	Read Fault Code	
SANDERO/LOGAN III FAMILY	DRIVING ASSISTANCE SUPERVISOR	DRIVING ASSISTANCE SUPERVISOR	Erase Fault Code	
SANDERO/LOGAN III FAMILY	DRIVING ASSISTANCE SUPERVISOR	DRIVING ASSISTANCE SUPERVISOR	Read ECU Information	
SANDERO/LOGAN III FAMILY	DRIVING ASSISTANCE SUPERVISOR	DRIVING ASSISTANCE SUPERVISOR	Live Data	
SANDERO/LOGAN III FAMILY	BRAKE BOOSTER	BRAKE BOOSTER	Read Fault Code	
SANDERO/LOGAN III FAMILY	BRAKE BOOSTER	BRAKE BOOSTER	Erase Fault Code	
SANDERO/LOGAN III FAMILY	BRAKE BOOSTER	BRAKE BOOSTER	Read ECU Information	
SANDERO/LOGAN III FAMILY	BRAKE BOOSTER	BRAKE BOOSTER	Live Data	
SANDERO/LOGAN III FAMILY	HIGH VOLTAGE STARTING GENERATOR	HIGH VOLTAGE STARTING GENERATOR	Read Fault Code	
SANDERO/LOGAN III FAMILY	HIGH VOLTAGE STARTING GENERATOR	HIGH VOLTAGE STARTING GENERATOR	Erase Fault Code	
SANDERO/LOGAN III FAMILY	HIGH VOLTAGE STARTING GENERATOR	HIGH VOLTAGE STARTING GENERATOR	Read ECU Information	
SANDERO/LOGAN III FAMILY	HIGH VOLTAGE STARTING GENERATOR	HIGH VOLTAGE STARTING GENERATOR	Live Data	
SANDERO/LOGAN III FAMILY	ELECTRIC TRACTION MOTOR	ELECTRIC TRACTION MOTOR	Read Fault Code	
SANDERO/LOGAN III FAMILY	ELECTRIC TRACTION MOTOR	ELECTRIC TRACTION MOTOR	Erase Fault Code	
SANDERO/LOGAN III FAMILY	ELECTRIC TRACTION MOTOR	ELECTRIC TRACTION MOTOR	Read ECU Information	
SANDERO/LOGAN III FAMILY	ELECTRIC TRACTION MOTOR	ELECTRIC TRACTION MOTOR	Live Data	
SANDERO/LOGAN III FAMILY	VEHICLE SOUND FOR PEDESTRIAN	VEHICLE SOUND FOR PEDESTRIAN	Read Fault Code	
SANDERO/LOGAN III FAMILY	VEHICLE SOUND FOR PEDESTRIAN	VEHICLE SOUND FOR PEDESTRIAN	Erase Fault Code	
SANDERO/LOGAN III FAMILY	VEHICLE SOUND FOR PEDESTRIAN	VEHICLE SOUND FOR PEDESTRIAN	Read ECU Information	
SANDERO/LOGAN III FAMILY	VEHICLE SOUND FOR PEDESTRIAN	VEHICLE SOUND FOR PEDESTRIAN	Actuation Test	
SANDERO/LOGAN III FAMILY	RADIO	RADIO	Read Fault Code	
SANDERO/LOGAN III FAMILY	RADIO	RADIO	Erase Fault Code	
SANDERO/LOGAN III FAMILY	RADIO	RADIO	Read ECU Information	
SANDERO/LOGAN III FAMILY	RADIO	RADIO	Live Data	
SANDERO/LOGAN III FAMILY	RADIO	RADIO	Read Configuration	
SANDERO/LOGAN III FAMILY	RADIO	RADIO	Actuation Test	
SANDERO/LOGAN III FAMILY	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
SANDERO/LOGAN III FAMILY	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
SANDERO/LOGAN III FAMILY	RADIO	RADIO	Other Configuration	VP039 COMPUTER INITIALISATION
SANDERO/LOGAN III FAMILY	RADIO	RADIO	Configuration	SC002 COMPUTER CONFIGURATION
SANDERO/LOGAN III FAMILY	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
SANDERO/LOGAN III FAMILY	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
SANDERO/LOGAN III FAMILY	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
SANDERO/LOGAN III FAMILY	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
SANDERO/LOGAN III FAMILY	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read Fault Code	
SANDERO/LOGAN III FAMILY	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase Fault Code	
SANDERO/LOGAN III FAMILY	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read ECU Information	
SANDERO/LOGAN III FAMILY	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Live Data	
SANDERO/LOGAN III FAMILY	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Actuation Test	
SANDERO/LOGAN III FAMILY	BMS 12V	BMS 12V	Read Fault Code	
SANDERO/LOGAN III FAMILY	BMS 12V	BMS 12V	Erase Fault Code	
SANDERO/LOGAN III FAMILY	BMS 12V	BMS 12V	Read ECU Information	
SANDERO/LOGAN III FAMILY	BMS 12V	BMS 12V	Live Data	
SANDERO/LOGAN III FAMILY	BMS 12V	BMS 12V	Other Configuration	VP002 ENTER VIN CODE
SANDERO/LOGAN III FAMILY	BMS 12V	BMS 12V	Other Configuration	VP006 12 V LITHIUM BATTERY RELAY OPENING
SANDERO/LOGAN III FAMILY	BMS 12V	BMS 12V	Other Configuration	VP005 12 V LITHIUM BATTERY RELAY CLOSING
SANDERO/LOGAN III FAMILY	BMS 12V	BMS 12V	Erase	RZ002 ECU MEMORY
SANDERO/LOGAN III FAMILY	BMS 12V	BMS 12V	Erase	RZ003 COMPUTER RESET
SANDERO/LOGAN III FAMILY	BMS	BMS	Read Fault Code	
SANDERO/LOGAN III FAMILY	BMS	BMS	Erase Fault Code	
SANDERO/LOGAN III FAMILY	BMS	BMS	Read ECU Information	
SANDERO/LOGAN III FAMILY	BMS	BMS	Live Data	
SANDERO/LOGAN III FAMILY	BMS	BMS	Read Configuration	
SANDERO/LOGAN III FAMILY	EVC	EVC	Read Fault Code	
SANDERO/LOGAN III FAMILY	EVC	EVC	Erase Fault Code	
SANDERO/LOGAN III FAMILY	EVC	EVC	Read ECU Information	
SANDERO/LOGAN III FAMILY	EVC	EVC	Live Data	
SANDERO/LOGAN III FAMILY	EVC	EVC	Read Configuration	

SANDERO/LOGAN III FAMILY	EVC	EVC	Actuation Test	
SANDERO/LOGAN III FAMILY	BMS SAFETY	BMS SAFETY	Read Fault Code	
SANDERO/LOGAN III FAMILY	BMS SAFETY	BMS SAFETY	Erase Fault Code	
SANDERO/LOGAN III FAMILY	BMS SAFETY	BMS SAFETY	Read ECU Information	
SANDERO/LOGAN III FAMILY	BMS SAFETY	BMS SAFETY	Live Data	
SANDERO/LOGAN III FAMILY	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Fault Code	
SANDERO/LOGAN III FAMILY	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase Fault Code	
SANDERO/LOGAN III FAMILY	HANDS-FREE MODULE	HANDS-FREE MODULE	Read ECU Information	
SANDERO/LOGAN III FAMILY	HANDS-FREE MODULE	HANDS-FREE MODULE	Live Data	
SANDERO/LOGAN III FAMILY	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Configuration	
SANDERO/LOGAN III FAMILY	HANDS-FREE MODULE	HANDS-FREE MODULE	Actuation Test	
SANDERO/LOGAN III FAMILY	HANDS-FREE MODULE	HANDS-FREE MODULE	Write Configuration	CF035 TELEPHONE INDUCTION CHARGER
SANDERO/LOGAN III FAMILY	HANDS-FREE MODULE	HANDS-FREE MODULE	Write Configuration	CF031 REMOTE LOCKING BUZZER
SANDERO/LOGAN III FAMILY	HANDS-FREE MODULE	HANDS-FREE MODULE	Other Configuration	VP002 WRITE V.I.N.