

Diagnostic List iveco_v6.62

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color.

Model	System	System	Function					
			ECU Information	Read Dtc	Clear Dtc	Live Stream	Actuation test	Remark
IVECO	Daily	EDC 16 BOSCH	√	-	√	√	√	-
IVECO	Daily	EDC MS6.3 BOSCH	√	√	√	√	√	-
IVECO	Daily	ABS8/ASR8/ESP8 BOSCH	√	√	√	√	-	-
IVECO	Daily	BOSCH ABS 8.0	√	√	√	√	√	Special Function
IVECO	Daily	BOSCH ABS 8.0.1	-	√	√	√	-	Special Function
IVECO	Daily	ABS 9	√	√	√	√	√	Special Function
IVECO	Daily	5SF Methane CNG – ECM(beta version)	√	√	√	√	√	-
IVECO	Daily	Bosch EDC 16 C39(beta version)	-	√	√	√	√	√
IVECO	Daily	BOSCH EDC 16C39(KL)	-	-	-	-	-	Special Function
IVECO	Daily	Bosch EDC 17(beta version)	√	√	√	√	√	-
IVECO	Daily	BOSCH EDC 17C49(CAN)	√	√	√	√	√	Special Function
IVECO	Daily	ABS 5.3(beta version)	√	√	√	√	-	-
IVECO	Daily	ABS 8/ASR 8/ESP 8 Bosch CAN(beta version)	√	√	√	√	√	-
IVECO	Daily	Marelli dashboard(beta version)	√	√	√	√	-	-
IVECO	Daily	Webasto TT(beta version)	√	√	√	√	√	-
IVECO	Daily	ESV1 Agile CAN(beta version)	-	√	√	√	-	-
IVECO	Daily	Airbag Autoliv(beta version)	√	√	√	√	√	-
IVECO	Daily	Marelli(beta version)	√	√	√	√	√	-
IVECO	Daily	DTCO VDO(beta version)	√	√	√	√	-	-
IVECO	Daily	Wabco type ecas(beta version)	√	-	-	√	-	-
IVECO	Daily	Webasto TT heater-AHCU(beta version)	√	√	√	√	√	-
IVECO	Daily	Body computer marelli-BCM(beta version)	√	√	√	√	-	-
IVECO	Daily	Wabco type ecas – ASCU(beta version)	√	-	-	√	-	-
IVECO	Daily	ABS9/ASR9/ESP9-BSM(beta version)	√	√	√	√	√	-
IVECO	Daily	Marelli dashboard-IPC(beta version)	√	√	√	√	-	-
IVECO	Daily	Airbag Autoliv-SDM(beta version)	√	√	√	√	√	-
IVECO	Daily	8HP ZF-ATC	√	√	√	√	-	-
IVECO	Daily	ESV1 Agile(beta version)	-	√	√	√	-	-
IVECO	Daily	TRW SDM(CAN)	√	√	√	√	√	-
IVECO	Daily	CLIMATRONIC(CAN)	√	√	√	√	√	Special Function
IVECO	Daily	CONTINENTAL IPC(CAN)	√	√	√	√	√	-
IVECO	Daily	MARELLI BCM(CAN)	√	√	√	√	√	-
IVECO	Daily	RADIO(CAN)	√	√	√	√	√	-
IVECO	Daily	BOSCH PAM(CAN)	√	√	√	√	-	-
IVECO	Daily	LDWS(CAN)	√	√	√	√	√	-
IVECO	Eurocargo	EDC 7 BOSCH	√	√	√	√	-	Activate diagnosis
IVECO	EuroCargo	Bosch EDC 17 CV 41	√	√	√	√	√	Forced regeneration: normal mode
IVECO	Eurocargo	ABS 2X Knorr-BOSCH	√	√	√	√	√	-
IVECO	Eurocargo	ECAS EUROCARGO RESTYLING	√	√	√	√	√	-
IVECO	Eurocargo	IBC EUROCARGO NEW	√	√	√	√	√	-

Diagnostic List iveco_v6.62

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color.

Model	System	System	Function						Remark
			ECU Information	Read Dtc	Clear Dtc	Live Stream	Actuation test		
IVECO	Eurocargo	IC EUROCARGO NEW	√	√	√	√	√	-	

Diagnostic List iveco_v6.62

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color.

Model	System	System	Function					
			ECU Information	Read Dtc	Clear Dtc	Live Stream	Actuation test	Remark
IVECO	Eurocargo	EDC MS6.2 BOSCH	√	√	√	√	√	-
IVECO	Eurocargo	DeNoxtronic 2	√	√	√	√	-	Activate diagnosis
IVECO	Eurocargo	VCM- anti-theft system	√	√	√	√	√	-
IVECO	Eurocargo	Extended module	√	√	√	√	-	-
IVECO	Eurocargo	IVECO body controller	√	√	√	√	√	-
IVECO	Eurocargo	Instrument cluster	√	√	√	√	√	-
IVECO	Eurocargo	Driver's door module	√	√	√	√	√	-
IVECO	Eurocargo	Passenger's door module	√	√	√	√	√	-
IVECO	Eurocargo	Bosch 2x(beta version)	√	√	√	√	√	-
IVECO	Eurocargo	Wabco C3(beta version)	√	√	√	√	-	-
IVECO	Eurocargo	Bosch EDC unlock 3(beta version)	√	-	-	-	√	-
IVECO	Eurocargo	Wabco ECAS All configurations(beta version)	√	√	√	-	√	-
IVECO	Eurocargo	Wabco Iveco ECAS 4x2 FP(beta version)	√	√	√	√	√	-
IVECO	Eurocargo	Wabco Iveco ECAS 4x2 P Tractors(beta version)	√	√	√	√	√	-
IVECO	Eurocargo	Wabco Iveco ECAS 4x2 P Trucks(beta version)	√	√	√	√	√	-
IVECO	Eurocargo	Denoxtronic(beta version)	√	√	√	√	√	-
IVECO	Eurocargo	Denoxtronic 2(beta version)	√	√	√	√	√	-
IVECO	Eurocargo	EDC 7 UC31(beta version)	√	√	√	√	√	-
IVECO	Eurocargo	Abs 6 Bosch-knorr(beta version)	√	√	√	√	√	-
IVECO	Eurocargo	Instrument cluster(beta version)	√	√	√	√	√	-
IVECO	Eurocargo	Air heater(beta version)	√	√	√	√	√	-
IVECO	Eurocargo	Astronic lite(beta version)	√	√	√	√	-	-
IVECO	Eurocargo	Driver Door Module(beta version)	√	√	√	√	√	-
IVECO	Eurocargo	Iveco body controller(beta version)	√	√	√	√	√	-
IVECO	Eurocargo	Passenger Door Module(beta version)	√	√	√	√	√	-
IVECO	Eurocargo	VCM-Immobilizer(beta version)	√	√	√	√	-	-
IVECO	Eurocargo	Ecas Eurocargo Restyling(beta version)	√	√	√	√	√	-
IVECO	Eurocargo	Bosch Denoxtronic 2 Diagnosis	√	√	√	√	√	-
IVECO	EuroMover	Wabco D E E2(beta version)	√	√	√	√	√	-
IVECO	EuroMover	Wabco EBS Iveco protocol(beta version)	√	√	√	√	√	-
IVECO	EuroMover	Wabco EBS Wabco protocol(beta version)	√	√	√	√	√	-
IVECO	EuroMover	Bosch EDC unlock 3(beta version)	√	-	-	-	√	-
IVECO	stralis	EDC MS6.2 BOSCH	√	√	√	√	√	-
IVECO	stralis	EBS WABCO	√	√	√	√	√	-
IVECO	stralis	EUROTRONIC 2	√	√	√	√	√	-
IVECO	stralis	ECAS UABCO CAN	√	√	√	√	√	-

Diagnostic List iveco_v6.62

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color.

Model	System	System	Function					
			ECU Information	Read Dtc	Clear Dtc	Live Stream	Actuation test	Remark
IVECO	stralis	Body ECU	√	√	√	√	√	-
IVECO	stralis	Driver's door module	√	√	√	√	√	-
IVECO	stralis	Front frame ECU	√	√	√	√	√	-
IVECO	stralis	Passenger's door module	√	√	√	√	√	-

Diagnostic List iveco_v6.62

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color.

Model	System	System	Function					
			ECU Information	Read Dtc	Clear Dtc	Live Stream	Actuation test	Remark
IVECO	stralis	WABCO-IVTM	√	√	√	√	-	-
IVECO	stralis	Instrument cluster	√	√	√	√	√	-
IVECO	stralis	Air heater (STRALIS)	√	√	√	√	-	-
IVECO	stralis	DeNoxtronic	√	√	√	√	√	-
IVECO	stralis	DeNoxtronic 2	√	√	√	√	-	Activate diagnosis
IVECO	stralis	VCM- anti-theft system	√	√	√	√	√	-
IVECO	stralis	EDC 7 UC31	√	√	√	√	√	-
IVECO	stralis	CAB module	√	-	-	√	√	-
IVECO	stralis	Body ECU 2	√	√	√	√	√	-
IVECO	stralis	Rear frame ECU	√	√	√	√	√	-
IVECO	stralis	Denoxtronic(beta version)	√	√	√	√	√	-
IVECO	stralis	Denoxtronic 2(beta version)	√	√	√	√	√	-
IVECO	stralis	EDC 7 UC31(beta version)	√	√	√	√	√	-
IVECO	stralis	Abs Wabco D/E/E2(beta version)	-	√	√	√	√	-
IVECO	stralis	Ebs/Ebs 2(beta version)	√	√	√	√	√	-
IVECO	stralis	Instrument cluster(beta version)	√	√	√	√	√	-
IVECO	stralis	Air heater(beta version)	√	√	√	√	√	-
IVECO	stralis	Water heater(beta version)	√	√	√	√	√	-
IVECO	stralis	Eurotronic 2(beta version)	-	-	-	-	√	-
IVECO	stralis	Driver Door Module(beta version)	-	√	√	√	√	-
IVECO	stralis	Passenger Door Module(beta version)	-	√	√	√	√	-
IVECO	stralis	Body computer(beta version)	-	√	√	√	√	-
IVECO	stralis	Front interface module(beta version)	-	√	√	√	√	-
IVECO	stralis	Rear interface module	-	√	√	√	√	-
IVECO	stralis	VCM-Immobilizer(beta version)	-	√	√	√	√	-
IVECO	stralis	Ecas Wabco can(beta version)	√	√	√	√	√	-
IVECO	stralis	EDC 17CV41	√	√	√	√	√	-
IVECO	stralis (Euro 6)	VCM	√	√	√	√	√	-
IVECO	stralis (Euro 6)	INSTRUMENT CLUSTER	-	√	√	√	√	-
IVECO	stralis (Euro 6)	BODY COMPUTER 2	√	√	√	√	√	-
IVECO	stralis (Euro 6)	Allison CAN Gen 4	√	√	√	√	-	-
IVECO	stralis (Euro 6)	Allison CAN Gen 5	√	√	√	√	-	-
IVECO	stralis (Euro 6)	ZF EUROTRONIC 2	√	√	√	√	√	-
IVECO	stralis (Euro 6)	DRIVE DOOR MODULE	-	√	√	√	√	-
IVECO	stralis (Euro 6)	PASSENGER DOOR MODULE	-	√	√	√	√	-
IVECO	stralis (Euro 6)	EBERSPACHER MANUAL PROCED.D1LCC/D3LCC	-	√	√	-	-	-
IVECO	stralis (Euro 6)	WEBASTO MANUAL PROCED.AIRTOP	-	√	√	-	-	-
IVECO	stralis (Euro 6)	AIR HEATER	√	√	√	√	√	-
IVECO	stralis (Euro 6)	FRONT LIGHTS MODULE	√	√	√	√	√	-

Diagnostic List iveco_v6.62

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color.

Model	System	System	Function					
			ECU Information	Read Dtc	Clear Dtc	Live Stream	Actuation test	Remark
IVECO	stralis (Euro 6)	REAR LIGHTS MODULE	√	√	√	√	√	-
IVECO	stralis (Euro 5)	BOSCH EDC 7 UC 31	√	√	√	√	√	-
IVECO	stralis (Euro 5)	WEBASTO	-	√	√	√	√	-

Diagnostic List iveco_v6.62

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color.

Model	System	System	Function					
			ECU Information	Read Dtc	Clear Dtc	Live Stream	Actuation test	Remark
IVECO	stralis (Euro 5)	VCM	√	√	√	√	√	-
IVECO	stralis (Euro 5)	INSTRUMENT CLUSTER	-	√	√	√	√	-
IVECO	stralis (Euro 5)	BODY COMPUTER 2	√	√	√	√	√	-
IVECO	stralis (Euro 5)	ALLISON GEN 4	-	√	√	√	√	-
IVECO	stralis (Euro 5)	ZF EUROTRONIC 2	√	√	√	√	√	-
IVECO	stralis (Euro 5)	WABCO ECAS 4X2	√	√	√	√	√	√
IVECO	stralis (Euro 5)	WABCO ECAS 6X2/6X4	√	√	√	√	√	√
IVECO	stralis (Euro 5)	WABCO ECAS CAN 4X2	√	√	√	√	√	√
IVECO	stralis (Euro 5)	WABCO ECAS CAN 6X2/6X4	√	√	√	√	√	√
IVECO	stralis (Euro 5)	WABCO D/E/E2	-	√	√	√	√	-
IVECO	stralis (Euro 5)	DRIVE DOOR MODULE	-	√	√	√	√	-
IVECO	stralis (Euro 5)	PASSENGER DOOR MODULE	-	√	√	√	√	-
IVECO	stralis (Euro 5)	EBERSPACHER MANUAL PROCED. D1LCC/D3LCC	-	√	√	-	-	-
IVECO	stralis (Euro 5)	WEBASTO MANUAL PROCED. AIRTOP 2000	-	√	√	-	-	-
IVECO	stralis (Euro 5)	WEBASTO MANUAL PROCED. AIRTOP 3500/5000	-	√	√	-	-	-
IVECO	stralis (Euro 5)	WABCO EBS	-	√	√	√	√	-
IVECO	stralis (Euro 5)	WABCO EBS 2	√	√	√	√	√	-
IVECO	stralis (Euro 5)	AIR HEATER	√	√	√	√	√	-
IVECO	stralis (Euro 5)	DENOXTRONIC 2	√	√	√	√	√	-
IVECO	stralis (Euro 5)	FRONT LIGHTS MODULE FFC	√	√	√	√	√	-
IVECO	stralis (Euro 5)	REAR LIGHTS MODULE RFC	√	√	√	√	√	-
IVECO	stralis (Euro 5)	WABCO EACS 4X2	√	√	√	√	√	√
IVECO	stralis (Euro 5)	WABCO ECAS CAN 4X2	√	√	√	√	√	√
IVECO	Trakker	EDC MS6.2 BOSCH VERSION 1	√	√	√	√	√	-
IVECO	Trakker	EDC MS6.2 BOSCH VERSION 2	√	√	√	√	√	-
IVECO	Trakker	EUROTRONIC 2	√	√	√	√	√	-
IVECO	Trakker	ECAS UABCO CAN	√	√	√	√	√	-
IVECO	Trakker	Body ECU Trakker	√	√	√	√	√	-
IVECO	Trakker	CAB module	√	-	-	√	√	-
IVECO	Trakker	Driver's door module	√	√	√	√	√	-
IVECO	Trakker	Front frame ECU	√	√	√	√	√	-
IVECO	Trakker	Passenger's door module	√	√	√	√	√	-
IVECO	Trakker	Rear frame ECU	√	√	√	√	√	-
IVECO	Trakker	Instrument cluster	√	√	√	√	√	-
IVECO	Trakker	VCM- anti-theft system	√	√	√	√	√	-
IVECO	Trakker	Extended module	√	√	√	√	-	-
IVECO	Trakker	Trakker chassis electronic module	√	√	√	√	-	-
IVECO	Trakker	IVECO body controller	√	√	√	√	√	-
IVECO	Trakker	IC (Instrument cluster) TRAKKER	√	√	√	√	√	-

Diagnostic List iveco_v6.62

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color.

Model	System	System	Function						Remark
			ECU Information	Read Dtc	Clear Dtc	Live Stream	Actuation test		
IVECO	Trakker	DeNoxtronic 2	√	√	√	√	-	Activate diagnosis	

Diagnostic List iveco_v6.62

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color.

Model	System	System	Function					
			ECU Information	Read Dtc	Clear Dtc	Live Stream	Actuation test	Remark
IVECO	Trakker	Denoxtronic(beta version)	√	√	√	√	√	-
IVECO	Trakker	Denoxtronic 2(beta version)	√	√	√	√	√	-
IVECO	Trakker	EDC 7 UC31(beta version)	√	√	√	√	√	-
IVECO	Trakker	Abs Wabco D/E/E2(beta version)	-	√	√	√	√	-
IVECO	Trakker	Ebs/Ebs 2(beta version)	√	√	√	√	√	-
IVECO	Trakker	Instrument cluster(beta version)	√	√	√	√	√	-
IVECO	Trakker	Air heater(beta version)	√	√	√	√	√	-
IVECO	Trakker	Water heater(beta version)	√	√	√	√	√	-
IVECO	Trakker	Eurotronic 2(beta version)	-	-	-	-	√	-
IVECO	Trakker	Driver Door Module(beta version)	-	√	√	√	√	-
IVECO	Trakker	Passenger Door Module(beta version)	-	√	√	√	√	-
IVECO	Trakker	VCM-Immobilizer(beta version)	-	√	√	√	√	-
IVECO	Trakker	Ecas Wabco can(beta version)	√	√	√	√	√	-
IVECO	Trakker(EURO 5)	BOSCH EDC7 UC31	√	√	√	√	√	-
IVECO	Trakker(EURO 5)	WEBASTO	-	√	√	√	√	-
IVECO	Trakker(EURO 5)	VCM	√	√	√	√	√	-
IVECO	Trakker(EURO 5)	BODY COMPUTER(CAN)	√	√	√	√	-	-
IVECO	Trakker(EURO 5)	BODY COMPUTER(K)	√	√	√	√	√	-
IVECO	Trakker(EURO 5)	ZF EUROTRONIC 2	√	√	√	√	√	-
IVECO	Trakker(EURO 5)	WABCO ECAS 4X2	√	√	√	√	√	1st level calibration
IVECO	Trakker(EURO 5)	WABCO ECAS 6X2/6X4	√	√	√	√	√	1st level calibration
IVECO	Trakker(EURO 5)	WABCO ECAS CAN 4X2	√	√	√	√	√	1st level calibration
IVECO	Trakker(EURO 5)	WABCO ECAS CAN 6X2/6X4	√	√	√	√	√	1st level calibration
IVECO	Trakker(EURO 5)	WABCO D/E/E2	-	√	√	√	√	-
IVECO	Trakker(EURO 5)	DRIVE DOOR MODULE	-	√	√	√	√	-
IVECO	Trakker(EURO 5)	PASSENGER DOOR MODULE	-	√	√	√	√	-
IVECO	Trakker(EURO 5)	EBERSPACHER MANUAL PROCED. D1LCC/D3LCC	-	√	√	-	-	Error Codes
IVECO	Trakker(EURO 5)	WEBASTO MANUAL PROCED. AIRTOP 2000	-	√	√	-	-	Error Codes
IVECO	Trakker(EURO 5)	WEBASTO MANUAL PROCED. AIRTOP 3500/5000	-	√	√	-	-	Error Codes
IVECO	Trakker(EURO 5)	WABCO EBS 2	√	√	√	√	√	-
IVECO	Trakker(EURO 5)	AIR HEATER	√	√	√	√	√	-
IVECO	Trakker(EURO 5)	DENOXTRONIC 2	√	√	√	√	√	-
IVECO	Trakker(EURO 5)	WABCO ECAS 4X2	√	√	√	√	√	-
IVECO	Trakker(EURO 5)	WABCO ECAS CAN 4X2	√	√	√	√	√	-
IVECO	Trakker(EURO 4)	BOSCH EDC7 UC31	√	√	√	√	√	-
IVECO	Trakker(EURO 4)	BOSCH EDC7 UC31(2)	√	√	√	-	-	-
IVECO	Trakker(EURO 4)	WEBASTO	-	√	√	√	√	-
IVECO	Trakker(EURO 4)	VCM	√	√	√	√	√	-
IVECO	Trakker(EURO 4)	ZF EUROTRONIC 2	√	√	√	√	√	-
IVECO	Trakker(EURO 4)	WABCO ECAS CAN 4X2	√	√	√	√	√	1st level calibration

Diagnostic List iveco_v6.62

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color.

Model	System	System	Function					
			ECU Information	Read Dtc	Clear Dtc	Live Stream	Actuation test	Remark
IVECO	Trakker (EURO 4)	WABCO ECAS CAN 6X2/6X4	√	√	√	√	√	1st level calibration
IVECO	Trakker (EURO 4)	WABCO D/E/E2	-	√	√	√	√	-
IVECO	Trakker (EURO 4)	DRIVE DOOR MODULE	-	√	√	√	√	-
IVECO	Trakker (EURO 4)	PASSENGER DOOR MODULE	-	√	√	√	√	-
IVECO	Trakker (EURO 4)	WEBASTO MANUAL PROCED. AIRTOP 2000	-	√	√	-	-	Error Codes
IVECO	Trakker (EURO 4)	WEBASTO MANUAL PROCED. AIRTOP 3500/5000	-	√	√	-	-	Error Codes
IVECO	Trakker (EURO 4)	WABCO EBS 2	√	√	√	√	√	-
IVECO	Trakker (EURO 4)	AIR HEATER	√	√	√	√	√	-
IVECO	Trakker (EURO 4)	DENOXTRONIC 2	√	√	√	√	√	-
IVECO	Trakker (EURO 4)	WABCO ECAS CAN 4X2	√	√	√	√	√	-
IVECO	Tector (Euro 5)	BOSCH EDC7 UC31	√	√	√	√	√	-
IVECO	Tector (Euro 5)	VCM	√	√	√	√	√	-
IVECO	Tector (Euro 5)	INSTRUMENT CLUSTER	√	√	√	√	-	-
IVECO	Tector (Euro 5)	IVECO BODY CONTROLLER	√	√	√	√	-	-
IVECO	Tector (Euro 5)	ALLISON GEN 4	-	√	√	√	-	-
IVECO	Tector (Euro 5)	WABCO ECAS	√	√	√	√	√	1st level calibration
IVECO	Tector (Euro 5)	BOSCH-KNORR ABS6	√	√	√	√	√	-
IVECO	Tector (Euro 5)	DRIVE DOOR MODULE	-	√	√	√	√	-
IVECO	Tector (Euro 5)	PASSENGER DOOR MODULE	-	√	√	√	√	-
IVECO	Tector (Euro 5)	EBERSPACHER MANUAL PROCED. D1LCC/D3LCC	-	√	√	-	-	Error Codes
IVECO	Tector (Euro 5)	WEBASTO MANUAL PROCED. AIRTOP 2000	-	√	√	-	-	Error Codes
IVECO	Tector (Euro 5)	WEBASTO MANUAL PROCED. AIRTOP 3500/5000	-	√	√	-	-	Error Codes
IVECO	Tector (Euro 5)	AIR HEATER	√	√	√	√	√	-
IVECO	Tector (Euro 5)	AD-BLUE MANAGEMENT CONTROL	√	√	√	√	√	-
IVECO	Tector (Euro 5)	WABCO ECAS	√	√	√	√	√	-
IVECO	Tector (Euro 4)	BOSCH EDC7 UC31	√	√	√	√	√	-
IVECO	Tector (Euro 4)	VCM	√	√	√	√	√	-
IVECO	Tector (Euro 4)	INSTRUMENT CLUSTER	√	√	√	√	-	-
IVECO	Tector (Euro 4)	IVECO BODY CONTROLLER	√	√	√	√	-	-
IVECO	Tector (Euro 4)	ALLISON GEN 4	-	√	√	√	-	-
IVECO	Tector (Euro 4)	WABCO ECAS	√	√	√	√	√	1st level calibration
IVECO	Tector (Euro 4)	BOSCH-KNORR ABS6	√	√	√	√	√	-
IVECO	Tector (Euro 4)	DRIVE DOOR MODULE	-	√	√	√	√	-
IVECO	Tector (Euro 4)	PASSENGER DOOR MODULE	-	√	√	√	√	-
IVECO	Tector (Euro 4)	EBERSPACHER MANUAL PROCED. D1LCC/D3LCC	-	√	√	-	-	Error Codes
IVECO	Tector (Euro 4)	WEBASTO MANUAL PROCED. AIRTOP 2000	-	√	√	-	-	Error Codes
IVECO	Tector (Euro 4)	WEBASTO MANUAL PROCED. AIRTOP 3500/5000	-	√	√	-	-	Error Codes
IVECO	Tector (Euro 4)	AIR HEATER	√	√	√	√	√	-
IVECO	Tector (Euro 4)	DENOXTRONIC 2	√	√	√	√	√	-

Diagnostic List iveco_v6.62

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color.

Model	System	System	Function						Remark
			ECU Information	Read Dtc	Clear Dtc	Live Stream	Actuation test		
IVECO	Tector (Euro 4)	WABCO ECAS	√	√	√	√	√	-	

Diagnostic List iveco_v6.62

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color.

Model	System	System	Function					
			ECU Information	Read Dtc	Clear Dtc	Live Stream	Actuation test	Remark
IVECO	Tector (Euro 3)	BOSCH EDC 7	-	√	√	√	-	-
IVECO	Tector (Euro 3)	IC	√	√	√	√	-	-
IVECO	Tector (Euro 3)	ECAS MANUAL PROCED. 4X2	-	√	√	-	-	Error Codes
IVECO	Tector (Euro 3)	WABCO ECAS	√	√	√	√	√	1st level calibration
IVECO	Tector (Euro 3)	WABCO ECAS	√	√	√	√	√	-
IVECO	Tector (Euro 3)	EBERSPACHER MANUAL PROCED. D1LCC/D3LCC	-	√	√	-	-	Error Codes
IVECO	Tector (Euro 3)	WEBASTO MANUAL PROCED. AIRTOP 2000	-	√	√	-	-	Error Codes
IVECO	Tector (Euro 3)	WEBASTO MANUAL PROCED. AIRTOP 3500/5000	-	√	√	-	-	Error Codes
IVECO	Tector (Euro 3)	WABCO ECAS	√	√	√	√	√	-
IVECO	VTLM	BOSCH EDC 16	-	√	√	√	√	-
IVECO	EuroTech	EDC MS6.2 BOSCH	√	√	√	√	√	-
IVECO	EuroTech	EBS WABCO	√	√	√	√	√	-
IVECO	EuroTech	EUROTRONIC 2	√	√	√	√	√	-
IVECO	EuroStar	EDC MS6.2 BOSCH	√	√	√	√	√	-
IVECO	EuroStar	EBS WABCO	√	√	√	√	√	-
IVECO	EuroStar	EUROTRONIC 2	√	√	√	√	√	-
IVECO	EuroTrakker	EDC MS6.2 BOSCH	√	√	√	√	√	-
IVECO	EuroTrakker	EBS WABCO	√	√	√	√	√	-
IVECO	EuroTrakker	EUROTRONIC 2	√	√	√	√	√	-
IVECO	EuroTrakker	Abs Wabco D/E/E2(beta version)	√	√	√	√	√	-
IVECO	EuroTrakker	Ebs/Ebs 2(beta version)	√	√	√	√	√	-
IVECO	EuroTrakker	Eurotronic 2(beta version)	-	-	-	-	√	-
IVECO	EuroTrakker	Driver Door Module(beta version)	-	√	√	√	√	-
IVECO	EuroTrakker	Passenger Door Module(beta version)	-	√	√	√	√	-
IVECO	EuroFire	EDC 7 BOSCH	√	√	√	√	-	Activate diagnosis
IVECO	EuroFire	ABS 2X Knorr-BOSCH	√	√	√	√	√	-
IVECO	EuroFire	ECAS EUROCARGO RESTYLING	√	√	√	√	√	-
IVECO	EuroFire	IBC EUROCARGO NEW	√	√	√	√	√	-
IVECO	EuroFire	IVECO body controller	√	√	√	√	√	-
IVECO	EuroFire	IC EUROCARGO NEW	√	√	√	√	√	-
IVECO	EuroFire	DeNoxtronic 2	√	√	√	√	-	Activate diagnosis
IVECO	EuroFire	VCM- anti-theft system	√	√	√	√	√	-
IVECO	EuroFire	Extended module	√	√	√	√	-	-
IVECO	EuroFire	Instrument cluster	√	√	√	√	√	-
IVECO	EuroFire (Euro 5)	BOSCH EDC 7UC 31	√	√	√	√	√	-
IVECO	EuroFire (Euro 5)	VCM	√	√	√	√	√	-
IVECO	EuroFire (Euro 5)	INSTRUMENT CLUSTER	√	√	√	√	-	-
IVECO	EuroFire (Euro 5)	IVECO BODY CONTROLLER	√	√	√	√	-	-
IVECO	EuroFire (Euro 5)	WABCO ECAS	√	√	√	√	√	-
IVECO	EuroFire (Euro 5)	BOSCH-KNORR ABS 6	√	√	√	√	√	-

Diagnostic List iveco_v6.62

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color.

Model	System	System	Function					
			ECU Information	Read Dtc	Clear Dtc	Live Stream	Actuation test	Remark
IVECO	EuroFire (Euro 5)	EBERSPACHER MANUAL PROCED. D1LCC/D3LCC	-	√	√	-	-	-
IVECO	EuroFire (Euro 5)	WEBASTO MANUAL PROCED. AIRTOP 2000	-	√	√	-	-	-
IVECO	EuroFire (Euro 5)	WEBASTO MANUAL PROCED. AIRTOP 3500/5000	-	√	√	-	-	-
IVECO	EuroFire (Euro 5)	DENOXTRONIC 2	√	√	√	√	√	-
IVECO	EuroFire (Euro 5)	WABCO ECAS	√	√	√	√	√	√
IVECO	EuroFire (Euro 4)	BOSCH EDC 7UC 31	√	√	√	√	√	-
IVECO	EuroFire (Euro 4)	VCM	√	√	√	√	√	-
IVECO	EuroFire (Euro 4)	INSTRUMENT CLUSTER	√	√	√	√	-	-
IVECO	EuroFire (Euro 4)	IVECO BODY CONTROLLER	√	√	√	√	-	-
IVECO	EuroFire (Euro 4)	WABCO ECAS	√	√	√	√	√	√
IVECO	EuroFire (Euro 4)	BOSCH-KNORR ABS 6	√	√	√	√	√	-
IVECO	EuroFire (Euro 4)	EBERSPACHER MANUAL PROCED. D1LCC/D3LCC	-	√	√	-	-	-
IVECO	EuroFire (Euro 4)	WEBASTO MANUAL PROCED. AIRTOP 2000	-	√	√	-	-	-
IVECO	EuroFire (Euro 4)	WEBASTO MANUAL PROCED. AIRTOP 3500/5000	-	√	√	-	-	-
IVECO	EuroFire (Euro 4)	DENOXTRONIC 2	√	√	√	√	√	-
IVECO	EuroFire (Euro 4)	WABCO ECAS	√	√	√	√	√	√
IVECO	EuroFire (Euro 3)	BOSCH EDC 7	-	√	√	√	-	-
IVECO	EuroFire (Euro 3)	IC	√	√	√	√	√	-
IVECO	EuroFire (Euro 3)	ECAS MANUAL PROCED. 4X2	-	√	√	-	-	-
IVECO	EuroFire (Euro 3)	WABCO ECAS	√	√	√	√	√	√
IVECO	EuroFire (Euro 3)	BOSCH MANUAL PROCED. P 4	-	√	√	-	-	-
IVECO	EuroFire (Euro 3)	BOSCH MANUAL PROCED. P 8	-	√	√	-	-	-
IVECO	EuroFire (Euro 3)	BOSCH-KNORR 2X	-	√	√	-	-	-
IVECO	EuroFire (Euro 3)	EBERSPACHER MANUAL PROCED. D1LCC/D3LCC	-	√	√	-	-	-
IVECO	EuroFire (Euro 3)	WEBASTO MANUAL PROCED. AIRTOP 2000	-	√	√	-	-	-
IVECO	EuroFire (Euro 3)	WEBASTO MANUAL PROCED. AIRTOP 3500/5000	-	√	√	-	-	-
IVECO	EuroFire (Euro 3)	WABCO ECAS	√	√	√	√	√	√
IVECO	EuroMover	EDC MS6.2 BOSCH	√	√	√	√	√	-
IVECO	Seddon Atkin	EDC 7 BOSCH	√	√	√	√	-	Activate diagnosis
IVECO	Seddon Atkin	IBC EUROCARGO NEW	√	√	√	√	√	-
IVECO	Seddon Atkin	EDC MS6.2 BOSCH	√	√	√	√	√	-
IVECO	Seddon Atkin	EUROTRONIC 2	√	√	√	√	√	-
IVECO	PowerDaily	EDC 16 BOSCH	√	-	√	√	√	-
IVECO	PowerDaily	EDC MS6.3 BOSCH	√	√	√	√	√	-
IVECO	PowerTech	Instrument cluster	√	√	√	√	√	-
IVECO	PowerTech	BOSCH EDC 7 UC 31	√	√	√	√	√	-
IVECO	PowerTech	INSTRUMENT CLUSTER	√	√	√	√	√	-
IVECO	PowerTech	WABCO D/E/E2	-	√	√	√	√	-
Defense vehicles	LMV-VILM	EDC 16 BOSCH	√	-	√	√	√	-

Diagnostic List iveco_v6.62

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color.

Model	System	System	Function						Remark
			ECU Information	Read Dtc	Clear Dtc	Live Stream	Actuation test		
Defense vehicles	LMV-VILM	ABS 2X Knorr-BOSCH	√	√	√	√	√	-	

Diagnostic List iveco_v6.62

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color.

Model	System	System	Function					
			ECU Information	Read Dtc	Clear Dtc	Live Stream	Actuation test	Remark
Defense vehicles	MMV	EDC 7 BOSCH	√	√	√	√	-	Activate diagnosis
Defense vehicles	MMV	ABS 2X Knorr-BOSCH	√	√	√	√	√	-
Defense vehicles	VM90	EDC MS6.3 BOSCH	√	√	√	√	√	-
Defense vehicles	RG12	EDC 7 BOSCH	√	√	√	√	-	Activate diagnosis
Defense vehicles	MG410	DeNoxtronic 2	√	√	√	√	-	Activate diagnosis
Defense vehicles	MG410	VCM- anti-theft system	√	√	√	√	√	-
Defense vehicles	MG410	EDC 7 UC31	√	√	√	√	√	-
Defense vehicles	MG410	EUROTRONIC 2	√	√	√	√	√	-
Defense vehicles	MG410	ECAS UABCO CAN	√	√	√	√	√	-
Defense vehicles	MG410	Extended module	√	√	√	√	-	-
Defense vehicles	MG410	IVECO body controller	√	√	√	√	√	-
Defense vehicles	MG410	Trakker chassis electronic module	√	√	√	√	-	-
Defense vehicles	MG410	IC (Instrument cluster) TRAKKER	√	√	√	√	√	-
Defense vehicles	MG410	Air heater (STRALIS)	√	√	√	√	-	-
Defense vehicles	MG410	WABCO-IVTM	√	√	√	√	-	-
Astra	Cursor	EDC 7 UC31	√	√	√	√	√	-
Astra	Cursor	EDC MS6.3 BOSCH	√	√	√	√	√	-
Astra	Cursor	EUROTRONIC 2	√	√	√	√	√	-
Astra	Cursor Extra-Europe(one-B0x)	EDC 7 UC31	√	√	√	√	√	-
Astra	Cursor Extra-Europe(one-B0x)	EUROTRONIC 2	√	√	√	√	√	-
Astra	Cursor Euro 4	DeNoxtronic 2	√	√	√	√	-	Activate diagnosis
Astra	Cursor Euro 4	EDC 7 UC31	√	√	√	√	√	-
Iveco automobile	Engine ECU	DeNoxtronic 2	√	√	√	√	-	Activate diagnosis
Iveco automobile	Engine ECU	EDC 16 BOSCH	√	-	√	√	√	-
Iveco automobile	Engine ECU	EDC 7 BOSCH	√	√	√	√	-	Activate diagnosis
Iveco automobile	Engine ECU	EDC MS6.2 BOSCH	√	√	√	√	√	-
Iveco automobile	Engine ECU	EDC MS6.3 BOSCH	√	√	√	√	√	-
Iveco automobile	Multicar EOL	DeNoxtronic 2	√	√	√	√	-	Activate diagnosis
Iveco automobile	Multicar EOL	EDC 16 BOSCH	√	-	√	√	√	-
Iveco automobile	Multicar EOL	EDC 7 BOSCH	√	√	√	√	-	Activate diagnosis
Iveco automobile	Multicar EOL	EDC MS6.2 BOSCH	√	√	√	√	√	-
Iveco automobile	Multicar EOL	EDC MS6.3 BOSCH	√	√	√	√	√	-
Iveco automobile	Mdae by UAZ	DeNoxtronic 2	√	√	√	√	-	Activate diagnosis
Iveco automobile	Mdae by UAZ	EDC 16 BOSCH	√	-	√	√	√	-
Iveco automobile	Mdae by UAZ	EDC 7 BOSCH	√	√	√	√	-	Activate diagnosis
Iveco automobile	Mdae by UAZ	EDC MS6.2 BOSCH	√	√	√	√	√	-
Iveco automobile	Mdae by UAZ	EDC MS6.3 BOSCH	√	√	√	√	√	-
Iveco automobile	UAZ CS	DeNoxtronic 2	√	√	√	√	-	Activate diagnosis

Diagnostic List iveco_v6.62

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color.

Model	System	System	Function					Remark
			ECU Information	Read Dtc	Clear Dtc	Live Stream	Actuation test	
Iveco automobile	UAZ CS	EDC 16 BOSCH	√	-	√	√	√	-
Iveco automobile	UAZ CS	EDC 7 BOSCH	√	√	√	√	-	Activate diagnosis

Diagnostic List iveco_v6.62

Remark:

1. √ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color.

Model	System	System	Function					
			ECU Information	Read Dtc	Clear Dtc	Live Stream	Actuation test	Remark
Iveco automobile	UAZ CS	EDC MS6.2 BOSCH VERSION 1	√	√	√	√	√	-
Iveco automobile	UAZ CS	EDC MS6.2 BOSCH VERSION 2	√	√	√	√	√	-
Iveco automobile	UAZ CS	EDC MS6.3 BOSCH	√	√	√	√	√	-
Swiss army	Sa Vehicles	EDC MS6.2 BOSCH	√	√	√	√	√	-
Swiss army	Sa Vehicles	EBS WABCO	√	√	√	√	√	-
Swiss army	Sa Vehicles	EUROTRONIC 2	√	√	√	√	√	-
Tata Daewoo	Engine ECU	EDC 7 BOSCH	√	√	√	√	-	Activate diagnosis