

Diagnostic List JCB_v5.40

Remark:

1. ✓ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color.

Series	Mode	Type	System	Function			
				Read ECU Information	Read Fault Code	Erase Fault Code	Read Data Stream
Agricultural	Fastrac Tractors	2000-3000	Diagnostics	✓	✓	✓	✓
Agricultural	Fastrac Tractors	3000 Series 2	3000 Diagnostics	✓	✓	✓	✓
Agricultural	Fastrac Tractors	3000 Series 3	Diagnostics	✓	✓	✓	✓
Agricultural	Fastrac Tractors	3000 Series 4	Diagnostics	✓	✓	✓	✓
Agricultural	Fastrac Tractors	4000 Series	Diagnostics	✓	✓	✓	✓
Agricultural	Fastrac Tractors	4000 Series	EHFS Tool	✓	✓	✓	✓
Agricultural	Fastrac Tractors	7000 Series	7000 Diagnostics	✓	✓	✓	✓
Agricultural	Fastrac Tractors	8000 Series 3	8000 Series 3 Diagnostics	✓	✓	✓	✓
Agricultural	Fastrac Tractors	8000 Series 4	8000 Series 4 Diagnostics	✓	✓	✓	✓
Agricultural	Fastrac Tractors	8250 Series 2	8250 Series 2 Diagnostics	✓	✓	✓	✓
Agricultural	Telemasters	TM220	CWL/TM Cluster Diagnostics	✓	✓	✓	✓
Agricultural	Telemasters	TM220	Hydraulic Controller Diagnostics	✓	✓	✓	✓
Agricultural	Telemasters	TM220	Immobiliser Diagnostics	✓	✓	✓	✓
Agricultural	Telemasters	TM220	LiveLink Diagnostics	✓	✓	✓	✓
Agricultural	Telemasters	TM220	T3 40kph Diagnostics	✓	✓	✓	✓
Agricultural	Telemasters	TM220	T4 40Kph Controller Diagnostics	✓	✓	✓	✓
Agricultural	Telemasters	TM320 T4i	Hydraulics Diagnostics	✓	✓	✓	✓
Agricultural	Telemasters	TM320 T4i	Transmaster Transmission Diagnostics	✓	✓	✓	✓
Agricultural	Telemasters	TM320 Tier 4 Final Mk 1	Hydraulics Diagnostics	✓	✓	✓	✓
Agricultural	Telemasters	TM320 Tier 4 Final Mk 1	Transmaster Transmission Diagnostics	✓	✓	✓	✓
Agricultural	Telemasters	TM320 Tier 4 Final Mk 1	VSFC Diagnostics	✓	✓	✓	✓
Agricultural	Telemasters	TM320 Tier 4 Final Mk 2	Hydraulics Diagnostics	✓	✓	✓	✓
Agricultural	Telemasters	TM320 Tier 4 Final Mk 2	Immobiliser Diagnostics	✓	✓	✓	✓
Agricultural	Telemasters	TM320 Tier 4 Final Mk 2	LiveLink Diagnostics	✓	✓	✓	✓
Agricultural	Telemasters	TM320 Tier 4 Final Mk 2	Transmaster Transmission Diagnostics	✓	✓	✓	✓

Diagnostic List JCB_v5.40

Remark:

1. ✓ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color.

Series	Mode	Type	System	Function			
				Read ECU Information	Read Fault Code	Erase Fault Code	Read Data Stream
Agricultural	Telemasters	TM320 Tier 4 Final Mk 2	VSFC Diagnostics	✓	✓	✓	✓
Agricultural	Telemasters	TM420 Tier 4 Final	Hydraulics Diagnostics	✓	✓	✓	✓
Agricultural	Telemasters	TM420 Tier 4 Final	Immobiliser Diagnostics	✓	✓	✓	✓
Agricultural	Telemasters	TM420 Tier 4 Final	LiveLink Diagnostics	✓	✓	✓	✓
Agricultural	Telemasters	TM420 Tier 4 Final	Transmaster Transmission Diagnostics	✓	✓	✓	✓
Agricultural	Telemasters	TM420 Tier 4 Final	VSFC Diagnostics	✓	✓	✓	✓
Agricultural	Telescopic Handlers	2007+	Immobiliser Diagnostics	✓	✓	✓	✓
Agricultural	Telescopic Handlers	2007+	Loadall 527 Transmission Diagnostics	✓	✓	✓	✓
Agricultural	Telescopic Handlers	2007+	Loadall Diagnostics	✓	✓	✓	✓
Agricultural	Telescopic Handlers	2007+	Loadall LLMI Diagnostics	✓	✓	✓	✓
Agricultural	Telescopic Handlers	525-60 Compact Loadall	Hydrostatic Transmission	✓	✓	✓	✓
Agricultural	Telescopic Handlers	525-60 Compact Loadall	Immobiliser Diagnostics	✓	✓	✓	✓
Agricultural	Telescopic Handlers	525-60 Compact Loadall	Loadall Diagnostics - T4	✓	✓	✓	✓
Agricultural	Telescopic Handlers	525-60 Compact Loadall	Loadall Fault Code Reader - T4	✓	✓	✓	✓
Agricultural	Telescopic Handlers	525-60 Compact Loadall	Loadall LLMI Diagnostics - T4	✓	✓	✓	✓
Agricultural	Telescopic Handlers	Tier 4	DualTECH VT Transmission Diagnostics	✓	✓	✓	✓
Agricultural	Telescopic Handlers	Tier 4	Hydrostatic Transmission	✓	✓	✓	✓
Agricultural	Telescopic Handlers	Tier 4	Immobiliser Diagnostics	✓	✓	✓	✓
Agricultural	Telescopic Handlers	Tier 4	Loadall Diagnostics - T4	✓	✓	✓	✓
Agricultural	Telescopic Handlers	Tier 4	Loadall Fault Code Reader - T4	✓	✓	✓	✓
Agricultural	Telescopic Handlers	Tier 4	Loadall LLMI Diagnostics - T4	✓	✓	✓	✓
Agricultural	Telescopic Handlers	Tier 4	Loadall Pump Control Diagnostics - T4	✓	✓	✓	✓
Agricultural	Telescopic Handlers	Tier 4	Powershift Diagnostics - T4	✓	✓	✓	✓
Agricultural	Telescopic Handlers	Tier 4	Transmaster Diagnostics	✓	✓	✓	✓
Agricultural	Wheeled Loading Shovels	Compact	CWL/TM Cluster Diagnostics	✓	✓	✓	✓

Diagnostic List JCB_v5.40

Remark:

1. ✓ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color.

Series	Mode	Type	System	Function			
				Read ECU Information	Read Fault Code	Erase Fault Code	Read Data Stream
Agricultural	Wheeled Loading Shovels	Compact	Immobiliser Diagnostics	✓	✓	✓	✓
Agricultural	Wheeled Loading Shovels	Compact	LiveLink Diagnostics	✓	✓	✓	✓
Agricultural	Wheeled Loading Shovels	Compact	T3 40kph Diagnostics	✓	✓	✓	✓
Agricultural	Wheeled Loading Shovels	Compact	T4 40Kph Controller Diagnostics	✓	✓	✓	✓
Agricultural	Wheeled Loading Shovels	Large	LiveLink2 Diagnostics	✓	✓	✓	✓
Agricultural	Wheeled Loading Shovels	Large	Machine Diagnostics	✓	✓	✓	✓
Agricultural	Wheeled Loading Shovels	Large	T4F Diagnostics	✓	✓	✓	✓
Agricultural	Wheeled Loading Shovels	Large	Wheel Loader Diagnostics	✓	✓	✓	✓
Agricultural	Wheeled Loading Shovels	Medium	LiveLink Diagnostics	✓	✓	✓	✓
Agricultural	Wheeled Loading Shovels	Medium	LiveLink2 Diagnostics	✓	✓	✓	✓
Agricultural	Wheeled Loading Shovels	Medium	MWLS Diagnostics	✓	✓	✓	✓
Agricultural	Wheeled Loading Shovels	Medium	T4F Diagnostics	✓	✓	✓	✓
Agricultural	Wheeled Loading Shovels	Telemasters	CWL/TM Cluster Diagnostics	✓	✓	✓	✓
Agricultural	Wheeled Loading Shovels	Telemasters	Hydraulic Controller Diagnostics	✓	✓	✓	✓
Agricultural	Wheeled Loading Shovels	Telemasters	Hydraulics Diagnostics	✓	✓	✓	✓
Agricultural	Wheeled Loading Shovels	Telemasters	Immobiliser Diagnostics	✓	✓	✓	✓
Agricultural	Wheeled Loading Shovels	Telemasters	LiveLink Diagnostics	✓	✓	✓	✓
Agricultural	Wheeled Loading Shovels	Telemasters	LiveLink Diagnostics	✓	✓	✓	✓
Agricultural	Wheeled Loading Shovels	Telemasters	T3 40kph Diagnostics	✓	✓	✓	✓
Agricultural	Wheeled Loading Shovels	Telemasters	T4 40Kph Controller Diagnostics	✓	✓	✓	✓
Agricultural	Wheeled Loading Shovels	Telemasters	Transmaster Transmission Diagnostics	✓	✓	✓	✓
Agricultural	Wheeled Loading Shovels	Telemasters	VSFC Diagnostics	✓	✓	✓	✓
Construction	Articulated Dump Trucks	Diagnostics		✓	✓	✓	✓
Construction	Backhoe Loaders	Backhoe Loader 3DX Series India	LiveLink Diagnostics	✓	✓	✓	✓
Construction	Backhoe Loaders	Backhoe Loader 3DX Series India	Machine ECU Diagnostic	✓	✓	✓	✓

Diagnostic List JCB_v5.40

Remark:

1. ✓ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color.

Series	Mode	Type	System	Function			
				Read ECU Information	Read Fault Code	Erase Fault Code	Read Data Stream
Construction	Backhoe Loaders	Backhoe Loaders	Immobiliser Diagnostics	✓	✓	✓	✓
Construction	Backhoe Loaders	Backhoe Loaders	LiveLink Diagnostics	✓	✓	✓	✓
Construction	Backhoe Loaders	Backhoe Loaders	Machine Diagnostics	✓	✓	✓	✓
Construction	Backhoe Loaders	Compact Backhoe Loaders	Immobiliser Diagnostics	✓	✓	✓	✓
Construction	Backhoe Loaders	Compact Backhoe Loaders	LiveLink Diagnostics	✓	✓	✓	✓
Construction	Backhoe Loaders	Compact Backhoe Loaders	Machine Diagnostics	✓	✓	✓	✓
Construction	Compact Excavators (Mini / Midi)	8000 Series Machines	Diagnostics	✓	✓	✓	✓
Construction	Compact Excavators (Mini / Midi)	8000 Series Machines	Immobiliser Diagnostics	✓	✓	✓	✓
Construction	Compact Excavators (Mini / Midi)	NXG Machines	Diagnostics	✓	✓	✓	✓
Construction	Compact Excavators (Mini / Midi)	NXG Machines	Immobiliser Diagnostics	✓	✓	✓	✓
Construction	Compact Excavators (Mini / Midi)	NXG Machines	LiveLink Diagnostics	✓	✓	✓	✓
Construction	Excavators	AMS Machines	Diagnostics	✓	✓	✓	✓
Construction	Excavators	AMS Machines	T2/T3 Diagnostics	✓	✓	✓	✓
Construction	Excavators	AMS Machines	T4i Diagnostics	✓	✓	✓	✓
Construction	Excavators	DECU Machines	Vehicle Diagnostics	✓	✓	✓	✓
Construction	Excavators	Excavators (Hydradig)	Immobiliser Diagnostics	✓	✓	✓	✓
Construction	Excavators	Excavators (Hydradig)	LiveLink Diagnostics	✓	✓	✓	✓
Construction	Excavators	Excavators (Hydradig)	Vehicle Diagnostic	✓	✓	✓	✓
Construction	Excavators	X Series	LiveLink Diagnostics	✓	✓	✓	✓
Construction	Excavators	X Series	Vehicle Diagnostic	✓	✓	✓	✓
Construction	Rough Terrain Forklifts	Tier 4 RTFL	Diagnostics	✓	✓	✓	✓
Construction	Rough Terrain Forklifts	Tier 4 RTFL	Immobiliser Diagnostics	✓	✓	✓	✓
Construction	Rough Terrain Forklifts	Tier 4 RTFL	LiveLink Diagnostics	✓	✓	✓	✓
Construction	Site Dumpers	LiveLink Diagnostics		✓	✓	✓	✓
Construction	Site Dumpers	Machine Diagnostics		✓	✓	✓	✓

Diagnostic List JCB_v5.40

Remark:

1. ✓ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color.

Series	Mode	Type	System	Function			
				Read ECU Information	Read Fault Code	Erase Fault Code	Read Data Stream
Construction	Telemasters	TM220	CWL/TM Cluster Diagnostics	✓	✓	✓	✓
Construction	Telemasters	TM220	Hydraulic Controller Diagnostics	✓	✓	✓	✓
Construction	Telemasters	TM220	Immobiliser Diagnostics	✓	✓	✓	✓
Construction	Telemasters	TM220	LiveLink Diagnostics	✓	✓	✓	✓
Construction	Telemasters	TM220	T3 40kph Diagnostics	✓	✓	✓	✓
Construction	Telemasters	TM220	T4 40Kph Controller Diagnostics	✓	✓	✓	✓
Construction	Telemasters	TM320 T4i	Hydraulics Diagnostics	✓	✓	✓	✓
Construction	Telemasters	TM320 T4i	Transmaster Transmission Diagnostics	✓	✓	✓	✓
Construction	Telemasters	TM320 Tier 4 Final Mk 1	Hydraulics Diagnostics	✓	✓	✓	✓
Construction	Telemasters	TM320 Tier 4 Final Mk 1	Transmaster Transmission Diagnostics	✓	✓	✓	✓
Construction	Telemasters	TM320 Tier 4 Final Mk 1	VSFC Diagnostics	✓	✓	✓	✓
Construction	Telemasters	TM320 Tier 4 Final Mk 2	Hydraulics Diagnostics	✓	✓	✓	✓
Construction	Telemasters	TM320 Tier 4 Final Mk 2	Immobiliser Diagnostics	✓	✓	✓	✓
Construction	Telemasters	TM320 Tier 4 Final Mk 2	LiveLink Diagnostics	✓	✓	✓	✓
Construction	Telemasters	TM320 Tier 4 Final Mk 2	Transmaster Transmission Diagnostics	✓	✓	✓	✓
Construction	Telemasters	TM320 Tier 4 Final Mk 2	VSFC Diagnostics	✓	✓	✓	✓
Construction	Telemasters	TM420 Tier 4 Final	Hydraulics Diagnostics	✓	✓	✓	✓
Construction	Telemasters	TM420 Tier 4 Final	Immobiliser Diagnostics	✓	✓	✓	✓
Construction	Telemasters	TM420 Tier 4 Final	LiveLink Diagnostics	✓	✓	✓	✓
Construction	Telemasters	TM420 Tier 4 Final	Transmaster Transmission Diagnostics	✓	✓	✓	✓
Construction	Telemasters	TM420 Tier 4 Final	VSFC Diagnostics	✓	✓	✓	✓
Construction	Telescopic Handlers	2007+	Immobiliser Diagnostics	✓	✓	✓	✓
Construction	Telescopic Handlers	2007+	Loadall 527 Transmission Diagnostics	✓	✓	✓	✓

Diagnostic List JCB_v5.40

Remark:

1. ✓ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color.

Series	Mode	Type	System	Function			
				Read ECU Information	Read Fault Code	Erase Fault Code	Read Data Stream
Construction	Telescopic Handlers	2007+	Loadall Diagnostics	✓	✓	✓	✓
Construction	Telescopic Handlers	2007+	Loadall LLMI Diagnostics	✓	✓	✓	✓
Construction	Telescopic Handlers	2007+	RAS Diagnostics	✓	✓	✓	✓
Construction	Telescopic Handlers	525-60 Compact Loadall	Hydrostatic Transmission	✓	✓	✓	✓
Construction	Telescopic Handlers	525-60 Compact Loadall	Immobiliser Diagnostics	✓	✓	✓	✓
Construction	Telescopic Handlers	525-60 Compact Loadall	Loadall Diagnostics - T4	✓	✓	✓	✓
Construction	Telescopic Handlers	525-60 Compact Loadall	Loadall Fault Code Reader - T4	✓	✓	✓	✓
Construction	Telescopic Handlers	525-60 Compact Loadall	Loadall LLMI Diagnostics - T4	✓	✓	✓	✓
Construction	Telescopic Handlers	Tier 4	Auxilliary ECU	✓	✓	✓	✓
Construction	Telescopic Handlers	Tier 4	Expansion ECU	✓	✓	✓	✓
Construction	Telescopic Handlers	Tier 4	Hydrostatic Transmission	✓	✓	✓	✓
Construction	Telescopic Handlers	Tier 4	Immobiliser Diagnostics	✓	✓	✓	✓
Construction	Telescopic Handlers	Tier 4	Loadall Diagnostics - T4	✓	✓	✓	✓
Construction	Telescopic Handlers	Tier 4	Loadall Fault Code Reader - T4	✓	✓	✓	✓
Construction	Telescopic Handlers	Tier 4	Loadall LLMI Diagnostics - T4	✓	✓	✓	✓
Construction	Telescopic Handlers	Tier 4	Powershift Diagnostics - T4	✓	✓	✓	✓
Construction	Telescopic Handlers	Tier 4	Radio System	✓	✓	✓	✓
Construction	Telescopic Handlers	Tier 4	RAS Diagnostics	✓	✓	✓	✓
Construction	Teletruk	LPG Teletruk	Diagnostics	✓	✓	✓	✓
Construction	Teletruk	LPG Teletruk	LiveLink Diagnostics	✓	✓	✓	✓
Construction	Teletruk	Tier 4 Teletruk	Diagnostics	✓	✓	✓	✓
Construction	Teletruk	Tier 4 Teletruk	LiveLink Diagnostics	✓	✓	✓	✓
Construction	Vibratory Compactors	Interim Tier 4	Diagnostics	✓	✓	✓	✓
Construction	Vibratory Compactors	Interim Tier 4	Immobiliser Diagnostics	✓	✓	✓	✓
Construction	Vibratory Compactors	Interim Tier 4	LiveLink Diagnostics	✓	✓	✓	✓

Diagnostic List JCB_v5.40

Remark:

1. ✓ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color.

Series	Mode	Type	System	Function			
				Read ECU Information	Read Fault Code	Erase Fault Code	Read Data Stream
Construction	Vibratory Compactors	VM116	LiveLink Diagnostics	✓	✓	✓	✓
Construction	Wheeled Loading Shovels	Compact	CWL/TM Cluster Diagnostics	✓	✓	✓	✓
Construction	Wheeled Loading Shovels	Compact	Immobiliser Diagnostics	✓	✓	✓	✓
Construction	Wheeled Loading Shovels	Compact	LiveLink Diagnostics	✓	✓	✓	✓
Construction	Wheeled Loading Shovels	Compact	T3 40kph Diagnostics	✓	✓	✓	✓
Construction	Wheeled Loading Shovels	Compact	T4 40Kph Controller Diagnostics	✓	✓	✓	✓
Construction	Wheeled Loading Shovels	Global WLS	Wheel Loader Diagnostics	✓	✓	✓	✓
Construction	Wheeled Loading Shovels	Large	LiveLink2 Diagnostics	✓	✓	✓	✓
Construction	Wheeled Loading Shovels	Large	Machine Diagnostics	✓	✓	✓	✓
Construction	Wheeled Loading Shovels	Large	T4F Diagnostics	✓	✓	✓	✓
Construction	Wheeled Loading Shovels	Large	Wheel Loader Diagnostics	✓	✓	✓	✓
Construction	Wheeled Loading Shovels	Medium	LiveLink Diagnostics	✓	✓	✓	✓
Construction	Wheeled Loading Shovels	Medium	LiveLink2 Diagnostics	✓	✓	✓	✓
Construction	Wheeled Loading Shovels	Medium	MWLS Diagnostics	✓	✓	✓	✓
Construction	Wheeled Loading Shovels	Medium	T4F Diagnostics	✓	✓	✓	✓
Construction	Wheeled Loading Shovels	Telemasters		✓	✓	✓	✓
Construction	Wheeled Loading Shovels	Telemasters	CWL/TM Cluster Diagnostics	✓	✓	✓	✓
Construction	Wheeled Loading Shovels	Telemasters	Hydraulic Controller Diagnostics	✓	✓	✓	✓
Construction	Wheeled Loading Shovels	Telemasters	Hydraulics Diagnostics	✓	✓	✓	✓
Construction	Wheeled Loading Shovels	Telemasters	Immobiliser Diagnostics	✓	✓	✓	✓
Construction	Wheeled Loading Shovels	Telemasters	LiveLink Diagnostics	✓	✓	✓	✓
Construction	Wheeled Loading Shovels	Telemasters	LiveLink Diagnostics	✓	✓	✓	✓
Construction	Wheeled Loading Shovels	Telemasters	T4 40Kph Controller Diagnostics	✓	✓	✓	✓
Construction	Wheeled Loading Shovels	Telemasters	Transmaster Transmission Diagnostics	✓	✓	✓	✓
Construction	Wheeled Loading Shovels	Telemasters	VSFC Diagnostics	✓	✓	✓	✓

Diagnostic List JCB_v5.40

Remark:

1. ✓ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color.

Series	Mode	Type	System	Function			
				Read ECU Information	Read Fault Code	Erase Fault Code	Read Data Stream
Waste	Telescopic Handlers	Tier 3	Immobiliser Diagnostics	✓	✓	✓	✓
Waste	Telescopic Handlers	Tier 3	Loadall 527 Transmission Diagnostics	✓	✓	✓	✓
Waste	Telescopic Handlers	Tier 3	Loadall Diagnostics	✓	✓	✓	✓
Waste	Telescopic Handlers	Tier 3	Loadall LLMI Diagnostics	✓	✓	✓	✓
Waste	Telescopic Handlers	Tier 4	Immobiliser Diagnostics	✓	✓	✓	✓
Waste	Telescopic Handlers	Tier 4	Loadall Diagnostics - T4	✓	✓	✓	✓
Waste	Telescopic Handlers	Tier 4	Loadall Fault Code Reader - T4	✓	✓	✓	✓
Waste	Telescopic Handlers	Tier 4	Loadall LLMI Diagnostics - T4	✓	✓	✓	✓
Waste	Telescopic Handlers	Tier 4	Loadall Pump Control Diagnostics - T4	✓	✓	✓	✓
Waste	Telescopic Handlers	Tier 4	Powershift Diagnostics - T4	✓	✓	✓	✓
Waste	Telescopic Handlers	Tier 4	Transmaster Transmission Diagnostics	✓	✓	✓	✓
Waste	Wheeled Loading Shovels	427/437/435S T4F	LiveLink2 Diagnostics	✓	✓	✓	✓
Waste	Wheeled Loading Shovels	427/437/435S T4F	T4F Diagnostics	✓	✓	✓	✓
Waste	Wheeled Loading Shovels	457 T4F	LiveLink2 Diagnostics	✓	✓	✓	✓
Waste	Wheeled Loading Shovels	457 T4F	T4F Diagnostics	✓	✓	✓	✓
Engine		JCB Dieselmax Engine		✓	✓	✓	✓
Engine		JCB Dieselmax Engine (IPU)		✓	✓	✓	✓
Engine		JCB Dieselmax Engine (OEM Base)		✓	✓	✓	✓
Engine		JCB Dieselmax Engine (G-Drive)		✓	✓	✓	✓
Engine		JCB Ecomax Engine		✓	✓	✓	✓
Engine		JCB Ecomax Engine (IPU)		✓	✓	✓	✓
Engine		JCB Ecomax Engine (OEM Base)		✓	✓	✓	✓
Engine		JCB Ecomax Engine (G Drive)		✓	✓	✓	✓
Engine		JCB Dieselmax 672 Engine		✓	✓	✓	✓

Diagnostic List JCB_v5.40

Remark:

1. ✓ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color.

Series	Mode	Type	System	Function			
				Read ECU Information	Read Fault Code	Erase Fault Code	Read Data Stream
Engine		JCB Dieselmax 672 Engine (IPU)		✓	✓	✓	✓
Engine		JCB Dieselmax 672 Engine (OEM Base)		✓	✓	✓	✓
Engine		JCB Dieselmax 672 Engine (G Drive)		✓	✓	✓	✓
Engine		Kohler TCR Engine		✓	✓	✓	✓
Engine		430 Dieselmax Engine		✓	✓	✓	✓