

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XX	2010-2015	Normally Aspirated V8	PCM(Powertrain control module)	ECU information
XX	2010-2015	Normally Aspirated V8	PCM(Powertrain control module)	Read fault codes
XX	2010-2015	Normally Aspirated V8	PCM(Powertrain control module)	Erase fault codes
XX	2010-2015	Normally Aspirated V8	PCM(Powertrain control module)	Live Data
XX	2010-2015	Normally Aspirated V8	TCM(Transmission control module)	ECU information
XX	2010-2015	Normally Aspirated V8	TCM(Transmission control module)	Read fault codes
XX	2010-2015	Normally Aspirated V8	TCM(Transmission control module)	Erase fault codes
XX	2010-2015	Normally Aspirated V8	TCM(Transmission control module)	Live Data
XX	2010-2015	Normally Aspirated V8	ABS(ABS control module)	ECU information
XX	2010-2015	Normally Aspirated V8	ABS(ABS control module)	Read fault codes
XX	2010-2015	Normally Aspirated V8	ABS(ABS control module)	Erase fault codes
XX	2010-2015	Normally Aspirated V8	ABS(ABS control module)	Live Data
XX	2010-2015	Normally Aspirated V8	RCM(Restraints control module)	ECU information
XX	2010-2015	Normally Aspirated V8	RCM(Restraints control module)	Read fault codes
XX	2010-2015	Normally Aspirated V8	RCM(Restraints control module)	Erase fault codes
XX	2010-2015	Normally Aspirated V8	RCM(Restraints control module)	Live Data
XX	2010-2015	Normally Aspirated V8	IPC(Instrument cluster control module)	ECU information
XX	2010-2015	Normally Aspirated V8	IPC(Instrument cluster control module)	Read fault codes
XX	2010-2015	Normally Aspirated V8	IPC(Instrument cluster control module)	Erase fault codes
XX	2010-2015	Normally Aspirated V8	IPC(Instrument cluster control module)	Live Data
XX	2010-2015	Normally Aspirated V8	CCM(Speed control module)	ECU information
XX	2010-2015	Normally Aspirated V8	CCM(Speed control module)	Read fault codes
XX	2010-2015	Normally Aspirated V8	CCM(Speed control module)	Erase fault codes
XX	2010-2015	Normally Aspirated V8	CCM(Speed control module)	Live Data
XX	2010-2015	Normally Aspirated V8	ADCM(Adaptive damping control module)	ECU information
XX	2010-2015	Normally Aspirated V8	ADCM(Adaptive damping control module)	Read fault codes
XX	2010-2015	Normally Aspirated V8	ADCM(Adaptive damping control module)	Erase fault codes
XX	2010-2015	Normally Aspirated V8	ADCM(Adaptive damping control module)	Live Data
XX	2010-2015	Normally Aspirated V8	HCM(Headlamp control module)	ECU information
XX	2010-2015	Normally Aspirated V8	HCM(Headlamp control module)	Read fault codes
XX	2010-2015	Normally Aspirated V8	HCM(Headlamp control module)	Erase fault codes
XX	2010-2015	Normally Aspirated V8	HCM(Headlamp control module)	Live Data
XX	2010-2015	Normally Aspirated V8	PBM(Parking brake control module)	ECU information
XX	2010-2015	Normally Aspirated V8	PBM(Parking brake control module)	Read fault codes
XX	2010-2015	Normally Aspirated V8	PBM(Parking brake control module)	Erase fault codes
XX	2010-2015	Normally Aspirated V8	PBM(Parking brake control module)	Live Data
XX	2010-2015	Normally Aspirated V8	VIM(Vehicle immobilizer control module)	ECU information
XX	2010-2015	Normally Aspirated V8	VIM(Vehicle immobilizer control module)	Read fault codes
XX	2010-2015	Normally Aspirated V8	VIM(Vehicle immobilizer control module)	Erase fault codes
XX	2010-2015	Normally Aspirated V8	VIM(Vehicle immobilizer control module)	Live Data
XX	2010-2015	Normally Aspirated V8	GSM(Gear shift module)	ECU information
XX	2010-2015	Normally Aspirated V8	GSM(Gear shift module)	Read fault codes
XX	2010-2015	Normally Aspirated V8	GSM(Gear shift module)	Erase fault codes
XX	2010-2015	Normally Aspirated V8	GSM(Gear shift module)	Live Data
XX	2010-2015	Normally Aspirated V8	ICS(Impact classification system)	ECU information
XX	2010-2015	Normally Aspirated V8	ICS(Impact classification system)	Read fault codes
XX	2010-2015	Normally Aspirated V8	ICS(Impact classification system)	Erase fault codes
XX	2010-2015	Normally Aspirated V8	ICS(Impact classification system)	Live Data
XX	2010-2015	Normally Aspirated V8	OCS(Restraints occupant classification system module)	ECU information
XX	2010-2015	Normally Aspirated V8	OCS(Restraints occupant classification system module)	Read fault codes
XX	2010-2015	Normally Aspirated V8	OCS(Restraints occupant classification system module)	Erase fault codes
XX	2010-2015	Normally Aspirated V8	OCS(Restraints occupant classification system module)	Live Data
XX	2010-2015	Normally Aspirated V8	RDCM(Rear differential control module)	ECU information
XX	2010-2015	Normally Aspirated V8	RDCM(Rear differential control module)	Read fault codes
XX	2010-2015	Normally Aspirated V8	RDCM(Rear differential control module)	Erase fault codes
XX	2010-2015	Normally Aspirated V8	RDCM(Rear differential control module)	Live Data
XX	2010-2015	Normally Aspirated V8	DCSM(Driver's climate seat module)	ECU information
XX	2010-2015	Normally Aspirated V8	DCSM(Driver's climate seat module)	Read fault codes
XX	2010-2015	Normally Aspirated V8	DCSM(Driver's climate seat module)	Erase fault codes
XX	2010-2015	Normally Aspirated V8	DCSM(Driver's climate seat module)	Live Data
XX	2010-2015	Normally Aspirated V8	DDM(Driver's door module)	ECU information
XX	2010-2015	Normally Aspirated V8	DDM(Driver's door module)	Read fault codes
XX	2010-2015	Normally Aspirated V8	DDM(Driver's door module)	Erase fault codes
XX	2010-2015	Normally Aspirated V8	DDM(Driver's door module)	Live Data
XX	2010-2015	Normally Aspirated V8	DSM(Driver's seat module)	ECU information
XX	2010-2015	Normally Aspirated V8	DSM(Driver's seat module)	Read fault codes
XX	2010-2015	Normally Aspirated V8	DSM(Driver's seat module)	Erase fault codes
XX	2010-2015	Normally Aspirated V8	DSM(Driver's seat module)	Live Data
XX	2010-2015	Normally Aspirated V8	FSJB(Central junction box (body control module))	ECU information
XX	2010-2015	Normally Aspirated V8	FSJB(Central junction box (body control module))	Read fault codes
XX	2010-2015	Normally Aspirated V8	FSJB(Central junction box (body control module))	Erase fault codes
XX	2010-2015	Normally Aspirated V8	FSJB(Central junction box (body control module))	Live Data
XX	2010-2015	Normally Aspirated V8	FTCM(Folding top control module)	ECU information
XX	2010-2015	Normally Aspirated V8	FTCM(Folding top control module)	Read fault codes
XX	2010-2015	Normally Aspirated V8	FTCM(Folding top control module)	Erase fault codes
XX	2010-2015	Normally Aspirated V8	FTCM(Folding top control module)	Live Data
XX	2010-2015	Normally Aspirated V8	ICM(Infotainment control module)	ECU information
XX	2010-2015	Normally Aspirated V8	ICM(Infotainment control module)	Read fault codes
XX	2010-2015	Normally Aspirated V8	ICM(Infotainment control module)	Erase fault codes
XX	2010-2015	Normally Aspirated V8	ICM(Infotainment control module)	Live Data
XX	2010-2015	Normally Aspirated V8	ICP(Integrated control panel)	ECU information
XX	2010-2015	Normally Aspirated V8	ICP(Integrated control panel)	Read fault codes
XX	2010-2015	Normally Aspirated V8	ICP(Integrated control panel)	Erase fault codes
XX	2010-2015	Normally Aspirated V8	KVM(Keyless vehicle module)	ECU information

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XK	2010-2015	Normally Aspirated V8	KVM(Keyless vehicle module)	Read fault codes
XK	2010-2015	Normally Aspirated V8	KVM(Keyless vehicle module)	Erase fault codes
XK	2010-2015	Normally Aspirated V8	KVM(Keyless vehicle module)	Live Data
XK	2010-2015	Normally Aspirated V8	PAM(Parking assist control module)	ECU information
XK	2010-2015	Normally Aspirated V8	PAM(Parking assist control module)	Read fault codes
XK	2010-2015	Normally Aspirated V8	PAM(Parking assist control module)	Erase fault codes
XK	2010-2015	Normally Aspirated V8	PAM(Parking assist control module)	Live Data
XK	2010-2015	Normally Aspirated V8	PDM(Passenger's door module)	ECU information
XK	2010-2015	Normally Aspirated V8	PDM(Passenger's door module)	Read fault codes
XK	2010-2015	Normally Aspirated V8	PDM(Passenger's door module)	Erase fault codes
XK	2010-2015	Normally Aspirated V8	PDM(Passenger's door module)	Live Data
XK	2010-2015	Normally Aspirated V8	PSM(Passenger's seat module)	ECU information
XK	2010-2015	Normally Aspirated V8	PSM(Passenger's seat module)	Read fault codes
XK	2010-2015	Normally Aspirated V8	PSM(Passenger's seat module)	Erase fault codes
XK	2010-2015	Normally Aspirated V8	PSM(Passenger's seat module)	Live Data
XK	2010-2015	Normally Aspirated V8	HVAC(Heating ventilation and air conditioning control module)	ECU information
XK	2010-2015	Normally Aspirated V8	HVAC(Heating ventilation and air conditioning control module)	Read fault codes
XK	2010-2015	Normally Aspirated V8	HVAC(Heating ventilation and air conditioning control module)	Erase fault codes
XK	2010-2015	Normally Aspirated V8	HVAC(Heating ventilation and air conditioning control module)	Live Data
XK	2010-2015	Normally Aspirated V8	RSJB(Auxiliary junction box (body control module B))	ECU information
XK	2010-2015	Normally Aspirated V8	RSJB(Auxiliary junction box (body control module B))	Read fault codes
XK	2010-2015	Normally Aspirated V8	RSJB(Auxiliary junction box (body control module B))	Erase fault codes
XK	2010-2015	Normally Aspirated V8	RSJB(Auxiliary junction box (body control module B))	Live Data
XK	2010-2015	Normally Aspirated V8	TPM(Tire pressure monitor module)	ECU information
XK	2010-2015	Normally Aspirated V8	TPM(Tire pressure monitor module)	Read fault codes
XK	2010-2015	Normally Aspirated V8	TPM(Tire pressure monitor module)	Erase fault codes
XK	2010-2015	Normally Aspirated V8	TPM(Tire pressure monitor module)	Live Data
XK	2010-2015	Normally Aspirated V8	FCDIM(Front control/display interface module (high level display front))	ECU information
XK	2010-2015	Normally Aspirated V8	FCDIM(Front control/display interface module (high level display front))	Read fault codes
XK	2010-2015	Normally Aspirated V8	FCDIM(Front control/display interface module (high level display front))	Erase fault codes
XK	2010-2015	Normally Aspirated V8	FCDIM(Front control/display interface module (high level display front))	Live Data
XK	2010-2015	Normally Aspirated V8	ACM(Audio front control module)	ECU information
XK	2010-2015	Normally Aspirated V8	ACM(Audio front control module)	Read fault codes
XK	2010-2015	Normally Aspirated V8	ACM(Audio front control module)	Erase fault codes
XK	2010-2015	Normally Aspirated V8	ACM(Audio front control module)	Live Data
XK	2010-2015	Normally Aspirated V8	AAM(Audio amplifier module)	ECU information
XK	2010-2015	Normally Aspirated V8	AAM(Audio amplifier module)	Read fault codes
XK	2010-2015	Normally Aspirated V8	AAM(Audio amplifier module)	Erase fault codes
XK	2010-2015	Normally Aspirated V8	AAM(Audio amplifier module)	Live Data
XK	2010-2015	Normally Aspirated V8	DABM(Digital audio broadcast module)	ECU information
XK	2010-2015	Normally Aspirated V8	DABM(Digital audio broadcast module)	Read fault codes
XK	2010-2015	Normally Aspirated V8	DABM(Digital audio broadcast module)	Erase fault codes
XK	2010-2015	Normally Aspirated V8	DABM(Digital audio broadcast module)	Live Data
XK	2010-2015	Normally Aspirated V8	DACMC(Digital audio control module C)	ECU information
XK	2010-2015	Normally Aspirated V8	DACMC(Digital audio control module C)	Read fault codes
XK	2010-2015	Normally Aspirated V8	DACMC(Digital audio control module C)	Erase fault codes
XK	2010-2015	Normally Aspirated V8	DACMC(Digital audio control module C)	Live Data
XK	2010-2015	Normally Aspirated V8	NCM(Navigation control module)	ECU information
XK	2010-2015	Normally Aspirated V8	NCM(Navigation control module)	Read fault codes
XK	2010-2015	Normally Aspirated V8	NCM(Navigation control module)	Erase fault codes
XK	2010-2015	Normally Aspirated V8	NCM(Navigation control module)	Live Data
XK	2010-2015	Normally Aspirated V8	SRM(Satellite audio unit module)	ECU information
XK	2010-2015	Normally Aspirated V8	SRM(Satellite audio unit module)	Read fault codes
XK	2010-2015	Normally Aspirated V8	SRM(Satellite audio unit module)	Erase fault codes
XK	2010-2015	Normally Aspirated V8	SRM(Satellite audio unit module)	Live Data
XK	2010-2015	Normally Aspirated V8	TEL(Cellular telephone control module)	ECU information
XK	2010-2015	Normally Aspirated V8	TEL(Cellular telephone control module)	Read fault codes
XK	2010-2015	Normally Aspirated V8	TEL(Cellular telephone control module)	Erase fault codes
XK	2010-2015	Normally Aspirated V8	TEL(Cellular telephone control module)	Live Data
XK	2010-2015	Normally Aspirated V8	APIM(Accessory protocol interface module)	ECU information
XK	2010-2015	Normally Aspirated V8	APIM(Accessory protocol interface module)	Read fault codes
XK	2010-2015	Normally Aspirated V8	APIM(Accessory protocol interface module)	Erase fault codes
XK	2010-2015	Normally Aspirated V8	APIM(Accessory protocol interface module)	Live Data
XK	2010-2015	Normally Aspirated V8	FLR(Forward looking radar)	ECU information
XK	2010-2015	Normally Aspirated V8	Special Function	Manual oil reset
XK	2010-2015	Normally Aspirated V8	Special Function	Oil service counter reset
XK	2010-2015	Normally Aspirated V8	Special Function	Reset oil level
XK	2010-2015	Normally Aspirated V8	Special Function	Idle speed test
XK	2010-2015	Normally Aspirated V8	Special Function	Parking brake release to service position
XK	2010-2015	Normally Aspirated V8	Special Function	Brake bleed
XK	2010-2015	Normally Aspirated V8	Special Function	Tire pressure monitor confirmation application
XK	2010-2015	Normally Aspirated V8	Special Function	Tire pressure monitor receiver calibration
XK	2010-2015	Normally Aspirated V8	Special Function	Tire pressure monitor sensor identification display
XK	2010-2015	Normally Aspirated V8	Special Function	Tire pressure sensor replacement
XK	2010-2015	Normally Aspirated V8	Special Function	Height calibration
XK	2010-2015	Normally Aspirated V8	Special Function	Battery replacement
XK	2010-2015	Normally Aspirated V8	Special Function	Odometer calibration
XK	2010-2015	Normally Aspirated V8	Special Function	Passenger's seat calibration

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XX	2010-2015	Normally Aspirated V8	Special Function	Driver's seat calibration
XX	2010-2015	Normally Aspirated V8	Special Function	Drivers side window calibration
XX	2010-2015	Normally Aspirated V8	Special Function	Passenger side window calibration
XX	2010-2015	Normally Aspirated V8	Special Function	Seat cushion replacement
XX	2010-2015	Supercharged V8	PCM(Powertrain control module)	ECU information
XX	2010-2015	Supercharged V8	PCM(Powertrain control module)	Read fault codes
XX	2010-2015	Supercharged V8	PCM(Powertrain control module)	Erase fault codes
XX	2010-2015	Supercharged V8	PCM(Powertrain control module)	Live Data
XX	2010-2015	Supercharged V8	TCM(Transmission control module)	ECU information
XX	2010-2015	Supercharged V8	TCM(Transmission control module)	Read fault codes
XX	2010-2015	Supercharged V8	TCM(Transmission control module)	Erase fault codes
XX	2010-2015	Supercharged V8	TCM(Transmission control module)	Live Data
XX	2010-2015	Supercharged V8	ABS(ABS control module)	ECU information
XX	2010-2015	Supercharged V8	ABS(ABS control module)	Read fault codes
XX	2010-2015	Supercharged V8	ABS(ABS control module)	Erase fault codes
XX	2010-2015	Supercharged V8	ABS(ABS control module)	Live Data
XX	2010-2015	Supercharged V8	RCM(Restraints control module)	ECU information
XX	2010-2015	Supercharged V8	RCM(Restraints control module)	Read fault codes
XX	2010-2015	Supercharged V8	RCM(Restraints control module)	Erase fault codes
XX	2010-2015	Supercharged V8	RCM(Restraints control module)	Live Data
XX	2010-2015	Supercharged V8	IPC(Instrument cluster control module)	ECU information
XX	2010-2015	Supercharged V8	IPC(Instrument cluster control module)	Read fault codes
XX	2010-2015	Supercharged V8	IPC(Instrument cluster control module)	Erase fault codes
XX	2010-2015	Supercharged V8	IPC(Instrument cluster control module)	Live Data
XX	2010-2015	Supercharged V8	CCM(Speed control module)	ECU information
XX	2010-2015	Supercharged V8	CCM(Speed control module)	Read fault codes
XX	2010-2015	Supercharged V8	CCM(Speed control module)	Erase fault codes
XX	2010-2015	Supercharged V8	CCM(Speed control module)	Live Data
XX	2010-2015	Supercharged V8	ADCM(Adaptive damping control module)	ECU information
XX	2010-2015	Supercharged V8	ADCM(Adaptive damping control module)	Read fault codes
XX	2010-2015	Supercharged V8	ADCM(Adaptive damping control module)	Erase fault codes
XX	2010-2015	Supercharged V8	ADCM(Adaptive damping control module)	Live Data
XX	2010-2015	Supercharged V8	HCM(Headlamp control module)	ECU information
XX	2010-2015	Supercharged V8	HCM(Headlamp control module)	Read fault codes
XX	2010-2015	Supercharged V8	HCM(Headlamp control module)	Erase fault codes
XX	2010-2015	Supercharged V8	HCM(Headlamp control module)	Live Data
XX	2010-2015	Supercharged V8	PBM(Parking brake control module)	ECU information
XX	2010-2015	Supercharged V8	PBM(Parking brake control module)	Read fault codes
XX	2010-2015	Supercharged V8	PBM(Parking brake control module)	Erase fault codes
XX	2010-2015	Supercharged V8	PBM(Parking brake control module)	Live Data
XX	2010-2015	Supercharged V8	VIM(Vehicle immobilizer control module)	ECU information
XX	2010-2015	Supercharged V8	VIM(Vehicle immobilizer control module)	Read fault codes
XX	2010-2015	Supercharged V8	VIM(Vehicle immobilizer control module)	Erase fault codes
XX	2010-2015	Supercharged V8	VIM(Vehicle immobilizer control module)	Live Data
XX	2010-2015	Supercharged V8	GSM(Gear shift module)	ECU information
XX	2010-2015	Supercharged V8	GSM(Gear shift module)	Read fault codes
XX	2010-2015	Supercharged V8	GSM(Gear shift module)	Erase fault codes
XX	2010-2015	Supercharged V8	GSM(Gear shift module)	Live Data
XX	2010-2015	Supercharged V8	ICS(Impact classification system)	ECU information
XX	2010-2015	Supercharged V8	ICS(Impact classification system)	Read fault codes
XX	2010-2015	Supercharged V8	ICS(Impact classification system)	Erase fault codes
XX	2010-2015	Supercharged V8	ICS(Impact classification system)	Live Data
XX	2010-2015	Supercharged V8	OCS(Restraints occupant classification system module)	ECU information
XX	2010-2015	Supercharged V8	OCS(Restraints occupant classification system module)	Read fault codes
XX	2010-2015	Supercharged V8	OCS(Restraints occupant classification system module)	Erase fault codes
XX	2010-2015	Supercharged V8	OCS(Restraints occupant classification system module)	Live Data
XX	2010-2015	Supercharged V8	RDCM(Rear differential control module)	ECU information
XX	2010-2015	Supercharged V8	RDCM(Rear differential control module)	Read fault codes
XX	2010-2015	Supercharged V8	RDCM(Rear differential control module)	Erase fault codes
XX	2010-2015	Supercharged V8	RDCM(Rear differential control module)	Live Data
XX	2010-2015	Supercharged V8	DCSM(Driver's climate seat module)	ECU information
XX	2010-2015	Supercharged V8	DCSM(Driver's climate seat module)	Read fault codes
XX	2010-2015	Supercharged V8	DCSM(Driver's climate seat module)	Erase fault codes
XX	2010-2015	Supercharged V8	DCSM(Driver's climate seat module)	Live Data
XX	2010-2015	Supercharged V8	DDM(Driver's door module)	ECU information
XX	2010-2015	Supercharged V8	DDM(Driver's door module)	Read fault codes
XX	2010-2015	Supercharged V8	DDM(Driver's door module)	Erase fault codes
XX	2010-2015	Supercharged V8	DDM(Driver's door module)	Live Data
XX	2010-2015	Supercharged V8	DSM(Driver's seat module)	ECU information
XX	2010-2015	Supercharged V8	DSM(Driver's seat module)	Read fault codes
XX	2010-2015	Supercharged V8	DSM(Driver's seat module)	Erase fault codes
XX	2010-2015	Supercharged V8	DSM(Driver's seat module)	Live Data
XX	2010-2015	Supercharged V8	FSJB(Central junction box (body control module))	ECU information
XX	2010-2015	Supercharged V8	FSJB(Central junction box (body control module))	Read fault codes
XX	2010-2015	Supercharged V8	FSJB(Central junction box (body control module))	Erase fault codes
XX	2010-2015	Supercharged V8	FSJB(Central junction box (body control module))	Live Data
XX	2010-2015	Supercharged V8	FTCM(Folding top control module)	ECU information
XX	2010-2015	Supercharged V8	FTCM(Folding top control module)	Read fault codes
XX	2010-2015	Supercharged V8	FTCM(Folding top control module)	Erase fault codes
XX	2010-2015	Supercharged V8	FTCM(Folding top control module)	Live Data
XX	2010-2015	Supercharged V8	ICM(Infotainment control module)	ECU information
XX	2010-2015	Supercharged V8	ICM(Infotainment control module)	Read fault codes
XX	2010-2015	Supercharged V8	ICM(Infotainment control module)	Erase fault codes
XX	2010-2015	Supercharged V8	ICM(Infotainment control module)	Live Data

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XX	2010-2015	Supercharged V8	ICP(Integrated control panel)	ECU information
XX	2010-2015	Supercharged V8	ICP(Integrated control panel)	Read fault codes
XX	2010-2015	Supercharged V8	ICP(Integrated control panel)	Erase fault codes
XX	2010-2015	Supercharged V8	KVM(Keyless vehicle module)	ECU information
XX	2010-2015	Supercharged V8	KVM(Keyless vehicle module)	Read fault codes
XX	2010-2015	Supercharged V8	KVM(Keyless vehicle module)	Erase fault codes
XX	2010-2015	Supercharged V8	KVM(Keyless vehicle module)	Live Data
XX	2010-2015	Supercharged V8	PAM(Parking assist control module)	ECU information
XX	2010-2015	Supercharged V8	PAM(Parking assist control module)	Read fault codes
XX	2010-2015	Supercharged V8	PAM(Parking assist control module)	Erase fault codes
XX	2010-2015	Supercharged V8	PAM(Parking assist control module)	Live Data
XX	2010-2015	Supercharged V8	PDM(Passenger's door module)	ECU information
XX	2010-2015	Supercharged V8	PDM(Passenger's door module)	Read fault codes
XX	2010-2015	Supercharged V8	PDM(Passenger's door module)	Erase fault codes
XX	2010-2015	Supercharged V8	PDM(Passenger's door module)	Live Data
XX	2010-2015	Supercharged V8	PSM(Passenger's seat module)	ECU information
XX	2010-2015	Supercharged V8	PSM(Passenger's seat module)	Read fault codes
XX	2010-2015	Supercharged V8	PSM(Passenger's seat module)	Erase fault codes
XX	2010-2015	Supercharged V8	PSM(Passenger's seat module)	Live Data
XX	2010-2015	Supercharged V8	HVAC(Heating ventilation and air conditioning control module)	ECU information
XX	2010-2015	Supercharged V8	HVAC(Heating ventilation and air conditioning control module)	Read fault codes
XX	2010-2015	Supercharged V8	HVAC(Heating ventilation and air conditioning control module)	Erase fault codes
XX	2010-2015	Supercharged V8	HVAC(Heating ventilation and air conditioning control module)	Live Data
XX	2010-2015	Supercharged V8	RSJB(Auxiliary junction box (body control module B))	ECU information
XX	2010-2015	Supercharged V8	RSJB(Auxiliary junction box (body control module B))	Read fault codes
XX	2010-2015	Supercharged V8	RSJB(Auxiliary junction box (body control module B))	Erase fault codes
XX	2010-2015	Supercharged V8	RSJB(Auxiliary junction box (body control module B))	Live Data
XX	2010-2015	Supercharged V8	TPM(Tire pressure monitor module)	ECU information
XX	2010-2015	Supercharged V8	TPM(Tire pressure monitor module)	Read fault codes
XX	2010-2015	Supercharged V8	TPM(Tire pressure monitor module)	Erase fault codes
XX	2010-2015	Supercharged V8	TPM(Tire pressure monitor module)	Live Data
XX	2010-2015	Supercharged V8	FCDIM(Front control/display interface module (high level display front))	ECU information
XX	2010-2015	Supercharged V8	FCDIM(Front control/display interface module (high level display front))	Read fault codes
XX	2010-2015	Supercharged V8	FCDIM(Front control/display interface module (high level display front))	Erase fault codes
XX	2010-2015	Supercharged V8	FCDIM(Front control/display interface module (high level display front))	Live Data
XX	2010-2015	Supercharged V8	ACM(Audio front control module)	ECU information
XX	2010-2015	Supercharged V8	ACM(Audio front control module)	Read fault codes
XX	2010-2015	Supercharged V8	ACM(Audio front control module)	Erase fault codes
XX	2010-2015	Supercharged V8	ACM(Audio front control module)	Live Data
XX	2010-2015	Supercharged V8	AAM(Audio amplifier module)	ECU information
XX	2010-2015	Supercharged V8	AAM(Audio amplifier module)	Read fault codes
XX	2010-2015	Supercharged V8	AAM(Audio amplifier module)	Erase fault codes
XX	2010-2015	Supercharged V8	AAM(Audio amplifier module)	Live Data
XX	2010-2015	Supercharged V8	DABM(Digital audio broadcast module)	ECU information
XX	2010-2015	Supercharged V8	DABM(Digital audio broadcast module)	Read fault codes
XX	2010-2015	Supercharged V8	DABM(Digital audio broadcast module)	Erase fault codes
XX	2010-2015	Supercharged V8	DABM(Digital audio broadcast module)	Live Data
XX	2010-2015	Supercharged V8	DACMC(Digital audio control module C)	ECU information
XX	2010-2015	Supercharged V8	DACMC(Digital audio control module C)	Read fault codes
XX	2010-2015	Supercharged V8	DACMC(Digital audio control module C)	Erase fault codes
XX	2010-2015	Supercharged V8	DACMC(Digital audio control module C)	Live Data
XX	2010-2015	Supercharged V8	NCM(Navigation control module)	ECU information
XX	2010-2015	Supercharged V8	NCM(Navigation control module)	Read fault codes
XX	2010-2015	Supercharged V8	NCM(Navigation control module)	Erase fault codes
XX	2010-2015	Supercharged V8	NCM(Navigation control module)	Live Data
XX	2010-2015	Supercharged V8	SRM(Satellite audio unit module)	ECU information
XX	2010-2015	Supercharged V8	SRM(Satellite audio unit module)	Read fault codes
XX	2010-2015	Supercharged V8	SRM(Satellite audio unit module)	Erase fault codes
XX	2010-2015	Supercharged V8	SRM(Satellite audio unit module)	Live Data
XX	2010-2015	Supercharged V8	TEL(Cellular telephone control module)	ECU information
XX	2010-2015	Supercharged V8	TEL(Cellular telephone control module)	Read fault codes
XX	2010-2015	Supercharged V8	TEL(Cellular telephone control module)	Erase fault codes
XX	2010-2015	Supercharged V8	TEL(Cellular telephone control module)	Live Data
XX	2010-2015	Supercharged V8	APIM(Accessory protocol interface module)	ECU information
XX	2010-2015	Supercharged V8	APIM(Accessory protocol interface module)	Read fault codes
XX	2010-2015	Supercharged V8	APIM(Accessory protocol interface module)	Erase fault codes
XX	2010-2015	Supercharged V8	APIM(Accessory protocol interface module)	Live Data
XX	2010-2015	Supercharged V8	FLR(Forward looking radar)	ECU information
XX	2010-2015	Supercharged V8	Special Function	Manual oil reset
XX	2010-2015	Supercharged V8	Special Function	Oil service counter reset
XX	2010-2015	Supercharged V8	Special Function	Reset oil level
XX	2010-2015	Supercharged V8	Special Function	Idle speed test
XX	2010-2015	Supercharged V8	Special Function	Parking brake release to service position
XX	2010-2015	Supercharged V8	Special Function	Brake bleed
XX	2010-2015	Supercharged V8	Special Function	Tire pressure monitor confirmation application
XX	2010-2015	Supercharged V8	Special Function	Tire pressure monitor receiver calibration
XX	2010-2015	Supercharged V8	Special Function	Tire pressure monitor sensor identification display
XX	2010-2015	Supercharged V8	Special Function	Tire pressure sensor replacement

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XX	2010-2015	Supercharged V8	Special Function	Height calibration
XX	2010-2015	Supercharged V8	Special Function	Battery replacement
XX	2010-2015	Supercharged V8	Special Function	Odometer calibration
XX	2010-2015	Supercharged V8	Special Function	Driver's seat calibration
XX	2010-2015	Supercharged V8	Special Function	Passenger's seat calibration
XX	2010-2015	Supercharged V8	Special Function	Drivers side window calibration
XX	2010-2015	Supercharged V8	Special Function	Passenger side window calibration
XX	2010-2015	Supercharged V8	Special Function	Seat cushion replacement
XX	2006-2009	Supercharged V8	PCM(Powertrain control module)	ECU information
XX	2006-2009	Supercharged V8	PCM(Powertrain control module)	Read fault codes
XX	2006-2009	Supercharged V8	PCM(Powertrain control module)	Erase fault codes
XX	2006-2009	Supercharged V8	PCM(Powertrain control module)	Live Data
XX	2006-2009	Supercharged V8	TCM(Transmission control module)	ECU information
XX	2006-2009	Supercharged V8	TCM(Transmission control module)	Read fault codes
XX	2006-2009	Supercharged V8	TCM(Transmission control module)	Erase fault codes
XX	2006-2009	Supercharged V8	TCM(Transmission control module)	Live Data
XX	2006-2009	Supercharged V8	ABS(ABS control module)	ECU information
XX	2006-2009	Supercharged V8	ABS(ABS control module)	Read fault codes
XX	2006-2009	Supercharged V8	ABS(ABS control module)	Erase fault codes
XX	2006-2009	Supercharged V8	ABS(ABS control module)	Live Data
XX	2006-2009	Supercharged V8	RCM(Restraints control module)	ECU information
XX	2006-2009	Supercharged V8	RCM(Restraints control module)	Read fault codes
XX	2006-2009	Supercharged V8	RCM(Restraints control module)	Erase fault codes
XX	2006-2009	Supercharged V8	RCM(Restraints control module)	Live Data
XX	2006-2009	Supercharged V8	IPC(Instrument cluster control module)	ECU information
XX	2006-2009	Supercharged V8	IPC(Instrument cluster control module)	Read fault codes
XX	2006-2009	Supercharged V8	IPC(Instrument cluster control module)	Erase fault codes
XX	2006-2009	Supercharged V8	IPC(Instrument cluster control module)	Live Data
XX	2006-2009	Supercharged V8	CCM(Speed control module)	ECU information
XX	2006-2009	Supercharged V8	CCM(Speed control module)	Read fault codes
XX	2006-2009	Supercharged V8	CCM(Speed control module)	Erase fault codes
XX	2006-2009	Supercharged V8	CCM(Speed control module)	Live Data
XX	2006-2009	Supercharged V8	ADCM(Adaptive damping control module)	ECU information
XX	2006-2009	Supercharged V8	ADCM(Adaptive damping control module)	Read fault codes
XX	2006-2009	Supercharged V8	ADCM(Adaptive damping control module)	Erase fault codes
XX	2006-2009	Supercharged V8	ADCM(Adaptive damping control module)	Live Data
XX	2006-2009	Supercharged V8	HCM(Headlamp control module)	ECU information
XX	2006-2009	Supercharged V8	HCM(Headlamp control module)	Read fault codes
XX	2006-2009	Supercharged V8	HCM(Headlamp control module)	Erase fault codes
XX	2006-2009	Supercharged V8	HCM(Headlamp control module)	Live Data
XX	2006-2009	Supercharged V8	PBM(Parking brake control module)	ECU information
XX	2006-2009	Supercharged V8	PBM(Parking brake control module)	Read fault codes
XX	2006-2009	Supercharged V8	PBM(Parking brake control module)	Erase fault codes
XX	2006-2009	Supercharged V8	PBM(Parking brake control module)	Live Data
XX	2006-2009	Supercharged V8	VIM(Vehicle immobilizer control module)	ECU information
XX	2006-2009	Supercharged V8	VIM(Vehicle immobilizer control module)	Read fault codes
XX	2006-2009	Supercharged V8	VIM(Vehicle immobilizer control module)	Erase fault codes
XX	2006-2009	Supercharged V8	VIM(Vehicle immobilizer control module)	Live Data
XX	2006-2009	Supercharged V8	ICS(Impact classification system)	ECU information
XX	2006-2009	Supercharged V8	ICS(Impact classification system)	Read fault codes
XX	2006-2009	Supercharged V8	ICS(Impact classification system)	Erase fault codes
XX	2006-2009	Supercharged V8	ICS(Impact classification system)	Live Data
XX	2006-2009	Supercharged V8	DDM(Driver's door module)	ECU information
XX	2006-2009	Supercharged V8	DDM(Driver's door module)	Read fault codes
XX	2006-2009	Supercharged V8	DDM(Driver's door module)	Erase fault codes
XX	2006-2009	Supercharged V8	DDM(Driver's door module)	Live Data
XX	2006-2009	Supercharged V8	DSM(Driver's seat module)	ECU information
XX	2006-2009	Supercharged V8	DSM(Driver's seat module)	Read fault codes
XX	2006-2009	Supercharged V8	DSM(Driver's seat module)	Erase fault codes
XX	2006-2009	Supercharged V8	DSM(Driver's seat module)	Live Data
XX	2006-2009	Supercharged V8	FSJB(Central junction box (body control module))	ECU information
XX	2006-2009	Supercharged V8	FSJB(Central junction box (body control module))	Read fault codes
XX	2006-2009	Supercharged V8	FSJB(Central junction box (body control module))	Erase fault codes
XX	2006-2009	Supercharged V8	FSJB(Central junction box (body control module))	Live Data
XX	2006-2009	Supercharged V8	FTCM(Folding top control module)	ECU information
XX	2006-2009	Supercharged V8	FTCM(Folding top control module)	Read fault codes
XX	2006-2009	Supercharged V8	FTCM(Folding top control module)	Erase fault codes
XX	2006-2009	Supercharged V8	FTCM(Folding top control module)	Live Data
XX	2006-2009	Supercharged V8	ICM(Infotainment control module)	ECU information
XX	2006-2009	Supercharged V8	ICM(Infotainment control module)	Read fault codes
XX	2006-2009	Supercharged V8	ICM(Infotainment control module)	Erase fault codes
XX	2006-2009	Supercharged V8	ICM(Infotainment control module)	Live Data
XX	2006-2009	Supercharged V8	ICP(Integrated control panel)	ECU information
XX	2006-2009	Supercharged V8	ICP(Integrated control panel)	Read fault codes
XX	2006-2009	Supercharged V8	ICP(Integrated control panel)	Erase fault codes
XX	2006-2009	Supercharged V8	KVM(Keyless vehicle module)	ECU information
XX	2006-2009	Supercharged V8	KVM(Keyless vehicle module)	Read fault codes
XX	2006-2009	Supercharged V8	KVM(Keyless vehicle module)	Erase fault codes
XX	2006-2009	Supercharged V8	KVM(Keyless vehicle module)	Live Data
XX	2006-2009	Supercharged V8	PAM(Parking assist control module)	ECU information
XX	2006-2009	Supercharged V8	PAM(Parking assist control module)	Read fault codes
XX	2006-2009	Supercharged V8	PAM(Parking assist control module)	Erase fault codes
XX	2006-2009	Supercharged V8	PAM(Parking assist control module)	Live Data
XX	2006-2009	Supercharged V8	PDM(Passenger's door module)	ECU information
XX	2006-2009	Supercharged V8	PDM(Passenger's door module)	Read fault codes
XX	2006-2009	Supercharged V8	PDM(Passenger's door module)	Erase fault codes
XX	2006-2009	Supercharged V8	PDM(Passenger's door module)	Live Data
XX	2006-2009	Supercharged V8	PSM(Passenger's seat module)	ECU information

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XK	2006-2009	Supercharged V8	PSM(Passenger's seat module)	Read fault codes
XK	2006-2009	Supercharged V8	PSM(Passenger's seat module)	Erase fault codes
XK	2006-2009	Supercharged V8	PSM(Passenger's seat module)	Live Data
XK	2006-2009	Supercharged V8	HVAC(Heating ventilation and air conditioning control module)	ECU information
XK	2006-2009	Supercharged V8	HVAC(Heating ventilation and air conditioning control module)	Read fault codes
XK	2006-2009	Supercharged V8	HVAC(Heating ventilation and air conditioning control module)	Erase fault codes
XK	2006-2009	Supercharged V8	HVAC(Heating ventilation and air conditioning control module)	Live Data
XK	2006-2009	Supercharged V8	RSJB(Auxiliary junction box (body control module B))	ECU information
XK	2006-2009	Supercharged V8	RSJB(Auxiliary junction box (body control module B))	Read fault codes
XK	2006-2009	Supercharged V8	RSJB(Auxiliary junction box (body control module B))	Erase fault codes
XK	2006-2009	Supercharged V8	RSJB(Auxiliary junction box (body control module B))	Live Data
XK	2006-2009	Supercharged V8	TPM(Tire pressure monitor module)	ECU information
XK	2006-2009	Supercharged V8	TPM(Tire pressure monitor module)	Read fault codes
XK	2006-2009	Supercharged V8	TPM(Tire pressure monitor module)	Erase fault codes
XK	2006-2009	Supercharged V8	TPM(Tire pressure monitor module)	Live Data
XK	2006-2009	Supercharged V8	FCDIM(Front control/display interface module (high level display front))	ECU information
XK	2006-2009	Supercharged V8	FCDIM(Front control/display interface module (high level display front))	Read fault codes
XK	2006-2009	Supercharged V8	FCDIM(Front control/display interface module (high level display front))	Erase fault codes
XK	2006-2009	Supercharged V8	FCDIM(Front control/display interface module (high level display front))	Live Data
XK	2006-2009	Supercharged V8	ACM(Audio front control module)	ECU information
XK	2006-2009	Supercharged V8	ACM(Audio front control module)	Read fault codes
XK	2006-2009	Supercharged V8	ACM(Audio front control module)	Erase fault codes
XK	2006-2009	Supercharged V8	ACM(Audio front control module)	Live Data
XK	2006-2009	Supercharged V8	AAM(Audio amplifier module)	ECU information
XK	2006-2009	Supercharged V8	AAM(Audio amplifier module)	Read fault codes
XK	2006-2009	Supercharged V8	AAM(Audio amplifier module)	Erase fault codes
XK	2006-2009	Supercharged V8	AAM(Audio amplifier module)	Live Data
XK	2006-2009	Supercharged V8	NCM(Navigation control module)	ECU information
XK	2006-2009	Supercharged V8	NCM(Navigation control module)	Read fault codes
XK	2006-2009	Supercharged V8	NCM(Navigation control module)	Erase fault codes
XK	2006-2009	Supercharged V8	NCM(Navigation control module)	Live Data
XK	2006-2009	Supercharged V8	SRM(Satellite audio unit module)	ECU information
XK	2006-2009	Supercharged V8	SRM(Satellite audio unit module)	Read fault codes
XK	2006-2009	Supercharged V8	SRM(Satellite audio unit module)	Erase fault codes
XK	2006-2009	Supercharged V8	SRM(Satellite audio unit module)	Live Data
XK	2006-2009	Supercharged V8	BPM(Cellular telephone control module (bluetooth telephone module))	ECU information
XK	2006-2009	Supercharged V8	BPM(Cellular telephone control module (bluetooth telephone module))	Read fault codes
XK	2006-2009	Supercharged V8	BPM(Cellular telephone control module (bluetooth telephone module))	Erase fault codes
XK	2006-2009	Supercharged V8	BPM(Cellular telephone control module (bluetooth telephone module))	Live Data
XK	2006-2009	Supercharged V8	FLR(Forward looking radar)	ECU information
XK	2006-2009	Supercharged V8	Special Function	Idle speed test
XK	2006-2009	Supercharged V8	Special Function	Parking brake release to service position
XK	2006-2009	Supercharged V8	Special Function	Lateral accelerometer calibration
XK	2006-2009	Supercharged V8	Special Function	Yaw rate sensor calibration
XK	2006-2009	Supercharged V8	Special Function	Tire pressure monitor confirmation application
XK	2006-2009	Supercharged V8	Special Function	Tire pressure monitor receiver calibration
XK	2006-2009	Supercharged V8	Special Function	Tire pressure sensor replacement
XK	2006-2009	Supercharged V8	Special Function	Odometer calibration
XK	2006-2009	Supercharged V8	Special Function	Passenger's seat calibration
XK	2006-2009	Supercharged V8	Special Function	Driver's seat calibration
XK	2006-2009	Supercharged V8	Special Function	Drivers side window calibration
XK	2006-2009	Supercharged V8	Special Function	Passenger side window calibration
XK	2006-2009	Supercharged V8	Special Function	Seat cushion replacement
XK	2006-2009	Normally Aspirated V8 3.5L	PCM(Powertrain control module)	ECU information
XK	2006-2009	Normally Aspirated V8 3.5L	PCM(Powertrain control module)	Read fault codes
XK	2006-2009	Normally Aspirated V8 3.5L	PCM(Powertrain control module)	Erase fault codes
XK	2006-2009	Normally Aspirated V8 3.5L	PCM(Powertrain control module)	Live Data
XK	2006-2009	Normally Aspirated V8 3.5L	TCM(Transmission control module)	ECU information
XK	2006-2009	Normally Aspirated V8 3.5L	TCM(Transmission control module)	Read fault codes
XK	2006-2009	Normally Aspirated V8 3.5L	TCM(Transmission control module)	Erase fault codes
XK	2006-2009	Normally Aspirated V8 3.5L	TCM(Transmission control module)	Live Data
XK	2006-2009	Normally Aspirated V8 3.5L	ABS(ABS control module)	ECU information
XK	2006-2009	Normally Aspirated V8 3.5L	ABS(ABS control module)	Read fault codes
XK	2006-2009	Normally Aspirated V8 3.5L	ABS(ABS control module)	Erase fault codes
XK	2006-2009	Normally Aspirated V8 3.5L	ABS(ABS control module)	Live Data
XK	2006-2009	Normally Aspirated V8 3.5L	RCM(Restraints control module)	ECU information
XK	2006-2009	Normally Aspirated V8 3.5L	RCM(Restraints control module)	Read fault codes
XK	2006-2009	Normally Aspirated V8 3.5L	RCM(Restraints control module)	Erase fault codes
XK	2006-2009	Normally Aspirated V8 3.5L	RCM(Restraints control module)	Live Data
XK	2006-2009	Normally Aspirated V8 3.5L	IPC(Instrument cluster control module)	ECU information
XK	2006-2009	Normally Aspirated V8 3.5L	IPC(Instrument cluster control module)	Read fault codes
XK	2006-2009	Normally Aspirated V8 3.5L	IPC(Instrument cluster control module)	Erase fault codes
XK	2006-2009	Normally Aspirated V8 3.5L	IPC(Instrument cluster control module)	Live Data
XK	2006-2009	Normally Aspirated V8 3.5L	CCM(Speed control module)	ECU information
XK	2006-2009	Normally Aspirated V8 3.5L	CCM(Speed control module)	Read fault codes

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XK	2006-2009	Normally Aspirated V8 3.5L	CCM(Speed control module)	Erase fault codes
XK	2006-2009	Normally Aspirated V8 3.5L	CCM(Speed control module)	Live Data
XK	2006-2009	Normally Aspirated V8 3.5L	ADCM(Adaptive damping control module)	ECU information
XK	2006-2009	Normally Aspirated V8 3.5L	ADCM(Adaptive damping control module)	Read fault codes
XK	2006-2009	Normally Aspirated V8 3.5L	ADCM(Adaptive damping control module)	Erase fault codes
XK	2006-2009	Normally Aspirated V8 3.5L	ADCM(Adaptive damping control module)	Live Data
XK	2006-2009	Normally Aspirated V8 3.5L	HCM(Headlamp control module)	ECU information
XK	2006-2009	Normally Aspirated V8 3.5L	HCM(Headlamp control module)	Read fault codes
XK	2006-2009	Normally Aspirated V8 3.5L	HCM(Headlamp control module)	Erase fault codes
XK	2006-2009	Normally Aspirated V8 3.5L	HCM(Headlamp control module)	Live Data
XK	2006-2009	Normally Aspirated V8 3.5L	PBM(Parking brake control module)	ECU information
XK	2006-2009	Normally Aspirated V8 3.5L	PBM(Parking brake control module)	Read fault codes
XK	2006-2009	Normally Aspirated V8 3.5L	PBM(Parking brake control module)	Erase fault codes
XK	2006-2009	Normally Aspirated V8 3.5L	PBM(Parking brake control module)	Live Data
XK	2006-2009	Normally Aspirated V8 3.5L	VIM(Vehicle immobilizer control module)	ECU information
XK	2006-2009	Normally Aspirated V8 3.5L	VIM(Vehicle immobilizer control module)	Read fault codes
XK	2006-2009	Normally Aspirated V8 3.5L	VIM(Vehicle immobilizer control module)	Erase fault codes
XK	2006-2009	Normally Aspirated V8 3.5L	VIM(Vehicle immobilizer control module)	Live Data
XK	2006-2009	Normally Aspirated V8 3.5L	ICS(Impact classification system)	ECU information
XK	2006-2009	Normally Aspirated V8 3.5L	ICS(Impact classification system)	Read fault codes
XK	2006-2009	Normally Aspirated V8 3.5L	ICS(Impact classification system)	Erase fault codes
XK	2006-2009	Normally Aspirated V8 3.5L	ICS(Impact classification system)	Live Data
XK	2006-2009	Normally Aspirated V8 3.5L	DDM(Driver's door module)	ECU information
XK	2006-2009	Normally Aspirated V8 3.5L	DDM(Driver's door module)	Read fault codes
XK	2006-2009	Normally Aspirated V8 3.5L	DDM(Driver's door module)	Erase fault codes
XK	2006-2009	Normally Aspirated V8 3.5L	DDM(Driver's door module)	Live Data
XK	2006-2009	Normally Aspirated V8 3.5L	DSM(Driver's seat module)	ECU information
XK	2006-2009	Normally Aspirated V8 3.5L	DSM(Driver's seat module)	Read fault codes
XK	2006-2009	Normally Aspirated V8 3.5L	DSM(Driver's seat module)	Erase fault codes
XK	2006-2009	Normally Aspirated V8 3.5L	DSM(Driver's seat module)	Live Data
XK	2006-2009	Normally Aspirated V8 3.5L	FSJB(Central junction box (body control module))	ECU information
XK	2006-2009	Normally Aspirated V8 3.5L	FSJB(Central junction box (body control module))	Read fault codes
XK	2006-2009	Normally Aspirated V8 3.5L	FSJB(Central junction box (body control module))	Erase fault codes
XK	2006-2009	Normally Aspirated V8 3.5L	FSJB(Central junction box (body control module))	Live Data
XK	2006-2009	Normally Aspirated V8 3.5L	FTCM(Folding top control module)	ECU information
XK	2006-2009	Normally Aspirated V8 3.5L	FTCM(Folding top control module)	Read fault codes
XK	2006-2009	Normally Aspirated V8 3.5L	FTCM(Folding top control module)	Erase fault codes
XK	2006-2009	Normally Aspirated V8 3.5L	FTCM(Folding top control module)	Live Data
XK	2006-2009	Normally Aspirated V8 3.5L	ICM(Infotainment control module)	ECU information
XK	2006-2009	Normally Aspirated V8 3.5L	ICM(Infotainment control module)	Read fault codes
XK	2006-2009	Normally Aspirated V8 3.5L	ICM(Infotainment control module)	Erase fault codes
XK	2006-2009	Normally Aspirated V8 3.5L	ICM(Infotainment control module)	Live Data
XK	2006-2009	Normally Aspirated V8 3.5L	ICP(Integrated control panel)	ECU information
XK	2006-2009	Normally Aspirated V8 3.5L	ICP(Integrated control panel)	Read fault codes
XK	2006-2009	Normally Aspirated V8 3.5L	ICP(Integrated control panel)	Erase fault codes
XK	2006-2009	Normally Aspirated V8 3.5L	KVM(Keyless vehicle module)	ECU information
XK	2006-2009	Normally Aspirated V8 3.5L	KVM(Keyless vehicle module)	Read fault codes
XK	2006-2009	Normally Aspirated V8 3.5L	KVM(Keyless vehicle module)	Erase fault codes
XK	2006-2009	Normally Aspirated V8 3.5L	KVM(Keyless vehicle module)	Live Data
XK	2006-2009	Normally Aspirated V8 3.5L	PAM(Parking assist control module)	ECU information
XK	2006-2009	Normally Aspirated V8 3.5L	PAM(Parking assist control module)	Read fault codes
XK	2006-2009	Normally Aspirated V8 3.5L	PAM(Parking assist control module)	Erase fault codes
XK	2006-2009	Normally Aspirated V8 3.5L	PAM(Parking assist control module)	Live Data
XK	2006-2009	Normally Aspirated V8 3.5L	PDM(Passenger's door module)	ECU information
XK	2006-2009	Normally Aspirated V8 3.5L	PDM(Passenger's door module)	Read fault codes
XK	2006-2009	Normally Aspirated V8 3.5L	PDM(Passenger's door module)	Erase fault codes
XK	2006-2009	Normally Aspirated V8 3.5L	PDM(Passenger's door module)	Live Data
XK	2006-2009	Normally Aspirated V8 3.5L	PSM(Passenger's seat module)	ECU information
XK	2006-2009	Normally Aspirated V8 3.5L	PSM(Passenger's seat module)	Read fault codes
XK	2006-2009	Normally Aspirated V8 3.5L	PSM(Passenger's seat module)	Erase fault codes
XK	2006-2009	Normally Aspirated V8 3.5L	PSM(Passenger's seat module)	Live Data
XK	2006-2009	Normally Aspirated V8 3.5L	HVAC(Heating ventilation and air conditioning control module)	ECU information
XK	2006-2009	Normally Aspirated V8 3.5L	HVAC(Heating ventilation and air conditioning control module)	Read fault codes
XK	2006-2009	Normally Aspirated V8 3.5L	HVAC(Heating ventilation and air conditioning control module)	Erase fault codes
XK	2006-2009	Normally Aspirated V8 3.5L	HVAC(Heating ventilation and air conditioning control module)	Live Data
XK	2006-2009	Normally Aspirated V8 3.5L	RSJB(Auxiliary junction box (body control module B))	ECU information
XK	2006-2009	Normally Aspirated V8 3.5L	RSJB(Auxiliary junction box (body control module B))	Read fault codes
XK	2006-2009	Normally Aspirated V8 3.5L	RSJB(Auxiliary junction box (body control module B))	Erase fault codes
XK	2006-2009	Normally Aspirated V8 3.5L	RSJB(Auxiliary junction box (body control module B))	Live Data
XK	2006-2009	Normally Aspirated V8 3.5L	TPM(Tire pressure monitor module)	ECU information
XK	2006-2009	Normally Aspirated V8 3.5L	TPM(Tire pressure monitor module)	Read fault codes
XK	2006-2009	Normally Aspirated V8 3.5L	TPM(Tire pressure monitor module)	Erase fault codes
XK	2006-2009	Normally Aspirated V8 3.5L	TPM(Tire pressure monitor module)	Live Data
XK	2006-2009	Normally Aspirated V8 3.5L	FCDIM(Front control/display interface module (high level display front))	ECU information
XK	2006-2009	Normally Aspirated V8 3.5L	FCDIM(Front control/display interface module (high level display front))	Read fault codes
XK	2006-2009	Normally Aspirated V8 3.5L	FCDIM(Front control/display interface module (high level display front))	Erase fault codes

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XX	2006-2009	Normally Aspirated V8 3.5L	FCDIM(Front control/display interface module (high level display front))	Live Data
XX	2006-2009	Normally Aspirated V8 3.5L	ACM(Audio front control module)	ECU information
XX	2006-2009	Normally Aspirated V8 3.5L	ACM(Audio front control module)	Read fault codes
XX	2006-2009	Normally Aspirated V8 3.5L	ACM(Audio front control module)	Erase fault codes
XX	2006-2009	Normally Aspirated V8 3.5L	ACM(Audio front control module)	Live Data
XX	2006-2009	Normally Aspirated V8 3.5L	AAM(Audio amplifier module)	ECU information
XX	2006-2009	Normally Aspirated V8 3.5L	AAM(Audio amplifier module)	Read fault codes
XX	2006-2009	Normally Aspirated V8 3.5L	AAM(Audio amplifier module)	Erase fault codes
XX	2006-2009	Normally Aspirated V8 3.5L	AAM(Audio amplifier module)	Live Data
XX	2006-2009	Normally Aspirated V8 3.5L	NCM(Navigation control module)	ECU information
XX	2006-2009	Normally Aspirated V8 3.5L	NCM(Navigation control module)	Read fault codes
XX	2006-2009	Normally Aspirated V8 3.5L	NCM(Navigation control module)	Erase fault codes
XX	2006-2009	Normally Aspirated V8 3.5L	NCM(Navigation control module)	Live Data
XX	2006-2009	Normally Aspirated V8 3.5L	SRM(Satellite audio unit module)	ECU information
XX	2006-2009	Normally Aspirated V8 3.5L	SRM(Satellite audio unit module)	Read fault codes
XX	2006-2009	Normally Aspirated V8 3.5L	SRM(Satellite audio unit module)	Erase fault codes
XX	2006-2009	Normally Aspirated V8 3.5L	SRM(Satellite audio unit module)	Live Data
XX	2006-2009	Normally Aspirated V8 3.5L	BPM(Cellular telephone control module (bluetooth telephone module))	ECU information
XX	2006-2009	Normally Aspirated V8 3.5L	BPM(Cellular telephone control module (bluetooth telephone module))	Read fault codes
XX	2006-2009	Normally Aspirated V8 3.5L	BPM(Cellular telephone control module (bluetooth telephone module))	Erase fault codes
XX	2006-2009	Normally Aspirated V8 3.5L	BPM(Cellular telephone control module (bluetooth telephone module))	Live Data
XX	2006-2009	Normally Aspirated V8 3.5L	FLR(Forward looking radar)	ECU information
XX	2006-2009	Normally Aspirated V8 3.5L	Special Function	Idle speed test
XX	2006-2009	Normally Aspirated V8 3.5L	Special Function	Parking brake release to service position
XX	2006-2009	Normally Aspirated V8 3.5L	Special Function	Lateral accelerometer calibration
XX	2006-2009	Normally Aspirated V8 3.5L	Special Function	Yaw rate sensor calibration
XX	2006-2009	Normally Aspirated V8 3.5L	Special Function	Tire pressure monitor confirmation application
XX	2006-2009	Normally Aspirated V8 3.5L	Special Function	Tire pressure monitor receiver calibration
XX	2006-2009	Normally Aspirated V8 3.5L	Special Function	Tire pressure sensor replacement
XX	2006-2009	Normally Aspirated V8 3.5L	Special Function	Odometer calibration
XX	2006-2009	Normally Aspirated V8 3.5L	Special Function	Passenger's seat calibration
XX	2006-2009	Normally Aspirated V8 3.5L	Special Function	Driver's seat calibration
XX	2006-2009	Normally Aspirated V8 3.5L	Special Function	Drivers side window calibration
XX	2006-2009	Normally Aspirated V8 3.5L	Special Function	Passenger side window calibration
XX	2006-2009	Normally Aspirated V8 3.5L	Special Function	Seat cushion replacement
XX	2006-2009	Normally Aspirated V8 4.2L	PCM(Powertrain control module)	ECU information
XX	2006-2009	Normally Aspirated V8 4.2L	PCM(Powertrain control module)	Read fault codes
XX	2006-2009	Normally Aspirated V8 4.2L	PCM(Powertrain control module)	Erase fault codes
XX	2006-2009	Normally Aspirated V8 4.2L	PCM(Powertrain control module)	Live Data
XX	2006-2009	Normally Aspirated V8 4.2L	TCM(Transmission control module)	ECU information
XX	2006-2009	Normally Aspirated V8 4.2L	TCM(Transmission control module)	Read fault codes
XX	2006-2009	Normally Aspirated V8 4.2L	TCM(Transmission control module)	Erase fault codes
XX	2006-2009	Normally Aspirated V8 4.2L	TCM(Transmission control module)	Live Data
XX	2006-2009	Normally Aspirated V8 4.2L	ABS(ABS control module)	ECU information
XX	2006-2009	Normally Aspirated V8 4.2L	ABS(ABS control module)	Read fault codes
XX	2006-2009	Normally Aspirated V8 4.2L	ABS(ABS control module)	Erase fault codes
XX	2006-2009	Normally Aspirated V8 4.2L	ABS(ABS control module)	Live Data
XX	2006-2009	Normally Aspirated V8 4.2L	RCM(Restraints control module)	ECU information
XX	2006-2009	Normally Aspirated V8 4.2L	RCM(Restraints control module)	Read fault codes
XX	2006-2009	Normally Aspirated V8 4.2L	RCM(Restraints control module)	Erase fault codes
XX	2006-2009	Normally Aspirated V8 4.2L	RCM(Restraints control module)	Live Data
XX	2006-2009	Normally Aspirated V8 4.2L	IPC(Instrument cluster control module)	ECU information
XX	2006-2009	Normally Aspirated V8 4.2L	IPC(Instrument cluster control module)	Read fault codes
XX	2006-2009	Normally Aspirated V8 4.2L	IPC(Instrument cluster control module)	Erase fault codes
XX	2006-2009	Normally Aspirated V8 4.2L	IPC(Instrument cluster control module)	Live Data
XX	2006-2009	Normally Aspirated V8 4.2L	CCM(Speed control module)	ECU information
XX	2006-2009	Normally Aspirated V8 4.2L	CCM(Speed control module)	Read fault codes
XX	2006-2009	Normally Aspirated V8 4.2L	CCM(Speed control module)	Erase fault codes
XX	2006-2009	Normally Aspirated V8 4.2L	CCM(Speed control module)	Live Data
XX	2006-2009	Normally Aspirated V8 4.2L	ADCM(Adaptive damping control module)	ECU information
XX	2006-2009	Normally Aspirated V8 4.2L	ADCM(Adaptive damping control module)	Read fault codes
XX	2006-2009	Normally Aspirated V8 4.2L	ADCM(Adaptive damping control module)	Erase fault codes
XX	2006-2009	Normally Aspirated V8 4.2L	ADCM(Adaptive damping control module)	Live Data
XX	2006-2009	Normally Aspirated V8 4.2L	HCM(Headlamp control module)	ECU information
XX	2006-2009	Normally Aspirated V8 4.2L	HCM(Headlamp control module)	Read fault codes
XX	2006-2009	Normally Aspirated V8 4.2L	HCM(Headlamp control module)	Erase fault codes
XX	2006-2009	Normally Aspirated V8 4.2L	HCM(Headlamp control module)	Live Data
XX	2006-2009	Normally Aspirated V8 4.2L	PBM(Parking brake control module)	ECU information
XX	2006-2009	Normally Aspirated V8 4.2L	PBM(Parking brake control module)	Read fault codes
XX	2006-2009	Normally Aspirated V8 4.2L	PBM(Parking brake control module)	Erase fault codes
XX	2006-2009	Normally Aspirated V8 4.2L	PBM(Parking brake control module)	Live Data
XX	2006-2009	Normally Aspirated V8 4.2L	VIM(Vehicle immobilizer control module)	ECU information
XX	2006-2009	Normally Aspirated V8 4.2L	VIM(Vehicle immobilizer control module)	Read fault codes
XX	2006-2009	Normally Aspirated V8 4.2L	VIM(Vehicle immobilizer control module)	Erase fault codes
XX	2006-2009	Normally Aspirated V8 4.2L	VIM(Vehicle immobilizer control module)	Live Data
XX	2006-2009	Normally Aspirated V8 4.2L	ICS(Impact classification system)	ECU information
XX	2006-2009	Normally Aspirated V8 4.2L	ICS(Impact classification system)	Read fault codes
XX	2006-2009	Normally Aspirated V8 4.2L	ICS(Impact classification system)	Erase fault codes
XX	2006-2009	Normally Aspirated V8 4.2L	ICS(Impact classification system)	Live Data
XX	2006-2009	Normally Aspirated V8 4.2L	DDM(Driver's door module)	ECU information
XX	2006-2009	Normally Aspirated V8 4.2L	DDM(Driver's door module)	Read fault codes
XX	2006-2009	Normally Aspirated V8 4.2L	DDM(Driver's door module)	Erase fault codes
XX	2006-2009	Normally Aspirated V8 4.2L	DDM(Driver's door module)	Live Data
XX	2006-2009	Normally Aspirated V8 4.2L	DSM(Driver's seat module)	ECU information
XX	2006-2009	Normally Aspirated V8 4.2L	DSM(Driver's seat module)	Read fault codes
XX	2006-2009	Normally Aspirated V8 4.2L	DSM(Driver's seat module)	Erase fault codes



## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XK	2006-2009	Normally Aspirated V8 4.2L	DSM(Driver's seat module)	Live Data
XK	2006-2009	Normally Aspirated V8 4.2L	FSJB(Central junction box (body control module))	ECU information
XK	2006-2009	Normally Aspirated V8 4.2L	FSJB(Central junction box (body control module))	Read fault codes
XK	2006-2009	Normally Aspirated V8 4.2L	FSJB(Central junction box (body control module))	Erase fault codes
XK	2006-2009	Normally Aspirated V8 4.2L	FSJB(Central junction box (body control module))	Live Data
XK	2006-2009	Normally Aspirated V8 4.2L	FTCM(Folding top control module)	ECU information
XK	2006-2009	Normally Aspirated V8 4.2L	FTCM(Folding top control module)	Read fault codes
XK	2006-2009	Normally Aspirated V8 4.2L	FTCM(Folding top control module)	Erase fault codes
XK	2006-2009	Normally Aspirated V8 4.2L	FTCM(Folding top control module)	Live Data
XK	2006-2009	Normally Aspirated V8 4.2L	ICM(Infotainment control module)	ECU information
XK	2006-2009	Normally Aspirated V8 4.2L	ICM(Infotainment control module)	Read fault codes
XK	2006-2009	Normally Aspirated V8 4.2L	ICM(Infotainment control module)	Erase fault codes
XK	2006-2009	Normally Aspirated V8 4.2L	ICM(Infotainment control module)	Live Data
XK	2006-2009	Normally Aspirated V8 4.2L	ICP(Integrated control panel)	ECU information
XK	2006-2009	Normally Aspirated V8 4.2L	ICP(Integrated control panel)	Read fault codes
XK	2006-2009	Normally Aspirated V8 4.2L	ICP(Integrated control panel)	Erase fault codes
XK	2006-2009	Normally Aspirated V8 4.2L	KVM(Keyless vehicle module)	ECU information
XK	2006-2009	Normally Aspirated V8 4.2L	KVM(Keyless vehicle module)	Read fault codes
XK	2006-2009	Normally Aspirated V8 4.2L	KVM(Keyless vehicle module)	Erase fault codes
XK	2006-2009	Normally Aspirated V8 4.2L	KVM(Keyless vehicle module)	Live Data
XK	2006-2009	Normally Aspirated V8 4.2L	PAM(Parking assist control module)	ECU information
XK	2006-2009	Normally Aspirated V8 4.2L	PAM(Parking assist control module)	Read fault codes
XK	2006-2009	Normally Aspirated V8 4.2L	PAM(Parking assist control module)	Erase fault codes
XK	2006-2009	Normally Aspirated V8 4.2L	PAM(Parking assist control module)	Live Data
XK	2006-2009	Normally Aspirated V8 4.2L	PDM(Passenger's door module)	ECU information
XK	2006-2009	Normally Aspirated V8 4.2L	PDM(Passenger's door module)	Read fault codes
XK	2006-2009	Normally Aspirated V8 4.2L	PDM(Passenger's door module)	Erase fault codes
XK	2006-2009	Normally Aspirated V8 4.2L	PDM(Passenger's door module)	Live Data
XK	2006-2009	Normally Aspirated V8 4.2L	PSM(Passenger's seat module)	ECU information
XK	2006-2009	Normally Aspirated V8 4.2L	PSM(Passenger's seat module)	Read fault codes
XK	2006-2009	Normally Aspirated V8 4.2L	PSM(Passenger's seat module)	Erase fault codes
XK	2006-2009	Normally Aspirated V8 4.2L	PSM(Passenger's seat module)	Live Data
XK	2006-2009	Normally Aspirated V8 4.2L	HVAC(Heating ventilation and air conditioning control module)	ECU information
XK	2006-2009	Normally Aspirated V8 4.2L	HVAC(Heating ventilation and air conditioning control module)	Read fault codes
XK	2006-2009	Normally Aspirated V8 4.2L	HVAC(Heating ventilation and air conditioning control module)	Erase fault codes
XK	2006-2009	Normally Aspirated V8 4.2L	HVAC(Heating ventilation and air conditioning control module)	Live Data
XK	2006-2009	Normally Aspirated V8 4.2L	RSJB(Auxiliary junction box (body control module B))	ECU information
XK	2006-2009	Normally Aspirated V8 4.2L	RSJB(Auxiliary junction box (body control module B))	Read fault codes
XK	2006-2009	Normally Aspirated V8 4.2L	RSJB(Auxiliary junction box (body control module B))	Erase fault codes
XK	2006-2009	Normally Aspirated V8 4.2L	RSJB(Auxiliary junction box (body control module B))	Live Data
XK	2006-2009	Normally Aspirated V8 4.2L	TPM(Tire pressure monitor module)	ECU information
XK	2006-2009	Normally Aspirated V8 4.2L	TPM(Tire pressure monitor module)	Read fault codes
XK	2006-2009	Normally Aspirated V8 4.2L	TPM(Tire pressure monitor module)	Erase fault codes
XK	2006-2009	Normally Aspirated V8 4.2L	TPM(Tire pressure monitor module)	Live Data
XK	2006-2009	Normally Aspirated V8 4.2L	FCDIM(Front control/display interface module (high level display front))	ECU information
XK	2006-2009	Normally Aspirated V8 4.2L	FCDIM(Front control/display interface module (high level display front))	Read fault codes
XK	2006-2009	Normally Aspirated V8 4.2L	FCDIM(Front control/display interface module (high level display front))	Erase fault codes
XK	2006-2009	Normally Aspirated V8 4.2L	FCDIM(Front control/display interface module (high level display front))	Live Data
XK	2006-2009	Normally Aspirated V8 4.2L	ACM(Audio front control module)	ECU information
XK	2006-2009	Normally Aspirated V8 4.2L	ACM(Audio front control module)	Read fault codes
XK	2006-2009	Normally Aspirated V8 4.2L	ACM(Audio front control module)	Erase fault codes
XK	2006-2009	Normally Aspirated V8 4.2L	ACM(Audio front control module)	Live Data
XK	2006-2009	Normally Aspirated V8 4.2L	AAM(Audio amplifier module)	ECU information
XK	2006-2009	Normally Aspirated V8 4.2L	AAM(Audio amplifier module)	Read fault codes
XK	2006-2009	Normally Aspirated V8 4.2L	AAM(Audio amplifier module)	Erase fault codes
XK	2006-2009	Normally Aspirated V8 4.2L	AAM(Audio amplifier module)	Live Data
XK	2006-2009	Normally Aspirated V8 4.2L	NCM(Navigation control module)	ECU information
XK	2006-2009	Normally Aspirated V8 4.2L	NCM(Navigation control module)	Read fault codes
XK	2006-2009	Normally Aspirated V8 4.2L	NCM(Navigation control module)	Erase fault codes
XK	2006-2009	Normally Aspirated V8 4.2L	NCM(Navigation control module)	Live Data
XK	2006-2009	Normally Aspirated V8 4.2L	SRM(Satellite audio unit module)	ECU information
XK	2006-2009	Normally Aspirated V8 4.2L	SRM(Satellite audio unit module)	Read fault codes
XK	2006-2009	Normally Aspirated V8 4.2L	SRM(Satellite audio unit module)	Erase fault codes
XK	2006-2009	Normally Aspirated V8 4.2L	SRM(Satellite audio unit module)	Live Data
XK	2006-2009	Normally Aspirated V8 4.2L	BPM(Cellular telephone control module (bluetooth telephone module))	ECU information
XK	2006-2009	Normally Aspirated V8 4.2L	BPM(Cellular telephone control module (bluetooth telephone module))	Read fault codes
XK	2006-2009	Normally Aspirated V8 4.2L	BPM(Cellular telephone control module (bluetooth telephone module))	Erase fault codes
XK	2006-2009	Normally Aspirated V8 4.2L	BPM(Cellular telephone control module (bluetooth telephone module))	Live Data
XK	2006-2009	Normally Aspirated V8 4.2L	FLR(Forward looking radar)	ECU information
XK	2006-2009	Normally Aspirated V8 4.2L	Special Function	Idle speed test
XK	2006-2009	Normally Aspirated V8 4.2L	Special Function	Parking brake release to service position
XK	2006-2009	Normally Aspirated V8 4.2L	Special Function	Lateral accelerometer calibration

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XK	2006-2009	Normally Aspirated V8 4.2L	Special Function	Yaw rate sensor calibration
XK	2006-2009	Normally Aspirated V8 4.2L	Special Function	Tire pressure monitor confirmation application
XK	2006-2009	Normally Aspirated V8 4.2L	Special Function	Tire pressure monitor receiver calibration
XK	2006-2009	Normally Aspirated V8 4.2L	Special Function	Tire pressure sensor replacement
XK	2006-2009	Normally Aspirated V8 4.2L	Special Function	Odometer calibration
XK	2006-2009	Normally Aspirated V8 4.2L	Special Function	Passenger's seat calibration
XK	2006-2009	Normally Aspirated V8 4.2L	Special Function	Driver's seat calibration
XK	2006-2009	Normally Aspirated V8 4.2L	Special Function	Drivers side window calibration
XK	2006-2009	Normally Aspirated V8 4.2L	Special Function	Passenger side window calibration
XK	2006-2009	Normally Aspirated V8 4.2L	Special Function	Seat cushion replacement
XK	2003-2006		ABS (ABS control module)	Read fault codes
XK	2003-2006		ABS (ABS control module)	Erase fault codes
XK	2003-2006		ABS (ABS control module)	Live Data
XK	2003-2006		ECM (Engine control module)	Read fault codes
XK	2003-2006		ECM (Engine control module)	Erase fault codes
XK	2003-2006		ECM (Engine control module)	Live Data
XK	2003-2006		IP (Instrument pack)	Read fault codes
XK	2003-2006		IP (Instrument pack)	Erase fault codes
XK	2003-2006		IP (Instrument pack)	Live Data
XK	2003-2006		TCM (Transmission control module)	Read fault codes
XK	2003-2006		TCM (Transmission control module)	Erase fault codes
XK	2003-2006		TCM (Transmission control module)	Live Data
XK	2003-2006		ACC (Adaptive speed control control module)	Read fault codes
XK	2003-2006		ACC (Adaptive speed control control module)	Erase fault codes
XK	2003-2006		ACC (Adaptive speed control control module)	Live Data
XK	2003-2006		DDM (Driver's door module)	Read fault codes
XK	2003-2006		DDM (Driver's door module)	Erase fault codes
XK	2003-2006		DDM (Driver's door module)	Live Data
XK	2003-2006		DSM (Driver's seat module)	Read fault codes
XK	2003-2006		DSM (Driver's seat module)	Erase fault codes
XK	2003-2006		DSM (Driver's seat module)	Live Data
XK	2003-2006		BPM (Body processor module)	Read fault codes
XK	2003-2006		BPM (Body processor module)	Erase fault codes
XK	2003-2006		BPM (Body processor module)	Live Data
XK	2003-2006		PDM (Passenger's door module)	Read fault codes
XK	2003-2006		PDM (Passenger's door module)	Erase fault codes
XK	2003-2006		PDM (Passenger's door module)	Live Data
XK	2003-2006		SLM (Security locking module)	Read fault codes
XK	2003-2006		SLM (Security locking module)	Erase fault codes
XK	2003-2006		SLM (Security locking module)	Live Data
XK	2003-2006		PSM (Passenger's seat module)	Read fault codes
XK	2003-2006		PSM (Passenger's seat module)	Erase fault codes
XK	2003-2006		PSM (Passenger's seat module)	Live Data
XK	2003-2006		PHM (Passenger's head restraint module)	Read fault codes
XK	2003-2006		PHM (Passenger's head restraint module)	Erase fault codes
XK	2003-2006		PHM (Passenger's head restraint module)	Live Data
XK	2003-2006		DHM (Driver's head restraint module)	Read fault codes
XK	2003-2006		DHM (Driver's head restraint module)	Erase fault codes
XK	2003-2006		DHM (Driver's head restraint module)	Live Data
XK	2003-2006		ADHLS L (Left lighting control module)	Read fault codes
XK	2003-2006		ADHLS L (Left lighting control module)	Erase fault codes
XK	2003-2006		ADHLS L (Left lighting control module)	Live Data
XK	2003-2006		ADHLS R (Right lighting control module)	Read fault codes
XK	2003-2006		ADHLS R (Right lighting control module)	Erase fault codes
XK	2003-2006		ADHLS R (Right lighting control module)	Live Data
XK	2003-2006		PAM (Parking aid control module)	Read fault codes
XK	2003-2006		PAM (Parking aid control module)	Erase fault codes
XK	2003-2006		PAM (Parking aid control module)	Live Data
XK	2003-2006		ARM (Restraints control module)	Read fault codes
XK	2003-2006		ARM (Restraints control module)	Erase fault codes
XK	2003-2006		ARM (Restraints control module)	Live Data
XK	2003-2006		Special Function	Oil dilution reset
XK	2001-2002		ABS (ABS control module)	Read fault codes
XK	2001-2002		ABS (ABS control module)	Erase fault codes
XK	2001-2002		ABS (ABS control module)	Live Data
XK	2001-2002		ECM (Engine control module)	Read fault codes
XK	2001-2002		ECM (Engine control module)	Erase fault codes
XK	2001-2002		ECM (Engine control module)	Live Data
XK	2001-2002		IPK (Instrument pack)	Read fault codes
XK	2001-2002		IPK (Instrument pack)	Erase fault codes
XK	2001-2002		IPK (Instrument pack)	Live Data
XK	2001-2002		TCM (Transmission control module)	Read fault codes
XK	2001-2002		TCM (Transmission control module)	Erase fault codes
XK	2001-2002		TCM (Transmission control module)	Live Data
XK	2001-2002		ACC (Adaptive speed control control module)	Read fault codes
XK	2001-2002		ACC (Adaptive speed control control module)	Erase fault codes
XK	2001-2002		SBC (Adaptive speed control booster control module)	Read fault codes
XK	2001-2002		SBC (Adaptive speed control booster control module)	Erase fault codes
XK	2001-2002		DSM (Driver's seat module)	Live Data
XK	2001-2002		PSM (Passenger's seat module)	Live Data
XK	2001-2002		SLM (Security locking module)	Live Data
XK	2001-2002		PDM (Passenger's door module)	Live Data
XK	2001-2002		DDM (Driver's door module)	Live Data
XK	2001-2002		BPM (Body processor module)	Live Data
XK	2001-2002		DHM (Driver's head restraint module)	Read fault codes
XK	2001-2002		DHM (Driver's head restraint module)	Erase fault codes
XK	2001-2002		DHM (Driver's head restraint module)	Live Data
XK	2001-2002		PHM (Passenger's head restraint module)	Read fault codes
XK	2001-2002		PHM (Passenger's head restraint module)	Erase fault codes

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XK	2001-2002		PHM(Passenger's head restraint module)	Live Data
XK	2001-2002		ARM(Restraints control module)	Read fault codes
XK	2001-2002		ARM(Restraints control module)	Erase fault codes
XK	2001-2002		ARM(Restraints control module)	Live Data
XK	2000		ABS(ABS control module)	Read fault codes
XK	2000		ABS(ABS control module)	Erase fault codes
XK	2000		ABS(ABS control module)	Live Data
XK	2000		ECM(Engine control module)	Read fault codes
XK	2000		ECM(Engine control module)	Erase fault codes
XK	2000		ECM(Engine control module)	Live Data
XK	2000		IPK(Instrument pack)	Read fault codes
XK	2000		IPK(Instrument pack)	Erase fault codes
XK	2000		IPK(Instrument pack)	Live Data
XK	2000		TCM(Transmission control module)	Read fault codes
XK	2000		TCM(Transmission control module)	Erase fault codes
XK	2000		TCM(Transmission control module)	Live Data
XK	2000		ACC(Adaptive speed control control module)	Read fault codes
XK	2000		ACC(Adaptive speed control control module)	Erase fault codes
XK	2000		SBC(Adaptive speed control booster control module)	Read fault codes
XK	2000		SBC(Adaptive speed control booster control module)	Erase fault codes
XK	2000		DSM(Driver's seat module)	Live Data
XK	2000		PSM(Passenger's seat module)	Live Data
XK	2000		SLM(Security locking module)	Live Data
XK	2000		PDM(Passenger's door module)	Live Data
XK	2000		DDM(Driver's door module)	Live Data
XK	2000		BPM(Body processor module)	Live Data
XK	2000		ACM(Restraints control module)	Read fault codes
XK	2000		ACM(Restraints control module)	Erase fault codes
XK	2000		ACM(Restraints control module)	Live Data
XF	2016-	V6 Diesel	PCM(Powertrain control module)	ECU information
XF	2016-	V6 Diesel	PCM(Powertrain control module)	Read fault codes
XF	2016-	V6 Diesel	PCM(Powertrain control module)	Erase fault codes
XF	2016-	V6 Diesel	PCM(Powertrain control module)	Live Data
XF	2016-	V6 Diesel	TCM(Transmission control module)	ECU information
XF	2016-	V6 Diesel	TCM(Transmission control module)	Read fault codes
XF	2016-	V6 Diesel	TCM(Transmission control module)	Erase fault codes
XF	2016-	V6 Diesel	TCM(Transmission control module)	Live Data
XF	2016-	V6 Diesel	ABS(ABS control module)	ECU information
XF	2016-	V6 Diesel	ABS(ABS control module)	Read fault codes
XF	2016-	V6 Diesel	ABS(ABS control module)	Erase fault codes
XF	2016-	V6 Diesel	ABS(ABS control module)	Live Data
XF	2016-	V6 Diesel	RCM(Restraints control module)	ECU information
XF	2016-	V6 Diesel	RCM(Restraints control module)	Read fault codes
XF	2016-	V6 Diesel	RCM(Restraints control module)	Erase fault codes
XF	2016-	V6 Diesel	RCM(Restraints control module)	Live Data
XF	2016-	V6 Diesel	IPC(Instrument cluster control module)	ECU information
XF	2016-	V6 Diesel	IPC(Instrument cluster control module)	Read fault codes
XF	2016-	V6 Diesel	IPC(Instrument cluster control module)	Erase fault codes
XF	2016-	V6 Diesel	IPC(Instrument cluster control module)	Live Data
XF	2016-	V6 Diesel	BCM(Body control module)	ECU information
XF	2016-	V6 Diesel	BCM(Body control module)	Read fault codes
XF	2016-	V6 Diesel	BCM(Body control module)	Erase fault codes
XF	2016-	V6 Diesel	BCM(Body control module)	Live Data
XF	2016-	V6 Diesel	CCM(Speed control module)	ECU information
XF	2016-	V6 Diesel	CCM(Speed control module)	Read fault codes
XF	2016-	V6 Diesel	CCM(Speed control module)	Erase fault codes
XF	2016-	V6 Diesel	CCM(Speed control module)	Live Data
XF	2016-	V6 Diesel	GSM(Gear shift module)	ECU information
XF	2016-	V6 Diesel	GSM(Gear shift module)	Read fault codes
XF	2016-	V6 Diesel	GSM(Gear shift module)	Erase fault codes
XF	2016-	V6 Diesel	GSM(Gear shift module)	Live Data
XF	2016-	V6 Diesel	GWM(Gateway module)	ECU information
XF	2016-	V6 Diesel	GWM(Gateway module)	Read fault codes
XF	2016-	V6 Diesel	GWM(Gateway module)	Erase fault codes
XF	2016-	V6 Diesel	GWM(Gateway module)	Live Data
XF	2016-	V6 Diesel	OCS(Restraints occupant classification system module)	ECU information
XF	2016-	V6 Diesel	OCS(Restraints occupant classification system module)	Read fault codes
XF	2016-	V6 Diesel	OCS(Restraints occupant classification system module)	Erase fault codes
XF	2016-	V6 Diesel	OCS(Restraints occupant classification system module)	Live Data
XF	2016-	V6 Diesel	TCCM(Transfer case control module)	ECU information
XF	2016-	V6 Diesel	TCCM(Transfer case control module)	Read fault codes
XF	2016-	V6 Diesel	TCCM(Transfer case control module)	Erase fault codes
XF	2016-	V6 Diesel	TCCM(Transfer case control module)	Live Data
XF	2016-	V6 Diesel	TCU(Telematic control unit module)	ECU information
XF	2016-	V6 Diesel	TCU(Telematic control unit module)	Read fault codes
XF	2016-	V6 Diesel	TCU(Telematic control unit module)	Erase fault codes
XF	2016-	V6 Diesel	TCU(Telematic control unit module)	Live Data
XF	2016-	V6 Diesel	TPM(Tire pressure monitor module)	ECU information
XF	2016-	V6 Diesel	TPM(Tire pressure monitor module)	Read fault codes
XF	2016-	V6 Diesel	TPM(Tire pressure monitor module)	Erase fault codes
XF	2016-	V6 Diesel	TPM(Tire pressure monitor module)	Live Data
XF	2016-	V6 Diesel	VIM(Vehicle immobilizer control module)	ECU information
XF	2016-	V6 Diesel	VIM(Vehicle immobilizer control module)	Read fault codes
XF	2016-	V6 Diesel	VIM(Vehicle immobilizer control module)	Erase fault codes
XF	2016-	V6 Diesel	VIM(Vehicle immobilizer control module)	Live Data
XF	2016-	V6 Diesel	ATCM(All terrain control module)	ECU information

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XF	2016-	V6 Diesel	ATCM(All terrain control module)	Read fault codes
XF	2016-	V6 Diesel	ATCM(All terrain control module)	Erase fault codes
XF	2016-	V6 Diesel	ATCM(All terrain control module)	Live Data
XF	2016-	V6 Diesel	CHCM(Chassis control module)	ECU information
XF	2016-	V6 Diesel	CHCM(Chassis control module)	Read fault codes
XF	2016-	V6 Diesel	CHCM(Chassis control module)	Erase fault codes
XF	2016-	V6 Diesel	CHCM(Chassis control module)	Live Data
XF	2016-	V6 Diesel	PAM(Parking assist control module)	ECU information
XF	2016-	V6 Diesel	PAM(Parking assist control module)	Read fault codes
XF	2016-	V6 Diesel	PAM(Parking assist control module)	Erase fault codes
XF	2016-	V6 Diesel	PAM(Parking assist control module)	Live Data
XF	2016-	V6 Diesel	PSCM(Power steering control module)	ECU information
XF	2016-	V6 Diesel	PSCM(Power steering control module)	Read fault codes
XF	2016-	V6 Diesel	PSCM(Power steering control module)	Erase fault codes
XF	2016-	V6 Diesel	PSCM(Power steering control module)	Live Data
XF	2016-	V6 Diesel	SASM(Steering angle sensor module)	ECU information
XF	2016-	V6 Diesel	SASM(Steering angle sensor module)	Read fault codes
XF	2016-	V6 Diesel	SASM(Steering angle sensor module)	Erase fault codes
XF	2016-	V6 Diesel	SASM(Steering angle sensor module)	Live Data
XF	2016-	V6 Diesel	AHU(InControl Touch audio head unit)	ECU information
XF	2016-	V6 Diesel	AHU(InControl Touch audio head unit)	Read fault codes
XF	2016-	V6 Diesel	AHU(InControl Touch audio head unit)	Erase fault codes
XF	2016-	V6 Diesel	AUCM(Head-up display cooling fan module)	ECU information
XF	2016-	V6 Diesel	AUCM(Head-up display cooling fan module)	Read fault codes
XF	2016-	V6 Diesel	AUCM(Head-up display cooling fan module)	Erase fault codes
XF	2016-	V6 Diesel	AUCM(Head-up display cooling fan module)	Live Data
XF	2016-	V6 Diesel	FCIM(Integrated control panel)	ECU information
XF	2016-	V6 Diesel	FCIM(Integrated control panel)	Read fault codes
XF	2016-	V6 Diesel	FCIM(Integrated control panel)	Erase fault codes
XF	2016-	V6 Diesel	FCIM(Integrated control panel)	Live Data
XF	2016-	V6 Diesel	HUD(Head up display)	ECU information
XF	2016-	V6 Diesel	HUD(Head up display)	Read fault codes
XF	2016-	V6 Diesel	HUD(Head up display)	Erase fault codes
XF	2016-	V6 Diesel	HVAC(Heating ventilation and air conditioning control module)	ECU information
XF	2016-	V6 Diesel	HVAC(Heating ventilation and air conditioning control module)	Read fault codes
XF	2016-	V6 Diesel	HVAC(Heating ventilation and air conditioning control module)	Erase fault codes
XF	2016-	V6 Diesel	HVAC(Heating ventilation and air conditioning control module)	Live Data
XF	2016-	V6 Diesel	IMC(InControl Touch Pro infotainment master controller)	ECU information
XF	2016-	V6 Diesel	IMC(InControl Touch Pro infotainment master controller)	Read fault codes
XF	2016-	V6 Diesel	IMC(InControl Touch Pro infotainment master controller)	Erase fault codes
XF	2016-	V6 Diesel	IMC(InControl Touch Pro infotainment master controller)	Live Data
XF	2016-	V6 Diesel	IPMA(Image processing control module A)	ECU information
XF	2016-	V6 Diesel	IPMA(Image processing control module A)	Read fault codes
XF	2016-	V6 Diesel	IPMA(Image processing control module A)	Erase fault codes
XF	2016-	V6 Diesel	IPMA(Image processing control module A)	Live Data
XF	2016-	V6 Diesel	IPMB(Image processing module B)	ECU information
XF	2016-	V6 Diesel	IPMB(Image processing module B)	Read fault codes
XF	2016-	V6 Diesel	IPMB(Image processing module B)	Erase fault codes
XF	2016-	V6 Diesel	IPMB(Image processing module B)	Live Data
XF	2016-	V6 Diesel	RHVAC(Rear Heating ventilation and air conditioning control module)	ECU information
XF	2016-	V6 Diesel	RHVAC(Rear Heating ventilation and air conditioning control module)	Read fault codes
XF	2016-	V6 Diesel	RHVAC(Rear Heating ventilation and air conditioning control module)	Erase fault codes
XF	2016-	V6 Diesel	RHVAC(Rear Heating ventilation and air conditioning control module)	Live Data
XF	2016-	V6 Diesel	SODL(Side object detection control module - Left)	ECU information
XF	2016-	V6 Diesel	SODL(Side object detection control module - Left)	Read fault codes
XF	2016-	V6 Diesel	SODL(Side object detection control module - Left)	Erase fault codes
XF	2016-	V6 Diesel	SODL(Side object detection control module - Left)	Live Data
XF	2016-	V6 Diesel	SODR(Side object detection control module - Right)	ECU information
XF	2016-	V6 Diesel	SODR(Side object detection control module - Right)	Read fault codes
XF	2016-	V6 Diesel	SODR(Side object detection control module - Right)	Erase fault codes
XF	2016-	V6 Diesel	SODR(Side object detection control module - Right)	Live Data
XF	2016-	V6 Diesel	DDM(Driver's door module)	ECU information
XF	2016-	V6 Diesel	DDM(Driver's door module)	Read fault codes
XF	2016-	V6 Diesel	DDM(Driver's door module)	Erase fault codes
XF	2016-	V6 Diesel	DDM(Driver's door module)	Live Data
XF	2016-	V6 Diesel	DRDM(Driver's (side) rear door module)	ECU information
XF	2016-	V6 Diesel	DRDM(Driver's (side) rear door module)	Read fault codes
XF	2016-	V6 Diesel	DRDM(Driver's (side) rear door module)	Erase fault codes
XF	2016-	V6 Diesel	DRDM(Driver's (side) rear door module)	Live Data
XF	2016-	V6 Diesel	DSM(Driver's seat module)	ECU information
XF	2016-	V6 Diesel	DSM(Driver's seat module)	Read fault codes
XF	2016-	V6 Diesel	DSM(Driver's seat module)	Erase fault codes

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XF	2016-	V6 Diesel	DSM(Driver's seat module)	Live Data
XF	2016-	V6 Diesel	PDM(Passenger's door module)	ECU information
XF	2016-	V6 Diesel	PDM(Passenger's door module)	Read fault codes
XF	2016-	V6 Diesel	PDM(Passenger's door module)	Erase fault codes
XF	2016-	V6 Diesel	PDM(Passenger's door module)	Live Data
XF	2016-	V6 Diesel	PRDM(Passenger's (side) rear door module)	ECU information
XF	2016-	V6 Diesel	PRDM(Passenger's (side) rear door module)	Read fault codes
XF	2016-	V6 Diesel	PRDM(Passenger's (side) rear door module)	Erase fault codes
XF	2016-	V6 Diesel	PRDM(Passenger's (side) rear door module)	Live Data
XF	2016-	V6 Diesel	PSM(Passenger's seat module)	ECU information
XF	2016-	V6 Diesel	PSM(Passenger's seat module)	Read fault codes
XF	2016-	V6 Diesel	PSM(Passenger's seat module)	Erase fault codes
XF	2016-	V6 Diesel	PSM(Passenger's seat module)	Live Data
XF	2016-	V6 Diesel	RFA(Keyless vehicle module)	ECU information
XF	2016-	V6 Diesel	RFA(Keyless vehicle module)	Read fault codes
XF	2016-	V6 Diesel	RFA(Keyless vehicle module)	Erase fault codes
XF	2016-	V6 Diesel	RFA(Keyless vehicle module)	Live Data
XF	2016-	V6 Diesel	RGTM(Rear gate / trunk module)	ECU information
XF	2016-	V6 Diesel	RGTM(Rear gate / trunk module)	Read fault codes
XF	2016-	V6 Diesel	RGTM(Rear gate / trunk module)	Erase fault codes
XF	2016-	V6 Diesel	RGTM(Rear gate / trunk module)	Live Data
XF	2016-	V6 Diesel	TBM(Deployable towbar control module)	ECU information
XF	2016-	V6 Diesel	TBM(Deployable towbar control module)	Read fault codes
XF	2016-	V6 Diesel	TBM(Deployable towbar control module)	Erase fault codes
XF	2016-	V6 Diesel	TBM(Deployable towbar control module)	Live Data
XF	2016-	V6 Diesel	AAM(InControl Touch Pro audio amplifier module)	ECU information
XF	2016-	V6 Diesel	AAM(InControl Touch Pro audio amplifier module)	Read fault codes
XF	2016-	V6 Diesel	AAM(InControl Touch Pro audio amplifier module)	Erase fault codes
XF	2016-	V6 Diesel	AAM(InControl Touch Pro audio amplifier module)	Live Data
XF	2016-	V6 Diesel	ISC(InControl Touch Pro infotainment slave controller)	ECU information
XF	2016-	V6 Diesel	ISC(InControl Touch Pro infotainment slave controller)	Read fault codes
XF	2016-	V6 Diesel	ISC(InControl Touch Pro infotainment slave controller)	Erase fault codes
XF	2016-	V6 Diesel	Special Function	Oil service counter reset
XF	2016-	V6 Diesel	Special Function	Service interval reset
XF	2016-	V6 Diesel	Special Function	Display injector correction factors
XF	2016-	V6 Diesel	Special Function	Parking brake activation
XF	2016-	V6 Diesel	Special Function	Parking brake pad replacement - Exit maintenance mode application
XF	2016-	V6 Diesel	Special Function	Parking brake pad replacement - Release to service position
XF	2016-	V6 Diesel	Special Function	Apply and release electric park brake
XF	2016-	V6 Diesel	Special Function	Power steering soft-lock end stops reset routine
XF	2016-	V6 Diesel	Special Function	Steering column calibration
XF	2016-	V6 Diesel	Special Function	Lock steering tune to vehicle
XF	2016-	V6 Diesel	Special Function	Tire pressure monitor sensor identification display
XF	2016-	V6 Diesel	Special Function	Tire pressure sensor replacement
XF	2016-	V6 Diesel	Special Function	Diesel particulate filter differential pressure sensor replacement
XF	2016-	V6 Diesel	Special Function	Diesel particulate filter dynamic regeneration
XF	2016-	V6 Diesel	Special Function	Diesel particulate filter replacement
XF	2016-	V6 Diesel	Special Function	Battery replacement
XF	2016-	V6 Diesel	Special Function	Telematics control module battery replacement reset
XF	2016-	V6 Diesel	Special Function	Seat cushion replacement
XF	2016-	V6 Diesel	Special Function	Driver's seat calibration
XF	2016-	V6 Diesel	Special Function	Passenger's seat calibration
XF	2016-	V6 Diesel	Special Function	Roof Blind calibration
XF	2016-	V6 Diesel	Special Function	Sunroof calibration
XF	2016-	V6 Diesel	Special Function	Door window calibration
XF	2016-	V6 Diesel	Special Function	Tailgate/trunk calibration
XF	2016-	Supercharged V6 3.0L engine	PCM(Powertrain control module)	ECU information
XF	2016-	Supercharged V6 3.0L engine	PCM(Powertrain control module)	Read fault codes
XF	2016-	Supercharged V6 3.0L engine	PCM(Powertrain control module)	Erase fault codes
XF	2016-	Supercharged V6 3.0L engine	PCM(Powertrain control module)	Live Data
XF	2016-	Supercharged V6 3.0L engine	TCM(Transmission control module)	ECU information
XF	2016-	Supercharged V6 3.0L engine	TCM(Transmission control module)	Read fault codes
XF	2016-	Supercharged V6 3.0L engine	TCM(Transmission control module)	Erase fault codes
XF	2016-	Supercharged V6 3.0L engine	TCM(Transmission control module)	Live Data
XF	2016-	Supercharged V6 3.0L engine	ABS(ABS control module)	ECU information
XF	2016-	Supercharged V6 3.0L engine	ABS(ABS control module)	Read fault codes
XF	2016-	Supercharged V6 3.0L engine	ABS(ABS control module)	Erase fault codes
XF	2016-	Supercharged V6 3.0L engine	ABS(ABS control module)	Live Data
XF	2016-	Supercharged V6 3.0L engine	RCM(Restraints control module)	ECU information
XF	2016-	Supercharged V6 3.0L engine	RCM(Restraints control module)	Read fault codes
XF	2016-	Supercharged V6 3.0L engine	RCM(Restraints control module)	Erase fault codes
XF	2016-	Supercharged V6 3.0L engine	RCM(Restraints control module)	Live Data
XF	2016-	Supercharged V6 3.0L engine	IPC(Instrument cluster control module)	ECU information
XF	2016-	Supercharged V6 3.0L engine	IPC(Instrument cluster control module)	Read fault codes
XF	2016-	Supercharged V6 3.0L engine	IPC(Instrument cluster control module)	Erase fault codes
XF	2016-	Supercharged V6 3.0L engine	IPC(Instrument cluster control module)	Live Data
XF	2016-	Supercharged V6 3.0L engine	BCM(Body control module)	ECU information
XF	2016-	Supercharged V6 3.0L engine	BCM(Body control module)	Read fault codes

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XF	2016-	Supercharged V6 3.0L engine	BCM(Body control module)	Erase fault codes
XF	2016-	Supercharged V6 3.0L engine	BCM(Body control module)	Live Data
XF	2016-	Supercharged V6 3.0L engine	CCM(Speed control module)	ECU information
XF	2016-	Supercharged V6 3.0L engine	CCM(Speed control module)	Read fault codes
XF	2016-	Supercharged V6 3.0L engine	CCM(Speed control module)	Erase fault codes
XF	2016-	Supercharged V6 3.0L engine	CCM(Speed control module)	Live Data
XF	2016-	Supercharged V6 3.0L engine	GSM(Gear shift module)	ECU information
XF	2016-	Supercharged V6 3.0L engine	GSM(Gear shift module)	Read fault codes
XF	2016-	Supercharged V6 3.0L engine	GSM(Gear shift module)	Erase fault codes
XF	2016-	Supercharged V6 3.0L engine	GSM(Gear shift module)	Live Data
XF	2016-	Supercharged V6 3.0L engine	GWM(Gateway module)	ECU information
XF	2016-	Supercharged V6 3.0L engine	GWM(Gateway module)	Read fault codes
XF	2016-	Supercharged V6 3.0L engine	GWM(Gateway module)	Erase fault codes
XF	2016-	Supercharged V6 3.0L engine	GWM(Gateway module)	Live Data
XF	2016-	Supercharged V6 3.0L engine	OCS(Restraints occupant classification system module)	ECU information
XF	2016-	Supercharged V6 3.0L engine	OCS(Restraints occupant classification system module)	Read fault codes
XF	2016-	Supercharged V6 3.0L engine	OCS(Restraints occupant classification system module)	Erase fault codes
XF	2016-	Supercharged V6 3.0L engine	OCS(Restraints occupant classification system module)	Live Data
XF	2016-	Supercharged V6 3.0L engine	TCCM(Transfer case control module)	ECU information
XF	2016-	Supercharged V6 3.0L engine	TCCM(Transfer case control module)	Read fault codes
XF	2016-	Supercharged V6 3.0L engine	TCCM(Transfer case control module)	Erase fault codes
XF	2016-	Supercharged V6 3.0L engine	TCCM(Transfer case control module)	Live Data
XF	2016-	Supercharged V6 3.0L engine	TCU(Telematic control unit module)	ECU information
XF	2016-	Supercharged V6 3.0L engine	TCU(Telematic control unit module)	Read fault codes
XF	2016-	Supercharged V6 3.0L engine	TCU(Telematic control unit module)	Erase fault codes
XF	2016-	Supercharged V6 3.0L engine	TCU(Telematic control unit module)	Live Data
XF	2016-	Supercharged V6 3.0L engine	TPM(Tire pressure monitor module)	ECU information
XF	2016-	Supercharged V6 3.0L engine	TPM(Tire pressure monitor module)	Read fault codes
XF	2016-	Supercharged V6 3.0L engine	TPM(Tire pressure monitor module)	Erase fault codes
XF	2016-	Supercharged V6 3.0L engine	TPM(Tire pressure monitor module)	Live Data
XF	2016-	Supercharged V6 3.0L engine	VIM(Vehicle immobilizer control module)	ECU information
XF	2016-	Supercharged V6 3.0L engine	VIM(Vehicle immobilizer control module)	Read fault codes
XF	2016-	Supercharged V6 3.0L engine	VIM(Vehicle immobilizer control module)	Erase fault codes
XF	2016-	Supercharged V6 3.0L engine	VIM(Vehicle immobilizer control module)	Live Data
XF	2016-	Supercharged V6 3.0L engine	ATCM(All terrain control module)	ECU information
XF	2016-	Supercharged V6 3.0L engine	ATCM(All terrain control module)	Read fault codes
XF	2016-	Supercharged V6 3.0L engine	ATCM(All terrain control module)	Erase fault codes
XF	2016-	Supercharged V6 3.0L engine	ATCM(All terrain control module)	Live Data
XF	2016-	Supercharged V6 3.0L engine	CHCM(Chassis control module)	ECU information
XF	2016-	Supercharged V6 3.0L engine	CHCM(Chassis control module)	Read fault codes
XF	2016-	Supercharged V6 3.0L engine	CHCM(Chassis control module)	Erase fault codes
XF	2016-	Supercharged V6 3.0L engine	CHCM(Chassis control module)	Live Data
XF	2016-	Supercharged V6 3.0L engine	PAM(Parking assist control module)	ECU information
XF	2016-	Supercharged V6 3.0L engine	PAM(Parking assist control module)	Read fault codes
XF	2016-	Supercharged V6 3.0L engine	PAM(Parking assist control module)	Erase fault codes
XF	2016-	Supercharged V6 3.0L engine	PAM(Parking assist control module)	Live Data
XF	2016-	Supercharged V6 3.0L engine	PSCM(Power steering control module)	ECU information
XF	2016-	Supercharged V6 3.0L engine	PSCM(Power steering control module)	Read fault codes
XF	2016-	Supercharged V6 3.0L engine	PSCM(Power steering control module)	Erase fault codes
XF	2016-	Supercharged V6 3.0L engine	PSCM(Power steering control module)	Live Data
XF	2016-	Supercharged V6 3.0L engine	SASM(Steering angle sensor module)	ECU information
XF	2016-	Supercharged V6 3.0L engine	SASM(Steering angle sensor module)	Read fault codes
XF	2016-	Supercharged V6 3.0L engine	SASM(Steering angle sensor module)	Erase fault codes
XF	2016-	Supercharged V6 3.0L engine	SASM(Steering angle sensor module)	Live Data
XF	2016-	Supercharged V6 3.0L engine	AHU(InControl Touch audio head unit)	ECU information
XF	2016-	Supercharged V6 3.0L engine	AHU(InControl Touch audio head unit)	Read fault codes
XF	2016-	Supercharged V6 3.0L engine	AHU(InControl Touch audio head unit)	Erase fault codes
XF	2016-	Supercharged V6 3.0L engine	AUCM(Head-up display cooling fan module)	ECU information
XF	2016-	Supercharged V6 3.0L engine	AUCM(Head-up display cooling fan module)	Read fault codes
XF	2016-	Supercharged V6 3.0L engine	AUCM(Head-up display cooling fan module)	Erase fault codes
XF	2016-	Supercharged V6 3.0L engine	AUCM(Head-up display cooling fan module)	Live Data
XF	2016-	Supercharged V6 3.0L engine	FCIM(Integrated control panel)	ECU information
XF	2016-	Supercharged V6 3.0L engine	FCIM(Integrated control panel)	Read fault codes
XF	2016-	Supercharged V6 3.0L engine	FCIM(Integrated control panel)	Erase fault codes
XF	2016-	Supercharged V6 3.0L engine	FCIM(Integrated control panel)	Live Data
XF	2016-	Supercharged V6 3.0L engine	HUD(Head up display)	ECU information
XF	2016-	Supercharged V6 3.0L engine	HUD(Head up display)	Read fault codes
XF	2016-	Supercharged V6 3.0L engine	HUD(Head up display)	Erase fault codes
XF	2016-	Supercharged V6 3.0L engine	HVAC(Heating ventilation and air conditioning control module)	ECU information
XF	2016-	Supercharged V6 3.0L engine	HVAC(Heating ventilation and air conditioning control module)	Read fault codes
XF	2016-	Supercharged V6 3.0L engine	HVAC(Heating ventilation and air conditioning control module)	Erase fault codes
XF	2016-	Supercharged V6 3.0L engine	HVAC(Heating ventilation and air conditioning control module)	Live Data
XF	2016-	Supercharged V6 3.0L engine	IMC(InControl Touch Pro infotainment master controller)	ECU information
XF	2016-	Supercharged V6 3.0L engine	IMC(InControl Touch Pro infotainment master controller)	Read fault codes
XF	2016-	Supercharged V6 3.0L engine	IMC(InControl Touch Pro infotainment master controller)	Erase fault codes
XF	2016-	Supercharged V6 3.0L engine	IMC(InControl Touch Pro infotainment master controller)	Live Data
XF	2016-	Supercharged V6 3.0L engine	IPMA(Image processing control module A)	ECU information
XF	2016-	Supercharged V6 3.0L engine	IPMA(Image processing control module A)	Read fault codes
XF	2016-	Supercharged V6 3.0L engine	IPMA(Image processing control module A)	Erase fault codes
XF	2016-	Supercharged V6 3.0L engine	IPMA(Image processing control module A)	Live Data

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XF	2016-	Supercharged V6 3.0L engine	IPMB (Image processing module B)	ECU information
XF	2016-	Supercharged V6 3.0L engine	IPMB (Image processing module B)	Read fault codes
XF	2016-	Supercharged V6 3.0L engine	IPMB (Image processing module B)	Erase fault codes
XF	2016-	Supercharged V6 3.0L engine	IPMB (Image processing module B)	Live Data
XF	2016-	Supercharged V6 3.0L engine	RHVAC (Rear Heating ventilation and air conditioning control module)	ECU information
XF	2016-	Supercharged V6 3.0L engine	RHVAC (Rear Heating ventilation and air conditioning control module)	Read fault codes
XF	2016-	Supercharged V6 3.0L engine	RHVAC (Rear Heating ventilation and air conditioning control module)	Erase fault codes
XF	2016-	Supercharged V6 3.0L engine	RHVAC (Rear Heating ventilation and air conditioning control module)	Live Data
XF	2016-	Supercharged V6 3.0L engine	SODL (Side object detection control module - Left)	ECU information
XF	2016-	Supercharged V6 3.0L engine	SODL (Side object detection control module - Left)	Read fault codes
XF	2016-	Supercharged V6 3.0L engine	SODL (Side object detection control module - Left)	Erase fault codes
XF	2016-	Supercharged V6 3.0L engine	SODL (Side object detection control module - Left)	Live Data
XF	2016-	Supercharged V6 3.0L engine	SODR (Side object detection control module - Right)	ECU information
XF	2016-	Supercharged V6 3.0L engine	SODR (Side object detection control module - Right)	Read fault codes
XF	2016-	Supercharged V6 3.0L engine	SODR (Side object detection control module - Right)	Erase fault codes
XF	2016-	Supercharged V6 3.0L engine	SODR (Side object detection control module - Right)	Live Data
XF	2016-	Supercharged V6 3.0L engine	DDM (Driver's door module)	ECU information
XF	2016-	Supercharged V6 3.0L engine	DDM (Driver's door module)	Read fault codes
XF	2016-	Supercharged V6 3.0L engine	DDM (Driver's door module)	Erase fault codes
XF	2016-	Supercharged V6 3.0L engine	DDM (Driver's door module)	Live Data
XF	2016-	Supercharged V6 3.0L engine	DRDM (Driver's (side) rear door module)	ECU information
XF	2016-	Supercharged V6 3.0L engine	DRDM (Driver's (side) rear door module)	Read fault codes
XF	2016-	Supercharged V6 3.0L engine	DRDM (Driver's (side) rear door module)	Erase fault codes
XF	2016-	Supercharged V6 3.0L engine	DRDM (Driver's (side) rear door module)	Live Data
XF	2016-	Supercharged V6 3.0L engine	DSM (Driver's seat module)	ECU information
XF	2016-	Supercharged V6 3.0L engine	DSM (Driver's seat module)	Read fault codes
XF	2016-	Supercharged V6 3.0L engine	DSM (Driver's seat module)	Erase fault codes
XF	2016-	Supercharged V6 3.0L engine	DSM (Driver's seat module)	Live Data
XF	2016-	Supercharged V6 3.0L engine	PDM (Passenger's door module)	ECU information
XF	2016-	Supercharged V6 3.0L engine	PDM (Passenger's door module)	Read fault codes
XF	2016-	Supercharged V6 3.0L engine	PDM (Passenger's door module)	Erase fault codes
XF	2016-	Supercharged V6 3.0L engine	PDM (Passenger's door module)	Live Data
XF	2016-	Supercharged V6 3.0L engine	PRDM (Passenger's (side) rear door module)	ECU information
XF	2016-	Supercharged V6 3.0L engine	PRDM (Passenger's (side) rear door module)	Read fault codes
XF	2016-	Supercharged V6 3.0L engine	PRDM (Passenger's (side) rear door module)	Erase fault codes
XF	2016-	Supercharged V6 3.0L engine	PRDM (Passenger's (side) rear door module)	Live Data
XF	2016-	Supercharged V6 3.0L engine	PSM (Passenger's seat module)	ECU information
XF	2016-	Supercharged V6 3.0L engine	PSM (Passenger's seat module)	Read fault codes
XF	2016-	Supercharged V6 3.0L engine	PSM (Passenger's seat module)	Erase fault codes
XF	2016-	Supercharged V6 3.0L engine	PSM (Passenger's seat module)	Live Data
XF	2016-	Supercharged V6 3.0L engine	RFA (Keyless vehicle module)	ECU information
XF	2016-	Supercharged V6 3.0L engine	RFA (Keyless vehicle module)	Read fault codes
XF	2016-	Supercharged V6 3.0L engine	RFA (Keyless vehicle module)	Erase fault codes
XF	2016-	Supercharged V6 3.0L engine	RFA (Keyless vehicle module)	Live Data
XF	2016-	Supercharged V6 3.0L engine	RGTM (Rear gate / trunk module)	ECU information
XF	2016-	Supercharged V6 3.0L engine	RGTM (Rear gate / trunk module)	Read fault codes
XF	2016-	Supercharged V6 3.0L engine	RGTM (Rear gate / trunk module)	Erase fault codes
XF	2016-	Supercharged V6 3.0L engine	RGTM (Rear gate / trunk module)	Live Data
XF	2016-	Supercharged V6 3.0L engine	TBM (Deployable towbar control module)	ECU information
XF	2016-	Supercharged V6 3.0L engine	TBM (Deployable towbar control module)	Read fault codes
XF	2016-	Supercharged V6 3.0L engine	TBM (Deployable towbar control module)	Erase fault codes
XF	2016-	Supercharged V6 3.0L engine	TBM (Deployable towbar control module)	Live Data
XF	2016-	Supercharged V6 3.0L engine	AAM (InControl Touch Pro audio amplifier module)	ECU information
XF	2016-	Supercharged V6 3.0L engine	AAM (InControl Touch Pro audio amplifier module)	Read fault codes
XF	2016-	Supercharged V6 3.0L engine	AAM (InControl Touch Pro audio amplifier module)	Erase fault codes
XF	2016-	Supercharged V6 3.0L engine	AAM (InControl Touch Pro audio amplifier module)	Live Data
XF	2016-	Supercharged V6 3.0L engine	ISC (InControl Touch Pro infotainment slave controller)	ECU information
XF	2016-	Supercharged V6 3.0L engine	ISC (InControl Touch Pro infotainment slave controller)	Read fault codes
XF	2016-	Supercharged V6 3.0L engine	ISC (InControl Touch Pro infotainment slave controller)	Erase fault codes
XF	2016-	Supercharged V6 3.0L engine	Special Function	Oil service counter reset
XF	2016-	Supercharged V6 3.0L engine	Special Function	Service interval reset
XF	2016-	Supercharged V6 3.0L engine	Special Function	Idle speed test
XF	2016-	Supercharged V6 3.0L engine	Special Function	Injector valve test
XF	2016-	Supercharged V6 3.0L engine	Special Function	Throttle valve actuator replacement
XF	2016-	Supercharged V6 3.0L engine	Special Function	Parking brake activation
XF	2016-	Supercharged V6 3.0L engine	Special Function	Apply and release electric park brake
XF	2016-	Supercharged V6 3.0L engine	Special Function	Parking brake pad replacement - Exit maintenance mode application
XF	2016-	Supercharged V6 3.0L engine	Special Function	Parking brake pad replacement - Release to service position
XF	2016-	Supercharged V6 3.0L engine	Special Function	Steering column calibration
XF	2016-	Supercharged V6 3.0L engine	Special Function	Lock steering tune to vehicle

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XF	2016-	Supercharged V6 3.0L engine	Special Function	Power steering soft-lock end stops reset routine
XF	2016-	Supercharged V6 3.0L engine	Special Function	Tire pressure monitor sensor identification display
XF	2016-	Supercharged V6 3.0L engine	Special Function	Tire pressure sensor replacement
XF	2016-	Supercharged V6 3.0L engine	Special Function	Battery replacement
XF	2016-	Supercharged V6 3.0L engine	Special Function	Telematics control module battery replacement reset
XF	2016-	Supercharged V6 3.0L engine	Special Function	Seat cushion replacement
XF	2016-	Supercharged V6 3.0L engine	Special Function	Driver's seat calibration
XF	2016-	Supercharged V6 3.0L engine	Special Function	Door window calibration
XF	2016-	Supercharged V6 3.0L engine	Special Function	Passenger's seat calibration
XF	2016-	Supercharged V6 3.0L engine	Special Function	Roof Blind calibration
XF	2016-	Supercharged V6 3.0L engine	Special Function	Sunroof calibration
XF	2016-	Supercharged V6 3.0L engine	Special Function	Tailgate/trunk calibration
XF	2016-	I4 Diesel 2.0L engine	PCM(Powertrain control module)	ECU information
XF	2016-	I4 Diesel 2.0L engine	PCM(Powertrain control module)	Read fault codes
XF	2016-	I4 Diesel 2.0L engine	PCM(Powertrain control module)	Erase fault codes
XF	2016-	I4 Diesel 2.0L engine	PCM(Powertrain control module)	Live Data
XF	2016-	I4 Diesel 2.0L engine	TCM(Transmission control module)	ECU information
XF	2016-	I4 Diesel 2.0L engine	TCM(Transmission control module)	Read fault codes
XF	2016-	I4 Diesel 2.0L engine	TCM(Transmission control module)	Erase fault codes
XF	2016-	I4 Diesel 2.0L engine	TCM(Transmission control module)	Live Data
XF	2016-	I4 Diesel 2.0L engine	ABS(ABS control module)	ECU information
XF	2016-	I4 Diesel 2.0L engine	ABS(ABS control module)	Read fault codes
XF	2016-	I4 Diesel 2.0L engine	ABS(ABS control module)	Erase fault codes
XF	2016-	I4 Diesel 2.0L engine	ABS(ABS control module)	Live Data
XF	2016-	I4 Diesel 2.0L engine	RCM(Restraints control module)	ECU information
XF	2016-	I4 Diesel 2.0L engine	RCM(Restraints control module)	Read fault codes
XF	2016-	I4 Diesel 2.0L engine	RCM(Restraints control module)	Erase fault codes
XF	2016-	I4 Diesel 2.0L engine	RCM(Restraints control module)	Live Data
XF	2016-	I4 Diesel 2.0L engine	IPC(Instrument cluster control module)	ECU information
XF	2016-	I4 Diesel 2.0L engine	IPC(Instrument cluster control module)	Read fault codes
XF	2016-	I4 Diesel 2.0L engine	IPC(Instrument cluster control module)	Erase fault codes
XF	2016-	I4 Diesel 2.0L engine	IPC(Instrument cluster control module)	Live Data
XF	2016-	I4 Diesel 2.0L engine	BCM(Body control module)	ECU information
XF	2016-	I4 Diesel 2.0L engine	BCM(Body control module)	Read fault codes
XF	2016-	I4 Diesel 2.0L engine	BCM(Body control module)	Erase fault codes
XF	2016-	I4 Diesel 2.0L engine	BCM(Body control module)	Live Data
XF	2016-	I4 Diesel 2.0L engine	CCM(Speed control module)	ECU information
XF	2016-	I4 Diesel 2.0L engine	CCM(Speed control module)	Read fault codes
XF	2016-	I4 Diesel 2.0L engine	CCM(Speed control module)	Erase fault codes
XF	2016-	I4 Diesel 2.0L engine	CCM(Speed control module)	Live Data
XF	2016-	I4 Diesel 2.0L engine	GSM(Gear shift module)	ECU information
XF	2016-	I4 Diesel 2.0L engine	GSM(Gear shift module)	Read fault codes
XF	2016-	I4 Diesel 2.0L engine	GSM(Gear shift module)	Erase fault codes
XF	2016-	I4 Diesel 2.0L engine	GSM(Gear shift module)	Live Data
XF	2016-	I4 Diesel 2.0L engine	GWM(Gateway module)	ECU information
XF	2016-	I4 Diesel 2.0L engine	GWM(Gateway module)	Read fault codes
XF	2016-	I4 Diesel 2.0L engine	GWM(Gateway module)	Erase fault codes
XF	2016-	I4 Diesel 2.0L engine	GWM(Gateway module)	Live Data
XF	2016-	I4 Diesel 2.0L engine	OCS(Restraints occupant classification system module)	ECU information
XF	2016-	I4 Diesel 2.0L engine	OCS(Restraints occupant classification system module)	Read fault codes
XF	2016-	I4 Diesel 2.0L engine	OCS(Restraints occupant classification system module)	Erase fault codes
XF	2016-	I4 Diesel 2.0L engine	OCS(Restraints occupant classification system module)	Live Data
XF	2016-	I4 Diesel 2.0L engine	TCCM(Transfer case control module)	ECU information
XF	2016-	I4 Diesel 2.0L engine	TCCM(Transfer case control module)	Read fault codes
XF	2016-	I4 Diesel 2.0L engine	TCCM(Transfer case control module)	Erase fault codes
XF	2016-	I4 Diesel 2.0L engine	TCCM(Transfer case control module)	Live Data
XF	2016-	I4 Diesel 2.0L engine	TCU(Telematic control unit module)	ECU information
XF	2016-	I4 Diesel 2.0L engine	TCU(Telematic control unit module)	Read fault codes
XF	2016-	I4 Diesel 2.0L engine	TCU(Telematic control unit module)	Erase fault codes
XF	2016-	I4 Diesel 2.0L engine	TCU(Telematic control unit module)	Live Data
XF	2016-	I4 Diesel 2.0L engine	TPM(Tire pressure monitor module)	ECU information
XF	2016-	I4 Diesel 2.0L engine	TPM(Tire pressure monitor module)	Read fault codes
XF	2016-	I4 Diesel 2.0L engine	TPM(Tire pressure monitor module)	Erase fault codes
XF	2016-	I4 Diesel 2.0L engine	TPM(Tire pressure monitor module)	Live Data
XF	2016-	I4 Diesel 2.0L engine	VIM(Vehicle immobilizer control module)	ECU information
XF	2016-	I4 Diesel 2.0L engine	VIM(Vehicle immobilizer control module)	Read fault codes
XF	2016-	I4 Diesel 2.0L engine	VIM(Vehicle immobilizer control module)	Erase fault codes
XF	2016-	I4 Diesel 2.0L engine	VIM(Vehicle immobilizer control module)	Live Data
XF	2016-	I4 Diesel 2.0L engine	ATCM(All terrain control module)	ECU information
XF	2016-	I4 Diesel 2.0L engine	ATCM(All terrain control module)	Read fault codes
XF	2016-	I4 Diesel 2.0L engine	ATCM(All terrain control module)	Erase fault codes
XF	2016-	I4 Diesel 2.0L engine	ATCM(All terrain control module)	Live Data
XF	2016-	I4 Diesel 2.0L engine	CHCM(Chassis control module)	ECU information
XF	2016-	I4 Diesel 2.0L engine	CHCM(Chassis control module)	Read fault codes
XF	2016-	I4 Diesel 2.0L engine	CHCM(Chassis control module)	Erase fault codes
XF	2016-	I4 Diesel 2.0L engine	CHCM(Chassis control module)	Live Data
XF	2016-	I4 Diesel 2.0L engine	PAM(Parking assist control module)	ECU information
XF	2016-	I4 Diesel 2.0L engine	PAM(Parking assist control module)	Read fault codes
XF	2016-	I4 Diesel 2.0L engine	PAM(Parking assist control module)	Erase fault codes
XF	2016-	I4 Diesel 2.0L engine	PAM(Parking assist control module)	Live Data
XF	2016-	I4 Diesel 2.0L engine	PSCM(Power steering control module)	ECU information
XF	2016-	I4 Diesel 2.0L engine	PSCM(Power steering control module)	Read fault codes
XF	2016-	I4 Diesel 2.0L engine	PSCM(Power steering control module)	Erase fault codes
XF	2016-	I4 Diesel 2.0L engine	PSCM(Power steering control module)	Live Data
XF	2016-	I4 Diesel 2.0L engine	SASM(Steering angle sensor module)	ECU information



## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XF	2016-	I4 Diesel 2.0L engine	SASM(Steering angle sensor module)	Read fault codes
XF	2016-	I4 Diesel 2.0L engine	SASM(Steering angle sensor module)	Erase fault codes
XF	2016-	I4 Diesel 2.0L engine	SASM(Steering angle sensor module)	Live Data
XF	2016-	I4 Diesel 2.0L engine	AHU(InControl Touch audio head unit)	ECU information
XF	2016-	I4 Diesel 2.0L engine	AHU(InControl Touch audio head unit)	Read fault codes
XF	2016-	I4 Diesel 2.0L engine	AHU(InControl Touch audio head unit)	Erase fault codes
XF	2016-	I4 Diesel 2.0L engine	AUCM(Head-up display cooling fan module)	ECU information
XF	2016-	I4 Diesel 2.0L engine	AUCM(Head-up display cooling fan module)	Read fault codes
XF	2016-	I4 Diesel 2.0L engine	AUCM(Head-up display cooling fan module)	Erase fault codes
XF	2016-	I4 Diesel 2.0L engine	AUCM(Head-up display cooling fan module)	Live Data
XF	2016-	I4 Diesel 2.0L engine	FCIM(Integrated control panel)	ECU information
XF	2016-	I4 Diesel 2.0L engine	FCIM(Integrated control panel)	Read fault codes
XF	2016-	I4 Diesel 2.0L engine	FCIM(Integrated control panel)	Erase fault codes
XF	2016-	I4 Diesel 2.0L engine	FCIM(Integrated control panel)	Live Data
XF	2016-	I4 Diesel 2.0L engine	HUD(Head up display)	ECU information
XF	2016-	I4 Diesel 2.0L engine	HUD(Head up display)	Read fault codes
XF	2016-	I4 Diesel 2.0L engine	HUD(Head up display)	Erase fault codes
XF	2016-	I4 Diesel 2.0L engine	HVAC(Heating ventilation and air conditioning control module)	ECU information
XF	2016-	I4 Diesel 2.0L engine	HVAC(Heating ventilation and air conditioning control module)	Read fault codes
XF	2016-	I4 Diesel 2.0L engine	HVAC(Heating ventilation and air conditioning control module)	Erase fault codes
XF	2016-	I4 Diesel 2.0L engine	HVAC(Heating ventilation and air conditioning control module)	Live Data
XF	2016-	I4 Diesel 2.0L engine	IMC(InControl Touch Pro infotainment master controller)	ECU information
XF	2016-	I4 Diesel 2.0L engine	IMC(InControl Touch Pro infotainment master controller)	Read fault codes
XF	2016-	I4 Diesel 2.0L engine	IMC(InControl Touch Pro infotainment master controller)	Erase fault codes
XF	2016-	I4 Diesel 2.0L engine	IMC(InControl Touch Pro infotainment master controller)	Live Data
XF	2016-	I4 Diesel 2.0L engine	IPMA(Image processing control module A)	ECU information
XF	2016-	I4 Diesel 2.0L engine	IPMA(Image processing control module A)	Read fault codes
XF	2016-	I4 Diesel 2.0L engine	IPMA(Image processing control module A)	Erase fault codes
XF	2016-	I4 Diesel 2.0L engine	IPMA(Image processing control module A)	Live Data
XF	2016-	I4 Diesel 2.0L engine	IPMB(Image processing module B)	ECU information
XF	2016-	I4 Diesel 2.0L engine	IPMB(Image processing module B)	Read fault codes
XF	2016-	I4 Diesel 2.0L engine	IPMB(Image processing module B)	Erase fault codes
XF	2016-	I4 Diesel 2.0L engine	IPMB(Image processing module B)	Live Data
XF	2016-	I4 Diesel 2.0L engine	RHVAC(Rear Heating ventilation and air conditioning control module)	ECU information
XF	2016-	I4 Diesel 2.0L engine	RHVAC(Rear Heating ventilation and air conditioning control module)	Read fault codes
XF	2016-	I4 Diesel 2.0L engine	RHVAC(Rear Heating ventilation and air conditioning control module)	Erase fault codes
XF	2016-	I4 Diesel 2.0L engine	RHVAC(Rear Heating ventilation and air conditioning control module)	Live Data
XF	2016-	I4 Diesel 2.0L engine	SODL(Side object detection control module - Left)	ECU information
XF	2016-	I4 Diesel 2.0L engine	SODL(Side object detection control module - Left)	Read fault codes
XF	2016-	I4 Diesel 2.0L engine	SODL(Side object detection control module - Left)	Erase fault codes
XF	2016-	I4 Diesel 2.0L engine	SODL(Side object detection control module - Left)	Live Data
XF	2016-	I4 Diesel 2.0L engine	SODR(Side object detection control module - Right)	ECU information
XF	2016-	I4 Diesel 2.0L engine	SODR(Side object detection control module - Right)	Read fault codes
XF	2016-	I4 Diesel 2.0L engine	SODR(Side object detection control module - Right)	Erase fault codes
XF	2016-	I4 Diesel 2.0L engine	SODR(Side object detection control module - Right)	Live Data
XF	2016-	I4 Diesel 2.0L engine	DDM(Driver's door module)	ECU information
XF	2016-	I4 Diesel 2.0L engine	DDM(Driver's door module)	Read fault codes
XF	2016-	I4 Diesel 2.0L engine	DDM(Driver's door module)	Erase fault codes
XF	2016-	I4 Diesel 2.0L engine	DDM(Driver's door module)	Live Data
XF	2016-	I4 Diesel 2.0L engine	DRDM(Driver's (side) rear door module)	ECU information
XF	2016-	I4 Diesel 2.0L engine	DRDM(Driver's (side) rear door module)	Read fault codes
XF	2016-	I4 Diesel 2.0L engine	DRDM(Driver's (side) rear door module)	Erase fault codes
XF	2016-	I4 Diesel 2.0L engine	DRDM(Driver's (side) rear door module)	Live Data
XF	2016-	I4 Diesel 2.0L engine	DSM(Driver's seat module)	ECU information
XF	2016-	I4 Diesel 2.0L engine	DSM(Driver's seat module)	Read fault codes
XF	2016-	I4 Diesel 2.0L engine	DSM(Driver's seat module)	Erase fault codes
XF	2016-	I4 Diesel 2.0L engine	DSM(Driver's seat module)	Live Data
XF	2016-	I4 Diesel 2.0L engine	PDM(Passenger's door module)	ECU information
XF	2016-	I4 Diesel 2.0L engine	PDM(Passenger's door module)	Read fault codes
XF	2016-	I4 Diesel 2.0L engine	PDM(Passenger's door module)	Erase fault codes
XF	2016-	I4 Diesel 2.0L engine	PDM(Passenger's door module)	Live Data
XF	2016-	I4 Diesel 2.0L engine	PRDM(Passenger's (side) rear door module)	ECU information
XF	2016-	I4 Diesel 2.0L engine	PRDM(Passenger's (side) rear door module)	Read fault codes
XF	2016-	I4 Diesel 2.0L engine	PRDM(Passenger's (side) rear door module)	Erase fault codes
XF	2016-	I4 Diesel 2.0L engine	PRDM(Passenger's (side) rear door module)	Live Data
XF	2016-	I4 Diesel 2.0L engine	PSM(Passenger's seat module)	ECU information
XF	2016-	I4 Diesel 2.0L engine	PSM(Passenger's seat module)	Read fault codes
XF	2016-	I4 Diesel 2.0L engine	PSM(Passenger's seat module)	Erase fault codes
XF	2016-	I4 Diesel 2.0L engine	PSM(Passenger's seat module)	Live Data
XF	2016-	I4 Diesel 2.0L engine	RFA(Keyless vehicle module)	ECU information
XF	2016-	I4 Diesel 2.0L engine	RFA(Keyless vehicle module)	Read fault codes
XF	2016-	I4 Diesel 2.0L engine	RFA(Keyless vehicle module)	Erase fault codes

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XF	2016-	I4 Diesel 2.0L engine	RFA(Keyless vehicle module)	Live Data
XF	2016-	I4 Diesel 2.0L engine	RGTM(Rear gate / trunk module)	ECU information
XF	2016-	I4 Diesel 2.0L engine	RGTM(Rear gate / trunk module)	Read fault codes
XF	2016-	I4 Diesel 2.0L engine	RGTM(Rear gate / trunk module)	Erase fault codes
XF	2016-	I4 Diesel 2.0L engine	RGTM(Rear gate / trunk module)	Live Data
XF	2016-	I4 Diesel 2.0L engine	TBM(Deployable towbar control module)	ECU information
XF	2016-	I4 Diesel 2.0L engine	TBM(Deployable towbar control module)	Read fault codes
XF	2016-	I4 Diesel 2.0L engine	TBM(Deployable towbar control module)	Erase fault codes
XF	2016-	I4 Diesel 2.0L engine	TBM(Deployable towbar control module)	Live Data
XF	2016-	I4 Diesel 2.0L engine	AAM(InControl Touch Pro audio amplifier module)	ECU information
XF	2016-	I4 Diesel 2.0L engine	AAM(InControl Touch Pro audio amplifier module)	Read fault codes
XF	2016-	I4 Diesel 2.0L engine	AAM(InControl Touch Pro audio amplifier module)	Erase fault codes
XF	2016-	I4 Diesel 2.0L engine	AAM(InControl Touch Pro audio amplifier module)	Live Data
XF	2016-	I4 Diesel 2.0L engine	ISC(InControl Touch Pro infotainment slave controller)	ECU information
XF	2016-	I4 Diesel 2.0L engine	ISC(InControl Touch Pro infotainment slave controller)	Read fault codes
XF	2016-	I4 Diesel 2.0L engine	ISC(InControl Touch Pro infotainment slave controller)	Erase fault codes
XF	2016-	I4 Diesel 2.0L engine	Special Function	Oil change reset
XF	2016-	I4 Diesel 2.0L engine	Special Function	Service interval reset
XF	2016-	I4 Diesel 2.0L engine	Special Function	Parking brake activation
XF	2016-	I4 Diesel 2.0L engine	Special Function	Apply and release electric park brake
XF	2016-	I4 Diesel 2.0L engine	Special Function	Parking brake pad replacement - Exit maintenance mode application
XF	2016-	I4 Diesel 2.0L engine	Special Function	Parking brake pad replacement - Release to service position
XF	2016-	I4 Diesel 2.0L engine	Special Function	Steering column calibration
XF	2016-	I4 Diesel 2.0L engine	Special Function	Power steering soft-lock end stops reset routine
XF	2016-	I4 Diesel 2.0L engine	Special Function	Lock steering tune to vehicle
XF	2016-	I4 Diesel 2.0L engine	Special Function	Tire pressure monitor sensor identification display
XF	2016-	I4 Diesel 2.0L engine	Special Function	Tire pressure sensor replacement
XF	2016-	I4 Diesel 2.0L engine	Special Function	Diesel particulate filter differential pressure sensor replacement
XF	2016-	I4 Diesel 2.0L engine	Special Function	Diesel particulate filter dynamic regeneration
XF	2016-	I4 Diesel 2.0L engine	Special Function	Diesel particulate filter replacement
XF	2016-	I4 Diesel 2.0L engine	Special Function	Battery replacement
XF	2016-	I4 Diesel 2.0L engine	Special Function	Telematics control module battery replacement reset
XF	2016-	I4 Diesel 2.0L engine	Special Function	Seat cushion replacement
XF	2016-	I4 Diesel 2.0L engine	Special Function	Driver's seat calibration
XF	2016-	I4 Diesel 2.0L engine	Special Function	Door window calibration
XF	2016-	I4 Diesel 2.0L engine	Special Function	Passenger's seat calibration
XF	2016-	I4 Diesel 2.0L engine	Special Function	Roof Blind calibration
XF	2016-	I4 Diesel 2.0L engine	Special Function	Sunroof calibration
XF	2016-	I4 Diesel 2.0L engine	Special Function	Tailgate/trunk calibration
XF	2016-	GTDI 2.0L engine	PCM(Powertrain control module)	ECU information
XF	2016-	GTDI 2.0L engine	PCM(Powertrain control module)	Read fault codes
XF	2016-	GTDI 2.0L engine	PCM(Powertrain control module)	Erase fault codes
XF	2016-	GTDI 2.0L engine	PCM(Powertrain control module)	Live Data
XF	2016-	GTDI 2.0L engine	TCM(Transmission control module)	ECU information
XF	2016-	GTDI 2.0L engine	TCM(Transmission control module)	Read fault codes
XF	2016-	GTDI 2.0L engine	TCM(Transmission control module)	Erase fault codes
XF	2016-	GTDI 2.0L engine	TCM(Transmission control module)	Live Data
XF	2016-	GTDI 2.0L engine	ABS(ABS control module)	ECU information
XF	2016-	GTDI 2.0L engine	ABS(ABS control module)	Read fault codes
XF	2016-	GTDI 2.0L engine	ABS(ABS control module)	Erase fault codes
XF	2016-	GTDI 2.0L engine	ABS(ABS control module)	Live Data
XF	2016-	GTDI 2.0L engine	RCM(Restraints control module)	ECU information
XF	2016-	GTDI 2.0L engine	RCM(Restraints control module)	Read fault codes
XF	2016-	GTDI 2.0L engine	RCM(Restraints control module)	Erase fault codes
XF	2016-	GTDI 2.0L engine	RCM(Restraints control module)	Live Data
XF	2016-	GTDI 2.0L engine	IPC(Instrument cluster control module)	ECU information
XF	2016-	GTDI 2.0L engine	IPC(Instrument cluster control module)	Read fault codes
XF	2016-	GTDI 2.0L engine	IPC(Instrument cluster control module)	Erase fault codes
XF	2016-	GTDI 2.0L engine	IPC(Instrument cluster control module)	Live Data
XF	2016-	GTDI 2.0L engine	BCM(Body control module)	ECU information
XF	2016-	GTDI 2.0L engine	BCM(Body control module)	Read fault codes
XF	2016-	GTDI 2.0L engine	BCM(Body control module)	Erase fault codes
XF	2016-	GTDI 2.0L engine	BCM(Body control module)	Live Data
XF	2016-	GTDI 2.0L engine	CCM(Speed control module)	ECU information
XF	2016-	GTDI 2.0L engine	CCM(Speed control module)	Read fault codes
XF	2016-	GTDI 2.0L engine	CCM(Speed control module)	Erase fault codes
XF	2016-	GTDI 2.0L engine	CCM(Speed control module)	Live Data
XF	2016-	GTDI 2.0L engine	GSM(Gear shift module)	ECU information
XF	2016-	GTDI 2.0L engine	GSM(Gear shift module)	Read fault codes
XF	2016-	GTDI 2.0L engine	GSM(Gear shift module)	Erase fault codes
XF	2016-	GTDI 2.0L engine	GSM(Gear shift module)	Live Data
XF	2016-	GTDI 2.0L engine	GWM(Gateway module)	ECU information
XF	2016-	GTDI 2.0L engine	GWM(Gateway module)	Read fault codes
XF	2016-	GTDI 2.0L engine	GWM(Gateway module)	Erase fault codes
XF	2016-	GTDI 2.0L engine	GWM(Gateway module)	Live Data
XF	2016-	GTDI 2.0L engine	OCS(Restraints occupant classification system module)	ECU information

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XF	2016-	GTDI 2.0L engine	OCS(Restraints occupant classification system module)	Read fault codes
XF	2016-	GTDI 2.0L engine	OCS(Restraints occupant classification system module)	Erase fault codes
XF	2016-	GTDI 2.0L engine	OCS(Restraints occupant classification system module)	Live Data
XF	2016-	GTDI 2.0L engine	TCCM(Transfer case control module)	ECU information
XF	2016-	GTDI 2.0L engine	TCCM(Transfer case control module)	Read fault codes
XF	2016-	GTDI 2.0L engine	TCCM(Transfer case control module)	Erase fault codes
XF	2016-	GTDI 2.0L engine	TCCM(Transfer case control module)	Live Data
XF	2016-	GTDI 2.0L engine	TCU(Telematic control unit module)	ECU information
XF	2016-	GTDI 2.0L engine	TCU(Telematic control unit module)	Read fault codes
XF	2016-	GTDI 2.0L engine	TCU(Telematic control unit module)	Erase fault codes
XF	2016-	GTDI 2.0L engine	TCU(Telematic control unit module)	Live Data
XF	2016-	GTDI 2.0L engine	TPM(Tire pressure monitor module)	ECU information
XF	2016-	GTDI 2.0L engine	TPM(Tire pressure monitor module)	Read fault codes
XF	2016-	GTDI 2.0L engine	TPM(Tire pressure monitor module)	Erase fault codes
XF	2016-	GTDI 2.0L engine	TPM(Tire pressure monitor module)	Live Data
XF	2016-	GTDI 2.0L engine	VIM(Vehicle immobilizer control module)	ECU information
XF	2016-	GTDI 2.0L engine	VIM(Vehicle immobilizer control module)	Read fault codes
XF	2016-	GTDI 2.0L engine	VIM(Vehicle immobilizer control module)	Erase fault codes
XF	2016-	GTDI 2.0L engine	VIM(Vehicle immobilizer control module)	Live Data
XF	2016-	GTDI 2.0L engine	ATCM(All terrain control module)	ECU information
XF	2016-	GTDI 2.0L engine	ATCM(All terrain control module)	Read fault codes
XF	2016-	GTDI 2.0L engine	ATCM(All terrain control module)	Erase fault codes
XF	2016-	GTDI 2.0L engine	ATCM(All terrain control module)	Live Data
XF	2016-	GTDI 2.0L engine	CHCM(Chassis control module)	ECU information
XF	2016-	GTDI 2.0L engine	CHCM(Chassis control module)	Read fault codes
XF	2016-	GTDI 2.0L engine	CHCM(Chassis control module)	Erase fault codes
XF	2016-	GTDI 2.0L engine	CHCM(Chassis control module)	Live Data
XF	2016-	GTDI 2.0L engine	PAM(Parking assist control module)	ECU information
XF	2016-	GTDI 2.0L engine	PAM(Parking assist control module)	Read fault codes
XF	2016-	GTDI 2.0L engine	PAM(Parking assist control module)	Erase fault codes
XF	2016-	GTDI 2.0L engine	PAM(Parking assist control module)	Live Data
XF	2016-	GTDI 2.0L engine	PSCM(Power steering control module)	ECU information
XF	2016-	GTDI 2.0L engine	PSCM(Power steering control module)	Read fault codes
XF	2016-	GTDI 2.0L engine	PSCM(Power steering control module)	Erase fault codes
XF	2016-	GTDI 2.0L engine	PSCM(Power steering control module)	Live Data
XF	2016-	GTDI 2.0L engine	SASM(Steering angle sensor module)	ECU information
XF	2016-	GTDI 2.0L engine	SASM(Steering angle sensor module)	Read fault codes
XF	2016-	GTDI 2.0L engine	SASM(Steering angle sensor module)	Erase fault codes
XF	2016-	GTDI 2.0L engine	SASM(Steering angle sensor module)	Live Data
XF	2016-	GTDI 2.0L engine	AHU(InControl Touch audio head unit)	ECU information
XF	2016-	GTDI 2.0L engine	AHU(InControl Touch audio head unit)	Read fault codes
XF	2016-	GTDI 2.0L engine	AHU(InControl Touch audio head unit)	Erase fault codes
XF	2016-	GTDI 2.0L engine	AUCM(Head-up display cooling fan module)	ECU information
XF	2016-	GTDI 2.0L engine	AUCM(Head-up display cooling fan module)	Read fault codes
XF	2016-	GTDI 2.0L engine	AUCM(Head-up display cooling fan module)	Erase fault codes
XF	2016-	GTDI 2.0L engine	AUCM(Head-up display cooling fan module)	Live Data
XF	2016-	GTDI 2.0L engine	FCIM(Integrated control panel)	ECU information
XF	2016-	GTDI 2.0L engine	FCIM(Integrated control panel)	Read fault codes
XF	2016-	GTDI 2.0L engine	FCIM(Integrated control panel)	Erase fault codes
XF	2016-	GTDI 2.0L engine	FCIM(Integrated control panel)	Live Data
XF	2016-	GTDI 2.0L engine	HUD(Head up display)	ECU information
XF	2016-	GTDI 2.0L engine	HUD(Head up display)	Read fault codes
XF	2016-	GTDI 2.0L engine	HUD(Head up display)	Erase fault codes
XF	2016-	GTDI 2.0L engine	HVAC(Heating ventilation and air conditioning control module)	ECU information
XF	2016-	GTDI 2.0L engine	HVAC(Heating ventilation and air conditioning control module)	Read fault codes
XF	2016-	GTDI 2.0L engine	HVAC(Heating ventilation and air conditioning control module)	Erase fault codes
XF	2016-	GTDI 2.0L engine	HVAC(Heating ventilation and air conditioning control module)	Live Data
XF	2016-	GTDI 2.0L engine	IMC(InControl Touch Pro infotainment master controller)	ECU information
XF	2016-	GTDI 2.0L engine	IMC(InControl Touch Pro infotainment master controller)	Read fault codes
XF	2016-	GTDI 2.0L engine	IMC(InControl Touch Pro infotainment master controller)	Erase fault codes
XF	2016-	GTDI 2.0L engine	IMC(InControl Touch Pro infotainment master controller)	Live Data
XF	2016-	GTDI 2.0L engine	IPMA(Image processing control module A)	ECU information
XF	2016-	GTDI 2.0L engine	IPMA(Image processing control module A)	Read fault codes
XF	2016-	GTDI 2.0L engine	IPMA(Image processing control module A)	Erase fault codes
XF	2016-	GTDI 2.0L engine	IPMA(Image processing control module A)	Live Data
XF	2016-	GTDI 2.0L engine	IPMB(Image processing module B)	ECU information
XF	2016-	GTDI 2.0L engine	IPMB(Image processing module B)	Read fault codes
XF	2016-	GTDI 2.0L engine	IPMB(Image processing module B)	Erase fault codes
XF	2016-	GTDI 2.0L engine	IPMB(Image processing module B)	Live Data
XF	2016-	GTDI 2.0L engine	RHVAC(Rear Heating ventilation and air conditioning control module)	ECU information
XF	2016-	GTDI 2.0L engine	RHVAC(Rear Heating ventilation and air conditioning control module)	Read fault codes
XF	2016-	GTDI 2.0L engine	RHVAC(Rear Heating ventilation and air conditioning control module)	Erase fault codes
XF	2016-	GTDI 2.0L engine	RHVAC(Rear Heating ventilation and air conditioning control module)	Live Data
XF	2016-	GTDI 2.0L engine	SODL(Side object detection control module - Left)	ECU information
XF	2016-	GTDI 2.0L engine	SODL(Side object detection control module - Left)	Read fault codes

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XF	2016-	GTDI 2.0L engine	SODL(Side object detection control module - Left)	Erase fault codes
XF	2016-	GTDI 2.0L engine	SODL(Side object detection control module - Left)	Live Data
XF	2016-	GTDI 2.0L engine	SODR(Side object detection control module - Right)	ECU information
XF	2016-	GTDI 2.0L engine	SODR(Side object detection control module - Right)	Read fault codes
XF	2016-	GTDI 2.0L engine	SODR(Side object detection control module - Right)	Erase fault codes
XF	2016-	GTDI 2.0L engine	SODR(Side object detection control module - Right)	Live Data
XF	2016-	GTDI 2.0L engine	DDM(Driver's door module)	ECU information
XF	2016-	GTDI 2.0L engine	DDM(Driver's door module)	Read fault codes
XF	2016-	GTDI 2.0L engine	DDM(Driver's door module)	Erase fault codes
XF	2016-	GTDI 2.0L engine	DDM(Driver's door module)	Live Data
XF	2016-	GTDI 2.0L engine	DRDM(Driver's (side) rear door module)	ECU information
XF	2016-	GTDI 2.0L engine	DRDM(Driver's (side) rear door module)	Read fault codes
XF	2016-	GTDI 2.0L engine	DRDM(Driver's (side) rear door module)	Erase fault codes
XF	2016-	GTDI 2.0L engine	DRDM(Driver's (side) rear door module)	Live Data
XF	2016-	GTDI 2.0L engine	DSM(Driver's seat module)	ECU information
XF	2016-	GTDI 2.0L engine	DSM(Driver's seat module)	Read fault codes
XF	2016-	GTDI 2.0L engine	DSM(Driver's seat module)	Erase fault codes
XF	2016-	GTDI 2.0L engine	DSM(Driver's seat module)	Live Data
XF	2016-	GTDI 2.0L engine	PDM(Passenger's door module)	ECU information
XF	2016-	GTDI 2.0L engine	PDM(Passenger's door module)	Read fault codes
XF	2016-	GTDI 2.0L engine	PDM(Passenger's door module)	Erase fault codes
XF	2016-	GTDI 2.0L engine	PDM(Passenger's door module)	Live Data
XF	2016-	GTDI 2.0L engine	PRDM(Passenger's (side) rear door module)	ECU information
XF	2016-	GTDI 2.0L engine	PRDM(Passenger's (side) rear door module)	Read fault codes
XF	2016-	GTDI 2.0L engine	PRDM(Passenger's (side) rear door module)	Erase fault codes
XF	2016-	GTDI 2.0L engine	PRDM(Passenger's (side) rear door module)	Live Data
XF	2016-	GTDI 2.0L engine	PSM(Passenger's seat module)	ECU information
XF	2016-	GTDI 2.0L engine	PSM(Passenger's seat module)	Read fault codes
XF	2016-	GTDI 2.0L engine	PSM(Passenger's seat module)	Erase fault codes
XF	2016-	GTDI 2.0L engine	PSM(Passenger's seat module)	Live Data
XF	2016-	GTDI 2.0L engine	RFA(Keyless vehicle module)	ECU information
XF	2016-	GTDI 2.0L engine	RFA(Keyless vehicle module)	Read fault codes
XF	2016-	GTDI 2.0L engine	RFA(Keyless vehicle module)	Erase fault codes
XF	2016-	GTDI 2.0L engine	RFA(Keyless vehicle module)	Live Data
XF	2016-	GTDI 2.0L engine	RGM(Rear gate / trunk module)	ECU information
XF	2016-	GTDI 2.0L engine	RGM(Rear gate / trunk module)	Read fault codes
XF	2016-	GTDI 2.0L engine	RGM(Rear gate / trunk module)	Erase fault codes
XF	2016-	GTDI 2.0L engine	RGM(Rear gate / trunk module)	Live Data
XF	2016-	GTDI 2.0L engine	TBM(Deployable towbar control module)	ECU information
XF	2016-	GTDI 2.0L engine	TBM(Deployable towbar control module)	Read fault codes
XF	2016-	GTDI 2.0L engine	TBM(Deployable towbar control module)	Erase fault codes
XF	2016-	GTDI 2.0L engine	TBM(Deployable towbar control module)	Live Data
XF	2016-	GTDI 2.0L engine	AAM(InControl Touch Pro audio amplifier module)	ECU information
XF	2016-	GTDI 2.0L engine	AAM(InControl Touch Pro audio amplifier module)	Read fault codes
XF	2016-	GTDI 2.0L engine	AAM(InControl Touch Pro audio amplifier module)	Erase fault codes
XF	2016-	GTDI 2.0L engine	AAM(InControl Touch Pro audio amplifier module)	Live Data
XF	2016-	GTDI 2.0L engine	ISC(InControl Touch Pro infotainment slave controller)	ECU information
XF	2016-	GTDI 2.0L engine	ISC(InControl Touch Pro infotainment slave controller)	Read fault codes
XF	2016-	GTDI 2.0L engine	ISC(InControl Touch Pro infotainment slave controller)	Erase fault codes
XF	2016-	GTDI 2.0L engine	Special Function	Service interval reset
XF	2016-	GTDI 2.0L engine	Special Function	Injector valve test
XF	2016-	GTDI 2.0L engine	Special Function	Throttle valve actuator replacement
XF	2016-	GTDI 2.0L engine	Special Function	Parking brake activation
XF	2016-	GTDI 2.0L engine	Special Function	Apply and release electric park brake
XF	2016-	GTDI 2.0L engine	Special Function	Parking brake pad replacement - Exit maintenance mode application
XF	2016-	GTDI 2.0L engine	Special Function	Parking brake pad replacement - Release to service position
XF	2016-	GTDI 2.0L engine	Special Function	Lock steering tune to vehicle
XF	2016-	GTDI 2.0L engine	Special Function	Steering column calibration
XF	2016-	GTDI 2.0L engine	Special Function	Power steering soft-lock end stops reset routine
XF	2016-	GTDI 2.0L engine	Special Function	Tire pressure monitor sensor identification display
XF	2016-	GTDI 2.0L engine	Special Function	Tire pressure sensor replacement
XF	2016-	GTDI 2.0L engine	Special Function	Battery replacement
XF	2016-	GTDI 2.0L engine	Special Function	Telematics control module battery replacement reset
XF	2016-	GTDI 2.0L engine	Special Function	Seat cushion replacement
XF	2016-	GTDI 2.0L engine	Special Function	Driver's seat calibration
XF	2016-	GTDI 2.0L engine	Special Function	Door window calibration
XF	2016-	GTDI 2.0L engine	Special Function	Passenger's seat calibration
XF	2016-	GTDI 2.0L engine	Special Function	Roof Blind calibration
XF	2016-	GTDI 2.0L engine	Special Function	Sunroof calibration
XF	2016-	GTDI 2.0L engine	Special Function	Tailgate/trunk calibration
XF	2013-2015	V6 Diesel	PCM(Powertrain control module)	ECU information
XF	2013-2015	V6 Diesel	PCM(Powertrain control module)	Read fault codes
XF	2013-2015	V6 Diesel	PCM(Powertrain control module)	Erase fault codes
XF	2013-2015	V6 Diesel	PCM(Powertrain control module)	Live Data

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XF	2013-2015	V6 Diesel	TCM(Transmission control module)	ECU information
XF	2013-2015	V6 Diesel	TCM(Transmission control module)	Read fault codes
XF	2013-2015	V6 Diesel	TCM(Transmission control module)	Erase fault codes
XF	2013-2015	V6 Diesel	TCM(Transmission control module)	Live Data
XF	2013-2015	V6 Diesel	ABS (ABS control module)	ECU information
XF	2013-2015	V6 Diesel	ABS (ABS control module)	Read fault codes
XF	2013-2015	V6 Diesel	ABS (ABS control module)	Erase fault codes
XF	2013-2015	V6 Diesel	ABS (ABS control module)	Live Data
XF	2013-2015	V6 Diesel	RCM (Restraints control module)	ECU information
XF	2013-2015	V6 Diesel	RCM (Restraints control module)	Read fault codes
XF	2013-2015	V6 Diesel	RCM (Restraints control module)	Erase fault codes
XF	2013-2015	V6 Diesel	RCM (Restraints control module)	Live Data
XF	2013-2015	V6 Diesel	IPC (Instrument cluster control module)	ECU information
XF	2013-2015	V6 Diesel	IPC (Instrument cluster control module)	Read fault codes
XF	2013-2015	V6 Diesel	IPC (Instrument cluster control module)	Erase fault codes
XF	2013-2015	V6 Diesel	IPC (Instrument cluster control module)	Live Data
XF	2013-2015	V6 Diesel	CCM (Speed control module)	ECU information
XF	2013-2015	V6 Diesel	CCM (Speed control module)	Read fault codes
XF	2013-2015	V6 Diesel	CCM (Speed control module)	Erase fault codes
XF	2013-2015	V6 Diesel	CCM (Speed control module)	Live Data
XF	2013-2015	V6 Diesel	CHCM (Chassis control module)	ECU information
XF	2013-2015	V6 Diesel	CHCM (Chassis control module)	Read fault codes
XF	2013-2015	V6 Diesel	CHCM (Chassis control module)	Erase fault codes
XF	2013-2015	V6 Diesel	CHCM (Chassis control module)	Live Data
XF	2013-2015	V6 Diesel	GSM (Gear shift module)	ECU information
XF	2013-2015	V6 Diesel	GSM (Gear shift module)	Read fault codes
XF	2013-2015	V6 Diesel	GSM (Gear shift module)	Erase fault codes
XF	2013-2015	V6 Diesel	GSM (Gear shift module)	Live Data
XF	2013-2015	V6 Diesel	GWM (Gateway module)	ECU information
XF	2013-2015	V6 Diesel	GWM (Gateway module)	Read fault codes
XF	2013-2015	V6 Diesel	GWM (Gateway module)	Erase fault codes
XF	2013-2015	V6 Diesel	GWM (Gateway module)	Live Data
XF	2013-2015	V6 Diesel	HCM (Headlamp control module)	ECU information
XF	2013-2015	V6 Diesel	HCM (Headlamp control module)	Read fault codes
XF	2013-2015	V6 Diesel	HCM (Headlamp control module)	Erase fault codes
XF	2013-2015	V6 Diesel	HCM (Headlamp control module)	Live Data
XF	2013-2015	V6 Diesel	OCS (Restraints occupant classification system module)	ECU information
XF	2013-2015	V6 Diesel	OCS (Restraints occupant classification system module)	Read fault codes
XF	2013-2015	V6 Diesel	OCS (Restraints occupant classification system module)	Erase fault codes
XF	2013-2015	V6 Diesel	OCS (Restraints occupant classification system module)	Live Data
XF	2013-2015	V6 Diesel	PBM (Parking brake control module)	ECU information
XF	2013-2015	V6 Diesel	PBM (Parking brake control module)	Read fault codes
XF	2013-2015	V6 Diesel	PBM (Parking brake control module)	Erase fault codes
XF	2013-2015	V6 Diesel	PBM (Parking brake control module)	Live Data
XF	2013-2015	V6 Diesel	RDCM (Rear differential control module)	ECU information
XF	2013-2015	V6 Diesel	RDCM (Rear differential control module)	Read fault codes
XF	2013-2015	V6 Diesel	RDCM (Rear differential control module)	Erase fault codes
XF	2013-2015	V6 Diesel	RDCM (Rear differential control module)	Live Data
XF	2013-2015	V6 Diesel	SPMA (Safety belt pretensioner control module A - drivers side)	ECU information
XF	2013-2015	V6 Diesel	SPMA (Safety belt pretensioner control module A - drivers side)	Read fault codes
XF	2013-2015	V6 Diesel	SPMA (Safety belt pretensioner control module A - drivers side)	Erase fault codes
XF	2013-2015	V6 Diesel	SPMA (Safety belt pretensioner control module A - drivers side)	Live Data
XF	2013-2015	V6 Diesel	SPMB (Safety belt pretensioner control module B - passengers side)	ECU information
XF	2013-2015	V6 Diesel	SPMB (Safety belt pretensioner control module B - passengers side)	Read fault codes
XF	2013-2015	V6 Diesel	SPMB (Safety belt pretensioner control module B - passengers side)	Erase fault codes
XF	2013-2015	V6 Diesel	SPMB (Safety belt pretensioner control module B - passengers side)	Live Data
XF	2013-2015	V6 Diesel	SUMB (Adaptive damping control module)	ECU information
XF	2013-2015	V6 Diesel	SUMB (Adaptive damping control module)	Read fault codes
XF	2013-2015	V6 Diesel	SUMB (Adaptive damping control module)	Erase fault codes
XF	2013-2015	V6 Diesel	SUMB (Adaptive damping control module)	Live Data
XF	2013-2015	V6 Diesel	TCCM (Transfer case control module)	ECU information
XF	2013-2015	V6 Diesel	TCCM (Transfer case control module)	Read fault codes
XF	2013-2015	V6 Diesel	TCCM (Transfer case control module)	Erase fault codes
XF	2013-2015	V6 Diesel	TCCM (Transfer case control module)	Live Data
XF	2013-2015	V6 Diesel	VIM (Vehicle immobilizer control module)	ECU information
XF	2013-2015	V6 Diesel	VIM (Vehicle immobilizer control module)	Read fault codes
XF	2013-2015	V6 Diesel	VIM (Vehicle immobilizer control module)	Erase fault codes
XF	2013-2015	V6 Diesel	VIM (Vehicle immobilizer control module)	Live Data
XF	2013-2015	V6 Diesel	FSJB (Central junction box (body control module))	ECU information
XF	2013-2015	V6 Diesel	FSJB (Central junction box (body control module))	Read fault codes
XF	2013-2015	V6 Diesel	FSJB (Central junction box (body control module))	Erase fault codes
XF	2013-2015	V6 Diesel	FSJB (Central junction box (body control module))	Live Data
XF	2013-2015	V6 Diesel	RSJB (Auxiliary junction box (body control module B))	ECU information
XF	2013-2015	V6 Diesel	RSJB (Auxiliary junction box (body control module B))	Read fault codes

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XF	2013-2015	V6 Diesel	RSJB(Auxiliary junction box (body control module B))	Erase fault codes
XF	2013-2015	V6 Diesel	RSJB(Auxiliary junction box (body control module B))	Live Data
XF	2013-2015	V6 Diesel	BCM(Central junction box (body control module))	ECU information
XF	2013-2015	V6 Diesel	BCM(Central junction box (body control module))	Read fault codes
XF	2013-2015	V6 Diesel	BCM(Central junction box (body control module))	Erase fault codes
XF	2013-2015	V6 Diesel	BCM(Central junction box (body control module))	Live Data
XF	2013-2015	V6 Diesel	BCMB(Auxiliary junction box (body control module B))	ECU information
XF	2013-2015	V6 Diesel	BCMB(Auxiliary junction box (body control module B))	Read fault codes
XF	2013-2015	V6 Diesel	BCMB(Auxiliary junction box (body control module B))	Erase fault codes
XF	2013-2015	V6 Diesel	BCMB(Auxiliary junction box (body control module B))	Live Data
XF	2013-2015	V6 Diesel	DDM(Driver's door module)	ECU information
XF	2013-2015	V6 Diesel	DDM(Driver's door module)	Read fault codes
XF	2013-2015	V6 Diesel	DDM(Driver's door module)	Erase fault codes
XF	2013-2015	V6 Diesel	DDM(Driver's door module)	Live Data
XF	2013-2015	V6 Diesel	DSM(Driver's seat module)	ECU information
XF	2013-2015	V6 Diesel	DSM(Driver's seat module)	Read fault codes
XF	2013-2015	V6 Diesel	DSM(Driver's seat module)	Erase fault codes
XF	2013-2015	V6 Diesel	DSM(Driver's seat module)	Live Data
XF	2013-2015	V6 Diesel	FCDIM(Front control/display interface module (high level display front))	ECU information
XF	2013-2015	V6 Diesel	FCDIM(Front control/display interface module (high level display front))	Read fault codes
XF	2013-2015	V6 Diesel	FCDIM(Front control/display interface module (high level display front))	Erase fault codes
XF	2013-2015	V6 Diesel	FCDIM(Front control/display interface module (high level display front))	Live Data
XF	2013-2015	V6 Diesel	FCIMB(Front controls interface module B (front audio control panel))	ECU information
XF	2013-2015	V6 Diesel	FCIMB(Front controls interface module B (front audio control panel))	Read fault codes
XF	2013-2015	V6 Diesel	FCIMB(Front controls interface module B (front audio control panel))	Erase fault codes
XF	2013-2015	V6 Diesel	FCIMB(Front controls interface module B (front audio control panel))	Live Data
XF	2013-2015	V6 Diesel	HCMB(Headlamp control module B)	ECU information
XF	2013-2015	V6 Diesel	HCMB(Headlamp control module B)	Read fault codes
XF	2013-2015	V6 Diesel	HCMB(Headlamp control module B)	Erase fault codes
XF	2013-2015	V6 Diesel	HCMB(Headlamp control module B)	Live Data
XF	2013-2015	V6 Diesel	HVAC(Heating ventilation and air conditioning control module)	ECU information
XF	2013-2015	V6 Diesel	HVAC(Heating ventilation and air conditioning control module)	Read fault codes
XF	2013-2015	V6 Diesel	HVAC(Heating ventilation and air conditioning control module)	Erase fault codes
XF	2013-2015	V6 Diesel	HVAC(Heating ventilation and air conditioning control module)	Live Data
XF	2013-2015	V6 Diesel	PAM(Parking assist control module)	ECU information
XF	2013-2015	V6 Diesel	PAM(Parking assist control module)	Read fault codes
XF	2013-2015	V6 Diesel	PAM(Parking assist control module)	Erase fault codes
XF	2013-2015	V6 Diesel	PAM(Parking assist control module)	Live Data
XF	2013-2015	V6 Diesel	PDM(Passenger's door module)	ECU information
XF	2013-2015	V6 Diesel	PDM(Passenger's door module)	Read fault codes
XF	2013-2015	V6 Diesel	PDM(Passenger's door module)	Erase fault codes
XF	2013-2015	V6 Diesel	PDM(Passenger's door module)	Live Data
XF	2013-2015	V6 Diesel	PSM(Passenger's seat module)	ECU information
XF	2013-2015	V6 Diesel	PSM(Passenger's seat module)	Read fault codes
XF	2013-2015	V6 Diesel	PSM(Passenger's seat module)	Erase fault codes
XF	2013-2015	V6 Diesel	PSM(Passenger's seat module)	Live Data
XF	2013-2015	V6 Diesel	RFA(Keyless vehicle module)	ECU information
XF	2013-2015	V6 Diesel	RFA(Keyless vehicle module)	Read fault codes
XF	2013-2015	V6 Diesel	RFA(Keyless vehicle module)	Erase fault codes
XF	2013-2015	V6 Diesel	RFA(Keyless vehicle module)	Live Data
XF	2013-2015	V6 Diesel	RGTM(Rear gate / trunk module)	ECU information
XF	2013-2015	V6 Diesel	RGTM(Rear gate / trunk module)	Read fault codes
XF	2013-2015	V6 Diesel	RGTM(Rear gate / trunk module)	Erase fault codes
XF	2013-2015	V6 Diesel	RGTM(Rear gate / trunk module)	Live Data
XF	2013-2015	V6 Diesel	SCME(Driver's climate seat module)	ECU information
XF	2013-2015	V6 Diesel	SCME(Driver's climate seat module)	Read fault codes
XF	2013-2015	V6 Diesel	SCME(Driver's climate seat module)	Erase fault codes
XF	2013-2015	V6 Diesel	SCME(Driver's climate seat module)	Live Data
XF	2013-2015	V6 Diesel	SODL(Side object detection control module - Left)	ECU information
XF	2013-2015	V6 Diesel	SODL(Side object detection control module - Left)	Read fault codes
XF	2013-2015	V6 Diesel	SODL(Side object detection control module - Left)	Erase fault codes
XF	2013-2015	V6 Diesel	SODL(Side object detection control module - Left)	Live Data
XF	2013-2015	V6 Diesel	SODR(Side object detection control module - Right)	ECU information

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XF	2013-2015	V6 Diesel	SODR(Side object detection control module - Right)	Read fault codes
XF	2013-2015	V6 Diesel	SODR(Side object detection control module - Right)	Erase fault codes
XF	2013-2015	V6 Diesel	SODR(Side object detection control module - Right)	Live Data
XF	2013-2015	V6 Diesel	TPM(Tire pressure monitor module)	ECU information
XF	2013-2015	V6 Diesel	TPM(Tire pressure monitor module)	Read fault codes
XF	2013-2015	V6 Diesel	TPM(Tire pressure monitor module)	Erase fault codes
XF	2013-2015	V6 Diesel	TPM(Tire pressure monitor module)	Live Data
XF	2013-2015	V6 Diesel	AAM(Audio amplifier module)	ECU information
XF	2013-2015	V6 Diesel	AAM(Audio amplifier module)	Read fault codes
XF	2013-2015	V6 Diesel	AAM(Audio amplifier module)	Erase fault codes
XF	2013-2015	V6 Diesel	AAM(Audio amplifier module)	Live Data
XF	2013-2015	V6 Diesel	ACM(Audio front control module)	ECU information
XF	2013-2015	V6 Diesel	ACM(Audio front control module)	Read fault codes
XF	2013-2015	V6 Diesel	ACM(Audio front control module)	Erase fault codes
XF	2013-2015	V6 Diesel	ACM(Audio front control module)	Live Data
XF	2013-2015	V6 Diesel	DABM(Digital audio broadcast module)	ECU information
XF	2013-2015	V6 Diesel	DABM(Digital audio broadcast module)	Read fault codes
XF	2013-2015	V6 Diesel	DABM(Digital audio broadcast module)	Erase fault codes
XF	2013-2015	V6 Diesel	DABM(Digital audio broadcast module)	Live Data
XF	2013-2015	V6 Diesel	NCM(Navigation control module)	ECU information
XF	2013-2015	V6 Diesel	NCM(Navigation control module)	Read fault codes
XF	2013-2015	V6 Diesel	NCM(Navigation control module)	Erase fault codes
XF	2013-2015	V6 Diesel	NCM(Navigation control module)	Live Data
XF	2013-2015	V6 Diesel	SRM(Satellite audio unit module)	ECU information
XF	2013-2015	V6 Diesel	SRM(Satellite audio unit module)	Read fault codes
XF	2013-2015	V6 Diesel	SRM(Satellite audio unit module)	Erase fault codes
XF	2013-2015	V6 Diesel	SRM(Satellite audio unit module)	Live Data
XF	2013-2015	V6 Diesel	TVM(Television module)	ECU information
XF	2013-2015	V6 Diesel	TVM(Television module)	Read fault codes
XF	2013-2015	V6 Diesel	TVM(Television module)	Erase fault codes
XF	2013-2015	V6 Diesel	TVM(Television module)	Live Data
XF	2013-2015	V6 Diesel	Special Function	Manual oil reset
XF	2013-2015	V6 Diesel	Special Function	Oil change reset
XF	2013-2015	V6 Diesel	Special Function	Oil service counter reset
XF	2013-2015	V6 Diesel	Special Function	Rest of world - Service interval options
XF	2013-2015	V6 Diesel	Special Function	Service interval reset
XF	2013-2015	V6 Diesel	Special Function	Injector replacement
XF	2013-2015	V6 Diesel	Special Function	Throttle valve actuator replacement
XF	2013-2015	V6 Diesel	Special Function	Parking brake release to service position
XF	2013-2015	V6 Diesel	Special Function	Brake bleed
XF	2013-2015	V6 Diesel	Special Function	Steering column calibration
XF	2013-2015	V6 Diesel	Special Function	Yaw rate sensor calibration
XF	2013-2015	V6 Diesel	Special Function	Tire pressure monitor receiver calibration
XF	2013-2015	V6 Diesel	Special Function	Tire pressure sensor replacement
XF	2013-2015	V6 Diesel	Special Function	Height calibration (MODE1)
XF	2013-2015	V6 Diesel	Special Function	Height calibration (MODE2)
XF	2013-2015	V6 Diesel	Special Function	Headlamp calibration suspension set-up
XF	2013-2015	V6 Diesel	Special Function	Headlamp control module system calibration
XF	2013-2015	V6 Diesel	Special Function	Battery replacement
XF	2013-2015	V6 Diesel	Special Function	Odometer calibration
XF	2013-2015	V6 Diesel	Special Function	Diesel particulate filter dynamic regeneration
XF	2013-2015	V6 Diesel	Special Function	Diesel particulate filter replacement
XF	2013-2015	V6 Diesel	Special Function	Seat cushion replacement
XF	2013-2015	V6 Diesel	Special Function	Driver's seat calibration
XF	2013-2015	V6 Diesel	Special Function	Passenger's seat calibration
XF	2013-2015	V6 Diesel	Special Function	Drivers side window calibration
XF	2013-2015	V6 Diesel	Special Function	Passenger side window calibration
XF	2013-2015	V6 Diesel	Special Function	Tailgate/trunk calibration
XF	2013-2015	Supercharged V6	PCM(Powertrain control module)	ECU information
XF	2013-2015	Supercharged V6	PCM(Powertrain control module)	Read fault codes
XF	2013-2015	Supercharged V6	PCM(Powertrain control module)	Erase fault codes
XF	2013-2015	Supercharged V6	PCM(Powertrain control module)	Live Data
XF	2013-2015	Supercharged V6	TCM(Transmission control module)	ECU information
XF	2013-2015	Supercharged V6	TCM(Transmission control module)	Read fault codes
XF	2013-2015	Supercharged V6	TCM(Transmission control module)	Erase fault codes
XF	2013-2015	Supercharged V6	TCM(Transmission control module)	Live Data
XF	2013-2015	Supercharged V6	ABS(ABS control module)	ECU information
XF	2013-2015	Supercharged V6	ABS(ABS control module)	Read fault codes
XF	2013-2015	Supercharged V6	ABS(ABS control module)	Erase fault codes
XF	2013-2015	Supercharged V6	ABS(ABS control module)	Live Data
XF	2013-2015	Supercharged V6	RCM(Restraints control module)	ECU information
XF	2013-2015	Supercharged V6	RCM(Restraints control module)	Read fault codes
XF	2013-2015	Supercharged V6	RCM(Restraints control module)	Erase fault codes
XF	2013-2015	Supercharged V6	RCM(Restraints control module)	Live Data
XF	2013-2015	Supercharged V6	IPC(Instrument cluster control module)	ECU information
XF	2013-2015	Supercharged V6	IPC(Instrument cluster control module)	Read fault codes
XF	2013-2015	Supercharged V6	IPC(Instrument cluster control module)	Erase fault codes
XF	2013-2015	Supercharged V6	IPC(Instrument cluster control module)	Live Data
XF	2013-2015	Supercharged V6	CCM(Speed control module)	ECU information
XF	2013-2015	Supercharged V6	CCM(Speed control module)	Read fault codes
XF	2013-2015	Supercharged V6	CCM(Speed control module)	Erase fault codes
XF	2013-2015	Supercharged V6	CCM(Speed control module)	Live Data
XF	2013-2015	Supercharged V6	CHCM(Chassis control module)	ECU information
XF	2013-2015	Supercharged V6	CHCM(Chassis control module)	Read fault codes
XF	2013-2015	Supercharged V6	CHCM(Chassis control module)	Erase fault codes
XF	2013-2015	Supercharged V6	CHCM(Chassis control module)	Live Data
XF	2013-2015	Supercharged V6	GSM(Gear shift module)	ECU information
XF	2013-2015	Supercharged V6	GSM(Gear shift module)	Read fault codes

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XF	2013-2015	Supercharged V6	GSM(Gear shift module)	Erase fault codes
XF	2013-2015	Supercharged V6	GSM(Gear shift module)	Live Data
XF	2013-2015	Supercharged V6	GWM(Gateway module)	ECU information
XF	2013-2015	Supercharged V6	GWM(Gateway module)	Read fault codes
XF	2013-2015	Supercharged V6	GWM(Gateway module)	Erase fault codes
XF	2013-2015	Supercharged V6	GWM(Gateway module)	Live Data
XF	2013-2015	Supercharged V6	HCM(Headlamp control module)	ECU information
XF	2013-2015	Supercharged V6	HCM(Headlamp control module)	Read fault codes
XF	2013-2015	Supercharged V6	HCM(Headlamp control module)	Erase fault codes
XF	2013-2015	Supercharged V6	HCM(Headlamp control module)	Live Data
XF	2013-2015	Supercharged V6	OCS(Restraints occupant classification system module)	ECU information
XF	2013-2015	Supercharged V6	OCS(Restraints occupant classification system module)	Read fault codes
XF	2013-2015	Supercharged V6	OCS(Restraints occupant classification system module)	Erase fault codes
XF	2013-2015	Supercharged V6	OCS(Restraints occupant classification system module)	Live Data
XF	2013-2015	Supercharged V6	PBM(Parking brake control module)	ECU information
XF	2013-2015	Supercharged V6	PBM(Parking brake control module)	Read fault codes
XF	2013-2015	Supercharged V6	PBM(Parking brake control module)	Erase fault codes
XF	2013-2015	Supercharged V6	PBM(Parking brake control module)	Live Data
XF	2013-2015	Supercharged V6	RDCM(Rear differential control module)	ECU information
XF	2013-2015	Supercharged V6	RDCM(Rear differential control module)	Read fault codes
XF	2013-2015	Supercharged V6	RDCM(Rear differential control module)	Erase fault codes
XF	2013-2015	Supercharged V6	RDCM(Rear differential control module)	Live Data
XF	2013-2015	Supercharged V6	SPMA(Safety belt pretensioner control module A - drivers side)	ECU information
XF	2013-2015	Supercharged V6	SPMA(Safety belt pretensioner control module A - drivers side)	Read fault codes
XF	2013-2015	Supercharged V6	SPMA(Safety belt pretensioner control module A - drivers side)	Erase fault codes
XF	2013-2015	Supercharged V6	SPMA(Safety belt pretensioner control module A - drivers side)	Live Data
XF	2013-2015	Supercharged V6	SPMB(Safety belt pretensioner control module B - passengers side)	ECU information
XF	2013-2015	Supercharged V6	SPMB(Safety belt pretensioner control module B - passengers side)	Read fault codes
XF	2013-2015	Supercharged V6	SPMB(Safety belt pretensioner control module B - passengers side)	Erase fault codes
XF	2013-2015	Supercharged V6	SPMB(Safety belt pretensioner control module B - passengers side)	Live Data
XF	2013-2015	Supercharged V6	SUMB(Adaptive damping control module)	ECU information
XF	2013-2015	Supercharged V6	SUMB(Adaptive damping control module)	Read fault codes
XF	2013-2015	Supercharged V6	SUMB(Adaptive damping control module)	Erase fault codes
XF	2013-2015	Supercharged V6	SUMB(Adaptive damping control module)	Live Data
XF	2013-2015	Supercharged V6	TCCM(Transfer case control module)	ECU information
XF	2013-2015	Supercharged V6	TCCM(Transfer case control module)	Read fault codes
XF	2013-2015	Supercharged V6	TCCM(Transfer case control module)	Erase fault codes
XF	2013-2015	Supercharged V6	TCCM(Transfer case control module)	Live Data
XF	2013-2015	Supercharged V6	VIM(Vehicle immobilizer control module)	ECU information
XF	2013-2015	Supercharged V6	VIM(Vehicle immobilizer control module)	Read fault codes
XF	2013-2015	Supercharged V6	VIM(Vehicle immobilizer control module)	Erase fault codes
XF	2013-2015	Supercharged V6	VIM(Vehicle immobilizer control module)	Live Data
XF	2013-2015	Supercharged V6	FSJB(Central junction box (body control module))	ECU information
XF	2013-2015	Supercharged V6	FSJB(Central junction box (body control module))	Read fault codes
XF	2013-2015	Supercharged V6	FSJB(Central junction box (body control module))	Erase fault codes
XF	2013-2015	Supercharged V6	FSJB(Central junction box (body control module))	Live Data
XF	2013-2015	Supercharged V6	RSJB(Auxiliary junction box (body control module B))	ECU information
XF	2013-2015	Supercharged V6	RSJB(Auxiliary junction box (body control module B))	Read fault codes
XF	2013-2015	Supercharged V6	RSJB(Auxiliary junction box (body control module B))	Erase fault codes
XF	2013-2015	Supercharged V6	RSJB(Auxiliary junction box (body control module B))	Live Data
XF	2013-2015	Supercharged V6	BCM(Central junction box (body control module))	ECU information
XF	2013-2015	Supercharged V6	BCM(Central junction box (body control module))	Read fault codes
XF	2013-2015	Supercharged V6	BCM(Central junction box (body control module))	Erase fault codes
XF	2013-2015	Supercharged V6	BCM(Central junction box (body control module))	Live Data
XF	2013-2015	Supercharged V6	BCMB(Auxiliary junction box (body control module B))	ECU information
XF	2013-2015	Supercharged V6	BCMB(Auxiliary junction box (body control module B))	Read fault codes
XF	2013-2015	Supercharged V6	BCMB(Auxiliary junction box (body control module B))	Erase fault codes
XF	2013-2015	Supercharged V6	BCMB(Auxiliary junction box (body control module B))	Live Data
XF	2013-2015	Supercharged V6	DDM(Driver's door module)	ECU information
XF	2013-2015	Supercharged V6	DDM(Driver's door module)	Read fault codes
XF	2013-2015	Supercharged V6	DDM(Driver's door module)	Erase fault codes
XF	2013-2015	Supercharged V6	DDM(Driver's door module)	Live Data
XF	2013-2015	Supercharged V6	DSM(Driver's seat module)	ECU information



## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XF	2013-2015	Supercharged V6	DSM(Driver's seat module)	Read fault codes
XF	2013-2015	Supercharged V6	DSM(Driver's seat module)	Erase fault codes
XF	2013-2015	Supercharged V6	DSM(Driver's seat module)	Live Data
XF	2013-2015	Supercharged V6	FCDIM(Front control/display interface module (high level display front))	ECU information
XF	2013-2015	Supercharged V6	FCDIM(Front control/display interface module (high level display front))	Read fault codes
XF	2013-2015	Supercharged V6	FCDIM(Front control/display interface module (high level display front))	Erase fault codes
XF	2013-2015	Supercharged V6	FCDIM(Front control/display interface module (high level display front))	Live Data
XF	2013-2015	Supercharged V6	FCIMB(Front controls interface module B (front audio control panel))	ECU information
XF	2013-2015	Supercharged V6	FCIMB(Front controls interface module B (front audio control panel))	Read fault codes
XF	2013-2015	Supercharged V6	FCIMB(Front controls interface module B (front audio control panel))	Erase fault codes
XF	2013-2015	Supercharged V6	FCIMB(Front controls interface module B (front audio control panel))	Live Data
XF	2013-2015	Supercharged V6	HCMB(Headlamp control module B)	ECU information
XF	2013-2015	Supercharged V6	HCMB(Headlamp control module B)	Read fault codes
XF	2013-2015	Supercharged V6	HCMB(Headlamp control module B)	Erase fault codes
XF	2013-2015	Supercharged V6	HCMB(Headlamp control module B)	Live Data
XF	2013-2015	Supercharged V6	HVAC(Heating ventilation and air conditioning control module)	ECU information
XF	2013-2015	Supercharged V6	HVAC(Heating ventilation and air conditioning control module)	Read fault codes
XF	2013-2015	Supercharged V6	HVAC(Heating ventilation and air conditioning control module)	Erase fault codes
XF	2013-2015	Supercharged V6	HVAC(Heating ventilation and air conditioning control module)	Live Data
XF	2013-2015	Supercharged V6	PAM(Parking assist control module)	ECU information
XF	2013-2015	Supercharged V6	PAM(Parking assist control module)	Read fault codes
XF	2013-2015	Supercharged V6	PAM(Parking assist control module)	Erase fault codes
XF	2013-2015	Supercharged V6	PAM(Parking assist control module)	Live Data
XF	2013-2015	Supercharged V6	PDM(Passenger's door module)	ECU information
XF	2013-2015	Supercharged V6	PDM(Passenger's door module)	Read fault codes
XF	2013-2015	Supercharged V6	PDM(Passenger's door module)	Erase fault codes
XF	2013-2015	Supercharged V6	PDM(Passenger's door module)	Live Data
XF	2013-2015	Supercharged V6	PSM(Passenger's seat module)	ECU information
XF	2013-2015	Supercharged V6	PSM(Passenger's seat module)	Read fault codes
XF	2013-2015	Supercharged V6	PSM(Passenger's seat module)	Erase fault codes
XF	2013-2015	Supercharged V6	PSM(Passenger's seat module)	Live Data
XF	2013-2015	Supercharged V6	RFA(Keyless vehicle module)	ECU information
XF	2013-2015	Supercharged V6	RFA(Keyless vehicle module)	Read fault codes
XF	2013-2015	Supercharged V6	RFA(Keyless vehicle module)	Erase fault codes
XF	2013-2015	Supercharged V6	RFA(Keyless vehicle module)	Live Data
XF	2013-2015	Supercharged V6	RGTM(Rear gate / trunk module)	ECU information
XF	2013-2015	Supercharged V6	RGTM(Rear gate / trunk module)	Read fault codes
XF	2013-2015	Supercharged V6	RGTM(Rear gate / trunk module)	Erase fault codes
XF	2013-2015	Supercharged V6	RGTM(Rear gate / trunk module)	Live Data
XF	2013-2015	Supercharged V6	SCME(Driver's climate seat module)	ECU information
XF	2013-2015	Supercharged V6	SCME(Driver's climate seat module)	Read fault codes
XF	2013-2015	Supercharged V6	SCME(Driver's climate seat module)	Erase fault codes
XF	2013-2015	Supercharged V6	SCME(Driver's climate seat module)	Live Data
XF	2013-2015	Supercharged V6	SODL(Side object detection control module - Left)	ECU information
XF	2013-2015	Supercharged V6	SODL(Side object detection control module - Left)	Read fault codes
XF	2013-2015	Supercharged V6	SODL(Side object detection control module - Left)	Erase fault codes
XF	2013-2015	Supercharged V6	SODL(Side object detection control module - Left)	Live Data
XF	2013-2015	Supercharged V6	SODR(Side object detection control module - Right)	ECU information
XF	2013-2015	Supercharged V6	SODR(Side object detection control module - Right)	Read fault codes
XF	2013-2015	Supercharged V6	SODR(Side object detection control module - Right)	Erase fault codes
XF	2013-2015	Supercharged V6	SODR(Side object detection control module - Right)	Live Data
XF	2013-2015	Supercharged V6	TPM(Tire pressure monitor module)	ECU information
XF	2013-2015	Supercharged V6	TPM(Tire pressure monitor module)	Read fault codes
XF	2013-2015	Supercharged V6	TPM(Tire pressure monitor module)	Erase fault codes
XF	2013-2015	Supercharged V6	TPM(Tire pressure monitor module)	Live Data
XF	2013-2015	Supercharged V6	AAM(Audio amplifier module)	ECU information
XF	2013-2015	Supercharged V6	AAM(Audio amplifier module)	Read fault codes
XF	2013-2015	Supercharged V6	AAM(Audio amplifier module)	Erase fault codes
XF	2013-2015	Supercharged V6	AAM(Audio amplifier module)	Live Data
XF	2013-2015	Supercharged V6	ACM(Audio front control module)	ECU information
XF	2013-2015	Supercharged V6	ACM(Audio front control module)	Read fault codes
XF	2013-2015	Supercharged V6	ACM(Audio front control module)	Erase fault codes
XF	2013-2015	Supercharged V6	ACM(Audio front control module)	Live Data
XF	2013-2015	Supercharged V6	DABM(Digital audio broadcast module)	ECU information
XF	2013-2015	Supercharged V6	DABM(Digital audio broadcast module)	Read fault codes
XF	2013-2015	Supercharged V6	DABM(Digital audio broadcast module)	Erase fault codes
XF	2013-2015	Supercharged V6	DABM(Digital audio broadcast module)	Live Data
XF	2013-2015	Supercharged V6	NCM(Navigation control module)	ECU information
XF	2013-2015	Supercharged V6	NCM(Navigation control module)	Read fault codes
XF	2013-2015	Supercharged V6	NCM(Navigation control module)	Erase fault codes
XF	2013-2015	Supercharged V6	NCM(Navigation control module)	Live Data
XF	2013-2015	Supercharged V6	SRM(Satellite audio unit module)	ECU information

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XF	2013-2015	Supercharged V6	SRM(Satellite audio unit module)	Read fault codes
XF	2013-2015	Supercharged V6	SRM(Satellite audio unit module)	Erase fault codes
XF	2013-2015	Supercharged V6	SRM(Satellite audio unit module)	Live Data
XF	2013-2015	Supercharged V6	TVM(Television module)	ECU information
XF	2013-2015	Supercharged V6	TVM(Television module)	Read fault codes
XF	2013-2015	Supercharged V6	TVM(Television module)	Erase fault codes
XF	2013-2015	Supercharged V6	TVM(Television module)	Live Data
XF	2013-2015	Supercharged V6	Special Function	Manual oil reset
XF	2013-2015	Supercharged V6	Special Function	Oil change reset
XF	2013-2015	Supercharged V6	Special Function	Oil service counter reset
XF	2013-2015	Supercharged V6	Special Function	Service interval reset
XF	2013-2015	Supercharged V6	Special Function	Injector valve test
XF	2013-2015	Supercharged V6	Special Function	Petrol powertrain idle speed control test
XF	2013-2015	Supercharged V6	Special Function	Throttle valve actuator replacement
XF	2013-2015	Supercharged V6	Special Function	Parking brake release to service position
XF	2013-2015	Supercharged V6	Special Function	Brake bleed
XF	2013-2015	Supercharged V6	Special Function	Steering column calibration
XF	2013-2015	Supercharged V6	Special Function	Yaw rate sensor calibration
XF	2013-2015	Supercharged V6	Special Function	Tire pressure monitor receiver calibration
XF	2013-2015	Supercharged V6	Special Function	Tire pressure sensor replacement
XF	2013-2015	Supercharged V6	Special Function	Height calibration(MODE1)
XF	2013-2015	Supercharged V6	Special Function	Height calibration(MODE2)
XF	2013-2015	Supercharged V6	Special Function	Headlamp calibration suspension set-up
XF	2013-2015	Supercharged V6	Special Function	Headlamp control module system calibration
XF	2013-2015	Supercharged V6	Special Function	Battery replacement
XF	2013-2015	Supercharged V6	Special Function	Odometer calibration
XF	2013-2015	Supercharged V6	Special Function	Seat cushion replacement
XF	2013-2015	Supercharged V6	Special Function	Driver's seat calibration
XF	2013-2015	Supercharged V6	Special Function	Passenger's seat calibration
XF	2013-2015	Supercharged V6	Special Function	Drivers side window calibration
XF	2013-2015	Supercharged V6	Special Function	Passenger side window calibration
XF	2013-2015	Supercharged V6	Special Function	Tailgate/trunk calibration
XF	2013-2015	Supercharged V8 5.0L engine	PCM(Powertrain control module)	ECU information
XF	2013-2015	Supercharged V8 5.0L engine	PCM(Powertrain control module)	Read fault codes
XF	2013-2015	Supercharged V8 5.0L engine	PCM(Powertrain control module)	Erase fault codes
XF	2013-2015	Supercharged V8 5.0L engine	PCM(Powertrain control module)	Live Data
XF	2013-2015	Supercharged V8 5.0L engine	TCM(Transmission control module)	ECU information
XF	2013-2015	Supercharged V8 5.0L engine	TCM(Transmission control module)	Read fault codes
XF	2013-2015	Supercharged V8 5.0L engine	TCM(Transmission control module)	Erase fault codes
XF	2013-2015	Supercharged V8 5.0L engine	TCM(Transmission control module)	Live Data
XF	2013-2015	Supercharged V8 5.0L engine	ABS(ABS control module)	ECU information
XF	2013-2015	Supercharged V8 5.0L engine	ABS(ABS control module)	Read fault codes
XF	2013-2015	Supercharged V8 5.0L engine	ABS(ABS control module)	Erase fault codes
XF	2013-2015	Supercharged V8 5.0L engine	ABS(ABS control module)	Live Data
XF	2013-2015	Supercharged V8 5.0L engine	RCM(Restraints control module)	ECU information
XF	2013-2015	Supercharged V8 5.0L engine	RCM(Restraints control module)	Read fault codes
XF	2013-2015	Supercharged V8 5.0L engine	RCM(Restraints control module)	Erase fault codes
XF	2013-2015	Supercharged V8 5.0L engine	RCM(Restraints control module)	Live Data
XF	2013-2015	Supercharged V8 5.0L engine	IPC(Instrument cluster control module)	ECU information
XF	2013-2015	Supercharged V8 5.0L engine	IPC(Instrument cluster control module)	Read fault codes
XF	2013-2015	Supercharged V8 5.0L engine	IPC(Instrument cluster control module)	Erase fault codes
XF	2013-2015	Supercharged V8 5.0L engine	IPC(Instrument cluster control module)	Live Data
XF	2013-2015	Supercharged V8 5.0L engine	CCM(Speed control module)	ECU information
XF	2013-2015	Supercharged V8 5.0L engine	CCM(Speed control module)	Read fault codes
XF	2013-2015	Supercharged V8 5.0L engine	CCM(Speed control module)	Erase fault codes
XF	2013-2015	Supercharged V8 5.0L engine	CCM(Speed control module)	Live Data
XF	2013-2015	Supercharged V8 5.0L engine	CHCM(Chassis control module)	ECU information
XF	2013-2015	Supercharged V8 5.0L engine	CHCM(Chassis control module)	Read fault codes
XF	2013-2015	Supercharged V8 5.0L engine	CHCM(Chassis control module)	Erase fault codes
XF	2013-2015	Supercharged V8 5.0L engine	CHCM(Chassis control module)	Live Data
XF	2013-2015	Supercharged V8 5.0L engine	GSM(Gear shift module)	ECU information
XF	2013-2015	Supercharged V8 5.0L engine	GSM(Gear shift module)	Read fault codes
XF	2013-2015	Supercharged V8 5.0L engine	GSM(Gear shift module)	Erase fault codes
XF	2013-2015	Supercharged V8 5.0L engine	GSM(Gear shift module)	Live Data
XF	2013-2015	Supercharged V8 5.0L engine	GWM(Gateway module)	ECU information
XF	2013-2015	Supercharged V8 5.0L engine	GWM(Gateway module)	Read fault codes
XF	2013-2015	Supercharged V8 5.0L engine	GWM(Gateway module)	Erase fault codes
XF	2013-2015	Supercharged V8 5.0L engine	GWM(Gateway module)	Live Data
XF	2013-2015	Supercharged V8 5.0L engine	HCM(Headlamp control module)	ECU information
XF	2013-2015	Supercharged V8 5.0L engine	HCM(Headlamp control module)	Read fault codes
XF	2013-2015	Supercharged V8 5.0L engine	HCM(Headlamp control module)	Erase fault codes
XF	2013-2015	Supercharged V8 5.0L engine	HCM(Headlamp control module)	Live Data
XF	2013-2015	Supercharged V8 5.0L engine	OCS(Restraints occupant classification system module)	ECU information
XF	2013-2015	Supercharged V8 5.0L engine	OCS(Restraints occupant classification system module)	Read fault codes
XF	2013-2015	Supercharged V8 5.0L engine	OCS(Restraints occupant classification system module)	Erase fault codes
XF	2013-2015	Supercharged V8 5.0L engine	OCS(Restraints occupant classification system module)	Live Data
XF	2013-2015	Supercharged V8 5.0L engine	PBM(Parking brake control module)	ECU information
XF	2013-2015	Supercharged V8 5.0L engine	PBM(Parking brake control module)	Read fault codes
XF	2013-2015	Supercharged V8 5.0L engine	PBM(Parking brake control module)	Erase fault codes
XF	2013-2015	Supercharged V8 5.0L engine	PBM(Parking brake control module)	Live Data
XF	2013-2015	Supercharged V8 5.0L engine	RDCM(Rear differential control module)	ECU information
XF	2013-2015	Supercharged V8 5.0L engine	RDCM(Rear differential control module)	Read fault codes
XF	2013-2015	Supercharged V8 5.0L engine	RDCM(Rear differential control module)	Erase fault codes
XF	2013-2015	Supercharged V8 5.0L engine	RDCM(Rear differential control module)	Live Data
XF	2013-2015	Supercharged V8 5.0L engine	SPMA(Safety belt pretensioner control module A - drivers side)	ECU information
XF	2013-2015	Supercharged V8 5.0L engine	SPMA(Safety belt pretensioner control module A - drivers side)	Read fault codes

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XF	2013-2015	Supercharged V8 5.0L engine	SPMA(Safety belt pretensioner control module A - drivers side)	Erase fault codes
XF	2013-2015	Supercharged V8 5.0L engine	SPMA(Safety belt pretensioner control module A - drivers side)	Live Data
XF	2013-2015	Supercharged V8 5.0L engine	SPMB(Safety belt pretensioner control module B - passengers side)	ECU information
XF	2013-2015	Supercharged V8 5.0L engine	SPMB(Safety belt pretensioner control module B - passengers side)	Read fault codes
XF	2013-2015	Supercharged V8 5.0L engine	SPMB(Safety belt pretensioner control module B - passengers side)	Erase fault codes
XF	2013-2015	Supercharged V8 5.0L engine	SPMB(Safety belt pretensioner control module B - passengers side)	Live Data
XF	2013-2015	Supercharged V8 5.0L engine	SUMB(Adaptive damping control module)	ECU information
XF	2013-2015	Supercharged V8 5.0L engine	SUMB(Adaptive damping control module)	Read fault codes
XF	2013-2015	Supercharged V8 5.0L engine	SUMB(Adaptive damping control module)	Erase fault codes
XF	2013-2015	Supercharged V8 5.0L engine	SUMB(Adaptive damping control module)	Live Data
XF	2013-2015	Supercharged V8 5.0L engine	TCCM(Transfer case control module)	ECU information
XF	2013-2015	Supercharged V8 5.0L engine	TCCM(Transfer case control module)	Read fault codes
XF	2013-2015	Supercharged V8 5.0L engine	TCCM(Transfer case control module)	Erase fault codes
XF	2013-2015	Supercharged V8 5.0L engine	TCCM(Transfer case control module)	Live Data
XF	2013-2015	Supercharged V8 5.0L engine	VIM(Vehicle immobilizer control module)	ECU information
XF	2013-2015	Supercharged V8 5.0L engine	VIM(Vehicle immobilizer control module)	Read fault codes
XF	2013-2015	Supercharged V8 5.0L engine	VIM(Vehicle immobilizer control module)	Erase fault codes
XF	2013-2015	Supercharged V8 5.0L engine	VIM(Vehicle immobilizer control module)	Live Data
XF	2013-2015	Supercharged V8 5.0L engine	FSJB(Central junction box (body control module))	ECU information
XF	2013-2015	Supercharged V8 5.0L engine	FSJB(Central junction box (body control module))	Read fault codes
XF	2013-2015	Supercharged V8 5.0L engine	FSJB(Central junction box (body control module))	Erase fault codes
XF	2013-2015	Supercharged V8 5.0L engine	FSJB(Central junction box (body control module))	Live Data
XF	2013-2015	Supercharged V8 5.0L engine	RSJB(Auxiliary junction box (body control module B))	ECU information
XF	2013-2015	Supercharged V8 5.0L engine	RSJB(Auxiliary junction box (body control module B))	Read fault codes
XF	2013-2015	Supercharged V8 5.0L engine	RSJB(Auxiliary junction box (body control module B))	Erase fault codes
XF	2013-2015	Supercharged V8 5.0L engine	RSJB(Auxiliary junction box (body control module B))	Live Data
XF	2013-2015	Supercharged V8 5.0L engine	BCM(Central junction box (body control module))	ECU information
XF	2013-2015	Supercharged V8 5.0L engine	BCM(Central junction box (body control module))	Read fault codes
XF	2013-2015	Supercharged V8 5.0L engine	BCM(Central junction box (body control module))	Erase fault codes
XF	2013-2015	Supercharged V8 5.0L engine	BCM(Central junction box (body control module))	Live Data
XF	2013-2015	Supercharged V8 5.0L engine	BCMB(Auxiliary junction box (body control module B))	ECU information
XF	2013-2015	Supercharged V8 5.0L engine	BCMB(Auxiliary junction box (body control module B))	Read fault codes
XF	2013-2015	Supercharged V8 5.0L engine	BCMB(Auxiliary junction box (body control module B))	Erase fault codes
XF	2013-2015	Supercharged V8 5.0L engine	BCMB(Auxiliary junction box (body control module B))	Live Data
XF	2013-2015	Supercharged V8 5.0L engine	DDM(Driver's door module)	ECU information
XF	2013-2015	Supercharged V8 5.0L engine	DDM(Driver's door module)	Read fault codes
XF	2013-2015	Supercharged V8 5.0L engine	DDM(Driver's door module)	Erase fault codes
XF	2013-2015	Supercharged V8 5.0L engine	DDM(Driver's door module)	Live Data
XF	2013-2015	Supercharged V8 5.0L engine	DSM(Driver's seat module)	ECU information
XF	2013-2015	Supercharged V8 5.0L engine	DSM(Driver's seat module)	Read fault codes
XF	2013-2015	Supercharged V8 5.0L engine	DSM(Driver's seat module)	Erase fault codes
XF	2013-2015	Supercharged V8 5.0L engine	DSM(Driver's seat module)	Live Data
XF	2013-2015	Supercharged V8 5.0L engine	FCDIM(Front control/display interface module (high level display front))	ECU information
XF	2013-2015	Supercharged V8 5.0L engine	FCDIM(Front control/display interface module (high level display front))	Read fault codes
XF	2013-2015	Supercharged V8 5.0L engine	FCDIM(Front control/display interface module (high level display front))	Erase fault codes
XF	2013-2015	Supercharged V8 5.0L engine	FCDIM(Front control/display interface module (high level display front))	Live Data
XF	2013-2015	Supercharged V8 5.0L engine	FCIMB(Front controls interface module B (front audio control panel))	ECU information
XF	2013-2015	Supercharged V8 5.0L engine	FCIMB(Front controls interface module B (front audio control panel))	Read fault codes
XF	2013-2015	Supercharged V8 5.0L engine	FCIMB(Front controls interface module B (front audio control panel))	Erase fault codes
XF	2013-2015	Supercharged V8 5.0L engine	FCIMB(Front controls interface module B (front audio control panel))	Live Data
XF	2013-2015	Supercharged V8 5.0L engine	HCMB(Headlamp control module B)	ECU information
XF	2013-2015	Supercharged V8 5.0L engine	HCMB(Headlamp control module B)	Read fault codes
XF	2013-2015	Supercharged V8 5.0L engine	HCMB(Headlamp control module B)	Erase fault codes
XF	2013-2015	Supercharged V8 5.0L engine	HCMB(Headlamp control module B)	Live Data
XF	2013-2015	Supercharged V8 5.0L engine	HVAC(Heating ventilation and air conditioning control module)	ECU information
XF	2013-2015	Supercharged V8 5.0L engine	HVAC(Heating ventilation and air conditioning control module)	Read fault codes
XF	2013-2015	Supercharged V8 5.0L engine	HVAC(Heating ventilation and air conditioning control module)	Erase fault codes

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XF	2013-2015	Supercharged V8 5.0L engine	HVAC(Heating ventilation and air conditioning control module)	Live Data
XF	2013-2015	Supercharged V8 5.0L engine	PAM(Parking assist control module)	ECU information
XF	2013-2015	Supercharged V8 5.0L engine	PAM(Parking assist control module)	Read fault codes
XF	2013-2015	Supercharged V8 5.0L engine	PAM(Parking assist control module)	Erase fault codes
XF	2013-2015	Supercharged V8 5.0L engine	PAM(Parking assist control module)	Live Data
XF	2013-2015	Supercharged V8 5.0L engine	PDM(Passenger's door module)	ECU information
XF	2013-2015	Supercharged V8 5.0L engine	PDM(Passenger's door module)	Read fault codes
XF	2013-2015	Supercharged V8 5.0L engine	PDM(Passenger's door module)	Erase fault codes
XF	2013-2015	Supercharged V8 5.0L engine	PDM(Passenger's door module)	Live Data
XF	2013-2015	Supercharged V8 5.0L engine	PSM(Passenger's seat module)	ECU information
XF	2013-2015	Supercharged V8 5.0L engine	PSM(Passenger's seat module)	Read fault codes
XF	2013-2015	Supercharged V8 5.0L engine	PSM(Passenger's seat module)	Erase fault codes
XF	2013-2015	Supercharged V8 5.0L engine	PSM(Passenger's seat module)	Live Data
XF	2013-2015	Supercharged V8 5.0L engine	RFA(Keyless vehicle module)	ECU information
XF	2013-2015	Supercharged V8 5.0L engine	RFA(Keyless vehicle module)	Read fault codes
XF	2013-2015	Supercharged V8 5.0L engine	RFA(Keyless vehicle module)	Erase fault codes
XF	2013-2015	Supercharged V8 5.0L engine	RFA(Keyless vehicle module)	Live Data
XF	2013-2015	Supercharged V8 5.0L engine	RGTM(Rear gate / trunk module)	ECU information
XF	2013-2015	Supercharged V8 5.0L engine	RGTM(Rear gate / trunk module)	Read fault codes
XF	2013-2015	Supercharged V8 5.0L engine	RGTM(Rear gate / trunk module)	Erase fault codes
XF	2013-2015	Supercharged V8 5.0L engine	RGTM(Rear gate / trunk module)	Live Data
XF	2013-2015	Supercharged V8 5.0L engine	SCME(Driver's climate seat module)	ECU information
XF	2013-2015	Supercharged V8 5.0L engine	SCME(Driver's climate seat module)	Read fault codes
XF	2013-2015	Supercharged V8 5.0L engine	SCME(Driver's climate seat module)	Erase fault codes
XF	2013-2015	Supercharged V8 5.0L engine	SCME(Driver's climate seat module)	Live Data
XF	2013-2015	Supercharged V8 5.0L engine	SODL(Side object detection control module - Left)	ECU information
XF	2013-2015	Supercharged V8 5.0L engine	SODL(Side object detection control module - Left)	Read fault codes
XF	2013-2015	Supercharged V8 5.0L engine	SODL(Side object detection control module - Left)	Erase fault codes
XF	2013-2015	Supercharged V8 5.0L engine	SODL(Side object detection control module - Left)	Live Data
XF	2013-2015	Supercharged V8 5.0L engine	SODR(Side object detection control module - Right)	ECU information
XF	2013-2015	Supercharged V8 5.0L engine	SODR(Side object detection control module - Right)	Read fault codes
XF	2013-2015	Supercharged V8 5.0L engine	SODR(Side object detection control module - Right)	Erase fault codes
XF	2013-2015	Supercharged V8 5.0L engine	SODR(Side object detection control module - Right)	Live Data
XF	2013-2015	Supercharged V8 5.0L engine	TPM(Tire pressure monitor module)	ECU information
XF	2013-2015	Supercharged V8 5.0L engine	TPM(Tire pressure monitor module)	Read fault codes
XF	2013-2015	Supercharged V8 5.0L engine	TPM(Tire pressure monitor module)	Erase fault codes
XF	2013-2015	Supercharged V8 5.0L engine	TPM(Tire pressure monitor module)	Live Data
XF	2013-2015	Supercharged V8 5.0L engine	AAM(Audio amplifier module)	ECU information
XF	2013-2015	Supercharged V8 5.0L engine	AAM(Audio amplifier module)	Read fault codes
XF	2013-2015	Supercharged V8 5.0L engine	AAM(Audio amplifier module)	Erase fault codes
XF	2013-2015	Supercharged V8 5.0L engine	AAM(Audio amplifier module)	Live Data
XF	2013-2015	Supercharged V8 5.0L engine	ACM(Audio front control module)	ECU information
XF	2013-2015	Supercharged V8 5.0L engine	ACM(Audio front control module)	Read fault codes
XF	2013-2015	Supercharged V8 5.0L engine	ACM(Audio front control module)	Erase fault codes
XF	2013-2015	Supercharged V8 5.0L engine	ACM(Audio front control module)	Live Data
XF	2013-2015	Supercharged V8 5.0L engine	DABM(Digital audio broadcast module)	ECU information
XF	2013-2015	Supercharged V8 5.0L engine	DABM(Digital audio broadcast module)	Read fault codes
XF	2013-2015	Supercharged V8 5.0L engine	DABM(Digital audio broadcast module)	Erase fault codes
XF	2013-2015	Supercharged V8 5.0L engine	DABM(Digital audio broadcast module)	Live Data
XF	2013-2015	Supercharged V8 5.0L engine	NCM(Navigation control module)	ECU information
XF	2013-2015	Supercharged V8 5.0L engine	NCM(Navigation control module)	Read fault codes
XF	2013-2015	Supercharged V8 5.0L engine	NCM(Navigation control module)	Erase fault codes
XF	2013-2015	Supercharged V8 5.0L engine	NCM(Navigation control module)	Live Data
XF	2013-2015	Supercharged V8 5.0L engine	SRM(Satellite audio unit module)	ECU information
XF	2013-2015	Supercharged V8 5.0L engine	SRM(Satellite audio unit module)	Read fault codes
XF	2013-2015	Supercharged V8 5.0L engine	SRM(Satellite audio unit module)	Erase fault codes
XF	2013-2015	Supercharged V8 5.0L engine	SRM(Satellite audio unit module)	Live Data
XF	2013-2015	Supercharged V8 5.0L engine	TVM(Television module)	ECU information
XF	2013-2015	Supercharged V8 5.0L engine	TVM(Television module)	Read fault codes
XF	2013-2015	Supercharged V8 5.0L engine	TVM(Television module)	Erase fault codes
XF	2013-2015	Supercharged V8 5.0L engine	TVM(Television module)	Live Data
XF	2013-2015	Supercharged V8 5.0L engine	Special Function	Manual oil reset
XF	2013-2015	Supercharged V8 5.0L engine	Special Function	Oil change reset
XF	2013-2015	Supercharged V8 5.0L engine	Special Function	Oil service counter reset
XF	2013-2015	Supercharged V8 5.0L engine	Special Function	Service interval reset
XF	2013-2015	Supercharged V8 5.0L engine	Special Function	Petrol powertrain idle speed control test
XF	2013-2015	Supercharged V8 5.0L engine	Special Function	Throttle valve actuator replacement
XF	2013-2015	Supercharged V8 5.0L engine	Special Function	Parking brake release to service position
XF	2013-2015	Supercharged V8 5.0L engine	Special Function	Brake bleed
XF	2013-2015	Supercharged V8 5.0L engine	Special Function	Steering column calibration
XF	2013-2015	Supercharged V8 5.0L engine	Special Function	Tire pressure monitor receiver calibration
XF	2013-2015	Supercharged V8 5.0L engine	Special Function	Tire pressure sensor replacement
XF	2013-2015	Supercharged V8 5.0L engine	Special Function	Height calibration(MODE1)
XF	2013-2015	Supercharged V8 5.0L engine	Special Function	Height calibration(MODE2)
XF	2013-2015	Supercharged V8 5.0L engine	Special Function	Headlamp calibration suspension set-up
XF	2013-2015	Supercharged V8 5.0L engine	Special Function	Headlamp control module system calibration
XF	2013-2015	Supercharged V8 5.0L engine	Special Function	Battery replacement
XF	2013-2015	Supercharged V8 5.0L engine	Special Function	Odometer calibration
XF	2013-2015	Supercharged V8 5.0L engine	Special Function	Seat cushion replacement
XF	2013-2015	Supercharged V8 5.0L engine	Special Function	Driver's seat calibration
XF	2013-2015	Supercharged V8 5.0L engine	Special Function	Passenger's seat calibration
XF	2013-2015	Supercharged V8 5.0L engine	Special Function	Drivers side window calibration
XF	2013-2015	Supercharged V8 5.0L engine	Special Function	Passenger side window calibration

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XF	2013-2015	Supercharged V8 5.0L engine	Special Function	Tailgate/trunk calibration
XF	2013-2015	I4 Diesel 2.2L engine	PCM(Powertrain control module)	ECU information
XF	2013-2015	I4 Diesel 2.2L engine	PCM(Powertrain control module)	Read fault codes
XF	2013-2015	I4 Diesel 2.2L engine	PCM(Powertrain control module)	Erase fault codes
XF	2013-2015	I4 Diesel 2.2L engine	PCM(Powertrain control module)	Live Data
XF	2013-2015	I4 Diesel 2.2L engine	TCM(Transmission control module)	ECU information
XF	2013-2015	I4 Diesel 2.2L engine	TCM(Transmission control module)	Read fault codes
XF	2013-2015	I4 Diesel 2.2L engine	TCM(Transmission control module)	Erase fault codes
XF	2013-2015	I4 Diesel 2.2L engine	TCM(Transmission control module)	Live Data
XF	2013-2015	I4 Diesel 2.2L engine	ABS(ABS control module)	ECU information
XF	2013-2015	I4 Diesel 2.2L engine	ABS(ABS control module)	Read fault codes
XF	2013-2015	I4 Diesel 2.2L engine	ABS(ABS control module)	Erase fault codes
XF	2013-2015	I4 Diesel 2.2L engine	ABS(ABS control module)	Live Data
XF	2013-2015	I4 Diesel 2.2L engine	RCM(Restraints control module)	ECU information
XF	2013-2015	I4 Diesel 2.2L engine	RCM(Restraints control module)	Read fault codes
XF	2013-2015	I4 Diesel 2.2L engine	RCM(Restraints control module)	Erase fault codes
XF	2013-2015	I4 Diesel 2.2L engine	RCM(Restraints control module)	Live Data
XF	2013-2015	I4 Diesel 2.2L engine	IPC(Instrument cluster control module)	ECU information
XF	2013-2015	I4 Diesel 2.2L engine	IPC(Instrument cluster control module)	Read fault codes
XF	2013-2015	I4 Diesel 2.2L engine	IPC(Instrument cluster control module)	Erase fault codes
XF	2013-2015	I4 Diesel 2.2L engine	IPC(Instrument cluster control module)	Live Data
XF	2013-2015	I4 Diesel 2.2L engine	CCM(Speed control module)	ECU information
XF	2013-2015	I4 Diesel 2.2L engine	CCM(Speed control module)	Read fault codes
XF	2013-2015	I4 Diesel 2.2L engine	CCM(Speed control module)	Erase fault codes
XF	2013-2015	I4 Diesel 2.2L engine	CCM(Speed control module)	Live Data
XF	2013-2015	I4 Diesel 2.2L engine	CHCM(Chassis control module)	ECU information
XF	2013-2015	I4 Diesel 2.2L engine	CHCM(Chassis control module)	Read fault codes
XF	2013-2015	I4 Diesel 2.2L engine	CHCM(Chassis control module)	Erase fault codes
XF	2013-2015	I4 Diesel 2.2L engine	CHCM(Chassis control module)	Live Data
XF	2013-2015	I4 Diesel 2.2L engine	GSM(Gear shift module)	ECU information
XF	2013-2015	I4 Diesel 2.2L engine	GSM(Gear shift module)	Read fault codes
XF	2013-2015	I4 Diesel 2.2L engine	GSM(Gear shift module)	Erase fault codes
XF	2013-2015	I4 Diesel 2.2L engine	GSM(Gear shift module)	Live Data
XF	2013-2015	I4 Diesel 2.2L engine	GWM(Gateway module)	ECU information
XF	2013-2015	I4 Diesel 2.2L engine	GWM(Gateway module)	Read fault codes
XF	2013-2015	I4 Diesel 2.2L engine	GWM(Gateway module)	Erase fault codes
XF	2013-2015	I4 Diesel 2.2L engine	GWM(Gateway module)	Live Data
XF	2013-2015	I4 Diesel 2.2L engine	HCM(Headlamp control module)	ECU information
XF	2013-2015	I4 Diesel 2.2L engine	HCM(Headlamp control module)	Read fault codes
XF	2013-2015	I4 Diesel 2.2L engine	HCM(Headlamp control module)	Erase fault codes
XF	2013-2015	I4 Diesel 2.2L engine	HCM(Headlamp control module)	Live Data
XF	2013-2015	I4 Diesel 2.2L engine	OCS(Restraints occupant classification system module)	ECU information
XF	2013-2015	I4 Diesel 2.2L engine	OCS(Restraints occupant classification system module)	Read fault codes
XF	2013-2015	I4 Diesel 2.2L engine	OCS(Restraints occupant classification system module)	Erase fault codes
XF	2013-2015	I4 Diesel 2.2L engine	OCS(Restraints occupant classification system module)	Live Data
XF	2013-2015	I4 Diesel 2.2L engine	PBM(Parking brake control module)	ECU information
XF	2013-2015	I4 Diesel 2.2L engine	PBM(Parking brake control module)	Read fault codes
XF	2013-2015	I4 Diesel 2.2L engine	PBM(Parking brake control module)	Erase fault codes
XF	2013-2015	I4 Diesel 2.2L engine	PBM(Parking brake control module)	Live Data
XF	2013-2015	I4 Diesel 2.2L engine	RDCM(Rear differential control module)	ECU information
XF	2013-2015	I4 Diesel 2.2L engine	RDCM(Rear differential control module)	Read fault codes
XF	2013-2015	I4 Diesel 2.2L engine	RDCM(Rear differential control module)	Erase fault codes
XF	2013-2015	I4 Diesel 2.2L engine	RDCM(Rear differential control module)	Live Data
XF	2013-2015	I4 Diesel 2.2L engine	SPMA(Safety belt pretensioner control module A - drivers side)	ECU information
XF	2013-2015	I4 Diesel 2.2L engine	SPMA(Safety belt pretensioner control module A - drivers side)	Read fault codes
XF	2013-2015	I4 Diesel 2.2L engine	SPMA(Safety belt pretensioner control module A - drivers side)	Erase fault codes
XF	2013-2015	I4 Diesel 2.2L engine	SPMA(Safety belt pretensioner control module A - drivers side)	Live Data
XF	2013-2015	I4 Diesel 2.2L engine	SPMB(Safety belt pretensioner control module B - passengers side)	ECU information
XF	2013-2015	I4 Diesel 2.2L engine	SPMB(Safety belt pretensioner control module B - passengers side)	Read fault codes
XF	2013-2015	I4 Diesel 2.2L engine	SPMB(Safety belt pretensioner control module B - passengers side)	Erase fault codes
XF	2013-2015	I4 Diesel 2.2L engine	SPMB(Safety belt pretensioner control module B - passengers side)	Live Data
XF	2013-2015	I4 Diesel 2.2L engine	SUMB(Adaptive damping control module)	ECU information
XF	2013-2015	I4 Diesel 2.2L engine	SUMB(Adaptive damping control module)	Read fault codes
XF	2013-2015	I4 Diesel 2.2L engine	SUMB(Adaptive damping control module)	Erase fault codes
XF	2013-2015	I4 Diesel 2.2L engine	SUMB(Adaptive damping control module)	Live Data
XF	2013-2015	I4 Diesel 2.2L engine	TCCM(Transfer case control module)	ECU information
XF	2013-2015	I4 Diesel 2.2L engine	TCCM(Transfer case control module)	Read fault codes
XF	2013-2015	I4 Diesel 2.2L engine	TCCM(Transfer case control module)	Erase fault codes
XF	2013-2015	I4 Diesel 2.2L engine	TCCM(Transfer case control module)	Live Data
XF	2013-2015	I4 Diesel 2.2L engine	VIM(Vehicle immobilizer control module)	ECU information
XF	2013-2015	I4 Diesel 2.2L engine	VIM(Vehicle immobilizer control module)	Read fault codes
XF	2013-2015	I4 Diesel 2.2L engine	VIM(Vehicle immobilizer control module)	Erase fault codes
XF	2013-2015	I4 Diesel 2.2L engine	VIM(Vehicle immobilizer control module)	Live Data
XF	2013-2015	I4 Diesel 2.2L engine	FSJB(Central junction box (body control module))	ECU information
XF	2013-2015	I4 Diesel 2.2L engine	FSJB(Central junction box (body control module))	Read fault codes
XF	2013-2015	I4 Diesel 2.2L engine	FSJB(Central junction box (body control module))	Erase fault codes

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XF	2013-2015	I4 Diesel 2.2L engine	FSJB(Central junction box (body control module))	Live Data
XF	2013-2015	I4 Diesel 2.2L engine	RSJB(Auxiliary junction box (body control module B))	ECU information
XF	2013-2015	I4 Diesel 2.2L engine	RSJB(Auxiliary junction box (body control module B))	Read fault codes
XF	2013-2015	I4 Diesel 2.2L engine	RSJB(Auxiliary junction box (body control module B))	Erase fault codes
XF	2013-2015	I4 Diesel 2.2L engine	RSJB(Auxiliary junction box (body control module B))	Live Data
XF	2013-2015	I4 Diesel 2.2L engine	BCM(Central junction box (body control module))	ECU information
XF	2013-2015	I4 Diesel 2.2L engine	BCM(Central junction box (body control module))	Read fault codes
XF	2013-2015	I4 Diesel 2.2L engine	BCM(Central junction box (body control module))	Erase fault codes
XF	2013-2015	I4 Diesel 2.2L engine	BCM(Central junction box (body control module))	Live Data
XF	2013-2015	I4 Diesel 2.2L engine	BCMB(Auxiliary junction box (body control module B))	ECU information
XF	2013-2015	I4 Diesel 2.2L engine	BCMB(Auxiliary junction box (body control module B))	Read fault codes
XF	2013-2015	I4 Diesel 2.2L engine	BCMB(Auxiliary junction box (body control module B))	Erase fault codes
XF	2013-2015	I4 Diesel 2.2L engine	BCMB(Auxiliary junction box (body control module B))	Live Data
XF	2013-2015	I4 Diesel 2.2L engine	DDM(Driver's door module)	ECU information
XF	2013-2015	I4 Diesel 2.2L engine	DDM(Driver's door module)	Read fault codes
XF	2013-2015	I4 Diesel 2.2L engine	DDM(Driver's door module)	Erase fault codes
XF	2013-2015	I4 Diesel 2.2L engine	DDM(Driver's door module)	Live Data
XF	2013-2015	I4 Diesel 2.2L engine	DSM(Driver's seat module)	ECU information
XF	2013-2015	I4 Diesel 2.2L engine	DSM(Driver's seat module)	Read fault codes
XF	2013-2015	I4 Diesel 2.2L engine	DSM(Driver's seat module)	Erase fault codes
XF	2013-2015	I4 Diesel 2.2L engine	DSM(Driver's seat module)	Live Data
XF	2013-2015	I4 Diesel 2.2L engine	FCDIM(Front control/display interface module (high level display front))	ECU information
XF	2013-2015	I4 Diesel 2.2L engine	FCDIM(Front control/display interface module (high level display front))	Read fault codes
XF	2013-2015	I4 Diesel 2.2L engine	FCDIM(Front control/display interface module (high level display front))	Erase fault codes
XF	2013-2015	I4 Diesel 2.2L engine	FCDIM(Front control/display interface module (high level display front))	Live Data
XF	2013-2015	I4 Diesel 2.2L engine	FCIMB(Front controls interface module B (front audio control panel))	ECU information
XF	2013-2015	I4 Diesel 2.2L engine	FCIMB(Front controls interface module B (front audio control panel))	Read fault codes
XF	2013-2015	I4 Diesel 2.2L engine	FCIMB(Front controls interface module B (front audio control panel))	Erase fault codes
XF	2013-2015	I4 Diesel 2.2L engine	FCIMB(Front controls interface module B (front audio control panel))	Live Data
XF	2013-2015	I4 Diesel 2.2L engine	HCMB(Headlamp control module B)	ECU information
XF	2013-2015	I4 Diesel 2.2L engine	HCMB(Headlamp control module B)	Read fault codes
XF	2013-2015	I4 Diesel 2.2L engine	HCMB(Headlamp control module B)	Erase fault codes
XF	2013-2015	I4 Diesel 2.2L engine	HCMB(Headlamp control module B)	Live Data
XF	2013-2015	I4 Diesel 2.2L engine	HVAC(Heating ventilation and air conditioning control module)	ECU information
XF	2013-2015	I4 Diesel 2.2L engine	HVAC(Heating ventilation and air conditioning control module)	Read fault codes
XF	2013-2015	I4 Diesel 2.2L engine	HVAC(Heating ventilation and air conditioning control module)	Erase fault codes
XF	2013-2015	I4 Diesel 2.2L engine	HVAC(Heating ventilation and air conditioning control module)	Live Data
XF	2013-2015	I4 Diesel 2.2L engine	PAM(Parking assist control module)	ECU information
XF	2013-2015	I4 Diesel 2.2L engine	PAM(Parking assist control module)	Read fault codes
XF	2013-2015	I4 Diesel 2.2L engine	PAM(Parking assist control module)	Erase fault codes
XF	2013-2015	I4 Diesel 2.2L engine	PAM(Parking assist control module)	Live Data
XF	2013-2015	I4 Diesel 2.2L engine	PDM(Passenger's door module)	ECU information
XF	2013-2015	I4 Diesel 2.2L engine	PDM(Passenger's door module)	Read fault codes
XF	2013-2015	I4 Diesel 2.2L engine	PDM(Passenger's door module)	Erase fault codes
XF	2013-2015	I4 Diesel 2.2L engine	PDM(Passenger's door module)	Live Data
XF	2013-2015	I4 Diesel 2.2L engine	PSM(Passenger's seat module)	ECU information
XF	2013-2015	I4 Diesel 2.2L engine	PSM(Passenger's seat module)	Read fault codes
XF	2013-2015	I4 Diesel 2.2L engine	PSM(Passenger's seat module)	Erase fault codes
XF	2013-2015	I4 Diesel 2.2L engine	PSM(Passenger's seat module)	Live Data
XF	2013-2015	I4 Diesel 2.2L engine	RFA(Keyless vehicle module)	ECU information
XF	2013-2015	I4 Diesel 2.2L engine	RFA(Keyless vehicle module)	Read fault codes
XF	2013-2015	I4 Diesel 2.2L engine	RFA(Keyless vehicle module)	Erase fault codes
XF	2013-2015	I4 Diesel 2.2L engine	RFA(Keyless vehicle module)	Live Data
XF	2013-2015	I4 Diesel 2.2L engine	RGTM(Rear gate / trunk module)	ECU information
XF	2013-2015	I4 Diesel 2.2L engine	RGTM(Rear gate / trunk module)	Read fault codes
XF	2013-2015	I4 Diesel 2.2L engine	RGTM(Rear gate / trunk module)	Erase fault codes
XF	2013-2015	I4 Diesel 2.2L engine	RGTM(Rear gate / trunk module)	Live Data
XF	2013-2015	I4 Diesel 2.2L engine	SCME(Driver's climate seat module)	ECU information
XF	2013-2015	I4 Diesel 2.2L engine	SCME(Driver's climate seat module)	Read fault codes
XF	2013-2015	I4 Diesel 2.2L engine	SCME(Driver's climate seat module)	Erase fault codes
XF	2013-2015	I4 Diesel 2.2L engine	SCME(Driver's climate seat module)	Live Data
XF	2013-2015	I4 Diesel 2.2L engine	SODL(Side object detection control module - Left)	ECU information
XF	2013-2015	I4 Diesel 2.2L engine	SODL(Side object detection control module - Left)	Read fault codes

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XF	2013-2015	I4 Diesel 2.2L engine	SODL(Side object detection control module - Left)	Erase fault codes
XF	2013-2015	I4 Diesel 2.2L engine	SODL(Side object detection control module - Left)	Live Data
XF	2013-2015	I4 Diesel 2.2L engine	SODR(Side object detection control module - Right)	ECU information
XF	2013-2015	I4 Diesel 2.2L engine	SODR(Side object detection control module - Right)	Read fault codes
XF	2013-2015	I4 Diesel 2.2L engine	SODR(Side object detection control module - Right)	Erase fault codes
XF	2013-2015	I4 Diesel 2.2L engine	SODR(Side object detection control module - Right)	Live Data
XF	2013-2015	I4 Diesel 2.2L engine	TPM(Tire pressure monitor module)	ECU information
XF	2013-2015	I4 Diesel 2.2L engine	TPM(Tire pressure monitor module)	Read fault codes
XF	2013-2015	I4 Diesel 2.2L engine	TPM(Tire pressure monitor module)	Erase fault codes
XF	2013-2015	I4 Diesel 2.2L engine	TPM(Tire pressure monitor module)	Live Data
XF	2013-2015	I4 Diesel 2.2L engine	AAM(Audio amplifier module)	ECU information
XF	2013-2015	I4 Diesel 2.2L engine	AAM(Audio amplifier module)	Read fault codes
XF	2013-2015	I4 Diesel 2.2L engine	AAM(Audio amplifier module)	Erase fault codes
XF	2013-2015	I4 Diesel 2.2L engine	AAM(Audio amplifier module)	Live Data
XF	2013-2015	I4 Diesel 2.2L engine	ACM(Audio front control module)	ECU information
XF	2013-2015	I4 Diesel 2.2L engine	ACM(Audio front control module)	Read fault codes
XF	2013-2015	I4 Diesel 2.2L engine	ACM(Audio front control module)	Erase fault codes
XF	2013-2015	I4 Diesel 2.2L engine	ACM(Audio front control module)	Live Data
XF	2013-2015	I4 Diesel 2.2L engine	DABM(Digital audio broadcast module)	ECU information
XF	2013-2015	I4 Diesel 2.2L engine	DABM(Digital audio broadcast module)	Read fault codes
XF	2013-2015	I4 Diesel 2.2L engine	DABM(Digital audio broadcast module)	Erase fault codes
XF	2013-2015	I4 Diesel 2.2L engine	DABM(Digital audio broadcast module)	Live Data
XF	2013-2015	I4 Diesel 2.2L engine	NCM(Navigation control module)	ECU information
XF	2013-2015	I4 Diesel 2.2L engine	NCM(Navigation control module)	Read fault codes
XF	2013-2015	I4 Diesel 2.2L engine	NCM(Navigation control module)	Erase fault codes
XF	2013-2015	I4 Diesel 2.2L engine	NCM(Navigation control module)	Live Data
XF	2013-2015	I4 Diesel 2.2L engine	SRM(Satellite audio unit module)	ECU information
XF	2013-2015	I4 Diesel 2.2L engine	SRM(Satellite audio unit module)	Read fault codes
XF	2013-2015	I4 Diesel 2.2L engine	SRM(Satellite audio unit module)	Erase fault codes
XF	2013-2015	I4 Diesel 2.2L engine	SRM(Satellite audio unit module)	Live Data
XF	2013-2015	I4 Diesel 2.2L engine	TVM(Television module)	ECU information
XF	2013-2015	I4 Diesel 2.2L engine	TVM(Television module)	Read fault codes
XF	2013-2015	I4 Diesel 2.2L engine	TVM(Television module)	Erase fault codes
XF	2013-2015	I4 Diesel 2.2L engine	TVM(Television module)	Live Data
XF	2013-2015	I4 Diesel 2.2L engine	Special Function	Manual oil reset
XF	2013-2015	I4 Diesel 2.2L engine	Special Function	Oil change reset
XF	2013-2015	I4 Diesel 2.2L engine	Special Function	Oil service counter reset
XF	2013-2015	I4 Diesel 2.2L engine	Special Function	Service interval reset
XF	2013-2015	I4 Diesel 2.2L engine	Special Function	Injector replacement
XF	2013-2015	I4 Diesel 2.2L engine	Special Function	Idle speed - Adjustment
XF	2013-2015	I4 Diesel 2.2L engine	Special Function	Display injector correction factors
XF	2013-2015	I4 Diesel 2.2L engine	Special Function	Throttle valve actuator replacement
XF	2013-2015	I4 Diesel 2.2L engine	Special Function	Parking brake release to service position
XF	2013-2015	I4 Diesel 2.2L engine	Special Function	Brake bleed
XF	2013-2015	I4 Diesel 2.2L engine	Special Function	Steering column calibration
XF	2013-2015	I4 Diesel 2.2L engine	Special Function	Yaw rate sensor calibration
XF	2013-2015	I4 Diesel 2.2L engine	Special Function	Tire pressure monitor receiver calibration
XF	2013-2015	I4 Diesel 2.2L engine	Special Function	Tire pressure sensor replacement
XF	2013-2015	I4 Diesel 2.2L engine	Special Function	Height calibration(MODE1)
XF	2013-2015	I4 Diesel 2.2L engine	Special Function	Height calibration(MODE2)
XF	2013-2015	I4 Diesel 2.2L engine	Special Function	Headlamp calibration suspension set-up
XF	2013-2015	I4 Diesel 2.2L engine	Special Function	Headlamp control module system calibration
XF	2013-2015	I4 Diesel 2.2L engine	Special Function	Battery replacement
XF	2013-2015	I4 Diesel 2.2L engine	Special Function	Odometer calibration
XF	2013-2015	I4 Diesel 2.2L engine	Special Function	Diesel particulate filter differential pressure sensor replacement
XF	2013-2015	I4 Diesel 2.2L engine	Special Function	Diesel particulate filter dynamic regeneration
XF	2013-2015	I4 Diesel 2.2L engine	Special Function	Diesel particulate filter replacement
XF	2013-2015	I4 Diesel 2.2L engine	Special Function	Seat cushion replacement
XF	2013-2015	I4 Diesel 2.2L engine	Special Function	Driver's seat calibration
XF	2013-2015	I4 Diesel 2.2L engine	Special Function	Passenger's seat calibration
XF	2013-2015	I4 Diesel 2.2L engine	Special Function	Drivers side window calibration
XF	2013-2015	I4 Diesel 2.2L engine	Special Function	Passenger side window calibration
XF	2013-2015	I4 Diesel 2.2L engine	Special Function	Tailgate/trunk calibration
XF	2013-2015	GTDI 2.0L engine	PCM(Powertrain control module)	ECU information
XF	2013-2015	GTDI 2.0L engine	PCM(Powertrain control module)	Read fault codes
XF	2013-2015	GTDI 2.0L engine	PCM(Powertrain control module)	Erase fault codes
XF	2013-2015	GTDI 2.0L engine	PCM(Powertrain control module)	Live Data
XF	2013-2015	GTDI 2.0L engine	TCM(Transmission control module)	ECU information
XF	2013-2015	GTDI 2.0L engine	TCM(Transmission control module)	Read fault codes
XF	2013-2015	GTDI 2.0L engine	TCM(Transmission control module)	Erase fault codes
XF	2013-2015	GTDI 2.0L engine	TCM(Transmission control module)	Live Data
XF	2013-2015	GTDI 2.0L engine	ABS(ABS control module)	ECU information
XF	2013-2015	GTDI 2.0L engine	ABS(ABS control module)	Read fault codes
XF	2013-2015	GTDI 2.0L engine	ABS(ABS control module)	Erase fault codes
XF	2013-2015	GTDI 2.0L engine	ABS(ABS control module)	Live Data
XF	2013-2015	GTDI 2.0L engine	RCM(Restraints control module)	ECU information
XF	2013-2015	GTDI 2.0L engine	RCM(Restraints control module)	Read fault codes
XF	2013-2015	GTDI 2.0L engine	RCM(Restraints control module)	Erase fault codes
XF	2013-2015	GTDI 2.0L engine	RCM(Restraints control module)	Live Data
XF	2013-2015	GTDI 2.0L engine	IPC(Instrument cluster control module)	ECU information
XF	2013-2015	GTDI 2.0L engine	IPC(Instrument cluster control module)	Read fault codes
XF	2013-2015	GTDI 2.0L engine	IPC(Instrument cluster control module)	Erase fault codes
XF	2013-2015	GTDI 2.0L engine	IPC(Instrument cluster control module)	Live Data
XF	2013-2015	GTDI 2.0L engine	CCM(Speed control module)	ECU information

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XF	2013-2015	GTDI 2.0L engine	CCM(Speed control module)	Read fault codes
XF	2013-2015	GTDI 2.0L engine	CCM(Speed control module)	Erase fault codes
XF	2013-2015	GTDI 2.0L engine	CCM(Speed control module)	Live Data
XF	2013-2015	GTDI 2.0L engine	CHCM(Chassis control module)	ECU information
XF	2013-2015	GTDI 2.0L engine	CHCM(Chassis control module)	Read fault codes
XF	2013-2015	GTDI 2.0L engine	CHCM(Chassis control module)	Erase fault codes
XF	2013-2015	GTDI 2.0L engine	CHCM(Chassis control module)	Live Data
XF	2013-2015	GTDI 2.0L engine	GSM(Gear shift module)	ECU information
XF	2013-2015	GTDI 2.0L engine	GSM(Gear shift module)	Read fault codes
XF	2013-2015	GTDI 2.0L engine	GSM(Gear shift module)	Erase fault codes
XF	2013-2015	GTDI 2.0L engine	GSM(Gear shift module)	Live Data
XF	2013-2015	GTDI 2.0L engine	GWM(Gateway module)	ECU information
XF	2013-2015	GTDI 2.0L engine	GWM(Gateway module)	Read fault codes
XF	2013-2015	GTDI 2.0L engine	GWM(Gateway module)	Erase fault codes
XF	2013-2015	GTDI 2.0L engine	GWM(Gateway module)	Live Data
XF	2013-2015	GTDI 2.0L engine	HCM(Headlamp control module)	ECU information
XF	2013-2015	GTDI 2.0L engine	HCM(Headlamp control module)	Read fault codes
XF	2013-2015	GTDI 2.0L engine	HCM(Headlamp control module)	Erase fault codes
XF	2013-2015	GTDI 2.0L engine	HCM(Headlamp control module)	Live Data
XF	2013-2015	GTDI 2.0L engine	OCS(Restraints occupant classification system module)	ECU information
XF	2013-2015	GTDI 2.0L engine	OCS(Restraints occupant classification system module)	Read fault codes
XF	2013-2015	GTDI 2.0L engine	OCS(Restraints occupant classification system module)	Erase fault codes
XF	2013-2015	GTDI 2.0L engine	OCS(Restraints occupant classification system module)	Live Data
XF	2013-2015	GTDI 2.0L engine	PBM(Parking brake control module)	ECU information
XF	2013-2015	GTDI 2.0L engine	PBM(Parking brake control module)	Read fault codes
XF	2013-2015	GTDI 2.0L engine	PBM(Parking brake control module)	Erase fault codes
XF	2013-2015	GTDI 2.0L engine	PBM(Parking brake control module)	Live Data
XF	2013-2015	GTDI 2.0L engine	RDCM(Rear differential control module)	ECU information
XF	2013-2015	GTDI 2.0L engine	RDCM(Rear differential control module)	Read fault codes
XF	2013-2015	GTDI 2.0L engine	RDCM(Rear differential control module)	Erase fault codes
XF	2013-2015	GTDI 2.0L engine	RDCM(Rear differential control module)	Live Data
XF	2013-2015	GTDI 2.0L engine	SPMA(Safety belt pretensioner control module A - drivers side)	ECU information
XF	2013-2015	GTDI 2.0L engine	SPMA(Safety belt pretensioner control module A - drivers side)	Read fault codes
XF	2013-2015	GTDI 2.0L engine	SPMA(Safety belt pretensioner control module A - drivers side)	Erase fault codes
XF	2013-2015	GTDI 2.0L engine	SPMA(Safety belt pretensioner control module A - drivers side)	Live Data
XF	2013-2015	GTDI 2.0L engine	SPMB(Safety belt pretensioner control module B - passengers side)	ECU information
XF	2013-2015	GTDI 2.0L engine	SPMB(Safety belt pretensioner control module B - passengers side)	Read fault codes
XF	2013-2015	GTDI 2.0L engine	SPMB(Safety belt pretensioner control module B - passengers side)	Erase fault codes
XF	2013-2015	GTDI 2.0L engine	SPMB(Safety belt pretensioner control module B - passengers side)	Live Data
XF	2013-2015	GTDI 2.0L engine	SIMB(Adaptive damping control module)	ECU information
XF	2013-2015	GTDI 2.0L engine	SIMB(Adaptive damping control module)	Read fault codes
XF	2013-2015	GTDI 2.0L engine	SIMB(Adaptive damping control module)	Erase fault codes
XF	2013-2015	GTDI 2.0L engine	SIMB(Adaptive damping control module)	Live Data
XF	2013-2015	GTDI 2.0L engine	TCCM(Transfer case control module)	ECU information
XF	2013-2015	GTDI 2.0L engine	TCCM(Transfer case control module)	Read fault codes
XF	2013-2015	GTDI 2.0L engine	TCCM(Transfer case control module)	Erase fault codes
XF	2013-2015	GTDI 2.0L engine	TCCM(Transfer case control module)	Live Data
XF	2013-2015	GTDI 2.0L engine	VIM(Vehicle immobilizer control module)	ECU information
XF	2013-2015	GTDI 2.0L engine	VIM(Vehicle immobilizer control module)	Read fault codes
XF	2013-2015	GTDI 2.0L engine	VIM(Vehicle immobilizer control module)	Erase fault codes
XF	2013-2015	GTDI 2.0L engine	VIM(Vehicle immobilizer control module)	Live Data
XF	2013-2015	GTDI 2.0L engine	FSJB(Central junction box (body control module))	ECU information
XF	2013-2015	GTDI 2.0L engine	FSJB(Central junction box (body control module))	Read fault codes
XF	2013-2015	GTDI 2.0L engine	FSJB(Central junction box (body control module))	Erase fault codes
XF	2013-2015	GTDI 2.0L engine	FSJB(Central junction box (body control module))	Live Data
XF	2013-2015	GTDI 2.0L engine	RSJB(Auxiliary junction box (body control module B))	ECU information
XF	2013-2015	GTDI 2.0L engine	RSJB(Auxiliary junction box (body control module B))	Read fault codes
XF	2013-2015	GTDI 2.0L engine	RSJB(Auxiliary junction box (body control module B))	Erase fault codes
XF	2013-2015	GTDI 2.0L engine	RSJB(Auxiliary junction box (body control module B))	Live Data
XF	2013-2015	GTDI 2.0L engine	BCM(Central junction box (body control module))	ECU information
XF	2013-2015	GTDI 2.0L engine	BCM(Central junction box (body control module))	Read fault codes
XF	2013-2015	GTDI 2.0L engine	BCM(Central junction box (body control module))	Erase fault codes
XF	2013-2015	GTDI 2.0L engine	BCM(Central junction box (body control module))	Live Data
XF	2013-2015	GTDI 2.0L engine	BCMB(Auxiliary junction box (body control module B))	ECU information
XF	2013-2015	GTDI 2.0L engine	BCMB(Auxiliary junction box (body control module B))	Read fault codes



## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XF	2013-2015	GTDI 2.0L engine	BCMB(Auxiliary junction box (body control module B))	Erase fault codes
XF	2013-2015	GTDI 2.0L engine	BCMB(Auxiliary junction box (body control module B))	Live Data
XF	2013-2015	GTDI 2.0L engine	DDM(Driver's door module)	ECU information
XF	2013-2015	GTDI 2.0L engine	DDM(Driver's door module)	Read fault codes
XF	2013-2015	GTDI 2.0L engine	DDM(Driver's door module)	Erase fault codes
XF	2013-2015	GTDI 2.0L engine	DDM(Driver's door module)	Live Data
XF	2013-2015	GTDI 2.0L engine	DSM(Driver's seat module)	ECU information
XF	2013-2015	GTDI 2.0L engine	DSM(Driver's seat module)	Read fault codes
XF	2013-2015	GTDI 2.0L engine	DSM(Driver's seat module)	Erase fault codes
XF	2013-2015	GTDI 2.0L engine	DSM(Driver's seat module)	Live Data
XF	2013-2015	GTDI 2.0L engine	FCDIM(Front control/display interface module (high level display front))	ECU information
XF	2013-2015	GTDI 2.0L engine	FCDIM(Front control/display interface module (high level display front))	Read fault codes
XF	2013-2015	GTDI 2.0L engine	FCDIM(Front control/display interface module (high level display front))	Erase fault codes
XF	2013-2015	GTDI 2.0L engine	FCDIM(Front control/display interface module (high level display front))	Live Data
XF	2013-2015	GTDI 2.0L engine	FCIMB(Front controls interface module B (front audio control panel))	ECU information
XF	2013-2015	GTDI 2.0L engine	FCIMB(Front controls interface module B (front audio control panel))	Read fault codes
XF	2013-2015	GTDI 2.0L engine	FCIMB(Front controls interface module B (front audio control panel))	Erase fault codes
XF	2013-2015	GTDI 2.0L engine	FCIMB(Front controls interface module B (front audio control panel))	Live Data
XF	2013-2015	GTDI 2.0L engine	HCMB(Headlamp control module B)	ECU information
XF	2013-2015	GTDI 2.0L engine	HCMB(Headlamp control module B)	Read fault codes
XF	2013-2015	GTDI 2.0L engine	HCMB(Headlamp control module B)	Erase fault codes
XF	2013-2015	GTDI 2.0L engine	HCMB(Headlamp control module B)	Live Data
XF	2013-2015	GTDI 2.0L engine	HVAC(Heating ventilation and air conditioning control module)	ECU information
XF	2013-2015	GTDI 2.0L engine	HVAC(Heating ventilation and air conditioning control module)	Read fault codes
XF	2013-2015	GTDI 2.0L engine	HVAC(Heating ventilation and air conditioning control module)	Erase fault codes
XF	2013-2015	GTDI 2.0L engine	HVAC(Heating ventilation and air conditioning control module)	Live Data
XF	2013-2015	GTDI 2.0L engine	PAM(Parking assist control module)	ECU information
XF	2013-2015	GTDI 2.0L engine	PAM(Parking assist control module)	Read fault codes
XF	2013-2015	GTDI 2.0L engine	PAM(Parking assist control module)	Erase fault codes
XF	2013-2015	GTDI 2.0L engine	PAM(Parking assist control module)	Live Data
XF	2013-2015	GTDI 2.0L engine	PDM(Passenger's door module)	ECU information
XF	2013-2015	GTDI 2.0L engine	PDM(Passenger's door module)	Read fault codes
XF	2013-2015	GTDI 2.0L engine	PDM(Passenger's door module)	Erase fault codes
XF	2013-2015	GTDI 2.0L engine	PDM(Passenger's door module)	Live Data
XF	2013-2015	GTDI 2.0L engine	PSM(Passenger's seat module)	ECU information
XF	2013-2015	GTDI 2.0L engine	PSM(Passenger's seat module)	Read fault codes
XF	2013-2015	GTDI 2.0L engine	PSM(Passenger's seat module)	Erase fault codes
XF	2013-2015	GTDI 2.0L engine	PSM(Passenger's seat module)	Live Data
XF	2013-2015	GTDI 2.0L engine	RFA(Keyless vehicle module)	ECU information
XF	2013-2015	GTDI 2.0L engine	RFA(Keyless vehicle module)	Read fault codes
XF	2013-2015	GTDI 2.0L engine	RFA(Keyless vehicle module)	Erase fault codes
XF	2013-2015	GTDI 2.0L engine	RFA(Keyless vehicle module)	Live Data
XF	2013-2015	GTDI 2.0L engine	RGTM(Rear gate / trunk module)	ECU information
XF	2013-2015	GTDI 2.0L engine	RGTM(Rear gate / trunk module)	Read fault codes
XF	2013-2015	GTDI 2.0L engine	RGTM(Rear gate / trunk module)	Erase fault codes
XF	2013-2015	GTDI 2.0L engine	RGTM(Rear gate / trunk module)	Live Data
XF	2013-2015	GTDI 2.0L engine	SCME(Driver's climate seat module)	ECU information
XF	2013-2015	GTDI 2.0L engine	SCME(Driver's climate seat module)	Read fault codes
XF	2013-2015	GTDI 2.0L engine	SCME(Driver's climate seat module)	Erase fault codes
XF	2013-2015	GTDI 2.0L engine	SCME(Driver's climate seat module)	Live Data
XF	2013-2015	GTDI 2.0L engine	SODL(Side object detection control module - Left)	ECU information
XF	2013-2015	GTDI 2.0L engine	SODL(Side object detection control module - Left)	Read fault codes
XF	2013-2015	GTDI 2.0L engine	SODL(Side object detection control module - Left)	Erase fault codes
XF	2013-2015	GTDI 2.0L engine	SODL(Side object detection control module - Left)	Live Data
XF	2013-2015	GTDI 2.0L engine	SODR(Side object detection control module - Right)	ECU information
XF	2013-2015	GTDI 2.0L engine	SODR(Side object detection control module - Right)	Read fault codes
XF	2013-2015	GTDI 2.0L engine	SODR(Side object detection control module - Right)	Erase fault codes
XF	2013-2015	GTDI 2.0L engine	SODR(Side object detection control module - Right)	Live Data
XF	2013-2015	GTDI 2.0L engine	TPM(Tire pressure monitor module)	ECU information
XF	2013-2015	GTDI 2.0L engine	TPM(Tire pressure monitor module)	Read fault codes
XF	2013-2015	GTDI 2.0L engine	TPM(Tire pressure monitor module)	Erase fault codes
XF	2013-2015	GTDI 2.0L engine	TPM(Tire pressure monitor module)	Live Data
XF	2013-2015	GTDI 2.0L engine	AAM(Audio amplifier module)	ECU information
XF	2013-2015	GTDI 2.0L engine	AAM(Audio amplifier module)	Read fault codes
XF	2013-2015	GTDI 2.0L engine	AAM(Audio amplifier module)	Erase fault codes
XF	2013-2015	GTDI 2.0L engine	AAM(Audio amplifier module)	Live Data
XF	2013-2015	GTDI 2.0L engine	ACM(Audio front control module)	ECU information
XF	2013-2015	GTDI 2.0L engine	ACM(Audio front control module)	Read fault codes
XF	2013-2015	GTDI 2.0L engine	ACM(Audio front control module)	Erase fault codes
XF	2013-2015	GTDI 2.0L engine	ACM(Audio front control module)	Live Data

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XF	2013-2015	GTDI 2.0L engine	DABM(Digital audio broadcast module)	ECU information
XF	2013-2015	GTDI 2.0L engine	DABM(Digital audio broadcast module)	Read fault codes
XF	2013-2015	GTDI 2.0L engine	DABM(Digital audio broadcast module)	Erase fault codes
XF	2013-2015	GTDI 2.0L engine	DABM(Digital audio broadcast module)	Live Data
XF	2013-2015	GTDI 2.0L engine	NCM(Navigation control module)	ECU information
XF	2013-2015	GTDI 2.0L engine	NCM(Navigation control module)	Read fault codes
XF	2013-2015	GTDI 2.0L engine	NCM(Navigation control module)	Erase fault codes
XF	2013-2015	GTDI 2.0L engine	NCM(Navigation control module)	Live Data
XF	2013-2015	GTDI 2.0L engine	SRM(Satellite audio unit module)	ECU information
XF	2013-2015	GTDI 2.0L engine	SRM(Satellite audio unit module)	Read fault codes
XF	2013-2015	GTDI 2.0L engine	SRM(Satellite audio unit module)	Erase fault codes
XF	2013-2015	GTDI 2.0L engine	SRM(Satellite audio unit module)	Live Data
XF	2013-2015	GTDI 2.0L engine	TVM(Television module)	ECU information
XF	2013-2015	GTDI 2.0L engine	TVM(Television module)	Read fault codes
XF	2013-2015	GTDI 2.0L engine	TVM(Television module)	Erase fault codes
XF	2013-2015	GTDI 2.0L engine	TVM(Television module)	Live Data
XF	2013-2015	GTDI 2.0L engine	Special Function	Manual oil reset
XF	2013-2015	GTDI 2.0L engine	Special Function	Oil change reset
XF	2013-2015	GTDI 2.0L engine	Special Function	Service interval reset
XF	2013-2015	GTDI 2.0L engine	Special Function	Injector valve test
XF	2013-2015	GTDI 2.0L engine	Special Function	Throttle valve actuator replacement
XF	2013-2015	GTDI 2.0L engine	Special Function	Parking brake release to service position
XF	2013-2015	GTDI 2.0L engine	Special Function	Brake bleed
XF	2013-2015	GTDI 2.0L engine	Special Function	Steering column calibration
XF	2013-2015	GTDI 2.0L engine	Special Function	Yaw rate sensor calibration
XF	2013-2015	GTDI 2.0L engine	Special Function	Tire pressure monitor receiver calibration
XF	2013-2015	GTDI 2.0L engine	Special Function	Tire pressure sensor replacement
XF	2013-2015	GTDI 2.0L engine	Special Function	Height calibration(MODE1)
XF	2013-2015	GTDI 2.0L engine	Special Function	Height calibration(MODE2)
XF	2013-2015	GTDI 2.0L engine	Special Function	Headlamp calibration suspension set-up
XF	2013-2015	GTDI 2.0L engine	Special Function	Headlamp control module system calibration
XF	2013-2015	GTDI 2.0L engine	Special Function	Battery replacement
XF	2013-2015	GTDI 2.0L engine	Special Function	Odometer calibration
XF	2013-2015	GTDI 2.0L engine	Special Function	Seat cushion replacement
XF	2013-2015	GTDI 2.0L engine	Special Function	Driver's seat calibration
XF	2013-2015	GTDI 2.0L engine	Special Function	Passenger's seat calibration
XF	2013-2015	GTDI 2.0L engine	Special Function	Drivers side window calibration
XF	2013-2015	GTDI 2.0L engine	Special Function	Passenger side window calibration
XF	2013-2015	GTDI 2.0L engine	Special Function	Tailgate/trunk calibration
XF	2012	V6 Diesel	PCM(Powertrain control module)	ECU information
XF	2012	V6 Diesel	PCM(Powertrain control module)	Read fault codes
XF	2012	V6 Diesel	PCM(Powertrain control module)	Erase fault codes
XF	2012	V6 Diesel	PCM(Powertrain control module)	Live Data
XF	2012	V6 Diesel	TCM(Transmission control module)	ECU information
XF	2012	V6 Diesel	TCM(Transmission control module)	Read fault codes
XF	2012	V6 Diesel	TCM(Transmission control module)	Erase fault codes
XF	2012	V6 Diesel	TCM(Transmission control module)	Live Data
XF	2012	V6 Diesel	ABS(ABS control module)	ECU information
XF	2012	V6 Diesel	ABS(ABS control module)	Read fault codes
XF	2012	V6 Diesel	ABS(ABS control module)	Erase fault codes
XF	2012	V6 Diesel	ABS(ABS control module)	Live Data
XF	2012	V6 Diesel	RCM(Restraints control module)	ECU information
XF	2012	V6 Diesel	RCM(Restraints control module)	Read fault codes
XF	2012	V6 Diesel	RCM(Restraints control module)	Erase fault codes
XF	2012	V6 Diesel	RCM(Restraints control module)	Live Data
XF	2012	V6 Diesel	IPC(Instrument cluster control module)	ECU information
XF	2012	V6 Diesel	IPC(Instrument cluster control module)	Read fault codes
XF	2012	V6 Diesel	IPC(Instrument cluster control module)	Erase fault codes
XF	2012	V6 Diesel	IPC(Instrument cluster control module)	Live Data
XF	2012	V6 Diesel	CCM(Speed control module)	ECU information
XF	2012	V6 Diesel	CCM(Speed control module)	Read fault codes
XF	2012	V6 Diesel	CCM(Speed control module)	Erase fault codes
XF	2012	V6 Diesel	CCM(Speed control module)	Live Data
XF	2012	V6 Diesel	GSM(Gear shift module)	ECU information
XF	2012	V6 Diesel	GSM(Gear shift module)	Read fault codes
XF	2012	V6 Diesel	GSM(Gear shift module)	Erase fault codes
XF	2012	V6 Diesel	GSM(Gear shift module)	Live Data
XF	2012	V6 Diesel	GWM(Gateway module)	ECU information
XF	2012	V6 Diesel	GWM(Gateway module)	Read fault codes
XF	2012	V6 Diesel	GWM(Gateway module)	Erase fault codes
XF	2012	V6 Diesel	GWM(Gateway module)	Live Data
XF	2012	V6 Diesel	HCM(Headlamp control module)	ECU information
XF	2012	V6 Diesel	HCM(Headlamp control module)	Read fault codes
XF	2012	V6 Diesel	HCM(Headlamp control module)	Erase fault codes
XF	2012	V6 Diesel	HCM(Headlamp control module)	Live Data
XF	2012	V6 Diesel	OCS(Restraints occupant classification system module)	ECU information
XF	2012	V6 Diesel	OCS(Restraints occupant classification system module)	Read fault codes
XF	2012	V6 Diesel	OCS(Restraints occupant classification system module)	Erase fault codes
XF	2012	V6 Diesel	OCS(Restraints occupant classification system module)	Live Data
XF	2012	V6 Diesel	PBM(Parking brake control module)	ECU information
XF	2012	V6 Diesel	PBM(Parking brake control module)	Read fault codes
XF	2012	V6 Diesel	PBM(Parking brake control module)	Erase fault codes
XF	2012	V6 Diesel	PBM(Parking brake control module)	Live Data
XF	2012	V6 Diesel	RDCM(Rear differential control module)	ECU information
XF	2012	V6 Diesel	RDCM(Rear differential control module)	Read fault codes
XF	2012	V6 Diesel	RDCM(Rear differential control module)	Erase fault codes
XF	2012	V6 Diesel	RDCM(Rear differential control module)	Live Data

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XF	2012	V6 Diesel	SPMA(Safety belt pretensioner control module A - drivers side)	ECU information
XF	2012	V6 Diesel	SPMA(Safety belt pretensioner control module A - drivers side)	Read fault codes
XF	2012	V6 Diesel	SPMA(Safety belt pretensioner control module A - drivers side)	Erase fault codes
XF	2012	V6 Diesel	SPMA(Safety belt pretensioner control module A - drivers side)	Live Data
XF	2012	V6 Diesel	SPMB(Safety belt pretensioner control module B - passengers side)	ECU information
XF	2012	V6 Diesel	SPMB(Safety belt pretensioner control module B - passengers side)	Read fault codes
XF	2012	V6 Diesel	SPMB(Safety belt pretensioner control module B - passengers side)	Erase fault codes
XF	2012	V6 Diesel	SPMB(Safety belt pretensioner control module B - passengers side)	Live Data
XF	2012	V6 Diesel	SUMB(Adaptive damping control module)	ECU information
XF	2012	V6 Diesel	SUMB(Adaptive damping control module)	Read fault codes
XF	2012	V6 Diesel	SUMB(Adaptive damping control module)	Erase fault codes
XF	2012	V6 Diesel	SUMB(Adaptive damping control module)	Live Data
XF	2012	V6 Diesel	VIM(Vehicle immobilizer control module)	ECU information
XF	2012	V6 Diesel	VIM(Vehicle immobilizer control module)	Read fault codes
XF	2012	V6 Diesel	VIM(Vehicle immobilizer control module)	Erase fault codes
XF	2012	V6 Diesel	VIM(Vehicle immobilizer control module)	Live Data
XF	2012	V6 Diesel	FSJB(Central junction box (body control module))	ECU information
XF	2012	V6 Diesel	FSJB(Central junction box (body control module))	Read fault codes
XF	2012	V6 Diesel	FSJB(Central junction box (body control module))	Erase fault codes
XF	2012	V6 Diesel	FSJB(Central junction box (body control module))	Live Data
XF	2012	V6 Diesel	RSJB(Auxiliary junction box (body control module B))	ECU information
XF	2012	V6 Diesel	RSJB(Auxiliary junction box (body control module B))	Read fault codes
XF	2012	V6 Diesel	RSJB(Auxiliary junction box (body control module B))	Erase fault codes
XF	2012	V6 Diesel	RSJB(Auxiliary junction box (body control module B))	Live Data
XF	2012	V6 Diesel	DDM(Driver's door module)	ECU information
XF	2012	V6 Diesel	DDM(Driver's door module)	Read fault codes
XF	2012	V6 Diesel	DDM(Driver's door module)	Erase fault codes
XF	2012	V6 Diesel	DDM(Driver's door module)	Live Data
XF	2012	V6 Diesel	DSM(Driver's seat module)	ECU information
XF	2012	V6 Diesel	DSM(Driver's seat module)	Read fault codes
XF	2012	V6 Diesel	DSM(Driver's seat module)	Erase fault codes
XF	2012	V6 Diesel	DSM(Driver's seat module)	Live Data
XF	2012	V6 Diesel	FCDIM(Front control/display interface module (high level display front))	ECU information
XF	2012	V6 Diesel	FCDIM(Front control/display interface module (high level display front))	Read fault codes
XF	2012	V6 Diesel	FCDIM(Front control/display interface module (high level display front))	Erase fault codes
XF	2012	V6 Diesel	FCDIM(Front control/display interface module (high level display front))	Live Data
XF	2012	V6 Diesel	FCIMB(Front controls interface module 'B' (front audio control panel))	ECU information
XF	2012	V6 Diesel	FCIMB(Front controls interface module 'B' (front audio control panel))	Read fault codes
XF	2012	V6 Diesel	FCIMB(Front controls interface module 'B' (front audio control panel))	Erase fault codes
XF	2012	V6 Diesel	FCIMB(Front controls interface module 'B' (front audio control panel))	Live Data
XF	2012	V6 Diesel	HCMB(Headlamp control module 'B')	ECU information
XF	2012	V6 Diesel	HCMB(Headlamp control module 'B')	Read fault codes
XF	2012	V6 Diesel	HCMB(Headlamp control module 'B')	Erase fault codes
XF	2012	V6 Diesel	HCMB(Headlamp control module 'B')	Live Data
XF	2012	V6 Diesel	HVAC(Heating ventilation and air conditioning control module)	ECU information
XF	2012	V6 Diesel	HVAC(Heating ventilation and air conditioning control module)	Read fault codes
XF	2012	V6 Diesel	HVAC(Heating ventilation and air conditioning control module)	Erase fault codes
XF	2012	V6 Diesel	HVAC(Heating ventilation and air conditioning control module)	Live Data
XF	2012	V6 Diesel	PAM(Parking assist control module)	ECU information
XF	2012	V6 Diesel	PAM(Parking assist control module)	Read fault codes
XF	2012	V6 Diesel	PAM(Parking assist control module)	Erase fault codes
XF	2012	V6 Diesel	PAM(Parking assist control module)	Live Data
XF	2012	V6 Diesel	PDM(Passenger's door module)	ECU information
XF	2012	V6 Diesel	PDM(Passenger's door module)	Read fault codes
XF	2012	V6 Diesel	PDM(Passenger's door module)	Erase fault codes
XF	2012	V6 Diesel	PDM(Passenger's door module)	Live Data
XF	2012	V6 Diesel	PSM(Passenger's seat module)	ECU information
XF	2012	V6 Diesel	PSM(Passenger's seat module)	Read fault codes
XF	2012	V6 Diesel	PSM(Passenger's seat module)	Erase fault codes
XF	2012	V6 Diesel	PSM(Passenger's seat module)	Live Data
XF	2012	V6 Diesel	RFA(Keyless vehicle module)	ECU information
XF	2012	V6 Diesel	RFA(Keyless vehicle module)	Read fault codes
XF	2012	V6 Diesel	RFA(Keyless vehicle module)	Erase fault codes

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XF	2012	V6 Diesel	RFA(Keyless vehicle module)	Live Data
XF	2012	V6 Diesel	SCME(Driver's climate seat module)	ECU information
XF	2012	V6 Diesel	SCME(Driver's climate seat module)	Read fault codes
XF	2012	V6 Diesel	SCME(Driver's climate seat module)	Erase fault codes
XF	2012	V6 Diesel	SCME(Driver's climate seat module)	Live Data
XF	2012	V6 Diesel	SODL(Side object detection control module - Left)	ECU information
XF	2012	V6 Diesel	SODL(Side object detection control module - Left)	Read fault codes
XF	2012	V6 Diesel	SODL(Side object detection control module - Left)	Erase fault codes
XF	2012	V6 Diesel	SODL(Side object detection control module - Left)	Live Data
XF	2012	V6 Diesel	SODR(Side object detection control module - Right)	ECU information
XF	2012	V6 Diesel	SODR(Side object detection control module - Right)	Read fault codes
XF	2012	V6 Diesel	SODR(Side object detection control module - Right)	Erase fault codes
XF	2012	V6 Diesel	SODR(Side object detection control module - Right)	Live Data
XF	2012	V6 Diesel	TPM(Tire pressure monitor module)	ECU information
XF	2012	V6 Diesel	TPM(Tire pressure monitor module)	Read fault codes
XF	2012	V6 Diesel	TPM(Tire pressure monitor module)	Erase fault codes
XF	2012	V6 Diesel	TPM(Tire pressure monitor module)	Live Data
XF	2012	V6 Diesel	AAM(Audio amplifier module)	ECU information
XF	2012	V6 Diesel	AAM(Audio amplifier module)	Read fault codes
XF	2012	V6 Diesel	AAM(Audio amplifier module)	Erase fault codes
XF	2012	V6 Diesel	AAM(Audio amplifier module)	Live Data
XF	2012	V6 Diesel	ACM(Audio front control module)	ECU information
XF	2012	V6 Diesel	ACM(Audio front control module)	Read fault codes
XF	2012	V6 Diesel	ACM(Audio front control module)	Erase fault codes
XF	2012	V6 Diesel	ACM(Audio front control module)	Live Data
XF	2012	V6 Diesel	DABM(Digital audio broadcast module)	ECU information
XF	2012	V6 Diesel	DABM(Digital audio broadcast module)	Read fault codes
XF	2012	V6 Diesel	DABM(Digital audio broadcast module)	Erase fault codes
XF	2012	V6 Diesel	DABM(Digital audio broadcast module)	Live Data
XF	2012	V6 Diesel	NCM(Navigation control module)	ECU information
XF	2012	V6 Diesel	NCM(Navigation control module)	Read fault codes
XF	2012	V6 Diesel	NCM(Navigation control module)	Erase fault codes
XF	2012	V6 Diesel	NCM(Navigation control module)	Live Data
XF	2012	V6 Diesel	SRM(Satellite audio unit module)	ECU information
XF	2012	V6 Diesel	SRM(Satellite audio unit module)	Read fault codes
XF	2012	V6 Diesel	SRM(Satellite audio unit module)	Erase fault codes
XF	2012	V6 Diesel	SRM(Satellite audio unit module)	Live Data
XF	2012	V6 Diesel	TVM(Television module)	ECU information
XF	2012	V6 Diesel	TVM(Television module)	Read fault codes
XF	2012	V6 Diesel	TVM(Television module)	Erase fault codes
XF	2012	V6 Diesel	TVM(Television module)	Live Data
XF	2012	V6 Diesel	Special Function	Manual oil reset
XF	2012	V6 Diesel	Special Function	Oil service counter reset
XF	2012	V6 Diesel	Special Function	Rest of world - Service interval options
XF	2012	V6 Diesel	Special Function	Injector replacement
XF	2012	V6 Diesel	Special Function	Throttle valve actuator replacement
XF	2012	V6 Diesel	Special Function	Parking brake release to service position
XF	2012	V6 Diesel	Special Function	Brake bleed
XF	2012	V6 Diesel	Special Function	Steering column calibration
XF	2012	V6 Diesel	Special Function	Tire pressure monitor receiver calibration
XF	2012	V6 Diesel	Special Function	Tire pressure sensor replacement
XF	2012	V6 Diesel	Special Function	Change tire size
XF	2012	V6 Diesel	Special Function	Diesel particulate filter dynamic regeneration
XF	2012	V6 Diesel	Special Function	Diesel particulate filter replacement
XF	2012	V6 Diesel	Special Function	Height calibration
XF	2012	V6 Diesel	Special Function	Headlamp control module system calibration
XF	2012	V6 Diesel	Special Function	Battery replacement
XF	2012	V6 Diesel	Special Function	Odometer calibration
XF	2012	V6 Diesel	Special Function	Seat cushion replacement
XF	2012	V6 Diesel	Special Function	Driver's seat calibration
XF	2012	V6 Diesel	Special Function	Passenger's seat calibration
XF	2012	V6 Diesel	Special Function	Drivers side window calibration
XF	2012	V6 Diesel	Special Function	Passenger side window calibration
XF	2012	Normally Aspirated V6	PCM(Powertrain control module)	ECU information
XF	2012	Normally Aspirated V6	PCM(Powertrain control module)	Read fault codes
XF	2012	Normally Aspirated V6	PCM(Powertrain control module)	Erase fault codes
XF	2012	Normally Aspirated V6	PCM(Powertrain control module)	Live Data
XF	2012	Normally Aspirated V6	TCM(Transmission control module)	ECU information
XF	2012	Normally Aspirated V6	TCM(Transmission control module)	Read fault codes
XF	2012	Normally Aspirated V6	TCM(Transmission control module)	Erase fault codes
XF	2012	Normally Aspirated V6	TCM(Transmission control module)	Live Data
XF	2012	Normally Aspirated V6	ABS(ABS control module)	ECU information
XF	2012	Normally Aspirated V6	ABS(ABS control module)	Read fault codes
XF	2012	Normally Aspirated V6	ABS(ABS control module)	Erase fault codes
XF	2012	Normally Aspirated V6	ABS(ABS control module)	Live Data
XF	2012	Normally Aspirated V6	RCM(Restraints control module)	ECU information
XF	2012	Normally Aspirated V6	RCM(Restraints control module)	Read fault codes
XF	2012	Normally Aspirated V6	RCM(Restraints control module)	Erase fault codes
XF	2012	Normally Aspirated V6	RCM(Restraints control module)	Live Data
XF	2012	Normally Aspirated V6	IPC(Instrument cluster control module)	ECU information
XF	2012	Normally Aspirated V6	IPC(Instrument cluster control module)	Read fault codes
XF	2012	Normally Aspirated V6	IPC(Instrument cluster control module)	Erase fault codes
XF	2012	Normally Aspirated V6	IPC(Instrument cluster control module)	Live Data

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XF	2012	Normally Aspirated V6	CCM(Speed control module)	ECU information
XF	2012	Normally Aspirated V6	CCM(Speed control module)	Read fault codes
XF	2012	Normally Aspirated V6	CCM(Speed control module)	Erase fault codes
XF	2012	Normally Aspirated V6	CCM(Speed control module)	Live Data
XF	2012	Normally Aspirated V6	GSM(Gear shift module)	ECU information
XF	2012	Normally Aspirated V6	GSM(Gear shift module)	Read fault codes
XF	2012	Normally Aspirated V6	GSM(Gear shift module)	Erase fault codes
XF	2012	Normally Aspirated V6	GSM(Gear shift module)	Live Data
XF	2012	Normally Aspirated V6	GWM(Gateway module)	ECU information
XF	2012	Normally Aspirated V6	GWM(Gateway module)	Read fault codes
XF	2012	Normally Aspirated V6	GWM(Gateway module)	Erase fault codes
XF	2012	Normally Aspirated V6	GWM(Gateway module)	Live Data
XF	2012	Normally Aspirated V6	HCM(Headlamp control module)	ECU information
XF	2012	Normally Aspirated V6	HCM(Headlamp control module)	Read fault codes
XF	2012	Normally Aspirated V6	HCM(Headlamp control module)	Erase fault codes
XF	2012	Normally Aspirated V6	HCM(Headlamp control module)	Live Data
XF	2012	Normally Aspirated V6	OCS(Restraints occupant classification system module)	ECU information
XF	2012	Normally Aspirated V6	OCS(Restraints occupant classification system module)	Read fault codes
XF	2012	Normally Aspirated V6	OCS(Restraints occupant classification system module)	Erase fault codes
XF	2012	Normally Aspirated V6	OCS(Restraints occupant classification system module)	Live Data
XF	2012	Normally Aspirated V6	PBM(Parking brake control module)	ECU information
XF	2012	Normally Aspirated V6	PBM(Parking brake control module)	Read fault codes
XF	2012	Normally Aspirated V6	PBM(Parking brake control module)	Erase fault codes
XF	2012	Normally Aspirated V6	PBM(Parking brake control module)	Live Data
XF	2012	Normally Aspirated V6	RDCM(Rear differential control module)	ECU information
XF	2012	Normally Aspirated V6	RDCM(Rear differential control module)	Read fault codes
XF	2012	Normally Aspirated V6	RDCM(Rear differential control module)	Erase fault codes
XF	2012	Normally Aspirated V6	RDCM(Rear differential control module)	Live Data
XF	2012	Normally Aspirated V6	SPMA(Safety belt pretensioner control module A - drivers side)	ECU information
XF	2012	Normally Aspirated V6	SPMA(Safety belt pretensioner control module A - drivers side)	Read fault codes
XF	2012	Normally Aspirated V6	SPMA(Safety belt pretensioner control module A - drivers side)	Erase fault codes
XF	2012	Normally Aspirated V6	SPMA(Safety belt pretensioner control module A - drivers side)	Live Data
XF	2012	Normally Aspirated V6	SPMB(Safety belt pretensioner control module B - passengers side)	ECU information
XF	2012	Normally Aspirated V6	SPMB(Safety belt pretensioner control module B - passengers side)	Read fault codes
XF	2012	Normally Aspirated V6	SPMB(Safety belt pretensioner control module B - passengers side)	Erase fault codes
XF	2012	Normally Aspirated V6	SPMB(Safety belt pretensioner control module B - passengers side)	Live Data
XF	2012	Normally Aspirated V6	SUMB(Adaptive damping control module)	ECU information
XF	2012	Normally Aspirated V6	SUMB(Adaptive damping control module)	Read fault codes
XF	2012	Normally Aspirated V6	SUMB(Adaptive damping control module)	Erase fault codes
XF	2012	Normally Aspirated V6	SUMB(Adaptive damping control module)	Live Data
XF	2012	Normally Aspirated V6	VIM(Vehicle immobilizer control module)	ECU information
XF	2012	Normally Aspirated V6	VIM(Vehicle immobilizer control module)	Read fault codes
XF	2012	Normally Aspirated V6	VIM(Vehicle immobilizer control module)	Erase fault codes
XF	2012	Normally Aspirated V6	VIM(Vehicle immobilizer control module)	Live Data
XF	2012	Normally Aspirated V6	FSJB(Central junction box (body control module))	ECU information
XF	2012	Normally Aspirated V6	FSJB(Central junction box (body control module))	Read fault codes
XF	2012	Normally Aspirated V6	FSJB(Central junction box (body control module))	Erase fault codes
XF	2012	Normally Aspirated V6	FSJB(Central junction box (body control module))	Live Data
XF	2012	Normally Aspirated V6	RSJB(Auxiliary junction box (body control module B))	ECU information
XF	2012	Normally Aspirated V6	RSJB(Auxiliary junction box (body control module B))	Read fault codes
XF	2012	Normally Aspirated V6	RSJB(Auxiliary junction box (body control module B))	Erase fault codes
XF	2012	Normally Aspirated V6	RSJB(Auxiliary junction box (body control module B))	Live Data
XF	2012	Normally Aspirated V6	DDM(Driver's door module)	ECU information
XF	2012	Normally Aspirated V6	DDM(Driver's door module)	Read fault codes
XF	2012	Normally Aspirated V6	DDM(Driver's door module)	Erase fault codes
XF	2012	Normally Aspirated V6	DDM(Driver's door module)	Live Data
XF	2012	Normally Aspirated V6	DSM(Driver's seat module)	ECU information
XF	2012	Normally Aspirated V6	DSM(Driver's seat module)	Read fault codes
XF	2012	Normally Aspirated V6	DSM(Driver's seat module)	Erase fault codes
XF	2012	Normally Aspirated V6	DSM(Driver's seat module)	Live Data
XF	2012	Normally Aspirated V6	FCDIM(Front control/display interface module (high level display front))	ECU information
XF	2012	Normally Aspirated V6	FCDIM(Front control/display interface module (high level display front))	Read fault codes
XF	2012	Normally Aspirated V6	FCDIM(Front control/display interface module (high level display front))	Erase fault codes
XF	2012	Normally Aspirated V6	FCDIM(Front control/display interface module (high level display front))	Live Data
XF	2012	Normally Aspirated V6	FCIMB(Front controls interface module 'B' (front audio control panel))	ECU information

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XF	2012	Normally Aspirated V6	FCIMB(Front controls interface module 'B' (front audio control panel))	Read fault codes
XF	2012	Normally Aspirated V6	FCIMB(Front controls interface module 'B' (front audio control panel))	Erase fault codes
XF	2012	Normally Aspirated V6	FCIMB(Front controls interface module 'B' (front audio control panel))	Live Data
XF	2012	Normally Aspirated V6	HCMB(Headlamp control module 'B')	ECU information
XF	2012	Normally Aspirated V6	HCMB(Headlamp control module 'B')	Read fault codes
XF	2012	Normally Aspirated V6	HCMB(Headlamp control module 'B')	Erase fault codes
XF	2012	Normally Aspirated V6	HCMB(Headlamp control module 'B')	Live Data
XF	2012	Normally Aspirated V6	HVAC(Heating ventilation and air conditioning control module)	ECU information
XF	2012	Normally Aspirated V6	HVAC(Heating ventilation and air conditioning control module)	Read fault codes
XF	2012	Normally Aspirated V6	HVAC(Heating ventilation and air conditioning control module)	Erase fault codes
XF	2012	Normally Aspirated V6	HVAC(Heating ventilation and air conditioning control module)	Live Data
XF	2012	Normally Aspirated V6	PAM(Parking assist control module)	ECU information
XF	2012	Normally Aspirated V6	PAM(Parking assist control module)	Read fault codes
XF	2012	Normally Aspirated V6	PAM(Parking assist control module)	Erase fault codes
XF	2012	Normally Aspirated V6	PAM(Parking assist control module)	Live Data
XF	2012	Normally Aspirated V6	PDM(Passenger's door module)	ECU information
XF	2012	Normally Aspirated V6	PDM(Passenger's door module)	Read fault codes
XF	2012	Normally Aspirated V6	PDM(Passenger's door module)	Erase fault codes
XF	2012	Normally Aspirated V6	PDM(Passenger's door module)	Live Data
XF	2012	Normally Aspirated V6	PSM(Passenger's seat module)	ECU information
XF	2012	Normally Aspirated V6	PSM(Passenger's seat module)	Read fault codes
XF	2012	Normally Aspirated V6	PSM(Passenger's seat module)	Erase fault codes
XF	2012	Normally Aspirated V6	PSM(Passenger's seat module)	Live Data
XF	2012	Normally Aspirated V6	RFA(Keyless vehicle module)	ECU information
XF	2012	Normally Aspirated V6	RFA(Keyless vehicle module)	Read fault codes
XF	2012	Normally Aspirated V6	RFA(Keyless vehicle module)	Erase fault codes
XF	2012	Normally Aspirated V6	RFA(Keyless vehicle module)	Live Data
XF	2012	Normally Aspirated V6	SCME(Driver's climate seat module)	ECU information
XF	2012	Normally Aspirated V6	SCME(Driver's climate seat module)	Read fault codes
XF	2012	Normally Aspirated V6	SCME(Driver's climate seat module)	Erase fault codes
XF	2012	Normally Aspirated V6	SCME(Driver's climate seat module)	Live Data
XF	2012	Normally Aspirated V6	SODL(Side object detection control module - Left)	ECU information
XF	2012	Normally Aspirated V6	SODL(Side object detection control module - Left)	Read fault codes
XF	2012	Normally Aspirated V6	SODL(Side object detection control module - Left)	Erase fault codes
XF	2012	Normally Aspirated V6	SODL(Side object detection control module - Left)	Live Data
XF	2012	Normally Aspirated V6	SODR(Side object detection control module - Right)	ECU information
XF	2012	Normally Aspirated V6	SODR(Side object detection control module - Right)	Read fault codes
XF	2012	Normally Aspirated V6	SODR(Side object detection control module - Right)	Erase fault codes
XF	2012	Normally Aspirated V6	SODR(Side object detection control module - Right)	Live Data
XF	2012	Normally Aspirated V6	TPM(Tire pressure monitor module)	ECU information
XF	2012	Normally Aspirated V6	TPM(Tire pressure monitor module)	Read fault codes
XF	2012	Normally Aspirated V6	TPM(Tire pressure monitor module)	Erase fault codes
XF	2012	Normally Aspirated V6	TPM(Tire pressure monitor module)	Live Data
XF	2012	Normally Aspirated V6	AAM(Audio amplifier module)	ECU information
XF	2012	Normally Aspirated V6	AAM(Audio amplifier module)	Read fault codes
XF	2012	Normally Aspirated V6	AAM(Audio amplifier module)	Erase fault codes
XF	2012	Normally Aspirated V6	AAM(Audio amplifier module)	Live Data
XF	2012	Normally Aspirated V6	ACM(Audio front control module)	ECU information
XF	2012	Normally Aspirated V6	ACM(Audio front control module)	Read fault codes
XF	2012	Normally Aspirated V6	ACM(Audio front control module)	Erase fault codes
XF	2012	Normally Aspirated V6	ACM(Audio front control module)	Live Data
XF	2012	Normally Aspirated V6	DABM(Digital audio broadcast module)	ECU information
XF	2012	Normally Aspirated V6	DABM(Digital audio broadcast module)	Read fault codes
XF	2012	Normally Aspirated V6	DABM(Digital audio broadcast module)	Erase fault codes
XF	2012	Normally Aspirated V6	DABM(Digital audio broadcast module)	Live Data
XF	2012	Normally Aspirated V6	NCM(Navigation control module)	ECU information
XF	2012	Normally Aspirated V6	NCM(Navigation control module)	Read fault codes
XF	2012	Normally Aspirated V6	NCM(Navigation control module)	Erase fault codes
XF	2012	Normally Aspirated V6	NCM(Navigation control module)	Live Data
XF	2012	Normally Aspirated V6	SRM(Satellite audio unit module)	ECU information
XF	2012	Normally Aspirated V6	SRM(Satellite audio unit module)	Read fault codes
XF	2012	Normally Aspirated V6	SRM(Satellite audio unit module)	Erase fault codes
XF	2012	Normally Aspirated V6	SRM(Satellite audio unit module)	Live Data
XF	2012	Normally Aspirated V6	TVM(Television module)	ECU information
XF	2012	Normally Aspirated V6	TVM(Television module)	Read fault codes
XF	2012	Normally Aspirated V6	TVM(Television module)	Erase fault codes
XF	2012	Normally Aspirated V6	TVM(Television module)	Live Data
XF	2012	Normally Aspirated V6	Special Function	Manual oil reset
XF	2012	Normally Aspirated V6	Special Function	Oil service counter reset
XF	2012	Normally Aspirated V6	Special Function	Idle speed test
XF	2012	Normally Aspirated V6	Special Function	Parking brake release to service position
XF	2012	Normally Aspirated V6	Special Function	Brake bleed
XF	2012	Normally Aspirated V6	Special Function	Steering column calibration
XF	2012	Normally Aspirated V6	Special Function	Tire pressure monitor receiver calibration
XF	2012	Normally Aspirated V6	Special Function	Tire pressure sensor replacement
XF	2012	Normally Aspirated V6	Special Function	Change tire size
XF	2012	Normally Aspirated V6	Special Function	Height calibration

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XF	2012	Normally Aspirated V6	Special Function	Headlamp control module system calibration
XF	2012	Normally Aspirated V6	Special Function	Battery replacement
XF	2012	Normally Aspirated V6	Special Function	Odometer calibration
XF	2012	Normally Aspirated V6	Special Function	Seat cushion replacement
XF	2012	Normally Aspirated V6	Special Function	Driver's seat calibration
XF	2012	Normally Aspirated V6	Special Function	Passenger's seat calibration
XF	2012	Normally Aspirated V6	Special Function	Drivers side window calibration
XF	2012	Normally Aspirated V6	Special Function	Passenger side window calibration
XF	2012	Normally Aspirated V8 5.0L engine	PCM(Powertrain control module)	ECU information
XF	2012	Normally Aspirated V8 5.0L engine	PCM(Powertrain control module)	Read fault codes
XF	2012	Normally Aspirated V8 5.0L engine	PCM(Powertrain control module)	Erase fault codes
XF	2012	Normally Aspirated V8 5.0L engine	PCM(Powertrain control module)	Live Data
XF	2012	Normally Aspirated V8 5.0L engine	TCM(Transmission control module)	ECU information
XF	2012	Normally Aspirated V8 5.0L engine	TCM(Transmission control module)	Read fault codes
XF	2012	Normally Aspirated V8 5.0L engine	TCM(Transmission control module)	Erase fault codes
XF	2012	Normally Aspirated V8 5.0L engine	TCM(Transmission control module)	Live Data
XF	2012	Normally Aspirated V8 5.0L engine	ABS(ABS control module)	ECU information
XF	2012	Normally Aspirated V8 5.0L engine	ABS(ABS control module)	Read fault codes
XF	2012	Normally Aspirated V8 5.0L engine	ABS(ABS control module)	Erase fault codes
XF	2012	Normally Aspirated V8 5.0L engine	ABS(ABS control module)	Live Data
XF	2012	Normally Aspirated V8 5.0L engine	RCM(Restraints control module)	ECU information
XF	2012	Normally Aspirated V8 5.0L engine	RCM(Restraints control module)	Read fault codes
XF	2012	Normally Aspirated V8 5.0L engine	RCM(Restraints control module)	Erase fault codes
XF	2012	Normally Aspirated V8 5.0L engine	RCM(Restraints control module)	Live Data
XF	2012	Normally Aspirated V8 5.0L engine	IPC(Instrument cluster control module)	ECU information
XF	2012	Normally Aspirated V8 5.0L engine	IPC(Instrument cluster control module)	Read fault codes
XF	2012	Normally Aspirated V8 5.0L engine	IPC(Instrument cluster control module)	Erase fault codes
XF	2012	Normally Aspirated V8 5.0L engine	IPC(Instrument cluster control module)	Live Data
XF	2012	Normally Aspirated V8 5.0L engine	CCM(Speed control module)	ECU information
XF	2012	Normally Aspirated V8 5.0L engine	CCM(Speed control module)	Read fault codes
XF	2012	Normally Aspirated V8 5.0L engine	CCM(Speed control module)	Erase fault codes
XF	2012	Normally Aspirated V8 5.0L engine	CCM(Speed control module)	Live Data
XF	2012	Normally Aspirated V8 5.0L engine	GSM(Gear shift module)	ECU information
XF	2012	Normally Aspirated V8 5.0L engine	GSM(Gear shift module)	Read fault codes
XF	2012	Normally Aspirated V8 5.0L engine	GSM(Gear shift module)	Erase fault codes
XF	2012	Normally Aspirated V8 5.0L engine	GSM(Gear shift module)	Live Data
XF	2012	Normally Aspirated V8 5.0L engine	GWM(Gateway module)	ECU information
XF	2012	Normally Aspirated V8 5.0L engine	GWM(Gateway module)	Read fault codes
XF	2012	Normally Aspirated V8 5.0L engine	GWM(Gateway module)	Erase fault codes
XF	2012	Normally Aspirated V8 5.0L engine	GWM(Gateway module)	Live Data
XF	2012	Normally Aspirated V8 5.0L engine	HCM(Headlamp control module)	ECU information
XF	2012	Normally Aspirated V8 5.0L engine	HCM(Headlamp control module)	Read fault codes
XF	2012	Normally Aspirated V8 5.0L engine	HCM(Headlamp control module)	Erase fault codes
XF	2012	Normally Aspirated V8 5.0L engine	HCM(Headlamp control module)	Live Data
XF	2012	Normally Aspirated V8 5.0L engine	OCS(Restraints occupant classification system module)	ECU information
XF	2012	Normally Aspirated V8 5.0L engine	OCS(Restraints occupant classification system module)	Read fault codes
XF	2012	Normally Aspirated V8 5.0L engine	OCS(Restraints occupant classification system module)	Erase fault codes
XF	2012	Normally Aspirated V8 5.0L engine	OCS(Restraints occupant classification system module)	Live Data
XF	2012	Normally Aspirated V8 5.0L engine	PBM(Parking brake control module)	ECU information
XF	2012	Normally Aspirated V8 5.0L engine	PBM(Parking brake control module)	Read fault codes
XF	2012	Normally Aspirated V8 5.0L engine	PBM(Parking brake control module)	Erase fault codes
XF	2012	Normally Aspirated V8 5.0L engine	PBM(Parking brake control module)	Live Data
XF	2012	Normally Aspirated V8 5.0L engine	RDCM(Rear differential control module)	ECU information
XF	2012	Normally Aspirated V8 5.0L engine	RDCM(Rear differential control module)	Read fault codes
XF	2012	Normally Aspirated V8 5.0L engine	RDCM(Rear differential control module)	Erase fault codes
XF	2012	Normally Aspirated V8 5.0L engine	RDCM(Rear differential control module)	Live Data
XF	2012	Normally Aspirated V8 5.0L engine	SPMA(Safety belt pretensioner control module A - drivers side)	ECU information
XF	2012	Normally Aspirated V8 5.0L engine	SPMA(Safety belt pretensioner control module A - drivers side)	Read fault codes
XF	2012	Normally Aspirated V8 5.0L engine	SPMA(Safety belt pretensioner control module A - drivers side)	Erase fault codes
XF	2012	Normally Aspirated V8 5.0L engine	SPMA(Safety belt pretensioner control module A - drivers side)	Live Data
XF	2012	Normally Aspirated V8 5.0L engine	SPMB(Safety belt pretensioner control module B - passengers side)	ECU information
XF	2012	Normally Aspirated V8 5.0L engine	SPMB(Safety belt pretensioner control module B - passengers side)	Read fault codes
XF	2012	Normally Aspirated V8 5.0L engine	SPMB(Safety belt pretensioner control module B - passengers side)	Erase fault codes
XF	2012	Normally Aspirated V8 5.0L engine	SPMB(Safety belt pretensioner control module B - passengers side)	Live Data
XF	2012	Normally Aspirated V8 5.0L engine	SUMB(Adaptive damping control module)	ECU information
XF	2012	Normally Aspirated V8 5.0L engine	SUMB(Adaptive damping control module)	Read fault codes
XF	2012	Normally Aspirated V8 5.0L engine	SUMB(Adaptive damping control module)	Erase fault codes
XF	2012	Normally Aspirated V8 5.0L engine	SUMB(Adaptive damping control module)	Live Data
XF	2012	Normally Aspirated V8 5.0L engine	VIM(Vehicle immobilizer control module)	ECU information
XF	2012	Normally Aspirated V8 5.0L engine	VIM(Vehicle immobilizer control module)	Read fault codes
XF	2012	Normally Aspirated V8 5.0L engine	VIM(Vehicle immobilizer control module)	Erase fault codes
XF	2012	Normally Aspirated V8 5.0L engine	VIM(Vehicle immobilizer control module)	Live Data
XF	2012	Normally Aspirated V8 5.0L engine	FSJB(Central junction box (body control module))	ECU information
XF	2012	Normally Aspirated V8 5.0L engine	FSJB(Central junction box (body control module))	Read fault codes
XF	2012	Normally Aspirated V8 5.0L engine	FSJB(Central junction box (body control module))	Erase fault codes
XF	2012	Normally Aspirated V8 5.0L engine	FSJB(Central junction box (body control module))	Live Data

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XF	2012	Normally Aspirated V8 5.0L engine	RSJB(Auxiliary junction box (body control module B))	ECU information
XF	2012	Normally Aspirated V8 5.0L engine	RSJB(Auxiliary junction box (body control module B))	Read fault codes
XF	2012	Normally Aspirated V8 5.0L engine	RSJB(Auxiliary junction box (body control module B))	Erase fault codes
XF	2012	Normally Aspirated V8 5.0L engine	RSJB(Auxiliary junction box (body control module B))	Live Data
XF	2012	Normally Aspirated V8 5.0L engine	DDM(Driver's door module)	ECU information
XF	2012	Normally Aspirated V8 5.0L engine	DDM(Driver's door module)	Read fault codes
XF	2012	Normally Aspirated V8 5.0L engine	DDM(Driver's door module)	Erase fault codes
XF	2012	Normally Aspirated V8 5.0L engine	DDM(Driver's door module)	Live Data
XF	2012	Normally Aspirated V8 5.0L engine	DSM(Driver's seat module)	ECU information
XF	2012	Normally Aspirated V8 5.0L engine	DSM(Driver's seat module)	Read fault codes
XF	2012	Normally Aspirated V8 5.0L engine	DSM(Driver's seat module)	Erase fault codes
XF	2012	Normally Aspirated V8 5.0L engine	DSM(Driver's seat module)	Live Data
XF	2012	Normally Aspirated V8 5.0L engine	FCDIM(Front control/display interface module (high level display front))	ECU information
XF	2012	Normally Aspirated V8 5.0L engine	FCDIM(Front control/display interface module (high level display front))	Read fault codes
XF	2012	Normally Aspirated V8 5.0L engine	FCDIM(Front control/display interface module (high level display front))	Erase fault codes
XF	2012	Normally Aspirated V8 5.0L engine	FCDIM(Front control/display interface module (high level display front))	Live Data
XF	2012	Normally Aspirated V8 5.0L engine	FCIMB(Front controls interface module 'B' (front audio control panel))	ECU information
XF	2012	Normally Aspirated V8 5.0L engine	FCIMB(Front controls interface module 'B' (front audio control panel))	Read fault codes
XF	2012	Normally Aspirated V8 5.0L engine	FCIMB(Front controls interface module 'B' (front audio control panel))	Erase fault codes
XF	2012	Normally Aspirated V8 5.0L engine	FCIMB(Front controls interface module 'B' (front audio control panel))	Live Data
XF	2012	Normally Aspirated V8 5.0L engine	HCMB(Headlamp control module 'B')	ECU information
XF	2012	Normally Aspirated V8 5.0L engine	HCMB(Headlamp control module 'B')	Read fault codes
XF	2012	Normally Aspirated V8 5.0L engine	HCMB(Headlamp control module 'B')	Erase fault codes
XF	2012	Normally Aspirated V8 5.0L engine	HCMB(Headlamp control module 'B')	Live Data
XF	2012	Normally Aspirated V8 5.0L engine	HVAC(Heating ventilation and air conditioning control module)	ECU information
XF	2012	Normally Aspirated V8 5.0L engine	HVAC(Heating ventilation and air conditioning control module)	Read fault codes
XF	2012	Normally Aspirated V8 5.0L engine	HVAC(Heating ventilation and air conditioning control module)	Erase fault codes
XF	2012	Normally Aspirated V8 5.0L engine	HVAC(Heating ventilation and air conditioning control module)	Live Data
XF	2012	Normally Aspirated V8 5.0L engine	PAM(Parking assist control module)	ECU information
XF	2012	Normally Aspirated V8 5.0L engine	PAM(Parking assist control module)	Read fault codes
XF	2012	Normally Aspirated V8 5.0L engine	PAM(Parking assist control module)	Erase fault codes
XF	2012	Normally Aspirated V8 5.0L engine	PAM(Parking assist control module)	Live Data
XF	2012	Normally Aspirated V8 5.0L engine	PDM(Passenger's door module)	ECU information
XF	2012	Normally Aspirated V8 5.0L engine	PDM(Passenger's door module)	Read fault codes
XF	2012	Normally Aspirated V8 5.0L engine	PDM(Passenger's door module)	Erase fault codes
XF	2012	Normally Aspirated V8 5.0L engine	PDM(Passenger's door module)	Live Data
XF	2012	Normally Aspirated V8 5.0L engine	PSM(Passenger's seat module)	ECU information
XF	2012	Normally Aspirated V8 5.0L engine	PSM(Passenger's seat module)	Read fault codes
XF	2012	Normally Aspirated V8 5.0L engine	PSM(Passenger's seat module)	Erase fault codes
XF	2012	Normally Aspirated V8 5.0L engine	PSM(Passenger's seat module)	Live Data
XF	2012	Normally Aspirated V8 5.0L engine	RFA(Keyless vehicle module)	ECU information
XF	2012	Normally Aspirated V8 5.0L engine	RFA(Keyless vehicle module)	Read fault codes
XF	2012	Normally Aspirated V8 5.0L engine	RFA(Keyless vehicle module)	Erase fault codes
XF	2012	Normally Aspirated V8 5.0L engine	RFA(Keyless vehicle module)	Live Data
XF	2012	Normally Aspirated V8 5.0L engine	SCME(Driver's climate seat module)	ECU information
XF	2012	Normally Aspirated V8 5.0L engine	SCME(Driver's climate seat module)	Read fault codes
XF	2012	Normally Aspirated V8 5.0L engine	SCME(Driver's climate seat module)	Erase fault codes
XF	2012	Normally Aspirated V8 5.0L engine	SCME(Driver's climate seat module)	Live Data
XF	2012	Normally Aspirated V8 5.0L engine	SODL(Side object detection control module - Left)	ECU information
XF	2012	Normally Aspirated V8 5.0L engine	SODL(Side object detection control module - Left)	Read fault codes
XF	2012	Normally Aspirated V8 5.0L engine	SODL(Side object detection control module - Left)	Erase fault codes
XF	2012	Normally Aspirated V8 5.0L engine	SODL(Side object detection control module - Left)	Live Data
XF	2012	Normally Aspirated V8 5.0L engine	SODR(Side object detection control module - Right)	ECU information
XF	2012	Normally Aspirated V8 5.0L engine	SODR(Side object detection control module - Right)	Read fault codes
XF	2012	Normally Aspirated V8 5.0L engine	SODR(Side object detection control module - Right)	Erase fault codes
XF	2012	Normally Aspirated V8 5.0L engine	SODR(Side object detection control module - Right)	Live Data
XF	2012	Normally Aspirated V8 5.0L engine	TPM(Tire pressure monitor module)	ECU information
XF	2012	Normally Aspirated V8 5.0L engine	TPM(Tire pressure monitor module)	Read fault codes
XF	2012	Normally Aspirated V8 5.0L engine	TPM(Tire pressure monitor module)	Erase fault codes
XF	2012	Normally Aspirated V8 5.0L engine	TPM(Tire pressure monitor module)	Live Data
XF	2012	Normally Aspirated V8 5.0L engine	AAM(Audio amplifier module)	ECU information
XF	2012	Normally Aspirated V8 5.0L engine	AAM(Audio amplifier module)	Read fault codes
XF	2012	Normally Aspirated V8 5.0L engine	AAM(Audio amplifier module)	Erase fault codes
XF	2012	Normally Aspirated V8 5.0L engine	AAM(Audio amplifier module)	Live Data
XF	2012	Normally Aspirated V8 5.0L engine	ACM(Audio front control module)	ECU information
XF	2012	Normally Aspirated V8 5.0L engine	ACM(Audio front control module)	Read fault codes
XF	2012	Normally Aspirated V8 5.0L engine	ACM(Audio front control module)	Erase fault codes



## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XF	2012	Normally Aspirated V8 5.0L engine	ACM(Audio front control module)	Live Data
XF	2012	Normally Aspirated V8 5.0L engine	DABM(Digital audio broadcast module)	ECU information
XF	2012	Normally Aspirated V8 5.0L engine	DABM(Digital audio broadcast module)	Read fault codes
XF	2012	Normally Aspirated V8 5.0L engine	DABM(Digital audio broadcast module)	Erase fault codes
XF	2012	Normally Aspirated V8 5.0L engine	DABM(Digital audio broadcast module)	Live Data
XF	2012	Normally Aspirated V8 5.0L engine	NCM(Navigation control module)	ECU information
XF	2012	Normally Aspirated V8 5.0L engine	NCM(Navigation control module)	Read fault codes
XF	2012	Normally Aspirated V8 5.0L engine	NCM(Navigation control module)	Erase fault codes
XF	2012	Normally Aspirated V8 5.0L engine	NCM(Navigation control module)	Live Data
XF	2012	Normally Aspirated V8 5.0L engine	SRM(Satellite audio unit module)	ECU information
XF	2012	Normally Aspirated V8 5.0L engine	SRM(Satellite audio unit module)	Read fault codes
XF	2012	Normally Aspirated V8 5.0L engine	SRM(Satellite audio unit module)	Erase fault codes
XF	2012	Normally Aspirated V8 5.0L engine	SRM(Satellite audio unit module)	Live Data
XF	2012	Normally Aspirated V8 5.0L engine	TVM(Television module)	ECU information
XF	2012	Normally Aspirated V8 5.0L engine	TVM(Television module)	Read fault codes
XF	2012	Normally Aspirated V8 5.0L engine	TVM(Television module)	Erase fault codes
XF	2012	Normally Aspirated V8 5.0L engine	TVM(Television module)	Live Data
XF	2012	Normally Aspirated V8 5.0L engine	Special Function	Manual oil reset
XF	2012	Normally Aspirated V8 5.0L engine	Special Function	Oil service counter reset
XF	2012	Normally Aspirated V8 5.0L engine	Special Function	Reset oil level
XF	2012	Normally Aspirated V8 5.0L engine	Special Function	Idle speed test
XF	2012	Normally Aspirated V8 5.0L engine	Special Function	Parking brake release to service position
XF	2012	Normally Aspirated V8 5.0L engine	Special Function	Brake bleed
XF	2012	Normally Aspirated V8 5.0L engine	Special Function	Steering column calibration
XF	2012	Normally Aspirated V8 5.0L engine	Special Function	Yaw rate sensor calibration
XF	2012	Normally Aspirated V8 5.0L engine	Special Function	Tire pressure monitor receiver calibration
XF	2012	Normally Aspirated V8 5.0L engine	Special Function	Tire pressure sensor replacement
XF	2012	Normally Aspirated V8 5.0L engine	Special Function	Change tire size
XF	2012	Normally Aspirated V8 5.0L engine	Special Function	Height calibration
XF	2012	Normally Aspirated V8 5.0L engine	Special Function	Headlamp control module system calibration
XF	2012	Normally Aspirated V8 5.0L engine	Special Function	Battery replacement
XF	2012	Normally Aspirated V8 5.0L engine	Special Function	Odometer calibration
XF	2012	Normally Aspirated V8 5.0L engine	Special Function	Seat cushion replacement
XF	2012	Normally Aspirated V8 5.0L engine	Special Function	Driver's seat calibration
XF	2012	Normally Aspirated V8 5.0L engine	Special Function	Passenger's seat calibration
XF	2012	Normally Aspirated V8 5.0L engine	Special Function	Drivers side window calibration
XF	2012	Normally Aspirated V8 5.0L engine	Special Function	Passenger side window calibration
XF	2012	Supercharged V8 5.0L engine	PCM(Powertrain control module)	ECU information
XF	2012	Supercharged V8 5.0L engine	PCM(Powertrain control module)	Read fault codes
XF	2012	Supercharged V8 5.0L engine	PCM(Powertrain control module)	Erase fault codes
XF	2012	Supercharged V8 5.0L engine	PCM(Powertrain control module)	Live Data
XF	2012	Supercharged V8 5.0L engine	TCM(Transmission control module)	ECU information
XF	2012	Supercharged V8 5.0L engine	TCM(Transmission control module)	Read fault codes
XF	2012	Supercharged V8 5.0L engine	TCM(Transmission control module)	Erase fault codes
XF	2012	Supercharged V8 5.0L engine	TCM(Transmission control module)	Live Data
XF	2012	Supercharged V8 5.0L engine	ABS(ABS control module)	ECU information
XF	2012	Supercharged V8 5.0L engine	ABS(ABS control module)	Read fault codes
XF	2012	Supercharged V8 5.0L engine	ABS(ABS control module)	Erase fault codes
XF	2012	Supercharged V8 5.0L engine	ABS(ABS control module)	Live Data
XF	2012	Supercharged V8 5.0L engine	RCM(Restraints control module)	ECU information
XF	2012	Supercharged V8 5.0L engine	RCM(Restraints control module)	Read fault codes
XF	2012	Supercharged V8 5.0L engine	RCM(Restraints control module)	Erase fault codes
XF	2012	Supercharged V8 5.0L engine	RCM(Restraints control module)	Live Data
XF	2012	Supercharged V8 5.0L engine	IPC(Instrument cluster control module)	ECU information
XF	2012	Supercharged V8 5.0L engine	IPC(Instrument cluster control module)	Read fault codes
XF	2012	Supercharged V8 5.0L engine	IPC(Instrument cluster control module)	Erase fault codes
XF	2012	Supercharged V8 5.0L engine	IPC(Instrument cluster control module)	Live Data
XF	2012	Supercharged V8 5.0L engine	CCM(Speed control module)	ECU information
XF	2012	Supercharged V8 5.0L engine	CCM(Speed control module)	Read fault codes
XF	2012	Supercharged V8 5.0L engine	CCM(Speed control module)	Erase fault codes
XF	2012	Supercharged V8 5.0L engine	CCM(Speed control module)	Live Data
XF	2012	Supercharged V8 5.0L engine	GSM(Gear shift module)	ECU information
XF	2012	Supercharged V8 5.0L engine	GSM(Gear shift module)	Read fault codes
XF	2012	Supercharged V8 5.0L engine	GSM(Gear shift module)	Erase fault codes
XF	2012	Supercharged V8 5.0L engine	GSM(Gear shift module)	Live Data
XF	2012	Supercharged V8 5.0L engine	GWM(Gateway module)	ECU information
XF	2012	Supercharged V8 5.0L engine	GWM(Gateway module)	Read fault codes
XF	2012	Supercharged V8 5.0L engine	GWM(Gateway module)	Erase fault codes
XF	2012	Supercharged V8 5.0L engine	GWM(Gateway module)	Live Data
XF	2012	Supercharged V8 5.0L engine	HCM(Headlamp control module)	ECU information
XF	2012	Supercharged V8 5.0L engine	HCM(Headlamp control module)	Read fault codes
XF	2012	Supercharged V8 5.0L engine	HCM(Headlamp control module)	Erase fault codes
XF	2012	Supercharged V8 5.0L engine	HCM(Headlamp control module)	Live Data
XF	2012	Supercharged V8 5.0L engine	OCS(Restraints occupant classification system module)	ECU information
XF	2012	Supercharged V8 5.0L engine	OCS(Restraints occupant classification system module)	Read fault codes
XF	2012	Supercharged V8 5.0L engine	OCS(Restraints occupant classification system module)	Erase fault codes
XF	2012	Supercharged V8 5.0L engine	OCS(Restraints occupant classification system module)	Live Data
XF	2012	Supercharged V8 5.0L engine	PBM(Parking brake control module)	ECU information
XF	2012	Supercharged V8 5.0L engine	PBM(Parking brake control module)	Read fault codes
XF	2012	Supercharged V8 5.0L engine	PBM(Parking brake control module)	Erase fault codes
XF	2012	Supercharged V8 5.0L engine	PBM(Parking brake control module)	Live Data
XF	2012	Supercharged V8 5.0L engine	RDCM(Rear differential control module)	ECU information
XF	2012	Supercharged V8 5.0L engine	RDCM(Rear differential control module)	Read fault codes
XF	2012	Supercharged V8 5.0L engine	RDCM(Rear differential control module)	Erase fault codes
XF	2012	Supercharged V8 5.0L engine	RDCM(Rear differential control module)	Live Data
XF	2012	Supercharged V8 5.0L engine	SPMA(Safety belt pretensioner control module A - drivers side)	ECU information

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XF	2012	Supercharged V8 5.0L engine	SPMA(Safety belt pretensioner control module A - drivers side)	Read fault codes
XF	2012	Supercharged V8 5.0L engine	SPMA(Safety belt pretensioner control module A - drivers side)	Erase fault codes
XF	2012	Supercharged V8 5.0L engine	SPMA(Safety belt pretensioner control module A - drivers side)	Live Data
XF	2012	Supercharged V8 5.0L engine	SPMB(Safety belt pretensioner control module B - passengers side)	ECU information
XF	2012	Supercharged V8 5.0L engine	SPMB(Safety belt pretensioner control module B - passengers side)	Read fault codes
XF	2012	Supercharged V8 5.0L engine	SPMB(Safety belt pretensioner control module B - passengers side)	Erase fault codes
XF	2012	Supercharged V8 5.0L engine	SPMB(Safety belt pretensioner control module B - passengers side)	Live Data
XF	2012	Supercharged V8 5.0L engine	SLMB(Adaptive damping control module)	ECU information
XF	2012	Supercharged V8 5.0L engine	SLMB(Adaptive damping control module)	Read fault codes
XF	2012	Supercharged V8 5.0L engine	SLMB(Adaptive damping control module)	Erase fault codes
XF	2012	Supercharged V8 5.0L engine	SLMB(Adaptive damping control module)	Live Data
XF	2012	Supercharged V8 5.0L engine	VIM(Vehicle immobilizer control module)	ECU information
XF	2012	Supercharged V8 5.0L engine	VIM(Vehicle immobilizer control module)	Read fault codes
XF	2012	Supercharged V8 5.0L engine	VIM(Vehicle immobilizer control module)	Erase fault codes
XF	2012	Supercharged V8 5.0L engine	VIM(Vehicle immobilizer control module)	Live Data
XF	2012	Supercharged V8 5.0L engine	FSJB(Central junction box (body control module))	ECU information
XF	2012	Supercharged V8 5.0L engine	FSJB(Central junction box (body control module))	Read fault codes
XF	2012	Supercharged V8 5.0L engine	FSJB(Central junction box (body control module))	Erase fault codes
XF	2012	Supercharged V8 5.0L engine	FSJB(Central junction box (body control module))	Live Data
XF	2012	Supercharged V8 5.0L engine	RSJB(Auxiliary junction box (body control module B))	ECU information
XF	2012	Supercharged V8 5.0L engine	RSJB(Auxiliary junction box (body control module B))	Read fault codes
XF	2012	Supercharged V8 5.0L engine	RSJB(Auxiliary junction box (body control module B))	Erase fault codes
XF	2012	Supercharged V8 5.0L engine	RSJB(Auxiliary junction box (body control module B))	Live Data
XF	2012	Supercharged V8 5.0L engine	DDM(Driver's door module)	ECU information
XF	2012	Supercharged V8 5.0L engine	DDM(Driver's door module)	Read fault codes
XF	2012	Supercharged V8 5.0L engine	DDM(Driver's door module)	Erase fault codes
XF	2012	Supercharged V8 5.0L engine	DDM(Driver's door module)	Live Data
XF	2012	Supercharged V8 5.0L engine	DSM(Driver's seat module)	ECU information
XF	2012	Supercharged V8 5.0L engine	DSM(Driver's seat module)	Read fault codes
XF	2012	Supercharged V8 5.0L engine	DSM(Driver's seat module)	Erase fault codes
XF	2012	Supercharged V8 5.0L engine	DSM(Driver's seat module)	Live Data
XF	2012	Supercharged V8 5.0L engine	FCDIM(Front control/display interface module (high level display front))	ECU information
XF	2012	Supercharged V8 5.0L engine	FCDIM(Front control/display interface module (high level display front))	Read fault codes
XF	2012	Supercharged V8 5.0L engine	FCDIM(Front control/display interface module (high level display front))	Erase fault codes
XF	2012	Supercharged V8 5.0L engine	FCDIM(Front control/display interface module (high level display front))	Live Data
XF	2012	Supercharged V8 5.0L engine	FCIMB(Front controls interface module 'B' (front audio control panel))	ECU information
XF	2012	Supercharged V8 5.0L engine	FCIMB(Front controls interface module 'B' (front audio control panel))	Read fault codes
XF	2012	Supercharged V8 5.0L engine	FCIMB(Front controls interface module 'B' (front audio control panel))	Erase fault codes
XF	2012	Supercharged V8 5.0L engine	FCIMB(Front controls interface module 'B' (front audio control panel))	Live Data
XF	2012	Supercharged V8 5.0L engine	HCMB(Headlamp control module 'B')	ECU information
XF	2012	Supercharged V8 5.0L engine	HCMB(Headlamp control module 'B')	Read fault codes
XF	2012	Supercharged V8 5.0L engine	HCMB(Headlamp control module 'B')	Erase fault codes
XF	2012	Supercharged V8 5.0L engine	HCMB(Headlamp control module 'B')	Live Data
XF	2012	Supercharged V8 5.0L engine	HVAC(Heating ventilation and air conditioning control module)	ECU information
XF	2012	Supercharged V8 5.0L engine	HVAC(Heating ventilation and air conditioning control module)	Read fault codes
XF	2012	Supercharged V8 5.0L engine	HVAC(Heating ventilation and air conditioning control module)	Erase fault codes
XF	2012	Supercharged V8 5.0L engine	HVAC(Heating ventilation and air conditioning control module)	Live Data
XF	2012	Supercharged V8 5.0L engine	PAM(Parking assist control module)	ECU information
XF	2012	Supercharged V8 5.0L engine	PAM(Parking assist control module)	Read fault codes
XF	2012	Supercharged V8 5.0L engine	PAM(Parking assist control module)	Erase fault codes
XF	2012	Supercharged V8 5.0L engine	PAM(Parking assist control module)	Live Data
XF	2012	Supercharged V8 5.0L engine	PDM(Passenger's door module)	ECU information
XF	2012	Supercharged V8 5.0L engine	PDM(Passenger's door module)	Read fault codes
XF	2012	Supercharged V8 5.0L engine	PDM(Passenger's door module)	Erase fault codes
XF	2012	Supercharged V8 5.0L engine	PDM(Passenger's door module)	Live Data
XF	2012	Supercharged V8 5.0L engine	PSM(Passenger's seat module)	ECU information
XF	2012	Supercharged V8 5.0L engine	PSM(Passenger's seat module)	Read fault codes
XF	2012	Supercharged V8 5.0L engine	PSM(Passenger's seat module)	Erase fault codes
XF	2012	Supercharged V8 5.0L engine	PSM(Passenger's seat module)	Live Data
XF	2012	Supercharged V8 5.0L engine	RFA(Keyless vehicle module)	ECU information
XF	2012	Supercharged V8 5.0L engine	RFA(Keyless vehicle module)	Read fault codes
XF	2012	Supercharged V8 5.0L engine	RFA(Keyless vehicle module)	Erase fault codes
XF	2012	Supercharged V8 5.0L engine	RFA(Keyless vehicle module)	Live Data
XF	2012	Supercharged V8 5.0L engine	SCME(Driver's climate seat module)	ECU information

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XF	2012	Supercharged V8 5.0L engine	SCME(Driver's climate seat module)	Read fault codes
XF	2012	Supercharged V8 5.0L engine	SCME(Driver's climate seat module)	Erase fault codes
XF	2012	Supercharged V8 5.0L engine	SCME(Driver's climate seat module)	Live Data
XF	2012	Supercharged V8 5.0L engine	SODL(Side object detection control module - Left)	ECU information
XF	2012	Supercharged V8 5.0L engine	SODL(Side object detection control module - Left)	Read fault codes
XF	2012	Supercharged V8 5.0L engine	SODL(Side object detection control module - Left)	Erase fault codes
XF	2012	Supercharged V8 5.0L engine	SODL(Side object detection control module - Left)	Live Data
XF	2012	Supercharged V8 5.0L engine	SODR(Side object detection control module - Right)	ECU information
XF	2012	Supercharged V8 5.0L engine	SODR(Side object detection control module - Right)	Read fault codes
XF	2012	Supercharged V8 5.0L engine	SODR(Side object detection control module - Right)	Erase fault codes
XF	2012	Supercharged V8 5.0L engine	SODR(Side object detection control module - Right)	Live Data
XF	2012	Supercharged V8 5.0L engine	TPM(Tire pressure monitor module)	ECU information
XF	2012	Supercharged V8 5.0L engine	TPM(Tire pressure monitor module)	Read fault codes
XF	2012	Supercharged V8 5.0L engine	TPM(Tire pressure monitor module)	Erase fault codes
XF	2012	Supercharged V8 5.0L engine	TPM(Tire pressure monitor module)	Live Data
XF	2012	Supercharged V8 5.0L engine	AAM(Audio amplifier module)	ECU information
XF	2012	Supercharged V8 5.0L engine	AAM(Audio amplifier module)	Read fault codes
XF	2012	Supercharged V8 5.0L engine	AAM(Audio amplifier module)	Erase fault codes
XF	2012	Supercharged V8 5.0L engine	AAM(Audio amplifier module)	Live Data
XF	2012	Supercharged V8 5.0L engine	ACM(Audio front control module)	ECU information
XF	2012	Supercharged V8 5.0L engine	ACM(Audio front control module)	Read fault codes
XF	2012	Supercharged V8 5.0L engine	ACM(Audio front control module)	Erase fault codes
XF	2012	Supercharged V8 5.0L engine	ACM(Audio front control module)	Live Data
XF	2012	Supercharged V8 5.0L engine	DABM(Digital audio broadcast module)	ECU information
XF	2012	Supercharged V8 5.0L engine	DABM(Digital audio broadcast module)	Read fault codes
XF	2012	Supercharged V8 5.0L engine	DABM(Digital audio broadcast module)	Erase fault codes
XF	2012	Supercharged V8 5.0L engine	DABM(Digital audio broadcast module)	Live Data
XF	2012	Supercharged V8 5.0L engine	NCM(Navigation control module)	ECU information
XF	2012	Supercharged V8 5.0L engine	NCM(Navigation control module)	Read fault codes
XF	2012	Supercharged V8 5.0L engine	NCM(Navigation control module)	Erase fault codes
XF	2012	Supercharged V8 5.0L engine	NCM(Navigation control module)	Live Data
XF	2012	Supercharged V8 5.0L engine	SRM(Satellite audio unit module)	ECU information
XF	2012	Supercharged V8 5.0L engine	SRM(Satellite audio unit module)	Read fault codes
XF	2012	Supercharged V8 5.0L engine	SRM(Satellite audio unit module)	Erase fault codes
XF	2012	Supercharged V8 5.0L engine	SRM(Satellite audio unit module)	Live Data
XF	2012	Supercharged V8 5.0L engine	TVM(Television module)	ECU information
XF	2012	Supercharged V8 5.0L engine	TVM(Television module)	Read fault codes
XF	2012	Supercharged V8 5.0L engine	TVM(Television module)	Live Data
XF	2012	Supercharged V8 5.0L engine	Special Function	Manual oil reset
XF	2012	Supercharged V8 5.0L engine	Special Function	Oil service counter reset
XF	2012	Supercharged V8 5.0L engine	Special Function	Reset oil level
XF	2012	Supercharged V8 5.0L engine	Special Function	Idle speed test
XF	2012	Supercharged V8 5.0L engine	Special Function	Parking brake release to service position
XF	2012	Supercharged V8 5.0L engine	Special Function	Brake bleed
XF	2012	Supercharged V8 5.0L engine	Special Function	Steering column calibration
XF	2012	Supercharged V8 5.0L engine	Special Function	Tire pressure monitor receiver calibration
XF	2012	Supercharged V8 5.0L engine	Special Function	Tire pressure sensor replacement
XF	2012	Supercharged V8 5.0L engine	Special Function	Change tire size
XF	2012	Supercharged V8 5.0L engine	Special Function	Height calibration
XF	2012	Supercharged V8 5.0L engine	Special Function	Headlamp control module system calibration
XF	2012	Supercharged V8 5.0L engine	Special Function	Battery replacement
XF	2012	Supercharged V8 5.0L engine	Special Function	Odometer calibration
XF	2012	Supercharged V8 5.0L engine	Special Function	Seat cushion replacement
XF	2012	Supercharged V8 5.0L engine	Special Function	Driver's seat calibration
XF	2012	Supercharged V8 5.0L engine	Special Function	Passenger's seat calibration
XF	2012	Supercharged V8 5.0L engine	Special Function	Drivers side window calibration
XF	2012	Supercharged V8 5.0L engine	Special Function	Passenger side window calibration
XF	2012	14 Diesel 2.2L engine	PCM(Powertrain control module)	ECU information
XF	2012	14 Diesel 2.2L engine	PCM(Powertrain control module)	Read fault codes
XF	2012	14 Diesel 2.2L engine	PCM(Powertrain control module)	Erase fault codes
XF	2012	14 Diesel 2.2L engine	PCM(Powertrain control module)	Live Data
XF	2012	14 Diesel 2.2L engine	TCM(Transmission control module)	ECU information
XF	2012	14 Diesel 2.2L engine	TCM(Transmission control module)	Read fault codes
XF	2012	14 Diesel 2.2L engine	TCM(Transmission control module)	Erase fault codes
XF	2012	14 Diesel 2.2L engine	TCM(Transmission control module)	Live Data
XF	2012	14 Diesel 2.2L engine	ABS(ABS control module)	ECU information
XF	2012	14 Diesel 2.2L engine	ABS(ABS control module)	Read fault codes
XF	2012	14 Diesel 2.2L engine	ABS(ABS control module)	Erase fault codes
XF	2012	14 Diesel 2.2L engine	ABS(ABS control module)	Live Data
XF	2012	14 Diesel 2.2L engine	RCM(Restraints control module)	ECU information
XF	2012	14 Diesel 2.2L engine	RCM(Restraints control module)	Read fault codes
XF	2012	14 Diesel 2.2L engine	RCM(Restraints control module)	Erase fault codes
XF	2012	14 Diesel 2.2L engine	RCM(Restraints control module)	Live Data
XF	2012	14 Diesel 2.2L engine	IPC(Instrument cluster control module)	ECU information
XF	2012	14 Diesel 2.2L engine	IPC(Instrument cluster control module)	Read fault codes
XF	2012	14 Diesel 2.2L engine	IPC(Instrument cluster control module)	Erase fault codes
XF	2012	14 Diesel 2.2L engine	IPC(Instrument cluster control module)	Live Data
XF	2012	14 Diesel 2.2L engine	CCM(Speed control module)	ECU information
XF	2012	14 Diesel 2.2L engine	CCM(Speed control module)	Read fault codes
XF	2012	14 Diesel 2.2L engine	CCM(Speed control module)	Erase fault codes
XF	2012	14 Diesel 2.2L engine	CCM(Speed control module)	Live Data
XF	2012	14 Diesel 2.2L engine	GSM(Gear shift module)	ECU information
XF	2012	14 Diesel 2.2L engine	GSM(Gear shift module)	Read fault codes

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XF	2012	I4 Diesel 2.2L engine	GSM(Gear shift module)	Erase fault codes
XF	2012	I4 Diesel 2.2L engine	GSM(Gear shift module)	Live Data
XF	2012	I4 Diesel 2.2L engine	GWM(Gateway module)	ECU information
XF	2012	I4 Diesel 2.2L engine	GWM(Gateway module)	Read fault codes
XF	2012	I4 Diesel 2.2L engine	GWM(Gateway module)	Erase fault codes
XF	2012	I4 Diesel 2.2L engine	GWM(Gateway module)	Live Data
XF	2012	I4 Diesel 2.2L engine	HCM(Headlamp control module)	ECU information
XF	2012	I4 Diesel 2.2L engine	HCM(Headlamp control module)	Read fault codes
XF	2012	I4 Diesel 2.2L engine	HCM(Headlamp control module)	Erase fault codes
XF	2012	I4 Diesel 2.2L engine	HCM(Headlamp control module)	Live Data
XF	2012	I4 Diesel 2.2L engine	OCS(Restraints occupant classification system module)	ECU information
XF	2012	I4 Diesel 2.2L engine	OCS(Restraints occupant classification system module)	Read fault codes
XF	2012	I4 Diesel 2.2L engine	OCS(Restraints occupant classification system module)	Erase fault codes
XF	2012	I4 Diesel 2.2L engine	OCS(Restraints occupant classification system module)	Live Data
XF	2012	I4 Diesel 2.2L engine	PBM(Parking brake control module)	ECU information
XF	2012	I4 Diesel 2.2L engine	PBM(Parking brake control module)	Read fault codes
XF	2012	I4 Diesel 2.2L engine	PBM(Parking brake control module)	Erase fault codes
XF	2012	I4 Diesel 2.2L engine	PBM(Parking brake control module)	Live Data
XF	2012	I4 Diesel 2.2L engine	RDCM(Rear differential control module)	ECU information
XF	2012	I4 Diesel 2.2L engine	RDCM(Rear differential control module)	Read fault codes
XF	2012	I4 Diesel 2.2L engine	RDCM(Rear differential control module)	Erase fault codes
XF	2012	I4 Diesel 2.2L engine	RDCM(Rear differential control module)	Live Data
XF	2012	I4 Diesel 2.2L engine	SPMA(Safety belt pretensioner control module A - drivers side)	ECU information
XF	2012	I4 Diesel 2.2L engine	SPMA(Safety belt pretensioner control module A - drivers side)	Read fault codes
XF	2012	I4 Diesel 2.2L engine	SPMA(Safety belt pretensioner control module A - drivers side)	Erase fault codes
XF	2012	I4 Diesel 2.2L engine	SPMA(Safety belt pretensioner control module A - drivers side)	Live Data
XF	2012	I4 Diesel 2.2L engine	SPMB(Safety belt pretensioner control module B - passengers side)	ECU information
XF	2012	I4 Diesel 2.2L engine	SPMB(Safety belt pretensioner control module B - passengers side)	Read fault codes
XF	2012	I4 Diesel 2.2L engine	SPMB(Safety belt pretensioner control module B - passengers side)	Erase fault codes
XF	2012	I4 Diesel 2.2L engine	SPMB(Safety belt pretensioner control module B - passengers side)	Live Data
XF	2012	I4 Diesel 2.2L engine	SUMB(Adaptive damping control module)	ECU information
XF	2012	I4 Diesel 2.2L engine	SUMB(Adaptive damping control module)	Read fault codes
XF	2012	I4 Diesel 2.2L engine	SUMB(Adaptive damping control module)	Erase fault codes
XF	2012	I4 Diesel 2.2L engine	SUMB(Adaptive damping control module)	Live Data
XF	2012	I4 Diesel 2.2L engine	VIM(Vehicle immobilizer control module)	ECU information
XF	2012	I4 Diesel 2.2L engine	VIM(Vehicle immobilizer control module)	Read fault codes
XF	2012	I4 Diesel 2.2L engine	VIM(Vehicle immobilizer control module)	Erase fault codes
XF	2012	I4 Diesel 2.2L engine	VIM(Vehicle immobilizer control module)	Live Data
XF	2012	I4 Diesel 2.2L engine	FSJB(Central junction box (body control module))	ECU information
XF	2012	I4 Diesel 2.2L engine	FSJB(Central junction box (body control module))	Read fault codes
XF	2012	I4 Diesel 2.2L engine	FSJB(Central junction box (body control module))	Erase fault codes
XF	2012	I4 Diesel 2.2L engine	FSJB(Central junction box (body control module))	Live Data
XF	2012	I4 Diesel 2.2L engine	RSJB(Auxiliary junction box (body control module B))	ECU information
XF	2012	I4 Diesel 2.2L engine	RSJB(Auxiliary junction box (body control module B))	Read fault codes
XF	2012	I4 Diesel 2.2L engine	RSJB(Auxiliary junction box (body control module B))	Erase fault codes
XF	2012	I4 Diesel 2.2L engine	RSJB(Auxiliary junction box (body control module B))	Live Data
XF	2012	I4 Diesel 2.2L engine	DDM(Driver's door module)	ECU information
XF	2012	I4 Diesel 2.2L engine	DDM(Driver's door module)	Read fault codes
XF	2012	I4 Diesel 2.2L engine	DDM(Driver's door module)	Erase fault codes
XF	2012	I4 Diesel 2.2L engine	DDM(Driver's door module)	Live Data
XF	2012	I4 Diesel 2.2L engine	DSM(Driver's seat module)	ECU information
XF	2012	I4 Diesel 2.2L engine	DSM(Driver's seat module)	Read fault codes
XF	2012	I4 Diesel 2.2L engine	DSM(Driver's seat module)	Erase fault codes
XF	2012	I4 Diesel 2.2L engine	DSM(Driver's seat module)	Live Data
XF	2012	I4 Diesel 2.2L engine	FCDIM(Front control/display interface module (high level display front))	ECU information
XF	2012	I4 Diesel 2.2L engine	FCDIM(Front control/display interface module (high level display front))	Read fault codes
XF	2012	I4 Diesel 2.2L engine	FCDIM(Front control/display interface module (high level display front))	Erase fault codes
XF	2012	I4 Diesel 2.2L engine	FCDIM(Front control/display interface module (high level display front))	Live Data
XF	2012	I4 Diesel 2.2L engine	FCIMB(Front controls interface module 'B' (front audio control panel))	ECU information
XF	2012	I4 Diesel 2.2L engine	FCIMB(Front controls interface module 'B' (front audio control panel))	Read fault codes
XF	2012	I4 Diesel 2.2L engine	FCIMB(Front controls interface module 'B' (front audio control panel))	Erase fault codes
XF	2012	I4 Diesel 2.2L engine	FCIMB(Front controls interface module 'B' (front audio control panel))	Live Data
XF	2012	I4 Diesel 2.2L engine	HCBM(Headlamp control module 'B')	ECU information

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XF	2012	14 Diesel 2.2L engine	HCMB(Headlamp control module 'B')	Read fault codes
XF	2012	14 Diesel 2.2L engine	HCMB(Headlamp control module 'B')	Erase fault codes
XF	2012	14 Diesel 2.2L engine	HCMB(Headlamp control module 'B')	Live Data
XF	2012	14 Diesel 2.2L engine	HVAC(Heating ventilation and air conditioning control module)	ECU information
XF	2012	14 Diesel 2.2L engine	HVAC(Heating ventilation and air conditioning control module)	Read fault codes
XF	2012	14 Diesel 2.2L engine	HVAC(Heating ventilation and air conditioning control module)	Erase fault codes
XF	2012	14 Diesel 2.2L engine	HVAC(Heating ventilation and air conditioning control module)	Live Data
XF	2012	14 Diesel 2.2L engine	PAM(Parking assist control module)	ECU information
XF	2012	14 Diesel 2.2L engine	PAM(Parking assist control module)	Read fault codes
XF	2012	14 Diesel 2.2L engine	PAM(Parking assist control module)	Erase fault codes
XF	2012	14 Diesel 2.2L engine	PAM(Parking assist control module)	Live Data
XF	2012	14 Diesel 2.2L engine	PDM(Passenger's door module)	ECU information
XF	2012	14 Diesel 2.2L engine	PDM(Passenger's door module)	Read fault codes
XF	2012	14 Diesel 2.2L engine	PDM(Passenger's door module)	Erase fault codes
XF	2012	14 Diesel 2.2L engine	PDM(Passenger's door module)	Live Data
XF	2012	14 Diesel 2.2L engine	PSM(Passenger's seat module)	ECU information
XF	2012	14 Diesel 2.2L engine	PSM(Passenger's seat module)	Read fault codes
XF	2012	14 Diesel 2.2L engine	PSM(Passenger's seat module)	Erase fault codes
XF	2012	14 Diesel 2.2L engine	PSM(Passenger's seat module)	Live Data
XF	2012	14 Diesel 2.2L engine	RFA(Keyless vehicle module)	ECU information
XF	2012	14 Diesel 2.2L engine	RFA(Keyless vehicle module)	Read fault codes
XF	2012	14 Diesel 2.2L engine	RFA(Keyless vehicle module)	Erase fault codes
XF	2012	14 Diesel 2.2L engine	RFA(Keyless vehicle module)	Live Data
XF	2012	14 Diesel 2.2L engine	SCME(Driver's climate seat module)	ECU information
XF	2012	14 Diesel 2.2L engine	SCME(Driver's climate seat module)	Read fault codes
XF	2012	14 Diesel 2.2L engine	SCME(Driver's climate seat module)	Erase fault codes
XF	2012	14 Diesel 2.2L engine	SCME(Driver's climate seat module)	Live Data
XF	2012	14 Diesel 2.2L engine	SODL(Side object detection control module - Left)	ECU information
XF	2012	14 Diesel 2.2L engine	SODL(Side object detection control module - Left)	Read fault codes
XF	2012	14 Diesel 2.2L engine	SODL(Side object detection control module - Left)	Erase fault codes
XF	2012	14 Diesel 2.2L engine	SODL(Side object detection control module - Left)	Live Data
XF	2012	14 Diesel 2.2L engine	SODR(Side object detection control module - Right)	ECU information
XF	2012	14 Diesel 2.2L engine	SODR(Side object detection control module - Right)	Read fault codes
XF	2012	14 Diesel 2.2L engine	SODR(Side object detection control module - Right)	Erase fault codes
XF	2012	14 Diesel 2.2L engine	SODR(Side object detection control module - Right)	Live Data
XF	2012	14 Diesel 2.2L engine	TPM(Tire pressure monitor module)	ECU information
XF	2012	14 Diesel 2.2L engine	TPM(Tire pressure monitor module)	Read fault codes
XF	2012	14 Diesel 2.2L engine	TPM(Tire pressure monitor module)	Erase fault codes
XF	2012	14 Diesel 2.2L engine	TPM(Tire pressure monitor module)	Live Data
XF	2012	14 Diesel 2.2L engine	AAM(Audio amplifier module)	ECU information
XF	2012	14 Diesel 2.2L engine	AAM(Audio amplifier module)	Read fault codes
XF	2012	14 Diesel 2.2L engine	AAM(Audio amplifier module)	Erase fault codes
XF	2012	14 Diesel 2.2L engine	AAM(Audio amplifier module)	Live Data
XF	2012	14 Diesel 2.2L engine	ACM(Audio front control module)	ECU information
XF	2012	14 Diesel 2.2L engine	ACM(Audio front control module)	Read fault codes
XF	2012	14 Diesel 2.2L engine	ACM(Audio front control module)	Erase fault codes
XF	2012	14 Diesel 2.2L engine	ACM(Audio front control module)	Live Data
XF	2012	14 Diesel 2.2L engine	DABM(Digital audio broadcast module)	ECU information
XF	2012	14 Diesel 2.2L engine	DABM(Digital audio broadcast module)	Read fault codes
XF	2012	14 Diesel 2.2L engine	DABM(Digital audio broadcast module)	Erase fault codes
XF	2012	14 Diesel 2.2L engine	DABM(Digital audio broadcast module)	Live Data
XF	2012	14 Diesel 2.2L engine	NCM(Navigation control module)	ECU information
XF	2012	14 Diesel 2.2L engine	NCM(Navigation control module)	Read fault codes
XF	2012	14 Diesel 2.2L engine	NCM(Navigation control module)	Erase fault codes
XF	2012	14 Diesel 2.2L engine	NCM(Navigation control module)	Live Data
XF	2012	14 Diesel 2.2L engine	SRM(Satellite audio unit module)	ECU information
XF	2012	14 Diesel 2.2L engine	SRM(Satellite audio unit module)	Read fault codes
XF	2012	14 Diesel 2.2L engine	SRM(Satellite audio unit module)	Erase fault codes
XF	2012	14 Diesel 2.2L engine	SRM(Satellite audio unit module)	Live Data
XF	2012	14 Diesel 2.2L engine	TVM(Television module)	ECU information
XF	2012	14 Diesel 2.2L engine	TVM(Television module)	Read fault codes
XF	2012	14 Diesel 2.2L engine	TVM(Television module)	Erase fault codes
XF	2012	14 Diesel 2.2L engine	TVM(Television module)	Live Data
XF	2012	14 Diesel 2.2L engine	Special Function	Manual oil reset
XF	2012	14 Diesel 2.2L engine	Special Function	Idle speed - Adjustment
XF	2012	14 Diesel 2.2L engine	Special Function	Injector replacement
XF	2012	14 Diesel 2.2L engine	Special Function	Display injector correction factors
XF	2012	14 Diesel 2.2L engine	Special Function	Throttle valve actuator replacement
XF	2012	14 Diesel 2.2L engine	Special Function	Parking brake release to service position
XF	2012	14 Diesel 2.2L engine	Special Function	Brake bleed
XF	2012	14 Diesel 2.2L engine	Special Function	Steering column calibration
XF	2012	14 Diesel 2.2L engine	Special Function	Tire pressure monitor receiver calibration
XF	2012	14 Diesel 2.2L engine	Special Function	Tire pressure sensor replacement
XF	2012	14 Diesel 2.2L engine	Special Function	Change tire size
XF	2012	14 Diesel 2.2L engine	Special Function	Diesel particulate filter differential pressure sensor replacement
XF	2012	14 Diesel 2.2L engine	Special Function	Diesel particulate filter dynamic regeneration
XF	2012	14 Diesel 2.2L engine	Special Function	Diesel particulate filter replacement
XF	2012	14 Diesel 2.2L engine	Special Function	Height calibration

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XF	2012	I4 Diesel 2.2L engine	Special Function	Headlamp control module system calibration
XF	2012	I4 Diesel 2.2L engine	Special Function	Battery replacement
XF	2012	I4 Diesel 2.2L engine	Special Function	Odometer calibration
XF	2012	I4 Diesel 2.2L engine	Special Function	Seat cushion replacement
XF	2012	I4 Diesel 2.2L engine	Special Function	Driver's seat calibration
XF	2012	I4 Diesel 2.2L engine	Special Function	Passenger's seat calibration
XF	2012	I4 Diesel 2.2L engine	Special Function	Drivers side window calibration
XF	2012	I4 Diesel 2.2L engine	Special Function	Passenger side window calibration
XF	2010-2011	V6 Diesel	PCM(Powertrain control module)	ECU information
XF	2010-2011	V6 Diesel	PCM(Powertrain control module)	Read fault codes
XF	2010-2011	V6 Diesel	PCM(Powertrain control module)	Erase fault codes
XF	2010-2011	V6 Diesel	PCM(Powertrain control module)	Live Data
XF	2010-2011	V6 Diesel	TCM(Transmission control module)	ECU information
XF	2010-2011	V6 Diesel	TCM(Transmission control module)	Read fault codes
XF	2010-2011	V6 Diesel	TCM(Transmission control module)	Erase fault codes
XF	2010-2011	V6 Diesel	TCM(Transmission control module)	Live Data
XF	2010-2011	V6 Diesel	ABS(ABS control module)	ECU information
XF	2010-2011	V6 Diesel	ABS(ABS control module)	Read fault codes
XF	2010-2011	V6 Diesel	ABS(ABS control module)	Erase fault codes
XF	2010-2011	V6 Diesel	ABS(ABS control module)	Live Data
XF	2010-2011	V6 Diesel	RCM(Restraints control module)	ECU information
XF	2010-2011	V6 Diesel	RCM(Restraints control module)	Read fault codes
XF	2010-2011	V6 Diesel	RCM(Restraints control module)	Erase fault codes
XF	2010-2011	V6 Diesel	RCM(Restraints control module)	Live Data
XF	2010-2011	V6 Diesel	IPC(Instrument cluster control module)	ECU information
XF	2010-2011	V6 Diesel	IPC(Instrument cluster control module)	Read fault codes
XF	2010-2011	V6 Diesel	IPC(Instrument cluster control module)	Erase fault codes
XF	2010-2011	V6 Diesel	IPC(Instrument cluster control module)	Live Data
XF	2010-2011	V6 Diesel	CCM(Speed control module)	ECU information
XF	2010-2011	V6 Diesel	CCM(Speed control module)	Read fault codes
XF	2010-2011	V6 Diesel	CCM(Speed control module)	Erase fault codes
XF	2010-2011	V6 Diesel	CCM(Speed control module)	Live Data
XF	2010-2011	V6 Diesel	ADCM(Adaptive damping control module)	ECU information
XF	2010-2011	V6 Diesel	ADCM(Adaptive damping control module)	Read fault codes
XF	2010-2011	V6 Diesel	ADCM(Adaptive damping control module)	Erase fault codes
XF	2010-2011	V6 Diesel	ADCM(Adaptive damping control module)	Live Data
XF	2010-2011	V6 Diesel	GSM(Gear shift module)	ECU information
XF	2010-2011	V6 Diesel	GSM(Gear shift module)	Read fault codes
XF	2010-2011	V6 Diesel	GSM(Gear shift module)	Erase fault codes
XF	2010-2011	V6 Diesel	GSM(Gear shift module)	Live Data
XF	2010-2011	V6 Diesel	HCM(Headlamp control module)	ECU information
XF	2010-2011	V6 Diesel	HCM(Headlamp control module)	Read fault codes
XF	2010-2011	V6 Diesel	HCM(Headlamp control module)	Erase fault codes
XF	2010-2011	V6 Diesel	HCM(Headlamp control module)	Live Data
XF	2010-2011	V6 Diesel	ICS(Impact classification system)	ECU information
XF	2010-2011	V6 Diesel	ICS(Impact classification system)	Read fault codes
XF	2010-2011	V6 Diesel	ICS(Impact classification system)	Erase fault codes
XF	2010-2011	V6 Diesel	ICS(Impact classification system)	Live Data
XF	2010-2011	V6 Diesel	OCS(Restraints occupant classification system module)	ECU information
XF	2010-2011	V6 Diesel	OCS(Restraints occupant classification system module)	Read fault codes
XF	2010-2011	V6 Diesel	OCS(Restraints occupant classification system module)	Erase fault codes
XF	2010-2011	V6 Diesel	OCS(Restraints occupant classification system module)	Live Data
XF	2010-2011	V6 Diesel	PBM(Parking brake control module)	ECU information
XF	2010-2011	V6 Diesel	PBM(Parking brake control module)	Read fault codes
XF	2010-2011	V6 Diesel	PBM(Parking brake control module)	Erase fault codes
XF	2010-2011	V6 Diesel	PBM(Parking brake control module)	Live Data
XF	2010-2011	V6 Diesel	VIM(Vehicle immobilizer control module)	ECU information
XF	2010-2011	V6 Diesel	VIM(Vehicle immobilizer control module)	Read fault codes
XF	2010-2011	V6 Diesel	VIM(Vehicle immobilizer control module)	Erase fault codes
XF	2010-2011	V6 Diesel	VIM(Vehicle immobilizer control module)	Live Data
XF	2010-2011	V6 Diesel	RDCM(Rear differential control module)	ECU information
XF	2010-2011	V6 Diesel	RDCM(Rear differential control module)	Read fault codes
XF	2010-2011	V6 Diesel	RDCM(Rear differential control module)	Erase fault codes
XF	2010-2011	V6 Diesel	RDCM(Rear differential control module)	Live Data
XF	2010-2011	V6 Diesel	DCSM(Driver's climate seat module)	ECU information
XF	2010-2011	V6 Diesel	DCSM(Driver's climate seat module)	Read fault codes
XF	2010-2011	V6 Diesel	DCSM(Driver's climate seat module)	Erase fault codes
XF	2010-2011	V6 Diesel	DCSM(Driver's climate seat module)	Live Data
XF	2010-2011	V6 Diesel	DDM(Driver's door module)	ECU information
XF	2010-2011	V6 Diesel	DDM(Driver's door module)	Read fault codes
XF	2010-2011	V6 Diesel	DDM(Driver's door module)	Erase fault codes
XF	2010-2011	V6 Diesel	DDM(Driver's door module)	Live Data
XF	2010-2011	V6 Diesel	DSM(Driver's seat module)	ECU information
XF	2010-2011	V6 Diesel	DSM(Driver's seat module)	Read fault codes
XF	2010-2011	V6 Diesel	DSM(Driver's seat module)	Erase fault codes
XF	2010-2011	V6 Diesel	DSM(Driver's seat module)	Live Data
XF	2010-2011	V6 Diesel	FSJB(Central junction box (body control module))	ECU information
XF	2010-2011	V6 Diesel	FSJB(Central junction box (body control module))	Read fault codes
XF	2010-2011	V6 Diesel	FSJB(Central junction box (body control module))	Erase fault codes
XF	2010-2011	V6 Diesel	FSJB(Central junction box (body control module))	Live Data
XF	2010-2011	V6 Diesel	HVAC(Heating ventilation and air conditioning control module)	ECU information
XF	2010-2011	V6 Diesel	HVAC(Heating ventilation and air conditioning control module)	Read fault codes

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XF	2010-2011	V6 Diesel	HVAC(Heating ventilation and air conditioning control module)	Erase fault codes
XF	2010-2011	V6 Diesel	HVAC(Heating ventilation and air conditioning control module)	Live Data
XF	2010-2011	V6 Diesel	ICM(Infotainment control module)	ECU information
XF	2010-2011	V6 Diesel	ICM(Infotainment control module)	Read fault codes
XF	2010-2011	V6 Diesel	ICM(Infotainment control module)	Erase fault codes
XF	2010-2011	V6 Diesel	ICM(Infotainment control module)	Live Data
XF	2010-2011	V6 Diesel	ICP(Integrated control panel)	ECU information
XF	2010-2011	V6 Diesel	ICP(Integrated control panel)	Read fault codes
XF	2010-2011	V6 Diesel	ICP(Integrated control panel)	Erase fault codes
XF	2010-2011	V6 Diesel	ICP(Integrated control panel)	Live Data
XF	2010-2011	V6 Diesel	KVM(Keyless vehicle module)	ECU information
XF	2010-2011	V6 Diesel	KVM(Keyless vehicle module)	Read fault codes
XF	2010-2011	V6 Diesel	KVM(Keyless vehicle module)	Erase fault codes
XF	2010-2011	V6 Diesel	KVM(Keyless vehicle module)	Live Data
XF	2010-2011	V6 Diesel	PAM(Parking assist control module)	ECU information
XF	2010-2011	V6 Diesel	PAM(Parking assist control module)	Read fault codes
XF	2010-2011	V6 Diesel	PAM(Parking assist control module)	Erase fault codes
XF	2010-2011	V6 Diesel	PAM(Parking assist control module)	Live Data
XF	2010-2011	V6 Diesel	PDM(Passenger's door module)	ECU information
XF	2010-2011	V6 Diesel	PDM(Passenger's door module)	Read fault codes
XF	2010-2011	V6 Diesel	PDM(Passenger's door module)	Erase fault codes
XF	2010-2011	V6 Diesel	PDM(Passenger's door module)	Live Data
XF	2010-2011	V6 Diesel	RSJB(Auxiliary junction box (body control module B))	ECU information
XF	2010-2011	V6 Diesel	RSJB(Auxiliary junction box (body control module B))	Read fault codes
XF	2010-2011	V6 Diesel	RSJB(Auxiliary junction box (body control module B))	Erase fault codes
XF	2010-2011	V6 Diesel	RSJB(Auxiliary junction box (body control module B))	Live Data
XF	2010-2011	V6 Diesel	SODL(Side object detection control module - Left)	ECU information
XF	2010-2011	V6 Diesel	SODL(Side object detection control module - Left)	Read fault codes
XF	2010-2011	V6 Diesel	SODL(Side object detection control module - Left)	Erase fault codes
XF	2010-2011	V6 Diesel	SODL(Side object detection control module - Left)	Live Data
XF	2010-2011	V6 Diesel	SODR(Side object detection control module - Right)	ECU information
XF	2010-2011	V6 Diesel	SODR(Side object detection control module - Right)	Read fault codes
XF	2010-2011	V6 Diesel	SODR(Side object detection control module - Right)	Erase fault codes
XF	2010-2011	V6 Diesel	SODR(Side object detection control module - Right)	Live Data
XF	2010-2011	V6 Diesel	TPM(Tire pressure monitor module)	ECU information
XF	2010-2011	V6 Diesel	TPM(Tire pressure monitor module)	Read fault codes
XF	2010-2011	V6 Diesel	TPM(Tire pressure monitor module)	Erase fault codes
XF	2010-2011	V6 Diesel	TPM(Tire pressure monitor module)	Live Data
XF	2010-2011	V6 Diesel	FCDIM(Front control/display interface module (high level display front))	ECU information
XF	2010-2011	V6 Diesel	FCDIM(Front control/display interface module (high level display front))	Read fault codes
XF	2010-2011	V6 Diesel	FCDIM(Front control/display interface module (high level display front))	Erase fault codes
XF	2010-2011	V6 Diesel	FCDIM(Front control/display interface module (high level display front))	Live Data
XF	2010-2011	V6 Diesel	DACMC(Digital audio control module C)	ECU information
XF	2010-2011	V6 Diesel	DACMC(Digital audio control module C)	Read fault codes
XF	2010-2011	V6 Diesel	DACMC(Digital audio control module C)	Erase fault codes
XF	2010-2011	V6 Diesel	DACMC(Digital audio control module C)	Live Data
XF	2010-2011	V6 Diesel	ACM(Audio front control module)	ECU information
XF	2010-2011	V6 Diesel	ACM(Audio front control module)	Read fault codes
XF	2010-2011	V6 Diesel	ACM(Audio front control module)	Erase fault codes
XF	2010-2011	V6 Diesel	ACM(Audio front control module)	Live Data
XF	2010-2011	V6 Diesel	AAM(Audio amplifier module)	ECU information
XF	2010-2011	V6 Diesel	AAM(Audio amplifier module)	Read fault codes
XF	2010-2011	V6 Diesel	AAM(Audio amplifier module)	Erase fault codes
XF	2010-2011	V6 Diesel	AAM(Audio amplifier module)	Live Data
XF	2010-2011	V6 Diesel	APIM(Accessory protocol interface module)	ECU information
XF	2010-2011	V6 Diesel	APIM(Accessory protocol interface module)	Read fault codes
XF	2010-2011	V6 Diesel	APIM(Accessory protocol interface module)	Erase fault codes
XF	2010-2011	V6 Diesel	APIM(Accessory protocol interface module)	Live Data
XF	2010-2011	V6 Diesel	NCM(Navigation control module)	ECU information
XF	2010-2011	V6 Diesel	NCM(Navigation control module)	Read fault codes
XF	2010-2011	V6 Diesel	NCM(Navigation control module)	Erase fault codes
XF	2010-2011	V6 Diesel	NCM(Navigation control module)	Live Data
XF	2010-2011	V6 Diesel	SRM(Satellite audio unit module)	ECU information
XF	2010-2011	V6 Diesel	SRM(Satellite audio unit module)	Read fault codes
XF	2010-2011	V6 Diesel	SRM(Satellite audio unit module)	Erase fault codes
XF	2010-2011	V6 Diesel	SRM(Satellite audio unit module)	Live Data
XF	2010-2011	V6 Diesel	TEL(Cellular telephone control module)	ECU information
XF	2010-2011	V6 Diesel	TEL(Cellular telephone control module)	Read fault codes
XF	2010-2011	V6 Diesel	TEL(Cellular telephone control module)	Erase fault codes
XF	2010-2011	V6 Diesel	TEL(Cellular telephone control module)	Live Data
XF	2010-2011	V6 Diesel	TVM(Television module)	ECU information
XF	2010-2011	V6 Diesel	TVM(Television module)	Read fault codes
XF	2010-2011	V6 Diesel	TVM(Television module)	Erase fault codes
XF	2010-2011	V6 Diesel	TVM(Television module)	Live Data

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XF	2010-2011	V6 Diesel	DABM(Digital audio broadcast module)	ECU information
XF	2010-2011	V6 Diesel	DABM(Digital audio broadcast module)	Read fault codes
XF	2010-2011	V6 Diesel	DABM(Digital audio broadcast module)	Erase fault codes
XF	2010-2011	V6 Diesel	DABM(Digital audio broadcast module)	Live Data
XF	2010-2011	V6 Diesel	FLR(Forward looking radar)	ECU information
XF	2010-2011	V6 Diesel	Special Function	Manual oil reset
XF	2010-2011	V6 Diesel	Special Function	Oil service counter reset
XF	2010-2011	V6 Diesel	Special Function	Rest of world - Service interval options
XF	2010-2011	V6 Diesel	Special Function	Injector replacement
XF	2010-2011	V6 Diesel	Special Function	Display injector correction factors
XF	2010-2011	V6 Diesel	Special Function	Throttle valve actuator replacement
XF	2010-2011	V6 Diesel	Special Function	Parking brake release to service position
XF	2010-2011	V6 Diesel	Special Function	Brake bleed
XF	2010-2011	V6 Diesel	Special Function	Steering column calibration
XF	2010-2011	V6 Diesel	Special Function	Tire pressure monitor confirmation application
XF	2010-2011	V6 Diesel	Special Function	Tire pressure monitor receiver calibration
XF	2010-2011	V6 Diesel	Special Function	Tire pressure sensor replacement
XF	2010-2011	V6 Diesel	Special Function	Diesel particulate filter dynamic regeneration
XF	2010-2011	V6 Diesel	Special Function	Diesel particulate filter replacement
XF	2010-2011	V6 Diesel	Special Function	Height calibration
XF	2010-2011	V6 Diesel	Special Function	Headlamp control module system calibration
XF	2010-2011	V6 Diesel	Special Function	Battery replacement
XF	2010-2011	V6 Diesel	Special Function	Odometer calibration
XF	2010-2011	V6 Diesel	Special Function	Seat cushion replacement
XF	2010-2011	V6 Diesel	Special Function	Driver's seat calibration
XF	2010-2011	V6 Diesel	Special Function	Drivers side window calibration
XF	2010-2011	V6 Diesel	Special Function	Passenger side window calibration
XF	2010-2011	Normally Aspirated V6	PCM(Powertrain control module)	ECU information
XF	2010-2011	Normally Aspirated V6	PCM(Powertrain control module)	Read fault codes
XF	2010-2011	Normally Aspirated V6	PCM(Powertrain control module)	Erase fault codes
XF	2010-2011	Normally Aspirated V6	PCM(Powertrain control module)	Live Data
XF	2010-2011	Normally Aspirated V6	TCM(Transmission control module)	ECU information
XF	2010-2011	Normally Aspirated V6	TCM(Transmission control module)	Read fault codes
XF	2010-2011	Normally Aspirated V6	TCM(Transmission control module)	Erase fault codes
XF	2010-2011	Normally Aspirated V6	TCM(Transmission control module)	Live Data
XF	2010-2011	Normally Aspirated V6	ABS(ABS control module)	ECU information
XF	2010-2011	Normally Aspirated V6	ABS(ABS control module)	Read fault codes
XF	2010-2011	Normally Aspirated V6	ABS(ABS control module)	Erase fault codes
XF	2010-2011	Normally Aspirated V6	ABS(ABS control module)	Live Data
XF	2010-2011	Normally Aspirated V6	RCM(Restraints control module)	ECU information
XF	2010-2011	Normally Aspirated V6	RCM(Restraints control module)	Read fault codes
XF	2010-2011	Normally Aspirated V6	RCM(Restraints control module)	Erase fault codes
XF	2010-2011	Normally Aspirated V6	RCM(Restraints control module)	Live Data
XF	2010-2011	Normally Aspirated V6	IPC(Instrument cluster control module)	ECU information
XF	2010-2011	Normally Aspirated V6	IPC(Instrument cluster control module)	Read fault codes
XF	2010-2011	Normally Aspirated V6	IPC(Instrument cluster control module)	Erase fault codes
XF	2010-2011	Normally Aspirated V6	IPC(Instrument cluster control module)	Live Data
XF	2010-2011	Normally Aspirated V6	CCM(Speed control module)	ECU information
XF	2010-2011	Normally Aspirated V6	CCM(Speed control module)	Read fault codes
XF	2010-2011	Normally Aspirated V6	CCM(Speed control module)	Erase fault codes
XF	2010-2011	Normally Aspirated V6	CCM(Speed control module)	Live Data
XF	2010-2011	Normally Aspirated V6	ADCM(Adaptive damping control module)	ECU information
XF	2010-2011	Normally Aspirated V6	ADCM(Adaptive damping control module)	Read fault codes
XF	2010-2011	Normally Aspirated V6	ADCM(Adaptive damping control module)	Erase fault codes
XF	2010-2011	Normally Aspirated V6	ADCM(Adaptive damping control module)	Live Data
XF	2010-2011	Normally Aspirated V6	GSM(Gear shift module)	ECU information
XF	2010-2011	Normally Aspirated V6	GSM(Gear shift module)	Read fault codes
XF	2010-2011	Normally Aspirated V6	GSM(Gear shift module)	Erase fault codes
XF	2010-2011	Normally Aspirated V6	GSM(Gear shift module)	Live Data
XF	2010-2011	Normally Aspirated V6	HCM(Headlamp control module)	ECU information
XF	2010-2011	Normally Aspirated V6	HCM(Headlamp control module)	Read fault codes
XF	2010-2011	Normally Aspirated V6	HCM(Headlamp control module)	Erase fault codes
XF	2010-2011	Normally Aspirated V6	HCM(Headlamp control module)	Live Data
XF	2010-2011	Normally Aspirated V6	ICS(Impact classification system)	ECU information
XF	2010-2011	Normally Aspirated V6	ICS(Impact classification system)	Read fault codes
XF	2010-2011	Normally Aspirated V6	ICS(Impact classification system)	Erase fault codes
XF	2010-2011	Normally Aspirated V6	ICS(Impact classification system)	Live Data
XF	2010-2011	Normally Aspirated V6	OCS(Restraints occupant classification system module)	ECU information
XF	2010-2011	Normally Aspirated V6	OCS(Restraints occupant classification system module)	Read fault codes
XF	2010-2011	Normally Aspirated V6	OCS(Restraints occupant classification system module)	Erase fault codes
XF	2010-2011	Normally Aspirated V6	OCS(Restraints occupant classification system module)	Live Data
XF	2010-2011	Normally Aspirated V6	PBM(Parking brake control module)	ECU information
XF	2010-2011	Normally Aspirated V6	PBM(Parking brake control module)	Read fault codes
XF	2010-2011	Normally Aspirated V6	PBM(Parking brake control module)	Erase fault codes
XF	2010-2011	Normally Aspirated V6	PBM(Parking brake control module)	Live Data
XF	2010-2011	Normally Aspirated V6	VIM(Vehicle immobilizer control module)	ECU information
XF	2010-2011	Normally Aspirated V6	VIM(Vehicle immobilizer control module)	Read fault codes
XF	2010-2011	Normally Aspirated V6	VIM(Vehicle immobilizer control module)	Erase fault codes
XF	2010-2011	Normally Aspirated V6	VIM(Vehicle immobilizer control module)	Live Data
XF	2010-2011	Normally Aspirated V6	RDCM(Rear differential control module)	ECU information
XF	2010-2011	Normally Aspirated V6	RDCM(Rear differential control module)	Read fault codes
XF	2010-2011	Normally Aspirated V6	RDCM(Rear differential control module)	Erase fault codes
XF	2010-2011	Normally Aspirated V6	RDCM(Rear differential control module)	Live Data
XF	2010-2011	Normally Aspirated V6	DCSM(Driver's climate seat module)	ECU information
XF	2010-2011	Normally Aspirated V6	DCSM(Driver's climate seat module)	Read fault codes
XF	2010-2011	Normally Aspirated V6	DCSM(Driver's climate seat module)	Erase fault codes



## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XF	2010-2011	Normally Aspirated V6	DSCM(Driver's climate seat module)	Live Data
XF	2010-2011	Normally Aspirated V6	DDM(Driver's door module)	ECU information
XF	2010-2011	Normally Aspirated V6	DDM(Driver's door module)	Read fault codes
XF	2010-2011	Normally Aspirated V6	DDM(Driver's door module)	Erase fault codes
XF	2010-2011	Normally Aspirated V6	DDM(Driver's door module)	Live Data
XF	2010-2011	Normally Aspirated V6	DSM(Driver's seat module)	ECU information
XF	2010-2011	Normally Aspirated V6	DSM(Driver's seat module)	Read fault codes
XF	2010-2011	Normally Aspirated V6	DSM(Driver's seat module)	Erase fault codes
XF	2010-2011	Normally Aspirated V6	DSM(Driver's seat module)	Live Data
XF	2010-2011	Normally Aspirated V6	FSJB(Central junction box (body control module))	ECU information
XF	2010-2011	Normally Aspirated V6	FSJB(Central junction box (body control module))	Read fault codes
XF	2010-2011	Normally Aspirated V6	FSJB(Central junction box (body control module))	Erase fault codes
XF	2010-2011	Normally Aspirated V6	FSJB(Central junction box (body control module))	Live Data
XF	2010-2011	Normally Aspirated V6	HVAC(Heating ventilation and air conditioning control module)	ECU information
XF	2010-2011	Normally Aspirated V6	HVAC(Heating ventilation and air conditioning control module)	Read fault codes
XF	2010-2011	Normally Aspirated V6	HVAC(Heating ventilation and air conditioning control module)	Erase fault codes
XF	2010-2011	Normally Aspirated V6	HVAC(Heating ventilation and air conditioning control module)	Live Data
XF	2010-2011	Normally Aspirated V6	ICM(Infotainment control module)	ECU information
XF	2010-2011	Normally Aspirated V6	ICM(Infotainment control module)	Read fault codes
XF	2010-2011	Normally Aspirated V6	ICM(Infotainment control module)	Erase fault codes
XF	2010-2011	Normally Aspirated V6	ICM(Infotainment control module)	Live Data
XF	2010-2011	Normally Aspirated V6	ICP(Integrated control panel)	ECU information
XF	2010-2011	Normally Aspirated V6	ICP(Integrated control panel)	Read fault codes
XF	2010-2011	Normally Aspirated V6	ICP(Integrated control panel)	Erase fault codes
XF	2010-2011	Normally Aspirated V6	ICP(Integrated control panel)	Live Data
XF	2010-2011	Normally Aspirated V6	KVM(Keyless vehicle module)	ECU information
XF	2010-2011	Normally Aspirated V6	KVM(Keyless vehicle module)	Read fault codes
XF	2010-2011	Normally Aspirated V6	KVM(Keyless vehicle module)	Erase fault codes
XF	2010-2011	Normally Aspirated V6	KVM(Keyless vehicle module)	Live Data
XF	2010-2011	Normally Aspirated V6	PAM(Parking assist control module)	ECU information
XF	2010-2011	Normally Aspirated V6	PAM(Parking assist control module)	Read fault codes
XF	2010-2011	Normally Aspirated V6	PAM(Parking assist control module)	Erase fault codes
XF	2010-2011	Normally Aspirated V6	PAM(Parking assist control module)	Live Data
XF	2010-2011	Normally Aspirated V6	PDM(Passenger's door module)	ECU information
XF	2010-2011	Normally Aspirated V6	PDM(Passenger's door module)	Read fault codes
XF	2010-2011	Normally Aspirated V6	PDM(Passenger's door module)	Erase fault codes
XF	2010-2011	Normally Aspirated V6	PDM(Passenger's door module)	Live Data
XF	2010-2011	Normally Aspirated V6	RSJB(Auxiliary junction box (body control module B))	ECU information
XF	2010-2011	Normally Aspirated V6	RSJB(Auxiliary junction box (body control module B))	Read fault codes
XF	2010-2011	Normally Aspirated V6	RSJB(Auxiliary junction box (body control module B))	Erase fault codes
XF	2010-2011	Normally Aspirated V6	RSJB(Auxiliary junction box (body control module B))	Live Data
XF	2010-2011	Normally Aspirated V6	SODL(Side object detection control module - Left)	ECU information
XF	2010-2011	Normally Aspirated V6	SODL(Side object detection control module - Left)	Read fault codes
XF	2010-2011	Normally Aspirated V6	SODL(Side object detection control module - Left)	Erase fault codes
XF	2010-2011	Normally Aspirated V6	SODL(Side object detection control module - Left)	Live Data
XF	2010-2011	Normally Aspirated V6	SODR(Side object detection control module - Right)	ECU information
XF	2010-2011	Normally Aspirated V6	SODR(Side object detection control module - Right)	Read fault codes
XF	2010-2011	Normally Aspirated V6	SODR(Side object detection control module - Right)	Erase fault codes
XF	2010-2011	Normally Aspirated V6	SODR(Side object detection control module - Right)	Live Data
XF	2010-2011	Normally Aspirated V6	TPM(Tire pressure monitor module)	ECU information
XF	2010-2011	Normally Aspirated V6	TPM(Tire pressure monitor module)	Read fault codes
XF	2010-2011	Normally Aspirated V6	TPM(Tire pressure monitor module)	Erase fault codes
XF	2010-2011	Normally Aspirated V6	TPM(Tire pressure monitor module)	Live Data
XF	2010-2011	Normally Aspirated V6	FCDIM(Front control/display interface module (high level display front))	ECU information
XF	2010-2011	Normally Aspirated V6	FCDIM(Front control/display interface module (high level display front))	Read fault codes
XF	2010-2011	Normally Aspirated V6	FCDIM(Front control/display interface module (high level display front))	Erase fault codes
XF	2010-2011	Normally Aspirated V6	FCDIM(Front control/display interface module (high level display front))	Live Data
XF	2010-2011	Normally Aspirated V6	DACMC(Digital audio control module C)	ECU information
XF	2010-2011	Normally Aspirated V6	DACMC(Digital audio control module C)	Read fault codes
XF	2010-2011	Normally Aspirated V6	DACMC(Digital audio control module C)	Erase fault codes
XF	2010-2011	Normally Aspirated V6	DACMC(Digital audio control module C)	Live Data
XF	2010-2011	Normally Aspirated V6	ACM(Audio front control module)	ECU information
XF	2010-2011	Normally Aspirated V6	ACM(Audio front control module)	Read fault codes
XF	2010-2011	Normally Aspirated V6	ACM(Audio front control module)	Erase fault codes
XF	2010-2011	Normally Aspirated V6	ACM(Audio front control module)	Live Data
XF	2010-2011	Normally Aspirated V6	AAM(Audio amplifier module)	ECU information
XF	2010-2011	Normally Aspirated V6	AAM(Audio amplifier module)	Read fault codes

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XF	2010-2011	Normally Aspirated V6	AAM(Audio amplifier module)	Erase fault codes
XF	2010-2011	Normally Aspirated V6	AAM(Audio amplifier module)	Live Data
XF	2010-2011	Normally Aspirated V6	APIM(Accessory protocol interface module)	ECU information
XF	2010-2011	Normally Aspirated V6	APIM(Accessory protocol interface module)	Read fault codes
XF	2010-2011	Normally Aspirated V6	APIM(Accessory protocol interface module)	Erase fault codes
XF	2010-2011	Normally Aspirated V6	APIM(Accessory protocol interface module)	Live Data
XF	2010-2011	Normally Aspirated V6	NCM(Navigation control module)	ECU information
XF	2010-2011	Normally Aspirated V6	NCM(Navigation control module)	Read fault codes
XF	2010-2011	Normally Aspirated V6	NCM(Navigation control module)	Erase fault codes
XF	2010-2011	Normally Aspirated V6	NCM(Navigation control module)	Live Data
XF	2010-2011	Normally Aspirated V6	SRM(Satellite audio unit module)	ECU information
XF	2010-2011	Normally Aspirated V6	SRM(Satellite audio unit module)	Read fault codes
XF	2010-2011	Normally Aspirated V6	SRM(Satellite audio unit module)	Erase fault codes
XF	2010-2011	Normally Aspirated V6	SRM(Satellite audio unit module)	Live Data
XF	2010-2011	Normally Aspirated V6	TEL(Cellular telephone control module)	ECU information
XF	2010-2011	Normally Aspirated V6	TEL(Cellular telephone control module)	Read fault codes
XF	2010-2011	Normally Aspirated V6	TEL(Cellular telephone control module)	Erase fault codes
XF	2010-2011	Normally Aspirated V6	TEL(Cellular telephone control module)	Live Data
XF	2010-2011	Normally Aspirated V6	TVM(Television module)	ECU information
XF	2010-2011	Normally Aspirated V6	TVM(Television module)	Read fault codes
XF	2010-2011	Normally Aspirated V6	TVM(Television module)	Erase fault codes
XF	2010-2011	Normally Aspirated V6	TVM(Television module)	Live Data
XF	2010-2011	Normally Aspirated V6	DABM(Digital audio broadcast module)	ECU information
XF	2010-2011	Normally Aspirated V6	DABM(Digital audio broadcast module)	Read fault codes
XF	2010-2011	Normally Aspirated V6	DABM(Digital audio broadcast module)	Erase fault codes
XF	2010-2011	Normally Aspirated V6	DABM(Digital audio broadcast module)	Live Data
XF	2010-2011	Normally Aspirated V6	FLR(Forward looking radar)	ECU information
XF	2010-2011	Normally Aspirated V6	Special Function	Manual oil reset
XF	2010-2011	Normally Aspirated V6	Special Function	Oil service counter reset
XF	2010-2011	Normally Aspirated V6	Special Function	Idle speed test
XF	2010-2011	Normally Aspirated V6	Special Function	Injector replacement
XF	2010-2011	Normally Aspirated V6	Special Function	Throttle valve actuator replacement
XF	2010-2011	Normally Aspirated V6	Special Function	Parking brake release to service position
XF	2010-2011	Normally Aspirated V6	Special Function	Brake bleed
XF	2010-2011	Normally Aspirated V6	Special Function	Steering column calibration
XF	2010-2011	Normally Aspirated V6	Special Function	Tire pressure monitor confirmation application
XF	2010-2011	Normally Aspirated V6	Special Function	Tire pressure monitor receiver calibration
XF	2010-2011	Normally Aspirated V6	Special Function	Tire pressure sensor replacement
XF	2010-2011	Normally Aspirated V6	Special Function	Height calibration
XF	2010-2011	Normally Aspirated V6	Special Function	Headlamp control module system calibration
XF	2010-2011	Normally Aspirated V6	Special Function	Battery replacement
XF	2010-2011	Normally Aspirated V6	Special Function	Odometer calibration
XF	2010-2011	Normally Aspirated V6	Special Function	Seat cushion replacement
XF	2010-2011	Normally Aspirated V6	Special Function	Driver's seat calibration
XF	2010-2011	Normally Aspirated V6	Special Function	Drivers side window calibration
XF	2010-2011	Normally Aspirated V6	Special Function	Passenger side window calibration
XF	2010-2011	Normally Aspirated V8 4.2L	PCM(Powertrain control module)	ECU information
XF	2010-2011	Normally Aspirated V8 4.2L	PCM(Powertrain control module)	Read fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	PCM(Powertrain control module)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	PCM(Powertrain control module)	Live Data
XF	2010-2011	Normally Aspirated V8 4.2L	TCM(Transmission control module)	ECU information
XF	2010-2011	Normally Aspirated V8 4.2L	TCM(Transmission control module)	Read fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	TCM(Transmission control module)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	TCM(Transmission control module)	Live Data
XF	2010-2011	Normally Aspirated V8 4.2L	ABS(ABS control module)	ECU information
XF	2010-2011	Normally Aspirated V8 4.2L	ABS(ABS control module)	Read fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	ABS(ABS control module)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	ABS(ABS control module)	Live Data
XF	2010-2011	Normally Aspirated V8 4.2L	RCM(Restraints control module)	ECU information
XF	2010-2011	Normally Aspirated V8 4.2L	RCM(Restraints control module)	Read fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	RCM(Restraints control module)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	RCM(Restraints control module)	Live Data
XF	2010-2011	Normally Aspirated V8 4.2L	IPC(Instrument cluster control module)	ECU information
XF	2010-2011	Normally Aspirated V8 4.2L	IPC(Instrument cluster control module)	Read fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	IPC(Instrument cluster control module)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	IPC(Instrument cluster control module)	Live Data
XF	2010-2011	Normally Aspirated V8 4.2L	CCM(Speed control module)	ECU information
XF	2010-2011	Normally Aspirated V8 4.2L	CCM(Speed control module)	Read fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	CCM(Speed control module)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	CCM(Speed control module)	Live Data
XF	2010-2011	Normally Aspirated V8 4.2L	ADCM(Adaptive damping control module)	ECU information
XF	2010-2011	Normally Aspirated V8 4.2L	ADCM(Adaptive damping control module)	Read fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	ADCM(Adaptive damping control module)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	ADCM(Adaptive damping control module)	Live Data
XF	2010-2011	Normally Aspirated V8 4.2L	GSM(Gear shift module)	ECU information
XF	2010-2011	Normally Aspirated V8 4.2L	GSM(Gear shift module)	Read fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	GSM(Gear shift module)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	GSM(Gear shift module)	Live Data
XF	2010-2011	Normally Aspirated V8 4.2L	HCM(Headlamp control module)	ECU information
XF	2010-2011	Normally Aspirated V8 4.2L	HCM(Headlamp control module)	Read fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	HCM(Headlamp control module)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	HCM(Headlamp control module)	Live Data
XF	2010-2011	Normally Aspirated V8 4.2L	ICS(Impact classification system)	ECU information
XF	2010-2011	Normally Aspirated V8 4.2L	ICS(Impact classification system)	Read fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	ICS(Impact classification system)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	ICS(Impact classification system)	Live Data
XF	2010-2011	Normally Aspirated V8 4.2L	OCS(Restraints occupant classification system module)	ECU information
XF	2010-2011	Normally Aspirated V8 4.2L	OCS(Restraints occupant classification system module)	Read fault codes

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XF	2010-2011	Normally Aspirated V8 4.2L	OCS(Restraints occupant classification system module)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	OCS(Restraints occupant classification system module)	Live Data
XF	2010-2011	Normally Aspirated V8 4.2L	PBM(Parking brake control module)	ECU information
XF	2010-2011	Normally Aspirated V8 4.2L	PBM(Parking brake control module)	Read fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	PBM(Parking brake control module)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	PBM(Parking brake control module)	Live Data
XF	2010-2011	Normally Aspirated V8 4.2L	VIM(Vehicle immobilizer control module)	ECU information
XF	2010-2011	Normally Aspirated V8 4.2L	VIM(Vehicle immobilizer control module)	Read fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	VIM(Vehicle immobilizer control module)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	VIM(Vehicle immobilizer control module)	Live Data
XF	2010-2011	Normally Aspirated V8 4.2L	RDCM(Rear differential control module)	ECU information
XF	2010-2011	Normally Aspirated V8 4.2L	RDCM(Rear differential control module)	Read fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	RDCM(Rear differential control module)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	RDCM(Rear differential control module)	Live Data
XF	2010-2011	Normally Aspirated V8 4.2L	DCSM(Driver's climate seat module)	ECU information
XF	2010-2011	Normally Aspirated V8 4.2L	DCSM(Driver's climate seat module)	Read fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	DCSM(Driver's climate seat module)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	DCSM(Driver's climate seat module)	Live Data
XF	2010-2011	Normally Aspirated V8 4.2L	DDM(Driver's door module)	ECU information
XF	2010-2011	Normally Aspirated V8 4.2L	DDM(Driver's door module)	Read fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	DDM(Driver's door module)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	DDM(Driver's door module)	Live Data
XF	2010-2011	Normally Aspirated V8 4.2L	DSM(Driver's seat module)	ECU information
XF	2010-2011	Normally Aspirated V8 4.2L	DSM(Driver's seat module)	Read fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	DSM(Driver's seat module)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	DSM(Driver's seat module)	Live Data
XF	2010-2011	Normally Aspirated V8 4.2L	FSJB(Central junction box (body control module))	ECU information
XF	2010-2011	Normally Aspirated V8 4.2L	FSJB(Central junction box (body control module))	Read fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	FSJB(Central junction box (body control module))	Erase fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	FSJB(Central junction box (body control module))	Live Data
XF	2010-2011	Normally Aspirated V8 4.2L	HVAC(Heating ventilation and air conditioning control module)	ECU information
XF	2010-2011	Normally Aspirated V8 4.2L	HVAC(Heating ventilation and air conditioning control module)	Read fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	HVAC(Heating ventilation and air conditioning control module)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	HVAC(Heating ventilation and air conditioning control module)	Live Data
XF	2010-2011	Normally Aspirated V8 4.2L	ICM(Infotainment control module)	ECU information
XF	2010-2011	Normally Aspirated V8 4.2L	ICM(Infotainment control module)	Read fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	ICM(Infotainment control module)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	ICM(Infotainment control module)	Live Data
XF	2010-2011	Normally Aspirated V8 4.2L	ICP(Integrated control panel)	ECU information
XF	2010-2011	Normally Aspirated V8 4.2L	ICP(Integrated control panel)	Read fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	ICP(Integrated control panel)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	ICP(Integrated control panel)	Live Data
XF	2010-2011	Normally Aspirated V8 4.2L	KVM(Keyless vehicle module)	ECU information
XF	2010-2011	Normally Aspirated V8 4.2L	KVM(Keyless vehicle module)	Read fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	KVM(Keyless vehicle module)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	KVM(Keyless vehicle module)	Live Data
XF	2010-2011	Normally Aspirated V8 4.2L	PAM(Parking assist control module)	ECU information
XF	2010-2011	Normally Aspirated V8 4.2L	PAM(Parking assist control module)	Read fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	PAM(Parking assist control module)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	PAM(Parking assist control module)	Live Data
XF	2010-2011	Normally Aspirated V8 4.2L	PDM(Passenger's door module)	ECU information
XF	2010-2011	Normally Aspirated V8 4.2L	PDM(Passenger's door module)	Read fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	PDM(Passenger's door module)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	PDM(Passenger's door module)	Live Data
XF	2010-2011	Normally Aspirated V8 4.2L	RSJB(Auxiliary junction box (body control module B))	ECU information
XF	2010-2011	Normally Aspirated V8 4.2L	RSJB(Auxiliary junction box (body control module B))	Read fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	RSJB(Auxiliary junction box (body control module B))	Erase fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	RSJB(Auxiliary junction box (body control module B))	Live Data
XF	2010-2011	Normally Aspirated V8 4.2L	SODL(Side object detection control module - Left)	ECU information
XF	2010-2011	Normally Aspirated V8 4.2L	SODL(Side object detection control module - Left)	Read fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	SODL(Side object detection control module - Left)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	SODL(Side object detection control module - Left)	Live Data
XF	2010-2011	Normally Aspirated V8 4.2L	SODR(Side object detection control module - Right)	ECU information
XF	2010-2011	Normally Aspirated V8 4.2L	SODR(Side object detection control module - Right)	Read fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	SODR(Side object detection control module - Right)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	SODR(Side object detection control module - Right)	Live Data
XF	2010-2011	Normally Aspirated V8 4.2L	TPM(Tire pressure monitor module)	ECU information
XF	2010-2011	Normally Aspirated V8 4.2L	TPM(Tire pressure monitor module)	Read fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	TPM(Tire pressure monitor module)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	TPM(Tire pressure monitor module)	Live Data

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XF	2010-2011	Normally Aspirated V8 4.2L	FCDIM(Front control/display interface module (high level display front))	ECU information
XF	2010-2011	Normally Aspirated V8 4.2L	FCDIM(Front control/display interface module (high level display front))	Read fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	FCDIM(Front control/display interface module (high level display front))	Erase fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	FCDIM(Front control/display interface module (high level display front))	Live Data
XF	2010-2011	Normally Aspirated V8 4.2L	DACMC(Digital audio control module C)	ECU information
XF	2010-2011	Normally Aspirated V8 4.2L	DACMC(Digital audio control module C)	Read fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	DACMC(Digital audio control module C)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	DACMC(Digital audio control module C)	Live Data
XF	2010-2011	Normally Aspirated V8 4.2L	ACM(Audio front control module)	ECU information
XF	2010-2011	Normally Aspirated V8 4.2L	ACM(Audio front control module)	Read fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	ACM(Audio front control module)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	ACM(Audio front control module)	Live Data
XF	2010-2011	Normally Aspirated V8 4.2L	AAM(Audio amplifier module)	ECU information
XF	2010-2011	Normally Aspirated V8 4.2L	AAM(Audio amplifier module)	Read fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	AAM(Audio amplifier module)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	AAM(Audio amplifier module)	Live Data
XF	2010-2011	Normally Aspirated V8 4.2L	APIM(Accessory protocol interface module)	ECU information
XF	2010-2011	Normally Aspirated V8 4.2L	APIM(Accessory protocol interface module)	Read fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	APIM(Accessory protocol interface module)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	APIM(Accessory protocol interface module)	Live Data
XF	2010-2011	Normally Aspirated V8 4.2L	NCM(Navigation control module)	ECU information
XF	2010-2011	Normally Aspirated V8 4.2L	NCM(Navigation control module)	Read fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	NCM(Navigation control module)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	NCM(Navigation control module)	Live Data
XF	2010-2011	Normally Aspirated V8 4.2L	SRM(Satellite audio unit module)	ECU information
XF	2010-2011	Normally Aspirated V8 4.2L	SRM(Satellite audio unit module)	Read fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	SRM(Satellite audio unit module)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	SRM(Satellite audio unit module)	Live Data
XF	2010-2011	Normally Aspirated V8 4.2L	TEL(Cellular telephone control module)	ECU information
XF	2010-2011	Normally Aspirated V8 4.2L	TEL(Cellular telephone control module)	Read fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	TEL(Cellular telephone control module)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	TEL(Cellular telephone control module)	Live Data
XF	2010-2011	Normally Aspirated V8 4.2L	TVM(Television module)	ECU information
XF	2010-2011	Normally Aspirated V8 4.2L	TVM(Television module)	Read fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	TVM(Television module)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	TVM(Television module)	Live Data
XF	2010-2011	Normally Aspirated V8 4.2L	DABM(Digital audio broadcast module)	ECU information
XF	2010-2011	Normally Aspirated V8 4.2L	DABM(Digital audio broadcast module)	Read fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	DABM(Digital audio broadcast module)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 4.2L	DABM(Digital audio broadcast module)	Live Data
XF	2010-2011	Normally Aspirated V8 4.2L	FLR(Forward looking radar)	ECU information
XF	2010-2011	Normally Aspirated V8 4.2L	Special Function	Manual oil reset
XF	2010-2011	Normally Aspirated V8 4.2L	Special Function	Oil service counter reset
XF	2010-2011	Normally Aspirated V8 4.2L	Special Function	Idle speed test
XF	2010-2011	Normally Aspirated V8 4.2L	Special Function	Injector replacement
XF	2010-2011	Normally Aspirated V8 4.2L	Special Function	Throttle valve actuator replacement
XF	2010-2011	Normally Aspirated V8 4.2L	Special Function	Parking brake release to service position
XF	2010-2011	Normally Aspirated V8 4.2L	Special Function	Brake bleed
XF	2010-2011	Normally Aspirated V8 4.2L	Special Function	Steering column calibration
XF	2010-2011	Normally Aspirated V8 4.2L	Special Function	Tire pressure monitor confirmation application
XF	2010-2011	Normally Aspirated V8 4.2L	Special Function	Tire pressure monitor receiver calibration
XF	2010-2011	Normally Aspirated V8 4.2L	Special Function	Tire pressure sensor replacement
XF	2010-2011	Normally Aspirated V8 4.2L	Special Function	Height calibration
XF	2010-2011	Normally Aspirated V8 4.2L	Special Function	Headlamp control module system calibration
XF	2010-2011	Normally Aspirated V8 4.2L	Special Function	Battery replacement
XF	2010-2011	Normally Aspirated V8 4.2L	Special Function	Odometer calibration
XF	2010-2011	Normally Aspirated V8 4.2L	Special Function	Seat cushion replacement
XF	2010-2011	Normally Aspirated V8 4.2L	Special Function	Driver's seat calibration
XF	2010-2011	Normally Aspirated V8 4.2L	Special Function	Drivers side window calibration
XF	2010-2011	Normally Aspirated V8 4.2L	Special Function	Passenger side window calibration
XF	2010-2011	Normally Aspirated V8 5.0L	PCM(Powertrain control module)	ECU information
XF	2010-2011	Normally Aspirated V8 5.0L	PCM(Powertrain control module)	Read fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	PCM(Powertrain control module)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	PCM(Powertrain control module)	Live Data
XF	2010-2011	Normally Aspirated V8 5.0L	TCM(Transmission control module)	ECU information
XF	2010-2011	Normally Aspirated V8 5.0L	TCM(Transmission control module)	Read fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	TCM(Transmission control module)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	TCM(Transmission control module)	Live Data
XF	2010-2011	Normally Aspirated V8 5.0L	ABS(ABS control module)	ECU information
XF	2010-2011	Normally Aspirated V8 5.0L	ABS(ABS control module)	Read fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	ABS(ABS control module)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	ABS(ABS control module)	Live Data
XF	2010-2011	Normally Aspirated V8 5.0L	RCM(Restraints control module)	ECU information
XF	2010-2011	Normally Aspirated V8 5.0L	RCM(Restraints control module)	Read fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	RCM(Restraints control module)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	RCM(Restraints control module)	Live Data
XF	2010-2011	Normally Aspirated V8 5.0L	IPC(Instrument cluster control module)	ECU information
XF	2010-2011	Normally Aspirated V8 5.0L	IPC(Instrument cluster control module)	Read fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	IPC(Instrument cluster control module)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	IPC(Instrument cluster control module)	Live Data
XF	2010-2011	Normally Aspirated V8 5.0L	CCM(Speed control module)	ECU information
XF	2010-2011	Normally Aspirated V8 5.0L	CCM(Speed control module)	Read fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	CCM(Speed control module)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	CCM(Speed control module)	Live Data
XF	2010-2011	Normally Aspirated V8 5.0L	ADCM(Adaptive damping control module)	ECU information
XF	2010-2011	Normally Aspirated V8 5.0L	ADCM(Adaptive damping control module)	Read fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	ADCM(Adaptive damping control module)	Erase fault codes

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XF	2010-2011	Normally Aspirated V8 5.0L	ADCM(Adaptive damping control module)	Live Data
XF	2010-2011	Normally Aspirated V8 5.0L	GSM(Gear shift module)	ECU information
XF	2010-2011	Normally Aspirated V8 5.0L	GSM(Gear shift module)	Read fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	GSM(Gear shift module)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	GSM(Gear shift module)	Live Data
XF	2010-2011	Normally Aspirated V8 5.0L	HCM(Headlamp control module)	ECU information
XF	2010-2011	Normally Aspirated V8 5.0L	HCM(Headlamp control module)	Read fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	HCM(Headlamp control module)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	HCM(Headlamp control module)	Live Data
XF	2010-2011	Normally Aspirated V8 5.0L	ICS(Impact classification system)	ECU information
XF	2010-2011	Normally Aspirated V8 5.0L	ICS(Impact classification system)	Read fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	ICS(Impact classification system)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	ICS(Impact classification system)	Live Data
XF	2010-2011	Normally Aspirated V8 5.0L	OCS(Restraints occupant classification system module)	ECU information
XF	2010-2011	Normally Aspirated V8 5.0L	OCS(Restraints occupant classification system module)	Read fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	OCS(Restraints occupant classification system module)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	OCS(Restraints occupant classification system module)	Live Data
XF	2010-2011	Normally Aspirated V8 5.0L	PBM(Parking brake control module)	ECU information
XF	2010-2011	Normally Aspirated V8 5.0L	PBM(Parking brake control module)	Read fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	PBM(Parking brake control module)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	PBM(Parking brake control module)	Live Data
XF	2010-2011	Normally Aspirated V8 5.0L	VIM(Vehicle immobilizer control module)	ECU information
XF	2010-2011	Normally Aspirated V8 5.0L	VIM(Vehicle immobilizer control module)	Read fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	VIM(Vehicle immobilizer control module)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	VIM(Vehicle immobilizer control module)	Live Data
XF	2010-2011	Normally Aspirated V8 5.0L	RDCM(Rear differential control module)	ECU information
XF	2010-2011	Normally Aspirated V8 5.0L	RDCM(Rear differential control module)	Read fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	RDCM(Rear differential control module)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	RDCM(Rear differential control module)	Live Data
XF	2010-2011	Normally Aspirated V8 5.0L	DCSM(Driver's climate seat module)	ECU information
XF	2010-2011	Normally Aspirated V8 5.0L	DCSM(Driver's climate seat module)	Read fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	DCSM(Driver's climate seat module)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	DCSM(Driver's climate seat module)	Live Data
XF	2010-2011	Normally Aspirated V8 5.0L	DDM(Driver's door module)	ECU information
XF	2010-2011	Normally Aspirated V8 5.0L	DDM(Driver's door module)	Read fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	DDM(Driver's door module)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	DDM(Driver's door module)	Live Data
XF	2010-2011	Normally Aspirated V8 5.0L	DSM(Driver's seat module)	ECU information
XF	2010-2011	Normally Aspirated V8 5.0L	DSM(Driver's seat module)	Read fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	DSM(Driver's seat module)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	DSM(Driver's seat module)	Live Data
XF	2010-2011	Normally Aspirated V8 5.0L	FSJB(Central junction box (body control module))	ECU information
XF	2010-2011	Normally Aspirated V8 5.0L	FSJB(Central junction box (body control module))	Read fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	FSJB(Central junction box (body control module))	Erase fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	FSJB(Central junction box (body control module))	Live Data
XF	2010-2011	Normally Aspirated V8 5.0L	HVAC(Heating ventilation and air conditioning control module)	ECU information
XF	2010-2011	Normally Aspirated V8 5.0L	HVAC(Heating ventilation and air conditioning control module)	Read fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	HVAC(Heating ventilation and air conditioning control module)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	HVAC(Heating ventilation and air conditioning control module)	Live Data
XF	2010-2011	Normally Aspirated V8 5.0L	ICM(Infotainment control module)	ECU information
XF	2010-2011	Normally Aspirated V8 5.0L	ICM(Infotainment control module)	Read fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	ICM(Infotainment control module)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	ICM(Infotainment control module)	Live Data
XF	2010-2011	Normally Aspirated V8 5.0L	ICP(Integrated control panel)	ECU information
XF	2010-2011	Normally Aspirated V8 5.0L	ICP(Integrated control panel)	Read fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	ICP(Integrated control panel)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	ICP(Integrated control panel)	Live Data
XF	2010-2011	Normally Aspirated V8 5.0L	KVM(Keyless vehicle module)	ECU information
XF	2010-2011	Normally Aspirated V8 5.0L	KVM(Keyless vehicle module)	Read fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	KVM(Keyless vehicle module)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	KVM(Keyless vehicle module)	Live Data
XF	2010-2011	Normally Aspirated V8 5.0L	PAM(Parking assist control module)	ECU information
XF	2010-2011	Normally Aspirated V8 5.0L	PAM(Parking assist control module)	Read fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	PAM(Parking assist control module)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	PAM(Parking assist control module)	Live Data
XF	2010-2011	Normally Aspirated V8 5.0L	PDM(Passenger's door module)	ECU information
XF	2010-2011	Normally Aspirated V8 5.0L	PDM(Passenger's door module)	Read fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	PDM(Passenger's door module)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	PDM(Passenger's door module)	Live Data
XF	2010-2011	Normally Aspirated V8 5.0L	RSJB(Auxiliary junction box (body control module B))	ECU information
XF	2010-2011	Normally Aspirated V8 5.0L	RSJB(Auxiliary junction box (body control module B))	Read fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	RSJB(Auxiliary junction box (body control module B))	Erase fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	RSJB(Auxiliary junction box (body control module B))	Live Data
XF	2010-2011	Normally Aspirated V8 5.0L	SODL(Side object detection control module - Left)	ECU information

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XF	2010-2011	Normally Aspirated V8 5.0L	SODL(Side object detection control module - Left)	Read fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	SODL(Side object detection control module - Left)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	SODL(Side object detection control module - Left)	Live Data
XF	2010-2011	Normally Aspirated V8 5.0L	SODR(Side object detection control module - Right)	ECU information
XF	2010-2011	Normally Aspirated V8 5.0L	SODR(Side object detection control module - Right)	Read fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	SODR(Side object detection control module - Right)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	SODR(Side object detection control module - Right)	Live Data
XF	2010-2011	Normally Aspirated V8 5.0L	TPM(Tire pressure monitor module)	ECU information
XF	2010-2011	Normally Aspirated V8 5.0L	TPM(Tire pressure monitor module)	Read fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	TPM(Tire pressure monitor module)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	TPM(Tire pressure monitor module)	Live Data
XF	2010-2011	Normally Aspirated V8 5.0L	FCDIM(Front control/display interface module (high level display front))	ECU information
XF	2010-2011	Normally Aspirated V8 5.0L	FCDIM(Front control/display interface module (high level display front))	Read fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	FCDIM(Front control/display interface module (high level display front))	Erase fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	FCDIM(Front control/display interface module (high level display front))	Live Data
XF	2010-2011	Normally Aspirated V8 5.0L	DACMC(Digital audio control module C)	ECU information
XF	2010-2011	Normally Aspirated V8 5.0L	DACMC(Digital audio control module C)	Read fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	DACMC(Digital audio control module C)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	DACMC(Digital audio control module C)	Live Data
XF	2010-2011	Normally Aspirated V8 5.0L	ACM(Audio front control module)	ECU information
XF	2010-2011	Normally Aspirated V8 5.0L	ACM(Audio front control module)	Read fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	ACM(Audio front control module)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	ACM(Audio front control module)	Live Data
XF	2010-2011	Normally Aspirated V8 5.0L	AAM(Audio amplifier module)	ECU information
XF	2010-2011	Normally Aspirated V8 5.0L	AAM(Audio amplifier module)	Read fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	AAM(Audio amplifier module)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	AAM(Audio amplifier module)	Live Data
XF	2010-2011	Normally Aspirated V8 5.0L	APIM(Accessory protocol interface module)	ECU information
XF	2010-2011	Normally Aspirated V8 5.0L	APIM(Accessory protocol interface module)	Read fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	APIM(Accessory protocol interface module)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	APIM(Accessory protocol interface module)	Live Data
XF	2010-2011	Normally Aspirated V8 5.0L	NCM(Navigation control module)	ECU information
XF	2010-2011	Normally Aspirated V8 5.0L	NCM(Navigation control module)	Read fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	NCM(Navigation control module)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	NCM(Navigation control module)	Live Data
XF	2010-2011	Normally Aspirated V8 5.0L	SRM(Satellite audio unit module)	ECU information
XF	2010-2011	Normally Aspirated V8 5.0L	SRM(Satellite audio unit module)	Read fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	SRM(Satellite audio unit module)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	SRM(Satellite audio unit module)	Live Data
XF	2010-2011	Normally Aspirated V8 5.0L	TEL(Cellular telephone control module)	ECU information
XF	2010-2011	Normally Aspirated V8 5.0L	TEL(Cellular telephone control module)	Read fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	TEL(Cellular telephone control module)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	TEL(Cellular telephone control module)	Live Data
XF	2010-2011	Normally Aspirated V8 5.0L	TVM(Television module)	ECU information
XF	2010-2011	Normally Aspirated V8 5.0L	TVM(Television module)	Read fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	TVM(Television module)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	TVM(Television module)	Live Data
XF	2010-2011	Normally Aspirated V8 5.0L	DABM(Digital audio broadcast module)	ECU information
XF	2010-2011	Normally Aspirated V8 5.0L	DABM(Digital audio broadcast module)	Read fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	DABM(Digital audio broadcast module)	Erase fault codes
XF	2010-2011	Normally Aspirated V8 5.0L	DABM(Digital audio broadcast module)	Live Data
XF	2010-2011	Normally Aspirated V8 5.0L	FLR(Forward looking radar)	ECU information
XF	2010-2011	Normally Aspirated V8 5.0L	Special Function	Manual oil reset
XF	2010-2011	Normally Aspirated V8 5.0L	Special Function	Oil service counter reset
XF	2010-2011	Normally Aspirated V8 5.0L	Special Function	Reset oil level
XF	2010-2011	Normally Aspirated V8 5.0L	Special Function	Idle speed test
XF	2010-2011	Normally Aspirated V8 5.0L	Special Function	Injector replacement
XF	2010-2011	Normally Aspirated V8 5.0L	Special Function	Throttle valve actuator replacement
XF	2010-2011	Normally Aspirated V8 5.0L	Special Function	Parking brake release to service position
XF	2010-2011	Normally Aspirated V8 5.0L	Special Function	Brake bleed
XF	2010-2011	Normally Aspirated V8 5.0L	Special Function	Steering column calibration
XF	2010-2011	Normally Aspirated V8 5.0L	Special Function	Tire pressure monitor confirmation application
XF	2010-2011	Normally Aspirated V8 5.0L	Special Function	Tire pressure monitor receiver calibration
XF	2010-2011	Normally Aspirated V8 5.0L	Special Function	Tire pressure sensor replacement
XF	2010-2011	Normally Aspirated V8 5.0L	Special Function	Height calibration
XF	2010-2011	Normally Aspirated V8 5.0L	Special Function	Headlamp control module system calibration
XF	2010-2011	Normally Aspirated V8 5.0L	Special Function	Battery replacement
XF	2010-2011	Normally Aspirated V8 5.0L	Special Function	Odometer calibration
XF	2010-2011	Normally Aspirated V8 5.0L	Special Function	Seat cushion replacement
XF	2010-2011	Normally Aspirated V8 5.0L	Special Function	Driver's seat calibration
XF	2010-2011	Normally Aspirated V8 5.0L	Special Function	Drivers side window calibration
XF	2010-2011	Normally Aspirated V8 5.0L	Special Function	Passenger side window calibration
XF	2010-2011	Supercharged V8 5.0L engine	PCM(Powertrain control module)	ECU information
XF	2010-2011	Supercharged V8 5.0L engine	PCM(Powertrain control module)	Read fault codes
XF	2010-2011	Supercharged V8 5.0L engine	PCM(Powertrain control module)	Erase fault codes
XF	2010-2011	Supercharged V8 5.0L engine	PCM(Powertrain control module)	Live Data
XF	2010-2011	Supercharged V8 5.0L engine	TCM(Transmission control module)	ECU information
XF	2010-2011	Supercharged V8 5.0L engine	TCM(Transmission control module)	Read fault codes
XF	2010-2011	Supercharged V8 5.0L engine	TCM(Transmission control module)	Erase fault codes
XF	2010-2011	Supercharged V8 5.0L engine	TCM(Transmission control module)	Live Data

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XF	2010-2011	Supercharged V8 5.0L engine	ABS(ABS control module)	ECU information
XF	2010-2011	Supercharged V8 5.0L engine	ABS(ABS control module)	Read fault codes
XF	2010-2011	Supercharged V8 5.0L engine	ABS(ABS control module)	Erase fault codes
XF	2010-2011	Supercharged V8 5.0L engine	ABS(ABS control module)	Live Data
XF	2010-2011	Supercharged V8 5.0L engine	RCM(Restraints control module)	ECU information
XF	2010-2011	Supercharged V8 5.0L engine	RCM(Restraints control module)	Read fault codes
XF	2010-2011	Supercharged V8 5.0L engine	RCM(Restraints control module)	Erase fault codes
XF	2010-2011	Supercharged V8 5.0L engine	RCM(Restraints control module)	Live Data
XF	2010-2011	Supercharged V8 5.0L engine	IPC(Instrument cluster control module)	ECU information
XF	2010-2011	Supercharged V8 5.0L engine	IPC(Instrument cluster control module)	Read fault codes
XF	2010-2011	Supercharged V8 5.0L engine	IPC(Instrument cluster control module)	Erase fault codes
XF	2010-2011	Supercharged V8 5.0L engine	IPC(Instrument cluster control module)	Live Data
XF	2010-2011	Supercharged V8 5.0L engine	CCM(Speed control module)	ECU information
XF	2010-2011	Supercharged V8 5.0L engine	CCM(Speed control module)	Read fault codes
XF	2010-2011	Supercharged V8 5.0L engine	CCM(Speed control module)	Erase fault codes
XF	2010-2011	Supercharged V8 5.0L engine	CCM(Speed control module)	Live Data
XF	2010-2011	Supercharged V8 5.0L engine	ADCM(Adaptive damping control module)	ECU information
XF	2010-2011	Supercharged V8 5.0L engine	ADCM(Adaptive damping control module)	Read fault codes
XF	2010-2011	Supercharged V8 5.0L engine	ADCM(Adaptive damping control module)	Erase fault codes
XF	2010-2011	Supercharged V8 5.0L engine	ADCM(Adaptive damping control module)	Live Data
XF	2010-2011	Supercharged V8 5.0L engine	GSM(Gear shift module)	ECU information
XF	2010-2011	Supercharged V8 5.0L engine	GSM(Gear shift module)	Read fault codes
XF	2010-2011	Supercharged V8 5.0L engine	GSM(Gear shift module)	Erase fault codes
XF	2010-2011	Supercharged V8 5.0L engine	GSM(Gear shift module)	Live Data
XF	2010-2011	Supercharged V8 5.0L engine	HCM(Headlamp control module)	ECU information
XF	2010-2011	Supercharged V8 5.0L engine	HCM(Headlamp control module)	Read fault codes
XF	2010-2011	Supercharged V8 5.0L engine	HCM(Headlamp control module)	Erase fault codes
XF	2010-2011	Supercharged V8 5.0L engine	HCM(Headlamp control module)	Live Data
XF	2010-2011	Supercharged V8 5.0L engine	ICS(Impact classification system)	ECU information
XF	2010-2011	Supercharged V8 5.0L engine	ICS(Impact classification system)	Read fault codes
XF	2010-2011	Supercharged V8 5.0L engine	ICS(Impact classification system)	Erase fault codes
XF	2010-2011	Supercharged V8 5.0L engine	ICS(Impact classification system)	Live Data
XF	2010-2011	Supercharged V8 5.0L engine	OCS(Restraints occupant classification system module)	ECU information
XF	2010-2011	Supercharged V8 5.0L engine	OCS(Restraints occupant classification system module)	Read fault codes
XF	2010-2011	Supercharged V8 5.0L engine	OCS(Restraints occupant classification system module)	Erase fault codes
XF	2010-2011	Supercharged V8 5.0L engine	OCS(Restraints occupant classification system module)	Live Data
XF	2010-2011	Supercharged V8 5.0L engine	PBM(Parking brake control module)	ECU information
XF	2010-2011	Supercharged V8 5.0L engine	PBM(Parking brake control module)	Read fault codes
XF	2010-2011	Supercharged V8 5.0L engine	PBM(Parking brake control module)	Erase fault codes
XF	2010-2011	Supercharged V8 5.0L engine	PBM(Parking brake control module)	Live Data
XF	2010-2011	Supercharged V8 5.0L engine	VIM(Vehicle immobilizer control module)	ECU information
XF	2010-2011	Supercharged V8 5.0L engine	VIM(Vehicle immobilizer control module)	Read fault codes
XF	2010-2011	Supercharged V8 5.0L engine	VIM(Vehicle immobilizer control module)	Erase fault codes
XF	2010-2011	Supercharged V8 5.0L engine	VIM(Vehicle immobilizer control module)	Live Data
XF	2010-2011	Supercharged V8 5.0L engine	RDCM(Rear differential control module)	ECU information
XF	2010-2011	Supercharged V8 5.0L engine	RDCM(Rear differential control module)	Read fault codes
XF	2010-2011	Supercharged V8 5.0L engine	RDCM(Rear differential control module)	Erase fault codes
XF	2010-2011	Supercharged V8 5.0L engine	RDCM(Rear differential control module)	Live Data
XF	2010-2011	Supercharged V8 5.0L engine	DCSM(Driver's climate seat module)	ECU information
XF	2010-2011	Supercharged V8 5.0L engine	DCSM(Driver's climate seat module)	Read fault codes
XF	2010-2011	Supercharged V8 5.0L engine	DCSM(Driver's climate seat module)	Erase fault codes
XF	2010-2011	Supercharged V8 5.0L engine	DCSM(Driver's climate seat module)	Live Data
XF	2010-2011	Supercharged V8 5.0L engine	DDM(Driver's door module)	ECU information
XF	2010-2011	Supercharged V8 5.0L engine	DDM(Driver's door module)	Read fault codes
XF	2010-2011	Supercharged V8 5.0L engine	DDM(Driver's door module)	Erase fault codes
XF	2010-2011	Supercharged V8 5.0L engine	DDM(Driver's door module)	Live Data
XF	2010-2011	Supercharged V8 5.0L engine	DSM(Driver's seat module)	ECU information
XF	2010-2011	Supercharged V8 5.0L engine	DSM(Driver's seat module)	Read fault codes
XF	2010-2011	Supercharged V8 5.0L engine	DSM(Driver's seat module)	Erase fault codes
XF	2010-2011	Supercharged V8 5.0L engine	DSM(Driver's seat module)	Live Data
XF	2010-2011	Supercharged V8 5.0L engine	FSJB(Central junction box (body control module))	ECU information
XF	2010-2011	Supercharged V8 5.0L engine	FSJB(Central junction box (body control module))	Read fault codes
XF	2010-2011	Supercharged V8 5.0L engine	FSJB(Central junction box (body control module))	Erase fault codes
XF	2010-2011	Supercharged V8 5.0L engine	FSJB(Central junction box (body control module))	Live Data
XF	2010-2011	Supercharged V8 5.0L engine	HVAC(Heating ventilation and air conditioning control module)	ECU information
XF	2010-2011	Supercharged V8 5.0L engine	HVAC(Heating ventilation and air conditioning control module)	Read fault codes
XF	2010-2011	Supercharged V8 5.0L engine	HVAC(Heating ventilation and air conditioning control module)	Erase fault codes
XF	2010-2011	Supercharged V8 5.0L engine	HVAC(Heating ventilation and air conditioning control module)	Live Data
XF	2010-2011	Supercharged V8 5.0L engine	ICM(Infotainment control module)	ECU information
XF	2010-2011	Supercharged V8 5.0L engine	ICM(Infotainment control module)	Read fault codes
XF	2010-2011	Supercharged V8 5.0L engine	ICM(Infotainment control module)	Erase fault codes
XF	2010-2011	Supercharged V8 5.0L engine	ICM(Infotainment control module)	Live Data
XF	2010-2011	Supercharged V8 5.0L engine	ICP(Integrated control panel)	ECU information
XF	2010-2011	Supercharged V8 5.0L engine	ICP(Integrated control panel)	Read fault codes
XF	2010-2011	Supercharged V8 5.0L engine	ICP(Integrated control panel)	Erase fault codes
XF	2010-2011	Supercharged V8 5.0L engine	ICP(Integrated control panel)	Live Data
XF	2010-2011	Supercharged V8 5.0L engine	KVM(Keyless vehicle module)	ECU information
XF	2010-2011	Supercharged V8 5.0L engine	KVM(Keyless vehicle module)	Read fault codes
XF	2010-2011	Supercharged V8 5.0L engine	KVM(Keyless vehicle module)	Erase fault codes
XF	2010-2011	Supercharged V8 5.0L engine	KVM(Keyless vehicle module)	Live Data

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XF	2010-2011	Supercharged V8 5.0L engine	PAM(Parking assist control module)	ECU information
XF	2010-2011	Supercharged V8 5.0L engine	PAM(Parking assist control module)	Read fault codes
XF	2010-2011	Supercharged V8 5.0L engine	PAM(Parking assist control module)	Erase fault codes
XF	2010-2011	Supercharged V8 5.0L engine	PAM(Parking assist control module)	Live Data
XF	2010-2011	Supercharged V8 5.0L engine	PDM(Passenger's door module)	ECU information
XF	2010-2011	Supercharged V8 5.0L engine	PDM(Passenger's door module)	Read fault codes
XF	2010-2011	Supercharged V8 5.0L engine	PDM(Passenger's door module)	Erase fault codes
XF	2010-2011	Supercharged V8 5.0L engine	PDM(Passenger's door module)	Live Data
XF	2010-2011	Supercharged V8 5.0L engine	RSJB(Auxiliary junction box (body control module B))	ECU information
XF	2010-2011	Supercharged V8 5.0L engine	RSJB(Auxiliary junction box (body control module B))	Read fault codes
XF	2010-2011	Supercharged V8 5.0L engine	RSJB(Auxiliary junction box (body control module B))	Erase fault codes
XF	2010-2011	Supercharged V8 5.0L engine	RSJB(Auxiliary junction box (body control module B))	Live Data
XF	2010-2011	Supercharged V8 5.0L engine	SODL(Side object detection control module - Left)	ECU information
XF	2010-2011	Supercharged V8 5.0L engine	SODL(Side object detection control module - Left)	Read fault codes
XF	2010-2011	Supercharged V8 5.0L engine	SODL(Side object detection control module - Left)	Erase fault codes
XF	2010-2011	Supercharged V8 5.0L engine	SODL(Side object detection control module - Left)	Live Data
XF	2010-2011	Supercharged V8 5.0L engine	SODR(Side object detection control module - Right)	ECU information
XF	2010-2011	Supercharged V8 5.0L engine	SODR(Side object detection control module - Right)	Read fault codes
XF	2010-2011	Supercharged V8 5.0L engine	SODR(Side object detection control module - Right)	Erase fault codes
XF	2010-2011	Supercharged V8 5.0L engine	SODR(Side object detection control module - Right)	Live Data
XF	2010-2011	Supercharged V8 5.0L engine	TPM(Tire pressure monitor module)	ECU information
XF	2010-2011	Supercharged V8 5.0L engine	TPM(Tire pressure monitor module)	Read fault codes
XF	2010-2011	Supercharged V8 5.0L engine	TPM(Tire pressure monitor module)	Erase fault codes
XF	2010-2011	Supercharged V8 5.0L engine	TPM(Tire pressure monitor module)	Live Data
XF	2010-2011	Supercharged V8 5.0L engine	FCDIM(Front control/display interface module (high level display front))	ECU information
XF	2010-2011	Supercharged V8 5.0L engine	FCDIM(Front control/display interface module (high level display front))	Read fault codes
XF	2010-2011	Supercharged V8 5.0L engine	FCDIM(Front control/display interface module (high level display front))	Erase fault codes
XF	2010-2011	Supercharged V8 5.0L engine	FCDIM(Front control/display interface module (high level display front))	Live Data
XF	2010-2011	Supercharged V8 5.0L engine	DACMC(Digital audio control module C)	ECU information
XF	2010-2011	Supercharged V8 5.0L engine	DACMC(Digital audio control module C)	Read fault codes
XF	2010-2011	Supercharged V8 5.0L engine	DACMC(Digital audio control module C)	Erase fault codes
XF	2010-2011	Supercharged V8 5.0L engine	DACMC(Digital audio control module C)	Live Data
XF	2010-2011	Supercharged V8 5.0L engine	ACM(Audio front control module)	ECU information
XF	2010-2011	Supercharged V8 5.0L engine	ACM(Audio front control module)	Read fault codes
XF	2010-2011	Supercharged V8 5.0L engine	ACM(Audio front control module)	Erase fault codes
XF	2010-2011	Supercharged V8 5.0L engine	ACM(Audio front control module)	Live Data
XF	2010-2011	Supercharged V8 5.0L engine	AAM(Audio amplifier module)	ECU information
XF	2010-2011	Supercharged V8 5.0L engine	AAM(Audio amplifier module)	Read fault codes
XF	2010-2011	Supercharged V8 5.0L engine	AAM(Audio amplifier module)	Erase fault codes
XF	2010-2011	Supercharged V8 5.0L engine	AAM(Audio amplifier module)	Live Data
XF	2010-2011	Supercharged V8 5.0L engine	APIM(Accessory protocol interface module)	ECU information
XF	2010-2011	Supercharged V8 5.0L engine	APIM(Accessory protocol interface module)	Read fault codes
XF	2010-2011	Supercharged V8 5.0L engine	APIM(Accessory protocol interface module)	Erase fault codes
XF	2010-2011	Supercharged V8 5.0L engine	APIM(Accessory protocol interface module)	Live Data
XF	2010-2011	Supercharged V8 5.0L engine	NCM(Navigation control module)	ECU information
XF	2010-2011	Supercharged V8 5.0L engine	NCM(Navigation control module)	Read fault codes
XF	2010-2011	Supercharged V8 5.0L engine	NCM(Navigation control module)	Erase fault codes
XF	2010-2011	Supercharged V8 5.0L engine	NCM(Navigation control module)	Live Data
XF	2010-2011	Supercharged V8 5.0L engine	SRM(Satellite audio unit module)	ECU information
XF	2010-2011	Supercharged V8 5.0L engine	SRM(Satellite audio unit module)	Read fault codes
XF	2010-2011	Supercharged V8 5.0L engine	SRM(Satellite audio unit module)	Erase fault codes
XF	2010-2011	Supercharged V8 5.0L engine	SRM(Satellite audio unit module)	Live Data
XF	2010-2011	Supercharged V8 5.0L engine	TEL(Cellular telephone control module)	ECU information
XF	2010-2011	Supercharged V8 5.0L engine	TEL(Cellular telephone control module)	Read fault codes
XF	2010-2011	Supercharged V8 5.0L engine	TEL(Cellular telephone control module)	Erase fault codes
XF	2010-2011	Supercharged V8 5.0L engine	TEL(Cellular telephone control module)	Live Data
XF	2010-2011	Supercharged V8 5.0L engine	TYM(Television module)	ECU information
XF	2010-2011	Supercharged V8 5.0L engine	TYM(Television module)	Read fault codes
XF	2010-2011	Supercharged V8 5.0L engine	TYM(Television module)	Erase fault codes
XF	2010-2011	Supercharged V8 5.0L engine	TYM(Television module)	Live Data
XF	2010-2011	Supercharged V8 5.0L engine	DABM(Digital audio broadcast module)	ECU information
XF	2010-2011	Supercharged V8 5.0L engine	DABM(Digital audio broadcast module)	Read fault codes
XF	2010-2011	Supercharged V8 5.0L engine	DABM(Digital audio broadcast module)	Erase fault codes
XF	2010-2011	Supercharged V8 5.0L engine	DABM(Digital audio broadcast module)	Live Data
XF	2010-2011	Supercharged V8 5.0L engine	FLR(Forward looking radar)	ECU information
XF	2010-2011	Supercharged V8 5.0L engine	Special Function	Manual oil reset
XF	2010-2011	Supercharged V8 5.0L engine	Special Function	Oil service counter reset
XF	2010-2011	Supercharged V8 5.0L engine	Special Function	Reset oil level
XF	2010-2011	Supercharged V8 5.0L engine	Special Function	Idle speed test
XF	2010-2011	Supercharged V8 5.0L engine	Special Function	Injector replacement
XF	2010-2011	Supercharged V8 5.0L engine	Special Function	Throttle valve actuator replacement
XF	2010-2011	Supercharged V8 5.0L engine	Special Function	Parking brake release to service position
XF	2010-2011	Supercharged V8 5.0L engine	Special Function	Brake bleed
XF	2010-2011	Supercharged V8 5.0L engine	Special Function	Steering column calibration
XF	2010-2011	Supercharged V8 5.0L engine	Special Function	Tire pressure monitor confirmation application



## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XF	2010-2011	Supercharged V8 5.0L engine	Special Function	Tire pressure monitor receiver calibration
XF	2010-2011	Supercharged V8 5.0L engine	Special Function	Tire pressure sensor replacement
XF	2010-2011	Supercharged V8 5.0L engine	Special Function	Height calibration
XF	2010-2011	Supercharged V8 5.0L engine	Special Function	Headlamp control module system calibration
XF	2010-2011	Supercharged V8 5.0L engine	Special Function	Battery replacement
XF	2010-2011	Supercharged V8 5.0L engine	Special Function	Odometer calibration
XF	2010-2011	Supercharged V8 5.0L engine	Special Function	Seat cushion replacement
XF	2010-2011	Supercharged V8 5.0L engine	Special Function	Driver's seat calibration
XF	2010-2011	Supercharged V8 5.0L engine	Special Function	Drivers side window calibration
XF	2010-2011	Supercharged V8 5.0L engine	Special Function	Passenger side window calibration
XF	2008-2009	Normally Aspirated V6	PCM(Powertrain control module)	ECU information
XF	2008-2009	Normally Aspirated V6	PCM(Powertrain control module)	Read fault codes
XF	2008-2009	Normally Aspirated V6	PCM(Powertrain control module)	Erase fault codes
XF	2008-2009	Normally Aspirated V6	PCM(Powertrain control module)	Live Data
XF	2008-2009	Normally Aspirated V6	TCM(Transmission control module)	ECU information
XF	2008-2009	Normally Aspirated V6	TCM(Transmission control module)	Read fault codes
XF	2008-2009	Normally Aspirated V6	TCM(Transmission control module)	Erase fault codes
XF	2008-2009	Normally Aspirated V6	TCM(Transmission control module)	Live Data
XF	2008-2009	Normally Aspirated V6	ABS(ABS control module)	ECU information
XF	2008-2009	Normally Aspirated V6	ABS(ABS control module)	Read fault codes
XF	2008-2009	Normally Aspirated V6	ABS(ABS control module)	Erase fault codes
XF	2008-2009	Normally Aspirated V6	ABS(ABS control module)	Live Data
XF	2008-2009	Normally Aspirated V6	RCM(Restraints control module)	ECU information
XF	2008-2009	Normally Aspirated V6	RCM(Restraints control module)	Read fault codes
XF	2008-2009	Normally Aspirated V6	RCM(Restraints control module)	Erase fault codes
XF	2008-2009	Normally Aspirated V6	RCM(Restraints control module)	Live Data
XF	2008-2009	Normally Aspirated V6	IPC(Instrument cluster control module)	ECU information
XF	2008-2009	Normally Aspirated V6	IPC(Instrument cluster control module)	Read fault codes
XF	2008-2009	Normally Aspirated V6	IPC(Instrument cluster control module)	Erase fault codes
XF	2008-2009	Normally Aspirated V6	IPC(Instrument cluster control module)	Live Data
XF	2008-2009	Normally Aspirated V6	CCM(Speed control module)	ECU information
XF	2008-2009	Normally Aspirated V6	CCM(Speed control module)	Read fault codes
XF	2008-2009	Normally Aspirated V6	CCM(Speed control module)	Erase fault codes
XF	2008-2009	Normally Aspirated V6	CCM(Speed control module)	Live Data
XF	2008-2009	Normally Aspirated V6	ADCM(Adaptive damping control module)	ECU information
XF	2008-2009	Normally Aspirated V6	ADCM(Adaptive damping control module)	Read fault codes
XF	2008-2009	Normally Aspirated V6	ADCM(Adaptive damping control module)	Erase fault codes
XF	2008-2009	Normally Aspirated V6	ADCM(Adaptive damping control module)	Live Data
XF	2008-2009	Normally Aspirated V6	GSM(Gear shift module)	ECU information
XF	2008-2009	Normally Aspirated V6	GSM(Gear shift module)	Read fault codes
XF	2008-2009	Normally Aspirated V6	GSM(Gear shift module)	Erase fault codes
XF	2008-2009	Normally Aspirated V6	GSM(Gear shift module)	Live Data
XF	2008-2009	Normally Aspirated V6	HCM(Headlamp control module)	ECU information
XF	2008-2009	Normally Aspirated V6	HCM(Headlamp control module)	Read fault codes
XF	2008-2009	Normally Aspirated V6	HCM(Headlamp control module)	Erase fault codes
XF	2008-2009	Normally Aspirated V6	HCM(Headlamp control module)	Live Data
XF	2008-2009	Normally Aspirated V6	ICS(Impact classification system)	ECU information
XF	2008-2009	Normally Aspirated V6	ICS(Impact classification system)	Read fault codes
XF	2008-2009	Normally Aspirated V6	ICS(Impact classification system)	Erase fault codes
XF	2008-2009	Normally Aspirated V6	ICS(Impact classification system)	Live Data
XF	2008-2009	Normally Aspirated V6	OCS(Restraints occupant classification system module)	ECU information
XF	2008-2009	Normally Aspirated V6	OCS(Restraints occupant classification system module)	Read fault codes
XF	2008-2009	Normally Aspirated V6	OCS(Restraints occupant classification system module)	Erase fault codes
XF	2008-2009	Normally Aspirated V6	OCS(Restraints occupant classification system module)	Live Data
XF	2008-2009	Normally Aspirated V6	PBM(Parking brake control module)	ECU information
XF	2008-2009	Normally Aspirated V6	PBM(Parking brake control module)	Read fault codes
XF	2008-2009	Normally Aspirated V6	PBM(Parking brake control module)	Erase fault codes
XF	2008-2009	Normally Aspirated V6	PBM(Parking brake control module)	Live Data
XF	2008-2009	Normally Aspirated V6	VIM(Vehicle immobilizer control module)	ECU information
XF	2008-2009	Normally Aspirated V6	VIM(Vehicle immobilizer control module)	Read fault codes
XF	2008-2009	Normally Aspirated V6	VIM(Vehicle immobilizer control module)	Erase fault codes
XF	2008-2009	Normally Aspirated V6	VIM(Vehicle immobilizer control module)	Live Data
XF	2008-2009	Normally Aspirated V6	DCSM(Driver's climate seat module)	ECU information
XF	2008-2009	Normally Aspirated V6	DCSM(Driver's climate seat module)	Read fault codes
XF	2008-2009	Normally Aspirated V6	DCSM(Driver's climate seat module)	Erase fault codes
XF	2008-2009	Normally Aspirated V6	DCSM(Driver's climate seat module)	Live Data
XF	2008-2009	Normally Aspirated V6	DDM(Driver's door module)	ECU information
XF	2008-2009	Normally Aspirated V6	DDM(Driver's door module)	Read fault codes
XF	2008-2009	Normally Aspirated V6	DDM(Driver's door module)	Erase fault codes
XF	2008-2009	Normally Aspirated V6	DDM(Driver's door module)	Live Data
XF	2008-2009	Normally Aspirated V6	DSM(Driver's seat module)	ECU information
XF	2008-2009	Normally Aspirated V6	DSM(Driver's seat module)	Read fault codes
XF	2008-2009	Normally Aspirated V6	DSM(Driver's seat module)	Erase fault codes
XF	2008-2009	Normally Aspirated V6	DSM(Driver's seat module)	Live Data
XF	2008-2009	Normally Aspirated V6	FSJB(Central junction box (body control module))	ECU information
XF	2008-2009	Normally Aspirated V6	FSJB(Central junction box (body control module))	Read fault codes
XF	2008-2009	Normally Aspirated V6	FSJB(Central junction box (body control module))	Erase fault codes
XF	2008-2009	Normally Aspirated V6	FSJB(Central junction box (body control module))	Live Data
XF	2008-2009	Normally Aspirated V6	HVAC(Heating ventilation and air conditioning control module)	ECU information
XF	2008-2009	Normally Aspirated V6	HVAC(Heating ventilation and air conditioning control module)	Read fault codes
XF	2008-2009	Normally Aspirated V6	HVAC(Heating ventilation and air conditioning control module)	Erase fault codes

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XF	2008-2009	Normally Aspirated V6	HVAC(Heating ventilation and air conditioning control module)	Live Data
XF	2008-2009	Normally Aspirated V6	ICM(Infotainment control module)	ECU information
XF	2008-2009	Normally Aspirated V6	ICM(Infotainment control module)	Read fault codes
XF	2008-2009	Normally Aspirated V6	ICM(Infotainment control module)	Erase fault codes
XF	2008-2009	Normally Aspirated V6	ICM(Infotainment control module)	Live Data
XF	2008-2009	Normally Aspirated V6	ICP(Integrated control panel)	ECU information
XF	2008-2009	Normally Aspirated V6	ICP(Integrated control panel)	Read fault codes
XF	2008-2009	Normally Aspirated V6	ICP(Integrated control panel)	Erase fault codes
XF	2008-2009	Normally Aspirated V6	KVM(Keyless vehicle module)	ECU information
XF	2008-2009	Normally Aspirated V6	KVM(Keyless vehicle module)	Read fault codes
XF	2008-2009	Normally Aspirated V6	KVM(Keyless vehicle module)	Erase fault codes
XF	2008-2009	Normally Aspirated V6	KVM(Keyless vehicle module)	Live Data
XF	2008-2009	Normally Aspirated V6	PAM(Parking assist control module)	ECU information
XF	2008-2009	Normally Aspirated V6	PAM(Parking assist control module)	Read fault codes
XF	2008-2009	Normally Aspirated V6	PAM(Parking assist control module)	Erase fault codes
XF	2008-2009	Normally Aspirated V6	PAM(Parking assist control module)	Live Data
XF	2008-2009	Normally Aspirated V6	PDM(Passenger's door module)	ECU information
XF	2008-2009	Normally Aspirated V6	PDM(Passenger's door module)	Read fault codes
XF	2008-2009	Normally Aspirated V6	PDM(Passenger's door module)	Erase fault codes
XF	2008-2009	Normally Aspirated V6	PDM(Passenger's door module)	Live Data
XF	2008-2009	Normally Aspirated V6	RSJB(Auxiliary junction box (body control module B))	ECU information
XF	2008-2009	Normally Aspirated V6	RSJB(Auxiliary junction box (body control module B))	Read fault codes
XF	2008-2009	Normally Aspirated V6	RSJB(Auxiliary junction box (body control module B))	Erase fault codes
XF	2008-2009	Normally Aspirated V6	RSJB(Auxiliary junction box (body control module B))	Live Data
XF	2008-2009	Normally Aspirated V6	SODL(Side object detection control module - Left)	ECU information
XF	2008-2009	Normally Aspirated V6	SODL(Side object detection control module - Left)	Read fault codes
XF	2008-2009	Normally Aspirated V6	SODL(Side object detection control module - Left)	Erase fault codes
XF	2008-2009	Normally Aspirated V6	SODL(Side object detection control module - Left)	Live Data
XF	2008-2009	Normally Aspirated V6	SODR(Side object detection control module - Right)	ECU information
XF	2008-2009	Normally Aspirated V6	SODR(Side object detection control module - Right)	Read fault codes
XF	2008-2009	Normally Aspirated V6	SODR(Side object detection control module - Right)	Erase fault codes
XF	2008-2009	Normally Aspirated V6	SODR(Side object detection control module - Right)	Live Data
XF	2008-2009	Normally Aspirated V6	TPM(Tire pressure monitor module)	ECU information
XF	2008-2009	Normally Aspirated V6	TPM(Tire pressure monitor module)	Read fault codes
XF	2008-2009	Normally Aspirated V6	TPM(Tire pressure monitor module)	Erase fault codes
XF	2008-2009	Normally Aspirated V6	TPM(Tire pressure monitor module)	Live Data
XF	2008-2009	Normally Aspirated V6	FCDIM(Front control/display interface module (high level display front))	ECU information
XF	2008-2009	Normally Aspirated V6	FCDIM(Front control/display interface module (high level display front))	Read fault codes
XF	2008-2009	Normally Aspirated V6	FCDIM(Front control/display interface module (high level display front))	Erase fault codes
XF	2008-2009	Normally Aspirated V6	FCDIM(Front control/display interface module (high level display front))	Live Data
XF	2008-2009	Normally Aspirated V6	ACM(Audio front control module)	ECU information
XF	2008-2009	Normally Aspirated V6	ACM(Audio front control module)	Read fault codes
XF	2008-2009	Normally Aspirated V6	ACM(Audio front control module)	Erase fault codes
XF	2008-2009	Normally Aspirated V6	ACM(Audio front control module)	Live Data
XF	2008-2009	Normally Aspirated V6	AAM(Audio amplifier module)	ECU information
XF	2008-2009	Normally Aspirated V6	AAM(Audio amplifier module)	Read fault codes
XF	2008-2009	Normally Aspirated V6	AAM(Audio amplifier module)	Erase fault codes
XF	2008-2009	Normally Aspirated V6	AAM(Audio amplifier module)	Live Data
XF	2008-2009	Normally Aspirated V6	APIM(Accessory protocol interface module)	ECU information
XF	2008-2009	Normally Aspirated V6	APIM(Accessory protocol interface module)	Read fault codes
XF	2008-2009	Normally Aspirated V6	APIM(Accessory protocol interface module)	Erase fault codes
XF	2008-2009	Normally Aspirated V6	APIM(Accessory protocol interface module)	Live Data
XF	2008-2009	Normally Aspirated V6	NCM(Navigation control module)	ECU information
XF	2008-2009	Normally Aspirated V6	NCM(Navigation control module)	Read fault codes
XF	2008-2009	Normally Aspirated V6	NCM(Navigation control module)	Erase fault codes
XF	2008-2009	Normally Aspirated V6	NCM(Navigation control module)	Live Data
XF	2008-2009	Normally Aspirated V6	SRM(Satellite audio unit module)	ECU information
XF	2008-2009	Normally Aspirated V6	SRM(Satellite audio unit module)	Read fault codes
XF	2008-2009	Normally Aspirated V6	SRM(Satellite audio unit module)	Erase fault codes
XF	2008-2009	Normally Aspirated V6	TEL(Cellular telephone control module)	ECU information
XF	2008-2009	Normally Aspirated V6	TEL(Cellular telephone control module)	Read fault codes
XF	2008-2009	Normally Aspirated V6	TEL(Cellular telephone control module)	Erase fault codes
XF	2008-2009	Normally Aspirated V6	TEL(Cellular telephone control module)	Live Data
XF	2008-2009	Normally Aspirated V6	TVM(Television module)	ECU information
XF	2008-2009	Normally Aspirated V6	TVM(Television module)	Read fault codes
XF	2008-2009	Normally Aspirated V6	TVM(Television module)	Erase fault codes
XF	2008-2009	Normally Aspirated V6	TVM(Television module)	Live Data
XF	2008-2009	Normally Aspirated V6	DABM(Digital audio broadcast module)	ECU information
XF	2008-2009	Normally Aspirated V6	DABM(Digital audio broadcast module)	Read fault codes
XF	2008-2009	Normally Aspirated V6	DABM(Digital audio broadcast module)	Erase fault codes
XF	2008-2009	Normally Aspirated V6	DABM(Digital audio broadcast module)	Live Data
XF	2008-2009	Normally Aspirated V6	FLR(Forward looking radar)	ECU information
XF	2008-2009	Normally Aspirated V6	Special Function	Manual oil reset
XF	2008-2009	Normally Aspirated V6	Special Function	Idle speed test
XF	2008-2009	Normally Aspirated V6	Special Function	Parking brake release to service position

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XF	2008-2009	Normally Aspirated V6	Special Function	Brake bleed
XF	2008-2009	Normally Aspirated V6	Special Function	Steering column calibration
XF	2008-2009	Normally Aspirated V6	Special Function	Tire pressure monitor confirmation application
XF	2008-2009	Normally Aspirated V6	Special Function	Tire pressure monitor receiver calibration
XF	2008-2009	Normally Aspirated V6	Special Function	Tire pressure sensor replacement
XF	2008-2009	Normally Aspirated V6	Special Function	Headlamp control module system calibration
XF	2008-2009	Normally Aspirated V6	Special Function	Battery replacement
XF	2008-2009	Normally Aspirated V6	Special Function	Odometer calibration
XF	2008-2009	Normally Aspirated V6	Special Function	Seat cushion replacement
XF	2008-2009	Normally Aspirated V6	Special Function	Driver's seat calibration
XF	2008-2009	Normally Aspirated V6	Special Function	Drivers side window calibration
XF	2008-2009	Normally Aspirated V6	Special Function	Passenger side window calibration
XF	2008-2009	Normally Aspirated V8	PCM(Powertrain control module)	ECU information
XF	2008-2009	Normally Aspirated V8	PCM(Powertrain control module)	Read fault codes
XF	2008-2009	Normally Aspirated V8	PCM(Powertrain control module)	Erase fault codes
XF	2008-2009	Normally Aspirated V8	PCM(Powertrain control module)	Live Data
XF	2008-2009	Normally Aspirated V8	TCM(Transmission control module)	ECU information
XF	2008-2009	Normally Aspirated V8	TCM(Transmission control module)	Read fault codes
XF	2008-2009	Normally Aspirated V8	TCM(Transmission control module)	Erase fault codes
XF	2008-2009	Normally Aspirated V8	TCM(Transmission control module)	Live Data
XF	2008-2009	Normally Aspirated V8	ABS(ABS control module)	ECU information
XF	2008-2009	Normally Aspirated V8	ABS(ABS control module)	Read fault codes
XF	2008-2009	Normally Aspirated V8	ABS(ABS control module)	Erase fault codes
XF	2008-2009	Normally Aspirated V8	ABS(ABS control module)	Live Data
XF	2008-2009	Normally Aspirated V8	RCM(Restraints control module)	ECU information
XF	2008-2009	Normally Aspirated V8	RCM(Restraints control module)	Read fault codes
XF	2008-2009	Normally Aspirated V8	RCM(Restraints control module)	Erase fault codes
XF	2008-2009	Normally Aspirated V8	RCM(Restraints control module)	Live Data
XF	2008-2009	Normally Aspirated V8	IPC(Instrument cluster control module)	ECU information
XF	2008-2009	Normally Aspirated V8	IPC(Instrument cluster control module)	Read fault codes
XF	2008-2009	Normally Aspirated V8	IPC(Instrument cluster control module)	Erase fault codes
XF	2008-2009	Normally Aspirated V8	IPC(Instrument cluster control module)	Live Data
XF	2008-2009	Normally Aspirated V8	CCM(Speed control module)	ECU information
XF	2008-2009	Normally Aspirated V8	CCM(Speed control module)	Read fault codes
XF	2008-2009	Normally Aspirated V8	CCM(Speed control module)	Erase fault codes
XF	2008-2009	Normally Aspirated V8	CCM(Speed control module)	Live Data
XF	2008-2009	Normally Aspirated V8	ADCM(Adaptive damping control module)	ECU information
XF	2008-2009	Normally Aspirated V8	ADCM(Adaptive damping control module)	Read fault codes
XF	2008-2009	Normally Aspirated V8	ADCM(Adaptive damping control module)	Erase fault codes
XF	2008-2009	Normally Aspirated V8	ADCM(Adaptive damping control module)	Live Data
XF	2008-2009	Normally Aspirated V8	GSM(Gear shift module)	ECU information
XF	2008-2009	Normally Aspirated V8	GSM(Gear shift module)	Read fault codes
XF	2008-2009	Normally Aspirated V8	GSM(Gear shift module)	Erase fault codes
XF	2008-2009	Normally Aspirated V8	GSM(Gear shift module)	Live Data
XF	2008-2009	Normally Aspirated V8	HCM(Headlamp control module)	ECU information
XF	2008-2009	Normally Aspirated V8	HCM(Headlamp control module)	Read fault codes
XF	2008-2009	Normally Aspirated V8	HCM(Headlamp control module)	Erase fault codes
XF	2008-2009	Normally Aspirated V8	HCM(Headlamp control module)	Live Data
XF	2008-2009	Normally Aspirated V8	ICS(Impact classification system)	ECU information
XF	2008-2009	Normally Aspirated V8	ICS(Impact classification system)	Read fault codes
XF	2008-2009	Normally Aspirated V8	ICS(Impact classification system)	Erase fault codes
XF	2008-2009	Normally Aspirated V8	ICS(Impact classification system)	Live Data
XF	2008-2009	Normally Aspirated V8	OCS(Restraints occupant classification system module)	ECU information
XF	2008-2009	Normally Aspirated V8	OCS(Restraints occupant classification system module)	Read fault codes
XF	2008-2009	Normally Aspirated V8	OCS(Restraints occupant classification system module)	Erase fault codes
XF	2008-2009	Normally Aspirated V8	OCS(Restraints occupant classification system module)	Live Data
XF	2008-2009	Normally Aspirated V8	PBM(Parking brake control module)	ECU information
XF	2008-2009	Normally Aspirated V8	PBM(Parking brake control module)	Read fault codes
XF	2008-2009	Normally Aspirated V8	PBM(Parking brake control module)	Erase fault codes
XF	2008-2009	Normally Aspirated V8	PBM(Parking brake control module)	Live Data
XF	2008-2009	Normally Aspirated V8	VIM(Vehicle immobilizer control module)	ECU information
XF	2008-2009	Normally Aspirated V8	VIM(Vehicle immobilizer control module)	Read fault codes
XF	2008-2009	Normally Aspirated V8	VIM(Vehicle immobilizer control module)	Erase fault codes
XF	2008-2009	Normally Aspirated V8	VIM(Vehicle immobilizer control module)	Live Data
XF	2008-2009	Normally Aspirated V8	DCSM(Driver's climate seat module)	ECU information
XF	2008-2009	Normally Aspirated V8	DCSM(Driver's climate seat module)	Read fault codes
XF	2008-2009	Normally Aspirated V8	DCSM(Driver's climate seat module)	Erase fault codes
XF	2008-2009	Normally Aspirated V8	DCSM(Driver's climate seat module)	Live Data
XF	2008-2009	Normally Aspirated V8	DDM(Driver's door module)	ECU information
XF	2008-2009	Normally Aspirated V8	DDM(Driver's door module)	Read fault codes
XF	2008-2009	Normally Aspirated V8	DDM(Driver's door module)	Erase fault codes
XF	2008-2009	Normally Aspirated V8	DDM(Driver's door module)	Live Data
XF	2008-2009	Normally Aspirated V8	DSM(Driver's seat module)	ECU information
XF	2008-2009	Normally Aspirated V8	DSM(Driver's seat module)	Read fault codes
XF	2008-2009	Normally Aspirated V8	DSM(Driver's seat module)	Erase fault codes
XF	2008-2009	Normally Aspirated V8	DSM(Driver's seat module)	Live Data
XF	2008-2009	Normally Aspirated V8	FSJB(Central junction box (body control module))	ECU information
XF	2008-2009	Normally Aspirated V8	FSJB(Central junction box (body control module))	Read fault codes
XF	2008-2009	Normally Aspirated V8	FSJB(Central junction box (body control module))	Erase fault codes
XF	2008-2009	Normally Aspirated V8	FSJB(Central junction box (body control module))	Live Data
XF	2008-2009	Normally Aspirated V8	HVAC(Heating ventilation and air conditioning control module)	ECU information

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XF	2008-2009	Normally Aspirated V8	HVAC(Heating ventilation and air conditioning control module)	Read fault codes
XF	2008-2009	Normally Aspirated V8	HVAC(Heating ventilation and air conditioning control module)	Erase fault codes
XF	2008-2009	Normally Aspirated V8	HVAC(Heating ventilation and air conditioning control module)	Live Data
XF	2008-2009	Normally Aspirated V8	ICM(Infotainment control module)	ECU information
XF	2008-2009	Normally Aspirated V8	ICM(Infotainment control module)	Read fault codes
XF	2008-2009	Normally Aspirated V8	ICM(Infotainment control module)	Erase fault codes
XF	2008-2009	Normally Aspirated V8	ICM(Infotainment control module)	Live Data
XF	2008-2009	Normally Aspirated V8	ICP(Integrated control panel)	ECU information
XF	2008-2009	Normally Aspirated V8	ICP(Integrated control panel)	Read fault codes
XF	2008-2009	Normally Aspirated V8	ICP(Integrated control panel)	Erase fault codes
XF	2008-2009	Normally Aspirated V8	KVM(Keyless vehicle module)	ECU information
XF	2008-2009	Normally Aspirated V8	KVM(Keyless vehicle module)	Read fault codes
XF	2008-2009	Normally Aspirated V8	KVM(Keyless vehicle module)	Erase fault codes
XF	2008-2009	Normally Aspirated V8	KVM(Keyless vehicle module)	Live Data
XF	2008-2009	Normally Aspirated V8	PAM(Parking assist control module)	ECU information
XF	2008-2009	Normally Aspirated V8	PAM(Parking assist control module)	Read fault codes
XF	2008-2009	Normally Aspirated V8	PAM(Parking assist control module)	Erase fault codes
XF	2008-2009	Normally Aspirated V8	PAM(Parking assist control module)	Live Data
XF	2008-2009	Normally Aspirated V8	PDM(Passenger's door module)	ECU information
XF	2008-2009	Normally Aspirated V8	PDM(Passenger's door module)	Read fault codes
XF	2008-2009	Normally Aspirated V8	PDM(Passenger's door module)	Erase fault codes
XF	2008-2009	Normally Aspirated V8	PDM(Passenger's door module)	Live Data
XF	2008-2009	Normally Aspirated V8	RSJB(Auxiliary junction box (body control module B))	ECU information
XF	2008-2009	Normally Aspirated V8	RSJB(Auxiliary junction box (body control module B))	Read fault codes
XF	2008-2009	Normally Aspirated V8	RSJB(Auxiliary junction box (body control module B))	Erase fault codes
XF	2008-2009	Normally Aspirated V8	RSJB(Auxiliary junction box (body control module B))	Live Data
XF	2008-2009	Normally Aspirated V8	SODL(Side object detection control module - Left)	ECU information
XF	2008-2009	Normally Aspirated V8	SODL(Side object detection control module - Left)	Read fault codes
XF	2008-2009	Normally Aspirated V8	SODL(Side object detection control module - Left)	Erase fault codes
XF	2008-2009	Normally Aspirated V8	SODL(Side object detection control module - Left)	Live Data
XF	2008-2009	Normally Aspirated V8	SODR(Side object detection control module - Right)	ECU information
XF	2008-2009	Normally Aspirated V8	SODR(Side object detection control module - Right)	Read fault codes
XF	2008-2009	Normally Aspirated V8	SODR(Side object detection control module - Right)	Erase fault codes
XF	2008-2009	Normally Aspirated V8	SODR(Side object detection control module - Right)	Live Data
XF	2008-2009	Normally Aspirated V8	TPM(Tire pressure monitor module)	ECU information
XF	2008-2009	Normally Aspirated V8	TPM(Tire pressure monitor module)	Read fault codes
XF	2008-2009	Normally Aspirated V8	TPM(Tire pressure monitor module)	Erase fault codes
XF	2008-2009	Normally Aspirated V8	TPM(Tire pressure monitor module)	Live Data
XF	2008-2009	Normally Aspirated V8	FCDIM(Front control/display interface module (high level display front))	ECU information
XF	2008-2009	Normally Aspirated V8	FCDIM(Front control/display interface module (high level display front))	Read fault codes
XF	2008-2009	Normally Aspirated V8	FCDIM(Front control/display interface module (high level display front))	Erase fault codes
XF	2008-2009	Normally Aspirated V8	FCDIM(Front control/display interface module (high level display front))	Live Data
XF	2008-2009	Normally Aspirated V8	ACM(Audio front control module)	ECU information
XF	2008-2009	Normally Aspirated V8	ACM(Audio front control module)	Read fault codes
XF	2008-2009	Normally Aspirated V8	ACM(Audio front control module)	Erase fault codes
XF	2008-2009	Normally Aspirated V8	ACM(Audio front control module)	Live Data
XF	2008-2009	Normally Aspirated V8	AAM(Audio amplifier module)	ECU information
XF	2008-2009	Normally Aspirated V8	AAM(Audio amplifier module)	Read fault codes
XF	2008-2009	Normally Aspirated V8	AAM(Audio amplifier module)	Erase fault codes
XF	2008-2009	Normally Aspirated V8	AAM(Audio amplifier module)	Live Data
XF	2008-2009	Normally Aspirated V8	APIM(Accessory protocol interface module)	ECU information
XF	2008-2009	Normally Aspirated V8	APIM(Accessory protocol interface module)	Read fault codes
XF	2008-2009	Normally Aspirated V8	APIM(Accessory protocol interface module)	Erase fault codes
XF	2008-2009	Normally Aspirated V8	APIM(Accessory protocol interface module)	Live Data
XF	2008-2009	Normally Aspirated V8	NCM(Navigation control module)	ECU information
XF	2008-2009	Normally Aspirated V8	NCM(Navigation control module)	Read fault codes
XF	2008-2009	Normally Aspirated V8	NCM(Navigation control module)	Erase fault codes
XF	2008-2009	Normally Aspirated V8	NCM(Navigation control module)	Live Data
XF	2008-2009	Normally Aspirated V8	SRM(Satellite audio unit module)	ECU information
XF	2008-2009	Normally Aspirated V8	SRM(Satellite audio unit module)	Read fault codes
XF	2008-2009	Normally Aspirated V8	SRM(Satellite audio unit module)	Erase fault codes
XF	2008-2009	Normally Aspirated V8	TEL(Cellular telephone control module)	ECU information
XF	2008-2009	Normally Aspirated V8	TEL(Cellular telephone control module)	Read fault codes
XF	2008-2009	Normally Aspirated V8	TEL(Cellular telephone control module)	Erase fault codes
XF	2008-2009	Normally Aspirated V8	TEL(Cellular telephone control module)	Live Data
XF	2008-2009	Normally Aspirated V8	TVM(Television module)	ECU information
XF	2008-2009	Normally Aspirated V8	TVM(Television module)	Read fault codes
XF	2008-2009	Normally Aspirated V8	TVM(Television module)	Erase fault codes
XF	2008-2009	Normally Aspirated V8	TVM(Television module)	Live Data
XF	2008-2009	Normally Aspirated V8	DABM(Digital audio broadcast module)	ECU information
XF	2008-2009	Normally Aspirated V8	DABM(Digital audio broadcast module)	Read fault codes
XF	2008-2009	Normally Aspirated V8	DABM(Digital audio broadcast module)	Erase fault codes
XF	2008-2009	Normally Aspirated V8	DABM(Digital audio broadcast module)	Live Data

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XF	2008-2009	Normally Aspirated V8	FLR(Forward looking radar)	ECU information
XF	2008-2009	Normally Aspirated V8	Special Function	Manual oil reset
XF	2008-2009	Normally Aspirated V8	Special Function	Battery replacement
XF	2008-2009	Normally Aspirated V8	Special Function	Idle speed test
XF	2008-2009	Normally Aspirated V8	Special Function	Parking brake release to service position
XF	2008-2009	Normally Aspirated V8	Special Function	Steering column calibration
XF	2008-2009	Normally Aspirated V8	Special Function	Brake bleed
XF	2008-2009	Normally Aspirated V8	Special Function	Tire pressure monitor confirmation application
XF	2008-2009	Normally Aspirated V8	Special Function	Tire pressure monitor receiver calibration
XF	2008-2009	Normally Aspirated V8	Special Function	Tire pressure sensor replacement
XF	2008-2009	Normally Aspirated V8	Special Function	Headlamp control module system calibration
XF	2008-2009	Normally Aspirated V8	Special Function	Odometer calibration
XF	2008-2009	Normally Aspirated V8	Special Function	Seat cushion replacement
XF	2008-2009	Normally Aspirated V8	Special Function	Driver's seat calibration
XF	2008-2009	Normally Aspirated V8	Special Function	Drivers side window calibration
XF	2008-2009	Normally Aspirated V8	Special Function	Passenger side window calibration
XF	2008-2009	Supercharged V8	PCM(Powertrain control module)	ECU information
XF	2008-2009	Supercharged V8	PCM(Powertrain control module)	Read fault codes
XF	2008-2009	Supercharged V8	PCM(Powertrain control module)	Erase fault codes
XF	2008-2009	Supercharged V8	PCM(Powertrain control module)	Live Data
XF	2008-2009	Supercharged V8	TCM(Transmission control module)	ECU information
XF	2008-2009	Supercharged V8	TCM(Transmission control module)	Read fault codes
XF	2008-2009	Supercharged V8	TCM(Transmission control module)	Erase fault codes
XF	2008-2009	Supercharged V8	TCM(Transmission control module)	Live Data
XF	2008-2009	Supercharged V8	ABS(ABS control module)	ECU information
XF	2008-2009	Supercharged V8	ABS(ABS control module)	Read fault codes
XF	2008-2009	Supercharged V8	ABS(ABS control module)	Erase fault codes
XF	2008-2009	Supercharged V8	ABS(ABS control module)	Live Data
XF	2008-2009	Supercharged V8	RCM(Restraints control module)	ECU information
XF	2008-2009	Supercharged V8	RCM(Restraints control module)	Read fault codes
XF	2008-2009	Supercharged V8	RCM(Restraints control module)	Erase fault codes
XF	2008-2009	Supercharged V8	RCM(Restraints control module)	Live Data
XF	2008-2009	Supercharged V8	IPC(Instrument cluster control module)	ECU information
XF	2008-2009	Supercharged V8	IPC(Instrument cluster control module)	Read fault codes
XF	2008-2009	Supercharged V8	IPC(Instrument cluster control module)	Erase fault codes
XF	2008-2009	Supercharged V8	IPC(Instrument cluster control module)	Live Data
XF	2008-2009	Supercharged V8	CCM(Speed control module)	ECU information
XF	2008-2009	Supercharged V8	CCM(Speed control module)	Read fault codes
XF	2008-2009	Supercharged V8	CCM(Speed control module)	Erase fault codes
XF	2008-2009	Supercharged V8	CCM(Speed control module)	Live Data
XF	2008-2009	Supercharged V8	ADCM(Adaptive damping control module)	ECU information
XF	2008-2009	Supercharged V8	ADCM(Adaptive damping control module)	Read fault codes
XF	2008-2009	Supercharged V8	ADCM(Adaptive damping control module)	Erase fault codes
XF	2008-2009	Supercharged V8	ADCM(Adaptive damping control module)	Live Data
XF	2008-2009	Supercharged V8	GSM(Gear shift module)	ECU information
XF	2008-2009	Supercharged V8	GSM(Gear shift module)	Read fault codes
XF	2008-2009	Supercharged V8	GSM(Gear shift module)	Erase fault codes
XF	2008-2009	Supercharged V8	GSM(Gear shift module)	Live Data
XF	2008-2009	Supercharged V8	HCM(Headlamp control module)	ECU information
XF	2008-2009	Supercharged V8	HCM(Headlamp control module)	Read fault codes
XF	2008-2009	Supercharged V8	HCM(Headlamp control module)	Erase fault codes
XF	2008-2009	Supercharged V8	HCM(Headlamp control module)	Live Data
XF	2008-2009	Supercharged V8	ICS(Impact classification system)	ECU information
XF	2008-2009	Supercharged V8	ICS(Impact classification system)	Read fault codes
XF	2008-2009	Supercharged V8	ICS(Impact classification system)	Erase fault codes
XF	2008-2009	Supercharged V8	ICS(Impact classification system)	Live Data
XF	2008-2009	Supercharged V8	OCS(Restraints occupant classification system module)	ECU information
XF	2008-2009	Supercharged V8	OCS(Restraints occupant classification system module)	Read fault codes
XF	2008-2009	Supercharged V8	OCS(Restraints occupant classification system module)	Erase fault codes
XF	2008-2009	Supercharged V8	OCS(Restraints occupant classification system module)	Live Data
XF	2008-2009	Supercharged V8	PBM(Parking brake control module)	ECU information
XF	2008-2009	Supercharged V8	PBM(Parking brake control module)	Read fault codes
XF	2008-2009	Supercharged V8	PBM(Parking brake control module)	Erase fault codes
XF	2008-2009	Supercharged V8	PBM(Parking brake control module)	Live Data
XF	2008-2009	Supercharged V8	VIM(Vehicle immobilizer control module)	ECU information
XF	2008-2009	Supercharged V8	VIM(Vehicle immobilizer control module)	Read fault codes
XF	2008-2009	Supercharged V8	VIM(Vehicle immobilizer control module)	Erase fault codes
XF	2008-2009	Supercharged V8	VIM(Vehicle immobilizer control module)	Live Data
XF	2008-2009	Supercharged V8	DCSM(Driver's climate seat module)	ECU information
XF	2008-2009	Supercharged V8	DCSM(Driver's climate seat module)	Read fault codes
XF	2008-2009	Supercharged V8	DCSM(Driver's climate seat module)	Erase fault codes
XF	2008-2009	Supercharged V8	DCSM(Driver's climate seat module)	Live Data
XF	2008-2009	Supercharged V8	DDM(Driver's door module)	ECU information
XF	2008-2009	Supercharged V8	DDM(Driver's door module)	Read fault codes
XF	2008-2009	Supercharged V8	DDM(Driver's door module)	Erase fault codes
XF	2008-2009	Supercharged V8	DDM(Driver's door module)	Live Data
XF	2008-2009	Supercharged V8	DSM(Driver's seat module)	ECU information
XF	2008-2009	Supercharged V8	DSM(Driver's seat module)	Read fault codes
XF	2008-2009	Supercharged V8	DSM(Driver's seat module)	Erase fault codes
XF	2008-2009	Supercharged V8	DSM(Driver's seat module)	Live Data
XF	2008-2009	Supercharged V8	FSJB(Central junction box (body control module))	ECU information
XF	2008-2009	Supercharged V8	FSJB(Central junction box (body control module))	Read fault codes
XF	2008-2009	Supercharged V8	FSJB(Central junction box (body control module))	Erase fault codes

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XF	2008-2009	Supercharged V8	FSJB(Central junction box (body control module))	Live Data
XF	2008-2009	Supercharged V8	HVAC(Heating ventilation and air conditioning control module)	ECU information
XF	2008-2009	Supercharged V8	HVAC(Heating ventilation and air conditioning control module)	Read fault codes
XF	2008-2009	Supercharged V8	HVAC(Heating ventilation and air conditioning control module)	Erase fault codes
XF	2008-2009	Supercharged V8	HVAC(Heating ventilation and air conditioning control module)	Live Data
XF	2008-2009	Supercharged V8	ICM(Infotainment control module)	ECU information
XF	2008-2009	Supercharged V8	ICM(Infotainment control module)	Read fault codes
XF	2008-2009	Supercharged V8	ICM(Infotainment control module)	Erase fault codes
XF	2008-2009	Supercharged V8	ICM(Infotainment control module)	Live Data
XF	2008-2009	Supercharged V8	ICP(Integrated control panel)	ECU information
XF	2008-2009	Supercharged V8	ICP(Integrated control panel)	Read fault codes
XF	2008-2009	Supercharged V8	ICP(Integrated control panel)	Erase fault codes
XF	2008-2009	Supercharged V8	KVM(Keyless vehicle module)	ECU information
XF	2008-2009	Supercharged V8	KVM(Keyless vehicle module)	Read fault codes
XF	2008-2009	Supercharged V8	KVM(Keyless vehicle module)	Erase fault codes
XF	2008-2009	Supercharged V8	KVM(Keyless vehicle module)	Live Data
XF	2008-2009	Supercharged V8	PAM(Parking assist control module)	ECU information
XF	2008-2009	Supercharged V8	PAM(Parking assist control module)	Read fault codes
XF	2008-2009	Supercharged V8	PAM(Parking assist control module)	Erase fault codes
XF	2008-2009	Supercharged V8	PAM(Parking assist control module)	Live Data
XF	2008-2009	Supercharged V8	PDM(Passenger's door module)	ECU information
XF	2008-2009	Supercharged V8	PDM(Passenger's door module)	Read fault codes
XF	2008-2009	Supercharged V8	PDM(Passenger's door module)	Erase fault codes
XF	2008-2009	Supercharged V8	PDM(Passenger's door module)	Live Data
XF	2008-2009	Supercharged V8	RSJB(Auxiliary junction box (body control module B))	ECU information
XF	2008-2009	Supercharged V8	RSJB(Auxiliary junction box (body control module B))	Read fault codes
XF	2008-2009	Supercharged V8	RSJB(Auxiliary junction box (body control module B))	Erase fault codes
XF	2008-2009	Supercharged V8	RSJB(Auxiliary junction box (body control module B))	Live Data
XF	2008-2009	Supercharged V8	SODL(Side object detection control module - Left)	ECU information
XF	2008-2009	Supercharged V8	SODL(Side object detection control module - Left)	Read fault codes
XF	2008-2009	Supercharged V8	SODL(Side object detection control module - Left)	Erase fault codes
XF	2008-2009	Supercharged V8	SODL(Side object detection control module - Left)	Live Data
XF	2008-2009	Supercharged V8	SODR(Side object detection control module - Right)	ECU information
XF	2008-2009	Supercharged V8	SODR(Side object detection control module - Right)	Read fault codes
XF	2008-2009	Supercharged V8	SODR(Side object detection control module - Right)	Erase fault codes
XF	2008-2009	Supercharged V8	SODR(Side object detection control module - Right)	Live Data
XF	2008-2009	Supercharged V8	TPM(Tire pressure monitor module)	ECU information
XF	2008-2009	Supercharged V8	TPM(Tire pressure monitor module)	Read fault codes
XF	2008-2009	Supercharged V8	TPM(Tire pressure monitor module)	Erase fault codes
XF	2008-2009	Supercharged V8	TPM(Tire pressure monitor module)	Live Data
XF	2008-2009	Supercharged V8	FCDIM(Front control/display interface module (high level display front))	ECU information
XF	2008-2009	Supercharged V8	FCDIM(Front control/display interface module (high level display front))	Read fault codes
XF	2008-2009	Supercharged V8	FCDIM(Front control/display interface module (high level display front))	Erase fault codes
XF	2008-2009	Supercharged V8	FCDIM(Front control/display interface module (high level display front))	Live Data
XF	2008-2009	Supercharged V8	ACM(Audio front control module)	ECU information
XF	2008-2009	Supercharged V8	ACM(Audio front control module)	Read fault codes
XF	2008-2009	Supercharged V8	ACM(Audio front control module)	Erase fault codes
XF	2008-2009	Supercharged V8	ACM(Audio front control module)	Live Data
XF	2008-2009	Supercharged V8	AAM(Audio amplifier module)	ECU information
XF	2008-2009	Supercharged V8	AAM(Audio amplifier module)	Read fault codes
XF	2008-2009	Supercharged V8	AAM(Audio amplifier module)	Erase fault codes
XF	2008-2009	Supercharged V8	AAM(Audio amplifier module)	Live Data
XF	2008-2009	Supercharged V8	APIM(Accessory protocol interface module)	ECU information
XF	2008-2009	Supercharged V8	APIM(Accessory protocol interface module)	Read fault codes
XF	2008-2009	Supercharged V8	APIM(Accessory protocol interface module)	Erase fault codes
XF	2008-2009	Supercharged V8	APIM(Accessory protocol interface module)	Live Data
XF	2008-2009	Supercharged V8	NCM(Navigation control module)	ECU information
XF	2008-2009	Supercharged V8	NCM(Navigation control module)	Read fault codes
XF	2008-2009	Supercharged V8	NCM(Navigation control module)	Erase fault codes
XF	2008-2009	Supercharged V8	NCM(Navigation control module)	Live Data
XF	2008-2009	Supercharged V8	SRM(Satellite audio unit module)	ECU information
XF	2008-2009	Supercharged V8	SRM(Satellite audio unit module)	Read fault codes
XF	2008-2009	Supercharged V8	SRM(Satellite audio unit module)	Erase fault codes
XF	2008-2009	Supercharged V8	TEL(Cellular telephone control module)	ECU information
XF	2008-2009	Supercharged V8	TEL(Cellular telephone control module)	Read fault codes
XF	2008-2009	Supercharged V8	TEL(Cellular telephone control module)	Erase fault codes
XF	2008-2009	Supercharged V8	TEL(Cellular telephone control module)	Live Data
XF	2008-2009	Supercharged V8	TVM(Television module)	ECU information
XF	2008-2009	Supercharged V8	TVM(Television module)	Read fault codes
XF	2008-2009	Supercharged V8	TVM(Television module)	Erase fault codes
XF	2008-2009	Supercharged V8	TVM(Television module)	Live Data

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XF	2008-2009	Supercharged V8	DABM(Digital audio broadcast module)	ECU information
XF	2008-2009	Supercharged V8	DABM(Digital audio broadcast module)	Read fault codes
XF	2008-2009	Supercharged V8	DABM(Digital audio broadcast module)	Erase fault codes
XF	2008-2009	Supercharged V8	DABM(Digital audio broadcast module)	Live Data
XF	2008-2009	Supercharged V8	FLR(Forward looking radar)	ECU information
XF	2008-2009	Supercharged V8	Special Function	Manual oil reset
XF	2008-2009	Supercharged V8	Special Function	Idle speed test
XF	2008-2009	Supercharged V8	Special Function	Parking brake release to service position
XF	2008-2009	Supercharged V8	Special Function	Brake bleed
XF	2008-2009	Supercharged V8	Special Function	Steering column calibration
XF	2008-2009	Supercharged V8	Special Function	Tire pressure monitor confirmation application
XF	2008-2009	Supercharged V8	Special Function	Tire pressure monitor receiver calibration
XF	2008-2009	Supercharged V8	Special Function	Tire pressure sensor replacement
XF	2008-2009	Supercharged V8	Special Function	Headlamp control module system calibration
XF	2008-2009	Supercharged V8	Special Function	Battery replacement
XF	2008-2009	Supercharged V8	Special Function	Odometer calibration
XF	2008-2009	Supercharged V8	Special Function	Seat cushion replacement
XF	2008-2009	Supercharged V8	Special Function	Driver's seat calibration
XF	2008-2009	Supercharged V8	Special Function	Drivers side window calibration
XF	2008-2009	Supercharged V8	Special Function	Passenger side window calibration
XF	2008-2009	V6 Diesel	PCM(Powertrain control module)	ECU information
XF	2008-2009	V6 Diesel	PCM(Powertrain control module)	Read fault codes
XF	2008-2009	V6 Diesel	PCM(Powertrain control module)	Erase fault codes
XF	2008-2009	V6 Diesel	PCM(Powertrain control module)	Live Data
XF	2008-2009	V6 Diesel	TCM(Transmission control module)	ECU information
XF	2008-2009	V6 Diesel	TCM(Transmission control module)	Read fault codes
XF	2008-2009	V6 Diesel	TCM(Transmission control module)	Erase fault codes
XF	2008-2009	V6 Diesel	TCM(Transmission control module)	Live Data
XF	2008-2009	V6 Diesel	ABS(ABS control module)	ECU information
XF	2008-2009	V6 Diesel	ABS(ABS control module)	Read fault codes
XF	2008-2009	V6 Diesel	ABS(ABS control module)	Erase fault codes
XF	2008-2009	V6 Diesel	ABS(ABS control module)	Live Data
XF	2008-2009	V6 Diesel	RCM(Restraints control module)	ECU information
XF	2008-2009	V6 Diesel	RCM(Restraints control module)	Read fault codes
XF	2008-2009	V6 Diesel	RCM(Restraints control module)	Erase fault codes
XF	2008-2009	V6 Diesel	RCM(Restraints control module)	Live Data
XF	2008-2009	V6 Diesel	IPC(Instrument cluster control module)	ECU information
XF	2008-2009	V6 Diesel	IPC(Instrument cluster control module)	Read fault codes
XF	2008-2009	V6 Diesel	IPC(Instrument cluster control module)	Erase fault codes
XF	2008-2009	V6 Diesel	IPC(Instrument cluster control module)	Live Data
XF	2008-2009	V6 Diesel	CCM(Speed control module)	ECU information
XF	2008-2009	V6 Diesel	CCM(Speed control module)	Read fault codes
XF	2008-2009	V6 Diesel	CCM(Speed control module)	Erase fault codes
XF	2008-2009	V6 Diesel	CCM(Speed control module)	Live Data
XF	2008-2009	V6 Diesel	ADCM(Adaptive damping control module)	ECU information
XF	2008-2009	V6 Diesel	ADCM(Adaptive damping control module)	Read fault codes
XF	2008-2009	V6 Diesel	ADCM(Adaptive damping control module)	Erase fault codes
XF	2008-2009	V6 Diesel	ADCM(Adaptive damping control module)	Live Data
XF	2008-2009	V6 Diesel	GSM(Gear shift module)	ECU information
XF	2008-2009	V6 Diesel	GSM(Gear shift module)	Read fault codes
XF	2008-2009	V6 Diesel	GSM(Gear shift module)	Erase fault codes
XF	2008-2009	V6 Diesel	GSM(Gear shift module)	Live Data
XF	2008-2009	V6 Diesel	HCM(Headlamp control module)	ECU information
XF	2008-2009	V6 Diesel	HCM(Headlamp control module)	Read fault codes
XF	2008-2009	V6 Diesel	HCM(Headlamp control module)	Erase fault codes
XF	2008-2009	V6 Diesel	HCM(Headlamp control module)	Live Data
XF	2008-2009	V6 Diesel	ICS(Impact classification system)	ECU information
XF	2008-2009	V6 Diesel	ICS(Impact classification system)	Read fault codes
XF	2008-2009	V6 Diesel	ICS(Impact classification system)	Erase fault codes
XF	2008-2009	V6 Diesel	ICS(Impact classification system)	Live Data
XF	2008-2009	V6 Diesel	OCS(Restraints occupant classification system module)	ECU information
XF	2008-2009	V6 Diesel	OCS(Restraints occupant classification system module)	Read fault codes
XF	2008-2009	V6 Diesel	OCS(Restraints occupant classification system module)	Erase fault codes
XF	2008-2009	V6 Diesel	OCS(Restraints occupant classification system module)	Live Data
XF	2008-2009	V6 Diesel	PBM(Parking brake control module)	ECU information
XF	2008-2009	V6 Diesel	PBM(Parking brake control module)	Read fault codes
XF	2008-2009	V6 Diesel	PBM(Parking brake control module)	Erase fault codes
XF	2008-2009	V6 Diesel	PBM(Parking brake control module)	Live Data
XF	2008-2009	V6 Diesel	VIM(Vehicle immobilizer control module)	ECU information
XF	2008-2009	V6 Diesel	VIM(Vehicle immobilizer control module)	Read fault codes
XF	2008-2009	V6 Diesel	VIM(Vehicle immobilizer control module)	Erase fault codes
XF	2008-2009	V6 Diesel	VIM(Vehicle immobilizer control module)	Live Data
XF	2008-2009	V6 Diesel	DCSM(Driver's climate seat module)	ECU information
XF	2008-2009	V6 Diesel	DCSM(Driver's climate seat module)	Read fault codes
XF	2008-2009	V6 Diesel	DCSM(Driver's climate seat module)	Erase fault codes
XF	2008-2009	V6 Diesel	DCSM(Driver's climate seat module)	Live Data
XF	2008-2009	V6 Diesel	DDM(Driver's door module)	ECU information
XF	2008-2009	V6 Diesel	DDM(Driver's door module)	Read fault codes
XF	2008-2009	V6 Diesel	DDM(Driver's door module)	Erase fault codes
XF	2008-2009	V6 Diesel	DDM(Driver's door module)	Live Data
XF	2008-2009	V6 Diesel	DSM(Driver's seat module)	ECU information
XF	2008-2009	V6 Diesel	DSM(Driver's seat module)	Read fault codes
XF	2008-2009	V6 Diesel	DSM(Driver's seat module)	Erase fault codes
XF	2008-2009	V6 Diesel	DSM(Driver's seat module)	Live Data
XF	2008-2009	V6 Diesel	FSJB(Central junction box (body control module))	ECU information

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XF	2008-2009	V6 Diesel	FSJB(Central junction box (body control module))	Read fault codes
XF	2008-2009	V6 Diesel	FSJB(Central junction box (body control module))	Erase fault codes
XF	2008-2009	V6 Diesel	FSJB(Central junction box (body control module))	Live Data
XF	2008-2009	V6 Diesel	HVAC(Heating ventilation and air conditioning control module)	ECU information
XF	2008-2009	V6 Diesel	HVAC(Heating ventilation and air conditioning control module)	Read fault codes
XF	2008-2009	V6 Diesel	HVAC(Heating ventilation and air conditioning control module)	Erase fault codes
XF	2008-2009	V6 Diesel	HVAC(Heating ventilation and air conditioning control module)	Live Data
XF	2008-2009	V6 Diesel	ICM(Infotainment control module)	ECU information
XF	2008-2009	V6 Diesel	ICM(Infotainment control module)	Read fault codes
XF	2008-2009	V6 Diesel	ICM(Infotainment control module)	Erase fault codes
XF	2008-2009	V6 Diesel	ICM(Infotainment control module)	Live Data
XF	2008-2009	V6 Diesel	ICP(Integrated control panel)	ECU information
XF	2008-2009	V6 Diesel	ICP(Integrated control panel)	Read fault codes
XF	2008-2009	V6 Diesel	ICP(Integrated control panel)	Erase fault codes
XF	2008-2009	V6 Diesel	KVM(Keyless vehicle module)	ECU information
XF	2008-2009	V6 Diesel	KVM(Keyless vehicle module)	Read fault codes
XF	2008-2009	V6 Diesel	KVM(Keyless vehicle module)	Erase fault codes
XF	2008-2009	V6 Diesel	KVM(Keyless vehicle module)	Live Data
XF	2008-2009	V6 Diesel	PAM(Parking assist control module)	ECU information
XF	2008-2009	V6 Diesel	PAM(Parking assist control module)	Read fault codes
XF	2008-2009	V6 Diesel	PAM(Parking assist control module)	Erase fault codes
XF	2008-2009	V6 Diesel	PAM(Parking assist control module)	Live Data
XF	2008-2009	V6 Diesel	PDM(Passenger's door module)	ECU information
XF	2008-2009	V6 Diesel	PDM(Passenger's door module)	Read fault codes
XF	2008-2009	V6 Diesel	PDM(Passenger's door module)	Erase fault codes
XF	2008-2009	V6 Diesel	PDM(Passenger's door module)	Live Data
XF	2008-2009	V6 Diesel	RSJB(Auxiliary junction box (body control module B))	ECU information
XF	2008-2009	V6 Diesel	RSJB(Auxiliary junction box (body control module B))	Read fault codes
XF	2008-2009	V6 Diesel	RSJB(Auxiliary junction box (body control module B))	Erase fault codes
XF	2008-2009	V6 Diesel	RSJB(Auxiliary junction box (body control module B))	Live Data
XF	2008-2009	V6 Diesel	SODL(Side object detection control module - Left)	ECU information
XF	2008-2009	V6 Diesel	SODL(Side object detection control module - Left)	Read fault codes
XF	2008-2009	V6 Diesel	SODL(Side object detection control module - Left)	Erase fault codes
XF	2008-2009	V6 Diesel	SODL(Side object detection control module - Left)	Live Data
XF	2008-2009	V6 Diesel	SODR(Side object detection control module - Right)	ECU information
XF	2008-2009	V6 Diesel	SODR(Side object detection control module - Right)	Read fault codes
XF	2008-2009	V6 Diesel	SODR(Side object detection control module - Right)	Erase fault codes
XF	2008-2009	V6 Diesel	SODR(Side object detection control module - Right)	Live Data
XF	2008-2009	V6 Diesel	TPM(Tire pressure monitor module)	ECU information
XF	2008-2009	V6 Diesel	TPM(Tire pressure monitor module)	Read fault codes
XF	2008-2009	V6 Diesel	TPM(Tire pressure monitor module)	Erase fault codes
XF	2008-2009	V6 Diesel	TPM(Tire pressure monitor module)	Live Data
XF	2008-2009	V6 Diesel	FCDIM(Front control/display interface module (high level display front))	ECU information
XF	2008-2009	V6 Diesel	FCDIM(Front control/display interface module (high level display front))	Read fault codes
XF	2008-2009	V6 Diesel	FCDIM(Front control/display interface module (high level display front))	Erase fault codes
XF	2008-2009	V6 Diesel	FCDIM(Front control/display interface module (high level display front))	Live Data
XF	2008-2009	V6 Diesel	ACM(Audio front control module)	ECU information
XF	2008-2009	V6 Diesel	ACM(Audio front control module)	Read fault codes
XF	2008-2009	V6 Diesel	ACM(Audio front control module)	Erase fault codes
XF	2008-2009	V6 Diesel	ACM(Audio front control module)	Live Data
XF	2008-2009	V6 Diesel	AAM(Audio amplifier module)	ECU information
XF	2008-2009	V6 Diesel	AAM(Audio amplifier module)	Read fault codes
XF	2008-2009	V6 Diesel	AAM(Audio amplifier module)	Erase fault codes
XF	2008-2009	V6 Diesel	AAM(Audio amplifier module)	Live Data
XF	2008-2009	V6 Diesel	APIM(Accessory protocol interface module)	ECU information
XF	2008-2009	V6 Diesel	APIM(Accessory protocol interface module)	Read fault codes
XF	2008-2009	V6 Diesel	APIM(Accessory protocol interface module)	Erase fault codes
XF	2008-2009	V6 Diesel	APIM(Accessory protocol interface module)	Live Data
XF	2008-2009	V6 Diesel	NCM(Navigation control module)	ECU information
XF	2008-2009	V6 Diesel	NCM(Navigation control module)	Read fault codes
XF	2008-2009	V6 Diesel	NCM(Navigation control module)	Erase fault codes
XF	2008-2009	V6 Diesel	NCM(Navigation control module)	Live Data
XF	2008-2009	V6 Diesel	SRM(Satellite audio unit module)	ECU information
XF	2008-2009	V6 Diesel	SRM(Satellite audio unit module)	Read fault codes
XF	2008-2009	V6 Diesel	SRM(Satellite audio unit module)	Erase fault codes
XF	2008-2009	V6 Diesel	TEL(Cellular telephone control module)	ECU information
XF	2008-2009	V6 Diesel	TEL(Cellular telephone control module)	Read fault codes
XF	2008-2009	V6 Diesel	TEL(Cellular telephone control module)	Erase fault codes
XF	2008-2009	V6 Diesel	TEL(Cellular telephone control module)	Live Data



## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XF	2008-2009	V6 Diesel	TVM(Television module)	ECU information
XF	2008-2009	V6 Diesel	TVM(Television module)	Read fault codes
XF	2008-2009	V6 Diesel	TVM(Television module)	Erase fault codes
XF	2008-2009	V6 Diesel	TVM(Television module)	Live Data
XF	2008-2009	V6 Diesel	DABM(Digital audio broadcast module)	ECU information
XF	2008-2009	V6 Diesel	DABM(Digital audio broadcast module)	Read fault codes
XF	2008-2009	V6 Diesel	DABM(Digital audio broadcast module)	Erase fault codes
XF	2008-2009	V6 Diesel	DABM(Digital audio broadcast module)	Live Data
XF	2008-2009	V6 Diesel	FLR(Forward looking radar)	ECU information
XF	2008-2009	V6 Diesel	Special Function	Manual oil reset
XF	2008-2009	V6 Diesel	Special Function	Oil service counter reset
XF	2008-2009	V6 Diesel	Special Function	Parking brake release to service position
XF	2008-2009	V6 Diesel	Special Function	Brake bleed
XF	2008-2009	V6 Diesel	Special Function	Steering column calibration
XF	2008-2009	V6 Diesel	Special Function	Tire pressure monitor confirmation application
XF	2008-2009	V6 Diesel	Special Function	Tire pressure monitor receiver calibration
XF	2008-2009	V6 Diesel	Special Function	Tire pressure sensor replacement
XF	2008-2009	V6 Diesel	Special Function	Diesel particulate filter dynamic regeneration
XF	2008-2009	V6 Diesel	Special Function	Diesel particulate filter fuel related component replacement
XF	2008-2009	V6 Diesel	Special Function	Diesel particulate filter replacement
XF	2008-2009	V6 Diesel	Special Function	Headlamp control module system calibration
XF	2008-2009	V6 Diesel	Special Function	Battery replacement
XF	2008-2009	V6 Diesel	Special Function	Odometer calibration
XF	2008-2009	V6 Diesel	Special Function	Seat cushion replacement
XF	2008-2009	V6 Diesel	Special Function	Driver's seat calibration
XF	2008-2009	V6 Diesel	Special Function	Drivers side window calibration
XF	2008-2009	V6 Diesel	Special Function	Passenger side window calibration
XJ	2016-	V6 Diesel	PCM(Powertrain control module)	ECU information
XJ	2016-	V6 Diesel	PCM(Powertrain control module)	Read fault codes
XJ	2016-	V6 Diesel	PCM(Powertrain control module)	Erase fault codes
XJ	2016-	V6 Diesel	PCM(Powertrain control module)	Live Data
XJ	2016-	V6 Diesel	TCM(Transmission control module)	ECU information
XJ	2016-	V6 Diesel	TCM(Transmission control module)	Read fault codes
XJ	2016-	V6 Diesel	TCM(Transmission control module)	Erase fault codes
XJ	2016-	V6 Diesel	TCM(Transmission control module)	Live Data
XJ	2016-	V6 Diesel	ABS(ABS control module)	ECU information
XJ	2016-	V6 Diesel	ABS(ABS control module)	Read fault codes
XJ	2016-	V6 Diesel	ABS(ABS control module)	Erase fault codes
XJ	2016-	V6 Diesel	ABS(ABS control module)	Live Data
XJ	2016-	V6 Diesel	RCM(Restraints control module)	ECU information
XJ	2016-	V6 Diesel	RCM(Restraints control module)	Read fault codes
XJ	2016-	V6 Diesel	RCM(Restraints control module)	Erase fault codes
XJ	2016-	V6 Diesel	RCM(Restraints control module)	Live Data
XJ	2016-	V6 Diesel	IPC(Instrument cluster control module)	ECU information
XJ	2016-	V6 Diesel	IPC(Instrument cluster control module)	Read fault codes
XJ	2016-	V6 Diesel	IPC(Instrument cluster control module)	Erase fault codes
XJ	2016-	V6 Diesel	IPC(Instrument cluster control module)	Live Data
XJ	2016-	V6 Diesel	BCM(Body control module)	ECU information
XJ	2016-	V6 Diesel	BCM(Body control module)	Read fault codes
XJ	2016-	V6 Diesel	BCM(Body control module)	Erase fault codes
XJ	2016-	V6 Diesel	BCM(Body control module)	Live Data
XJ	2016-	V6 Diesel	CCM(Speed control module)	ECU information
XJ	2016-	V6 Diesel	CCM(Speed control module)	Read fault codes
XJ	2016-	V6 Diesel	CCM(Speed control module)	Erase fault codes
XJ	2016-	V6 Diesel	CCM(Speed control module)	Live Data
XJ	2016-	V6 Diesel	GSM(Gear shift module)	ECU information
XJ	2016-	V6 Diesel	GSM(Gear shift module)	Read fault codes
XJ	2016-	V6 Diesel	GSM(Gear shift module)	Erase fault codes
XJ	2016-	V6 Diesel	GSM(Gear shift module)	Live Data
XJ	2016-	V6 Diesel	GWM(Gateway module)	ECU information
XJ	2016-	V6 Diesel	GWM(Gateway module)	Read fault codes
XJ	2016-	V6 Diesel	GWM(Gateway module)	Erase fault codes
XJ	2016-	V6 Diesel	GWM(Gateway module)	Live Data
XJ	2016-	V6 Diesel	HCM(Headlamp control module)	ECU information
XJ	2016-	V6 Diesel	HCM(Headlamp control module)	Read fault codes
XJ	2016-	V6 Diesel	HCM(Headlamp control module)	Erase fault codes
XJ	2016-	V6 Diesel	HCM(Headlamp control module)	Live Data
XJ	2016-	V6 Diesel	OCS(Restraints occupant classification system module)	ECU information
XJ	2016-	V6 Diesel	OCS(Restraints occupant classification system module)	Read fault codes
XJ	2016-	V6 Diesel	OCS(Restraints occupant classification system module)	Erase fault codes
XJ	2016-	V6 Diesel	OCS(Restraints occupant classification system module)	Live Data
XJ	2016-	V6 Diesel	PBM(Parking brake control module)	ECU information
XJ	2016-	V6 Diesel	PBM(Parking brake control module)	Read fault codes
XJ	2016-	V6 Diesel	PBM(Parking brake control module)	Erase fault codes
XJ	2016-	V6 Diesel	PBM(Parking brake control module)	Live Data
XJ	2016-	V6 Diesel	RDCM(Rear differential control module)	ECU information
XJ	2016-	V6 Diesel	RDCM(Rear differential control module)	Read fault codes
XJ	2016-	V6 Diesel	RDCM(Rear differential control module)	Erase fault codes
XJ	2016-	V6 Diesel	RDCM(Rear differential control module)	Live Data
XJ	2016-	V6 Diesel	TCCM(Transfer case control module)	ECU information
XJ	2016-	V6 Diesel	TCCM(Transfer case control module)	Read fault codes
XJ	2016-	V6 Diesel	TCCM(Transfer case control module)	Erase fault codes
XJ	2016-	V6 Diesel	TCCM(Transfer case control module)	Live Data
XJ	2016-	V6 Diesel	TCU(Telematic control unit module)	ECU information
XJ	2016-	V6 Diesel	TCU(Telematic control unit module)	Read fault codes

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XJ	2016-	V6 Diesel	TCU(Telematic control unit module)	Erase fault codes
XJ	2016-	V6 Diesel	TCU(Telematic control unit module)	Live Data
XJ	2016-	V6 Diesel	TPM(Tire pressure monitor module)	ECU information
XJ	2016-	V6 Diesel	TPM(Tire pressure monitor module)	Read fault codes
XJ	2016-	V6 Diesel	TPM(Tire pressure monitor module)	Erase fault codes
XJ	2016-	V6 Diesel	TPM(Tire pressure monitor module)	Live Data
XJ	2016-	V6 Diesel	VIM(Vehicle immobilizer control module)	ECU information
XJ	2016-	V6 Diesel	VIM(Vehicle immobilizer control module)	Read fault codes
XJ	2016-	V6 Diesel	VIM(Vehicle immobilizer control module)	Erase fault codes
XJ	2016-	V6 Diesel	VIM(Vehicle immobilizer control module)	Live Data
XJ	2016-	V6 Diesel	CHCM(Chassis control module)	ECU information
XJ	2016-	V6 Diesel	CHCM(Chassis control module)	Read fault codes
XJ	2016-	V6 Diesel	CHCM(Chassis control module)	Erase fault codes
XJ	2016-	V6 Diesel	CHCM(Chassis control module)	Live Data
XJ	2016-	V6 Diesel	IPMA(Image processing control module A)	ECU information
XJ	2016-	V6 Diesel	IPMA(Image processing control module A)	Read fault codes
XJ	2016-	V6 Diesel	IPMA(Image processing control module A)	Erase fault codes
XJ	2016-	V6 Diesel	IPMA(Image processing control module A)	Live Data
XJ	2016-	V6 Diesel	PAM(Parking assist control module)	ECU information
XJ	2016-	V6 Diesel	PAM(Parking assist control module)	Read fault codes
XJ	2016-	V6 Diesel	PAM(Parking assist control module)	Erase fault codes
XJ	2016-	V6 Diesel	PAM(Parking assist control module)	Live Data
XJ	2016-	V6 Diesel	PSCM(Power steering control module)	ECU information
XJ	2016-	V6 Diesel	PSCM(Power steering control module)	Read fault codes
XJ	2016-	V6 Diesel	PSCM(Power steering control module)	Erase fault codes
XJ	2016-	V6 Diesel	PSCM(Power steering control module)	Live Data
XJ	2016-	V6 Diesel	SASM(Steering angle sensor module)	ECU information
XJ	2016-	V6 Diesel	SASM(Steering angle sensor module)	Read fault codes
XJ	2016-	V6 Diesel	SASM(Steering angle sensor module)	Erase fault codes
XJ	2016-	V6 Diesel	SASM(Steering angle sensor module)	Live Data
XJ	2016-	V6 Diesel	VDM(Vehicle dynamics control module)	ECU information
XJ	2016-	V6 Diesel	VDM(Vehicle dynamics control module)	Read fault codes
XJ	2016-	V6 Diesel	VDM(Vehicle dynamics control module)	Erase fault codes
XJ	2016-	V6 Diesel	VDM(Vehicle dynamics control module)	Live Data
XJ	2016-	V6 Diesel	FCIM(Integrated control panel)	ECU information
XJ	2016-	V6 Diesel	FCIM(Integrated control panel)	Read fault codes
XJ	2016-	V6 Diesel	FCIM(Integrated control panel)	Erase fault codes
XJ	2016-	V6 Diesel	FCIM(Integrated control panel)	Live Data
XJ	2016-	V6 Diesel	HVAC(Heating ventilation and air conditioning control module)	ECU information
XJ	2016-	V6 Diesel	HVAC(Heating ventilation and air conditioning control module)	Read fault codes
XJ	2016-	V6 Diesel	HVAC(Heating ventilation and air conditioning control module)	Erase fault codes
XJ	2016-	V6 Diesel	HVAC(Heating ventilation and air conditioning control module)	Live Data
XJ	2016-	V6 Diesel	IMC(InControl Touch Pro infotainment master controller)	ECU information
XJ	2016-	V6 Diesel	IMC(InControl Touch Pro infotainment master controller)	Read fault codes
XJ	2016-	V6 Diesel	IMC(InControl Touch Pro infotainment master controller)	Erase fault codes
XJ	2016-	V6 Diesel	IMC(InControl Touch Pro infotainment master controller)	Live Data
XJ	2016-	V6 Diesel	IPMB(Image processing module B)	ECU information
XJ	2016-	V6 Diesel	IPMB(Image processing module B)	Read fault codes
XJ	2016-	V6 Diesel	IPMB(Image processing module B)	Erase fault codes
XJ	2016-	V6 Diesel	IPMB(Image processing module B)	Live Data
XJ	2016-	V6 Diesel	RHVAC(Rear Heating ventilation and air conditioning control module)	ECU information
XJ	2016-	V6 Diesel	RHVAC(Rear Heating ventilation and air conditioning control module)	Read fault codes
XJ	2016-	V6 Diesel	RHVAC(Rear Heating ventilation and air conditioning control module)	Erase fault codes
XJ	2016-	V6 Diesel	RHVAC(Rear Heating ventilation and air conditioning control module)	Live Data
XJ	2016-	V6 Diesel	SODL(Side object detection control module - Left)	ECU information
XJ	2016-	V6 Diesel	SODL(Side object detection control module - Left)	Read fault codes
XJ	2016-	V6 Diesel	SODL(Side object detection control module - Left)	Erase fault codes
XJ	2016-	V6 Diesel	SODL(Side object detection control module - Left)	Live Data
XJ	2016-	V6 Diesel	SODR(Side object detection control module - Right)	ECU information
XJ	2016-	V6 Diesel	SODR(Side object detection control module - Right)	Read fault codes
XJ	2016-	V6 Diesel	SODR(Side object detection control module - Right)	Erase fault codes
XJ	2016-	V6 Diesel	SODR(Side object detection control module - Right)	Live Data
XJ	2016-	V6 Diesel	DDM(Driver's door module)	ECU information
XJ	2016-	V6 Diesel	DDM(Driver's door module)	Read fault codes
XJ	2016-	V6 Diesel	DDM(Driver's door module)	Erase fault codes
XJ	2016-	V6 Diesel	DDM(Driver's door module)	Live Data
XJ	2016-	V6 Diesel	DSM(Driver's seat module)	ECU information
XJ	2016-	V6 Diesel	DSM(Driver's seat module)	Read fault codes
XJ	2016-	V6 Diesel	DSM(Driver's seat module)	Erase fault codes
XJ	2016-	V6 Diesel	DSM(Driver's seat module)	Live Data
XJ	2016-	V6 Diesel	PDM(Passenger's door module)	ECU information
XJ	2016-	V6 Diesel	PDM(Passenger's door module)	Read fault codes

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XJ	2016-	V6 Diesel	PDM(Passenger's door module)	Erase fault codes
XJ	2016-	V6 Diesel	PDM(Passenger's door module)	Live Data
XJ	2016-	V6 Diesel	PSM(Passenger's seat module)	ECU information
XJ	2016-	V6 Diesel	PSM(Passenger's seat module)	Read fault codes
XJ	2016-	V6 Diesel	PSM(Passenger's seat module)	Erase fault codes
XJ	2016-	V6 Diesel	PSM(Passenger's seat module)	Live Data
XJ	2016-	V6 Diesel	RFA(Keyless vehicle module)	ECU information
XJ	2016-	V6 Diesel	RFA(Keyless vehicle module)	Read fault codes
XJ	2016-	V6 Diesel	RFA(Keyless vehicle module)	Erase fault codes
XJ	2016-	V6 Diesel	RFA(Keyless vehicle module)	Live Data
XJ	2016-	V6 Diesel	RGTM(Rear gate / trunk module)	ECU information
XJ	2016-	V6 Diesel	RGTM(Rear gate / trunk module)	Read fault codes
XJ	2016-	V6 Diesel	RGTM(Rear gate / trunk module)	Erase fault codes
XJ	2016-	V6 Diesel	RGTM(Rear gate / trunk module)	Live Data
XJ	2016-	V6 Diesel	RLSM(Rear seat - Control module - Left)	ECU information
XJ	2016-	V6 Diesel	RLSM(Rear seat - Control module - Left)	Read fault codes
XJ	2016-	V6 Diesel	RLSM(Rear seat - Control module - Left)	Erase fault codes
XJ	2016-	V6 Diesel	RLSM(Rear seat - Control module - Left)	Live Data
XJ	2016-	V6 Diesel	RRSM(Rear seat - Control module - Right)	ECU information
XJ	2016-	V6 Diesel	RRSM(Rear seat - Control module - Right)	Read fault codes
XJ	2016-	V6 Diesel	RRSM(Rear seat - Control module - Right)	Erase fault codes
XJ	2016-	V6 Diesel	RRSM(Rear seat - Control module - Right)	Live Data
XJ	2016-	V6 Diesel	AAM(InControl Touch Pro audio amplifier module)	ECU information
XJ	2016-	V6 Diesel	AAM(InControl Touch Pro audio amplifier module)	Read fault codes
XJ	2016-	V6 Diesel	AAM(InControl Touch Pro audio amplifier module)	Erase fault codes
XJ	2016-	V6 Diesel	AAM(InControl Touch Pro audio amplifier module)	Live Data
XJ	2016-	V6 Diesel	ISC(InControl Touch Pro infotainment slave controller)	ECU information
XJ	2016-	V6 Diesel	ISC(InControl Touch Pro infotainment slave controller)	Read fault codes
XJ	2016-	V6 Diesel	ISC(InControl Touch Pro infotainment slave controller)	Erase fault codes
XJ	2016-	V6 Diesel	ISC(InControl Touch Pro infotainment slave controller)	Live Data
XJ	2016-	V6 Diesel	Special Function	Manual oil reset
XJ	2016-	V6 Diesel	Special Function	Oil change reset
XJ	2016-	V6 Diesel	Special Function	Oil service counter reset
XJ	2016-	V6 Diesel	Special Function	Service interval reset
XJ	2016-	V6 Diesel	Special Function	Injector replacement
XJ	2016-	V6 Diesel	Special Function	Display injector correction factors
XJ	2016-	V6 Diesel	Special Function	Lock steering tune to vehicle
XJ	2016-	V6 Diesel	Special Function	Power steering soft-lock end stops reset routine
XJ	2016-	V6 Diesel	Special Function	Steering column calibration
XJ	2016-	V6 Diesel	Special Function	Yaw rate sensor calibration
XJ	2016-	V6 Diesel	Special Function	Parking brake activation
XJ	2016-	V6 Diesel	Special Function	Parking brake pad replacement - Exit maintenance mode application
XJ	2016-	V6 Diesel	Special Function	Parking brake pad replacement - Release to service position
XJ	2016-	V6 Diesel	Special Function	Tire pressure monitor sensor identification display
XJ	2016-	V6 Diesel	Special Function	Tire pressure sensor replacement
XJ	2016-	V6 Diesel	Special Function	Diesel particulate filter differential pressure sensor replacement
XJ	2016-	V6 Diesel	Special Function	Diesel particulate filter dynamic regeneration
XJ	2016-	V6 Diesel	Special Function	Diesel particulate filter replacement
XJ	2016-	V6 Diesel	Special Function	Battery replacement
XJ	2016-	V6 Diesel	Special Function	Telematics control module battery replacement reset
XJ	2016-	V6 Diesel	Special Function	Seat cushion replacement
XJ	2016-	V6 Diesel	Special Function	Driver's seat calibration
XJ	2016-	V6 Diesel	Special Function	Passenger's seat calibration
XJ	2016-	Supercharged V8 5.0L engine	PCM(Powertrain control module)	ECU information
XJ	2016-	Supercharged V8 5.0L engine	PCM(Powertrain control module)	Read fault codes
XJ	2016-	Supercharged V8 5.0L engine	PCM(Powertrain control module)	Erase fault codes
XJ	2016-	Supercharged V8 5.0L engine	PCM(Powertrain control module)	Live Data
XJ	2016-	Supercharged V8 5.0L engine	TCM(Transmission control module)	ECU information
XJ	2016-	Supercharged V8 5.0L engine	TCM(Transmission control module)	Read fault codes
XJ	2016-	Supercharged V8 5.0L engine	TCM(Transmission control module)	Erase fault codes
XJ	2016-	Supercharged V8 5.0L engine	TCM(Transmission control module)	Live Data
XJ	2016-	Supercharged V8 5.0L engine	ABS(ABS control module)	ECU information
XJ	2016-	Supercharged V8 5.0L engine	ABS(ABS control module)	Read fault codes
XJ	2016-	Supercharged V8 5.0L engine	ABS(ABS control module)	Erase fault codes
XJ	2016-	Supercharged V8 5.0L engine	ABS(ABS control module)	Live Data
XJ	2016-	Supercharged V8 5.0L engine	RCM(Restraints control module)	ECU information
XJ	2016-	Supercharged V8 5.0L engine	RCM(Restraints control module)	Read fault codes
XJ	2016-	Supercharged V8 5.0L engine	RCM(Restraints control module)	Erase fault codes
XJ	2016-	Supercharged V8 5.0L engine	RCM(Restraints control module)	Live Data
XJ	2016-	Supercharged V8 5.0L engine	IPC(Instrument cluster control module)	ECU information
XJ	2016-	Supercharged V8 5.0L engine	IPC(Instrument cluster control module)	Read fault codes
XJ	2016-	Supercharged V8 5.0L engine	IPC(Instrument cluster control module)	Erase fault codes
XJ	2016-	Supercharged V8 5.0L engine	IPC(Instrument cluster control module)	Live Data
XJ	2016-	Supercharged V8 5.0L engine	BCM(Body control module)	ECU information
XJ	2016-	Supercharged V8 5.0L engine	BCM(Body control module)	Read fault codes
XJ	2016-	Supercharged V8 5.0L engine	BCM(Body control module)	Erase fault codes
XJ	2016-	Supercharged V8 5.0L engine	BCM(Body control module)	Live Data

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XJ	2016-	Supercharged V8 5.0L engine	CCM(Speed control module)	ECU information
XJ	2016-	Supercharged V8 5.0L engine	CCM(Speed control module)	Read fault codes
XJ	2016-	Supercharged V8 5.0L engine	CCM(Speed control module)	Erase fault codes
XJ	2016-	Supercharged V8 5.0L engine	CCM(Speed control module)	Live Data
XJ	2016-	Supercharged V8 5.0L engine	GSM(Gear shift module)	ECU information
XJ	2016-	Supercharged V8 5.0L engine	GSM(Gear shift module)	Read fault codes
XJ	2016-	Supercharged V8 5.0L engine	GSM(Gear shift module)	Erase fault codes
XJ	2016-	Supercharged V8 5.0L engine	GSM(Gear shift module)	Live Data
XJ	2016-	Supercharged V8 5.0L engine	GWM(Gateway module)	ECU information
XJ	2016-	Supercharged V8 5.0L engine	GWM(Gateway module)	Read fault codes
XJ	2016-	Supercharged V8 5.0L engine	GWM(Gateway module)	Erase fault codes
XJ	2016-	Supercharged V8 5.0L engine	GWM(Gateway module)	Live Data
XJ	2016-	Supercharged V8 5.0L engine	HCM(Headlamp control module)	ECU information
XJ	2016-	Supercharged V8 5.0L engine	HCM(Headlamp control module)	Read fault codes
XJ	2016-	Supercharged V8 5.0L engine	HCM(Headlamp control module)	Erase fault codes
XJ	2016-	Supercharged V8 5.0L engine	HCM(Headlamp control module)	Live Data
XJ	2016-	Supercharged V8 5.0L engine	OCS(Restraints occupant classification system module)	ECU information
XJ	2016-	Supercharged V8 5.0L engine	OCS(Restraints occupant classification system module)	Read fault codes
XJ	2016-	Supercharged V8 5.0L engine	OCS(Restraints occupant classification system module)	Erase fault codes
XJ	2016-	Supercharged V8 5.0L engine	OCS(Restraints occupant classification system module)	Live Data
XJ	2016-	Supercharged V8 5.0L engine	PBM(Parking brake control module)	ECU information
XJ	2016-	Supercharged V8 5.0L engine	PBM(Parking brake control module)	Read fault codes
XJ	2016-	Supercharged V8 5.0L engine	PBM(Parking brake control module)	Erase fault codes
XJ	2016-	Supercharged V8 5.0L engine	PBM(Parking brake control module)	Live Data
XJ	2016-	Supercharged V8 5.0L engine	RDCM(Rear differential control module)	ECU information
XJ	2016-	Supercharged V8 5.0L engine	RDCM(Rear differential control module)	Read fault codes
XJ	2016-	Supercharged V8 5.0L engine	RDCM(Rear differential control module)	Erase fault codes
XJ	2016-	Supercharged V8 5.0L engine	RDCM(Rear differential control module)	Live Data
XJ	2016-	Supercharged V8 5.0L engine	TCCM(Transfer case control module)	ECU information
XJ	2016-	Supercharged V8 5.0L engine	TCCM(Transfer case control module)	Read fault codes
XJ	2016-	Supercharged V8 5.0L engine	TCCM(Transfer case control module)	Erase fault codes
XJ	2016-	Supercharged V8 5.0L engine	TCCM(Transfer case control module)	Live Data
XJ	2016-	Supercharged V8 5.0L engine	TCU(Telematic control unit module)	ECU information
XJ	2016-	Supercharged V8 5.0L engine	TCU(Telematic control unit module)	Read fault codes
XJ	2016-	Supercharged V8 5.0L engine	TCU(Telematic control unit module)	Erase fault codes
XJ	2016-	Supercharged V8 5.0L engine	TCU(Telematic control unit module)	Live Data
XJ	2016-	Supercharged V8 5.0L engine	TPM(Tire pressure monitor module)	ECU information
XJ	2016-	Supercharged V8 5.0L engine	TPM(Tire pressure monitor module)	Read fault codes
XJ	2016-	Supercharged V8 5.0L engine	TPM(Tire pressure monitor module)	Erase fault codes
XJ	2016-	Supercharged V8 5.0L engine	TPM(Tire pressure monitor module)	Live Data
XJ	2016-	Supercharged V8 5.0L engine	VIM(Vehicle immobilizer control module)	ECU information
XJ	2016-	Supercharged V8 5.0L engine	VIM(Vehicle immobilizer control module)	Read fault codes
XJ	2016-	Supercharged V8 5.0L engine	VIM(Vehicle immobilizer control module)	Erase fault codes
XJ	2016-	Supercharged V8 5.0L engine	VIM(Vehicle immobilizer control module)	Live Data
XJ	2016-	Supercharged V8 5.0L engine	CHCM(Chassis control module)	ECU information
XJ	2016-	Supercharged V8 5.0L engine	CHCM(Chassis control module)	Read fault codes
XJ	2016-	Supercharged V8 5.0L engine	CHCM(Chassis control module)	Erase fault codes
XJ	2016-	Supercharged V8 5.0L engine	CHCM(Chassis control module)	Live Data
XJ	2016-	Supercharged V8 5.0L engine	IPMA(Image processing control module A)	ECU information
XJ	2016-	Supercharged V8 5.0L engine	IPMA(Image processing control module A)	Read fault codes
XJ	2016-	Supercharged V8 5.0L engine	IPMA(Image processing control module A)	Erase fault codes
XJ	2016-	Supercharged V8 5.0L engine	IPMA(Image processing control module A)	Live Data
XJ	2016-	Supercharged V8 5.0L engine	PAM(Parking assist control module)	ECU information
XJ	2016-	Supercharged V8 5.0L engine	PAM(Parking assist control module)	Read fault codes
XJ	2016-	Supercharged V8 5.0L engine	PAM(Parking assist control module)	Erase fault codes
XJ	2016-	Supercharged V8 5.0L engine	PAM(Parking assist control module)	Live Data
XJ	2016-	Supercharged V8 5.0L engine	PSCM(Power steering control module)	ECU information
XJ	2016-	Supercharged V8 5.0L engine	PSCM(Power steering control module)	Read fault codes
XJ	2016-	Supercharged V8 5.0L engine	PSCM(Power steering control module)	Erase fault codes
XJ	2016-	Supercharged V8 5.0L engine	PSCM(Power steering control module)	Live Data
XJ	2016-	Supercharged V8 5.0L engine	SASM(Steering angle sensor module)	ECU information
XJ	2016-	Supercharged V8 5.0L engine	SASM(Steering angle sensor module)	Read fault codes
XJ	2016-	Supercharged V8 5.0L engine	SASM(Steering angle sensor module)	Erase fault codes
XJ	2016-	Supercharged V8 5.0L engine	SASM(Steering angle sensor module)	Live Data
XJ	2016-	Supercharged V8 5.0L engine	VDM(Vehicle dynamics control module)	ECU information
XJ	2016-	Supercharged V8 5.0L engine	VDM(Vehicle dynamics control module)	Read fault codes
XJ	2016-	Supercharged V8 5.0L engine	VDM(Vehicle dynamics control module)	Erase fault codes
XJ	2016-	Supercharged V8 5.0L engine	VDM(Vehicle dynamics control module)	Live Data
XJ	2016-	Supercharged V8 5.0L engine	FCIM(Integrated control panel)	ECU information
XJ	2016-	Supercharged V8 5.0L engine	FCIM(Integrated control panel)	Read fault codes
XJ	2016-	Supercharged V8 5.0L engine	FCIM(Integrated control panel)	Erase fault codes
XJ	2016-	Supercharged V8 5.0L engine	FCIM(Integrated control panel)	Live Data
XJ	2016-	Supercharged V8 5.0L engine	HVAC(Heating ventilation and air conditioning control module)	ECU information
XJ	2016-	Supercharged V8 5.0L engine	HVAC(Heating ventilation and air conditioning control module)	Read fault codes
XJ	2016-	Supercharged V8 5.0L engine	HVAC(Heating ventilation and air conditioning control module)	Erase fault codes
XJ	2016-	Supercharged V8 5.0L engine	HVAC(Heating ventilation and air conditioning control module)	Live Data
XJ	2016-	Supercharged V8 5.0L engine	IMC(InControl Touch Pro infotainment master controller)	ECU information
XJ	2016-	Supercharged V8 5.0L engine	IMC(InControl Touch Pro infotainment master controller)	Read fault codes
XJ	2016-	Supercharged V8 5.0L engine	IMC(InControl Touch Pro infotainment master controller)	Erase fault codes
XJ	2016-	Supercharged V8 5.0L engine	IMC(InControl Touch Pro infotainment master controller)	Live Data

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XJ	2016-	Supercharged V8 5.0L engine	IPMB (Image processing module B)	ECU information
XJ	2016-	Supercharged V8 5.0L engine	IPMB (Image processing module B)	Read fault codes
XJ	2016-	Supercharged V8 5.0L engine	IPMB (Image processing module B)	Erase fault codes
XJ	2016-	Supercharged V8 5.0L engine	IPMB (Image processing module B)	Live Data
XJ	2016-	Supercharged V8 5.0L engine	RHVAC (Rear Heating ventilation and air conditioning control module)	ECU information
XJ	2016-	Supercharged V8 5.0L engine	RHVAC (Rear Heating ventilation and air conditioning control module)	Read fault codes
XJ	2016-	Supercharged V8 5.0L engine	RHVAC (Rear Heating ventilation and air conditioning control module)	Erase fault codes
XJ	2016-	Supercharged V8 5.0L engine	RHVAC (Rear Heating ventilation and air conditioning control module)	Live Data
XJ	2016-	Supercharged V8 5.0L engine	SODL (Side object detection control module - Left)	ECU information
XJ	2016-	Supercharged V8 5.0L engine	SODL (Side object detection control module - Left)	Read fault codes
XJ	2016-	Supercharged V8 5.0L engine	SODL (Side object detection control module - Left)	Erase fault codes
XJ	2016-	Supercharged V8 5.0L engine	SODL (Side object detection control module - Left)	Live Data
XJ	2016-	Supercharged V8 5.0L engine	SODR (Side object detection control module - Right)	ECU information
XJ	2016-	Supercharged V8 5.0L engine	SODR (Side object detection control module - Right)	Read fault codes
XJ	2016-	Supercharged V8 5.0L engine	SODR (Side object detection control module - Right)	Erase fault codes
XJ	2016-	Supercharged V8 5.0L engine	SODR (Side object detection control module - Right)	Live Data
XJ	2016-	Supercharged V8 5.0L engine	DDM (Driver's door module)	ECU information
XJ	2016-	Supercharged V8 5.0L engine	DDM (Driver's door module)	Read fault codes
XJ	2016-	Supercharged V8 5.0L engine	DDM (Driver's door module)	Erase fault codes
XJ	2016-	Supercharged V8 5.0L engine	DDM (Driver's door module)	Live Data
XJ	2016-	Supercharged V8 5.0L engine	DSM (Driver's seat module)	ECU information
XJ	2016-	Supercharged V8 5.0L engine	DSM (Driver's seat module)	Read fault codes
XJ	2016-	Supercharged V8 5.0L engine	DSM (Driver's seat module)	Erase fault codes
XJ	2016-	Supercharged V8 5.0L engine	DSM (Driver's seat module)	Live Data
XJ	2016-	Supercharged V8 5.0L engine	PDM (Passenger's door module)	ECU information
XJ	2016-	Supercharged V8 5.0L engine	PDM (Passenger's door module)	Read fault codes
XJ	2016-	Supercharged V8 5.0L engine	PDM (Passenger's door module)	Erase fault codes
XJ	2016-	Supercharged V8 5.0L engine	PDM (Passenger's door module)	Live Data
XJ	2016-	Supercharged V8 5.0L engine	PSM (Passenger's seat module)	ECU information
XJ	2016-	Supercharged V8 5.0L engine	PSM (Passenger's seat module)	Read fault codes
XJ	2016-	Supercharged V8 5.0L engine	PSM (Passenger's seat module)	Erase fault codes
XJ	2016-	Supercharged V8 5.0L engine	PSM (Passenger's seat module)	Live Data
XJ	2016-	Supercharged V8 5.0L engine	RFA (Keyless vehicle module)	ECU information
XJ	2016-	Supercharged V8 5.0L engine	RFA (Keyless vehicle module)	Read fault codes
XJ	2016-	Supercharged V8 5.0L engine	RFA (Keyless vehicle module)	Erase fault codes
XJ	2016-	Supercharged V8 5.0L engine	RFA (Keyless vehicle module)	Live Data
XJ	2016-	Supercharged V8 5.0L engine	RGT (Rear gate / trunk module)	ECU information
XJ	2016-	Supercharged V8 5.0L engine	RGT (Rear gate / trunk module)	Read fault codes
XJ	2016-	Supercharged V8 5.0L engine	RGT (Rear gate / trunk module)	Erase fault codes
XJ	2016-	Supercharged V8 5.0L engine	RGT (Rear gate / trunk module)	Live Data
XJ	2016-	Supercharged V8 5.0L engine	RLSM (Rear seat - Control module - Left)	ECU information
XJ	2016-	Supercharged V8 5.0L engine	RLSM (Rear seat - Control module - Left)	Read fault codes
XJ	2016-	Supercharged V8 5.0L engine	RLSM (Rear seat - Control module - Left)	Erase fault codes
XJ	2016-	Supercharged V8 5.0L engine	RLSM (Rear seat - Control module - Left)	Live Data
XJ	2016-	Supercharged V8 5.0L engine	RRSM (Rear seat - Control module - Right)	ECU information
XJ	2016-	Supercharged V8 5.0L engine	RRSM (Rear seat - Control module - Right)	Read fault codes
XJ	2016-	Supercharged V8 5.0L engine	RRSM (Rear seat - Control module - Right)	Erase fault codes
XJ	2016-	Supercharged V8 5.0L engine	RRSM (Rear seat - Control module - Right)	Live Data
XJ	2016-	Supercharged V8 5.0L engine	AAM (InControl Touch Pro audio amplifier module)	ECU information
XJ	2016-	Supercharged V8 5.0L engine	AAM (InControl Touch Pro audio amplifier module)	Read fault codes
XJ	2016-	Supercharged V8 5.0L engine	AAM (InControl Touch Pro audio amplifier module)	Erase fault codes
XJ	2016-	Supercharged V8 5.0L engine	AAM (InControl Touch Pro audio amplifier module)	Live Data
XJ	2016-	Supercharged V8 5.0L engine	ISC (InControl Touch Pro infotainment slave controller)	ECU information
XJ	2016-	Supercharged V8 5.0L engine	ISC (InControl Touch Pro infotainment slave controller)	Read fault codes
XJ	2016-	Supercharged V8 5.0L engine	ISC (InControl Touch Pro infotainment slave controller)	Erase fault codes
XJ	2016-	Supercharged V8 5.0L engine	ISC (InControl Touch Pro infotainment slave controller)	Live Data
XJ	2016-	Supercharged V8 5.0L engine	Special Function	Manual oil reset
XJ	2016-	Supercharged V8 5.0L engine	Special Function	Oil change reset
XJ	2016-	Supercharged V8 5.0L engine	Special Function	Oil service counter reset
XJ	2016-	Supercharged V8 5.0L engine	Special Function	Service interval reset
XJ	2016-	Supercharged V8 5.0L engine	Special Function	Idle speed test
XJ	2016-	Supercharged V8 5.0L engine	Special Function	Injector valve test
XJ	2016-	Supercharged V8 5.0L engine	Special Function	Throttle valve actuator replacement
XJ	2016-	Supercharged V8 5.0L engine	Special Function	Lock steering tune to vehicle
XJ	2016-	Supercharged V8 5.0L engine	Special Function	Power steering soft-lock end stops reset routine
XJ	2016-	Supercharged V8 5.0L engine	Special Function	Steering column calibration
XJ	2016-	Supercharged V8 5.0L engine	Special Function	Yaw rate sensor calibration
XJ	2016-	Supercharged V8 5.0L engine	Special Function	Parking brake activation
XJ	2016-	Supercharged V8 5.0L engine	Special Function	Parking brake pad replacement - Exit maintenance mode application

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XJ	2016-	Supercharged V8 5.0L engine	Special Function	Parking brake pad replacement - Release to service position
XJ	2016-	Supercharged V8 5.0L engine	Special Function	Tire pressure monitor sensor identification display
XJ	2016-	Supercharged V8 5.0L engine	Special Function	Tire pressure sensor replacement
XJ	2016-	Supercharged V8 5.0L engine	Special Function	Battery replacement
XJ	2016-	Supercharged V8 5.0L engine	Special Function	Telematics control module battery replacement reset
XJ	2016-	Supercharged V8 5.0L engine	Special Function	Seat cushion replacement
XJ	2016-	Supercharged V8 5.0L engine	Special Function	Driver's seat calibration
XJ	2016-	Supercharged V8 5.0L engine	Special Function	Passenger's seat calibration
XJ	2016-	GTDI 2.0L engine	PCM(Powertrain control module)	ECU information
XJ	2016-	GTDI 2.0L engine	PCM(Powertrain control module)	Read fault codes
XJ	2016-	GTDI 2.0L engine	PCM(Powertrain control module)	Erase fault codes
XJ	2016-	GTDI 2.0L engine	PCM(Powertrain control module)	Live Data
XJ	2016-	GTDI 2.0L engine	TCM(Transmission control module)	ECU information
XJ	2016-	GTDI 2.0L engine	TCM(Transmission control module)	Read fault codes
XJ	2016-	GTDI 2.0L engine	TCM(Transmission control module)	Erase fault codes
XJ	2016-	GTDI 2.0L engine	TCM(Transmission control module)	Live Data
XJ	2016-	GTDI 2.0L engine	ABS(ABS control module)	ECU information
XJ	2016-	GTDI 2.0L engine	ABS(ABS control module)	Read fault codes
XJ	2016-	GTDI 2.0L engine	ABS(ABS control module)	Erase fault codes
XJ	2016-	GTDI 2.0L engine	ABS(ABS control module)	Live Data
XJ	2016-	GTDI 2.0L engine	RCM(Restraints control module)	ECU information
XJ	2016-	GTDI 2.0L engine	RCM(Restraints control module)	Read fault codes
XJ	2016-	GTDI 2.0L engine	RCM(Restraints control module)	Erase fault codes
XJ	2016-	GTDI 2.0L engine	RCM(Restraints control module)	Live Data
XJ	2016-	GTDI 2.0L engine	IPC(Instrument cluster control module)	ECU information
XJ	2016-	GTDI 2.0L engine	IPC(Instrument cluster control module)	Read fault codes
XJ	2016-	GTDI 2.0L engine	IPC(Instrument cluster control module)	Erase fault codes
XJ	2016-	GTDI 2.0L engine	IPC(Instrument cluster control module)	Live Data
XJ	2016-	GTDI 2.0L engine	BCM(Body control module)	ECU information
XJ	2016-	GTDI 2.0L engine	BCM(Body control module)	Read fault codes
XJ	2016-	GTDI 2.0L engine	BCM(Body control module)	Erase fault codes
XJ	2016-	GTDI 2.0L engine	BCM(Body control module)	Live Data
XJ	2016-	GTDI 2.0L engine	CCM(Speed control module)	ECU information
XJ	2016-	GTDI 2.0L engine	CCM(Speed control module)	Read fault codes
XJ	2016-	GTDI 2.0L engine	CCM(Speed control module)	Erase fault codes
XJ	2016-	GTDI 2.0L engine	CCM(Speed control module)	Live Data
XJ	2016-	GTDI 2.0L engine	GSM(Gear shift module)	ECU information
XJ	2016-	GTDI 2.0L engine	GSM(Gear shift module)	Read fault codes
XJ	2016-	GTDI 2.0L engine	GSM(Gear shift module)	Erase fault codes
XJ	2016-	GTDI 2.0L engine	GSM(Gear shift module)	Live Data
XJ	2016-	GTDI 2.0L engine	GWM(Gateway module)	ECU information
XJ	2016-	GTDI 2.0L engine	GWM(Gateway module)	Read fault codes
XJ	2016-	GTDI 2.0L engine	GWM(Gateway module)	Erase fault codes
XJ	2016-	GTDI 2.0L engine	GWM(Gateway module)	Live Data
XJ	2016-	GTDI 2.0L engine	HCM(Headlamp control module)	ECU information
XJ	2016-	GTDI 2.0L engine	HCM(Headlamp control module)	Read fault codes
XJ	2016-	GTDI 2.0L engine	HCM(Headlamp control module)	Erase fault codes
XJ	2016-	GTDI 2.0L engine	HCM(Headlamp control module)	Live Data
XJ	2016-	GTDI 2.0L engine	OCS(Restraints occupant classification system module)	ECU information
XJ	2016-	GTDI 2.0L engine	OCS(Restraints occupant classification system module)	Read fault codes
XJ	2016-	GTDI 2.0L engine	OCS(Restraints occupant classification system module)	Erase fault codes
XJ	2016-	GTDI 2.0L engine	OCS(Restraints occupant classification system module)	Live Data
XJ	2016-	GTDI 2.0L engine	PBM(Parking brake control module)	ECU information
XJ	2016-	GTDI 2.0L engine	PBM(Parking brake control module)	Read fault codes
XJ	2016-	GTDI 2.0L engine	PBM(Parking brake control module)	Erase fault codes
XJ	2016-	GTDI 2.0L engine	PBM(Parking brake control module)	Live Data
XJ	2016-	GTDI 2.0L engine	RDCM(Rear differential control module)	ECU information
XJ	2016-	GTDI 2.0L engine	RDCM(Rear differential control module)	Read fault codes
XJ	2016-	GTDI 2.0L engine	RDCM(Rear differential control module)	Erase fault codes
XJ	2016-	GTDI 2.0L engine	RDCM(Rear differential control module)	Live Data
XJ	2016-	GTDI 2.0L engine	TCCM(Transfer case control module)	ECU information
XJ	2016-	GTDI 2.0L engine	TCCM(Transfer case control module)	Read fault codes
XJ	2016-	GTDI 2.0L engine	TCCM(Transfer case control module)	Erase fault codes
XJ	2016-	GTDI 2.0L engine	TCCM(Transfer case control module)	Live Data
XJ	2016-	GTDI 2.0L engine	TCU(Telematic control unit module)	ECU information
XJ	2016-	GTDI 2.0L engine	TCU(Telematic control unit module)	Read fault codes
XJ	2016-	GTDI 2.0L engine	TCU(Telematic control unit module)	Erase fault codes
XJ	2016-	GTDI 2.0L engine	TCU(Telematic control unit module)	Live Data
XJ	2016-	GTDI 2.0L engine	TPM(Tire pressure monitor module)	ECU information
XJ	2016-	GTDI 2.0L engine	TPM(Tire pressure monitor module)	Read fault codes
XJ	2016-	GTDI 2.0L engine	TPM(Tire pressure monitor module)	Erase fault codes
XJ	2016-	GTDI 2.0L engine	TPM(Tire pressure monitor module)	Live Data
XJ	2016-	GTDI 2.0L engine	VIM(Vehicle immobilizer control module)	ECU information
XJ	2016-	GTDI 2.0L engine	VIM(Vehicle immobilizer control module)	Read fault codes
XJ	2016-	GTDI 2.0L engine	VIM(Vehicle immobilizer control module)	Erase fault codes
XJ	2016-	GTDI 2.0L engine	VIM(Vehicle immobilizer control module)	Live Data
XJ	2016-	GTDI 2.0L engine	CHCM(Chassis control module)	ECU information
XJ	2016-	GTDI 2.0L engine	CHCM(Chassis control module)	Read fault codes
XJ	2016-	GTDI 2.0L engine	CHCM(Chassis control module)	Erase fault codes
XJ	2016-	GTDI 2.0L engine	CHCM(Chassis control module)	Live Data
XJ	2016-	GTDI 2.0L engine	IPMA(Image processing control module A)	ECU information
XJ	2016-	GTDI 2.0L engine	IPMA(Image processing control module A)	Read fault codes
XJ	2016-	GTDI 2.0L engine	IPMA(Image processing control module A)	Erase fault codes
XJ	2016-	GTDI 2.0L engine	IPMA(Image processing control module A)	Live Data
XJ	2016-	GTDI 2.0L engine	PAM(Parking assist control module)	ECU information

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XJ	2016-	GTDI 2.0L engine	PAM(Parking assist control module)	Read fault codes
XJ	2016-	GTDI 2.0L engine	PAM(Parking assist control module)	Erase fault codes
XJ	2016-	GTDI 2.0L engine	PAM(Parking assist control module)	Live Data
XJ	2016-	GTDI 2.0L engine	PSCM(Power steering control module)	ECU information
XJ	2016-	GTDI 2.0L engine	PSCM(Power steering control module)	Read fault codes
XJ	2016-	GTDI 2.0L engine	PSCM(Power steering control module)	Erase fault codes
XJ	2016-	GTDI 2.0L engine	PSCM(Power steering control module)	Live Data
XJ	2016-	GTDI 2.0L engine	SASM(Steering angle sensor module)	ECU information
XJ	2016-	GTDI 2.0L engine	SASM(Steering angle sensor module)	Read fault codes
XJ	2016-	GTDI 2.0L engine	SASM(Steering angle sensor module)	Erase fault codes
XJ	2016-	GTDI 2.0L engine	SASM(Steering angle sensor module)	Live Data
XJ	2016-	GTDI 2.0L engine	VDM(Vehicle dynamics control module)	ECU information
XJ	2016-	GTDI 2.0L engine	VDM(Vehicle dynamics control module)	Read fault codes
XJ	2016-	GTDI 2.0L engine	VDM(Vehicle dynamics control module)	Erase fault codes
XJ	2016-	GTDI 2.0L engine	VDM(Vehicle dynamics control module)	Live Data
XJ	2016-	GTDI 2.0L engine	FCIM(Integrated control panel)	ECU information
XJ	2016-	GTDI 2.0L engine	FCIM(Integrated control panel)	Read fault codes
XJ	2016-	GTDI 2.0L engine	FCIM(Integrated control panel)	Erase fault codes
XJ	2016-	GTDI 2.0L engine	FCIM(Integrated control panel)	Live Data
XJ	2016-	GTDI 2.0L engine	HVAC(Heating ventilation and air conditioning control module)	ECU information
XJ	2016-	GTDI 2.0L engine	HVAC(Heating ventilation and air conditioning control module)	Read fault codes
XJ	2016-	GTDI 2.0L engine	HVAC(Heating ventilation and air conditioning control module)	Erase fault codes
XJ	2016-	GTDI 2.0L engine	HVAC(Heating ventilation and air conditioning control module)	Live Data
XJ	2016-	GTDI 2.0L engine	IMC(InControl Touch Pro infotainment master controller)	ECU information
XJ	2016-	GTDI 2.0L engine	IMC(InControl Touch Pro infotainment master controller)	Read fault codes
XJ	2016-	GTDI 2.0L engine	IMC(InControl Touch Pro infotainment master controller)	Erase fault codes
XJ	2016-	GTDI 2.0L engine	IMC(InControl Touch Pro infotainment master controller)	Live Data
XJ	2016-	GTDI 2.0L engine	IPMB(Image processing module B)	ECU information
XJ	2016-	GTDI 2.0L engine	IPMB(Image processing module B)	Read fault codes
XJ	2016-	GTDI 2.0L engine	IPMB(Image processing module B)	Erase fault codes
XJ	2016-	GTDI 2.0L engine	IPMB(Image processing module B)	Live Data
XJ	2016-	GTDI 2.0L engine	RHVAC(Rear Heating ventilation and air conditioning control module)	ECU information
XJ	2016-	GTDI 2.0L engine	RHVAC(Rear Heating ventilation and air conditioning control module)	Read fault codes
XJ	2016-	GTDI 2.0L engine	RHVAC(Rear Heating ventilation and air conditioning control module)	Erase fault codes
XJ	2016-	GTDI 2.0L engine	RHVAC(Rear Heating ventilation and air conditioning control module)	Live Data
XJ	2016-	GTDI 2.0L engine	SODL(Side object detection control module - Left)	ECU information
XJ	2016-	GTDI 2.0L engine	SODL(Side object detection control module - Left)	Read fault codes
XJ	2016-	GTDI 2.0L engine	SODL(Side object detection control module - Left)	Erase fault codes
XJ	2016-	GTDI 2.0L engine	SODL(Side object detection control module - Left)	Live Data
XJ	2016-	GTDI 2.0L engine	SODR(Side object detection control module - Right)	ECU information
XJ	2016-	GTDI 2.0L engine	SODR(Side object detection control module - Right)	Read fault codes
XJ	2016-	GTDI 2.0L engine	SODR(Side object detection control module - Right)	Erase fault codes
XJ	2016-	GTDI 2.0L engine	SODR(Side object detection control module - Right)	Live Data
XJ	2016-	GTDI 2.0L engine	DDM(Driver's door module)	ECU information
XJ	2016-	GTDI 2.0L engine	DDM(Driver's door module)	Read fault codes
XJ	2016-	GTDI 2.0L engine	DDM(Driver's door module)	Erase fault codes
XJ	2016-	GTDI 2.0L engine	DDM(Driver's door module)	Live Data
XJ	2016-	GTDI 2.0L engine	DSM(Driver's seat module)	ECU information
XJ	2016-	GTDI 2.0L engine	DSM(Driver's seat module)	Read fault codes
XJ	2016-	GTDI 2.0L engine	DSM(Driver's seat module)	Erase fault codes
XJ	2016-	GTDI 2.0L engine	DSM(Driver's seat module)	Live Data
XJ	2016-	GTDI 2.0L engine	PDM(Passenger's door module)	ECU information
XJ	2016-	GTDI 2.0L engine	PDM(Passenger's door module)	Read fault codes
XJ	2016-	GTDI 2.0L engine	PDM(Passenger's door module)	Erase fault codes
XJ	2016-	GTDI 2.0L engine	PDM(Passenger's door module)	Live Data
XJ	2016-	GTDI 2.0L engine	PSM(Passenger's seat module)	ECU information
XJ	2016-	GTDI 2.0L engine	PSM(Passenger's seat module)	Read fault codes
XJ	2016-	GTDI 2.0L engine	PSM(Passenger's seat module)	Erase fault codes
XJ	2016-	GTDI 2.0L engine	PSM(Passenger's seat module)	Live Data
XJ	2016-	GTDI 2.0L engine	RFA(Keyless vehicle module)	ECU information
XJ	2016-	GTDI 2.0L engine	RFA(Keyless vehicle module)	Read fault codes
XJ	2016-	GTDI 2.0L engine	RFA(Keyless vehicle module)	Erase fault codes
XJ	2016-	GTDI 2.0L engine	RFA(Keyless vehicle module)	Live Data
XJ	2016-	GTDI 2.0L engine	RGTM(Rear gate / trunk module)	ECU information
XJ	2016-	GTDI 2.0L engine	RGTM(Rear gate / trunk module)	Read fault codes
XJ	2016-	GTDI 2.0L engine	RGTM(Rear gate / trunk module)	Erase fault codes
XJ	2016-	GTDI 2.0L engine	RGTM(Rear gate / trunk module)	Live Data
XJ	2016-	GTDI 2.0L engine	RLSM(Rear seat - Control module - Left)	ECU information
XJ	2016-	GTDI 2.0L engine	RLSM(Rear seat - Control module - Left)	Read fault codes
XJ	2016-	GTDI 2.0L engine	RLSM(Rear seat - Control module - Left)	Erase fault codes
XJ	2016-	GTDI 2.0L engine	RLSM(Rear seat - Control module - Left)	Live Data
XJ	2016-	GTDI 2.0L engine	RRSM(Rear seat - Control module - Right)	ECU information

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XJ	2016-	GTDI 2.0L engine	RRSM(Rear seat - Control module - Right)	Read fault codes
XJ	2016-	GTDI 2.0L engine	RRSM(Rear seat - Control module - Right)	Erase fault codes
XJ	2016-	GTDI 2.0L engine	RRSM(Rear seat - Control module - Right)	Live Data
XJ	2016-	GTDI 2.0L engine	AAM(InControl Touch Pro audio amplifier module)	ECU information
XJ	2016-	GTDI 2.0L engine	AAM(InControl Touch Pro audio amplifier module)	Read fault codes
XJ	2016-	GTDI 2.0L engine	AAM(InControl Touch Pro audio amplifier module)	Erase fault codes
XJ	2016-	GTDI 2.0L engine	AAM(InControl Touch Pro audio amplifier module)	Live Data
XJ	2016-	GTDI 2.0L engine	ISC(InControl Touch Pro infotainment slave controller)	ECU information
XJ	2016-	GTDI 2.0L engine	ISC(InControl Touch Pro infotainment slave controller)	Read fault codes
XJ	2016-	GTDI 2.0L engine	ISC(InControl Touch Pro infotainment slave controller)	Erase fault codes
XJ	2016-	GTDI 2.0L engine	ISC(InControl Touch Pro infotainment slave controller)	Live Data
XJ	2016-	GTDI 2.0L engine	Special Function	Manual oil reset
XJ	2016-	GTDI 2.0L engine	Special Function	Oil change reset
XJ	2016-	GTDI 2.0L engine	Special Function	Service interval reset
XJ	2016-	GTDI 2.0L engine	Special Function	Throttle valve actuator replacement
XJ	2016-	GTDI 2.0L engine	Special Function	Injector valve test
XJ	2016-	GTDI 2.0L engine	Special Function	Parking brake activation
XJ	2016-	GTDI 2.0L engine	Special Function	Parking brake pad replacement - Exit maintenance mode application
XJ	2016-	GTDI 2.0L engine	Special Function	Parking brake pad replacement - Release to service position
XJ	2016-	GTDI 2.0L engine	Special Function	Lock steering tune to vehicle
XJ	2016-	GTDI 2.0L engine	Special Function	Power steering soft-lock end stops reset routine
XJ	2016-	GTDI 2.0L engine	Special Function	Steering column calibration
XJ	2016-	GTDI 2.0L engine	Special Function	Yaw rate sensor calibration
XJ	2016-	GTDI 2.0L engine	Special Function	Tire pressure monitor sensor identification display
XJ	2016-	GTDI 2.0L engine	Special Function	Tire pressure sensor replacement
XJ	2016-	GTDI 2.0L engine	Special Function	Diesel particulate filter differential pressure sensor replacement
XJ	2016-	GTDI 2.0L engine	Special Function	Battery replacement
XJ	2016-	GTDI 2.0L engine	Special Function	Telematics control module battery replacement reset
XJ	2016-	GTDI 2.0L engine	Special Function	Seat cushion replacement
XJ	2016-	GTDI 2.0L engine	Special Function	Driver's seat calibration
XJ	2016-	GTDI 2.0L engine	Special Function	Passenger's seat calibration
XJ	2016-	Supercharged V6	PCM(Powertrain control module)	ECU information
XJ	2016-	Supercharged V6	PCM(Powertrain control module)	Read fault codes
XJ	2016-	Supercharged V6	PCM(Powertrain control module)	Erase fault codes
XJ	2016-	Supercharged V6	PCM(Powertrain control module)	Live Data
XJ	2016-	Supercharged V6	TCM(Transmission control module)	ECU information
XJ	2016-	Supercharged V6	TCM(Transmission control module)	Read fault codes
XJ	2016-	Supercharged V6	TCM(Transmission control module)	Erase fault codes
XJ	2016-	Supercharged V6	TCM(Transmission control module)	Live Data
XJ	2016-	Supercharged V6	ABS (ABS control module)	ECU information
XJ	2016-	Supercharged V6	ABS (ABS control module)	Read fault codes
XJ	2016-	Supercharged V6	ABS (ABS control module)	Erase fault codes
XJ	2016-	Supercharged V6	ABS (ABS control module)	Live Data
XJ	2016-	Supercharged V6	RCM(Restraints control module)	ECU information
XJ	2016-	Supercharged V6	RCM(Restraints control module)	Read fault codes
XJ	2016-	Supercharged V6	RCM(Restraints control module)	Erase fault codes
XJ	2016-	Supercharged V6	RCM(Restraints control module)	Live Data
XJ	2016-	Supercharged V6	IPC (Instrument cluster control module)	ECU information
XJ	2016-	Supercharged V6	IPC (Instrument cluster control module)	Read fault codes
XJ	2016-	Supercharged V6	IPC (Instrument cluster control module)	Erase fault codes
XJ	2016-	Supercharged V6	IPC (Instrument cluster control module)	Live Data
XJ	2016-	Supercharged V6	BCM (Body control module)	ECU information
XJ	2016-	Supercharged V6	BCM (Body control module)	Read fault codes
XJ	2016-	Supercharged V6	BCM (Body control module)	Erase fault codes
XJ	2016-	Supercharged V6	BCM (Body control module)	Live Data
XJ	2016-	Supercharged V6	CCM (Speed control module)	ECU information
XJ	2016-	Supercharged V6	CCM (Speed control module)	Read fault codes
XJ	2016-	Supercharged V6	CCM (Speed control module)	Erase fault codes
XJ	2016-	Supercharged V6	CCM (Speed control module)	Live Data
XJ	2016-	Supercharged V6	GSM (Gear shift module)	ECU information
XJ	2016-	Supercharged V6	GSM (Gear shift module)	Read fault codes
XJ	2016-	Supercharged V6	GSM (Gear shift module)	Erase fault codes
XJ	2016-	Supercharged V6	GSM (Gear shift module)	Live Data
XJ	2016-	Supercharged V6	GWM (Gateway module)	ECU information
XJ	2016-	Supercharged V6	GWM (Gateway module)	Read fault codes
XJ	2016-	Supercharged V6	GWM (Gateway module)	Erase fault codes
XJ	2016-	Supercharged V6	GWM (Gateway module)	Live Data
XJ	2016-	Supercharged V6	HCM (Headlamp control module)	ECU information
XJ	2016-	Supercharged V6	HCM (Headlamp control module)	Read fault codes
XJ	2016-	Supercharged V6	HCM (Headlamp control module)	Erase fault codes
XJ	2016-	Supercharged V6	HCM (Headlamp control module)	Live Data
XJ	2016-	Supercharged V6	OCS (Restraints occupant classification system module)	ECU information
XJ	2016-	Supercharged V6	OCS (Restraints occupant classification system module)	Read fault codes
XJ	2016-	Supercharged V6	OCS (Restraints occupant classification system module)	Erase fault codes



## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XJ	2016-	Supercharged V6	OCS(Restraints occupant classification system module)	Live Data
XJ	2016-	Supercharged V6	PBM(Parking brake control module)	ECU information
XJ	2016-	Supercharged V6	PBM(Parking brake control module)	Read fault codes
XJ	2016-	Supercharged V6	PBM(Parking brake control module)	Erase fault codes
XJ	2016-	Supercharged V6	PBM(Parking brake control module)	Live Data
XJ	2016-	Supercharged V6	RDCM(Rear differential control module)	ECU information
XJ	2016-	Supercharged V6	RDCM(Rear differential control module)	Read fault codes
XJ	2016-	Supercharged V6	RDCM(Rear differential control module)	Erase fault codes
XJ	2016-	Supercharged V6	RDCM(Rear differential control module)	Live Data
XJ	2016-	Supercharged V6	TCCM(Transfer case control module)	ECU information
XJ	2016-	Supercharged V6	TCCM(Transfer case control module)	Read fault codes
XJ	2016-	Supercharged V6	TCCM(Transfer case control module)	Erase fault codes
XJ	2016-	Supercharged V6	TCCM(Transfer case control module)	Live Data
XJ	2016-	Supercharged V6	TCU(Telematic control unit module)	ECU information
XJ	2016-	Supercharged V6	TCU(Telematic control unit module)	Read fault codes
XJ	2016-	Supercharged V6	TCU(Telematic control unit module)	Erase fault codes
XJ	2016-	Supercharged V6	TCU(Telematic control unit module)	Live Data
XJ	2016-	Supercharged V6	TPM(Tire pressure monitor module)	ECU information
XJ	2016-	Supercharged V6	TPM(Tire pressure monitor module)	Read fault codes
XJ	2016-	Supercharged V6	TPM(Tire pressure monitor module)	Erase fault codes
XJ	2016-	Supercharged V6	TPM(Tire pressure monitor module)	Live Data
XJ	2016-	Supercharged V6	VIM(Vehicle immobilizer control module)	ECU information
XJ	2016-	Supercharged V6	VIM(Vehicle immobilizer control module)	Read fault codes
XJ	2016-	Supercharged V6	VIM(Vehicle immobilizer control module)	Erase fault codes
XJ	2016-	Supercharged V6	VIM(Vehicle immobilizer control module)	Live Data
XJ	2016-	Supercharged V6	CHCM(Chassis control module)	ECU information
XJ	2016-	Supercharged V6	CHCM(Chassis control module)	Read fault codes
XJ	2016-	Supercharged V6	CHCM(Chassis control module)	Erase fault codes
XJ	2016-	Supercharged V6	CHCM(Chassis control module)	Live Data
XJ	2016-	Supercharged V6	IPMA(Image processing control module A)	ECU information
XJ	2016-	Supercharged V6	IPMA(Image processing control module A)	Read fault codes
XJ	2016-	Supercharged V6	IPMA(Image processing control module A)	Erase fault codes
XJ	2016-	Supercharged V6	IPMA(Image processing control module A)	Live Data
XJ	2016-	Supercharged V6	PAM(Parking assist control module)	ECU information
XJ	2016-	Supercharged V6	PAM(Parking assist control module)	Read fault codes
XJ	2016-	Supercharged V6	PAM(Parking assist control module)	Erase fault codes
XJ	2016-	Supercharged V6	PAM(Parking assist control module)	Live Data
XJ	2016-	Supercharged V6	PSCM(Power steering control module)	ECU information
XJ	2016-	Supercharged V6	PSCM(Power steering control module)	Read fault codes
XJ	2016-	Supercharged V6	PSCM(Power steering control module)	Erase fault codes
XJ	2016-	Supercharged V6	PSCM(Power steering control module)	Live Data
XJ	2016-	Supercharged V6	SASM(Steering angle sensor module)	ECU information
XJ	2016-	Supercharged V6	SASM(Steering angle sensor module)	Read fault codes
XJ	2016-	Supercharged V6	SASM(Steering angle sensor module)	Erase fault codes
XJ	2016-	Supercharged V6	SASM(Steering angle sensor module)	Live Data
XJ	2016-	Supercharged V6	VDM(Vehicle dynamics control module)	ECU information
XJ	2016-	Supercharged V6	VDM(Vehicle dynamics control module)	Read fault codes
XJ	2016-	Supercharged V6	VDM(Vehicle dynamics control module)	Erase fault codes
XJ	2016-	Supercharged V6	VDM(Vehicle dynamics control module)	Live Data
XJ	2016-	Supercharged V6	FCIM(Integrated control panel)	ECU information
XJ	2016-	Supercharged V6	FCIM(Integrated control panel)	Read fault codes
XJ	2016-	Supercharged V6	FCIM(Integrated control panel)	Erase fault codes
XJ	2016-	Supercharged V6	FCIM(Integrated control panel)	Live Data
XJ	2016-	Supercharged V6	HVAC(Heating ventilation and air conditioning control module)	ECU information
XJ	2016-	Supercharged V6	HVAC(Heating ventilation and air conditioning control module)	Read fault codes
XJ	2016-	Supercharged V6	HVAC(Heating ventilation and air conditioning control module)	Erase fault codes
XJ	2016-	Supercharged V6	HVAC(Heating ventilation and air conditioning control module)	Live Data
XJ	2016-	Supercharged V6	IMC(InControl Touch Pro infotainment master controller)	ECU information
XJ	2016-	Supercharged V6	IMC(InControl Touch Pro infotainment master controller)	Read fault codes
XJ	2016-	Supercharged V6	IMC(InControl Touch Pro infotainment master controller)	Erase fault codes
XJ	2016-	Supercharged V6	IMC(InControl Touch Pro infotainment master controller)	Live Data
XJ	2016-	Supercharged V6	IPMB(Image processing module B)	ECU information
XJ	2016-	Supercharged V6	IPMB(Image processing module B)	Read fault codes
XJ	2016-	Supercharged V6	IPMB(Image processing module B)	Erase fault codes
XJ	2016-	Supercharged V6	IPMB(Image processing module B)	Live Data
XJ	2016-	Supercharged V6	RHVAC(Rear Heating ventilation and air conditioning control module)	ECU information
XJ	2016-	Supercharged V6	RHVAC(Rear Heating ventilation and air conditioning control module)	Read fault codes
XJ	2016-	Supercharged V6	RHVAC(Rear Heating ventilation and air conditioning control module)	Erase fault codes
XJ	2016-	Supercharged V6	RHVAC(Rear Heating ventilation and air conditioning control module)	Live Data
XJ	2016-	Supercharged V6	SODL(Side object detection control module - Left)	ECU information
XJ	2016-	Supercharged V6	SODL(Side object detection control module - Left)	Read fault codes
XJ	2016-	Supercharged V6	SODL(Side object detection control module - Left)	Erase fault codes
XJ	2016-	Supercharged V6	SODL(Side object detection control module - Left)	Live Data
XJ	2016-	Supercharged V6	SODR(Side object detection control module - Right)	ECU information

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XJ	2016-	Supercharged V6	SODR(Side object detection control module - Right)	Read fault codes
XJ	2016-	Supercharged V6	SODR(Side object detection control module - Right)	Erase fault codes
XJ	2016-	Supercharged V6	SODR(Side object detection control module - Right)	Live Data
XJ	2016-	Supercharged V6	DDM(Driver's door module)	ECU information
XJ	2016-	Supercharged V6	DDM(Driver's door module)	Read fault codes
XJ	2016-	Supercharged V6	DDM(Driver's door module)	Erase fault codes
XJ	2016-	Supercharged V6	DDM(Driver's door module)	Live Data
XJ	2016-	Supercharged V6	DSM(Driver's seat module)	ECU information
XJ	2016-	Supercharged V6	DSM(Driver's seat module)	Read fault codes
XJ	2016-	Supercharged V6	DSM(Driver's seat module)	Erase fault codes
XJ	2016-	Supercharged V6	DSM(Driver's seat module)	Live Data
XJ	2016-	Supercharged V6	PDM(Passenger's door module)	ECU information
XJ	2016-	Supercharged V6	PDM(Passenger's door module)	Read fault codes
XJ	2016-	Supercharged V6	PDM(Passenger's door module)	Erase fault codes
XJ	2016-	Supercharged V6	PDM(Passenger's door module)	Live Data
XJ	2016-	Supercharged V6	PSM(Passenger's seat module)	ECU information
XJ	2016-	Supercharged V6	PSM(Passenger's seat module)	Read fault codes
XJ	2016-	Supercharged V6	PSM(Passenger's seat module)	Erase fault codes
XJ	2016-	Supercharged V6	PSM(Passenger's seat module)	Live Data
XJ	2016-	Supercharged V6	RFA(Keyless vehicle module)	ECU information
XJ	2016-	Supercharged V6	RFA(Keyless vehicle module)	Read fault codes
XJ	2016-	Supercharged V6	RFA(Keyless vehicle module)	Erase fault codes
XJ	2016-	Supercharged V6	RFA(Keyless vehicle module)	Live Data
XJ	2016-	Supercharged V6	RGTM(Rear gate / trunk module)	ECU information
XJ	2016-	Supercharged V6	RGTM(Rear gate / trunk module)	Read fault codes
XJ	2016-	Supercharged V6	RGTM(Rear gate / trunk module)	Erase fault codes
XJ	2016-	Supercharged V6	RGTM(Rear gate / trunk module)	Live Data
XJ	2016-	Supercharged V6	RLSM(Rear seat - Control module - Left)	ECU information
XJ	2016-	Supercharged V6	RLSM(Rear seat - Control module - Left)	Read fault codes
XJ	2016-	Supercharged V6	RLSM(Rear seat - Control module - Left)	Erase fault codes
XJ	2016-	Supercharged V6	RLSM(Rear seat - Control module - Left)	Live Data
XJ	2016-	Supercharged V6	RISM(Rear seat - Control module - Right)	ECU information
XJ	2016-	Supercharged V6	RISM(Rear seat - Control module - Right)	Read fault codes
XJ	2016-	Supercharged V6	RISM(Rear seat - Control module - Right)	Erase fault codes
XJ	2016-	Supercharged V6	RISM(Rear seat - Control module - Right)	Live Data
XJ	2016-	Supercharged V6	AAM(InControl Touch Pro audio amplifier module)	ECU information
XJ	2016-	Supercharged V6	AAM(InControl Touch Pro audio amplifier module)	Read fault codes
XJ	2016-	Supercharged V6	AAM(InControl Touch Pro audio amplifier module)	Erase fault codes
XJ	2016-	Supercharged V6	AAM(InControl Touch Pro audio amplifier module)	Live Data
XJ	2016-	Supercharged V6	ISC(InControl Touch Pro infotainment slave controller)	ECU information
XJ	2016-	Supercharged V6	ISC(InControl Touch Pro infotainment slave controller)	Read fault codes
XJ	2016-	Supercharged V6	ISC(InControl Touch Pro infotainment slave controller)	Erase fault codes
XJ	2016-	Supercharged V6	ISC(InControl Touch Pro infotainment slave controller)	Live Data
XJ	2016-	Supercharged V6	Special Function	Manual oil reset
XJ	2016-	Supercharged V6	Special Function	Oil change reset
XJ	2016-	Supercharged V6	Special Function	Oil service counter reset
XJ	2016-	Supercharged V6	Special Function	Service interval reset
XJ	2016-	Supercharged V6	Special Function	Injector valve test
XJ	2016-	Supercharged V6	Special Function	Idle speed test
XJ	2016-	Supercharged V6	Special Function	Throttle valve actuator replacement
XJ	2016-	Supercharged V6	Special Function	Parking brake activation
XJ	2016-	Supercharged V6	Special Function	Parking brake pad replacement - Exit maintenance mode application
XJ	2016-	Supercharged V6	Special Function	Parking brake pad replacement - Release to service position
XJ	2016-	Supercharged V6	Special Function	Lock steering tune to vehicle
XJ	2016-	Supercharged V6	Special Function	Power steering soft-lock end stops reset routine
XJ	2016-	Supercharged V6	Special Function	Steering column calibration
XJ	2016-	Supercharged V6	Special Function	Yaw rate sensor calibration
XJ	2016-	Supercharged V6	Special Function	Tire pressure monitor sensor identification display
XJ	2016-	Supercharged V6	Special Function	Tire pressure sensor replacement
XJ	2016-	Supercharged V6	Special Function	Diesel particulate filter differential pressure sensor replacement
XJ	2016-	Supercharged V6	Special Function	Battery replacement
XJ	2016-	Supercharged V6	Special Function	Telematics control module battery replacement reset
XJ	2016-	Supercharged V6	Special Function	Seat cushion replacement
XJ	2016-	Supercharged V6	Special Function	Driver's seat calibration
XJ	2016-	Supercharged V6	Special Function	Passenger's seat calibration
XJ	2013-2015	V6 Diesel	PCM(Powertrain control module)	ECU information
XJ	2013-2015	V6 Diesel	PCM(Powertrain control module)	Read fault codes
XJ	2013-2015	V6 Diesel	PCM(Powertrain control module)	Erase fault codes
XJ	2013-2015	V6 Diesel	PCM(Powertrain control module)	Live Data
XJ	2013-2015	V6 Diesel	TCM(Transmission control module)	ECU information
XJ	2013-2015	V6 Diesel	TCM(Transmission control module)	Read fault codes
XJ	2013-2015	V6 Diesel	TCM(Transmission control module)	Erase fault codes
XJ	2013-2015	V6 Diesel	TCM(Transmission control module)	Live Data
XJ	2013-2015	V6 Diesel	ABS(ABS control module)	ECU information
XJ	2013-2015	V6 Diesel	ABS(ABS control module)	Read fault codes

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XJ	2013-2015	V6 Diesel	ABS(ABS control module)	Erase fault codes
XJ	2013-2015	V6 Diesel	ABS(ABS control module)	Live Data
XJ	2013-2015	V6 Diesel	RCM(Restraints control module)	ECU information
XJ	2013-2015	V6 Diesel	RCM(Restraints control module)	Read fault codes
XJ	2013-2015	V6 Diesel	RCM(Restraints control module)	Erase fault codes
XJ	2013-2015	V6 Diesel	RCM(Restraints control module)	Live Data
XJ	2013-2015	V6 Diesel	IPC(Instrument cluster control module)	ECU information
XJ	2013-2015	V6 Diesel	IPC(Instrument cluster control module)	Read fault codes
XJ	2013-2015	V6 Diesel	IPC(Instrument cluster control module)	Erase fault codes
XJ	2013-2015	V6 Diesel	IPC(Instrument cluster control module)	Live Data
XJ	2013-2015	V6 Diesel	BCM(Body control module)	ECU information
XJ	2013-2015	V6 Diesel	BCM(Body control module)	Read fault codes
XJ	2013-2015	V6 Diesel	BCM(Body control module)	Erase fault codes
XJ	2013-2015	V6 Diesel	BCM(Body control module)	Live Data
XJ	2013-2015	V6 Diesel	CCM(Speed control module)	ECU information
XJ	2013-2015	V6 Diesel	CCM(Speed control module)	Read fault codes
XJ	2013-2015	V6 Diesel	CCM(Speed control module)	Erase fault codes
XJ	2013-2015	V6 Diesel	CCM(Speed control module)	Live Data
XJ	2013-2015	V6 Diesel	CHCM(Chassis control module)	ECU information
XJ	2013-2015	V6 Diesel	CHCM(Chassis control module)	Read fault codes
XJ	2013-2015	V6 Diesel	CHCM(Chassis control module)	Erase fault codes
XJ	2013-2015	V6 Diesel	CHCM(Chassis control module)	Live Data
XJ	2013-2015	V6 Diesel	GSM(Gear shift module)	ECU information
XJ	2013-2015	V6 Diesel	GSM(Gear shift module)	Read fault codes
XJ	2013-2015	V6 Diesel	GSM(Gear shift module)	Erase fault codes
XJ	2013-2015	V6 Diesel	GSM(Gear shift module)	Live Data
XJ	2013-2015	V6 Diesel	GWM(Gateway module)	ECU information
XJ	2013-2015	V6 Diesel	GWM(Gateway module)	Read fault codes
XJ	2013-2015	V6 Diesel	GWM(Gateway module)	Erase fault codes
XJ	2013-2015	V6 Diesel	GWM(Gateway module)	Live Data
XJ	2013-2015	V6 Diesel	HCM(Headlamp control module)	ECU information
XJ	2013-2015	V6 Diesel	HCM(Headlamp control module)	Read fault codes
XJ	2013-2015	V6 Diesel	HCM(Headlamp control module)	Erase fault codes
XJ	2013-2015	V6 Diesel	HCM(Headlamp control module)	Live Data
XJ	2013-2015	V6 Diesel	OCS(Restraints occupant classification system module)	ECU information
XJ	2013-2015	V6 Diesel	OCS(Restraints occupant classification system module)	Read fault codes
XJ	2013-2015	V6 Diesel	OCS(Restraints occupant classification system module)	Erase fault codes
XJ	2013-2015	V6 Diesel	OCS(Restraints occupant classification system module)	Live Data
XJ	2013-2015	V6 Diesel	PBM(Parking brake control module)	ECU information
XJ	2013-2015	V6 Diesel	PBM(Parking brake control module)	Read fault codes
XJ	2013-2015	V6 Diesel	PBM(Parking brake control module)	Erase fault codes
XJ	2013-2015	V6 Diesel	PBM(Parking brake control module)	Live Data
XJ	2013-2015	V6 Diesel	RDCM(Rear differential control module)	ECU information
XJ	2013-2015	V6 Diesel	RDCM(Rear differential control module)	Read fault codes
XJ	2013-2015	V6 Diesel	RDCM(Rear differential control module)	Erase fault codes
XJ	2013-2015	V6 Diesel	RDCM(Rear differential control module)	Live Data
XJ	2013-2015	V6 Diesel	SPMA(Safety belt pretensioner control module A - drivers side)	ECU information
XJ	2013-2015	V6 Diesel	SPMA(Safety belt pretensioner control module A - drivers side)	Read fault codes
XJ	2013-2015	V6 Diesel	SPMA(Safety belt pretensioner control module A - drivers side)	Erase fault codes
XJ	2013-2015	V6 Diesel	SPMA(Safety belt pretensioner control module A - drivers side)	Live Data
XJ	2013-2015	V6 Diesel	SPMB(Safety belt pretensioner control module B - passengers side)	ECU information
XJ	2013-2015	V6 Diesel	SPMB(Safety belt pretensioner control module B - passengers side)	Read fault codes
XJ	2013-2015	V6 Diesel	SPMB(Safety belt pretensioner control module B - passengers side)	Erase fault codes
XJ	2013-2015	V6 Diesel	SPMB(Safety belt pretensioner control module B - passengers side)	Live Data
XJ	2013-2015	V6 Diesel	TCCM(Transfer case control module)	ECU information
XJ	2013-2015	V6 Diesel	TCCM(Transfer case control module)	Read fault codes
XJ	2013-2015	V6 Diesel	TCCM(Transfer case control module)	Erase fault codes
XJ	2013-2015	V6 Diesel	TCCM(Transfer case control module)	Live Data
XJ	2013-2015	V6 Diesel	VIM(Vehicle immobilizer control module)	ECU information
XJ	2013-2015	V6 Diesel	VIM(Vehicle immobilizer control module)	Read fault codes
XJ	2013-2015	V6 Diesel	VIM(Vehicle immobilizer control module)	Erase fault codes
XJ	2013-2015	V6 Diesel	VIM(Vehicle immobilizer control module)	Live Data
XJ	2013-2015	V6 Diesel	DDM(Driver's door module)	ECU information
XJ	2013-2015	V6 Diesel	DDM(Driver's door module)	Read fault codes
XJ	2013-2015	V6 Diesel	DDM(Driver's door module)	Erase fault codes
XJ	2013-2015	V6 Diesel	DDM(Driver's door module)	Live Data
XJ	2013-2015	V6 Diesel	DSM(Driver's seat module)	ECU information
XJ	2013-2015	V6 Diesel	DSM(Driver's seat module)	Read fault codes
XJ	2013-2015	V6 Diesel	DSM(Driver's seat module)	Erase fault codes
XJ	2013-2015	V6 Diesel	DSM(Driver's seat module)	Live Data
XJ	2013-2015	V6 Diesel	FCDIM(Front control/display interface module (high level display front))	ECU information
XJ	2013-2015	V6 Diesel	FCDIM(Front control/display interface module (high level display front))	Read fault codes
XJ	2013-2015	V6 Diesel	FCDIM(Front control/display interface module (high level display front))	Erase fault codes
XJ	2013-2015	V6 Diesel	FCDIM(Front control/display interface module (high level display front))	Live Data
XJ	2013-2015	V6 Diesel	FCIMB(Front controls interface module B (front audio control panel))	ECU information

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XJ	2013-2015	V6 Diesel	FCIMB(Front controls interface module B (front audio control panel))	Read fault codes
XJ	2013-2015	V6 Diesel	FCIMB(Front controls interface module B (front audio control panel))	Erase fault codes
XJ	2013-2015	V6 Diesel	FCIMB(Front controls interface module B (front audio control panel))	Live Data
XJ	2013-2015	V6 Diesel	HCMB(Headlamp control module B)	ECU information
XJ	2013-2015	V6 Diesel	HCMB(Headlamp control module B)	Read fault codes
XJ	2013-2015	V6 Diesel	HCMB(Headlamp control module B)	Erase fault codes
XJ	2013-2015	V6 Diesel	HCMB(Headlamp control module B)	Live Data
XJ	2013-2015	V6 Diesel	HVAC(Heating ventilation and air conditioning control module)	ECU information
XJ	2013-2015	V6 Diesel	HVAC(Heating ventilation and air conditioning control module)	Read fault codes
XJ	2013-2015	V6 Diesel	HVAC(Heating ventilation and air conditioning control module)	Erase fault codes
XJ	2013-2015	V6 Diesel	HVAC(Heating ventilation and air conditioning control module)	Live Data
XJ	2013-2015	V6 Diesel	PAM(Parking assist control module)	ECU information
XJ	2013-2015	V6 Diesel	PAM(Parking assist control module)	Read fault codes
XJ	2013-2015	V6 Diesel	PAM(Parking assist control module)	Erase fault codes
XJ	2013-2015	V6 Diesel	PAM(Parking assist control module)	Live Data
XJ	2013-2015	V6 Diesel	PDM(Passenger's door module)	ECU information
XJ	2013-2015	V6 Diesel	PDM(Passenger's door module)	Read fault codes
XJ	2013-2015	V6 Diesel	PDM(Passenger's door module)	Erase fault codes
XJ	2013-2015	V6 Diesel	PDM(Passenger's door module)	Live Data
XJ	2013-2015	V6 Diesel	PSM(Passenger's seat module)	ECU information
XJ	2013-2015	V6 Diesel	PSM(Passenger's seat module)	Read fault codes
XJ	2013-2015	V6 Diesel	PSM(Passenger's seat module)	Erase fault codes
XJ	2013-2015	V6 Diesel	PSM(Passenger's seat module)	Live Data
XJ	2013-2015	V6 Diesel	RFA(Keyless vehicle module)	ECU information
XJ	2013-2015	V6 Diesel	RFA(Keyless vehicle module)	Read fault codes
XJ	2013-2015	V6 Diesel	RFA(Keyless vehicle module)	Erase fault codes
XJ	2013-2015	V6 Diesel	RFA(Keyless vehicle module)	Live Data
XJ	2013-2015	V6 Diesel	RGTM(Rear gate / trunk module)	ECU information
XJ	2013-2015	V6 Diesel	RGTM(Rear gate / trunk module)	Read fault codes
XJ	2013-2015	V6 Diesel	RGTM(Rear gate / trunk module)	Erase fault codes
XJ	2013-2015	V6 Diesel	RGTM(Rear gate / trunk module)	Live Data
XJ	2013-2015	V6 Diesel	RHVAC(Rear Heating ventilation and air conditioning control module)	ECU information
XJ	2013-2015	V6 Diesel	RHVAC(Rear Heating ventilation and air conditioning control module)	Read fault codes
XJ	2013-2015	V6 Diesel	RHVAC(Rear Heating ventilation and air conditioning control module)	Erase fault codes
XJ	2013-2015	V6 Diesel	RHVAC(Rear Heating ventilation and air conditioning control module)	Live Data
XJ	2013-2015	V6 Diesel	RLSM(Rear seat - Control module - Left)	ECU information
XJ	2013-2015	V6 Diesel	RLSM(Rear seat - Control module - Left)	Read fault codes
XJ	2013-2015	V6 Diesel	RLSM(Rear seat - Control module - Left)	Erase fault codes
XJ	2013-2015	V6 Diesel	RLSM(Rear seat - Control module - Left)	Live Data
XJ	2013-2015	V6 Diesel	RRSM(Rear seat - Control module - Right)	ECU information
XJ	2013-2015	V6 Diesel	RRSM(Rear seat - Control module - Right)	Read fault codes
XJ	2013-2015	V6 Diesel	RRSM(Rear seat - Control module - Right)	Erase fault codes
XJ	2013-2015	V6 Diesel	RRSM(Rear seat - Control module - Right)	Live Data
XJ	2013-2015	V6 Diesel	SCME(Driver's climate seat module)	ECU information
XJ	2013-2015	V6 Diesel	SCME(Driver's climate seat module)	Read fault codes
XJ	2013-2015	V6 Diesel	SCME(Driver's climate seat module)	Erase fault codes
XJ	2013-2015	V6 Diesel	SCME(Driver's climate seat module)	Live Data
XJ	2013-2015	V6 Diesel	SCMF(Rear climate seat module)	ECU information
XJ	2013-2015	V6 Diesel	SCMF(Rear climate seat module)	Read fault codes
XJ	2013-2015	V6 Diesel	SCMF(Rear climate seat module)	Erase fault codes
XJ	2013-2015	V6 Diesel	SCMF(Rear climate seat module)	Live Data
XJ	2013-2015	V6 Diesel	SODL(Side object detection control module - Left)	ECU information
XJ	2013-2015	V6 Diesel	SODL(Side object detection control module - Left)	Read fault codes
XJ	2013-2015	V6 Diesel	SODL(Side object detection control module - Left)	Erase fault codes
XJ	2013-2015	V6 Diesel	SODL(Side object detection control module - Left)	Live Data
XJ	2013-2015	V6 Diesel	SODR(Side object detection control module - Right)	ECU information
XJ	2013-2015	V6 Diesel	SODR(Side object detection control module - Right)	Read fault codes
XJ	2013-2015	V6 Diesel	SODR(Side object detection control module - Right)	Erase fault codes
XJ	2013-2015	V6 Diesel	SODR(Side object detection control module - Right)	Live Data
XJ	2013-2015	V6 Diesel	AAM(Audio amplifier module)	ECU information
XJ	2013-2015	V6 Diesel	AAM(Audio amplifier module)	Read fault codes
XJ	2013-2015	V6 Diesel	AAM(Audio amplifier module)	Erase fault codes
XJ	2013-2015	V6 Diesel	AAM(Audio amplifier module)	Live Data
XJ	2013-2015	V6 Diesel	ACM(Audio front control module)	ECU information
XJ	2013-2015	V6 Diesel	ACM(Audio front control module)	Read fault codes
XJ	2013-2015	V6 Diesel	ACM(Audio front control module)	Erase fault codes
XJ	2013-2015	V6 Diesel	ACM(Audio front control module)	Live Data
XJ	2013-2015	V6 Diesel	DABM(Digital audio broadcast module)	ECU information
XJ	2013-2015	V6 Diesel	DABM(Digital audio broadcast module)	Read fault codes
XJ	2013-2015	V6 Diesel	DABM(Digital audio broadcast module)	Erase fault codes
XJ	2013-2015	V6 Diesel	DABM(Digital audio broadcast module)	Live Data
XJ	2013-2015	V6 Diesel	NCM(Navigation control module)	ECU information
XJ	2013-2015	V6 Diesel	NCM(Navigation control module)	Read fault codes

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XJ	2013-2015	V6 Diesel	NCM(Navigation control module)	Erase fault codes
XJ	2013-2015	V6 Diesel	NCM(Navigation control module)	Live Data
XJ	2013-2015	V6 Diesel	REM(Rear entertainment control module)	ECU information
XJ	2013-2015	V6 Diesel	REM(Rear entertainment control module)	Read fault codes
XJ	2013-2015	V6 Diesel	REM(Rear entertainment control module)	Erase fault codes
XJ	2013-2015	V6 Diesel	REM(Rear entertainment control module)	Live Data
XJ	2013-2015	V6 Diesel	SRM(Satellite audio unit module)	ECU information
XJ	2013-2015	V6 Diesel	SRM(Satellite audio unit module)	Read fault codes
XJ	2013-2015	V6 Diesel	SRM(Satellite audio unit module)	Erase fault codes
XJ	2013-2015	V6 Diesel	SRM(Satellite audio unit module)	Live Data
XJ	2013-2015	V6 Diesel	TVM(Television module)	ECU information
XJ	2013-2015	V6 Diesel	TVM(Television module)	Read fault codes
XJ	2013-2015	V6 Diesel	TVM(Television module)	Erase fault codes
XJ	2013-2015	V6 Diesel	TVM(Television module)	Live Data
XJ	2013-2015	V6 Diesel	Special Function	Manual oil reset
XJ	2013-2015	V6 Diesel	Special Function	Oil change reset
XJ	2013-2015	V6 Diesel	Special Function	Oil service counter reset
XJ	2013-2015	V6 Diesel	Special Function	Rest of world - Service interval options
XJ	2013-2015	V6 Diesel	Special Function	Service interval reset
XJ	2013-2015	V6 Diesel	Special Function	Idle speed test
XJ	2013-2015	V6 Diesel	Special Function	Injector replacement
XJ	2013-2015	V6 Diesel	Special Function	Display injector correction factors
XJ	2013-2015	V6 Diesel	Special Function	Throttle valve actuator replacement
XJ	2013-2015	V6 Diesel	Special Function	Parking brake release to service position
XJ	2013-2015	V6 Diesel	Special Function	Brake bleed
XJ	2013-2015	V6 Diesel	Special Function	Steering column calibration
XJ	2013-2015	V6 Diesel	Special Function	Variable assist power steering curves programming
XJ	2013-2015	V6 Diesel	Special Function	Yaw rate sensor calibration
XJ	2013-2015	V6 Diesel	Special Function	Tire pressure monitor sensor identification display
XJ	2013-2015	V6 Diesel	Special Function	Tire pressure sensor replacement
XJ	2013-2015	V6 Diesel	Special Function	Diesel particulate filter dynamic regeneration
XJ	2013-2015	V6 Diesel	Special Function	Diesel particulate filter replacement
XJ	2013-2015	V6 Diesel	Special Function	Height calibration
XJ	2013-2015	V6 Diesel	Special Function	Headlamp calibration suspension set-up
XJ	2013-2015	V6 Diesel	Special Function	Headlamp control module system calibration
XJ	2013-2015	V6 Diesel	Special Function	Battery replacement
XJ	2013-2015	V6 Diesel	Special Function	Odometer calibration
XJ	2013-2015	V6 Diesel	Special Function	Seat cushion replacement
XJ	2013-2015	V6 Diesel	Special Function	Driver's seat calibration
XJ	2013-2015	V6 Diesel	Special Function	Passenger's seat calibration
XJ	2013-2015	V6 Diesel	Special Function	Drivers side window calibration
XJ	2013-2015	V6 Diesel	Special Function	Passenger side window calibration
XJ	2013-2015	V6 Diesel	Special Function	Sunroof calibration
XJ	2013-2015	V6 Diesel	Special Function	Tailgate/trunk calibration
XJ	2013-2015	Normally Aspirated V8 5.0L engine	PCM(Powertrain control module)	ECU information
XJ	2013-2015	Normally Aspirated V8 5.0L engine	PCM(Powertrain control module)	Read fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	PCM(Powertrain control module)	Erase fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	PCM(Powertrain control module)	Live Data
XJ	2013-2015	Normally Aspirated V8 5.0L engine	TCM(Transmission control module)	ECU information
XJ	2013-2015	Normally Aspirated V8 5.0L engine	TCM(Transmission control module)	Read fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	TCM(Transmission control module)	Erase fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	TCM(Transmission control module)	Live Data
XJ	2013-2015	Normally Aspirated V8 5.0L engine	ABS(ABS control module)	ECU information
XJ	2013-2015	Normally Aspirated V8 5.0L engine	ABS(ABS control module)	Read fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	ABS(ABS control module)	Erase fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	ABS(ABS control module)	Live Data
XJ	2013-2015	Normally Aspirated V8 5.0L engine	RCM(Restraints control module)	ECU information
XJ	2013-2015	Normally Aspirated V8 5.0L engine	RCM(Restraints control module)	Read fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	RCM(Restraints control module)	Erase fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	RCM(Restraints control module)	Live Data
XJ	2013-2015	Normally Aspirated V8 5.0L engine	IPC(Instrument cluster control module)	ECU information
XJ	2013-2015	Normally Aspirated V8 5.0L engine	IPC(Instrument cluster control module)	Read fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	IPC(Instrument cluster control module)	Erase fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	IPC(Instrument cluster control module)	Live Data
XJ	2013-2015	Normally Aspirated V8 5.0L engine	BCM(Body control module)	ECU information
XJ	2013-2015	Normally Aspirated V8 5.0L engine	BCM(Body control module)	Read fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	BCM(Body control module)	Erase fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	BCM(Body control module)	Live Data
XJ	2013-2015	Normally Aspirated V8 5.0L engine	CCM(Speed control module)	ECU information
XJ	2013-2015	Normally Aspirated V8 5.0L engine	CCM(Speed control module)	Read fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	CCM(Speed control module)	Erase fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	CCM(Speed control module)	Live Data
XJ	2013-2015	Normally Aspirated V8 5.0L engine	CHCM(Chassis control module)	ECU information
XJ	2013-2015	Normally Aspirated V8 5.0L engine	CHCM(Chassis control module)	Read fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	CHCM(Chassis control module)	Erase fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	CHCM(Chassis control module)	Live Data
XJ	2013-2015	Normally Aspirated V8 5.0L engine	GSM(Gear shift module)	ECU information
XJ	2013-2015	Normally Aspirated V8 5.0L engine	GSM(Gear shift module)	Read fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	GSM(Gear shift module)	Erase fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	GSM(Gear shift module)	Live Data
XJ	2013-2015	Normally Aspirated V8 5.0L engine	GWM(Gateway module)	ECU information
XJ	2013-2015	Normally Aspirated V8 5.0L engine	GWM(Gateway module)	Read fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	GWM(Gateway module)	Erase fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	GWM(Gateway module)	Live Data
XJ	2013-2015	Normally Aspirated V8 5.0L engine	HCM(Headlamp control module)	ECU information
XJ	2013-2015	Normally Aspirated V8 5.0L engine	HCM(Headlamp control module)	Read fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	HCM(Headlamp control module)	Erase fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	HCM(Headlamp control module)	Live Data

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XJ	2013-2015	Normally Aspirated V8 5.0L engine	OCS(Restraints occupant classification system module)	ECU information
XJ	2013-2015	Normally Aspirated V8 5.0L engine	OCS(Restraints occupant classification system module)	Read fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	OCS(Restraints occupant classification system module)	Erase fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	OCS(Restraints occupant classification system module)	Live Data
XJ	2013-2015	Normally Aspirated V8 5.0L engine	PBM(Parking brake control module)	ECU information
XJ	2013-2015	Normally Aspirated V8 5.0L engine	PBM(Parking brake control module)	Read fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	PBM(Parking brake control module)	Erase fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	PBM(Parking brake control module)	Live Data
XJ	2013-2015	Normally Aspirated V8 5.0L engine	RDCM(Rear differential control module)	ECU information
XJ	2013-2015	Normally Aspirated V8 5.0L engine	RDCM(Rear differential control module)	Read fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	RDCM(Rear differential control module)	Erase fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	RDCM(Rear differential control module)	Live Data
XJ	2013-2015	Normally Aspirated V8 5.0L engine	SPMA(Safety belt pretensioner control module A - drivers side)	ECU information
XJ	2013-2015	Normally Aspirated V8 5.0L engine	SPMA(Safety belt pretensioner control module A - drivers side)	Read fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	SPMA(Safety belt pretensioner control module A - drivers side)	Erase fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	SPMA(Safety belt pretensioner control module A - drivers side)	Live Data
XJ	2013-2015	Normally Aspirated V8 5.0L engine	SPMB(Safety belt pretensioner control module B - passengers side)	ECU information
XJ	2013-2015	Normally Aspirated V8 5.0L engine	SPMB(Safety belt pretensioner control module B - passengers side)	Read fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	SPMB(Safety belt pretensioner control module B - passengers side)	Erase fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	SPMB(Safety belt pretensioner control module B - passengers side)	Live Data
XJ	2013-2015	Normally Aspirated V8 5.0L engine	TCCM(Transfer case control module)	ECU information
XJ	2013-2015	Normally Aspirated V8 5.0L engine	TCCM(Transfer case control module)	Read fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	TCCM(Transfer case control module)	Erase fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	TCCM(Transfer case control module)	Live Data
XJ	2013-2015	Normally Aspirated V8 5.0L engine	VIM(Vehicle immobilizer control module)	ECU information
XJ	2013-2015	Normally Aspirated V8 5.0L engine	VIM(Vehicle immobilizer control module)	Read fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	VIM(Vehicle immobilizer control module)	Erase fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	VIM(Vehicle immobilizer control module)	Live Data
XJ	2013-2015	Normally Aspirated V8 5.0L engine	DDM(Driver's door module)	ECU information
XJ	2013-2015	Normally Aspirated V8 5.0L engine	DDM(Driver's door module)	Read fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	DDM(Driver's door module)	Erase fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	DDM(Driver's door module)	Live Data
XJ	2013-2015	Normally Aspirated V8 5.0L engine	DSM(Driver's seat module)	ECU information
XJ	2013-2015	Normally Aspirated V8 5.0L engine	DSM(Driver's seat module)	Read fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	DSM(Driver's seat module)	Erase fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	DSM(Driver's seat module)	Live Data
XJ	2013-2015	Normally Aspirated V8 5.0L engine	FCDIM(Front control/display interface module (high level display front))	ECU information
XJ	2013-2015	Normally Aspirated V8 5.0L engine	FCDIM(Front control/display interface module (high level display front))	Read fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	FCDIM(Front control/display interface module (high level display front))	Erase fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	FCDIM(Front control/display interface module (high level display front))	Live Data
XJ	2013-2015	Normally Aspirated V8 5.0L engine	FCIMB(Front controls interface module B (front audio control panel))	ECU information
XJ	2013-2015	Normally Aspirated V8 5.0L engine	FCIMB(Front controls interface module B (front audio control panel))	Read fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	FCIMB(Front controls interface module B (front audio control panel))	Erase fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	FCIMB(Front controls interface module B (front audio control panel))	Live Data
XJ	2013-2015	Normally Aspirated V8 5.0L engine	HCMB(Headlamp control module B)	ECU information
XJ	2013-2015	Normally Aspirated V8 5.0L engine	HCMB(Headlamp control module B)	Read fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	HCMB(Headlamp control module B)	Erase fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	HCMB(Headlamp control module B)	Live Data
XJ	2013-2015	Normally Aspirated V8 5.0L engine	HVAC(Heating ventilation and air conditioning control module)	ECU information
XJ	2013-2015	Normally Aspirated V8 5.0L engine	HVAC(Heating ventilation and air conditioning control module)	Read fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	HVAC(Heating ventilation and air conditioning control module)	Erase fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	HVAC(Heating ventilation and air conditioning control module)	Live Data
XJ	2013-2015	Normally Aspirated V8 5.0L engine	PAM(Parking assist control module)	ECU information
XJ	2013-2015	Normally Aspirated V8 5.0L engine	PAM(Parking assist control module)	Read fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	PAM(Parking assist control module)	Erase fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	PAM(Parking assist control module)	Live Data
XJ	2013-2015	Normally Aspirated V8 5.0L engine	PDM(Passenger's door module)	ECU information
XJ	2013-2015	Normally Aspirated V8 5.0L engine	PDM(Passenger's door module)	Read fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	PDM(Passenger's door module)	Erase fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	PDM(Passenger's door module)	Live Data
XJ	2013-2015	Normally Aspirated V8 5.0L engine	PSM(Passenger's seat module)	ECU information
XJ	2013-2015	Normally Aspirated V8 5.0L engine	PSM(Passenger's seat module)	Read fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	PSM(Passenger's seat module)	Erase fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	PSM(Passenger's seat module)	Live Data
XJ	2013-2015	Normally Aspirated V8 5.0L engine	RFA(Keyless vehicle module)	ECU information
XJ	2013-2015	Normally Aspirated V8 5.0L engine	RFA(Keyless vehicle module)	Read fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	RFA(Keyless vehicle module)	Erase fault codes

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XJ	2013-2015	Normally Aspirated V8 5.0L engine	RFA(Keyless vehicle module)	Live Data
XJ	2013-2015	Normally Aspirated V8 5.0L engine	RGTM(Rear gate / trunk module)	ECU information
XJ	2013-2015	Normally Aspirated V8 5.0L engine	RGTM(Rear gate / trunk module)	Read fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	RGTM(Rear gate / trunk module)	Erase fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	RGTM(Rear gate / trunk module)	Live Data
XJ	2013-2015	Normally Aspirated V8 5.0L engine	RHVAC(Rear Heating ventilation and air conditioning control module)	ECU information
XJ	2013-2015	Normally Aspirated V8 5.0L engine	RHVAC(Rear Heating ventilation and air conditioning control module)	Read fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	RHVAC(Rear Heating ventilation and air conditioning control module)	Erase fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	RHVAC(Rear Heating ventilation and air conditioning control module)	Live Data
XJ	2013-2015	Normally Aspirated V8 5.0L engine	RLSM(Rear seat - Control module - Left)	ECU information
XJ	2013-2015	Normally Aspirated V8 5.0L engine	RLSM(Rear seat - Control module - Left)	Read fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	RLSM(Rear seat - Control module - Left)	Erase fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	RLSM(Rear seat - Control module - Left)	Live Data
XJ	2013-2015	Normally Aspirated V8 5.0L engine	RRSM(Rear seat - Control module - Right)	ECU information
XJ	2013-2015	Normally Aspirated V8 5.0L engine	RRSM(Rear seat - Control module - Right)	Read fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	RRSM(Rear seat - Control module - Right)	Erase fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	RRSM(Rear seat - Control module - Right)	Live Data
XJ	2013-2015	Normally Aspirated V8 5.0L engine	SCME(Driver's climate seat module)	ECU information
XJ	2013-2015	Normally Aspirated V8 5.0L engine	SCME(Driver's climate seat module)	Read fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	SCME(Driver's climate seat module)	Erase fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	SCME(Driver's climate seat module)	Live Data
XJ	2013-2015	Normally Aspirated V8 5.0L engine	SCMF(Rear climate seat module)	ECU information
XJ	2013-2015	Normally Aspirated V8 5.0L engine	SCMF(Rear climate seat module)	Read fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	SCMF(Rear climate seat module)	Erase fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	SCMF(Rear climate seat module)	Live Data
XJ	2013-2015	Normally Aspirated V8 5.0L engine	SODL(Side object detection control module - Left)	ECU information
XJ	2013-2015	Normally Aspirated V8 5.0L engine	SODL(Side object detection control module - Left)	Read fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	SODL(Side object detection control module - Left)	Erase fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	SODL(Side object detection control module - Left)	Live Data
XJ	2013-2015	Normally Aspirated V8 5.0L engine	SODR(Side object detection control module - Right)	ECU information
XJ	2013-2015	Normally Aspirated V8 5.0L engine	SODR(Side object detection control module - Right)	Read fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	SODR(Side object detection control module - Right)	Erase fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	SODR(Side object detection control module - Right)	Live Data
XJ	2013-2015	Normally Aspirated V8 5.0L engine	AAM(Audio amplifier module)	ECU information
XJ	2013-2015	Normally Aspirated V8 5.0L engine	AAM(Audio amplifier module)	Read fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	AAM(Audio amplifier module)	Erase fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	AAM(Audio amplifier module)	Live Data
XJ	2013-2015	Normally Aspirated V8 5.0L engine	ACM(Audio front control module)	ECU information
XJ	2013-2015	Normally Aspirated V8 5.0L engine	ACM(Audio front control module)	Read fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	ACM(Audio front control module)	Erase fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	ACM(Audio front control module)	Live Data
XJ	2013-2015	Normally Aspirated V8 5.0L engine	DABM(Digital audio broadcast module)	ECU information
XJ	2013-2015	Normally Aspirated V8 5.0L engine	DABM(Digital audio broadcast module)	Read fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	DABM(Digital audio broadcast module)	Erase fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	DABM(Digital audio broadcast module)	Live Data
XJ	2013-2015	Normally Aspirated V8 5.0L engine	NCM(Navigation control module)	ECU information
XJ	2013-2015	Normally Aspirated V8 5.0L engine	NCM(Navigation control module)	Read fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	NCM(Navigation control module)	Erase fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	NCM(Navigation control module)	Live Data
XJ	2013-2015	Normally Aspirated V8 5.0L engine	REM(Rear entertainment control module)	ECU information
XJ	2013-2015	Normally Aspirated V8 5.0L engine	REM(Rear entertainment control module)	Read fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	REM(Rear entertainment control module)	Erase fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	REM(Rear entertainment control module)	Live Data
XJ	2013-2015	Normally Aspirated V8 5.0L engine	SRM(Satellite audio unit module)	ECU information
XJ	2013-2015	Normally Aspirated V8 5.0L engine	SRM(Satellite audio unit module)	Read fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	SRM(Satellite audio unit module)	Erase fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	SRM(Satellite audio unit module)	Live Data
XJ	2013-2015	Normally Aspirated V8 5.0L engine	TVM(Television module)	ECU information
XJ	2013-2015	Normally Aspirated V8 5.0L engine	TVM(Television module)	Read fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	TVM(Television module)	Erase fault codes
XJ	2013-2015	Normally Aspirated V8 5.0L engine	TVM(Television module)	Live Data
XJ	2013-2015	Normally Aspirated V8 5.0L engine	Special Function	Manual oil reset
XJ	2013-2015	Normally Aspirated V8 5.0L engine	Special Function	Oil change reset
XJ	2013-2015	Normally Aspirated V8 5.0L engine	Special Function	Oil service counter reset
XJ	2013-2015	Normally Aspirated V8 5.0L engine	Special Function	Service interval reset
XJ	2013-2015	Normally Aspirated V8 5.0L engine	Special Function	Idle speed test
XJ	2013-2015	Normally Aspirated V8 5.0L engine	Special Function	Injector replacement
XJ	2013-2015	Normally Aspirated V8 5.0L engine	Special Function	Injector valve test
XJ	2013-2015	Normally Aspirated V8 5.0L engine	Special Function	Throttle valve actuator replacement (MODE1)
XJ	2013-2015	Normally Aspirated V8 5.0L engine	Special Function	Throttle valve actuator replacement (MODE2)
XJ	2013-2015	Normally Aspirated V8 5.0L engine	Special Function	Parking brake release to service position
XJ	2013-2015	Normally Aspirated V8 5.0L engine	Special Function	Brake bleed
XJ	2013-2015	Normally Aspirated V8 5.0L engine	Special Function	Steering column calibration
XJ	2013-2015	Normally Aspirated V8 5.0L engine	Special Function	Variable assist power steering curves programming
XJ	2013-2015	Normally Aspirated V8 5.0L engine	Special Function	Yaw rate sensor calibration
XJ	2013-2015	Normally Aspirated V8 5.0L engine	Special Function	Tire pressure monitor sensor identification display
XJ	2013-2015	Normally Aspirated V8 5.0L engine	Special Function	Tire pressure sensor replacement
XJ	2013-2015	Normally Aspirated V8 5.0L engine	Special Function	Height calibration

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XJ	2013-2015	Normally Aspirated V8 5.0L engine	Special Function	Headlamp calibration suspension set-up
XJ	2013-2015	Normally Aspirated V8 5.0L engine	Special Function	Headlamp control module system calibration
XJ	2013-2015	Normally Aspirated V8 5.0L engine	Special Function	Battery replacement
XJ	2013-2015	Normally Aspirated V8 5.0L engine	Special Function	Odometer calibration
XJ	2013-2015	Normally Aspirated V8 5.0L engine	Special Function	Seat cushion replacement
XJ	2013-2015	Normally Aspirated V8 5.0L engine	Special Function	Driver's seat calibration
XJ	2013-2015	Normally Aspirated V8 5.0L engine	Special Function	Passenger's seat calibration
XJ	2013-2015	Normally Aspirated V8 5.0L engine	Special Function	Drivers side window calibration
XJ	2013-2015	Normally Aspirated V8 5.0L engine	Special Function	Passenger side window calibration
XJ	2013-2015	Normally Aspirated V8 5.0L engine	Special Function	Sunroof calibration
XJ	2013-2015	Normally Aspirated V8 5.0L engine	Special Function	Tailgate/trunk calibration
XJ	2013-2015	Supercharged V8 5.0L engine	PCM(Powertrain control module)	ECU information
XJ	2013-2015	Supercharged V8 5.0L engine	PCM(Powertrain control module)	Read fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	PCM(Powertrain control module)	Erase fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	PCM(Powertrain control module)	Live Data
XJ	2013-2015	Supercharged V8 5.0L engine	TCM(Transmission control module)	ECU information
XJ	2013-2015	Supercharged V8 5.0L engine	TCM(Transmission control module)	Read fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	TCM(Transmission control module)	Erase fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	TCM(Transmission control module)	Live Data
XJ	2013-2015	Supercharged V8 5.0L engine	ABS (ABS control module)	ECU information
XJ	2013-2015	Supercharged V8 5.0L engine	ABS (ABS control module)	Read fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	ABS (ABS control module)	Erase fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	ABS (ABS control module)	Live Data
XJ	2013-2015	Supercharged V8 5.0L engine	RCM(Restraints control module)	ECU information
XJ	2013-2015	Supercharged V8 5.0L engine	RCM(Restraints control module)	Read fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	RCM(Restraints control module)	Erase fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	RCM(Restraints control module)	Live Data
XJ	2013-2015	Supercharged V8 5.0L engine	IPC(Instrument cluster control module)	ECU information
XJ	2013-2015	Supercharged V8 5.0L engine	IPC(Instrument cluster control module)	Read fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	IPC(Instrument cluster control module)	Erase fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	IPC(Instrument cluster control module)	Live Data
XJ	2013-2015	Supercharged V8 5.0L engine	BCM(Body control module)	ECU information
XJ	2013-2015	Supercharged V8 5.0L engine	BCM(Body control module)	Read fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	BCM(Body control module)	Erase fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	BCM(Body control module)	Live Data
XJ	2013-2015	Supercharged V8 5.0L engine	CCM(Speed control module)	ECU information
XJ	2013-2015	Supercharged V8 5.0L engine	CCM(Speed control module)	Read fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	CCM(Speed control module)	Erase fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	CCM(Speed control module)	Live Data
XJ	2013-2015	Supercharged V8 5.0L engine	CHCM(Chassis control module)	ECU information
XJ	2013-2015	Supercharged V8 5.0L engine	CHCM(Chassis control module)	Read fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	CHCM(Chassis control module)	Erase fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	CHCM(Chassis control module)	Live Data
XJ	2013-2015	Supercharged V8 5.0L engine	GSM(Gear shift module)	ECU information
XJ	2013-2015	Supercharged V8 5.0L engine	GSM(Gear shift module)	Read fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	GSM(Gear shift module)	Erase fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	GSM(Gear shift module)	Live Data
XJ	2013-2015	Supercharged V8 5.0L engine	GWM(Gateway module)	ECU information
XJ	2013-2015	Supercharged V8 5.0L engine	GWM(Gateway module)	Read fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	GWM(Gateway module)	Erase fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	GWM(Gateway module)	Live Data
XJ	2013-2015	Supercharged V8 5.0L engine	HCM(Headlamp control module)	ECU information
XJ	2013-2015	Supercharged V8 5.0L engine	HCM(Headlamp control module)	Read fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	HCM(Headlamp control module)	Erase fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	HCM(Headlamp control module)	Live Data
XJ	2013-2015	Supercharged V8 5.0L engine	OCS (Restraints occupant classification system module)	ECU information
XJ	2013-2015	Supercharged V8 5.0L engine	OCS (Restraints occupant classification system module)	Read fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	OCS (Restraints occupant classification system module)	Erase fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	OCS (Restraints occupant classification system module)	Live Data
XJ	2013-2015	Supercharged V8 5.0L engine	PBM(Parking brake control module)	ECU information
XJ	2013-2015	Supercharged V8 5.0L engine	PBM(Parking brake control module)	Read fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	PBM(Parking brake control module)	Erase fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	PBM(Parking brake control module)	Live Data
XJ	2013-2015	Supercharged V8 5.0L engine	RDCM(Rear differential control module)	ECU information
XJ	2013-2015	Supercharged V8 5.0L engine	RDCM(Rear differential control module)	Read fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	RDCM(Rear differential control module)	Erase fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	RDCM(Rear differential control module)	Live Data
XJ	2013-2015	Supercharged V8 5.0L engine	SPMA(Safety belt pretensioner control module A - drivers side)	ECU information
XJ	2013-2015	Supercharged V8 5.0L engine	SPMA(Safety belt pretensioner control module A - drivers side)	Read fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	SPMA(Safety belt pretensioner control module A - drivers side)	Erase fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	SPMA(Safety belt pretensioner control module A - drivers side)	Live Data
XJ	2013-2015	Supercharged V8 5.0L engine	SPMB(Safety belt pretensioner control module B - passengers side)	ECU information
XJ	2013-2015	Supercharged V8 5.0L engine	SPMB(Safety belt pretensioner control module B - passengers side)	Read fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	SPMB(Safety belt pretensioner control module B - passengers side)	Erase fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	SPMB(Safety belt pretensioner control module B - passengers side)	Live Data
XJ	2013-2015	Supercharged V8 5.0L engine	TCCM(Transfer case control module)	ECU information
XJ	2013-2015	Supercharged V8 5.0L engine	TCCM(Transfer case control module)	Read fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	TCCM(Transfer case control module)	Erase fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	TCCM(Transfer case control module)	Live Data
XJ	2013-2015	Supercharged V8 5.0L engine	VIM(Vehicle immobilizer control module)	ECU information



## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XJ	2013-2015	Supercharged V8 5.0L engine	VIM(Vehicle immobilizer control module)	Read fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	VIM(Vehicle immobilizer control module)	Erase fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	VIM(Vehicle immobilizer control module)	Live Data
XJ	2013-2015	Supercharged V8 5.0L engine	DDM(Driver's door module)	ECU information
XJ	2013-2015	Supercharged V8 5.0L engine	DDM(Driver's door module)	Read fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	DDM(Driver's door module)	Erase fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	DDM(Driver's door module)	Live Data
XJ	2013-2015	Supercharged V8 5.0L engine	DSM(Driver's seat module)	ECU information
XJ	2013-2015	Supercharged V8 5.0L engine	DSM(Driver's seat module)	Read fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	DSM(Driver's seat module)	Erase fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	DSM(Driver's seat module)	Live Data
XJ	2013-2015	Supercharged V8 5.0L engine	FCDIM(Front control/display interface module (high level display front))	ECU information
XJ	2013-2015	Supercharged V8 5.0L engine	FCDIM(Front control/display interface module (high level display front))	Read fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	FCDIM(Front control/display interface module (high level display front))	Erase fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	FCDIM(Front control/display interface module (high level display front))	Live Data
XJ	2013-2015	Supercharged V8 5.0L engine	FCIMB(Front controls interface module B (front audio control panel))	ECU information
XJ	2013-2015	Supercharged V8 5.0L engine	FCIMB(Front controls interface module B (front audio control panel))	Read fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	FCIMB(Front controls interface module B (front audio control panel))	Erase fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	FCIMB(Front controls interface module B (front audio control panel))	Live Data
XJ	2013-2015	Supercharged V8 5.0L engine	HCMB(Headlamp control module B)	ECU information
XJ	2013-2015	Supercharged V8 5.0L engine	HCMB(Headlamp control module B)	Read fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	HCMB(Headlamp control module B)	Erase fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	HCMB(Headlamp control module B)	Live Data
XJ	2013-2015	Supercharged V8 5.0L engine	HVAC(Heating ventilation and air conditioning control module)	ECU information
XJ	2013-2015	Supercharged V8 5.0L engine	HVAC(Heating ventilation and air conditioning control module)	Read fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	HVAC(Heating ventilation and air conditioning control module)	Erase fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	HVAC(Heating ventilation and air conditioning control module)	Live Data
XJ	2013-2015	Supercharged V8 5.0L engine	PAM(Parking assist control module)	ECU information
XJ	2013-2015	Supercharged V8 5.0L engine	PAM(Parking assist control module)	Read fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	PAM(Parking assist control module)	Erase fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	PAM(Parking assist control module)	Live Data
XJ	2013-2015	Supercharged V8 5.0L engine	PDM(Passenger's door module)	ECU information
XJ	2013-2015	Supercharged V8 5.0L engine	PDM(Passenger's door module)	Read fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	PDM(Passenger's door module)	Erase fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	PDM(Passenger's door module)	Live Data
XJ	2013-2015	Supercharged V8 5.0L engine	PSM(Passenger's seat module)	ECU information
XJ	2013-2015	Supercharged V8 5.0L engine	PSM(Passenger's seat module)	Read fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	PSM(Passenger's seat module)	Erase fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	PSM(Passenger's seat module)	Live Data
XJ	2013-2015	Supercharged V8 5.0L engine	RFA(Keyless vehicle module)	ECU information
XJ	2013-2015	Supercharged V8 5.0L engine	RFA(Keyless vehicle module)	Read fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	RFA(Keyless vehicle module)	Erase fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	RFA(Keyless vehicle module)	Live Data
XJ	2013-2015	Supercharged V8 5.0L engine	RGTM(Rear gate / trunk module)	ECU information
XJ	2013-2015	Supercharged V8 5.0L engine	RGTM(Rear gate / trunk module)	Read fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	RGTM(Rear gate / trunk module)	Erase fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	RGTM(Rear gate / trunk module)	Live Data
XJ	2013-2015	Supercharged V8 5.0L engine	RHVAC(Rear Heating ventilation and air conditioning control module)	ECU information
XJ	2013-2015	Supercharged V8 5.0L engine	RHVAC(Rear Heating ventilation and air conditioning control module)	Read fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	RHVAC(Rear Heating ventilation and air conditioning control module)	Erase fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	RHVAC(Rear Heating ventilation and air conditioning control module)	Live Data
XJ	2013-2015	Supercharged V8 5.0L engine	RLSM(Rear seat - Control module - Left)	ECU information
XJ	2013-2015	Supercharged V8 5.0L engine	RLSM(Rear seat - Control module - Left)	Read fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	RLSM(Rear seat - Control module - Left)	Erase fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	RLSM(Rear seat - Control module - Left)	Live Data
XJ	2013-2015	Supercharged V8 5.0L engine	RRSM(Rear seat - Control module - Right)	ECU information
XJ	2013-2015	Supercharged V8 5.0L engine	RRSM(Rear seat - Control module - Right)	Read fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	RRSM(Rear seat - Control module - Right)	Erase fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	RRSM(Rear seat - Control module - Right)	Live Data
XJ	2013-2015	Supercharged V8 5.0L engine	SCME(Driver's climate seat module)	ECU information
XJ	2013-2015	Supercharged V8 5.0L engine	SCME(Driver's climate seat module)	Read fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	SCME(Driver's climate seat module)	Erase fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	SCME(Driver's climate seat module)	Live Data
XJ	2013-2015	Supercharged V8 5.0L engine	SCMF(Rear climate seat module)	ECU information
XJ	2013-2015	Supercharged V8 5.0L engine	SCMF(Rear climate seat module)	Read fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	SCMF(Rear climate seat module)	Erase fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	SCMF(Rear climate seat module)	Live Data
XJ	2013-2015	Supercharged V8 5.0L engine	SODL(Side object detection control module - Left)	ECU information
XJ	2013-2015	Supercharged V8 5.0L engine	SODL(Side object detection control module - Left)	Read fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	SODL(Side object detection control module - Left)	Erase fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	SODL(Side object detection control module - Left)	Live Data

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XJ	2013-2015	Supercharged V8 5.0L engine	SODR(Side object detection control module - Right)	ECU information
XJ	2013-2015	Supercharged V8 5.0L engine	SODR(Side object detection control module - Right)	Read fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	SODR(Side object detection control module - Right)	Erase fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	SODR(Side object detection control module - Right)	Live Data
XJ	2013-2015	Supercharged V8 5.0L engine	AAM(Audio amplifier module)	ECU information
XJ	2013-2015	Supercharged V8 5.0L engine	AAM(Audio amplifier module)	Read fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	AAM(Audio amplifier module)	Erase fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	AAM(Audio amplifier module)	Live Data
XJ	2013-2015	Supercharged V8 5.0L engine	ACM(Audio front control module)	ECU information
XJ	2013-2015	Supercharged V8 5.0L engine	ACM(Audio front control module)	Read fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	ACM(Audio front control module)	Erase fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	ACM(Audio front control module)	Live Data
XJ	2013-2015	Supercharged V8 5.0L engine	DABM(Digital audio broadcast module)	ECU information
XJ	2013-2015	Supercharged V8 5.0L engine	DABM(Digital audio broadcast module)	Read fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	DABM(Digital audio broadcast module)	Erase fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	DABM(Digital audio broadcast module)	Live Data
XJ	2013-2015	Supercharged V8 5.0L engine	NCM(Navigation control module)	ECU information
XJ	2013-2015	Supercharged V8 5.0L engine	NCM(Navigation control module)	Read fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	NCM(Navigation control module)	Erase fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	NCM(Navigation control module)	Live Data
XJ	2013-2015	Supercharged V8 5.0L engine	REM(Rear entertainment control module)	ECU information
XJ	2013-2015	Supercharged V8 5.0L engine	REM(Rear entertainment control module)	Read fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	REM(Rear entertainment control module)	Erase fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	REM(Rear entertainment control module)	Live Data
XJ	2013-2015	Supercharged V8 5.0L engine	SRM(Satellite audio unit module)	ECU information
XJ	2013-2015	Supercharged V8 5.0L engine	SRM(Satellite audio unit module)	Read fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	SRM(Satellite audio unit module)	Erase fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	SRM(Satellite audio unit module)	Live Data
XJ	2013-2015	Supercharged V8 5.0L engine	TVM(Television module)	ECU information
XJ	2013-2015	Supercharged V8 5.0L engine	TVM(Television module)	Read fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	TVM(Television module)	Erase fault codes
XJ	2013-2015	Supercharged V8 5.0L engine	TVM(Television module)	Live Data
XJ	2013-2015	Supercharged V8 5.0L engine	Special Function	Manual oil reset
XJ	2013-2015	Supercharged V8 5.0L engine	Special Function	Oil change reset
XJ	2013-2015	Supercharged V8 5.0L engine	Special Function	Oil service counter reset
XJ	2013-2015	Supercharged V8 5.0L engine	Special Function	Service interval reset
XJ	2013-2015	Supercharged V8 5.0L engine	Special Function	Idle speed test
XJ	2013-2015	Supercharged V8 5.0L engine	Special Function	Injector replacement
XJ	2013-2015	Supercharged V8 5.0L engine	Special Function	Injector valve test
XJ	2013-2015	Supercharged V8 5.0L engine	Special Function	Throttle valve actuator replacement(MODE1)
XJ	2013-2015	Supercharged V8 5.0L engine	Special Function	Throttle valve actuator replacement(MODE2)
XJ	2013-2015	Supercharged V8 5.0L engine	Special Function	Parking brake release to service position
XJ	2013-2015	Supercharged V8 5.0L engine	Special Function	Brake bleed
XJ	2013-2015	Supercharged V8 5.0L engine	Special Function	Steering column calibration
XJ	2013-2015	Supercharged V8 5.0L engine	Special Function	Variable assist power steering curves programming
XJ	2013-2015	Supercharged V8 5.0L engine	Special Function	Yaw rate sensor calibration
XJ	2013-2015	Supercharged V8 5.0L engine	Special Function	Tire pressure monitor sensor identification display
XJ	2013-2015	Supercharged V8 5.0L engine	Special Function	Tire pressure sensor replacement
XJ	2013-2015	Supercharged V8 5.0L engine	Special Function	Height calibration
XJ	2013-2015	Supercharged V8 5.0L engine	Special Function	Headlamp calibration suspension set-up
XJ	2013-2015	Supercharged V8 5.0L engine	Special Function	Headlamp control module system calibration
XJ	2013-2015	Supercharged V8 5.0L engine	Special Function	Battery replacement
XJ	2013-2015	Supercharged V8 5.0L engine	Special Function	Odometer calibration
XJ	2013-2015	Supercharged V8 5.0L engine	Special Function	Seat cushion replacement
XJ	2013-2015	Supercharged V8 5.0L engine	Special Function	Driver's seat calibration
XJ	2013-2015	Supercharged V8 5.0L engine	Special Function	Passenger's seat calibration
XJ	2013-2015	Supercharged V8 5.0L engine	Special Function	Drivers side window calibration
XJ	2013-2015	Supercharged V8 5.0L engine	Special Function	Passenger side window calibration
XJ	2013-2015	Supercharged V8 5.0L engine	Special Function	Sunroof calibration
XJ	2013-2015	Supercharged V8 5.0L engine	Special Function	Tailgate/trunk calibration
XJ	2013-2015	GTDI 2.0L engine	PCM(Powertrain control module)	ECU information
XJ	2013-2015	GTDI 2.0L engine	PCM(Powertrain control module)	Read fault codes
XJ	2013-2015	GTDI 2.0L engine	PCM(Powertrain control module)	Erase fault codes
XJ	2013-2015	GTDI 2.0L engine	PCM(Powertrain control module)	Live Data
XJ	2013-2015	GTDI 2.0L engine	TCM(Transmission control module)	ECU information
XJ	2013-2015	GTDI 2.0L engine	TCM(Transmission control module)	Read fault codes
XJ	2013-2015	GTDI 2.0L engine	TCM(Transmission control module)	Erase fault codes
XJ	2013-2015	GTDI 2.0L engine	TCM(Transmission control module)	Live Data
XJ	2013-2015	GTDI 2.0L engine	ABS(ABS control module)	ECU information
XJ	2013-2015	GTDI 2.0L engine	ABS(ABS control module)	Read fault codes
XJ	2013-2015	GTDI 2.0L engine	ABS(ABS control module)	Erase fault codes
XJ	2013-2015	GTDI 2.0L engine	ABS(ABS control module)	Live Data
XJ	2013-2015	GTDI 2.0L engine	RCM(Restraints control module)	ECU information
XJ	2013-2015	GTDI 2.0L engine	RCM(Restraints control module)	Read fault codes
XJ	2013-2015	GTDI 2.0L engine	RCM(Restraints control module)	Erase fault codes
XJ	2013-2015	GTDI 2.0L engine	RCM(Restraints control module)	Live Data
XJ	2013-2015	GTDI 2.0L engine	IPC(Instrument cluster control module)	ECU information
XJ	2013-2015	GTDI 2.0L engine	IPC(Instrument cluster control module)	Read fault codes
XJ	2013-2015	GTDI 2.0L engine	IPC(Instrument cluster control module)	Erase fault codes
XJ	2013-2015	GTDI 2.0L engine	IPC(Instrument cluster control module)	Live Data
XJ	2013-2015	GTDI 2.0L engine	BCM(Body control module)	ECU information
XJ	2013-2015	GTDI 2.0L engine	BCM(Body control module)	Read fault codes
XJ	2013-2015	GTDI 2.0L engine	BCM(Body control module)	Erase fault codes
XJ	2013-2015	GTDI 2.0L engine	BCM(Body control module)	Live Data
XJ	2013-2015	GTDI 2.0L engine	CCM(Speed control module)	ECU information
XJ	2013-2015	GTDI 2.0L engine	CCM(Speed control module)	Read fault codes

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XJ	2013-2015	GTDI 2.0L engine	CCM(Speed control module)	Erase fault codes
XJ	2013-2015	GTDI 2.0L engine	CCM(Speed control module)	Live Data
XJ	2013-2015	GTDI 2.0L engine	CHCM(Chassis control module)	ECU information
XJ	2013-2015	GTDI 2.0L engine	CHCM(Chassis control module)	Read fault codes
XJ	2013-2015	GTDI 2.0L engine	CHCM(Chassis control module)	Erase fault codes
XJ	2013-2015	GTDI 2.0L engine	CHCM(Chassis control module)	Live Data
XJ	2013-2015	GTDI 2.0L engine	GSM(Gear shift module)	ECU information
XJ	2013-2015	GTDI 2.0L engine	GSM(Gear shift module)	Read fault codes
XJ	2013-2015	GTDI 2.0L engine	GSM(Gear shift module)	Erase fault codes
XJ	2013-2015	GTDI 2.0L engine	GSM(Gear shift module)	Live Data
XJ	2013-2015	GTDI 2.0L engine	GWM(Gateway module)	ECU information
XJ	2013-2015	GTDI 2.0L engine	GWM(Gateway module)	Read fault codes
XJ	2013-2015	GTDI 2.0L engine	GWM(Gateway module)	Erase fault codes
XJ	2013-2015	GTDI 2.0L engine	GWM(Gateway module)	Live Data
XJ	2013-2015	GTDI 2.0L engine	HCM(Headlamp control module)	ECU information
XJ	2013-2015	GTDI 2.0L engine	HCM(Headlamp control module)	Read fault codes
XJ	2013-2015	GTDI 2.0L engine	HCM(Headlamp control module)	Erase fault codes
XJ	2013-2015	GTDI 2.0L engine	HCM(Headlamp control module)	Live Data
XJ	2013-2015	GTDI 2.0L engine	OCS(Restraints occupant classification system module)	ECU information
XJ	2013-2015	GTDI 2.0L engine	OCS(Restraints occupant classification system module)	Read fault codes
XJ	2013-2015	GTDI 2.0L engine	OCS(Restraints occupant classification system module)	Erase fault codes
XJ	2013-2015	GTDI 2.0L engine	OCS(Restraints occupant classification system module)	Live Data
XJ	2013-2015	GTDI 2.0L engine	PBM(Parking brake control module)	ECU information
XJ	2013-2015	GTDI 2.0L engine	PBM(Parking brake control module)	Read fault codes
XJ	2013-2015	GTDI 2.0L engine	PBM(Parking brake control module)	Erase fault codes
XJ	2013-2015	GTDI 2.0L engine	PBM(Parking brake control module)	Live Data
XJ	2013-2015	GTDI 2.0L engine	RDCM(Rear differential control module)	ECU information
XJ	2013-2015	GTDI 2.0L engine	RDCM(Rear differential control module)	Read fault codes
XJ	2013-2015	GTDI 2.0L engine	RDCM(Rear differential control module)	Erase fault codes
XJ	2013-2015	GTDI 2.0L engine	RDCM(Rear differential control module)	Live Data
XJ	2013-2015	GTDI 2.0L engine	SPMA(Safety belt pretensioner control module A - drivers side)	ECU information
XJ	2013-2015	GTDI 2.0L engine	SPMA(Safety belt pretensioner control module A - drivers side)	Read fault codes
XJ	2013-2015	GTDI 2.0L engine	SPMA(Safety belt pretensioner control module A - drivers side)	Erase fault codes
XJ	2013-2015	GTDI 2.0L engine	SPMA(Safety belt pretensioner control module A - drivers side)	Live Data
XJ	2013-2015	GTDI 2.0L engine	SPMB(Safety belt pretensioner control module B - passengers side)	ECU information
XJ	2013-2015	GTDI 2.0L engine	SPMB(Safety belt pretensioner control module B - passengers side)	Read fault codes
XJ	2013-2015	GTDI 2.0L engine	SPMB(Safety belt pretensioner control module B - passengers side)	Erase fault codes
XJ	2013-2015	GTDI 2.0L engine	SPMB(Safety belt pretensioner control module B - passengers side)	Live Data
XJ	2013-2015	GTDI 2.0L engine	TCCM(Transfer case control module)	ECU information
XJ	2013-2015	GTDI 2.0L engine	TCCM(Transfer case control module)	Read fault codes
XJ	2013-2015	GTDI 2.0L engine	TCCM(Transfer case control module)	Erase fault codes
XJ	2013-2015	GTDI 2.0L engine	TCCM(Transfer case control module)	Live Data
XJ	2013-2015	GTDI 2.0L engine	VIM(Vehicle immobilizer control module)	ECU information
XJ	2013-2015	GTDI 2.0L engine	VIM(Vehicle immobilizer control module)	Read fault codes
XJ	2013-2015	GTDI 2.0L engine	VIM(Vehicle immobilizer control module)	Erase fault codes
XJ	2013-2015	GTDI 2.0L engine	VIM(Vehicle immobilizer control module)	Live Data
XJ	2013-2015	GTDI 2.0L engine	DDM(Driver's door module)	ECU information
XJ	2013-2015	GTDI 2.0L engine	DDM(Driver's door module)	Read fault codes
XJ	2013-2015	GTDI 2.0L engine	DDM(Driver's door module)	Erase fault codes
XJ	2013-2015	GTDI 2.0L engine	DDM(Driver's door module)	Live Data
XJ	2013-2015	GTDI 2.0L engine	DSM(Driver's seat module)	ECU information
XJ	2013-2015	GTDI 2.0L engine	DSM(Driver's seat module)	Read fault codes
XJ	2013-2015	GTDI 2.0L engine	DSM(Driver's seat module)	Erase fault codes
XJ	2013-2015	GTDI 2.0L engine	DSM(Driver's seat module)	Live Data
XJ	2013-2015	GTDI 2.0L engine	FCDIM(Front control/display interface module (high level display front))	ECU information
XJ	2013-2015	GTDI 2.0L engine	FCDIM(Front control/display interface module (high level display front))	Read fault codes
XJ	2013-2015	GTDI 2.0L engine	FCDIM(Front control/display interface module (high level display front))	Erase fault codes
XJ	2013-2015	GTDI 2.0L engine	FCDIM(Front control/display interface module (high level display front))	Live Data
XJ	2013-2015	GTDI 2.0L engine	FCIMB(Front controls interface module B (front audio control panel))	ECU information
XJ	2013-2015	GTDI 2.0L engine	FCIMB(Front controls interface module B (front audio control panel))	Read fault codes
XJ	2013-2015	GTDI 2.0L engine	FCIMB(Front controls interface module B (front audio control panel))	Erase fault codes
XJ	2013-2015	GTDI 2.0L engine	FCIMB(Front controls interface module B (front audio control panel))	Live Data
XJ	2013-2015	GTDI 2.0L engine	HCMB(Headlamp control module B)	ECU information
XJ	2013-2015	GTDI 2.0L engine	HCMB(Headlamp control module B)	Read fault codes
XJ	2013-2015	GTDI 2.0L engine	HCMB(Headlamp control module B)	Erase fault codes
XJ	2013-2015	GTDI 2.0L engine	HCMB(Headlamp control module B)	Live Data
XJ	2013-2015	GTDI 2.0L engine	HVAC(Heating ventilation and air conditioning control module)	ECU information
XJ	2013-2015	GTDI 2.0L engine	HVAC(Heating ventilation and air conditioning control module)	Read fault codes
XJ	2013-2015	GTDI 2.0L engine	HVAC(Heating ventilation and air conditioning control module)	Erase fault codes

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XJ	2013-2015	GTDI 2.0L engine	HVAC(Heating ventilation and air conditioning control module)	Live Data
XJ	2013-2015	GTDI 2.0L engine	PAM(Parking assist control module)	ECU information
XJ	2013-2015	GTDI 2.0L engine	PAM(Parking assist control module)	Read fault codes
XJ	2013-2015	GTDI 2.0L engine	PAM(Parking assist control module)	Erase fault codes
XJ	2013-2015	GTDI 2.0L engine	PAM(Parking assist control module)	Live Data
XJ	2013-2015	GTDI 2.0L engine	PDM(Passenger's door module)	ECU information
XJ	2013-2015	GTDI 2.0L engine	PDM(Passenger's door module)	Read fault codes
XJ	2013-2015	GTDI 2.0L engine	PDM(Passenger's door module)	Erase fault codes
XJ	2013-2015	GTDI 2.0L engine	PDM(Passenger's door module)	Live Data
XJ	2013-2015	GTDI 2.0L engine	PSM(Passenger's seat module)	ECU information
XJ	2013-2015	GTDI 2.0L engine	PSM(Passenger's seat module)	Read fault codes
XJ	2013-2015	GTDI 2.0L engine	PSM(Passenger's seat module)	Erase fault codes
XJ	2013-2015	GTDI 2.0L engine	PSM(Passenger's seat module)	Live Data
XJ	2013-2015	GTDI 2.0L engine	RFA(Keyless vehicle module)	ECU information
XJ	2013-2015	GTDI 2.0L engine	RFA(Keyless vehicle module)	Read fault codes
XJ	2013-2015	GTDI 2.0L engine	RFA(Keyless vehicle module)	Erase fault codes
XJ	2013-2015	GTDI 2.0L engine	RFA(Keyless vehicle module)	Live Data
XJ	2013-2015	GTDI 2.0L engine	RGTM(Rear gate / trunk module)	ECU information
XJ	2013-2015	GTDI 2.0L engine	RGTM(Rear gate / trunk module)	Read fault codes
XJ	2013-2015	GTDI 2.0L engine	RGTM(Rear gate / trunk module)	Erase fault codes
XJ	2013-2015	GTDI 2.0L engine	RGTM(Rear gate / trunk module)	Live Data
XJ	2013-2015	GTDI 2.0L engine	RHVAC(Rear Heating ventilation and air conditioning control module)	ECU information
XJ	2013-2015	GTDI 2.0L engine	RHVAC(Rear Heating ventilation and air conditioning control module)	Read fault codes
XJ	2013-2015	GTDI 2.0L engine	RHVAC(Rear Heating ventilation and air conditioning control module)	Erase fault codes
XJ	2013-2015	GTDI 2.0L engine	RHVAC(Rear Heating ventilation and air conditioning control module)	Live Data
XJ	2013-2015	GTDI 2.0L engine	RLSM(Rear seat - Control module - Left)	ECU information
XJ	2013-2015	GTDI 2.0L engine	RLSM(Rear seat - Control module - Left)	Read fault codes
XJ	2013-2015	GTDI 2.0L engine	RLSM(Rear seat - Control module - Left)	Erase fault codes
XJ	2013-2015	GTDI 2.0L engine	RLSM(Rear seat - Control module - Left)	Live Data
XJ	2013-2015	GTDI 2.0L engine	RRSM(Rear seat - Control module - Right)	ECU information
XJ	2013-2015	GTDI 2.0L engine	RRSM(Rear seat - Control module - Right)	Read fault codes
XJ	2013-2015	GTDI 2.0L engine	RRSM(Rear seat - Control module - Right)	Erase fault codes
XJ	2013-2015	GTDI 2.0L engine	RRSM(Rear seat - Control module - Right)	Live Data
XJ	2013-2015	GTDI 2.0L engine	SCME(Driver's climate seat module)	ECU information
XJ	2013-2015	GTDI 2.0L engine	SCME(Driver's climate seat module)	Read fault codes
XJ	2013-2015	GTDI 2.0L engine	SCME(Driver's climate seat module)	Erase fault codes
XJ	2013-2015	GTDI 2.0L engine	SCME(Driver's climate seat module)	Live Data
XJ	2013-2015	GTDI 2.0L engine	SCMF(Rear climate seat module)	ECU information
XJ	2013-2015	GTDI 2.0L engine	SCMF(Rear climate seat module)	Read fault codes
XJ	2013-2015	GTDI 2.0L engine	SCMF(Rear climate seat module)	Erase fault codes
XJ	2013-2015	GTDI 2.0L engine	SCMF(Rear climate seat module)	Live Data
XJ	2013-2015	GTDI 2.0L engine	SODL(Side object detection control module - Left)	ECU information
XJ	2013-2015	GTDI 2.0L engine	SODL(Side object detection control module - Left)	Read fault codes
XJ	2013-2015	GTDI 2.0L engine	SODL(Side object detection control module - Left)	Erase fault codes
XJ	2013-2015	GTDI 2.0L engine	SODL(Side object detection control module - Left)	Live Data
XJ	2013-2015	GTDI 2.0L engine	SODR(Side object detection control module - Right)	ECU information
XJ	2013-2015	GTDI 2.0L engine	SODR(Side object detection control module - Right)	Read fault codes
XJ	2013-2015	GTDI 2.0L engine	SODR(Side object detection control module - Right)	Erase fault codes
XJ	2013-2015	GTDI 2.0L engine	SODR(Side object detection control module - Right)	Live Data
XJ	2013-2015	GTDI 2.0L engine	AAM(Audio amplifier module)	ECU information
XJ	2013-2015	GTDI 2.0L engine	AAM(Audio amplifier module)	Read fault codes
XJ	2013-2015	GTDI 2.0L engine	AAM(Audio amplifier module)	Erase fault codes
XJ	2013-2015	GTDI 2.0L engine	AAM(Audio amplifier module)	Live Data
XJ	2013-2015	GTDI 2.0L engine	ACM(Audio front control module)	ECU information
XJ	2013-2015	GTDI 2.0L engine	ACM(Audio front control module)	Read fault codes
XJ	2013-2015	GTDI 2.0L engine	ACM(Audio front control module)	Erase fault codes
XJ	2013-2015	GTDI 2.0L engine	ACM(Audio front control module)	Live Data
XJ	2013-2015	GTDI 2.0L engine	DABM(Digital audio broadcast module)	ECU information
XJ	2013-2015	GTDI 2.0L engine	DABM(Digital audio broadcast module)	Read fault codes
XJ	2013-2015	GTDI 2.0L engine	DABM(Digital audio broadcast module)	Erase fault codes
XJ	2013-2015	GTDI 2.0L engine	DABM(Digital audio broadcast module)	Live Data
XJ	2013-2015	GTDI 2.0L engine	NCM(Navigation control module)	ECU information
XJ	2013-2015	GTDI 2.0L engine	NCM(Navigation control module)	Read fault codes
XJ	2013-2015	GTDI 2.0L engine	NCM(Navigation control module)	Erase fault codes
XJ	2013-2015	GTDI 2.0L engine	NCM(Navigation control module)	Live Data
XJ	2013-2015	GTDI 2.0L engine	REM(Rear entertainment control module)	ECU information
XJ	2013-2015	GTDI 2.0L engine	REM(Rear entertainment control module)	Read fault codes
XJ	2013-2015	GTDI 2.0L engine	REM(Rear entertainment control module)	Erase fault codes
XJ	2013-2015	GTDI 2.0L engine	REM(Rear entertainment control module)	Live Data
XJ	2013-2015	GTDI 2.0L engine	SRM(Satellite audio unit module)	ECU information
XJ	2013-2015	GTDI 2.0L engine	SRM(Satellite audio unit module)	Read fault codes
XJ	2013-2015	GTDI 2.0L engine	SRM(Satellite audio unit module)	Erase fault codes
XJ	2013-2015	GTDI 2.0L engine	SRM(Satellite audio unit module)	Live Data
XJ	2013-2015	GTDI 2.0L engine	TVM(Television module)	ECU information
XJ	2013-2015	GTDI 2.0L engine	TVM(Television module)	Read fault codes
XJ	2013-2015	GTDI 2.0L engine	TVM(Television module)	Erase fault codes
XJ	2013-2015	GTDI 2.0L engine	TVM(Television module)	Live Data
XJ	2013-2015	GTDI 2.0L engine	Special Function	Manual oil reset
XJ	2013-2015	GTDI 2.0L engine	Special Function	Oil change reset

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XJ	2013-2015	GTDI 2.0L engine	Special Function	Service interval reset
XJ	2013-2015	GTDI 2.0L engine	Special Function	Injector replacement
XJ	2013-2015	GTDI 2.0L engine	Special Function	Injector valve test
XJ	2013-2015	GTDI 2.0L engine	Special Function	Throttle valve actuator replacement(MODE1)
XJ	2013-2015	GTDI 2.0L engine	Special Function	Throttle valve actuator replacement(MODE2)
XJ	2013-2015	GTDI 2.0L engine	Special Function	Parking brake release to service position
XJ	2013-2015	GTDI 2.0L engine	Special Function	Brake bleed
XJ	2013-2015	GTDI 2.0L engine	Special Function	Steering column calibration
XJ	2013-2015	GTDI 2.0L engine	Special Function	Variable assist power steering curves programming
XJ	2013-2015	GTDI 2.0L engine	Special Function	Yaw rate sensor calibration
XJ	2013-2015	GTDI 2.0L engine	Special Function	Tire pressure monitor sensor identification display
XJ	2013-2015	GTDI 2.0L engine	Special Function	Tire pressure sensor replacement
XJ	2013-2015	GTDI 2.0L engine	Special Function	Height calibration
XJ	2013-2015	GTDI 2.0L engine	Special Function	Headlamp calibration suspension set-up
XJ	2013-2015	GTDI 2.0L engine	Special Function	Headlamp control module system calibration
XJ	2013-2015	GTDI 2.0L engine	Special Function	Battery replacement
XJ	2013-2015	GTDI 2.0L engine	Special Function	Odometer calibration
XJ	2013-2015	GTDI 2.0L engine	Special Function	Seat cushion replacement
XJ	2013-2015	GTDI 2.0L engine	Special Function	Driver's seat calibration
XJ	2013-2015	GTDI 2.0L engine	Special Function	Passenger's seat calibration
XJ	2013-2015	GTDI 2.0L engine	Special Function	Drivers side window calibration
XJ	2013-2015	GTDI 2.0L engine	Special Function	Passenger side window calibration
XJ	2013-2015	GTDI 2.0L engine	Special Function	Sunroof calibration
XJ	2013-2015	GTDI 2.0L engine	Special Function	Tailgate/trunk calibration
XJ	2013-2015	Supercharged V6	PCM(Powertrain control module)	ECU information
XJ	2013-2015	Supercharged V6	PCM(Powertrain control module)	Read fault codes
XJ	2013-2015	Supercharged V6	PCM(Powertrain control module)	Erase fault codes
XJ	2013-2015	Supercharged V6	PCM(Powertrain control module)	Live Data
XJ	2013-2015	Supercharged V6	TCM(Transmission control module)	ECU information
XJ	2013-2015	Supercharged V6	TCM(Transmission control module)	Read fault codes
XJ	2013-2015	Supercharged V6	TCM(Transmission control module)	Erase fault codes
XJ	2013-2015	Supercharged V6	TCM(Transmission control module)	Live Data
XJ	2013-2015	Supercharged V6	ABS(ABS control module)	ECU information
XJ	2013-2015	Supercharged V6	ABS(ABS control module)	Read fault codes
XJ	2013-2015	Supercharged V6	ABS(ABS control module)	Erase fault codes
XJ	2013-2015	Supercharged V6	ABS(ABS control module)	Live Data
XJ	2013-2015	Supercharged V6	RCM(Restraints control module)	ECU information
XJ	2013-2015	Supercharged V6	RCM(Restraints control module)	Read fault codes
XJ	2013-2015	Supercharged V6	RCM(Restraints control module)	Erase fault codes
XJ	2013-2015	Supercharged V6	RCM(Restraints control module)	Live Data
XJ	2013-2015	Supercharged V6	IPC(Instrument cluster control module)	ECU information
XJ	2013-2015	Supercharged V6	IPC(Instrument cluster control module)	Read fault codes
XJ	2013-2015	Supercharged V6	IPC(Instrument cluster control module)	Erase fault codes
XJ	2013-2015	Supercharged V6	IPC(Instrument cluster control module)	Live Data
XJ	2013-2015	Supercharged V6	BCM(Body control module)	ECU information
XJ	2013-2015	Supercharged V6	BCM(Body control module)	Read fault codes
XJ	2013-2015	Supercharged V6	BCM(Body control module)	Erase fault codes
XJ	2013-2015	Supercharged V6	BCM(Body control module)	Live Data
XJ	2013-2015	Supercharged V6	CCM(Speed control module)	ECU information
XJ	2013-2015	Supercharged V6	CCM(Speed control module)	Read fault codes
XJ	2013-2015	Supercharged V6	CCM(Speed control module)	Erase fault codes
XJ	2013-2015	Supercharged V6	CCM(Speed control module)	Live Data
XJ	2013-2015	Supercharged V6	CHCM(Chassis control module)	ECU information
XJ	2013-2015	Supercharged V6	CHCM(Chassis control module)	Read fault codes
XJ	2013-2015	Supercharged V6	CHCM(Chassis control module)	Erase fault codes
XJ	2013-2015	Supercharged V6	CHCM(Chassis control module)	Live Data
XJ	2013-2015	Supercharged V6	GSM(Gear shift module)	ECU information
XJ	2013-2015	Supercharged V6	GSM(Gear shift module)	Read fault codes
XJ	2013-2015	Supercharged V6	GSM(Gear shift module)	Erase fault codes
XJ	2013-2015	Supercharged V6	GSM(Gear shift module)	Live Data
XJ	2013-2015	Supercharged V6	GWM(Gateway module)	ECU information
XJ	2013-2015	Supercharged V6	GWM(Gateway module)	Read fault codes
XJ	2013-2015	Supercharged V6	GWM(Gateway module)	Erase fault codes
XJ	2013-2015	Supercharged V6	GWM(Gateway module)	Live Data
XJ	2013-2015	Supercharged V6	HCM(Headlamp control module)	ECU information
XJ	2013-2015	Supercharged V6	HCM(Headlamp control module)	Read fault codes
XJ	2013-2015	Supercharged V6	HCM(Headlamp control module)	Erase fault codes
XJ	2013-2015	Supercharged V6	HCM(Headlamp control module)	Live Data
XJ	2013-2015	Supercharged V6	OCS(Restraints occupant classification system module)	ECU information
XJ	2013-2015	Supercharged V6	OCS(Restraints occupant classification system module)	Read fault codes
XJ	2013-2015	Supercharged V6	OCS(Restraints occupant classification system module)	Erase fault codes
XJ	2013-2015	Supercharged V6	OCS(Restraints occupant classification system module)	Live Data
XJ	2013-2015	Supercharged V6	PBM(Parking brake control module)	ECU information
XJ	2013-2015	Supercharged V6	PBM(Parking brake control module)	Read fault codes
XJ	2013-2015	Supercharged V6	PBM(Parking brake control module)	Erase fault codes
XJ	2013-2015	Supercharged V6	PBM(Parking brake control module)	Live Data
XJ	2013-2015	Supercharged V6	RDCM(Rear differential control module)	ECU information
XJ	2013-2015	Supercharged V6	RDCM(Rear differential control module)	Read fault codes
XJ	2013-2015	Supercharged V6	RDCM(Rear differential control module)	Erase fault codes
XJ	2013-2015	Supercharged V6	RDCM(Rear differential control module)	Live Data
XJ	2013-2015	Supercharged V6	SPMA(Safety belt pretensioner control module A - drivers side)	ECU information
XJ	2013-2015	Supercharged V6	SPMA(Safety belt pretensioner control module A - drivers side)	Read fault codes
XJ	2013-2015	Supercharged V6	SPMA(Safety belt pretensioner control module A - drivers side)	Erase fault codes

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XJ	2013-2015	Supercharged V6	SPMA(Safety belt pretensioner control module A - drivers side)	Live Data
XJ	2013-2015	Supercharged V6	SPMB(Safety belt pretensioner control module B - passengers side)	ECU information
XJ	2013-2015	Supercharged V6	SPMB(Safety belt pretensioner control module B - passengers side)	Read fault codes
XJ	2013-2015	Supercharged V6	SPMB(Safety belt pretensioner control module B - passengers side)	Erase fault codes
XJ	2013-2015	Supercharged V6	SPMB(Safety belt pretensioner control module B - passengers side)	Live Data
XJ	2013-2015	Supercharged V6	TCCM(Transfer case control module)	ECU information
XJ	2013-2015	Supercharged V6	TCCM(Transfer case control module)	Read fault codes
XJ	2013-2015	Supercharged V6	TCCM(Transfer case control module)	Erase fault codes
XJ	2013-2015	Supercharged V6	TCCM(Transfer case control module)	Live Data
XJ	2013-2015	Supercharged V6	VIM(Vehicle immobilizer control module)	ECU information
XJ	2013-2015	Supercharged V6	VIM(Vehicle immobilizer control module)	Read fault codes
XJ	2013-2015	Supercharged V6	VIM(Vehicle immobilizer control module)	Erase fault codes
XJ	2013-2015	Supercharged V6	VIM(Vehicle immobilizer control module)	Live Data
XJ	2013-2015	Supercharged V6	DDM(Driver's door module)	ECU information
XJ	2013-2015	Supercharged V6	DDM(Driver's door module)	Read fault codes
XJ	2013-2015	Supercharged V6	DDM(Driver's door module)	Erase fault codes
XJ	2013-2015	Supercharged V6	DDM(Driver's door module)	Live Data
XJ	2013-2015	Supercharged V6	DSM(Driver's seat module)	ECU information
XJ	2013-2015	Supercharged V6	DSM(Driver's seat module)	Read fault codes
XJ	2013-2015	Supercharged V6	DSM(Driver's seat module)	Erase fault codes
XJ	2013-2015	Supercharged V6	DSM(Driver's seat module)	Live Data
XJ	2013-2015	Supercharged V6	FCDIM(Front control/display interface module (high level display front))	ECU information
XJ	2013-2015	Supercharged V6	FCDIM(Front control/display interface module (high level display front))	Read fault codes
XJ	2013-2015	Supercharged V6	FCDIM(Front control/display interface module (high level display front))	Erase fault codes
XJ	2013-2015	Supercharged V6	FCDIM(Front control/display interface module (high level display front))	Live Data
XJ	2013-2015	Supercharged V6	FCIMB(Front controls interface module B (front audio control panel))	ECU information
XJ	2013-2015	Supercharged V6	FCIMB(Front controls interface module B (front audio control panel))	Read fault codes
XJ	2013-2015	Supercharged V6	FCIMB(Front controls interface module B (front audio control panel))	Erase fault codes
XJ	2013-2015	Supercharged V6	FCIMB(Front controls interface module B (front audio control panel))	Live Data
XJ	2013-2015	Supercharged V6	HCMB(Headlamp control module B)	ECU information
XJ	2013-2015	Supercharged V6	HCMB(Headlamp control module B)	Read fault codes
XJ	2013-2015	Supercharged V6	HCMB(Headlamp control module B)	Erase fault codes
XJ	2013-2015	Supercharged V6	HCMB(Headlamp control module B)	Live Data
XJ	2013-2015	Supercharged V6	HVAC(Heating ventilation and air conditioning control module)	ECU information
XJ	2013-2015	Supercharged V6	HVAC(Heating ventilation and air conditioning control module)	Read fault codes
XJ	2013-2015	Supercharged V6	HVAC(Heating ventilation and air conditioning control module)	Erase fault codes
XJ	2013-2015	Supercharged V6	HVAC(Heating ventilation and air conditioning control module)	Live Data
XJ	2013-2015	Supercharged V6	PAM(Parking assist control module)	ECU information
XJ	2013-2015	Supercharged V6	PAM(Parking assist control module)	Read fault codes
XJ	2013-2015	Supercharged V6	PAM(Parking assist control module)	Erase fault codes
XJ	2013-2015	Supercharged V6	PAM(Parking assist control module)	Live Data
XJ	2013-2015	Supercharged V6	PDM(Passenger's door module)	ECU information
XJ	2013-2015	Supercharged V6	PDM(Passenger's door module)	Read fault codes
XJ	2013-2015	Supercharged V6	PDM(Passenger's door module)	Erase fault codes
XJ	2013-2015	Supercharged V6	PDM(Passenger's door module)	Live Data
XJ	2013-2015	Supercharged V6	PSM(Passenger's seat module)	ECU information
XJ	2013-2015	Supercharged V6	PSM(Passenger's seat module)	Read fault codes
XJ	2013-2015	Supercharged V6	PSM(Passenger's seat module)	Erase fault codes
XJ	2013-2015	Supercharged V6	PSM(Passenger's seat module)	Live Data
XJ	2013-2015	Supercharged V6	RFA(Keyless vehicle module)	ECU information
XJ	2013-2015	Supercharged V6	RFA(Keyless vehicle module)	Read fault codes
XJ	2013-2015	Supercharged V6	RFA(Keyless vehicle module)	Erase fault codes
XJ	2013-2015	Supercharged V6	RFA(Keyless vehicle module)	Live Data
XJ	2013-2015	Supercharged V6	RGTM(Rear gate / trunk module)	ECU information
XJ	2013-2015	Supercharged V6	RGTM(Rear gate / trunk module)	Read fault codes
XJ	2013-2015	Supercharged V6	RGTM(Rear gate / trunk module)	Erase fault codes
XJ	2013-2015	Supercharged V6	RGTM(Rear gate / trunk module)	Live Data
XJ	2013-2015	Supercharged V6	RHVAC(Rear Heating ventilation and air conditioning control module)	ECU information
XJ	2013-2015	Supercharged V6	RHVAC(Rear Heating ventilation and air conditioning control module)	Read fault codes
XJ	2013-2015	Supercharged V6	RHVAC(Rear Heating ventilation and air conditioning control module)	Erase fault codes
XJ	2013-2015	Supercharged V6	RHVAC(Rear Heating ventilation and air conditioning control module)	Live Data
XJ	2013-2015	Supercharged V6	RLSM(Rear seat - Control module - Left)	ECU information
XJ	2013-2015	Supercharged V6	RLSM(Rear seat - Control module - Left)	Read fault codes
XJ	2013-2015	Supercharged V6	RLSM(Rear seat - Control module - Left)	Erase fault codes
XJ	2013-2015	Supercharged V6	RLSM(Rear seat - Control module - Left)	Live Data
XJ	2013-2015	Supercharged V6	RRSM(Rear seat - Control module - Right)	ECU information
XJ	2013-2015	Supercharged V6	RRSM(Rear seat - Control module - Right)	Read fault codes
XJ	2013-2015	Supercharged V6	RRSM(Rear seat - Control module - Right)	Erase fault codes
XJ	2013-2015	Supercharged V6	RRSM(Rear seat - Control module - Right)	Live Data
XJ	2013-2015	Supercharged V6	SCME(Driver's climate seat module)	ECU information
XJ	2013-2015	Supercharged V6	SCME(Driver's climate seat module)	Read fault codes

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XJ	2013-2015	Supercharged V6	SCME(Driver's climate seat module)	Erase fault codes
XJ	2013-2015	Supercharged V6	SCME(Driver's climate seat module)	Live Data
XJ	2013-2015	Supercharged V6	SCMF(Rear climate seat module)	ECU information
XJ	2013-2015	Supercharged V6	SCMF(Rear climate seat module)	Read fault codes
XJ	2013-2015	Supercharged V6	SCMF(Rear climate seat module)	Erase fault codes
XJ	2013-2015	Supercharged V6	SCMF(Rear climate seat module)	Live Data
XJ	2013-2015	Supercharged V6	SODL(Side object detection control module - Left)	ECU information
XJ	2013-2015	Supercharged V6	SODL(Side object detection control module - Left)	Read fault codes
XJ	2013-2015	Supercharged V6	SODL(Side object detection control module - Left)	Erase fault codes
XJ	2013-2015	Supercharged V6	SODL(Side object detection control module - Left)	Live Data
XJ	2013-2015	Supercharged V6	SODR(Side object detection control module - Right)	ECU information
XJ	2013-2015	Supercharged V6	SODR(Side object detection control module - Right)	Read fault codes
XJ	2013-2015	Supercharged V6	SODR(Side object detection control module - Right)	Erase fault codes
XJ	2013-2015	Supercharged V6	SODR(Side object detection control module - Right)	Live Data
XJ	2013-2015	Supercharged V6	AAM(Audio amplifier module)	ECU information
XJ	2013-2015	Supercharged V6	AAM(Audio amplifier module)	Read fault codes
XJ	2013-2015	Supercharged V6	AAM(Audio amplifier module)	Erase fault codes
XJ	2013-2015	Supercharged V6	AAM(Audio amplifier module)	Live Data
XJ	2013-2015	Supercharged V6	ACM(Audio front control module)	ECU information
XJ	2013-2015	Supercharged V6	ACM(Audio front control module)	Read fault codes
XJ	2013-2015	Supercharged V6	ACM(Audio front control module)	Erase fault codes
XJ	2013-2015	Supercharged V6	ACM(Audio front control module)	Live Data
XJ	2013-2015	Supercharged V6	DABM(Digital audio broadcast module)	ECU information
XJ	2013-2015	Supercharged V6	DABM(Digital audio broadcast module)	Read fault codes
XJ	2013-2015	Supercharged V6	DABM(Digital audio broadcast module)	Erase fault codes
XJ	2013-2015	Supercharged V6	DABM(Digital audio broadcast module)	Live Data
XJ	2013-2015	Supercharged V6	NCM(Navigation control module)	ECU information
XJ	2013-2015	Supercharged V6	NCM(Navigation control module)	Read fault codes
XJ	2013-2015	Supercharged V6	NCM(Navigation control module)	Erase fault codes
XJ	2013-2015	Supercharged V6	NCM(Navigation control module)	Live Data
XJ	2013-2015	Supercharged V6	REM(Rear entertainment control module)	ECU information
XJ	2013-2015	Supercharged V6	REM(Rear entertainment control module)	Read fault codes
XJ	2013-2015	Supercharged V6	REM(Rear entertainment control module)	Erase fault codes
XJ	2013-2015	Supercharged V6	REM(Rear entertainment control module)	Live Data
XJ	2013-2015	Supercharged V6	SRM(Satellite audio unit module)	ECU information
XJ	2013-2015	Supercharged V6	SRM(Satellite audio unit module)	Read fault codes
XJ	2013-2015	Supercharged V6	SRM(Satellite audio unit module)	Erase fault codes
XJ	2013-2015	Supercharged V6	SRM(Satellite audio unit module)	Live Data
XJ	2013-2015	Supercharged V6	TVM(Television module)	ECU information
XJ	2013-2015	Supercharged V6	TVM(Television module)	Read fault codes
XJ	2013-2015	Supercharged V6	TVM(Television module)	Erase fault codes
XJ	2013-2015	Supercharged V6	TVM(Television module)	Live Data
XJ	2013-2015	Supercharged V6	Special Function	Manual oil reset
XJ	2013-2015	Supercharged V6	Special Function	Oil change reset
XJ	2013-2015	Supercharged V6	Special Function	Oil service counter reset
XJ	2013-2015	Supercharged V6	Special Function	Service interval reset
XJ	2013-2015	Supercharged V6	Special Function	Idle speed test
XJ	2013-2015	Supercharged V6	Special Function	Injector replacement
XJ	2013-2015	Supercharged V6	Special Function	Injector valve test
XJ	2013-2015	Supercharged V6	Special Function	Throttle valve actuator replacement(MODE1)
XJ	2013-2015	Supercharged V6	Special Function	Throttle valve actuator replacement(MODE2)
XJ	2013-2015	Supercharged V6	Special Function	Brake bleed
XJ	2013-2015	Supercharged V6	Special Function	Steering column calibration
XJ	2013-2015	Supercharged V6	Special Function	Variable assist power steering curves programming
XJ	2013-2015	Supercharged V6	Special Function	Yaw rate sensor calibration
XJ	2013-2015	Supercharged V6	Special Function	Parking brake release to service position
XJ	2013-2015	Supercharged V6	Special Function	Tire pressure monitor sensor identification display
XJ	2013-2015	Supercharged V6	Special Function	Tire pressure sensor replacement
XJ	2013-2015	Supercharged V6	Special Function	Height calibration
XJ	2013-2015	Supercharged V6	Special Function	Headlamp calibration suspension set-up
XJ	2013-2015	Supercharged V6	Special Function	Headlamp control module system calibration
XJ	2013-2015	Supercharged V6	Special Function	Battery replacement
XJ	2013-2015	Supercharged V6	Special Function	Odometer calibration
XJ	2013-2015	Supercharged V6	Special Function	Seat cushion replacement
XJ	2013-2015	Supercharged V6	Special Function	Driver's seat calibration
XJ	2013-2015	Supercharged V6	Special Function	Passenger's seat calibration
XJ	2013-2015	Supercharged V6	Special Function	Drivers side window calibration
XJ	2013-2015	Supercharged V6	Special Function	Passenger side window calibration
XJ	2013-2015	Supercharged V6	Special Function	Sunroof calibration
XJ	2013-2015	Supercharged V6	Special Function	Tailgate/trunk calibration
XJ	2010-2012	V6 Diesel	PCM(Powertrain control module)	ECU information
XJ	2010-2012	V6 Diesel	PCM(Powertrain control module)	Read fault codes
XJ	2010-2012	V6 Diesel	PCM(Powertrain control module)	Erase fault codes
XJ	2010-2012	V6 Diesel	PCM(Powertrain control module)	Live Data
XJ	2010-2012	V6 Diesel	TCM(Transmission control module)	ECU information
XJ	2010-2012	V6 Diesel	TCM(Transmission control module)	Read fault codes
XJ	2010-2012	V6 Diesel	TCM(Transmission control module)	Erase fault codes
XJ	2010-2012	V6 Diesel	TCM(Transmission control module)	Live Data
XJ	2010-2012	V6 Diesel	ABS(ABS control module)	ECU information
XJ	2010-2012	V6 Diesel	ABS(ABS control module)	Read fault codes
XJ	2010-2012	V6 Diesel	ABS(ABS control module)	Erase fault codes
XJ	2010-2012	V6 Diesel	ABS(ABS control module)	Live Data

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XJ	2010-2012	V6 Diesel	RCM(Restraints control module)	ECU information
XJ	2010-2012	V6 Diesel	RCM(Restraints control module)	Read fault codes
XJ	2010-2012	V6 Diesel	RCM(Restraints control module)	Erase fault codes
XJ	2010-2012	V6 Diesel	RCM(Restraints control module)	Live Data
XJ	2010-2012	V6 Diesel	IPC(Instrument cluster control module)	ECU information
XJ	2010-2012	V6 Diesel	IPC(Instrument cluster control module)	Read fault codes
XJ	2010-2012	V6 Diesel	IPC(Instrument cluster control module)	Erase fault codes
XJ	2010-2012	V6 Diesel	IPC(Instrument cluster control module)	Live Data
XJ	2010-2012	V6 Diesel	ADCM(Adaptive damping control module)	ECU information
XJ	2010-2012	V6 Diesel	ADCM(Adaptive damping control module)	Read fault codes
XJ	2010-2012	V6 Diesel	ADCM(Adaptive damping control module)	Erase fault codes
XJ	2010-2012	V6 Diesel	ADCM(Adaptive damping control module)	Live Data
XJ	2010-2012	V6 Diesel	BCM(Body control module)	ECU information
XJ	2010-2012	V6 Diesel	BCM(Body control module)	Read fault codes
XJ	2010-2012	V6 Diesel	BCM(Body control module)	Erase fault codes
XJ	2010-2012	V6 Diesel	BCM(Body control module)	Live Data
XJ	2010-2012	V6 Diesel	CCM(Speed control module)	ECU information
XJ	2010-2012	V6 Diesel	CCM(Speed control module)	Read fault codes
XJ	2010-2012	V6 Diesel	CCM(Speed control module)	Erase fault codes
XJ	2010-2012	V6 Diesel	CCM(Speed control module)	Live Data
XJ	2010-2012	V6 Diesel	GSM(Gear shift module)	ECU information
XJ	2010-2012	V6 Diesel	GSM(Gear shift module)	Read fault codes
XJ	2010-2012	V6 Diesel	GSM(Gear shift module)	Erase fault codes
XJ	2010-2012	V6 Diesel	GSM(Gear shift module)	Live Data
XJ	2010-2012	V6 Diesel	HCM(Headlamp control module)	ECU information
XJ	2010-2012	V6 Diesel	HCM(Headlamp control module)	Read fault codes
XJ	2010-2012	V6 Diesel	HCM(Headlamp control module)	Erase fault codes
XJ	2010-2012	V6 Diesel	HCM(Headlamp control module)	Live Data
XJ	2010-2012	V6 Diesel	OCS(Restraints occupant classification system module)	ECU information
XJ	2010-2012	V6 Diesel	OCS(Restraints occupant classification system module)	Read fault codes
XJ	2010-2012	V6 Diesel	OCS(Restraints occupant classification system module)	Erase fault codes
XJ	2010-2012	V6 Diesel	OCS(Restraints occupant classification system module)	Live Data
XJ	2010-2012	V6 Diesel	PBM(Parking brake control module)	ECU information
XJ	2010-2012	V6 Diesel	PBM(Parking brake control module)	Read fault codes
XJ	2010-2012	V6 Diesel	PBM(Parking brake control module)	Erase fault codes
XJ	2010-2012	V6 Diesel	PBM(Parking brake control module)	Live Data
XJ	2010-2012	V6 Diesel	RDCM(Rear differential control module)	ECU information
XJ	2010-2012	V6 Diesel	RDCM(Rear differential control module)	Read fault codes
XJ	2010-2012	V6 Diesel	RDCM(Rear differential control module)	Erase fault codes
XJ	2010-2012	V6 Diesel	RDCM(Rear differential control module)	Live Data
XJ	2010-2012	V6 Diesel	RLM(Ride level control module)	ECU information
XJ	2010-2012	V6 Diesel	RLM(Ride level control module)	Read fault codes
XJ	2010-2012	V6 Diesel	RLM(Ride level control module)	Erase fault codes
XJ	2010-2012	V6 Diesel	RLM(Ride level control module)	Live Data
XJ	2010-2012	V6 Diesel	SPMA(Safety belt pretensioner control module A - drivers side)	ECU information
XJ	2010-2012	V6 Diesel	SPMA(Safety belt pretensioner control module A - drivers side)	Read fault codes
XJ	2010-2012	V6 Diesel	SPMA(Safety belt pretensioner control module A - drivers side)	Erase fault codes
XJ	2010-2012	V6 Diesel	SPMA(Safety belt pretensioner control module A - drivers side)	Live Data
XJ	2010-2012	V6 Diesel	SPMB(Safety belt pretensioner control module B - passengers side)	ECU information
XJ	2010-2012	V6 Diesel	SPMB(Safety belt pretensioner control module B - passengers side)	Read fault codes
XJ	2010-2012	V6 Diesel	SPMB(Safety belt pretensioner control module B - passengers side)	Erase fault codes
XJ	2010-2012	V6 Diesel	SPMB(Safety belt pretensioner control module B - passengers side)	Live Data
XJ	2010-2012	V6 Diesel	VIM(Vehicle immobilizer control module)	ECU information
XJ	2010-2012	V6 Diesel	VIM(Vehicle immobilizer control module)	Read fault codes
XJ	2010-2012	V6 Diesel	VIM(Vehicle immobilizer control module)	Erase fault codes
XJ	2010-2012	V6 Diesel	VIM(Vehicle immobilizer control module)	Live Data
XJ	2010-2012	V6 Diesel	DCSM(Driver's climate seat module)	ECU information
XJ	2010-2012	V6 Diesel	DCSM(Driver's climate seat module)	Read fault codes
XJ	2010-2012	V6 Diesel	DCSM(Driver's climate seat module)	Erase fault codes
XJ	2010-2012	V6 Diesel	DCSM(Driver's climate seat module)	Live Data
XJ	2010-2012	V6 Diesel	DDM(Driver's door module)	ECU information
XJ	2010-2012	V6 Diesel	DDM(Driver's door module)	Read fault codes
XJ	2010-2012	V6 Diesel	DDM(Driver's door module)	Erase fault codes
XJ	2010-2012	V6 Diesel	DDM(Driver's door module)	Live Data
XJ	2010-2012	V6 Diesel	DSM(Driver's seat module)	ECU information
XJ	2010-2012	V6 Diesel	DSM(Driver's seat module)	Read fault codes
XJ	2010-2012	V6 Diesel	DSM(Driver's seat module)	Erase fault codes
XJ	2010-2012	V6 Diesel	DSM(Driver's seat module)	Live Data
XJ	2010-2012	V6 Diesel	FCDIM(Front control/display interface module (high level display front))	ECU information
XJ	2010-2012	V6 Diesel	FCDIM(Front control/display interface module (high level display front))	Read fault codes
XJ	2010-2012	V6 Diesel	FCDIM(Front control/display interface module (high level display front))	Erase fault codes
XJ	2010-2012	V6 Diesel	FCDIM(Front control/display interface module (high level display front))	Live Data
XJ	2010-2012	V6 Diesel	FCTMB(Front controls interface module 'B' (front audio control panel))	ECU information
XJ	2010-2012	V6 Diesel	FCTMB(Front controls interface module 'B' (front audio control panel))	Read fault codes



## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XJ	2010-2012	V6 Diesel	FCIMB(Front controls interface module 'B' (front audio control panel))	Erase fault codes
XJ	2010-2012	V6 Diesel	FCIMB(Front controls interface module 'B' (front audio control panel))	Live Data
XJ	2010-2012	V6 Diesel	HCMB(Headlamp control module 'B')	ECU information
XJ	2010-2012	V6 Diesel	HCMB(Headlamp control module 'B')	Read fault codes
XJ	2010-2012	V6 Diesel	HCMB(Headlamp control module 'B')	Erase fault codes
XJ	2010-2012	V6 Diesel	HCMB(Headlamp control module 'B')	Live Data
XJ	2010-2012	V6 Diesel	HVAC(Heating ventilation and air conditioning control module)	ECU information
XJ	2010-2012	V6 Diesel	HVAC(Heating ventilation and air conditioning control module)	Read fault codes
XJ	2010-2012	V6 Diesel	HVAC(Heating ventilation and air conditioning control module)	Erase fault codes
XJ	2010-2012	V6 Diesel	HVAC(Heating ventilation and air conditioning control module)	Live Data
XJ	2010-2012	V6 Diesel	KVM(Keyless vehicle module)	ECU information
XJ	2010-2012	V6 Diesel	KVM(Keyless vehicle module)	Read fault codes
XJ	2010-2012	V6 Diesel	KVM(Keyless vehicle module)	Erase fault codes
XJ	2010-2012	V6 Diesel	KVM(Keyless vehicle module)	Live Data
XJ	2010-2012	V6 Diesel	PAM(Parking assist control module)	ECU information
XJ	2010-2012	V6 Diesel	PAM(Parking assist control module)	Read fault codes
XJ	2010-2012	V6 Diesel	PAM(Parking assist control module)	Erase fault codes
XJ	2010-2012	V6 Diesel	PAM(Parking assist control module)	Live Data
XJ	2010-2012	V6 Diesel	PDM(Passenger's door module)	ECU information
XJ	2010-2012	V6 Diesel	PDM(Passenger's door module)	Read fault codes
XJ	2010-2012	V6 Diesel	PDM(Passenger's door module)	Erase fault codes
XJ	2010-2012	V6 Diesel	PDM(Passenger's door module)	Live Data
XJ	2010-2012	V6 Diesel	PSM(Passenger's seat module)	ECU information
XJ	2010-2012	V6 Diesel	PSM(Passenger's seat module)	Read fault codes
XJ	2010-2012	V6 Diesel	PSM(Passenger's seat module)	Erase fault codes
XJ	2010-2012	V6 Diesel	PSM(Passenger's seat module)	Live Data
XJ	2010-2012	V6 Diesel	RDCSM(Rear climate seat module)	ECU information
XJ	2010-2012	V6 Diesel	RDCSM(Rear climate seat module)	Read fault codes
XJ	2010-2012	V6 Diesel	RDCSM(Rear climate seat module)	Erase fault codes
XJ	2010-2012	V6 Diesel	RDCSM(Rear climate seat module)	Live Data
XJ	2010-2012	V6 Diesel	RGTM(Rear gate / trunk module)	ECU information
XJ	2010-2012	V6 Diesel	RGTM(Rear gate / trunk module)	Read fault codes
XJ	2010-2012	V6 Diesel	RGTM(Rear gate / trunk module)	Erase fault codes
XJ	2010-2012	V6 Diesel	RGTM(Rear gate / trunk module)	Live Data
XJ	2010-2012	V6 Diesel	RHVAC(Rear Heating ventilation and air conditioning control module)	ECU information
XJ	2010-2012	V6 Diesel	RHVAC(Rear Heating ventilation and air conditioning control module)	Read fault codes
XJ	2010-2012	V6 Diesel	RHVAC(Rear Heating ventilation and air conditioning control module)	Erase fault codes
XJ	2010-2012	V6 Diesel	RHVAC(Rear Heating ventilation and air conditioning control module)	Live Data
XJ	2010-2012	V6 Diesel	SODL(Side object detection control module - Left)	ECU information
XJ	2010-2012	V6 Diesel	SODL(Side object detection control module - Left)	Read fault codes
XJ	2010-2012	V6 Diesel	SODL(Side object detection control module - Left)	Erase fault codes
XJ	2010-2012	V6 Diesel	SODL(Side object detection control module - Left)	Live Data
XJ	2010-2012	V6 Diesel	SODR(Side object detection control module - Right)	ECU information
XJ	2010-2012	V6 Diesel	SODR(Side object detection control module - Right)	Read fault codes
XJ	2010-2012	V6 Diesel	SODR(Side object detection control module - Right)	Erase fault codes
XJ	2010-2012	V6 Diesel	SODR(Side object detection control module - Right)	Live Data
XJ	2010-2012	V6 Diesel	AAM(Audio amplifier module)	ECU information
XJ	2010-2012	V6 Diesel	AAM(Audio amplifier module)	Read fault codes
XJ	2010-2012	V6 Diesel	AAM(Audio amplifier module)	Erase fault codes
XJ	2010-2012	V6 Diesel	AAM(Audio amplifier module)	Live Data
XJ	2010-2012	V6 Diesel	ACM(Audio front control module)	ECU information
XJ	2010-2012	V6 Diesel	ACM(Audio front control module)	Read fault codes
XJ	2010-2012	V6 Diesel	ACM(Audio front control module)	Erase fault codes
XJ	2010-2012	V6 Diesel	ACM(Audio front control module)	Live Data
XJ	2010-2012	V6 Diesel	DABM(Digital audio broadcast module)	ECU information
XJ	2010-2012	V6 Diesel	DABM(Digital audio broadcast module)	Read fault codes
XJ	2010-2012	V6 Diesel	DABM(Digital audio broadcast module)	Erase fault codes
XJ	2010-2012	V6 Diesel	DABM(Digital audio broadcast module)	Live Data
XJ	2010-2012	V6 Diesel	REM(Rear entertainment control module)	ECU information
XJ	2010-2012	V6 Diesel	REM(Rear entertainment control module)	Read fault codes
XJ	2010-2012	V6 Diesel	REM(Rear entertainment control module)	Erase fault codes
XJ	2010-2012	V6 Diesel	REM(Rear entertainment control module)	Live Data
XJ	2010-2012	V6 Diesel	SRM(Satellite audio unit module)	ECU information
XJ	2010-2012	V6 Diesel	SRM(Satellite audio unit module)	Read fault codes
XJ	2010-2012	V6 Diesel	SRM(Satellite audio unit module)	Erase fault codes
XJ	2010-2012	V6 Diesel	SRM(Satellite audio unit module)	Live Data
XJ	2010-2012	V6 Diesel	TVM(Television module)	ECU information
XJ	2010-2012	V6 Diesel	TVM(Television module)	Read fault codes
XJ	2010-2012	V6 Diesel	TVM(Television module)	Erase fault codes
XJ	2010-2012	V6 Diesel	TVM(Television module)	Live Data
XJ	2010-2012	V6 Diesel	Special Function	Oil service counter reset
XJ	2010-2012	V6 Diesel	Special Function	Rest of world - Service interval options
XJ	2010-2012	V6 Diesel	Special Function	Service interval reset
XJ	2010-2012	V6 Diesel	Special Function	Injector replacement

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XJ	2010-2012	V6 Diesel	Special Function	Display injector correction factors
XJ	2010-2012	V6 Diesel	Special Function	Throttle valve actuator replacement
XJ	2010-2012	V6 Diesel	Special Function	Parking brake release to service position
XJ	2010-2012	V6 Diesel	Special Function	Brake bleed
XJ	2010-2012	V6 Diesel	Special Function	Steering column calibration
XJ	2010-2012	V6 Diesel	Special Function	Variable assist power steering curves programming
XJ	2010-2012	V6 Diesel	Special Function	Tire pressure monitor sensor identification display
XJ	2010-2012	V6 Diesel	Special Function	Tire pressure sensor replacement
XJ	2010-2012	V6 Diesel	Special Function	Diesel particulate filter replacement
XJ	2010-2012	V6 Diesel	Special Function	Height calibration
XJ	2010-2012	V6 Diesel	Special Function	Headlamp calibration suspension set-up
XJ	2010-2012	V6 Diesel	Special Function	Headlamp control module system calibration
XJ	2010-2012	V6 Diesel	Special Function	Battery replacement
XJ	2010-2012	V6 Diesel	Special Function	Odometer calibration
XJ	2010-2012	V6 Diesel	Special Function	Seat cushion replacement
XJ	2010-2012	V6 Diesel	Special Function	Driver's seat calibration
XJ	2010-2012	V6 Diesel	Special Function	Passenger's seat calibration
XJ	2010-2012	V6 Diesel	Special Function	Drivers side window calibration
XJ	2010-2012	V6 Diesel	Special Function	Passenger side window calibration
XJ	2010-2012	V6 Diesel	Special Function	Sunroof calibration
XJ	2010-2012	V6 Diesel	Special Function	Tailgate/trunk calibration
XJ	2010-2012	Normally Aspirated V8 5.0L engine	PCM(Powertrain control module)	ECU information
XJ	2010-2012	Normally Aspirated V8 5.0L engine	PCM(Powertrain control module)	Read fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	PCM(Powertrain control module)	Erase fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	PCM(Powertrain control module)	Live Data
XJ	2010-2012	Normally Aspirated V8 5.0L engine	TCM(Transmission control module)	ECU information
XJ	2010-2012	Normally Aspirated V8 5.0L engine	TCM(Transmission control module)	Read fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	TCM(Transmission control module)	Erase fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	TCM(Transmission control module)	Live Data
XJ	2010-2012	Normally Aspirated V8 5.0L engine	ABS(ABS control module)	ECU information
XJ	2010-2012	Normally Aspirated V8 5.0L engine	ABS(ABS control module)	Read fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	ABS(ABS control module)	Erase fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	ABS(ABS control module)	Live Data
XJ	2010-2012	Normally Aspirated V8 5.0L engine	RCM(Restraints control module)	ECU information
XJ	2010-2012	Normally Aspirated V8 5.0L engine	RCM(Restraints control module)	Read fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	RCM(Restraints control module)	Erase fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	RCM(Restraints control module)	Live Data
XJ	2010-2012	Normally Aspirated V8 5.0L engine	IPC(Instrument cluster control module)	ECU information
XJ	2010-2012	Normally Aspirated V8 5.0L engine	IPC(Instrument cluster control module)	Read fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	IPC(Instrument cluster control module)	Erase fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	IPC(Instrument cluster control module)	Live Data
XJ	2010-2012	Normally Aspirated V8 5.0L engine	ADCM(Adaptive damping control module)	ECU information
XJ	2010-2012	Normally Aspirated V8 5.0L engine	ADCM(Adaptive damping control module)	Read fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	ADCM(Adaptive damping control module)	Erase fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	ADCM(Adaptive damping control module)	Live Data
XJ	2010-2012	Normally Aspirated V8 5.0L engine	BCM(Body control module)	ECU information
XJ	2010-2012	Normally Aspirated V8 5.0L engine	BCM(Body control module)	Read fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	BCM(Body control module)	Erase fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	BCM(Body control module)	Live Data
XJ	2010-2012	Normally Aspirated V8 5.0L engine	CCM(Speed control module)	ECU information
XJ	2010-2012	Normally Aspirated V8 5.0L engine	CCM(Speed control module)	Read fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	CCM(Speed control module)	Erase fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	CCM(Speed control module)	Live Data
XJ	2010-2012	Normally Aspirated V8 5.0L engine	GSM(Gear shift module)	ECU information
XJ	2010-2012	Normally Aspirated V8 5.0L engine	GSM(Gear shift module)	Read fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	GSM(Gear shift module)	Erase fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	GSM(Gear shift module)	Live Data
XJ	2010-2012	Normally Aspirated V8 5.0L engine	HCM(Headlamp control module)	ECU information
XJ	2010-2012	Normally Aspirated V8 5.0L engine	HCM(Headlamp control module)	Read fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	HCM(Headlamp control module)	Erase fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	HCM(Headlamp control module)	Live Data
XJ	2010-2012	Normally Aspirated V8 5.0L engine	OCS(Restraints occupant classification system module)	ECU information
XJ	2010-2012	Normally Aspirated V8 5.0L engine	OCS(Restraints occupant classification system module)	Read fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	OCS(Restraints occupant classification system module)	Erase fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	OCS(Restraints occupant classification system module)	Live Data
XJ	2010-2012	Normally Aspirated V8 5.0L engine	PBM(Parking brake control module)	ECU information
XJ	2010-2012	Normally Aspirated V8 5.0L engine	PBM(Parking brake control module)	Read fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	PBM(Parking brake control module)	Erase fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	PBM(Parking brake control module)	Live Data
XJ	2010-2012	Normally Aspirated V8 5.0L engine	RDCM(Rear differential control module)	ECU information
XJ	2010-2012	Normally Aspirated V8 5.0L engine	RDCM(Rear differential control module)	Read fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	RDCM(Rear differential control module)	Erase fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	RDCM(Rear differential control module)	Live Data
XJ	2010-2012	Normally Aspirated V8 5.0L engine	RLM(Ride level control module)	ECU information
XJ	2010-2012	Normally Aspirated V8 5.0L engine	RLM(Ride level control module)	Read fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	RLM(Ride level control module)	Erase fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	RLM(Ride level control module)	Live Data
XJ	2010-2012	Normally Aspirated V8 5.0L engine	SPMA(Safety belt pretensioner control module A - drivers side)	ECU information
XJ	2010-2012	Normally Aspirated V8 5.0L engine	SPMA(Safety belt pretensioner control module A - drivers side)	Read fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	SPMA(Safety belt pretensioner control module A - drivers side)	Erase fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	SPMA(Safety belt pretensioner control module A - drivers side)	Live Data

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XJ	2010-2012	Normally Aspirated V8 5.0L engine	SPMB(Safety belt pretensioner control module B - passengers side)	ECU information
XJ	2010-2012	Normally Aspirated V8 5.0L engine	SPMB(Safety belt pretensioner control module B - passengers side)	Read fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	SPMB(Safety belt pretensioner control module B - passengers side)	Erase fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	SPMB(Safety belt pretensioner control module B - passengers side)	Live Data
XJ	2010-2012	Normally Aspirated V8 5.0L engine	VIM(Vehicle immobilizer control module)	ECU information
XJ	2010-2012	Normally Aspirated V8 5.0L engine	VIM(Vehicle immobilizer control module)	Read fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	VIM(Vehicle immobilizer control module)	Erase fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	VIM(Vehicle immobilizer control module)	Live Data
XJ	2010-2012	Normally Aspirated V8 5.0L engine	DCSM(Driver's climate seat module)	ECU information
XJ	2010-2012	Normally Aspirated V8 5.0L engine	DCSM(Driver's climate seat module)	Read fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	DCSM(Driver's climate seat module)	Erase fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	DCSM(Driver's climate seat module)	Live Data
XJ	2010-2012	Normally Aspirated V8 5.0L engine	DDM(Driver's door module)	ECU information
XJ	2010-2012	Normally Aspirated V8 5.0L engine	DDM(Driver's door module)	Read fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	DDM(Driver's door module)	Erase fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	DDM(Driver's door module)	Live Data
XJ	2010-2012	Normally Aspirated V8 5.0L engine	DSM(Driver's seat module)	ECU information
XJ	2010-2012	Normally Aspirated V8 5.0L engine	DSM(Driver's seat module)	Read fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	DSM(Driver's seat module)	Erase fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	DSM(Driver's seat module)	Live Data
XJ	2010-2012	Normally Aspirated V8 5.0L engine	FCDIM(Front control/display interface module (high level display front))	ECU information
XJ	2010-2012	Normally Aspirated V8 5.0L engine	FCDIM(Front control/display interface module (high level display front))	Read fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	FCDIM(Front control/display interface module (high level display front))	Erase fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	FCDIM(Front control/display interface module (high level display front))	Live Data
XJ	2010-2012	Normally Aspirated V8 5.0L engine	FCIMB(Front controls interface module 'B' (front audio control panel))	ECU information
XJ	2010-2012	Normally Aspirated V8 5.0L engine	FCIMB(Front controls interface module 'B' (front audio control panel))	Read fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	FCIMB(Front controls interface module 'B' (front audio control panel))	Erase fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	FCIMB(Front controls interface module 'B' (front audio control panel))	Live Data
XJ	2010-2012	Normally Aspirated V8 5.0L engine	HCMB(Headlamp control module 'B')	ECU information
XJ	2010-2012	Normally Aspirated V8 5.0L engine	HCMB(Headlamp control module 'B')	Read fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	HCMB(Headlamp control module 'B')	Erase fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	HCMB(Headlamp control module 'B')	Live Data
XJ	2010-2012	Normally Aspirated V8 5.0L engine	HVAC(Heating ventilation and air conditioning control module)	ECU information
XJ	2010-2012	Normally Aspirated V8 5.0L engine	HVAC(Heating ventilation and air conditioning control module)	Read fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	HVAC(Heating ventilation and air conditioning control module)	Erase fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	HVAC(Heating ventilation and air conditioning control module)	Live Data
XJ	2010-2012	Normally Aspirated V8 5.0L engine	KVM(Keyless vehicle module)	ECU information
XJ	2010-2012	Normally Aspirated V8 5.0L engine	KVM(Keyless vehicle module)	Read fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	KVM(Keyless vehicle module)	Erase fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	KVM(Keyless vehicle module)	Live Data
XJ	2010-2012	Normally Aspirated V8 5.0L engine	PAM(Parking assist control module)	ECU information
XJ	2010-2012	Normally Aspirated V8 5.0L engine	PAM(Parking assist control module)	Read fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	PAM(Parking assist control module)	Erase fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	PAM(Parking assist control module)	Live Data
XJ	2010-2012	Normally Aspirated V8 5.0L engine	PDM(Passenger's door module)	ECU information
XJ	2010-2012	Normally Aspirated V8 5.0L engine	PDM(Passenger's door module)	Read fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	PDM(Passenger's door module)	Erase fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	PDM(Passenger's door module)	Live Data
XJ	2010-2012	Normally Aspirated V8 5.0L engine	PSM(Passenger's seat module)	ECU information
XJ	2010-2012	Normally Aspirated V8 5.0L engine	PSM(Passenger's seat module)	Read fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	PSM(Passenger's seat module)	Erase fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	PSM(Passenger's seat module)	Live Data
XJ	2010-2012	Normally Aspirated V8 5.0L engine	RDCSM(Rear climate seat module)	ECU information
XJ	2010-2012	Normally Aspirated V8 5.0L engine	RDCSM(Rear climate seat module)	Read fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	RDCSM(Rear climate seat module)	Erase fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	RDCSM(Rear climate seat module)	Live Data
XJ	2010-2012	Normally Aspirated V8 5.0L engine	RGTM(Rear gate / trunk module)	ECU information
XJ	2010-2012	Normally Aspirated V8 5.0L engine	RGTM(Rear gate / trunk module)	Read fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	RGTM(Rear gate / trunk module)	Erase fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	RGTM(Rear gate / trunk module)	Live Data
XJ	2010-2012	Normally Aspirated V8 5.0L engine	RHVAC(Rear Heating ventilation and air conditioning control module)	ECU information
XJ	2010-2012	Normally Aspirated V8 5.0L engine	RHVAC(Rear Heating ventilation and air conditioning control module)	Read fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	RHVAC(Rear Heating ventilation and air conditioning control module)	Erase fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	RHVAC(Rear Heating ventilation and air conditioning control module)	Live Data
XJ	2010-2012	Normally Aspirated V8 5.0L engine	SODL(Side object detection control module - Left)	ECU information
XJ	2010-2012	Normally Aspirated V8 5.0L engine	SODL(Side object detection control module - Left)	Read fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	SODL(Side object detection control module - Left)	Erase fault codes

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XJ	2010-2012	Normally Aspirated V8 5.0L engine	SODL(Side object detection control module - Left)	Live Data
XJ	2010-2012	Normally Aspirated V8 5.0L engine	SODR(Side object detection control module - Right)	ECU information
XJ	2010-2012	Normally Aspirated V8 5.0L engine	SODR(Side object detection control module - Right)	Read fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	SODR(Side object detection control module - Right)	Erase fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	SODR(Side object detection control module - Right)	Live Data
XJ	2010-2012	Normally Aspirated V8 5.0L engine	AAM(Audio amplifier module)	ECU information
XJ	2010-2012	Normally Aspirated V8 5.0L engine	AAM(Audio amplifier module)	Read fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	AAM(Audio amplifier module)	Erase fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	AAM(Audio amplifier module)	Live Data
XJ	2010-2012	Normally Aspirated V8 5.0L engine	ACM(Audio front control module)	ECU information
XJ	2010-2012	Normally Aspirated V8 5.0L engine	ACM(Audio front control module)	Read fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	ACM(Audio front control module)	Erase fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	ACM(Audio front control module)	Live Data
XJ	2010-2012	Normally Aspirated V8 5.0L engine	DABM(Digital audio broadcast module)	ECU information
XJ	2010-2012	Normally Aspirated V8 5.0L engine	DABM(Digital audio broadcast module)	Read fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	DABM(Digital audio broadcast module)	Erase fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	DABM(Digital audio broadcast module)	Live Data
XJ	2010-2012	Normally Aspirated V8 5.0L engine	REM(Rear entertainment control module)	ECU information
XJ	2010-2012	Normally Aspirated V8 5.0L engine	REM(Rear entertainment control module)	Read fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	REM(Rear entertainment control module)	Erase fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	REM(Rear entertainment control module)	Live Data
XJ	2010-2012	Normally Aspirated V8 5.0L engine	SRM(Satellite audio unit module)	ECU information
XJ	2010-2012	Normally Aspirated V8 5.0L engine	SRM(Satellite audio unit module)	Read fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	SRM(Satellite audio unit module)	Erase fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	SRM(Satellite audio unit module)	Live Data
XJ	2010-2012	Normally Aspirated V8 5.0L engine	TVM(Television module)	ECU information
XJ	2010-2012	Normally Aspirated V8 5.0L engine	TVM(Television module)	Read fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	TVM(Television module)	Erase fault codes
XJ	2010-2012	Normally Aspirated V8 5.0L engine	TVM(Television module)	Live Data
XJ	2010-2012	Normally Aspirated V8 5.0L engine	Special Function	Service interval reset
XJ	2010-2012	Normally Aspirated V8 5.0L engine	Special Function	Idle speed test
XJ	2010-2012	Normally Aspirated V8 5.0L engine	Special Function	Injector replacement
XJ	2010-2012	Normally Aspirated V8 5.0L engine	Special Function	Throttle valve actuator replacement
XJ	2010-2012	Normally Aspirated V8 5.0L engine	Special Function	Parking brake release to service position
XJ	2010-2012	Normally Aspirated V8 5.0L engine	Special Function	Brake bleed
XJ	2010-2012	Normally Aspirated V8 5.0L engine	Special Function	Steering column calibration
XJ	2010-2012	Normally Aspirated V8 5.0L engine	Special Function	Variable assist power steering curves programming
XJ	2010-2012	Normally Aspirated V8 5.0L engine	Special Function	Tire pressure monitor sensor identification display
XJ	2010-2012	Normally Aspirated V8 5.0L engine	Special Function	Tire pressure sensor replacement
XJ	2010-2012	Normally Aspirated V8 5.0L engine	Special Function	Height calibration
XJ	2010-2012	Normally Aspirated V8 5.0L engine	Special Function	Headlamp calibration suspension set-up
XJ	2010-2012	Normally Aspirated V8 5.0L engine	Special Function	Headlamp control module system calibration
XJ	2010-2012	Normally Aspirated V8 5.0L engine	Special Function	Battery replacement
XJ	2010-2012	Normally Aspirated V8 5.0L engine	Special Function	Odometer calibration
XJ	2010-2012	Normally Aspirated V8 5.0L engine	Special Function	Seat cushion replacement
XJ	2010-2012	Normally Aspirated V8 5.0L engine	Special Function	Driver's seat calibration
XJ	2010-2012	Normally Aspirated V8 5.0L engine	Special Function	Passenger's seat calibration
XJ	2010-2012	Normally Aspirated V8 5.0L engine	Special Function	Drivers side window calibration
XJ	2010-2012	Normally Aspirated V8 5.0L engine	Special Function	Passenger side window calibration
XJ	2010-2012	Normally Aspirated V8 5.0L engine	Special Function	Sunroof calibration
XJ	2010-2012	Normally Aspirated V8 5.0L engine	Special Function	Tailgate/trunk calibration
XJ	2010-2012	Supercharged V8 5.0L engine	PCM(Powertrain control module)	ECU information
XJ	2010-2012	Supercharged V8 5.0L engine	PCM(Powertrain control module)	Read fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	PCM(Powertrain control module)	Erase fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	PCM(Powertrain control module)	Live Data
XJ	2010-2012	Supercharged V8 5.0L engine	TCM(Transmission control module)	ECU information
XJ	2010-2012	Supercharged V8 5.0L engine	TCM(Transmission control module)	Read fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	TCM(Transmission control module)	Erase fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	TCM(Transmission control module)	Live Data
XJ	2010-2012	Supercharged V8 5.0L engine	ABS(ABS control module)	ECU information
XJ	2010-2012	Supercharged V8 5.0L engine	ABS(ABS control module)	Read fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	ABS(ABS control module)	Erase fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	ABS(ABS control module)	Live Data
XJ	2010-2012	Supercharged V8 5.0L engine	RCM(Restraints control module)	ECU information
XJ	2010-2012	Supercharged V8 5.0L engine	RCM(Restraints control module)	Read fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	RCM(Restraints control module)	Erase fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	RCM(Restraints control module)	Live Data
XJ	2010-2012	Supercharged V8 5.0L engine	IPC(Instrument cluster control module)	ECU information
XJ	2010-2012	Supercharged V8 5.0L engine	IPC(Instrument cluster control module)	Read fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	IPC(Instrument cluster control module)	Erase fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	IPC(Instrument cluster control module)	Live Data
XJ	2010-2012	Supercharged V8 5.0L engine	ADCM(Adaptive damping control module)	ECU information
XJ	2010-2012	Supercharged V8 5.0L engine	ADCM(Adaptive damping control module)	Read fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	ADCM(Adaptive damping control module)	Erase fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	ADCM(Adaptive damping control module)	Live Data
XJ	2010-2012	Supercharged V8 5.0L engine	BCM(Body control module)	ECU information
XJ	2010-2012	Supercharged V8 5.0L engine	BCM(Body control module)	Read fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	BCM(Body control module)	Erase fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	BCM(Body control module)	Live Data
XJ	2010-2012	Supercharged V8 5.0L engine	CCM(Speed control module)	ECU information
XJ	2010-2012	Supercharged V8 5.0L engine	CCM(Speed control module)	Read fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	CCM(Speed control module)	Erase fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	CCM(Speed control module)	Live Data
XJ	2010-2012	Supercharged V8 5.0L engine	GSM(Gear shift module)	ECU information
XJ	2010-2012	Supercharged V8 5.0L engine	GSM(Gear shift module)	Read fault codes

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XJ	2010-2012	Supercharged V8 5.0L engine	GSM(Gear shift module)	Erase fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	GSM(Gear shift module)	Live Data
XJ	2010-2012	Supercharged V8 5.0L engine	HCM(Headlamp control module)	ECU information
XJ	2010-2012	Supercharged V8 5.0L engine	HCM(Headlamp control module)	Read fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	HCM(Headlamp control module)	Erase fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	HCM(Headlamp control module)	Live Data
XJ	2010-2012	Supercharged V8 5.0L engine	OCS(Restraints occupant classification system module)	ECU information
XJ	2010-2012	Supercharged V8 5.0L engine	OCS(Restraints occupant classification system module)	Read fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	OCS(Restraints occupant classification system module)	Erase fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	OCS(Restraints occupant classification system module)	Live Data
XJ	2010-2012	Supercharged V8 5.0L engine	PBM(Parking brake control module)	ECU information
XJ	2010-2012	Supercharged V8 5.0L engine	PBM(Parking brake control module)	Read fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	PBM(Parking brake control module)	Erase fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	PBM(Parking brake control module)	Live Data
XJ	2010-2012	Supercharged V8 5.0L engine	RDCM(Rear differential control module)	ECU information
XJ	2010-2012	Supercharged V8 5.0L engine	RDCM(Rear differential control module)	Read fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	RDCM(Rear differential control module)	Erase fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	RDCM(Rear differential control module)	Live Data
XJ	2010-2012	Supercharged V8 5.0L engine	RLM(Ride level control module)	ECU information
XJ	2010-2012	Supercharged V8 5.0L engine	RLM(Ride level control module)	Read fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	RLM(Ride level control module)	Erase fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	RLM(Ride level control module)	Live Data
XJ	2010-2012	Supercharged V8 5.0L engine	SPMA(Safety belt pretensioner control module A - drivers side)	ECU information
XJ	2010-2012	Supercharged V8 5.0L engine	SPMA(Safety belt pretensioner control module A - drivers side)	Read fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	SPMA(Safety belt pretensioner control module A - drivers side)	Erase fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	SPMA(Safety belt pretensioner control module A - drivers side)	Live Data
XJ	2010-2012	Supercharged V8 5.0L engine	SPMB(Safety belt pretensioner control module B - passengers side)	ECU information
XJ	2010-2012	Supercharged V8 5.0L engine	SPMB(Safety belt pretensioner control module B - passengers side)	Read fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	SPMB(Safety belt pretensioner control module B - passengers side)	Erase fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	SPMB(Safety belt pretensioner control module B - passengers side)	Live Data
XJ	2010-2012	Supercharged V8 5.0L engine	VIM(Vehicle immobilizer control module)	ECU information
XJ	2010-2012	Supercharged V8 5.0L engine	VIM(Vehicle immobilizer control module)	Read fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	VIM(Vehicle immobilizer control module)	Erase fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	VIM(Vehicle immobilizer control module)	Live Data
XJ	2010-2012	Supercharged V8 5.0L engine	DCSM(Driver's climate seat module)	ECU information
XJ	2010-2012	Supercharged V8 5.0L engine	DCSM(Driver's climate seat module)	Read fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	DCSM(Driver's climate seat module)	Erase fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	DCSM(Driver's climate seat module)	Live Data
XJ	2010-2012	Supercharged V8 5.0L engine	DDM(Driver's door module)	ECU information
XJ	2010-2012	Supercharged V8 5.0L engine	DDM(Driver's door module)	Read fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	DDM(Driver's door module)	Erase fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	DDM(Driver's door module)	Live Data
XJ	2010-2012	Supercharged V8 5.0L engine	DSM(Driver's seat module)	ECU information
XJ	2010-2012	Supercharged V8 5.0L engine	DSM(Driver's seat module)	Read fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	DSM(Driver's seat module)	Erase fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	DSM(Driver's seat module)	Live Data
XJ	2010-2012	Supercharged V8 5.0L engine	FCDIM(Front control/display interface module (high level display front))	ECU information
XJ	2010-2012	Supercharged V8 5.0L engine	FCDIM(Front control/display interface module (high level display front))	Read fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	FCDIM(Front control/display interface module (high level display front))	Erase fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	FCDIM(Front control/display interface module (high level display front))	Live Data
XJ	2010-2012	Supercharged V8 5.0L engine	FCIMB(Front controls interface module 'B' (front audio control panel))	ECU information
XJ	2010-2012	Supercharged V8 5.0L engine	FCIMB(Front controls interface module 'B' (front audio control panel))	Read fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	FCIMB(Front controls interface module 'B' (front audio control panel))	Erase fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	FCIMB(Front controls interface module 'B' (front audio control panel))	Live Data
XJ	2010-2012	Supercharged V8 5.0L engine	HCMB(Headlamp control module 'B')	ECU information
XJ	2010-2012	Supercharged V8 5.0L engine	HCMB(Headlamp control module 'B')	Read fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	HCMB(Headlamp control module 'B')	Erase fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	HCMB(Headlamp control module 'B')	Live Data
XJ	2010-2012	Supercharged V8 5.0L engine	HVAC(Heating ventilation and air conditioning control module)	ECU information
XJ	2010-2012	Supercharged V8 5.0L engine	HVAC(Heating ventilation and air conditioning control module)	Read fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	HVAC(Heating ventilation and air conditioning control module)	Erase fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	HVAC(Heating ventilation and air conditioning control module)	Live Data
XJ	2010-2012	Supercharged V8 5.0L engine	KVM(Keyless vehicle module)	ECU information
XJ	2010-2012	Supercharged V8 5.0L engine	KVM(Keyless vehicle module)	Read fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	KVM(Keyless vehicle module)	Erase fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	KVM(Keyless vehicle module)	Live Data
XJ	2010-2012	Supercharged V8 5.0L engine	PAM(Parking assist control module)	ECU information

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XJ	2010-2012	Supercharged V8 5.0L engine	PAM(Parking assist control module)	Read fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	PAM(Parking assist control module)	Erase fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	PAM(Parking assist control module)	Live Data
XJ	2010-2012	Supercharged V8 5.0L engine	PDM(Passenger's door module)	ECU information
XJ	2010-2012	Supercharged V8 5.0L engine	PDM(Passenger's door module)	Read fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	PDM(Passenger's door module)	Erase fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	PDM(Passenger's door module)	Live Data
XJ	2010-2012	Supercharged V8 5.0L engine	PSM(Passenger's seat module)	ECU information
XJ	2010-2012	Supercharged V8 5.0L engine	PSM(Passenger's seat module)	Read fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	PSM(Passenger's seat module)	Erase fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	PSM(Passenger's seat module)	Live Data
XJ	2010-2012	Supercharged V8 5.0L engine	RDCSM(Rear climate seat module)	ECU information
XJ	2010-2012	Supercharged V8 5.0L engine	RDCSM(Rear climate seat module)	Read fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	RDCSM(Rear climate seat module)	Erase fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	RDCSM(Rear climate seat module)	Live Data
XJ	2010-2012	Supercharged V8 5.0L engine	RGTM(Rear gate / trunk module)	ECU information
XJ	2010-2012	Supercharged V8 5.0L engine	RGTM(Rear gate / trunk module)	Read fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	RGTM(Rear gate / trunk module)	Erase fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	RGTM(Rear gate / trunk module)	Live Data
XJ	2010-2012	Supercharged V8 5.0L engine	RHVAC(Rear Heating ventilation and air conditioning control module)	ECU information
XJ	2010-2012	Supercharged V8 5.0L engine	RHVAC(Rear Heating ventilation and air conditioning control module)	Read fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	RHVAC(Rear Heating ventilation and air conditioning control module)	Erase fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	RHVAC(Rear Heating ventilation and air conditioning control module)	Live Data
XJ	2010-2012	Supercharged V8 5.0L engine	SODL(Side object detection control module - Left)	ECU information
XJ	2010-2012	Supercharged V8 5.0L engine	SODL(Side object detection control module - Left)	Read fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	SODL(Side object detection control module - Left)	Erase fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	SODL(Side object detection control module - Left)	Live Data
XJ	2010-2012	Supercharged V8 5.0L engine	SODR(Side object detection control module - Right)	ECU information
XJ	2010-2012	Supercharged V8 5.0L engine	SODR(Side object detection control module - Right)	Read fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	SODR(Side object detection control module - Right)	Erase fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	SODR(Side object detection control module - Right)	Live Data
XJ	2010-2012	Supercharged V8 5.0L engine	AAM(Audio amplifier module)	ECU information
XJ	2010-2012	Supercharged V8 5.0L engine	AAM(Audio amplifier module)	Read fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	AAM(Audio amplifier module)	Erase fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	AAM(Audio amplifier module)	Live Data
XJ	2010-2012	Supercharged V8 5.0L engine	ACM(Audio front control module)	ECU information
XJ	2010-2012	Supercharged V8 5.0L engine	ACM(Audio front control module)	Read fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	ACM(Audio front control module)	Erase fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	ACM(Audio front control module)	Live Data
XJ	2010-2012	Supercharged V8 5.0L engine	DABM(Digital audio broadcast module)	ECU information
XJ	2010-2012	Supercharged V8 5.0L engine	DABM(Digital audio broadcast module)	Read fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	DABM(Digital audio broadcast module)	Erase fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	DABM(Digital audio broadcast module)	Live Data
XJ	2010-2012	Supercharged V8 5.0L engine	REM(Rear entertainment control module)	ECU information
XJ	2010-2012	Supercharged V8 5.0L engine	REM(Rear entertainment control module)	Read fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	REM(Rear entertainment control module)	Erase fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	REM(Rear entertainment control module)	Live Data
XJ	2010-2012	Supercharged V8 5.0L engine	SRM(Satellite audio unit module)	ECU information
XJ	2010-2012	Supercharged V8 5.0L engine	SRM(Satellite audio unit module)	Read fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	SRM(Satellite audio unit module)	Erase fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	SRM(Satellite audio unit module)	Live Data
XJ	2010-2012	Supercharged V8 5.0L engine	TVM(Television module)	ECU information
XJ	2010-2012	Supercharged V8 5.0L engine	TVM(Television module)	Read fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	TVM(Television module)	Erase fault codes
XJ	2010-2012	Supercharged V8 5.0L engine	TVM(Television module)	Live Data
XJ	2010-2012	Supercharged V8 5.0L engine	Special Function	Service interval reset
XJ	2010-2012	Supercharged V8 5.0L engine	Special Function	Idle speed test
XJ	2010-2012	Supercharged V8 5.0L engine	Special Function	Injector replacement
XJ	2010-2012	Supercharged V8 5.0L engine	Special Function	Throttle valve actuator replacement
XJ	2010-2012	Supercharged V8 5.0L engine	Special Function	Parking brake release to service position
XJ	2010-2012	Supercharged V8 5.0L engine	Special Function	Brake bleed
XJ	2010-2012	Supercharged V8 5.0L engine	Special Function	Steering column calibration
XJ	2010-2012	Supercharged V8 5.0L engine	Special Function	Variable assist power steering curves programming
XJ	2010-2012	Supercharged V8 5.0L engine	Special Function	Tire pressure monitor sensor identification display
XJ	2010-2012	Supercharged V8 5.0L engine	Special Function	Tire pressure sensor replacement
XJ	2010-2012	Supercharged V8 5.0L engine	Special Function	Height calibration
XJ	2010-2012	Supercharged V8 5.0L engine	Special Function	Headlamp calibration suspension set-up
XJ	2010-2012	Supercharged V8 5.0L engine	Special Function	Headlamp control module system calibration
XJ	2010-2012	Supercharged V8 5.0L engine	Special Function	Battery replacement
XJ	2010-2012	Supercharged V8 5.0L engine	Special Function	Odometer calibration
XJ	2010-2012	Supercharged V8 5.0L engine	Special Function	Seat cushion replacement
XJ	2010-2012	Supercharged V8 5.0L engine	Special Function	Driver's seat calibration
XJ	2010-2012	Supercharged V8 5.0L engine	Special Function	Passenger's seat calibration
XJ	2010-2012	Supercharged V8 5.0L engine	Special Function	Drivers side window calibration
XJ	2010-2012	Supercharged V8 5.0L engine	Special Function	Passenger side window calibration
XJ	2010-2012	Supercharged V8 5.0L engine	Special Function	Sunroof calibration
XJ	2010-2012	Supercharged V8 5.0L engine	Special Function	Tailgate/trunk calibration
XJ	2010-2012	Normally Aspirated V6 3.0L engine	PCM(Powertrain control module)	ECU information

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XJ	2010-2012	Normally Aspirated V6 3.0L engine	PCM(Powertrain control module)	Read fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	PCM(Powertrain control module)	Erase fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	PCM(Powertrain control module)	Live Data
XJ	2010-2012	Normally Aspirated V6 3.0L engine	TCM(Transmission control module)	ECU information
XJ	2010-2012	Normally Aspirated V6 3.0L engine	TCM(Transmission control module)	Read fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	TCM(Transmission control module)	Erase fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	TCM(Transmission control module)	Live Data
XJ	2010-2012	Normally Aspirated V6 3.0L engine	ABS(ABS control module)	ECU information
XJ	2010-2012	Normally Aspirated V6 3.0L engine	ABS(ABS control module)	Read fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	ABS(ABS control module)	Erase fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	ABS(ABS control module)	Live Data
XJ	2010-2012	Normally Aspirated V6 3.0L engine	RCM(Restraints control module)	ECU information
XJ	2010-2012	Normally Aspirated V6 3.0L engine	RCM(Restraints control module)	Read fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	RCM(Restraints control module)	Erase fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	RCM(Restraints control module)	Live Data
XJ	2010-2012	Normally Aspirated V6 3.0L engine	IPC(Instrument cluster control module)	ECU information
XJ	2010-2012	Normally Aspirated V6 3.0L engine	IPC(Instrument cluster control module)	Read fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	IPC(Instrument cluster control module)	Erase fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	IPC(Instrument cluster control module)	Live Data
XJ	2010-2012	Normally Aspirated V6 3.0L engine	ADCM(Adaptive damping control module)	ECU information
XJ	2010-2012	Normally Aspirated V6 3.0L engine	ADCM(Adaptive damping control module)	Read fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	ADCM(Adaptive damping control module)	Erase fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	ADCM(Adaptive damping control module)	Live Data
XJ	2010-2012	Normally Aspirated V6 3.0L engine	BCM(Body control module)	ECU information
XJ	2010-2012	Normally Aspirated V6 3.0L engine	BCM(Body control module)	Read fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	BCM(Body control module)	Erase fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	BCM(Body control module)	Live Data
XJ	2010-2012	Normally Aspirated V6 3.0L engine	CCM(Speed control module)	ECU information
XJ	2010-2012	Normally Aspirated V6 3.0L engine	CCM(Speed control module)	Read fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	CCM(Speed control module)	Erase fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	CCM(Speed control module)	Live Data
XJ	2010-2012	Normally Aspirated V6 3.0L engine	GSM(Gear shift module)	ECU information
XJ	2010-2012	Normally Aspirated V6 3.0L engine	GSM(Gear shift module)	Read fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	GSM(Gear shift module)	Erase fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	GSM(Gear shift module)	Live Data
XJ	2010-2012	Normally Aspirated V6 3.0L engine	HCM(Headlamp control module)	ECU information
XJ	2010-2012	Normally Aspirated V6 3.0L engine	HCM(Headlamp control module)	Read fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	HCM(Headlamp control module)	Erase fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	HCM(Headlamp control module)	Live Data
XJ	2010-2012	Normally Aspirated V6 3.0L engine	OCS(Restraints occupant classification system module)	ECU information
XJ	2010-2012	Normally Aspirated V6 3.0L engine	OCS(Restraints occupant classification system module)	Read fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	OCS(Restraints occupant classification system module)	Erase fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	OCS(Restraints occupant classification system module)	Live Data
XJ	2010-2012	Normally Aspirated V6 3.0L engine	PBM(Parking brake control module)	ECU information
XJ	2010-2012	Normally Aspirated V6 3.0L engine	PBM(Parking brake control module)	Read fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	PBM(Parking brake control module)	Erase fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	PBM(Parking brake control module)	Live Data
XJ	2010-2012	Normally Aspirated V6 3.0L engine	RDCM(Rear differential control module)	ECU information
XJ	2010-2012	Normally Aspirated V6 3.0L engine	RDCM(Rear differential control module)	Read fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	RDCM(Rear differential control module)	Erase fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	RDCM(Rear differential control module)	Live Data
XJ	2010-2012	Normally Aspirated V6 3.0L engine	RLM(Ride level control module)	ECU information
XJ	2010-2012	Normally Aspirated V6 3.0L engine	RLM(Ride level control module)	Read fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	RLM(Ride level control module)	Erase fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	RLM(Ride level control module)	Live Data
XJ	2010-2012	Normally Aspirated V6 3.0L engine	SPMA(Safety belt pretensioner control module A - drivers side)	ECU information
XJ	2010-2012	Normally Aspirated V6 3.0L engine	SPMA(Safety belt pretensioner control module A - drivers side)	Read fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	SPMA(Safety belt pretensioner control module A - drivers side)	Erase fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	SPMA(Safety belt pretensioner control module A - drivers side)	Live Data
XJ	2010-2012	Normally Aspirated V6 3.0L engine	SPMB(Safety belt pretensioner control module B - passengers side)	ECU information
XJ	2010-2012	Normally Aspirated V6 3.0L engine	SPMB(Safety belt pretensioner control module B - passengers side)	Read fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	SPMB(Safety belt pretensioner control module B - passengers side)	Erase fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	SPMB(Safety belt pretensioner control module B - passengers side)	Live Data
XJ	2010-2012	Normally Aspirated V6 3.0L engine	VIM(Vehicle immobilizer control module)	ECU information
XJ	2010-2012	Normally Aspirated V6 3.0L engine	VIM(Vehicle immobilizer control module)	Read fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	VIM(Vehicle immobilizer control module)	Erase fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	VIM(Vehicle immobilizer control module)	Live Data
XJ	2010-2012	Normally Aspirated V6 3.0L engine	DCSM(Driver's climate seat module)	ECU information
XJ	2010-2012	Normally Aspirated V6 3.0L engine	DCSM(Driver's climate seat module)	Read fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	DCSM(Driver's climate seat module)	Erase fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	DCSM(Driver's climate seat module)	Live Data
XJ	2010-2012	Normally Aspirated V6 3.0L engine	DDM(Driver's door module)	ECU information
XJ	2010-2012	Normally Aspirated V6 3.0L engine	DDM(Driver's door module)	Read fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	DDM(Driver's door module)	Erase fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	DDM(Driver's door module)	Live Data
XJ	2010-2012	Normally Aspirated V6 3.0L engine	DSM(Driver's seat module)	ECU information
XJ	2010-2012	Normally Aspirated V6 3.0L engine	DSM(Driver's seat module)	Read fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	DSM(Driver's seat module)	Erase fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	DSM(Driver's seat module)	Live Data

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XJ	2010-2012	Normally Aspirated V6 3.0L engine	FCDIM(Front control/display interface module (high level display front))	ECU information
XJ	2010-2012	Normally Aspirated V6 3.0L engine	FCDIM(Front control/display interface module (high level display front))	Read fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	FCDIM(Front control/display interface module (high level display front))	Erase fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	FCDIM(Front control/display interface module (high level display front))	Live Data
XJ	2010-2012	Normally Aspirated V6 3.0L engine	FCIMB(Front controls interface module 'B' (front audio control panel))	ECU information
XJ	2010-2012	Normally Aspirated V6 3.0L engine	FCIMB(Front controls interface module 'B' (front audio control panel))	Read fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	FCIMB(Front controls interface module 'B' (front audio control panel))	Erase fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	FCIMB(Front controls interface module 'B' (front audio control panel))	Live Data
XJ	2010-2012	Normally Aspirated V6 3.0L engine	HCMB(Headlamp control module 'B')	ECU information
XJ	2010-2012	Normally Aspirated V6 3.0L engine	HCMB(Headlamp control module 'B')	Read fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	HCMB(Headlamp control module 'B')	Erase fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	HCMB(Headlamp control module 'B')	Live Data
XJ	2010-2012	Normally Aspirated V6 3.0L engine	HVAC(Heating ventilation and air conditioning control module)	ECU information
XJ	2010-2012	Normally Aspirated V6 3.0L engine	HVAC(Heating ventilation and air conditioning control module)	Read fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	HVAC(Heating ventilation and air conditioning control module)	Erase fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	HVAC(Heating ventilation and air conditioning control module)	Live Data
XJ	2010-2012	Normally Aspirated V6 3.0L engine	KVM(Keyless vehicle module)	ECU information
XJ	2010-2012	Normally Aspirated V6 3.0L engine	KVM(Keyless vehicle module)	Read fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	KVM(Keyless vehicle module)	Erase fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	KVM(Keyless vehicle module)	Live Data
XJ	2010-2012	Normally Aspirated V6 3.0L engine	PAM(Parking assist control module)	ECU information
XJ	2010-2012	Normally Aspirated V6 3.0L engine	PAM(Parking assist control module)	Read fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	PAM(Parking assist control module)	Erase fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	PAM(Parking assist control module)	Live Data
XJ	2010-2012	Normally Aspirated V6 3.0L engine	PDM(Passenger's door module)	ECU information
XJ	2010-2012	Normally Aspirated V6 3.0L engine	PDM(Passenger's door module)	Read fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	PDM(Passenger's door module)	Erase fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	PDM(Passenger's door module)	Live Data
XJ	2010-2012	Normally Aspirated V6 3.0L engine	PSM(Passenger's seat module)	ECU information
XJ	2010-2012	Normally Aspirated V6 3.0L engine	PSM(Passenger's seat module)	Read fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	PSM(Passenger's seat module)	Erase fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	PSM(Passenger's seat module)	Live Data
XJ	2010-2012	Normally Aspirated V6 3.0L engine	RDCSM(Rear climate seat module)	ECU information
XJ	2010-2012	Normally Aspirated V6 3.0L engine	RDCSM(Rear climate seat module)	Read fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	RDCSM(Rear climate seat module)	Erase fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	RDCSM(Rear climate seat module)	Live Data
XJ	2010-2012	Normally Aspirated V6 3.0L engine	RGTM(Rear gate / trunk module)	ECU information
XJ	2010-2012	Normally Aspirated V6 3.0L engine	RGTM(Rear gate / trunk module)	Read fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	RGTM(Rear gate / trunk module)	Erase fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	RGTM(Rear gate / trunk module)	Live Data
XJ	2010-2012	Normally Aspirated V6 3.0L engine	RHVAC(Rear Heating ventilation and air conditioning control module)	ECU information
XJ	2010-2012	Normally Aspirated V6 3.0L engine	RHVAC(Rear Heating ventilation and air conditioning control module)	Read fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	RHVAC(Rear Heating ventilation and air conditioning control module)	Erase fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	RHVAC(Rear Heating ventilation and air conditioning control module)	Live Data
XJ	2010-2012	Normally Aspirated V6 3.0L engine	SODL(Side object detection control module - Left)	ECU information
XJ	2010-2012	Normally Aspirated V6 3.0L engine	SODL(Side object detection control module - Left)	Read fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	SODL(Side object detection control module - Left)	Erase fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	SODL(Side object detection control module - Left)	Live Data
XJ	2010-2012	Normally Aspirated V6 3.0L engine	SODR(Side object detection control module - Right)	ECU information
XJ	2010-2012	Normally Aspirated V6 3.0L engine	SODR(Side object detection control module - Right)	Read fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	SODR(Side object detection control module - Right)	Erase fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	SODR(Side object detection control module - Right)	Live Data
XJ	2010-2012	Normally Aspirated V6 3.0L engine	AAM(Audio amplifier module)	ECU information
XJ	2010-2012	Normally Aspirated V6 3.0L engine	AAM(Audio amplifier module)	Read fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	AAM(Audio amplifier module)	Erase fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	AAM(Audio amplifier module)	Live Data
XJ	2010-2012	Normally Aspirated V6 3.0L engine	ACM(Audio front control module)	ECU information
XJ	2010-2012	Normally Aspirated V6 3.0L engine	ACM(Audio front control module)	Read fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	ACM(Audio front control module)	Erase fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	ACM(Audio front control module)	Live Data
XJ	2010-2012	Normally Aspirated V6 3.0L engine	DABM(Digital audio broadcast module)	ECU information
XJ	2010-2012	Normally Aspirated V6 3.0L engine	DABM(Digital audio broadcast module)	Read fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	DABM(Digital audio broadcast module)	Erase fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	DABM(Digital audio broadcast module)	Live Data
XJ	2010-2012	Normally Aspirated V6 3.0L engine	REM(Rear entertainment control module)	ECU information
XJ	2010-2012	Normally Aspirated V6 3.0L engine	REM(Rear entertainment control module)	Read fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	REM(Rear entertainment control module)	Erase fault codes



## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XJ	2010-2012	Normally Aspirated V6 3.0L engine	REM(Rear entertainment control module)	Live Data
XJ	2010-2012	Normally Aspirated V6 3.0L engine	SRM(Satellite audio unit module)	ECU information
XJ	2010-2012	Normally Aspirated V6 3.0L engine	SRM(Satellite audio unit module)	Read fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	SRM(Satellite audio unit module)	Erase fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	SRM(Satellite audio unit module)	Live Data
XJ	2010-2012	Normally Aspirated V6 3.0L engine	TVM(Television module)	ECU information
XJ	2010-2012	Normally Aspirated V6 3.0L engine	TVM(Television module)	Read fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	TVM(Television module)	Erase fault codes
XJ	2010-2012	Normally Aspirated V6 3.0L engine	TVM(Television module)	Live Data
XJ	2010-2012	Normally Aspirated V6 3.0L engine	Special Function	Service interval reset
XJ	2010-2012	Normally Aspirated V6 3.0L engine	Special Function	Idle speed test
XJ	2010-2012	Normally Aspirated V6 3.0L engine	Special Function	Injector replacement
XJ	2010-2012	Normally Aspirated V6 3.0L engine	Special Function	Throttle valve actuator replacement
XJ	2010-2012	Normally Aspirated V6 3.0L engine	Special Function	Parking brake release to service position
XJ	2010-2012	Normally Aspirated V6 3.0L engine	Special Function	Brake bleed
XJ	2010-2012	Normally Aspirated V6 3.0L engine	Special Function	Steering column calibration
XJ	2010-2012	Normally Aspirated V6 3.0L engine	Special Function	Variable assist power steering curves programming
XJ	2010-2012	Normally Aspirated V6 3.0L engine	Special Function	Tire pressure monitor sensor identification display
XJ	2010-2012	Normally Aspirated V6 3.0L engine	Special Function	Tire pressure sensor replacement
XJ	2010-2012	Normally Aspirated V6 3.0L engine	Special Function	Height calibration
XJ	2010-2012	Normally Aspirated V6 3.0L engine	Special Function	Headlamp calibration suspension set-up
XJ	2010-2012	Normally Aspirated V6 3.0L engine	Special Function	Headlamp control module system calibration
XJ	2010-2012	Normally Aspirated V6 3.0L engine	Special Function	Battery replacement
XJ	2010-2012	Normally Aspirated V6 3.0L engine	Special Function	Odometer calibration
XJ	2010-2012	Normally Aspirated V6 3.0L engine	Special Function	Seat cushion replacement
XJ	2010-2012	Normally Aspirated V6 3.0L engine	Special Function	Driver's seat calibration
XJ	2010-2012	Normally Aspirated V6 3.0L engine	Special Function	Passenger's seat calibration
XJ	2010-2012	Normally Aspirated V6 3.0L engine	Special Function	Drivers side window calibration
XJ	2010-2012	Normally Aspirated V6 3.0L engine	Special Function	Passenger side window calibration
XJ	2010-2012	Normally Aspirated V6 3.0L engine	Special Function	Sunroof calibration
XJ	2010-2012	Normally Aspirated V6 3.0L engine	Special Function	Tailgate/trunk calibration
XJ	2008-2009	Normally Aspirated V6	PCM(Powertrain control module)	ECU information
XJ	2008-2009	Normally Aspirated V6	PCM(Powertrain control module)	Read fault codes
XJ	2008-2009	Normally Aspirated V6	PCM(Powertrain control module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V6	PCM(Powertrain control module)	Live Data
XJ	2008-2009	Normally Aspirated V6	TCM(Transmission control module)	Read fault codes
XJ	2008-2009	Normally Aspirated V6	TCM(Transmission control module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V6	TCM(Transmission control module)	Live Data
XJ	2008-2009	Normally Aspirated V6	ABS(Anti-lock braking system)	ECU information
XJ	2008-2009	Normally Aspirated V6	ABS(Anti-lock braking system)	Read fault codes
XJ	2008-2009	Normally Aspirated V6	ABS(Anti-lock braking system)	Erase fault codes
XJ	2008-2009	Normally Aspirated V6	ABS(Anti-lock braking system)	Live Data
XJ	2008-2009	Normally Aspirated V6	IP(Instrument pack)	Read fault codes
XJ	2008-2009	Normally Aspirated V6	IP(Instrument pack)	Erase fault codes
XJ	2008-2009	Normally Aspirated V6	IP(Instrument pack)	Live Data
XJ	2008-2009	Normally Aspirated V6	DCSM(Driver's climate seat module)	ECU information
XJ	2008-2009	Normally Aspirated V6	DCSM(Driver's climate seat module)	Read fault codes
XJ	2008-2009	Normally Aspirated V6	DCSM(Driver's climate seat module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V6	DCSM(Driver's climate seat module)	Live Data
XJ	2008-2009	Normally Aspirated V6	PBM(Parking brake control module)	ECU information
XJ	2008-2009	Normally Aspirated V6	PBM(Parking brake control module)	Read fault codes
XJ	2008-2009	Normally Aspirated V6	PBM(Parking brake control module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V6	PBM(Parking brake control module)	Live Data
XJ	2008-2009	Normally Aspirated V6	TPM(Tire pressure monitor module)	ECU information
XJ	2008-2009	Normally Aspirated V6	TPM(Tire pressure monitor module)	Read fault codes
XJ	2008-2009	Normally Aspirated V6	TPM(Tire pressure monitor module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V6	TPM(Tire pressure monitor module)	Live Data
XJ	2008-2009	Normally Aspirated V6	ACC(Adaptive speed control control module)	Read fault codes
XJ	2008-2009	Normally Aspirated V6	ACC(Adaptive speed control control module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V6	ACC(Adaptive speed control control module)	Live Data
XJ	2008-2009	Normally Aspirated V6	ASU(Air suspension module)	Read fault codes
XJ	2008-2009	Normally Aspirated V6	ASU(Air suspension module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V6	ASU(Air suspension module)	Live Data
XJ	2008-2009	Normally Aspirated V6	ATC(Climate control module)	Read fault codes
XJ	2008-2009	Normally Aspirated V6	ATC(Climate control module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V6	ATC(Climate control module)	Live Data
XJ	2008-2009	Normally Aspirated V6	RATC(Rear climate control module)	Read fault codes
XJ	2008-2009	Normally Aspirated V6	RATC(Rear climate control module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V6	RATC(Rear climate control module)	Live Data
XJ	2008-2009	Normally Aspirated V6	DDM(Driver's door module)	Read fault codes
XJ	2008-2009	Normally Aspirated V6	DDM(Driver's door module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V6	DDM(Driver's door module)	Live Data
XJ	2008-2009	Normally Aspirated V6	DSM(Driver's seat module)	Read fault codes
XJ	2008-2009	Normally Aspirated V6	DSM(Driver's seat module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V6	DSM(Driver's seat module)	Live Data
XJ	2008-2009	Normally Aspirated V6	FETM(Audio unit)	Read fault codes
XJ	2008-2009	Normally Aspirated V6	FETM(Audio unit)	Erase fault codes
XJ	2008-2009	Normally Aspirated V6	FETM(Audio unit)	Live Data
XJ	2008-2009	Normally Aspirated V6	GEM(General electronics control module)	Read fault codes
XJ	2008-2009	Normally Aspirated V6	GEM(General electronics control module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V6	GEM(General electronics control module)	Live Data
XJ	2008-2009	Normally Aspirated V6	NAV(Navigation control module)	Read fault codes
XJ	2008-2009	Normally Aspirated V6	NAV(Navigation control module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V6	NAV(Navigation control module)	Live Data
XJ	2008-2009	Normally Aspirated V6	REM(Rear electronic control module)	Read fault codes
XJ	2008-2009	Normally Aspirated V6	REM(Rear electronic control module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V6	REM(Rear electronic control module)	Live Data
XJ	2008-2009	Normally Aspirated V6	RSM(Rear seat control module)	Read fault codes
XJ	2008-2009	Normally Aspirated V6	RSM(Rear seat control module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V6	RSM(Rear seat control module)	Live Data

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XJ	2008-2009	Normally Aspirated V6	SCLM(Steering column lock module)	Read fault codes
XJ	2008-2009	Normally Aspirated V6	SCLM(Steering column lock module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V6	SCLM(Steering column lock module)	Live Data
XJ	2008-2009	Normally Aspirated V6	ARM(Restraints control module)	Read fault codes
XJ	2008-2009	Normally Aspirated V6	ARM(Restraints control module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V6	ARM(Restraints control module)	Live Data
XJ	2008-2009	Normally Aspirated V6	ISM(Intrusion sensor module)	Read fault codes
XJ	2008-2009	Normally Aspirated V6	ISM(Intrusion sensor module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V6	ISM(Intrusion sensor module)	Live Data
XJ	2008-2009	Normally Aspirated V6	PAM(Parking aid control module)	Read fault codes
XJ	2008-2009	Normally Aspirated V6	PAM(Parking aid control module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V6	PAM(Parking aid control module)	Live Data
XJ	2008-2009	Normally Aspirated V6	AMP(Amplifier)	Read fault codes
XJ	2008-2009	Normally Aspirated V6	AMP(Amplifier)	Erase fault codes
XJ	2008-2009	Normally Aspirated V6	AMP(Amplifier)	Live Data
XJ	2008-2009	Normally Aspirated V6	CPM(Cellular telephone control module)	Read fault codes
XJ	2008-2009	Normally Aspirated V6	CPM(Cellular telephone control module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V6	CPM(Cellular telephone control module)	Live Data
XJ	2008-2009	Normally Aspirated V6	GWM(Gateway module)	Read fault codes
XJ	2008-2009	Normally Aspirated V6	GWM(Gateway module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V6	GWM(Gateway module)	Live Data
XJ	2008-2009	Normally Aspirated V6	RETM(Rear entertainment control module)	Read fault codes
XJ	2008-2009	Normally Aspirated V6	RETM(Rear entertainment control module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V6	RETM(Rear entertainment control module)	Live Data
XJ	2008-2009	Normally Aspirated V6	VACM(Voice activation control module)	Read fault codes
XJ	2008-2009	Normally Aspirated V6	VACM(Voice activation control module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V6	VACM(Voice activation control module)	Live Data
XJ	2008-2009	Normally Aspirated V6	Special Function	Parking brake release to service position
XJ	2008-2009	Normally Aspirated V6	Special Function	Lateral accelerometer calibration
XJ	2008-2009	Normally Aspirated V6	Special Function	Powertrain configuration reset
XJ	2008-2009	Normally Aspirated V6	Special Function	Pressure sensor calibration
XJ	2008-2009	Normally Aspirated V6	Special Function	Yaw rate sensor calibration
XJ	2008-2009	V6 Diesel	PCM(Powertrain control module)	ECU information
XJ	2008-2009	V6 Diesel	PCM(Powertrain control module)	Read fault codes
XJ	2008-2009	V6 Diesel	PCM(Powertrain control module)	Erase fault codes
XJ	2008-2009	V6 Diesel	PCM(Powertrain control module)	Live Data
XJ	2008-2009	V6 Diesel	TCM(Transmission control module)	Read fault codes
XJ	2008-2009	V6 Diesel	TCM(Transmission control module)	Erase fault codes
XJ	2008-2009	V6 Diesel	TCM(Transmission control module)	Live Data
XJ	2008-2009	V6 Diesel	ABS(Anti-lock braking system)	ECU information
XJ	2008-2009	V6 Diesel	ABS(Anti-lock braking system)	Read fault codes
XJ	2008-2009	V6 Diesel	ABS(Anti-lock braking system)	Erase fault codes
XJ	2008-2009	V6 Diesel	ABS(Anti-lock braking system)	Live Data
XJ	2008-2009	V6 Diesel	IP(Instrument pack)	Read fault codes
XJ	2008-2009	V6 Diesel	IP(Instrument pack)	Erase fault codes
XJ	2008-2009	V6 Diesel	IP(Instrument pack)	Live Data
XJ	2008-2009	V6 Diesel	AHCM(Auxiliary heater control module)	ECU information
XJ	2008-2009	V6 Diesel	AHCM(Auxiliary heater control module)	Read fault codes
XJ	2008-2009	V6 Diesel	AHCM(Auxiliary heater control module)	Erase fault codes
XJ	2008-2009	V6 Diesel	AHCM(Auxiliary heater control module)	Live Data
XJ	2008-2009	V6 Diesel	DCSM(Driver's climate seat module)	ECU information
XJ	2008-2009	V6 Diesel	DCSM(Driver's climate seat module)	Read fault codes
XJ	2008-2009	V6 Diesel	DCSM(Driver's climate seat module)	Erase fault codes
XJ	2008-2009	V6 Diesel	DCSM(Driver's climate seat module)	Live Data
XJ	2008-2009	V6 Diesel	PBM(Parking brake control module)	ECU information
XJ	2008-2009	V6 Diesel	PBM(Parking brake control module)	Read fault codes
XJ	2008-2009	V6 Diesel	PBM(Parking brake control module)	Erase fault codes
XJ	2008-2009	V6 Diesel	PBM(Parking brake control module)	Live Data
XJ	2008-2009	V6 Diesel	TPM(Tire pressure monitor module)	ECU information
XJ	2008-2009	V6 Diesel	TPM(Tire pressure monitor module)	Read fault codes
XJ	2008-2009	V6 Diesel	TPM(Tire pressure monitor module)	Erase fault codes
XJ	2008-2009	V6 Diesel	TPM(Tire pressure monitor module)	Live Data
XJ	2008-2009	V6 Diesel	ACC(Adaptive speed control control module)	Read fault codes
XJ	2008-2009	V6 Diesel	ACC(Adaptive speed control control module)	Erase fault codes
XJ	2008-2009	V6 Diesel	ACC(Adaptive speed control control module)	Live Data
XJ	2008-2009	V6 Diesel	ASU(Air suspension module)	Read fault codes
XJ	2008-2009	V6 Diesel	ASU(Air suspension module)	Erase fault codes
XJ	2008-2009	V6 Diesel	ASU(Air suspension module)	Live Data
XJ	2008-2009	V6 Diesel	ATC(Climate control module)	Read fault codes
XJ	2008-2009	V6 Diesel	ATC(Climate control module)	Erase fault codes
XJ	2008-2009	V6 Diesel	ATC(Climate control module)	Live Data
XJ	2008-2009	V6 Diesel	RATC(Rear climate control module)	Read fault codes
XJ	2008-2009	V6 Diesel	RATC(Rear climate control module)	Erase fault codes
XJ	2008-2009	V6 Diesel	RATC(Rear climate control module)	Live Data
XJ	2008-2009	V6 Diesel	DDM(Driver's door module)	Read fault codes
XJ	2008-2009	V6 Diesel	DDM(Driver's door module)	Erase fault codes
XJ	2008-2009	V6 Diesel	DDM(Driver's door module)	Live Data
XJ	2008-2009	V6 Diesel	DSM(Driver's seat module)	Read fault codes
XJ	2008-2009	V6 Diesel	DSM(Driver's seat module)	Erase fault codes
XJ	2008-2009	V6 Diesel	DSM(Driver's seat module)	Live Data
XJ	2008-2009	V6 Diesel	FETM(Audio unit)	Read fault codes
XJ	2008-2009	V6 Diesel	FETM(Audio unit)	Erase fault codes
XJ	2008-2009	V6 Diesel	FETM(Audio unit)	Live Data
XJ	2008-2009	V6 Diesel	GEM(General electronics control module)	Read fault codes
XJ	2008-2009	V6 Diesel	GEM(General electronics control module)	Erase fault codes
XJ	2008-2009	V6 Diesel	GEM(General electronics control module)	Live Data
XJ	2008-2009	V6 Diesel	NAV(Navigation control module)	Read fault codes
XJ	2008-2009	V6 Diesel	NAV(Navigation control module)	Erase fault codes
XJ	2008-2009	V6 Diesel	NAV(Navigation control module)	Live Data
XJ	2008-2009	V6 Diesel	REM(Rear electronic control module)	Read fault codes
XJ	2008-2009	V6 Diesel	REM(Rear electronic control module)	Erase fault codes
XJ	2008-2009	V6 Diesel	REM(Rear electronic control module)	Live Data

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XJ	2008-2009	V6 Diesel	RSM(Rear seat control module)	Read fault codes
XJ	2008-2009	V6 Diesel	RSM(Rear seat control module)	Erase fault codes
XJ	2008-2009	V6 Diesel	RSM(Rear seat control module)	Live Data
XJ	2008-2009	V6 Diesel	SCLM(Steering column lock module)	Read fault codes
XJ	2008-2009	V6 Diesel	SCLM(Steering column lock module)	Erase fault codes
XJ	2008-2009	V6 Diesel	SCLM(Steering column lock module)	Live Data
XJ	2008-2009	V6 Diesel	ARM(Restraints control module)	Read fault codes
XJ	2008-2009	V6 Diesel	ARM(Restraints control module)	Erase fault codes
XJ	2008-2009	V6 Diesel	ARM(Restraints control module)	Live Data
XJ	2008-2009	V6 Diesel	ISM(Intrusion sensor module)	Read fault codes
XJ	2008-2009	V6 Diesel	ISM(Intrusion sensor module)	Erase fault codes
XJ	2008-2009	V6 Diesel	ISM(Intrusion sensor module)	Live Data
XJ	2008-2009	V6 Diesel	PAM(Parking aid control module)	Read fault codes
XJ	2008-2009	V6 Diesel	PAM(Parking aid control module)	Erase fault codes
XJ	2008-2009	V6 Diesel	PAM(Parking aid control module)	Live Data
XJ	2008-2009	V6 Diesel	AMP(Amplifier)	Read fault codes
XJ	2008-2009	V6 Diesel	AMP(Amplifier)	Erase fault codes
XJ	2008-2009	V6 Diesel	AMP(Amplifier)	Live Data
XJ	2008-2009	V6 Diesel	CPM(Cellular telephone control module)	Read fault codes
XJ	2008-2009	V6 Diesel	CPM(Cellular telephone control module)	Erase fault codes
XJ	2008-2009	V6 Diesel	CPM(Cellular telephone control module)	Live Data
XJ	2008-2009	V6 Diesel	GWM(Gateway module)	Read fault codes
XJ	2008-2009	V6 Diesel	GWM(Gateway module)	Erase fault codes
XJ	2008-2009	V6 Diesel	GWM(Gateway module)	Live Data
XJ	2008-2009	V6 Diesel	RETM(Rear entertainment control module)	Read fault codes
XJ	2008-2009	V6 Diesel	RETM(Rear entertainment control module)	Erase fault codes
XJ	2008-2009	V6 Diesel	RETM(Rear entertainment control module)	Live Data
XJ	2008-2009	V6 Diesel	VACM(Voice activation control module)	Read fault codes
XJ	2008-2009	V6 Diesel	VACM(Voice activation control module)	Erase fault codes
XJ	2008-2009	V6 Diesel	VACM(Voice activation control module)	Live Data
XJ	2008-2009	V6 Diesel	Special Function	Oil service counter reset
XJ	2008-2009	V6 Diesel	Special Function	Parking brake release to service position
XJ	2008-2009	V6 Diesel	Special Function	Lateral accelerometer calibration
XJ	2008-2009	V6 Diesel	Special Function	Powertrain configuration reset
XJ	2008-2009	V6 Diesel	Special Function	Pressure sensor calibration
XJ	2008-2009	V6 Diesel	Special Function	Yaw rate sensor calibration
XJ	2008-2009	V6 Diesel	Special Function	Reset the diesel particulate filter stored values
XJ	2008-2009	Supercharged V8	PCM(Powertrain control module)	ECU information
XJ	2008-2009	Supercharged V8	PCM(Powertrain control module)	Read fault codes
XJ	2008-2009	Supercharged V8	PCM(Powertrain control module)	Erase fault codes
XJ	2008-2009	Supercharged V8	PCM(Powertrain control module)	Live Data
XJ	2008-2009	Supercharged V8	TCM(Transmission control module)	Read fault codes
XJ	2008-2009	Supercharged V8	TCM(Transmission control module)	Erase fault codes
XJ	2008-2009	Supercharged V8	TCM(Transmission control module)	Live Data
XJ	2008-2009	Supercharged V8	ABS(Anti-lock braking system)	ECU information
XJ	2008-2009	Supercharged V8	ABS(Anti-lock braking system)	Read fault codes
XJ	2008-2009	Supercharged V8	ABS(Anti-lock braking system)	Erase fault codes
XJ	2008-2009	Supercharged V8	ABS(Anti-lock braking system)	Live Data
XJ	2008-2009	Supercharged V8	IP(Instrument pack)	Read fault codes
XJ	2008-2009	Supercharged V8	IP(Instrument pack)	Erase fault codes
XJ	2008-2009	Supercharged V8	IP(Instrument pack)	Live Data
XJ	2008-2009	Supercharged V8	DCSM(Driver's climate seat module)	ECU information
XJ	2008-2009	Supercharged V8	DCSM(Driver's climate seat module)	Read fault codes
XJ	2008-2009	Supercharged V8	DCSM(Driver's climate seat module)	Erase fault codes
XJ	2008-2009	Supercharged V8	DCSM(Driver's climate seat module)	Live Data
XJ	2008-2009	Supercharged V8	PBM(Parking brake control module)	ECU information
XJ	2008-2009	Supercharged V8	PBM(Parking brake control module)	Read fault codes
XJ	2008-2009	Supercharged V8	PBM(Parking brake control module)	Erase fault codes
XJ	2008-2009	Supercharged V8	PBM(Parking brake control module)	Live Data
XJ	2008-2009	Supercharged V8	TPM(Tire pressure monitor module)	ECU information
XJ	2008-2009	Supercharged V8	TPM(Tire pressure monitor module)	Read fault codes
XJ	2008-2009	Supercharged V8	TPM(Tire pressure monitor module)	Erase fault codes
XJ	2008-2009	Supercharged V8	TPM(Tire pressure monitor module)	Live Data
XJ	2008-2009	Supercharged V8	ACC(Adaptive speed control control module)	Read fault codes
XJ	2008-2009	Supercharged V8	ACC(Adaptive speed control control module)	Erase fault codes
XJ	2008-2009	Supercharged V8	ACC(Adaptive speed control control module)	Live Data
XJ	2008-2009	Supercharged V8	ASU(Air suspension module)	Read fault codes
XJ	2008-2009	Supercharged V8	ASU(Air suspension module)	Erase fault codes
XJ	2008-2009	Supercharged V8	ASU(Air suspension module)	Live Data
XJ	2008-2009	Supercharged V8	ATC(Climate control module)	Read fault codes
XJ	2008-2009	Supercharged V8	ATC(Climate control module)	Erase fault codes
XJ	2008-2009	Supercharged V8	ATC(Climate control module)	Live Data
XJ	2008-2009	Supercharged V8	RATC(Rear climate control module)	Read fault codes
XJ	2008-2009	Supercharged V8	RATC(Rear climate control module)	Erase fault codes
XJ	2008-2009	Supercharged V8	RATC(Rear climate control module)	Live Data
XJ	2008-2009	Supercharged V8	DDM(Driver's door module)	Read fault codes
XJ	2008-2009	Supercharged V8	DDM(Driver's door module)	Erase fault codes
XJ	2008-2009	Supercharged V8	DDM(Driver's door module)	Live Data
XJ	2008-2009	Supercharged V8	DSM(Driver's seat module)	Read fault codes
XJ	2008-2009	Supercharged V8	DSM(Driver's seat module)	Erase fault codes
XJ	2008-2009	Supercharged V8	DSM(Driver's seat module)	Live Data
XJ	2008-2009	Supercharged V8	FETM(Audio unit)	Read fault codes
XJ	2008-2009	Supercharged V8	FETM(Audio unit)	Erase fault codes
XJ	2008-2009	Supercharged V8	FETM(Audio unit)	Live Data
XJ	2008-2009	Supercharged V8	GEM(General electronics control module)	Read fault codes
XJ	2008-2009	Supercharged V8	GEM(General electronics control module)	Erase fault codes
XJ	2008-2009	Supercharged V8	GEM(General electronics control module)	Live Data
XJ	2008-2009	Supercharged V8	NAV(Navigation control module)	Read fault codes
XJ	2008-2009	Supercharged V8	NAV(Navigation control module)	Erase fault codes
XJ	2008-2009	Supercharged V8	NAV(Navigation control module)	Live Data
XJ	2008-2009	Supercharged V8	REM(Rear electronic control module)	Read fault codes

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XJ	2008-2009	Supercharged V8	REM(Rear electronic control module)	Erase fault codes
XJ	2008-2009	Supercharged V8	REM(Rear electronic control module)	Live Data
XJ	2008-2009	Supercharged V8	RSM(Rear seat control module)	Read fault codes
XJ	2008-2009	Supercharged V8	RSM(Rear seat control module)	Erase fault codes
XJ	2008-2009	Supercharged V8	RSM(Rear seat control module)	Live Data
XJ	2008-2009	Supercharged V8	SCLM(Steering column lock module)	Read fault codes
XJ	2008-2009	Supercharged V8	SCLM(Steering column lock module)	Erase fault codes
XJ	2008-2009	Supercharged V8	SCLM(Steering column lock module)	Live Data
XJ	2008-2009	Supercharged V8	ARM(Restraints control module)	Read fault codes
XJ	2008-2009	Supercharged V8	ARM(Restraints control module)	Erase fault codes
XJ	2008-2009	Supercharged V8	ARM(Restraints control module)	Live Data
XJ	2008-2009	Supercharged V8	ISM(Intrusion sensor module)	Read fault codes
XJ	2008-2009	Supercharged V8	ISM(Intrusion sensor module)	Erase fault codes
XJ	2008-2009	Supercharged V8	ISM(Intrusion sensor module)	Live Data
XJ	2008-2009	Supercharged V8	PAM(Parking aid control module)	Read fault codes
XJ	2008-2009	Supercharged V8	PAM(Parking aid control module)	Erase fault codes
XJ	2008-2009	Supercharged V8	PAM(Parking aid control module)	Live Data
XJ	2008-2009	Supercharged V8	AMP(Amplifier)	Read fault codes
XJ	2008-2009	Supercharged V8	AMP(Amplifier)	Erase fault codes
XJ	2008-2009	Supercharged V8	AMP(Amplifier)	Live Data
XJ	2008-2009	Supercharged V8	CPM(Cellular telephone control module)	Read fault codes
XJ	2008-2009	Supercharged V8	CPM(Cellular telephone control module)	Erase fault codes
XJ	2008-2009	Supercharged V8	CPM(Cellular telephone control module)	Live Data
XJ	2008-2009	Supercharged V8	GWM(Gateway module)	Read fault codes
XJ	2008-2009	Supercharged V8	GWM(Gateway module)	Erase fault codes
XJ	2008-2009	Supercharged V8	GWM(Gateway module)	Live Data
XJ	2008-2009	Supercharged V8	RETM(Rear entertainment control module)	Read fault codes
XJ	2008-2009	Supercharged V8	RETM(Rear entertainment control module)	Erase fault codes
XJ	2008-2009	Supercharged V8	RETM(Rear entertainment control module)	Live Data
XJ	2008-2009	Supercharged V8	VACM(Voice activation control module)	Read fault codes
XJ	2008-2009	Supercharged V8	VACM(Voice activation control module)	Erase fault codes
XJ	2008-2009	Supercharged V8	VACM(Voice activation control module)	Live Data
XJ	2008-2009	Supercharged V8	Special Function	Parking brake release to service position
XJ	2008-2009	Supercharged V8	Special Function	Lateral accelerometer calibration
XJ	2008-2009	Supercharged V8	Special Function	Powertrain configuration reset
XJ	2008-2009	Supercharged V8	Special Function	Pressure sensor calibration
XJ	2008-2009	Supercharged V8	Special Function	Yaw rate sensor calibration
XJ	2008-2009	Normally Aspirated V8 3.5L	PCM(Powertrain control module)	ECU information
XJ	2008-2009	Normally Aspirated V8 3.5L	PCM(Powertrain control module)	Read fault codes
XJ	2008-2009	Normally Aspirated V8 3.5L	PCM(Powertrain control module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V8 3.5L	PCM(Powertrain control module)	Live Data
XJ	2008-2009	Normally Aspirated V8 3.5L	TCM(Transmission control module)	Read fault codes
XJ	2008-2009	Normally Aspirated V8 3.5L	TCM(Transmission control module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V8 3.5L	TCM(Transmission control module)	Live Data
XJ	2008-2009	Normally Aspirated V8 3.5L	ABS(Anti-lock braking system)	ECU information
XJ	2008-2009	Normally Aspirated V8 3.5L	ABS(Anti-lock braking system)	Read fault codes
XJ	2008-2009	Normally Aspirated V8 3.5L	ABS(Anti-lock braking system)	Erase fault codes
XJ	2008-2009	Normally Aspirated V8 3.5L	ABS(Anti-lock braking system)	Live Data
XJ	2008-2009	Normally Aspirated V8 3.5L	IP(Instrument pack)	Read fault codes
XJ	2008-2009	Normally Aspirated V8 3.5L	IP(Instrument pack)	Erase fault codes
XJ	2008-2009	Normally Aspirated V8 3.5L	IP(Instrument pack)	Live Data
XJ	2008-2009	Normally Aspirated V8 3.5L	DCSM(Driver's climate seat module)	ECU information
XJ	2008-2009	Normally Aspirated V8 3.5L	DCSM(Driver's climate seat module)	Read fault codes
XJ	2008-2009	Normally Aspirated V8 3.5L	DCSM(Driver's climate seat module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V8 3.5L	DCSM(Driver's climate seat module)	Live Data
XJ	2008-2009	Normally Aspirated V8 3.5L	PBM(Parking brake control module)	ECU information
XJ	2008-2009	Normally Aspirated V8 3.5L	PBM(Parking brake control module)	Read fault codes
XJ	2008-2009	Normally Aspirated V8 3.5L	PBM(Parking brake control module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V8 3.5L	PBM(Parking brake control module)	Live Data
XJ	2008-2009	Normally Aspirated V8 3.5L	TPM(Tire pressure monitor module)	ECU information
XJ	2008-2009	Normally Aspirated V8 3.5L	TPM(Tire pressure monitor module)	Read fault codes
XJ	2008-2009	Normally Aspirated V8 3.5L	TPM(Tire pressure monitor module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V8 3.5L	TPM(Tire pressure monitor module)	Live Data
XJ	2008-2009	Normally Aspirated V8 3.5L	ACC(Adaptive speed control control module)	Read fault codes
XJ	2008-2009	Normally Aspirated V8 3.5L	ACC(Adaptive speed control control module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V8 3.5L	ACC(Adaptive speed control control module)	Live Data
XJ	2008-2009	Normally Aspirated V8 3.5L	ASU(Air suspension module)	Read fault codes
XJ	2008-2009	Normally Aspirated V8 3.5L	ASU(Air suspension module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V8 3.5L	ASU(Air suspension module)	Live Data
XJ	2008-2009	Normally Aspirated V8 3.5L	ATC(Climate control module)	Read fault codes
XJ	2008-2009	Normally Aspirated V8 3.5L	ATC(Climate control module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V8 3.5L	ATC(Climate control module)	Live Data
XJ	2008-2009	Normally Aspirated V8 3.5L	RATC(Rear climate control module)	Read fault codes
XJ	2008-2009	Normally Aspirated V8 3.5L	RATC(Rear climate control module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V8 3.5L	RATC(Rear climate control module)	Live Data
XJ	2008-2009	Normally Aspirated V8 3.5L	DDM(Driver's door module)	Read fault codes
XJ	2008-2009	Normally Aspirated V8 3.5L	DDM(Driver's door module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V8 3.5L	DDM(Driver's door module)	Live Data
XJ	2008-2009	Normally Aspirated V8 3.5L	DSM(Driver's seat module)	Read fault codes
XJ	2008-2009	Normally Aspirated V8 3.5L	DSM(Driver's seat module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V8 3.5L	DSM(Driver's seat module)	Live Data
XJ	2008-2009	Normally Aspirated V8 3.5L	FETM(Audio unit)	Read fault codes
XJ	2008-2009	Normally Aspirated V8 3.5L	FETM(Audio unit)	Erase fault codes
XJ	2008-2009	Normally Aspirated V8 3.5L	FETM(Audio unit)	Live Data
XJ	2008-2009	Normally Aspirated V8 3.5L	GEM(General electronics control module)	Read fault codes
XJ	2008-2009	Normally Aspirated V8 3.5L	GEM(General electronics control module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V8 3.5L	GEM(General electronics control module)	Live Data
XJ	2008-2009	Normally Aspirated V8 3.5L	NAV(Navigation control module)	Read fault codes
XJ	2008-2009	Normally Aspirated V8 3.5L	NAV(Navigation control module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V8 3.5L	NAV(Navigation control module)	Live Data
XJ	2008-2009	Normally Aspirated V8 3.5L	REM(Rear electronic control module)	Read fault codes
XJ	2008-2009	Normally Aspirated V8 3.5L	REM(Rear electronic control module)	Erase fault codes

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XJ	2008-2009	Normally Aspirated V8 3.5L	REM(Rear electronic control module)	Live Data
XJ	2008-2009	Normally Aspirated V8 3.5L	RSM(Rear seat control module)	Read fault codes
XJ	2008-2009	Normally Aspirated V8 3.5L	RSM(Rear seat control module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V8 3.5L	RSM(Rear seat control module)	Live Data
XJ	2008-2009	Normally Aspirated V8 3.5L	SCLM(Steering column lock module)	Read fault codes
XJ	2008-2009	Normally Aspirated V8 3.5L	SCLM(Steering column lock module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V8 3.5L	SCLM(Steering column lock module)	Live Data
XJ	2008-2009	Normally Aspirated V8 3.5L	ARM(Restraints control module)	Read fault codes
XJ	2008-2009	Normally Aspirated V8 3.5L	ARM(Restraints control module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V8 3.5L	ARM(Restraints control module)	Live Data
XJ	2008-2009	Normally Aspirated V8 3.5L	ISM(Intrusion sensor module)	Read fault codes
XJ	2008-2009	Normally Aspirated V8 3.5L	ISM(Intrusion sensor module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V8 3.5L	ISM(Intrusion sensor module)	Live Data
XJ	2008-2009	Normally Aspirated V8 3.5L	PAM(Parking aid control module)	Read fault codes
XJ	2008-2009	Normally Aspirated V8 3.5L	PAM(Parking aid control module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V8 3.5L	PAM(Parking aid control module)	Live Data
XJ	2008-2009	Normally Aspirated V8 3.5L	AMP(Amplifier)	Read fault codes
XJ	2008-2009	Normally Aspirated V8 3.5L	AMP(Amplifier)	Erase fault codes
XJ	2008-2009	Normally Aspirated V8 3.5L	AMP(Amplifier)	Live Data
XJ	2008-2009	Normally Aspirated V8 3.5L	CPM(Cellular telephone control module)	Read fault codes
XJ	2008-2009	Normally Aspirated V8 3.5L	CPM(Cellular telephone control module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V8 3.5L	CPM(Cellular telephone control module)	Live Data
XJ	2008-2009	Normally Aspirated V8 3.5L	GWM(Gateway module)	Read fault codes
XJ	2008-2009	Normally Aspirated V8 3.5L	GWM(Gateway module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V8 3.5L	GWM(Gateway module)	Live Data
XJ	2008-2009	Normally Aspirated V8 3.5L	RETM(Rear entertainment control module)	Read fault codes
XJ	2008-2009	Normally Aspirated V8 3.5L	RETM(Rear entertainment control module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V8 3.5L	RETM(Rear entertainment control module)	Live Data
XJ	2008-2009	Normally Aspirated V8 3.5L	VACM(Voice activation control module)	Read fault codes
XJ	2008-2009	Normally Aspirated V8 3.5L	VACM(Voice activation control module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V8 3.5L	VACM(Voice activation control module)	Live Data
XJ	2008-2009	Normally Aspirated V8 3.5L	Special Function	Parking brake release to service position
XJ	2008-2009	Normally Aspirated V8 3.5L	Special Function	Lateral accelerometer calibration
XJ	2008-2009	Normally Aspirated V8 3.5L	Special Function	Powertrain configuration reset
XJ	2008-2009	Normally Aspirated V8 3.5L	Special Function	Pressure sensor calibration
XJ	2008-2009	Normally Aspirated V8 3.5L	Special Function	Yaw rate sensor calibration
XJ	2008-2009	Normally Aspirated V8 4.2L	PCM(Powertrain control module)	ECU information
XJ	2008-2009	Normally Aspirated V8 4.2L	PCM(Powertrain control module)	Read fault codes
XJ	2008-2009	Normally Aspirated V8 4.2L	PCM(Powertrain control module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V8 4.2L	PCM(Powertrain control module)	Live Data
XJ	2008-2009	Normally Aspirated V8 4.2L	TCM(Transmission control module)	Read fault codes
XJ	2008-2009	Normally Aspirated V8 4.2L	TCM(Transmission control module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V8 4.2L	TCM(Transmission control module)	Live Data
XJ	2008-2009	Normally Aspirated V8 4.2L	ABS(Anti-lock braking system)	ECU information
XJ	2008-2009	Normally Aspirated V8 4.2L	ABS(Anti-lock braking system)	Read fault codes
XJ	2008-2009	Normally Aspirated V8 4.2L	ABS(Anti-lock braking system)	Erase fault codes
XJ	2008-2009	Normally Aspirated V8 4.2L	ABS(Anti-lock braking system)	Live Data
XJ	2008-2009	Normally Aspirated V8 4.2L	IP(Instrument pack)	Read fault codes
XJ	2008-2009	Normally Aspirated V8 4.2L	IP(Instrument pack)	Erase fault codes
XJ	2008-2009	Normally Aspirated V8 4.2L	IP(Instrument pack)	Live Data
XJ	2008-2009	Normally Aspirated V8 4.2L	DCSM(Driver's climate seat module)	ECU information
XJ	2008-2009	Normally Aspirated V8 4.2L	DCSM(Driver's climate seat module)	Read fault codes
XJ	2008-2009	Normally Aspirated V8 4.2L	DCSM(Driver's climate seat module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V8 4.2L	DCSM(Driver's climate seat module)	Live Data
XJ	2008-2009	Normally Aspirated V8 4.2L	PBM(Parking brake control module)	ECU information
XJ	2008-2009	Normally Aspirated V8 4.2L	PBM(Parking brake control module)	Read fault codes
XJ	2008-2009	Normally Aspirated V8 4.2L	PBM(Parking brake control module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V8 4.2L	PBM(Parking brake control module)	Live Data
XJ	2008-2009	Normally Aspirated V8 4.2L	TPM(Tire pressure monitor module)	ECU information
XJ	2008-2009	Normally Aspirated V8 4.2L	TPM(Tire pressure monitor module)	Read fault codes
XJ	2008-2009	Normally Aspirated V8 4.2L	TPM(Tire pressure monitor module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V8 4.2L	TPM(Tire pressure monitor module)	Live Data
XJ	2008-2009	Normally Aspirated V8 4.2L	ACC(Adaptive speed control control module)	Read fault codes
XJ	2008-2009	Normally Aspirated V8 4.2L	ACC(Adaptive speed control control module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V8 4.2L	ACC(Adaptive speed control control module)	Live Data
XJ	2008-2009	Normally Aspirated V8 4.2L	ASU(Air suspension module)	Read fault codes
XJ	2008-2009	Normally Aspirated V8 4.2L	ASU(Air suspension module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V8 4.2L	ASU(Air suspension module)	Live Data
XJ	2008-2009	Normally Aspirated V8 4.2L	ATC(Climate control module)	Read fault codes
XJ	2008-2009	Normally Aspirated V8 4.2L	ATC(Climate control module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V8 4.2L	ATC(Climate control module)	Live Data
XJ	2008-2009	Normally Aspirated V8 4.2L	RATC(Rear climate control module)	Read fault codes
XJ	2008-2009	Normally Aspirated V8 4.2L	RATC(Rear climate control module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V8 4.2L	RATC(Rear climate control module)	Live Data
XJ	2008-2009	Normally Aspirated V8 4.2L	DDM(Driver's door module)	Read fault codes
XJ	2008-2009	Normally Aspirated V8 4.2L	DDM(Driver's door module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V8 4.2L	DDM(Driver's door module)	Live Data
XJ	2008-2009	Normally Aspirated V8 4.2L	DSM(Driver's seat module)	Read fault codes
XJ	2008-2009	Normally Aspirated V8 4.2L	DSM(Driver's seat module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V8 4.2L	DSM(Driver's seat module)	Live Data
XJ	2008-2009	Normally Aspirated V8 4.2L	FETM(Audio unit)	Read fault codes
XJ	2008-2009	Normally Aspirated V8 4.2L	FETM(Audio unit)	Erase fault codes
XJ	2008-2009	Normally Aspirated V8 4.2L	FETM(Audio unit)	Live Data
XJ	2008-2009	Normally Aspirated V8 4.2L	GEM(General electronics control module)	Read fault codes
XJ	2008-2009	Normally Aspirated V8 4.2L	GEM(General electronics control module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V8 4.2L	GEM(General electronics control module)	Live Data
XJ	2008-2009	Normally Aspirated V8 4.2L	NAV(Navigation control module)	Read fault codes
XJ	2008-2009	Normally Aspirated V8 4.2L	NAV(Navigation control module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V8 4.2L	NAV(Navigation control module)	Live Data
XJ	2008-2009	Normally Aspirated V8 4.2L	REM(Rear electronic control module)	Read fault codes
XJ	2008-2009	Normally Aspirated V8 4.2L	REM(Rear electronic control module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V8 4.2L	REM(Rear electronic control module)	Live Data

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XJ	2008-2009	Normally Aspirated V8 4.2L	RSM(Rear seat control module)	Read fault codes
XJ	2008-2009	Normally Aspirated V8 4.2L	RSM(Rear seat control module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V8 4.2L	RSM(Rear seat control module)	Live Data
XJ	2008-2009	Normally Aspirated V8 4.2L	SCLM(Steering column lock module)	Read fault codes
XJ	2008-2009	Normally Aspirated V8 4.2L	SCLM(Steering column lock module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V8 4.2L	SCLM(Steering column lock module)	Live Data
XJ	2008-2009	Normally Aspirated V8 4.2L	ARM(Restraints control module)	Read fault codes
XJ	2008-2009	Normally Aspirated V8 4.2L	ARM(Restraints control module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V8 4.2L	ARM(Restraints control module)	Live Data
XJ	2008-2009	Normally Aspirated V8 4.2L	ISM(Intrusion sensor module)	Read fault codes
XJ	2008-2009	Normally Aspirated V8 4.2L	ISM(Intrusion sensor module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V8 4.2L	ISM(Intrusion sensor module)	Live Data
XJ	2008-2009	Normally Aspirated V8 4.2L	PAM(Parking aid control module)	Read fault codes
XJ	2008-2009	Normally Aspirated V8 4.2L	PAM(Parking aid control module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V8 4.2L	PAM(Parking aid control module)	Live Data
XJ	2008-2009	Normally Aspirated V8 4.2L	AMP(Amplifier)	Read fault codes
XJ	2008-2009	Normally Aspirated V8 4.2L	AMP(Amplifier)	Erase fault codes
XJ	2008-2009	Normally Aspirated V8 4.2L	AMP(Amplifier)	Live Data
XJ	2008-2009	Normally Aspirated V8 4.2L	CPM(Cellular telephone control module)	Read fault codes
XJ	2008-2009	Normally Aspirated V8 4.2L	CPM(Cellular telephone control module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V8 4.2L	CPM(Cellular telephone control module)	Live Data
XJ	2008-2009	Normally Aspirated V8 4.2L	GWM(Gateway module)	Read fault codes
XJ	2008-2009	Normally Aspirated V8 4.2L	GWM(Gateway module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V8 4.2L	GWM(Gateway module)	Live Data
XJ	2008-2009	Normally Aspirated V8 4.2L	RETM(Rear entertainment control module)	Read fault codes
XJ	2008-2009	Normally Aspirated V8 4.2L	RETM(Rear entertainment control module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V8 4.2L	RETM(Rear entertainment control module)	Live Data
XJ	2008-2009	Normally Aspirated V8 4.2L	VACM(Voice activation control module)	Read fault codes
XJ	2008-2009	Normally Aspirated V8 4.2L	VACM(Voice activation control module)	Erase fault codes
XJ	2008-2009	Normally Aspirated V8 4.2L	VACM(Voice activation control module)	Live Data
XJ	2008-2009	Normally Aspirated V8 4.2L	Special Function	Parking brake release to service position
XJ	2008-2009	Normally Aspirated V8 4.2L	Special Function	Lateral accelerometer calibration
XJ	2008-2009	Normally Aspirated V8 4.2L	Special Function	Powertrain configuration reset
XJ	2008-2009	Normally Aspirated V8 4.2L	Special Function	Pressure sensor calibration
XJ	2008-2009	Normally Aspirated V8 4.2L	Special Function	Yaw rate sensor calibration
XJ	2006-2007	Normally Aspirated V6	PCM(Powertrain control module)	ECU information
XJ	2006-2007	Normally Aspirated V6	PCM(Powertrain control module)	Read fault codes
XJ	2006-2007	Normally Aspirated V6	PCM(Powertrain control module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V6	PCM(Powertrain control module)	Live Data
XJ	2006-2007	Normally Aspirated V6	TCM(Transmission control module)	Read fault codes
XJ	2006-2007	Normally Aspirated V6	TCM(Transmission control module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V6	TCM(Transmission control module)	Live Data
XJ	2006-2007	Normally Aspirated V6	ABS(Anti-lock braking system)	ECU information
XJ	2006-2007	Normally Aspirated V6	ABS(Anti-lock braking system)	Read fault codes
XJ	2006-2007	Normally Aspirated V6	ABS(Anti-lock braking system)	Erase fault codes
XJ	2006-2007	Normally Aspirated V6	ABS(Anti-lock braking system)	Live Data
XJ	2006-2007	Normally Aspirated V6	IP(Instrument pack)	Read fault codes
XJ	2006-2007	Normally Aspirated V6	IP(Instrument pack)	Erase fault codes
XJ	2006-2007	Normally Aspirated V6	IP(Instrument pack)	Live Data
XJ	2006-2007	Normally Aspirated V6	AHCM(Auxiliary heater control module)	ECU information
XJ	2006-2007	Normally Aspirated V6	AHCM(Auxiliary heater control module)	Read fault codes
XJ	2006-2007	Normally Aspirated V6	AHCM(Auxiliary heater control module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V6	AHCM(Auxiliary heater control module)	Live Data
XJ	2006-2007	Normally Aspirated V6	PBM(Parking brake control module)	ECU information
XJ	2006-2007	Normally Aspirated V6	PBM(Parking brake control module)	Read fault codes
XJ	2006-2007	Normally Aspirated V6	PBM(Parking brake control module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V6	PBM(Parking brake control module)	Live Data
XJ	2006-2007	Normally Aspirated V6	TPM(Tire pressure monitor module)	ECU information
XJ	2006-2007	Normally Aspirated V6	TPM(Tire pressure monitor module)	Read fault codes
XJ	2006-2007	Normally Aspirated V6	TPM(Tire pressure monitor module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V6	TPM(Tire pressure monitor module)	Live Data
XJ	2006-2007	Normally Aspirated V6	ACC(Adaptive speed control control module)	Read fault codes
XJ	2006-2007	Normally Aspirated V6	ACC(Adaptive speed control control module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V6	ACC(Adaptive speed control control module)	Live Data
XJ	2006-2007	Normally Aspirated V6	ASU(Air suspension module)	Read fault codes
XJ	2006-2007	Normally Aspirated V6	ASU(Air suspension module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V6	ASU(Air suspension module)	Live Data
XJ	2006-2007	Normally Aspirated V6	ATC(Climate control module)	Read fault codes
XJ	2006-2007	Normally Aspirated V6	ATC(Climate control module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V6	ATC(Climate control module)	Live Data
XJ	2006-2007	Normally Aspirated V6	RATC(Rear climate control module)	Read fault codes
XJ	2006-2007	Normally Aspirated V6	RATC(Rear climate control module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V6	RATC(Rear climate control module)	Live Data
XJ	2006-2007	Normally Aspirated V6	DDM(Driver's door module)	Read fault codes
XJ	2006-2007	Normally Aspirated V6	DDM(Driver's door module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V6	DDM(Driver's door module)	Live Data
XJ	2006-2007	Normally Aspirated V6	DSM(Driver's seat module)	Read fault codes
XJ	2006-2007	Normally Aspirated V6	DSM(Driver's seat module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V6	DSM(Driver's seat module)	Live Data
XJ	2006-2007	Normally Aspirated V6	FETM(Audio unit)	Read fault codes
XJ	2006-2007	Normally Aspirated V6	FETM(Audio unit)	Erase fault codes
XJ	2006-2007	Normally Aspirated V6	FETM(Audio unit)	Live Data
XJ	2006-2007	Normally Aspirated V6	GEM(General electronics control module)	Read fault codes
XJ	2006-2007	Normally Aspirated V6	GEM(General electronics control module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V6	GEM(General electronics control module)	Live Data
XJ	2006-2007	Normally Aspirated V6	NAV(Navigation control module)	Read fault codes
XJ	2006-2007	Normally Aspirated V6	NAV(Navigation control module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V6	NAV(Navigation control module)	Live Data
XJ	2006-2007	Normally Aspirated V6	REM(Rear electronic control module)	Read fault codes
XJ	2006-2007	Normally Aspirated V6	REM(Rear electronic control module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V6	REM(Rear electronic control module)	Live Data
XJ	2006-2007	Normally Aspirated V6	RSM(Rear seat control module)	Read fault codes

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XJ	2006-2007	Normally Aspirated V6	RSM(Rear seat control module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V6	RSM(Rear seat control module)	Live Data
XJ	2006-2007	Normally Aspirated V6	SCLM(Steering column lock module)	Read fault codes
XJ	2006-2007	Normally Aspirated V6	SCLM(Steering column lock module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V6	SCLM(Steering column lock module)	Live Data
XJ	2006-2007	Normally Aspirated V6	ARM(Restraints control module)	Read fault codes
XJ	2006-2007	Normally Aspirated V6	ARM(Restraints control module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V6	ARM(Restraints control module)	Live Data
XJ	2006-2007	Normally Aspirated V6	ISM(Intrusion sensor module)	Read fault codes
XJ	2006-2007	Normally Aspirated V6	ISM(Intrusion sensor module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V6	ISM(Intrusion sensor module)	Live Data
XJ	2006-2007	Normally Aspirated V6	PAM(Parking aid control module)	Read fault codes
XJ	2006-2007	Normally Aspirated V6	PAM(Parking aid control module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V6	PAM(Parking aid control module)	Live Data
XJ	2006-2007	Normally Aspirated V6	AMP(Amplifier)	Read fault codes
XJ	2006-2007	Normally Aspirated V6	AMP(Amplifier)	Erase fault codes
XJ	2006-2007	Normally Aspirated V6	AMP(Amplifier)	Live Data
XJ	2006-2007	Normally Aspirated V6	CPM(Cellular telephone control module)	Read fault codes
XJ	2006-2007	Normally Aspirated V6	CPM(Cellular telephone control module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V6	CPM(Cellular telephone control module)	Live Data
XJ	2006-2007	Normally Aspirated V6	RETM(Rear entertainment control module)	Read fault codes
XJ	2006-2007	Normally Aspirated V6	RETM(Rear entertainment control module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V6	RETM(Rear entertainment control module)	Live Data
XJ	2006-2007	Normally Aspirated V6	VACM(Voice activation control module)	Read fault codes
XJ	2006-2007	Normally Aspirated V6	VACM(Voice activation control module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V6	VACM(Voice activation control module)	Live Data
XJ	2006-2007	Normally Aspirated V6	Special Function	Parking brake release to service position
XJ	2006-2007	V6 Diesel	PCM(Powertrain control module)	ECU information
XJ	2006-2007	V6 Diesel	PCM(Powertrain control module)	Read fault codes
XJ	2006-2007	V6 Diesel	PCM(Powertrain control module)	Erase fault codes
XJ	2006-2007	V6 Diesel	PCM(Powertrain control module)	Live Data
XJ	2006-2007	V6 Diesel	TCM(Transmission control module)	Read fault codes
XJ	2006-2007	V6 Diesel	TCM(Transmission control module)	Erase fault codes
XJ	2006-2007	V6 Diesel	TCM(Transmission control module)	Live Data
XJ	2006-2007	V6 Diesel	ABS(Anti-lock braking system)	ECU information
XJ	2006-2007	V6 Diesel	ABS(Anti-lock braking system)	Read fault codes
XJ	2006-2007	V6 Diesel	ABS(Anti-lock braking system)	Erase fault codes
XJ	2006-2007	V6 Diesel	ABS(Anti-lock braking system)	Live Data
XJ	2006-2007	V6 Diesel	IP(Instrument pack)	Read fault codes
XJ	2006-2007	V6 Diesel	IP(Instrument pack)	Erase fault codes
XJ	2006-2007	V6 Diesel	IP(Instrument pack)	Live Data
XJ	2006-2007	V6 Diesel	AHCM(Auxiliary heater control module)	ECU information
XJ	2006-2007	V6 Diesel	AHCM(Auxiliary heater control module)	Read fault codes
XJ	2006-2007	V6 Diesel	AHCM(Auxiliary heater control module)	Erase fault codes
XJ	2006-2007	V6 Diesel	AHCM(Auxiliary heater control module)	Live Data
XJ	2006-2007	V6 Diesel	PBM(Parking brake control module)	ECU information
XJ	2006-2007	V6 Diesel	PBM(Parking brake control module)	Read fault codes
XJ	2006-2007	V6 Diesel	PBM(Parking brake control module)	Erase fault codes
XJ	2006-2007	V6 Diesel	PBM(Parking brake control module)	Live Data
XJ	2006-2007	V6 Diesel	TPM(Tire pressure monitor module)	ECU information
XJ	2006-2007	V6 Diesel	TPM(Tire pressure monitor module)	Read fault codes
XJ	2006-2007	V6 Diesel	TPM(Tire pressure monitor module)	Erase fault codes
XJ	2006-2007	V6 Diesel	TPM(Tire pressure monitor module)	Live Data
XJ	2006-2007	V6 Diesel	ACC(Adaptive speed control control module)	Read fault codes
XJ	2006-2007	V6 Diesel	ACC(Adaptive speed control control module)	Erase fault codes
XJ	2006-2007	V6 Diesel	ACC(Adaptive speed control control module)	Live Data
XJ	2006-2007	V6 Diesel	ASU(Air suspension module)	Read fault codes
XJ	2006-2007	V6 Diesel	ASU(Air suspension module)	Erase fault codes
XJ	2006-2007	V6 Diesel	ASU(Air suspension module)	Live Data
XJ	2006-2007	V6 Diesel	ATC(Climate control module)	Read fault codes
XJ	2006-2007	V6 Diesel	ATC(Climate control module)	Erase fault codes
XJ	2006-2007	V6 Diesel	ATC(Climate control module)	Live Data
XJ	2006-2007	V6 Diesel	RATC(Rear climate control module)	Read fault codes
XJ	2006-2007	V6 Diesel	RATC(Rear climate control module)	Erase fault codes
XJ	2006-2007	V6 Diesel	RATC(Rear climate control module)	Live Data
XJ	2006-2007	V6 Diesel	DDM(Driver's door module)	Read fault codes
XJ	2006-2007	V6 Diesel	DDM(Driver's door module)	Erase fault codes
XJ	2006-2007	V6 Diesel	DDM(Driver's door module)	Live Data
XJ	2006-2007	V6 Diesel	DSM(Driver's seat module)	Read fault codes
XJ	2006-2007	V6 Diesel	DSM(Driver's seat module)	Erase fault codes
XJ	2006-2007	V6 Diesel	DSM(Driver's seat module)	Live Data
XJ	2006-2007	V6 Diesel	FETM(Audio unit)	Read fault codes
XJ	2006-2007	V6 Diesel	FETM(Audio unit)	Erase fault codes
XJ	2006-2007	V6 Diesel	FETM(Audio unit)	Live Data
XJ	2006-2007	V6 Diesel	GEM(General electronics control module)	Read fault codes
XJ	2006-2007	V6 Diesel	GEM(General electronics control module)	Erase fault codes
XJ	2006-2007	V6 Diesel	GEM(General electronics control module)	Live Data
XJ	2006-2007	V6 Diesel	NAV(Navigation control module)	Read fault codes
XJ	2006-2007	V6 Diesel	NAV(Navigation control module)	Erase fault codes
XJ	2006-2007	V6 Diesel	NAV(Navigation control module)	Live Data
XJ	2006-2007	V6 Diesel	REM(Rear electronic control module)	Read fault codes
XJ	2006-2007	V6 Diesel	REM(Rear electronic control module)	Erase fault codes
XJ	2006-2007	V6 Diesel	REM(Rear electronic control module)	Live Data
XJ	2006-2007	V6 Diesel	RSM(Rear seat control module)	Read fault codes
XJ	2006-2007	V6 Diesel	RSM(Rear seat control module)	Erase fault codes
XJ	2006-2007	V6 Diesel	RSM(Rear seat control module)	Live Data
XJ	2006-2007	V6 Diesel	SCLM(Steering column lock module)	Read fault codes
XJ	2006-2007	V6 Diesel	SCLM(Steering column lock module)	Erase fault codes
XJ	2006-2007	V6 Diesel	SCLM(Steering column lock module)	Live Data
XJ	2006-2007	V6 Diesel	ARM(Restraints control module)	Read fault codes
XJ	2006-2007	V6 Diesel	ARM(Restraints control module)	Erase fault codes
XJ	2006-2007	V6 Diesel	ARM(Restraints control module)	Live Data

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XJ	2006-2007	V6 Diesel	ISM(Intrusion sensor module)	Read fault codes
XJ	2006-2007	V6 Diesel	ISM(Intrusion sensor module)	Erase fault codes
XJ	2006-2007	V6 Diesel	ISM(Intrusion sensor module)	Live Data
XJ	2006-2007	V6 Diesel	PAM(Parking aid control module)	Read fault codes
XJ	2006-2007	V6 Diesel	PAM(Parking aid control module)	Erase fault codes
XJ	2006-2007	V6 Diesel	PAM(Parking aid control module)	Live Data
XJ	2006-2007	V6 Diesel	AMP(Amplifier)	Read fault codes
XJ	2006-2007	V6 Diesel	AMP(Amplifier)	Erase fault codes
XJ	2006-2007	V6 Diesel	AMP(Amplifier)	Live Data
XJ	2006-2007	V6 Diesel	CPM(Cellular telephone control module)	Read fault codes
XJ	2006-2007	V6 Diesel	CPM(Cellular telephone control module)	Erase fault codes
XJ	2006-2007	V6 Diesel	CPM(Cellular telephone control module)	Live Data
XJ	2006-2007	V6 Diesel	RET(Rear entertainment control module)	Read fault codes
XJ	2006-2007	V6 Diesel	RET(Rear entertainment control module)	Erase fault codes
XJ	2006-2007	V6 Diesel	RET(Rear entertainment control module)	Live Data
XJ	2006-2007	V6 Diesel	VACM(Voice activation control module)	Read fault codes
XJ	2006-2007	V6 Diesel	VACM(Voice activation control module)	Erase fault codes
XJ	2006-2007	V6 Diesel	VACM(Voice activation control module)	Live Data
XJ	2006-2007	V6 Diesel	Special Function	Oil service counter reset
XJ	2006-2007	V6 Diesel	Special Function	Parking brake release to service position
XJ	2006-2007	V6 Diesel	Special Function	Particle filter regeneration
XJ	2006-2007	V6 Diesel	Special Function	Reset the diesel particulate filter stored values
XJ	2006-2007	Supercharged V8	PCM(Powertrain control module)	ECU information
XJ	2006-2007	Supercharged V8	PCM(Powertrain control module)	Read fault codes
XJ	2006-2007	Supercharged V8	PCM(Powertrain control module)	Erase fault codes
XJ	2006-2007	Supercharged V8	PCM(Powertrain control module)	Live Data
XJ	2006-2007	Supercharged V8	TCM(Transmission control module)	Read fault codes
XJ	2006-2007	Supercharged V8	TCM(Transmission control module)	Erase fault codes
XJ	2006-2007	Supercharged V8	TCM(Transmission control module)	Live Data
XJ	2006-2007	Supercharged V8	ABS(Anti-lock braking system)	ECU information
XJ	2006-2007	Supercharged V8	ABS(Anti-lock braking system)	Read fault codes
XJ	2006-2007	Supercharged V8	ABS(Anti-lock braking system)	Erase fault codes
XJ	2006-2007	Supercharged V8	ABS(Anti-lock braking system)	Live Data
XJ	2006-2007	Supercharged V8	IP(Instrument pack)	Read fault codes
XJ	2006-2007	Supercharged V8	IP(Instrument pack)	Erase fault codes
XJ	2006-2007	Supercharged V8	IP(Instrument pack)	Live Data
XJ	2006-2007	Supercharged V8	AHCM(Auxiliary heater control module)	ECU information
XJ	2006-2007	Supercharged V8	AHCM(Auxiliary heater control module)	Read fault codes
XJ	2006-2007	Supercharged V8	AHCM(Auxiliary heater control module)	Erase fault codes
XJ	2006-2007	Supercharged V8	AHCM(Auxiliary heater control module)	Live Data
XJ	2006-2007	Supercharged V8	PBM(Parking brake control module)	ECU information
XJ	2006-2007	Supercharged V8	PBM(Parking brake control module)	Read fault codes
XJ	2006-2007	Supercharged V8	PBM(Parking brake control module)	Erase fault codes
XJ	2006-2007	Supercharged V8	PBM(Parking brake control module)	Live Data
XJ	2006-2007	Supercharged V8	TPM(Tire pressure monitor module)	ECU information
XJ	2006-2007	Supercharged V8	TPM(Tire pressure monitor module)	Read fault codes
XJ	2006-2007	Supercharged V8	TPM(Tire pressure monitor module)	Erase fault codes
XJ	2006-2007	Supercharged V8	TPM(Tire pressure monitor module)	Live Data
XJ	2006-2007	Supercharged V8	ACC(Adaptive speed control control module)	Read fault codes
XJ	2006-2007	Supercharged V8	ACC(Adaptive speed control control module)	Erase fault codes
XJ	2006-2007	Supercharged V8	ACC(Adaptive speed control control module)	Live Data
XJ	2006-2007	Supercharged V8	ASU(Air suspension module)	Read fault codes
XJ	2006-2007	Supercharged V8	ASU(Air suspension module)	Erase fault codes
XJ	2006-2007	Supercharged V8	ASU(Air suspension module)	Live Data
XJ	2006-2007	Supercharged V8	ATC(Climate control module)	Read fault codes
XJ	2006-2007	Supercharged V8	ATC(Climate control module)	Erase fault codes
XJ	2006-2007	Supercharged V8	ATC(Climate control module)	Live Data
XJ	2006-2007	Supercharged V8	RATC(Rear climate control module)	Read fault codes
XJ	2006-2007	Supercharged V8	RATC(Rear climate control module)	Erase fault codes
XJ	2006-2007	Supercharged V8	RATC(Rear climate control module)	Live Data
XJ	2006-2007	Supercharged V8	DDM(Driver's door module)	Read fault codes
XJ	2006-2007	Supercharged V8	DDM(Driver's door module)	Erase fault codes
XJ	2006-2007	Supercharged V8	DDM(Driver's door module)	Live Data
XJ	2006-2007	Supercharged V8	DSM(Driver's seat module)	Read fault codes
XJ	2006-2007	Supercharged V8	DSM(Driver's seat module)	Erase fault codes
XJ	2006-2007	Supercharged V8	DSM(Driver's seat module)	Live Data
XJ	2006-2007	Supercharged V8	FETM(Audio unit)	Read fault codes
XJ	2006-2007	Supercharged V8	FETM(Audio unit)	Erase fault codes
XJ	2006-2007	Supercharged V8	FETM(Audio unit)	Live Data
XJ	2006-2007	Supercharged V8	GEM(General electronics control module)	Read fault codes
XJ	2006-2007	Supercharged V8	GEM(General electronics control module)	Erase fault codes
XJ	2006-2007	Supercharged V8	GEM(General electronics control module)	Live Data
XJ	2006-2007	Supercharged V8	NAV(Navigation control module)	Read fault codes
XJ	2006-2007	Supercharged V8	NAV(Navigation control module)	Erase fault codes
XJ	2006-2007	Supercharged V8	NAV(Navigation control module)	Live Data
XJ	2006-2007	Supercharged V8	REM(Rear electronic control module)	Read fault codes
XJ	2006-2007	Supercharged V8	REM(Rear electronic control module)	Erase fault codes
XJ	2006-2007	Supercharged V8	REM(Rear electronic control module)	Live Data
XJ	2006-2007	Supercharged V8	RSM(Rear seat control module)	Read fault codes
XJ	2006-2007	Supercharged V8	RSM(Rear seat control module)	Erase fault codes
XJ	2006-2007	Supercharged V8	RSM(Rear seat control module)	Live Data
XJ	2006-2007	Supercharged V8	SCLM(Steering column lock module)	Read fault codes
XJ	2006-2007	Supercharged V8	SCLM(Steering column lock module)	Erase fault codes
XJ	2006-2007	Supercharged V8	SCLM(Steering column lock module)	Live Data
XJ	2006-2007	Supercharged V8	ARM(Restraints control module)	Read fault codes
XJ	2006-2007	Supercharged V8	ARM(Restraints control module)	Erase fault codes
XJ	2006-2007	Supercharged V8	ARM(Restraints control module)	Live Data
XJ	2006-2007	Supercharged V8	ISM(Intrusion sensor module)	Read fault codes
XJ	2006-2007	Supercharged V8	ISM(Intrusion sensor module)	Erase fault codes
XJ	2006-2007	Supercharged V8	ISM(Intrusion sensor module)	Live Data
XJ	2006-2007	Supercharged V8	PAM(Parking aid control module)	Read fault codes



## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XJ	2006-2007	Supercharged V8	PAM(Parking aid control module)	Erase fault codes
XJ	2006-2007	Supercharged V8	PAM(Parking aid control module)	Live Data
XJ	2006-2007	Supercharged V8	AMP(Amplifier)	Read fault codes
XJ	2006-2007	Supercharged V8	AMP(Amplifier)	Erase fault codes
XJ	2006-2007	Supercharged V8	AMP(Amplifier)	Live Data
XJ	2006-2007	Supercharged V8	CPM(Cellular telephone control module)	Read fault codes
XJ	2006-2007	Supercharged V8	CPM(Cellular telephone control module)	Erase fault codes
XJ	2006-2007	Supercharged V8	CPM(Cellular telephone control module)	Live Data
XJ	2006-2007	Supercharged V8	RET(M Rear entertainment control module)	Read fault codes
XJ	2006-2007	Supercharged V8	RET(M Rear entertainment control module)	Erase fault codes
XJ	2006-2007	Supercharged V8	RET(M Rear entertainment control module)	Live Data
XJ	2006-2007	Supercharged V8	VACM(Voice activation control module)	Read fault codes
XJ	2006-2007	Supercharged V8	VACM(Voice activation control module)	Erase fault codes
XJ	2006-2007	Supercharged V8	VACM(Voice activation control module)	Live Data
XJ	2006-2007	Supercharged V8	Special Function	Parking brake release to service position
XJ	2006-2007	Normally Aspirated V8 3.5L	PCM(Powertrain control module)	ECU information
XJ	2006-2007	Normally Aspirated V8 3.5L	PCM(Powertrain control module)	Read fault codes
XJ	2006-2007	Normally Aspirated V8 3.5L	PCM(Powertrain control module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V8 3.5L	PCM(Powertrain control module)	Live Data
XJ	2006-2007	Normally Aspirated V8 3.5L	TCM(Transmission control module)	Read fault codes
XJ	2006-2007	Normally Aspirated V8 3.5L	TCM(Transmission control module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V8 3.5L	TCM(Transmission control module)	Live Data
XJ	2006-2007	Normally Aspirated V8 3.5L	ABS(Anti-lock braking system)	ECU information
XJ	2006-2007	Normally Aspirated V8 3.5L	ABS(Anti-lock braking system)	Read fault codes
XJ	2006-2007	Normally Aspirated V8 3.5L	ABS(Anti-lock braking system)	Erase fault codes
XJ	2006-2007	Normally Aspirated V8 3.5L	ABS(Anti-lock braking system)	Live Data
XJ	2006-2007	Normally Aspirated V8 3.5L	IP(Instrument pack)	Read fault codes
XJ	2006-2007	Normally Aspirated V8 3.5L	IP(Instrument pack)	Erase fault codes
XJ	2006-2007	Normally Aspirated V8 3.5L	IP(Instrument pack)	Live Data
XJ	2006-2007	Normally Aspirated V8 3.5L	AHCM(Auxiliary heater control module)	ECU information
XJ	2006-2007	Normally Aspirated V8 3.5L	AHCM(Auxiliary heater control module)	Read fault codes
XJ	2006-2007	Normally Aspirated V8 3.5L	AHCM(Auxiliary heater control module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V8 3.5L	AHCM(Auxiliary heater control module)	Live Data
XJ	2006-2007	Normally Aspirated V8 3.5L	PBM(Parking brake control module)	ECU information
XJ	2006-2007	Normally Aspirated V8 3.5L	PBM(Parking brake control module)	Read fault codes
XJ	2006-2007	Normally Aspirated V8 3.5L	PBM(Parking brake control module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V8 3.5L	PBM(Parking brake control module)	Live Data
XJ	2006-2007	Normally Aspirated V8 3.5L	TPM(Tire pressure monitor module)	ECU information
XJ	2006-2007	Normally Aspirated V8 3.5L	TPM(Tire pressure monitor module)	Read fault codes
XJ	2006-2007	Normally Aspirated V8 3.5L	TPM(Tire pressure monitor module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V8 3.5L	TPM(Tire pressure monitor module)	Live Data
XJ	2006-2007	Normally Aspirated V8 3.5L	ACC(Adaptive speed control control module)	Read fault codes
XJ	2006-2007	Normally Aspirated V8 3.5L	ACC(Adaptive speed control control module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V8 3.5L	ACC(Adaptive speed control control module)	Live Data
XJ	2006-2007	Normally Aspirated V8 3.5L	ASU(Air suspension module)	Read fault codes
XJ	2006-2007	Normally Aspirated V8 3.5L	ASU(Air suspension module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V8 3.5L	ASU(Air suspension module)	Live Data
XJ	2006-2007	Normally Aspirated V8 3.5L	ATC(Climate control module)	Read fault codes
XJ	2006-2007	Normally Aspirated V8 3.5L	ATC(Climate control module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V8 3.5L	ATC(Climate control module)	Live Data
XJ	2006-2007	Normally Aspirated V8 3.5L	RATC(Rear climate control module)	Read fault codes
XJ	2006-2007	Normally Aspirated V8 3.5L	RATC(Rear climate control module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V8 3.5L	RATC(Rear climate control module)	Live Data
XJ	2006-2007	Normally Aspirated V8 3.5L	DDM(Driver's door module)	Read fault codes
XJ	2006-2007	Normally Aspirated V8 3.5L	DDM(Driver's door module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V8 3.5L	DDM(Driver's door module)	Live Data
XJ	2006-2007	Normally Aspirated V8 3.5L	DSM(Driver's seat module)	Read fault codes
XJ	2006-2007	Normally Aspirated V8 3.5L	DSM(Driver's seat module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V8 3.5L	DSM(Driver's seat module)	Live Data
XJ	2006-2007	Normally Aspirated V8 3.5L	FETM(Audio unit)	Read fault codes
XJ	2006-2007	Normally Aspirated V8 3.5L	FETM(Audio unit)	Erase fault codes
XJ	2006-2007	Normally Aspirated V8 3.5L	FETM(Audio unit)	Live Data
XJ	2006-2007	Normally Aspirated V8 3.5L	GEM(General electronics control module)	Read fault codes
XJ	2006-2007	Normally Aspirated V8 3.5L	GEM(General electronics control module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V8 3.5L	GEM(General electronics control module)	Live Data
XJ	2006-2007	Normally Aspirated V8 3.5L	NAV(Navigation control module)	Read fault codes
XJ	2006-2007	Normally Aspirated V8 3.5L	NAV(Navigation control module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V8 3.5L	NAV(Navigation control module)	Live Data
XJ	2006-2007	Normally Aspirated V8 3.5L	REM(Rear electronic control module)	Read fault codes
XJ	2006-2007	Normally Aspirated V8 3.5L	REM(Rear electronic control module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V8 3.5L	REM(Rear electronic control module)	Live Data
XJ	2006-2007	Normally Aspirated V8 3.5L	RSM(Rear seat control module)	Read fault codes
XJ	2006-2007	Normally Aspirated V8 3.5L	RSM(Rear seat control module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V8 3.5L	RSM(Rear seat control module)	Live Data
XJ	2006-2007	Normally Aspirated V8 3.5L	SCLM(Steering column lock module)	Read fault codes
XJ	2006-2007	Normally Aspirated V8 3.5L	SCLM(Steering column lock module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V8 3.5L	SCLM(Steering column lock module)	Live Data
XJ	2006-2007	Normally Aspirated V8 3.5L	ARM(Restraints control module)	Read fault codes
XJ	2006-2007	Normally Aspirated V8 3.5L	ARM(Restraints control module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V8 3.5L	ARM(Restraints control module)	Live Data
XJ	2006-2007	Normally Aspirated V8 3.5L	ISM(Intrusion sensor module)	Read fault codes
XJ	2006-2007	Normally Aspirated V8 3.5L	ISM(Intrusion sensor module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V8 3.5L	ISM(Intrusion sensor module)	Live Data
XJ	2006-2007	Normally Aspirated V8 3.5L	PAM(Parking aid control module)	Read fault codes
XJ	2006-2007	Normally Aspirated V8 3.5L	PAM(Parking aid control module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V8 3.5L	PAM(Parking aid control module)	Live Data
XJ	2006-2007	Normally Aspirated V8 3.5L	AMP(Amplifier)	Read fault codes
XJ	2006-2007	Normally Aspirated V8 3.5L	AMP(Amplifier)	Erase fault codes
XJ	2006-2007	Normally Aspirated V8 3.5L	AMP(Amplifier)	Live Data
XJ	2006-2007	Normally Aspirated V8 3.5L	CPM(Cellular telephone control module)	Read fault codes
XJ	2006-2007	Normally Aspirated V8 3.5L	CPM(Cellular telephone control module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V8 3.5L	CPM(Cellular telephone control module)	Live Data

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XJ	2006-2007	Normally Aspirated V8 3.5L	RETM(Rear entertainment control module)	Read fault codes
XJ	2006-2007	Normally Aspirated V8 3.5L	RETM(Rear entertainment control module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V8 3.5L	RETM(Rear entertainment control module)	Live Data
XJ	2006-2007	Normally Aspirated V8 3.5L	VACM(Voice activation control module)	Read fault codes
XJ	2006-2007	Normally Aspirated V8 3.5L	VACM(Voice activation control module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V8 3.5L	VACM(Voice activation control module)	Live Data
XJ	2006-2007	Normally Aspirated V8 3.5L	Special Function	Parking brake release to service position
XJ	2006-2007	Normally Aspirated V8 4.2L	PCM(Powertrain control module)	ECU information
XJ	2006-2007	Normally Aspirated V8 4.2L	PCM(Powertrain control module)	Read fault codes
XJ	2006-2007	Normally Aspirated V8 4.2L	PCM(Powertrain control module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V8 4.2L	PCM(Powertrain control module)	Live Data
XJ	2006-2007	Normally Aspirated V8 4.2L	TCM(Transmission control module)	Read fault codes
XJ	2006-2007	Normally Aspirated V8 4.2L	TCM(Transmission control module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V8 4.2L	TCM(Transmission control module)	Live Data
XJ	2006-2007	Normally Aspirated V8 4.2L	ABS(Anti-lock braking system)	ECU information
XJ	2006-2007	Normally Aspirated V8 4.2L	ABS(Anti-lock braking system)	Read fault codes
XJ	2006-2007	Normally Aspirated V8 4.2L	ABS(Anti-lock braking system)	Erase fault codes
XJ	2006-2007	Normally Aspirated V8 4.2L	ABS(Anti-lock braking system)	Live Data
XJ	2006-2007	Normally Aspirated V8 4.2L	IP(Instrument pack)	Read fault codes
XJ	2006-2007	Normally Aspirated V8 4.2L	IP(Instrument pack)	Erase fault codes
XJ	2006-2007	Normally Aspirated V8 4.2L	IP(Instrument pack)	Live Data
XJ	2006-2007	Normally Aspirated V8 4.2L	AHCM(Auxiliary heater control module)	ECU information
XJ	2006-2007	Normally Aspirated V8 4.2L	AHCM(Auxiliary heater control module)	Read fault codes
XJ	2006-2007	Normally Aspirated V8 4.2L	AHCM(Auxiliary heater control module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V8 4.2L	AHCM(Auxiliary heater control module)	Live Data
XJ	2006-2007	Normally Aspirated V8 4.2L	PBM(Parking brake control module)	ECU information
XJ	2006-2007	Normally Aspirated V8 4.2L	PBM(Parking brake control module)	Read fault codes
XJ	2006-2007	Normally Aspirated V8 4.2L	PBM(Parking brake control module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V8 4.2L	PBM(Parking brake control module)	Live Data
XJ	2006-2007	Normally Aspirated V8 4.2L	TPM(Tire pressure monitor module)	ECU information
XJ	2006-2007	Normally Aspirated V8 4.2L	TPM(Tire pressure monitor module)	Read fault codes
XJ	2006-2007	Normally Aspirated V8 4.2L	TPM(Tire pressure monitor module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V8 4.2L	TPM(Tire pressure monitor module)	Live Data
XJ	2006-2007	Normally Aspirated V8 4.2L	ACC(Adaptive speed control control module)	Read fault codes
XJ	2006-2007	Normally Aspirated V8 4.2L	ACC(Adaptive speed control control module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V8 4.2L	ACC(Adaptive speed control control module)	Live Data
XJ	2006-2007	Normally Aspirated V8 4.2L	ASU(Air suspension module)	Read fault codes
XJ	2006-2007	Normally Aspirated V8 4.2L	ASU(Air suspension module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V8 4.2L	ASU(Air suspension module)	Live Data
XJ	2006-2007	Normally Aspirated V8 4.2L	ATC(Climate control module)	Read fault codes
XJ	2006-2007	Normally Aspirated V8 4.2L	ATC(Climate control module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V8 4.2L	ATC(Climate control module)	Live Data
XJ	2006-2007	Normally Aspirated V8 4.2L	RATC(Rear climate control module)	Read fault codes
XJ	2006-2007	Normally Aspirated V8 4.2L	RATC(Rear climate control module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V8 4.2L	RATC(Rear climate control module)	Live Data
XJ	2006-2007	Normally Aspirated V8 4.2L	DDM(Driver's door module)	Read fault codes
XJ	2006-2007	Normally Aspirated V8 4.2L	DDM(Driver's door module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V8 4.2L	DDM(Driver's door module)	Live Data
XJ	2006-2007	Normally Aspirated V8 4.2L	DSM(Driver's seat module)	Read fault codes
XJ	2006-2007	Normally Aspirated V8 4.2L	DSM(Driver's seat module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V8 4.2L	DSM(Driver's seat module)	Live Data
XJ	2006-2007	Normally Aspirated V8 4.2L	FETM(Audio unit)	Read fault codes
XJ	2006-2007	Normally Aspirated V8 4.2L	FETM(Audio unit)	Erase fault codes
XJ	2006-2007	Normally Aspirated V8 4.2L	FETM(Audio unit)	Live Data
XJ	2006-2007	Normally Aspirated V8 4.2L	GEM(General electronics control module)	Read fault codes
XJ	2006-2007	Normally Aspirated V8 4.2L	GEM(General electronics control module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V8 4.2L	GEM(General electronics control module)	Live Data
XJ	2006-2007	Normally Aspirated V8 4.2L	NAV(Navigation control module)	Read fault codes
XJ	2006-2007	Normally Aspirated V8 4.2L	NAV(Navigation control module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V8 4.2L	NAV(Navigation control module)	Live Data
XJ	2006-2007	Normally Aspirated V8 4.2L	REM(Rear electronic control module)	Read fault codes
XJ	2006-2007	Normally Aspirated V8 4.2L	REM(Rear electronic control module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V8 4.2L	REM(Rear electronic control module)	Live Data
XJ	2006-2007	Normally Aspirated V8 4.2L	RSM(Rear seat control module)	Read fault codes
XJ	2006-2007	Normally Aspirated V8 4.2L	RSM(Rear seat control module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V8 4.2L	RSM(Rear seat control module)	Live Data
XJ	2006-2007	Normally Aspirated V8 4.2L	SCLM(Steering column lock module)	Read fault codes
XJ	2006-2007	Normally Aspirated V8 4.2L	SCLM(Steering column lock module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V8 4.2L	SCLM(Steering column lock module)	Live Data
XJ	2006-2007	Normally Aspirated V8 4.2L	ARM(Restraints control module)	Read fault codes
XJ	2006-2007	Normally Aspirated V8 4.2L	ARM(Restraints control module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V8 4.2L	ARM(Restraints control module)	Live Data
XJ	2006-2007	Normally Aspirated V8 4.2L	ISM(Intrusion sensor module)	Read fault codes
XJ	2006-2007	Normally Aspirated V8 4.2L	ISM(Intrusion sensor module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V8 4.2L	ISM(Intrusion sensor module)	Live Data
XJ	2006-2007	Normally Aspirated V8 4.2L	PAM(Parking aid control module)	Read fault codes
XJ	2006-2007	Normally Aspirated V8 4.2L	PAM(Parking aid control module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V8 4.2L	PAM(Parking aid control module)	Live Data
XJ	2006-2007	Normally Aspirated V8 4.2L	AMP(Amplifier)	Read fault codes
XJ	2006-2007	Normally Aspirated V8 4.2L	AMP(Amplifier)	Erase fault codes
XJ	2006-2007	Normally Aspirated V8 4.2L	AMP(Amplifier)	Live Data
XJ	2006-2007	Normally Aspirated V8 4.2L	CPM(Cellular telephone control module)	Read fault codes
XJ	2006-2007	Normally Aspirated V8 4.2L	CPM(Cellular telephone control module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V8 4.2L	CPM(Cellular telephone control module)	Live Data
XJ	2006-2007	Normally Aspirated V8 4.2L	RETM(Rear entertainment control module)	Read fault codes
XJ	2006-2007	Normally Aspirated V8 4.2L	RETM(Rear entertainment control module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V8 4.2L	RETM(Rear entertainment control module)	Live Data
XJ	2006-2007	Normally Aspirated V8 4.2L	VACM(Voice activation control module)	Read fault codes
XJ	2006-2007	Normally Aspirated V8 4.2L	VACM(Voice activation control module)	Erase fault codes
XJ	2006-2007	Normally Aspirated V8 4.2L	VACM(Voice activation control module)	Live Data
XJ	2006-2007	Normally Aspirated V8 4.2L	Special Function	Parking brake release to service position
XJ	2002-2005	Normally Aspirated V6	ECM(Engine control module)	Read fault codes

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XJ	2002-2005	Normally Aspirated V6	ECM(Engine control module)	Erase fault codes
XJ	2002-2005	Normally Aspirated V6	ECM(Engine control module)	Live Data
XJ	2002-2005	Normally Aspirated V6	TCM(Transmission control module)	Read fault codes
XJ	2002-2005	Normally Aspirated V6	TCM(Transmission control module)	Erase fault codes
XJ	2002-2005	Normally Aspirated V6	TCM(Transmission control module)	Live Data
XJ	2002-2005	Normally Aspirated V6	IP(Instrument pack)	Read fault codes
XJ	2002-2005	Normally Aspirated V6	IP(Instrument pack)	Erase fault codes
XJ	2002-2005	Normally Aspirated V6	IP(Instrument pack)	Live Data
XJ	2002-2005	Normally Aspirated V6	ABS(Anti-lock braking system)	Read fault codes
XJ	2002-2005	Normally Aspirated V6	ABS(Anti-lock braking system)	Erase fault codes
XJ	2002-2005	Normally Aspirated V6	ABS(Anti-lock braking system)	Live Data
XJ	2002-2005	Normally Aspirated V6	ACC(Adaptive speed control control module)	Read fault codes
XJ	2002-2005	Normally Aspirated V6	ACC(Adaptive speed control control module)	Erase fault codes
XJ	2002-2005	Normally Aspirated V6	ACC(Adaptive speed control control module)	Live Data
XJ	2002-2005	Normally Aspirated V6	ASU(Air suspension module)	Read fault codes
XJ	2002-2005	Normally Aspirated V6	ASU(Air suspension module)	Erase fault codes
XJ	2002-2005	Normally Aspirated V6	ASU(Air suspension module)	Live Data
XJ	2002-2005	Normally Aspirated V6	ATC(Climate control module)	Read fault codes
XJ	2002-2005	Normally Aspirated V6	ATC(Climate control module)	Erase fault codes
XJ	2002-2005	Normally Aspirated V6	ATC(Climate control module)	Live Data
XJ	2002-2005	Normally Aspirated V6	RATC(Rear climate control module)	Read fault codes
XJ	2002-2005	Normally Aspirated V6	RATC(Rear climate control module)	Erase fault codes
XJ	2002-2005	Normally Aspirated V6	RATC(Rear climate control module)	Live Data
XJ	2002-2005	Normally Aspirated V6	DDM(Driver's door module)	Read fault codes
XJ	2002-2005	Normally Aspirated V6	DDM(Driver's door module)	Erase fault codes
XJ	2002-2005	Normally Aspirated V6	DDM(Driver's door module)	Live Data
XJ	2002-2005	Normally Aspirated V6	DSM(Driver's seat module)	Read fault codes
XJ	2002-2005	Normally Aspirated V6	DSM(Driver's seat module)	Erase fault codes
XJ	2002-2005	Normally Aspirated V6	DSM(Driver's seat module)	Live Data
XJ	2002-2005	Normally Aspirated V6	EPB(Electronic parking brake)	Read fault codes
XJ	2002-2005	Normally Aspirated V6	EPB(Electronic parking brake)	Erase fault codes
XJ	2002-2005	Normally Aspirated V6	EPB(Electronic parking brake)	Live Data
XJ	2002-2005	Normally Aspirated V6	GEM(General electronics control module)	Read fault codes
XJ	2002-2005	Normally Aspirated V6	GEM(General electronics control module)	Erase fault codes
XJ	2002-2005	Normally Aspirated V6	GEM(General electronics control module)	Live Data
XJ	2002-2005	Normally Aspirated V6	NAV(Navigation control module)	Read fault codes
XJ	2002-2005	Normally Aspirated V6	NAV(Navigation control module)	Erase fault codes
XJ	2002-2005	Normally Aspirated V6	NAV(Navigation control module)	Live Data
XJ	2002-2005	Normally Aspirated V6	REM(Rear electronic control module)	Read fault codes
XJ	2002-2005	Normally Aspirated V6	REM(Rear electronic control module)	Erase fault codes
XJ	2002-2005	Normally Aspirated V6	REM(Rear electronic control module)	Live Data
XJ	2002-2005	Normally Aspirated V6	RSM(Rear seat control module)	Read fault codes
XJ	2002-2005	Normally Aspirated V6	RSM(Rear seat control module)	Erase fault codes
XJ	2002-2005	Normally Aspirated V6	RSM(Rear seat control module)	Live Data
XJ	2002-2005	Normally Aspirated V6	SCLM(Steering column lock module)	Read fault codes
XJ	2002-2005	Normally Aspirated V6	SCLM(Steering column lock module)	Erase fault codes
XJ	2002-2005	Normally Aspirated V6	SCLM(Steering column lock module)	Live Data
XJ	2002-2005	Normally Aspirated V6	FETM(Audio unit)	Read fault codes
XJ	2002-2005	Normally Aspirated V6	FETM(Audio unit)	Erase fault codes
XJ	2002-2005	Normally Aspirated V6	FETM(Audio unit)	Live Data
XJ	2002-2005	Normally Aspirated V6	ADHLS L(Left lighting control module)	Read fault codes
XJ	2002-2005	Normally Aspirated V6	ADHLS L(Left lighting control module)	Erase fault codes
XJ	2002-2005	Normally Aspirated V6	ADHLS L(Left lighting control module)	Live Data
XJ	2002-2005	Normally Aspirated V6	ADHLS R(Right lighting control module)	Read fault codes
XJ	2002-2005	Normally Aspirated V6	ADHLS R(Right lighting control module)	Erase fault codes
XJ	2002-2005	Normally Aspirated V6	ADHLS R(Right lighting control module)	Live Data
XJ	2002-2005	Normally Aspirated V6	ARM(Restraints control module)	Read fault codes
XJ	2002-2005	Normally Aspirated V6	ARM(Restraints control module)	Erase fault codes
XJ	2002-2005	Normally Aspirated V6	ARM(Restraints control module)	Live Data
XJ	2002-2005	Normally Aspirated V6	ISM(Intrusion sensor module)	Read fault codes
XJ	2002-2005	Normally Aspirated V6	ISM(Intrusion sensor module)	Erase fault codes
XJ	2002-2005	Normally Aspirated V6	ISM(Intrusion sensor module)	Live Data
XJ	2002-2005	Normally Aspirated V6	PAM(Parking aid control module)	Read fault codes
XJ	2002-2005	Normally Aspirated V6	PAM(Parking aid control module)	Erase fault codes
XJ	2002-2005	Normally Aspirated V6	PAM(Parking aid control module)	Live Data
XJ	2002-2005	Normally Aspirated V6	AMP(Amplifier)	Read fault codes
XJ	2002-2005	Normally Aspirated V6	AMP(Amplifier)	Erase fault codes
XJ	2002-2005	Normally Aspirated V6	AMP(Amplifier)	Live Data
XJ	2002-2005	Normally Aspirated V6	CPM(Cellular telephone control module)	Read fault codes
XJ	2002-2005	Normally Aspirated V6	CPM(Cellular telephone control module)	Erase fault codes
XJ	2002-2005	Normally Aspirated V6	CPM(Cellular telephone control module)	Live Data
XJ	2002-2005	Normally Aspirated V6	RETM(Rear entertainment control module)	Read fault codes
XJ	2002-2005	Normally Aspirated V6	RETM(Rear entertainment control module)	Erase fault codes
XJ	2002-2005	Normally Aspirated V6	RETM(Rear entertainment control module)	Live Data
XJ	2002-2005	Normally Aspirated V6	VACM(Voice activation control module)	Read fault codes
XJ	2002-2005	Normally Aspirated V6	VACM(Voice activation control module)	Erase fault codes
XJ	2002-2005	Normally Aspirated V6	VACM(Voice activation control module)	Live Data
XJ	2002-2005	Normally Aspirated V6	Special Function	Manual oil reset
XJ	2002-2005	Normally Aspirated V6	Special Function	Oil dilution reset
XJ	2002-2005	Supercharged V8	ECM(Engine control module)	Read fault codes
XJ	2002-2005	Supercharged V8	ECM(Engine control module)	Erase fault codes
XJ	2002-2005	Supercharged V8	ECM(Engine control module)	Live Data
XJ	2002-2005	Supercharged V8	TCM(Transmission control module)	Read fault codes
XJ	2002-2005	Supercharged V8	TCM(Transmission control module)	Erase fault codes
XJ	2002-2005	Supercharged V8	TCM(Transmission control module)	Live Data
XJ	2002-2005	Supercharged V8	ABS(Anti-lock braking system)	Read fault codes
XJ	2002-2005	Supercharged V8	ABS(Anti-lock braking system)	Erase fault codes
XJ	2002-2005	Supercharged V8	ABS(Anti-lock braking system)	Live Data
XJ	2002-2005	Supercharged V8	IP(Instrument pack)	Read fault codes
XJ	2002-2005	Supercharged V8	IP(Instrument pack)	Erase fault codes
XJ	2002-2005	Supercharged V8	IP(Instrument pack)	Live Data
XJ	2002-2005	Supercharged V8	ACC(Adaptive speed control control module)	Read fault codes

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XJ	2002-2005	Supercharged V8	ACC(Adaptive speed control control module)	Erase fault codes
XJ	2002-2005	Supercharged V8	ACC(Adaptive speed control control module)	Live Data
XJ	2002-2005	Supercharged V8	ASU(Air suspension module)	Read fault codes
XJ	2002-2005	Supercharged V8	ASU(Air suspension module)	Erase fault codes
XJ	2002-2005	Supercharged V8	ASU(Air suspension module)	Live Data
XJ	2002-2005	Supercharged V8	ATC(Climate control module)	Read fault codes
XJ	2002-2005	Supercharged V8	ATC(Climate control module)	Erase fault codes
XJ	2002-2005	Supercharged V8	ATC(Climate control module)	Live Data
XJ	2002-2005	Supercharged V8	RATC(Rear climate control module)	Read fault codes
XJ	2002-2005	Supercharged V8	RATC(Rear climate control module)	Erase fault codes
XJ	2002-2005	Supercharged V8	RATC(Rear climate control module)	Live Data
XJ	2002-2005	Supercharged V8	DDM(Driver's door module)	Read fault codes
XJ	2002-2005	Supercharged V8	DDM(Driver's door module)	Erase fault codes
XJ	2002-2005	Supercharged V8	DDM(Driver's door module)	Live Data
XJ	2002-2005	Supercharged V8	DSM(Driver's seat module)	Read fault codes
XJ	2002-2005	Supercharged V8	DSM(Driver's seat module)	Erase fault codes
XJ	2002-2005	Supercharged V8	DSM(Driver's seat module)	Live Data
XJ	2002-2005	Supercharged V8	EPB(Electronic parking brake)	Read fault codes
XJ	2002-2005	Supercharged V8	EPB(Electronic parking brake)	Erase fault codes
XJ	2002-2005	Supercharged V8	EPB(Electronic parking brake)	Live Data
XJ	2002-2005	Supercharged V8	GEM(General electronics control module)	Read fault codes
XJ	2002-2005	Supercharged V8	GEM(General electronics control module)	Erase fault codes
XJ	2002-2005	Supercharged V8	GEM(General electronics control module)	Live Data
XJ	2002-2005	Supercharged V8	NAV(Navigation control module)	Read fault codes
XJ	2002-2005	Supercharged V8	NAV(Navigation control module)	Erase fault codes
XJ	2002-2005	Supercharged V8	NAV(Navigation control module)	Live Data
XJ	2002-2005	Supercharged V8	REM(Rear electronic control module)	Read fault codes
XJ	2002-2005	Supercharged V8	REM(Rear electronic control module)	Erase fault codes
XJ	2002-2005	Supercharged V8	REM(Rear electronic control module)	Live Data
XJ	2002-2005	Supercharged V8	RSM(Rear seat control module)	Read fault codes
XJ	2002-2005	Supercharged V8	RSM(Rear seat control module)	Erase fault codes
XJ	2002-2005	Supercharged V8	RSM(Rear seat control module)	Live Data
XJ	2002-2005	Supercharged V8	SCLM(Steering column lock module)	Read fault codes
XJ	2002-2005	Supercharged V8	SCLM(Steering column lock module)	Erase fault codes
XJ	2002-2005	Supercharged V8	SCLM(Steering column lock module)	Live Data
XJ	2002-2005	Supercharged V8	FETM(Audio unit)	Read fault codes
XJ	2002-2005	Supercharged V8	FETM(Audio unit)	Erase fault codes
XJ	2002-2005	Supercharged V8	FETM(Audio unit)	Live Data
XJ	2002-2005	Supercharged V8	ADHLS L(Left lighting control module)	Read fault codes
XJ	2002-2005	Supercharged V8	ADHLS L(Left lighting control module)	Erase fault codes
XJ	2002-2005	Supercharged V8	ADHLS L(Left lighting control module)	Live Data
XJ	2002-2005	Supercharged V8	ADHLS R(Right lighting control module)	Read fault codes
XJ	2002-2005	Supercharged V8	ADHLS R(Right lighting control module)	Erase fault codes
XJ	2002-2005	Supercharged V8	ADHLS R(Right lighting control module)	Live Data
XJ	2002-2005	Supercharged V8	ARM(Restraints control module)	Read fault codes
XJ	2002-2005	Supercharged V8	ARM(Restraints control module)	Erase fault codes
XJ	2002-2005	Supercharged V8	ARM(Restraints control module)	Live Data
XJ	2002-2005	Supercharged V8	ISM(Intrusion sensor module)	Read fault codes
XJ	2002-2005	Supercharged V8	ISM(Intrusion sensor module)	Erase fault codes
XJ	2002-2005	Supercharged V8	ISM(Intrusion sensor module)	Live Data
XJ	2002-2005	Supercharged V8	PAM(Parking aid control module)	Read fault codes
XJ	2002-2005	Supercharged V8	PAM(Parking aid control module)	Erase fault codes
XJ	2002-2005	Supercharged V8	PAM(Parking aid control module)	Live Data
XJ	2002-2005	Supercharged V8	AMP(Amplifier)	Read fault codes
XJ	2002-2005	Supercharged V8	AMP(Amplifier)	Erase fault codes
XJ	2002-2005	Supercharged V8	AMP(Amplifier)	Live Data
XJ	2002-2005	Supercharged V8	CPM(Cellular telephone control module)	Read fault codes
XJ	2002-2005	Supercharged V8	CPM(Cellular telephone control module)	Erase fault codes
XJ	2002-2005	Supercharged V8	CPM(Cellular telephone control module)	Live Data
XJ	2002-2005	Supercharged V8	RETМ(Rear entertainment control module)	Read fault codes
XJ	2002-2005	Supercharged V8	RETМ(Rear entertainment control module)	Erase fault codes
XJ	2002-2005	Supercharged V8	RETМ(Rear entertainment control module)	Live Data
XJ	2002-2005	Supercharged V8	VACM(Voice activation control module)	Read fault codes
XJ	2002-2005	Supercharged V8	VACM(Voice activation control module)	Erase fault codes
XJ	2002-2005	Supercharged V8	VACM(Voice activation control module)	Live Data
XJ	2002-2005	Supercharged V8	Special Function	Manual oil reset
XJ	2002-2005	Supercharged V8	Special Function	Oil dilution reset
XJ	2002-2005	Normally Aspirated V8 3.5L	ECM(Engine control module)	Read fault codes
XJ	2002-2005	Normally Aspirated V8 3.5L	ECM(Engine control module)	Erase fault codes
XJ	2002-2005	Normally Aspirated V8 3.5L	ECM(Engine control module)	Live Data
XJ	2002-2005	Normally Aspirated V8 3.5L	TCM(Transmission control module)	Read fault codes
XJ	2002-2005	Normally Aspirated V8 3.5L	TCM(Transmission control module)	Erase fault codes
XJ	2002-2005	Normally Aspirated V8 3.5L	TCM(Transmission control module)	Live Data
XJ	2002-2005	Normally Aspirated V8 3.5L	ABS(Anti-lock braking system)	Read fault codes
XJ	2002-2005	Normally Aspirated V8 3.5L	ABS(Anti-lock braking system)	Erase fault codes
XJ	2002-2005	Normally Aspirated V8 3.5L	ABS(Anti-lock braking system)	Live Data
XJ	2002-2005	Normally Aspirated V8 3.5L	IP(Instrument pack)	Read fault codes
XJ	2002-2005	Normally Aspirated V8 3.5L	IP(Instrument pack)	Erase fault codes
XJ	2002-2005	Normally Aspirated V8 3.5L	IP(Instrument pack)	Live Data
XJ	2002-2005	Normally Aspirated V8 3.5L	ACC(Adaptive speed control control module)	Read fault codes
XJ	2002-2005	Normally Aspirated V8 3.5L	ACC(Adaptive speed control control module)	Erase fault codes
XJ	2002-2005	Normally Aspirated V8 3.5L	ACC(Adaptive speed control control module)	Live Data
XJ	2002-2005	Normally Aspirated V8 3.5L	ASU(Air suspension module)	Read fault codes
XJ	2002-2005	Normally Aspirated V8 3.5L	ASU(Air suspension module)	Erase fault codes
XJ	2002-2005	Normally Aspirated V8 3.5L	ASU(Air suspension module)	Live Data
XJ	2002-2005	Normally Aspirated V8 3.5L	ATC(Climate control module)	Read fault codes
XJ	2002-2005	Normally Aspirated V8 3.5L	ATC(Climate control module)	Erase fault codes
XJ	2002-2005	Normally Aspirated V8 3.5L	ATC(Climate control module)	Live Data
XJ	2002-2005	Normally Aspirated V8 3.5L	RATC(Rear climate control module)	Read fault codes
XJ	2002-2005	Normally Aspirated V8 3.5L	RATC(Rear climate control module)	Erase fault codes
XJ	2002-2005	Normally Aspirated V8 3.5L	RATC(Rear climate control module)	Live Data
XJ	2002-2005	Normally Aspirated V8 3.5L	DDM(Driver's door module)	Read fault codes

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XJ	2002-2005	Normally Aspirated V8 3.5L	DDM(Driver's door module)	Erase fault codes
XJ	2002-2005	Normally Aspirated V8 3.5L	DDM(Driver's door module)	Live Data
XJ	2002-2005	Normally Aspirated V8 3.5L	DSM(Driver's seat module)	Read fault codes
XJ	2002-2005	Normally Aspirated V8 3.5L	DSM(Driver's seat module)	Erase fault codes
XJ	2002-2005	Normally Aspirated V8 3.5L	DSM(Driver's seat module)	Live Data
XJ	2002-2005	Normally Aspirated V8 3.5L	EPB(Electronic parking brake)	Read fault codes
XJ	2002-2005	Normally Aspirated V8 3.5L	EPB(Electronic parking brake)	Erase fault codes
XJ	2002-2005	Normally Aspirated V8 3.5L	EPB(Electronic parking brake)	Live Data
XJ	2002-2005	Normally Aspirated V8 3.5L	GEM(General electronics control module)	Read fault codes
XJ	2002-2005	Normally Aspirated V8 3.5L	GEM(General electronics control module)	Erase fault codes
XJ	2002-2005	Normally Aspirated V8 3.5L	GEM(General electronics control module)	Live Data
XJ	2002-2005	Normally Aspirated V8 3.5L	NAV(Navigation control module)	Read fault codes
XJ	2002-2005	Normally Aspirated V8 3.5L	NAV(Navigation control module)	Erase fault codes
XJ	2002-2005	Normally Aspirated V8 3.5L	NAV(Navigation control module)	Live Data
XJ	2002-2005	Normally Aspirated V8 3.5L	REM(Rear electronic control module)	Read fault codes
XJ	2002-2005	Normally Aspirated V8 3.5L	REM(Rear electronic control module)	Erase fault codes
XJ	2002-2005	Normally Aspirated V8 3.5L	REM(Rear electronic control module)	Live Data
XJ	2002-2005	Normally Aspirated V8 3.5L	RSM(Rear seat control module)	Read fault codes
XJ	2002-2005	Normally Aspirated V8 3.5L	RSM(Rear seat control module)	Erase fault codes
XJ	2002-2005	Normally Aspirated V8 3.5L	RSM(Rear seat control module)	Live Data
XJ	2002-2005	Normally Aspirated V8 3.5L	SCLM(Steering column lock module)	Read fault codes
XJ	2002-2005	Normally Aspirated V8 3.5L	SCLM(Steering column lock module)	Erase fault codes
XJ	2002-2005	Normally Aspirated V8 3.5L	SCLM(Steering column lock module)	Live Data
XJ	2002-2005	Normally Aspirated V8 3.5L	FETM(Audio unit)	Read fault codes
XJ	2002-2005	Normally Aspirated V8 3.5L	FETM(Audio unit)	Erase fault codes
XJ	2002-2005	Normally Aspirated V8 3.5L	FETM(Audio unit)	Live Data
XJ	2002-2005	Normally Aspirated V8 3.5L	ADHLS L(Left lighting control module)	Read fault codes
XJ	2002-2005	Normally Aspirated V8 3.5L	ADHLS L(Left lighting control module)	Erase fault codes
XJ	2002-2005	Normally Aspirated V8 3.5L	ADHLS L(Left lighting control module)	Live Data
XJ	2002-2005	Normally Aspirated V8 3.5L	ADHLS R(Right lighting control module)	Read fault codes
XJ	2002-2005	Normally Aspirated V8 3.5L	ADHLS R(Right lighting control module)	Erase fault codes
XJ	2002-2005	Normally Aspirated V8 3.5L	ADHLS R(Right lighting control module)	Live Data
XJ	2002-2005	Normally Aspirated V8 3.5L	ARM(Restraints control module)	Read fault codes
XJ	2002-2005	Normally Aspirated V8 3.5L	ARM(Restraints control module)	Erase fault codes
XJ	2002-2005	Normally Aspirated V8 3.5L	ARM(Restraints control module)	Live Data
XJ	2002-2005	Normally Aspirated V8 3.5L	ISM(Intrusion sensor module)	Read fault codes
XJ	2002-2005	Normally Aspirated V8 3.5L	ISM(Intrusion sensor module)	Erase fault codes
XJ	2002-2005	Normally Aspirated V8 3.5L	ISM(Intrusion sensor module)	Live Data
XJ	2002-2005	Normally Aspirated V8 3.5L	PAM(Parking aid control module)	Read fault codes
XJ	2002-2005	Normally Aspirated V8 3.5L	PAM(Parking aid control module)	Erase fault codes
XJ	2002-2005	Normally Aspirated V8 3.5L	PAM(Parking aid control module)	Live Data
XJ	2002-2005	Normally Aspirated V8 3.5L	AMP(Amplifier)	Read fault codes
XJ	2002-2005	Normally Aspirated V8 3.5L	AMP(Amplifier)	Erase fault codes
XJ	2002-2005	Normally Aspirated V8 3.5L	AMP(Amplifier)	Live Data
XJ	2002-2005	Normally Aspirated V8 3.5L	CPM(Cellular telephone control module)	Read fault codes
XJ	2002-2005	Normally Aspirated V8 3.5L	CPM(Cellular telephone control module)	Erase fault codes
XJ	2002-2005	Normally Aspirated V8 3.5L	CPM(Cellular telephone control module)	Live Data
XJ	2002-2005	Normally Aspirated V8 3.5L	RET(M Rear entertainment control module)	Read fault codes
XJ	2002-2005	Normally Aspirated V8 3.5L	RET(M Rear entertainment control module)	Erase fault codes
XJ	2002-2005	Normally Aspirated V8 3.5L	RET(M Rear entertainment control module)	Live Data
XJ	2002-2005	Normally Aspirated V8 3.5L	VACM(Voice activation control module)	Read fault codes
XJ	2002-2005	Normally Aspirated V8 3.5L	VACM(Voice activation control module)	Erase fault codes
XJ	2002-2005	Normally Aspirated V8 3.5L	VACM(Voice activation control module)	Live Data
XJ	2002-2005	Normally Aspirated V8 3.5L	Special Function	Manual oil reset
XJ	2002-2005	Normally Aspirated V8 3.5L	Special Function	Oil dilution reset
XJ	2002-2005	Normally Aspirated V8 4.2L	ECM(Engine control module)	Read fault codes
XJ	2002-2005	Normally Aspirated V8 4.2L	ECM(Engine control module)	Erase fault codes
XJ	2002-2005	Normally Aspirated V8 4.2L	ECM(Engine control module)	Live Data
XJ	2002-2005	Normally Aspirated V8 4.2L	TCM(Transmission control module)	Read fault codes
XJ	2002-2005	Normally Aspirated V8 4.2L	TCM(Transmission control module)	Erase fault codes
XJ	2002-2005	Normally Aspirated V8 4.2L	TCM(Transmission control module)	Live Data
XJ	2002-2005	Normally Aspirated V8 4.2L	ABS(Anti-lock braking system)	Read fault codes
XJ	2002-2005	Normally Aspirated V8 4.2L	ABS(Anti-lock braking system)	Erase fault codes
XJ	2002-2005	Normally Aspirated V8 4.2L	ABS(Anti-lock braking system)	Live Data
XJ	2002-2005	Normally Aspirated V8 4.2L	IP(Instrument pack)	Read fault codes
XJ	2002-2005	Normally Aspirated V8 4.2L	IP(Instrument pack)	Erase fault codes
XJ	2002-2005	Normally Aspirated V8 4.2L	IP(Instrument pack)	Live Data
XJ	2002-2005	Normally Aspirated V8 4.2L	ACC(Adaptive speed control control module)	Read fault codes
XJ	2002-2005	Normally Aspirated V8 4.2L	ACC(Adaptive speed control control module)	Erase fault codes
XJ	2002-2005	Normally Aspirated V8 4.2L	ACC(Adaptive speed control control module)	Live Data
XJ	2002-2005	Normally Aspirated V8 4.2L	ASU(Air suspension module)	Read fault codes
XJ	2002-2005	Normally Aspirated V8 4.2L	ASU(Air suspension module)	Erase fault codes
XJ	2002-2005	Normally Aspirated V8 4.2L	ASU(Air suspension module)	Live Data
XJ	2002-2005	Normally Aspirated V8 4.2L	ATC(Climate control module)	Read fault codes
XJ	2002-2005	Normally Aspirated V8 4.2L	ATC(Climate control module)	Erase fault codes
XJ	2002-2005	Normally Aspirated V8 4.2L	ATC(Climate control module)	Live Data
XJ	2002-2005	Normally Aspirated V8 4.2L	RATC(Rear climate control module)	Read fault codes
XJ	2002-2005	Normally Aspirated V8 4.2L	RATC(Rear climate control module)	Erase fault codes
XJ	2002-2005	Normally Aspirated V8 4.2L	RATC(Rear climate control module)	Live Data
XJ	2002-2005	Normally Aspirated V8 4.2L	DDM(Driver's door module)	Read fault codes
XJ	2002-2005	Normally Aspirated V8 4.2L	DDM(Driver's door module)	Erase fault codes
XJ	2002-2005	Normally Aspirated V8 4.2L	DDM(Driver's door module)	Live Data
XJ	2002-2005	Normally Aspirated V8 4.2L	DSM(Driver's seat module)	Read fault codes
XJ	2002-2005	Normally Aspirated V8 4.2L	DSM(Driver's seat module)	Erase fault codes
XJ	2002-2005	Normally Aspirated V8 4.2L	DSM(Driver's seat module)	Live Data
XJ	2002-2005	Normally Aspirated V8 4.2L	EPB(Electronic parking brake)	Read fault codes
XJ	2002-2005	Normally Aspirated V8 4.2L	EPB(Electronic parking brake)	Erase fault codes
XJ	2002-2005	Normally Aspirated V8 4.2L	EPB(Electronic parking brake)	Live Data
XJ	2002-2005	Normally Aspirated V8 4.2L	GEM(General electronics control module)	Read fault codes
XJ	2002-2005	Normally Aspirated V8 4.2L	GEM(General electronics control module)	Erase fault codes
XJ	2002-2005	Normally Aspirated V8 4.2L	GEM(General electronics control module)	Live Data
XJ	2002-2005	Normally Aspirated V8 4.2L	NAV(Navigation control module)	Read fault codes

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XJ	2002-2005	Normally Aspirated V8 4.2L	NAV(Navigation control module)	Erase fault codes
XJ	2002-2005	Normally Aspirated V8 4.2L	NAV(Navigation control module)	Live Data
XJ	2002-2005	Normally Aspirated V8 4.2L	REM(Rear electronic control module)	Read fault codes
XJ	2002-2005	Normally Aspirated V8 4.2L	REM(Rear electronic control module)	Erase fault codes
XJ	2002-2005	Normally Aspirated V8 4.2L	REM(Rear electronic control module)	Live Data
XJ	2002-2005	Normally Aspirated V8 4.2L	RSM(Rear seat control module)	Read fault codes
XJ	2002-2005	Normally Aspirated V8 4.2L	RSM(Rear seat control module)	Erase fault codes
XJ	2002-2005	Normally Aspirated V8 4.2L	RSM(Rear seat control module)	Live Data
XJ	2002-2005	Normally Aspirated V8 4.2L	SCLM(Steering column lock module)	Read fault codes
XJ	2002-2005	Normally Aspirated V8 4.2L	SCLM(Steering column lock module)	Erase fault codes
XJ	2002-2005	Normally Aspirated V8 4.2L	SCLM(Steering column lock module)	Live Data
XJ	2002-2005	Normally Aspirated V8 4.2L	FETM(Audio unit)	Read fault codes
XJ	2002-2005	Normally Aspirated V8 4.2L	FETM(Audio unit)	Erase fault codes
XJ	2002-2005	Normally Aspirated V8 4.2L	FETM(Audio unit)	Live Data
XJ	2002-2005	Normally Aspirated V8 4.2L	ADHLS L(Left lighting control module)	Read fault codes
XJ	2002-2005	Normally Aspirated V8 4.2L	ADHLS L(Left lighting control module)	Erase fault codes
XJ	2002-2005	Normally Aspirated V8 4.2L	ADHLS L(Left lighting control module)	Live Data
XJ	2002-2005	Normally Aspirated V8 4.2L	ADHLS R(Right lighting control module)	Read fault codes
XJ	2002-2005	Normally Aspirated V8 4.2L	ADHLS R(Right lighting control module)	Erase fault codes
XJ	2002-2005	Normally Aspirated V8 4.2L	ADHLS R(Right lighting control module)	Live Data
XJ	2002-2005	Normally Aspirated V8 4.2L	ARM(Restraints control module)	Read fault codes
XJ	2002-2005	Normally Aspirated V8 4.2L	ARM(Restraints control module)	Erase fault codes
XJ	2002-2005	Normally Aspirated V8 4.2L	ARM(Restraints control module)	Live Data
XJ	2002-2005	Normally Aspirated V8 4.2L	ISM(Intrusion sensor module)	Read fault codes
XJ	2002-2005	Normally Aspirated V8 4.2L	ISM(Intrusion sensor module)	Erase fault codes
XJ	2002-2005	Normally Aspirated V8 4.2L	ISM(Intrusion sensor module)	Live Data
XJ	2002-2005	Normally Aspirated V8 4.2L	PAM(Parking aid control module)	Read fault codes
XJ	2002-2005	Normally Aspirated V8 4.2L	PAM(Parking aid control module)	Erase fault codes
XJ	2002-2005	Normally Aspirated V8 4.2L	PAM(Parking aid control module)	Live Data
XJ	2002-2005	Normally Aspirated V8 4.2L	AMP(Amplifier)	Read fault codes
XJ	2002-2005	Normally Aspirated V8 4.2L	AMP(Amplifier)	Erase fault codes
XJ	2002-2005	Normally Aspirated V8 4.2L	AMP(Amplifier)	Live Data
XJ	2002-2005	Normally Aspirated V8 4.2L	CPM(Cellular telephone control module)	Read fault codes
XJ	2002-2005	Normally Aspirated V8 4.2L	CPM(Cellular telephone control module)	Erase fault codes
XJ	2002-2005	Normally Aspirated V8 4.2L	CPM(Cellular telephone control module)	Live Data
XJ	2002-2005	Normally Aspirated V8 4.2L	RETM(Rear entertainment control module)	Read fault codes
XJ	2002-2005	Normally Aspirated V8 4.2L	RETM(Rear entertainment control module)	Erase fault codes
XJ	2002-2005	Normally Aspirated V8 4.2L	RETM(Rear entertainment control module)	Live Data
XJ	2002-2005	Normally Aspirated V8 4.2L	VACM(Voice activation control module)	Read fault codes
XJ	2002-2005	Normally Aspirated V8 4.2L	VACM(Voice activation control module)	Erase fault codes
XJ	2002-2005	Normally Aspirated V8 4.2L	VACM(Voice activation control module)	Live Data
XJ	2002-2005	Normally Aspirated V8 4.2L	Special Function	Manual oil reset
XJ	2002-2005	Normally Aspirated V8 4.2L	Special Function	Oil dilution reset
F-Type	2016-	Supercharged V8 5.0L engine	PCM(Powertrain control module)	ECU information
F-Type	2016-	Supercharged V8 5.0L engine	PCM(Powertrain control module)	Read fault codes
F-Type	2016-	Supercharged V8 5.0L engine	PCM(Powertrain control module)	Erase fault codes
F-Type	2016-	Supercharged V8 5.0L engine	PCM(Powertrain control module)	Live Data
F-Type	2016-	Supercharged V8 5.0L engine	TCM(Transmission control module)	ECU information
F-Type	2016-	Supercharged V8 5.0L engine	TCM(Transmission control module)	Read fault codes
F-Type	2016-	Supercharged V8 5.0L engine	TCM(Transmission control module)	Erase fault codes
F-Type	2016-	Supercharged V8 5.0L engine	TCM(Transmission control module)	Live Data
F-Type	2016-	Supercharged V8 5.0L engine	ABS(ABS control module)	ECU information
F-Type	2016-	Supercharged V8 5.0L engine	ABS(ABS control module)	Read fault codes
F-Type	2016-	Supercharged V8 5.0L engine	ABS(ABS control module)	Erase fault codes
F-Type	2016-	Supercharged V8 5.0L engine	ABS(ABS control module)	Live Data
F-Type	2016-	Supercharged V8 5.0L engine	RCM(Restraints control module)	ECU information
F-Type	2016-	Supercharged V8 5.0L engine	RCM(Restraints control module)	Read fault codes
F-Type	2016-	Supercharged V8 5.0L engine	RCM(Restraints control module)	Erase fault codes
F-Type	2016-	Supercharged V8 5.0L engine	RCM(Restraints control module)	Live Data
F-Type	2016-	Supercharged V8 5.0L engine	IPC(Instrument cluster control module)	ECU information
F-Type	2016-	Supercharged V8 5.0L engine	IPC(Instrument cluster control module)	Read fault codes
F-Type	2016-	Supercharged V8 5.0L engine	IPC(Instrument cluster control module)	Erase fault codes
F-Type	2016-	Supercharged V8 5.0L engine	IPC(Instrument cluster control module)	Live Data
F-Type	2016-	Supercharged V8 5.0L engine	BCM(Body control module)	ECU information
F-Type	2016-	Supercharged V8 5.0L engine	BCM(Body control module)	Read fault codes
F-Type	2016-	Supercharged V8 5.0L engine	BCM(Body control module)	Erase fault codes
F-Type	2016-	Supercharged V8 5.0L engine	BCM(Body control module)	Live Data
F-Type	2016-	Supercharged V8 5.0L engine	GSM(Gear shift module)	ECU information
F-Type	2016-	Supercharged V8 5.0L engine	GSM(Gear shift module)	Read fault codes
F-Type	2016-	Supercharged V8 5.0L engine	GSM(Gear shift module)	Erase fault codes
F-Type	2016-	Supercharged V8 5.0L engine	GSM(Gear shift module)	Live Data
F-Type	2016-	Supercharged V8 5.0L engine	GWM(Gateway module)	ECU information
F-Type	2016-	Supercharged V8 5.0L engine	GWM(Gateway module)	Read fault codes
F-Type	2016-	Supercharged V8 5.0L engine	GWM(Gateway module)	Erase fault codes
F-Type	2016-	Supercharged V8 5.0L engine	GWM(Gateway module)	Live Data
F-Type	2016-	Supercharged V8 5.0L engine	HCM(Headlamp control module)	ECU information
F-Type	2016-	Supercharged V8 5.0L engine	HCM(Headlamp control module)	Read fault codes
F-Type	2016-	Supercharged V8 5.0L engine	HCM(Headlamp control module)	Erase fault codes
F-Type	2016-	Supercharged V8 5.0L engine	HCM(Headlamp control module)	Live Data
F-Type	2016-	Supercharged V8 5.0L engine	RDCM(Rear differential control module)	ECU information
F-Type	2016-	Supercharged V8 5.0L engine	RDCM(Rear differential control module)	Read fault codes
F-Type	2016-	Supercharged V8 5.0L engine	RDCM(Rear differential control module)	Erase fault codes
F-Type	2016-	Supercharged V8 5.0L engine	RDCM(Rear differential control module)	Live Data
F-Type	2016-	Supercharged V8 5.0L engine	TCCM(Transfer case control module)	ECU information
F-Type	2016-	Supercharged V8 5.0L engine	TCCM(Transfer case control module)	Read fault codes
F-Type	2016-	Supercharged V8 5.0L engine	TCCM(Transfer case control module)	Erase fault codes
F-Type	2016-	Supercharged V8 5.0L engine	TCCM(Transfer case control module)	Live Data
F-Type	2016-	Supercharged V8 5.0L engine	TCU(Telematic control unit module)	ECU information
F-Type	2016-	Supercharged V8 5.0L engine	TCU(Telematic control unit module)	Read fault codes
F-Type	2016-	Supercharged V8 5.0L engine	TCU(Telematic control unit module)	Erase fault codes
F-Type	2016-	Supercharged V8 5.0L engine	TCU(Telematic control unit module)	Live Data
F-Type	2016-	Supercharged V8 5.0L engine	TPM(Tire pressure monitor module)	ECU information

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
F-Type	2016-	Supercharged V8 5.0L engine	TPM(Tire pressure monitor module)	Read fault codes
F-Type	2016-	Supercharged V8 5.0L engine	TPM(Tire pressure monitor module)	Erase fault codes
F-Type	2016-	Supercharged V8 5.0L engine	TPM(Tire pressure monitor module)	Live Data
F-Type	2016-	Supercharged V8 5.0L engine	VIM(Vehicle immobilizer control module)	ECU information
F-Type	2016-	Supercharged V8 5.0L engine	VIM(Vehicle immobilizer control module)	Read fault codes
F-Type	2016-	Supercharged V8 5.0L engine	VIM(Vehicle immobilizer control module)	Erase fault codes
F-Type	2016-	Supercharged V8 5.0L engine	VIM(Vehicle immobilizer control module)	Live Data
F-Type	2016-	Supercharged V8 5.0L engine	ATCM(All terrain control module)	ECU information
F-Type	2016-	Supercharged V8 5.0L engine	ATCM(All terrain control module)	Read fault codes
F-Type	2016-	Supercharged V8 5.0L engine	ATCM(All terrain control module)	Erase fault codes
F-Type	2016-	Supercharged V8 5.0L engine	ATCM(All terrain control module)	Live Data
F-Type	2016-	Supercharged V8 5.0L engine	CHCM(Chassis control module)	ECU information
F-Type	2016-	Supercharged V8 5.0L engine	CHCM(Chassis control module)	Read fault codes
F-Type	2016-	Supercharged V8 5.0L engine	CHCM(Chassis control module)	Erase fault codes
F-Type	2016-	Supercharged V8 5.0L engine	CHCM(Chassis control module)	Live Data
F-Type	2016-	Supercharged V8 5.0L engine	FTCM(Folding top control module)	ECU information
F-Type	2016-	Supercharged V8 5.0L engine	FTCM(Folding top control module)	Read fault codes
F-Type	2016-	Supercharged V8 5.0L engine	FTCM(Folding top control module)	Erase fault codes
F-Type	2016-	Supercharged V8 5.0L engine	FTCM(Folding top control module)	Live Data
F-Type	2016-	Supercharged V8 5.0L engine	FTCMB(Folding top control module B)	ECU information
F-Type	2016-	Supercharged V8 5.0L engine	FTCMB(Folding top control module B)	Read fault codes
F-Type	2016-	Supercharged V8 5.0L engine	FTCMB(Folding top control module B)	Erase fault codes
F-Type	2016-	Supercharged V8 5.0L engine	FTCMB(Folding top control module B)	Live Data
F-Type	2016-	Supercharged V8 5.0L engine	IPMA(Image processing control module A)	ECU information
F-Type	2016-	Supercharged V8 5.0L engine	IPMA(Image processing control module A)	Read fault codes
F-Type	2016-	Supercharged V8 5.0L engine	IPMA(Image processing control module A)	Erase fault codes
F-Type	2016-	Supercharged V8 5.0L engine	IPMA(Image processing control module A)	Live Data
F-Type	2016-	Supercharged V8 5.0L engine	OCS(Restraints occupant classification system module)	ECU information
F-Type	2016-	Supercharged V8 5.0L engine	OCS(Restraints occupant classification system module)	Read fault codes
F-Type	2016-	Supercharged V8 5.0L engine	OCS(Restraints occupant classification system module)	Erase fault codes
F-Type	2016-	Supercharged V8 5.0L engine	OCS(Restraints occupant classification system module)	Live Data
F-Type	2016-	Supercharged V8 5.0L engine	PAM(Parking assist control module)	ECU information
F-Type	2016-	Supercharged V8 5.0L engine	PAM(Parking assist control module)	Read fault codes
F-Type	2016-	Supercharged V8 5.0L engine	PAM(Parking assist control module)	Erase fault codes
F-Type	2016-	Supercharged V8 5.0L engine	PAM(Parking assist control module)	Live Data
F-Type	2016-	Supercharged V8 5.0L engine	PBM(Parking brake control module)	ECU information
F-Type	2016-	Supercharged V8 5.0L engine	PBM(Parking brake control module)	Read fault codes
F-Type	2016-	Supercharged V8 5.0L engine	PBM(Parking brake control module)	Erase fault codes
F-Type	2016-	Supercharged V8 5.0L engine	PBM(Parking brake control module)	Live Data
F-Type	2016-	Supercharged V8 5.0L engine	PSCM(Power steering control module)	ECU information
F-Type	2016-	Supercharged V8 5.0L engine	PSCM(Power steering control module)	Read fault codes
F-Type	2016-	Supercharged V8 5.0L engine	PSCM(Power steering control module)	Erase fault codes
F-Type	2016-	Supercharged V8 5.0L engine	PSCM(Power steering control module)	Live Data
F-Type	2016-	Supercharged V8 5.0L engine	SASM(Steering angle sensor module)	ECU information
F-Type	2016-	Supercharged V8 5.0L engine	SASM(Steering angle sensor module)	Read fault codes
F-Type	2016-	Supercharged V8 5.0L engine	SASM(Steering angle sensor module)	Erase fault codes
F-Type	2016-	Supercharged V8 5.0L engine	SASM(Steering angle sensor module)	Live Data
F-Type	2016-	Supercharged V8 5.0L engine	DDM(Driver's door module)	ECU information
F-Type	2016-	Supercharged V8 5.0L engine	DDM(Driver's door module)	Read fault codes
F-Type	2016-	Supercharged V8 5.0L engine	DDM(Driver's door module)	Erase fault codes
F-Type	2016-	Supercharged V8 5.0L engine	DDM(Driver's door module)	Live Data
F-Type	2016-	Supercharged V8 5.0L engine	DSM(Driver's seat module)	ECU information
F-Type	2016-	Supercharged V8 5.0L engine	DSM(Driver's seat module)	Read fault codes
F-Type	2016-	Supercharged V8 5.0L engine	DSM(Driver's seat module)	Erase fault codes
F-Type	2016-	Supercharged V8 5.0L engine	DSM(Driver's seat module)	Live Data
F-Type	2016-	Supercharged V8 5.0L engine	PDM(Passenger's door module)	ECU information
F-Type	2016-	Supercharged V8 5.0L engine	PDM(Passenger's door module)	Read fault codes
F-Type	2016-	Supercharged V8 5.0L engine	PDM(Passenger's door module)	Erase fault codes
F-Type	2016-	Supercharged V8 5.0L engine	PDM(Passenger's door module)	Live Data
F-Type	2016-	Supercharged V8 5.0L engine	PSM(Passenger's seat module)	ECU information
F-Type	2016-	Supercharged V8 5.0L engine	PSM(Passenger's seat module)	Read fault codes
F-Type	2016-	Supercharged V8 5.0L engine	PSM(Passenger's seat module)	Erase fault codes
F-Type	2016-	Supercharged V8 5.0L engine	PSM(Passenger's seat module)	Live Data
F-Type	2016-	Supercharged V8 5.0L engine	RFA(Keyless vehicle module)	ECU information
F-Type	2016-	Supercharged V8 5.0L engine	RFA(Keyless vehicle module)	Read fault codes
F-Type	2016-	Supercharged V8 5.0L engine	RFA(Keyless vehicle module)	Erase fault codes
F-Type	2016-	Supercharged V8 5.0L engine	RFA(Keyless vehicle module)	Live Data
F-Type	2016-	Supercharged V8 5.0L engine	RGTM(Rear gate / trunk module)	ECU information
F-Type	2016-	Supercharged V8 5.0L engine	RGTM(Rear gate / trunk module)	Read fault codes
F-Type	2016-	Supercharged V8 5.0L engine	RGTM(Rear gate / trunk module)	Erase fault codes
F-Type	2016-	Supercharged V8 5.0L engine	RGTM(Rear gate / trunk module)	Live Data
F-Type	2016-	Supercharged V8 5.0L engine	AHU(InControl Touch audio head unit)	ECU information
F-Type	2016-	Supercharged V8 5.0L engine	AHU(InControl Touch audio head unit)	Read fault codes
F-Type	2016-	Supercharged V8 5.0L engine	AHU(InControl Touch audio head unit)	Erase fault codes
F-Type	2016-	Supercharged V8 5.0L engine	CAV(Connect and view module)	ECU information
F-Type	2016-	Supercharged V8 5.0L engine	CAV(Connect and view module)	Read fault codes
F-Type	2016-	Supercharged V8 5.0L engine	CAV(Connect and view module)	Erase fault codes
F-Type	2016-	Supercharged V8 5.0L engine	CAV(Connect and view module)	Live Data
F-Type	2016-	Supercharged V8 5.0L engine	FCDIM(Front control/display interface module (high level display front))	ECU information
F-Type	2016-	Supercharged V8 5.0L engine	FCDIM(Front control/display interface module (high level display front))	Read fault codes
F-Type	2016-	Supercharged V8 5.0L engine	FCDIM(Front control/display interface module (high level display front))	Erase fault codes
F-Type	2016-	Supercharged V8 5.0L engine	FCDIM(Front control/display interface module (high level display front))	Live Data
F-Type	2016-	Supercharged V8 5.0L engine	FCIM(Integrated control panel)	ECU information
F-Type	2016-	Supercharged V8 5.0L engine	FCIM(Integrated control panel)	Read fault codes

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
F-Type	2016-	Supercharged V8 5.0L engine	FCIM(Integrated control panel)	Erase fault codes
F-Type	2016-	Supercharged V8 5.0L engine	FCIM(Integrated control panel)	Live Data
F-Type	2016-	Supercharged V8 5.0L engine	HVAC(Heating ventilation and air conditioning control module)	ECU information
F-Type	2016-	Supercharged V8 5.0L engine	HVAC(Heating ventilation and air conditioning control module)	Read fault codes
F-Type	2016-	Supercharged V8 5.0L engine	HVAC(Heating ventilation and air conditioning control module)	Erase fault codes
F-Type	2016-	Supercharged V8 5.0L engine	HVAC(Heating ventilation and air conditioning control module)	Live Data
F-Type	2016-	Supercharged V8 5.0L engine	IPMB(Image processing module B)	ECU information
F-Type	2016-	Supercharged V8 5.0L engine	IPMB(Image processing module B)	Read fault codes
F-Type	2016-	Supercharged V8 5.0L engine	IPMB(Image processing module B)	Erase fault codes
F-Type	2016-	Supercharged V8 5.0L engine	NAV(Navigation control module)	ECU information
F-Type	2016-	Supercharged V8 5.0L engine	NAV(Navigation control module)	Read fault codes
F-Type	2016-	Supercharged V8 5.0L engine	NAV(Navigation control module)	Erase fault codes
F-Type	2016-	Supercharged V8 5.0L engine	SODL(Side object detection control module - Left)	ECU information
F-Type	2016-	Supercharged V8 5.0L engine	SODL(Side object detection control module - Left)	Read fault codes
F-Type	2016-	Supercharged V8 5.0L engine	SODL(Side object detection control module - Left)	Erase fault codes
F-Type	2016-	Supercharged V8 5.0L engine	SODL(Side object detection control module - Left)	Live Data
F-Type	2016-	Supercharged V8 5.0L engine	SODR(Side object detection control module - Right)	ECU information
F-Type	2016-	Supercharged V8 5.0L engine	SODR(Side object detection control module - Right)	Read fault codes
F-Type	2016-	Supercharged V8 5.0L engine	SODR(Side object detection control module - Right)	Erase fault codes
F-Type	2016-	Supercharged V8 5.0L engine	SODR(Side object detection control module - Right)	Live Data
F-Type	2016-	Supercharged V8 5.0L engine	AAM(Audio amplifier module)	ECU information
F-Type	2016-	Supercharged V8 5.0L engine	AAM(Audio amplifier module)	Read fault codes
F-Type	2016-	Supercharged V8 5.0L engine	AAM(Audio amplifier module)	Erase fault codes
F-Type	2016-	Supercharged V8 5.0L engine	AAM(Audio amplifier module)	Live Data
F-Type	2016-	Supercharged V8 5.0L engine	ACM(Audio front control module)	ECU information
F-Type	2016-	Supercharged V8 5.0L engine	ACM(Audio front control module)	Read fault codes
F-Type	2016-	Supercharged V8 5.0L engine	ACM(Audio front control module)	Erase fault codes
F-Type	2016-	Supercharged V8 5.0L engine	ACM(Audio front control module)	Live Data
F-Type	2016-	Supercharged V8 5.0L engine	DABM(Digital audio broadcast module)	ECU information
F-Type	2016-	Supercharged V8 5.0L engine	DABM(Digital audio broadcast module)	Read fault codes
F-Type	2016-	Supercharged V8 5.0L engine	DABM(Digital audio broadcast module)	Erase fault codes
F-Type	2016-	Supercharged V8 5.0L engine	DABM(Digital audio broadcast module)	Live Data
F-Type	2016-	Supercharged V8 5.0L engine	NCM(Navigation control module)	ECU information
F-Type	2016-	Supercharged V8 5.0L engine	NCM(Navigation control module)	Read fault codes
F-Type	2016-	Supercharged V8 5.0L engine	NCM(Navigation control module)	Erase fault codes
F-Type	2016-	Supercharged V8 5.0L engine	NCM(Navigation control module)	Live Data
F-Type	2016-	Supercharged V8 5.0L engine	SRM(Satellite audio unit module)	ECU information
F-Type	2016-	Supercharged V8 5.0L engine	SRM(Satellite audio unit module)	Read fault codes
F-Type	2016-	Supercharged V8 5.0L engine	SRM(Satellite audio unit module)	Erase fault codes
F-Type	2016-	Supercharged V8 5.0L engine	SRM(Satellite audio unit module)	Live Data
F-Type	2016-	Supercharged V8 5.0L engine	TVM(Television module)	ECU information
F-Type	2016-	Supercharged V8 5.0L engine	TVM(Television module)	Read fault codes
F-Type	2016-	Supercharged V8 5.0L engine	TVM(Television module)	Erase fault codes
F-Type	2016-	Supercharged V8 5.0L engine	TVM(Television module)	Live Data
F-Type	2016-	Supercharged V8 5.0L engine	Special Function	Manual oil reset
F-Type	2016-	Supercharged V8 5.0L engine	Special Function	Oil change reset
F-Type	2016-	Supercharged V8 5.0L engine	Special Function	Oil service counter reset
F-Type	2016-	Supercharged V8 5.0L engine	Special Function	Service interval reset
F-Type	2016-	Supercharged V8 5.0L engine	Special Function	Idle speed test
F-Type	2016-	Supercharged V8 5.0L engine	Special Function	Injector valve test
F-Type	2016-	Supercharged V8 5.0L engine	Special Function	Throttle valve actuator replacement
F-Type	2016-	Supercharged V8 5.0L engine	Special Function	Parking brake activation
F-Type	2016-	Supercharged V8 5.0L engine	Special Function	Parking brake pad replacement - Exit maintenance mode application
F-Type	2016-	Supercharged V8 5.0L engine	Special Function	Parking brake pad replacement - Release to service position
F-Type	2016-	Supercharged V8 5.0L engine	Special Function	Lock steering tune to vehicle
F-Type	2016-	Supercharged V8 5.0L engine	Special Function	Power steering soft-lock end stops reset routine
F-Type	2016-	Supercharged V8 5.0L engine	Special Function	Steering column calibration
F-Type	2016-	Supercharged V8 5.0L engine	Special Function	Tire pressure monitor sensor identification display
F-Type	2016-	Supercharged V8 5.0L engine	Special Function	Tire pressure sensor replacement
F-Type	2016-	Supercharged V8 5.0L engine	Special Function	Headlamp control module system calibration
F-Type	2016-	Supercharged V8 5.0L engine	Special Function	Battery replacement
F-Type	2016-	Supercharged V8 5.0L engine	Special Function	Telematics control module battery replacement reset
F-Type	2016-	Supercharged V8 5.0L engine	Special Function	Seat cushion replacement
F-Type	2016-	Supercharged V8 5.0L engine	Special Function	Driver's seat calibration
F-Type	2016-	Supercharged V8 5.0L engine	Special Function	Passenger's seat calibration
F-Type	2016-	Supercharged V8 5.0L engine	Special Function	Driver's side - Door glass window calibration
F-Type	2016-	Supercharged V8 5.0L engine	Special Function	Passenger's side - Door glass window calibration
F-Type	2016-	Supercharged V8 5.0L engine	Special Function	Tailgate/trunk calibration
F-Type	2016-	Supercharged V6 3.0L engine	PCM(Powertrain control module)	ECU information
F-Type	2016-	Supercharged V6 3.0L engine	PCM(Powertrain control module)	Read fault codes
F-Type	2016-	Supercharged V6 3.0L engine	PCM(Powertrain control module)	Erase fault codes
F-Type	2016-	Supercharged V6 3.0L engine	PCM(Powertrain control module)	Live Data
F-Type	2016-	Supercharged V6 3.0L engine	TCM(Transmission control module)	ECU information



## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
F-Type	2016-	Supercharged V6 3.0L engine	TCM(Transmission control module)	Read fault codes
F-Type	2016-	Supercharged V6 3.0L engine	TCM(Transmission control module)	Erase fault codes
F-Type	2016-	Supercharged V6 3.0L engine	TCM(Transmission control module)	Live Data
F-Type	2016-	Supercharged V6 3.0L engine	ABS(ABS control module)	ECU information
F-Type	2016-	Supercharged V6 3.0L engine	ABS(ABS control module)	Read fault codes
F-Type	2016-	Supercharged V6 3.0L engine	ABS(ABS control module)	Erase fault codes
F-Type	2016-	Supercharged V6 3.0L engine	ABS(ABS control module)	Live Data
F-Type	2016-	Supercharged V6 3.0L engine	RCM(Restraints control module)	ECU information
F-Type	2016-	Supercharged V6 3.0L engine	RCM(Restraints control module)	Read fault codes
F-Type	2016-	Supercharged V6 3.0L engine	RCM(Restraints control module)	Erase fault codes
F-Type	2016-	Supercharged V6 3.0L engine	RCM(Restraints control module)	Live Data
F-Type	2016-	Supercharged V6 3.0L engine	IPC(Instrument cluster control module)	ECU information
F-Type	2016-	Supercharged V6 3.0L engine	IPC(Instrument cluster control module)	Read fault codes
F-Type	2016-	Supercharged V6 3.0L engine	IPC(Instrument cluster control module)	Erase fault codes
F-Type	2016-	Supercharged V6 3.0L engine	IPC(Instrument cluster control module)	Live Data
F-Type	2016-	Supercharged V6 3.0L engine	BCM(Body control module)	ECU information
F-Type	2016-	Supercharged V6 3.0L engine	BCM(Body control module)	Read fault codes
F-Type	2016-	Supercharged V6 3.0L engine	BCM(Body control module)	Erase fault codes
F-Type	2016-	Supercharged V6 3.0L engine	BCM(Body control module)	Live Data
F-Type	2016-	Supercharged V6 3.0L engine	GSM(Gear shift module)	ECU information
F-Type	2016-	Supercharged V6 3.0L engine	GSM(Gear shift module)	Read fault codes
F-Type	2016-	Supercharged V6 3.0L engine	GSM(Gear shift module)	Erase fault codes
F-Type	2016-	Supercharged V6 3.0L engine	GSM(Gear shift module)	Live Data
F-Type	2016-	Supercharged V6 3.0L engine	GWM(Gateway module)	ECU information
F-Type	2016-	Supercharged V6 3.0L engine	GWM(Gateway module)	Read fault codes
F-Type	2016-	Supercharged V6 3.0L engine	GWM(Gateway module)	Erase fault codes
F-Type	2016-	Supercharged V6 3.0L engine	GWM(Gateway module)	Live Data
F-Type	2016-	Supercharged V6 3.0L engine	HCM(Headlamp control module)	ECU information
F-Type	2016-	Supercharged V6 3.0L engine	HCM(Headlamp control module)	Read fault codes
F-Type	2016-	Supercharged V6 3.0L engine	HCM(Headlamp control module)	Erase fault codes
F-Type	2016-	Supercharged V6 3.0L engine	HCM(Headlamp control module)	Live Data
F-Type	2016-	Supercharged V6 3.0L engine	RDCM(Rear differential control module)	ECU information
F-Type	2016-	Supercharged V6 3.0L engine	RDCM(Rear differential control module)	Read fault codes
F-Type	2016-	Supercharged V6 3.0L engine	RDCM(Rear differential control module)	Erase fault codes
F-Type	2016-	Supercharged V6 3.0L engine	RDCM(Rear differential control module)	Live Data
F-Type	2016-	Supercharged V6 3.0L engine	TCCM(Transfer case control module)	ECU information
F-Type	2016-	Supercharged V6 3.0L engine	TCCM(Transfer case control module)	Read fault codes
F-Type	2016-	Supercharged V6 3.0L engine	TCCM(Transfer case control module)	Erase fault codes
F-Type	2016-	Supercharged V6 3.0L engine	TCCM(Transfer case control module)	Live Data
F-Type	2016-	Supercharged V6 3.0L engine	TCU(Telematic control unit module)	ECU information
F-Type	2016-	Supercharged V6 3.0L engine	TCU(Telematic control unit module)	Read fault codes
F-Type	2016-	Supercharged V6 3.0L engine	TCU(Telematic control unit module)	Erase fault codes
F-Type	2016-	Supercharged V6 3.0L engine	TCU(Telematic control unit module)	Live Data
F-Type	2016-	Supercharged V6 3.0L engine	TPM(Tire pressure monitor module)	ECU information
F-Type	2016-	Supercharged V6 3.0L engine	TPM(Tire pressure monitor module)	Read fault codes
F-Type	2016-	Supercharged V6 3.0L engine	TPM(Tire pressure monitor module)	Erase fault codes
F-Type	2016-	Supercharged V6 3.0L engine	TPM(Tire pressure monitor module)	Live Data
F-Type	2016-	Supercharged V6 3.0L engine	VIM(Vehicle immobilizer control module)	ECU information
F-Type	2016-	Supercharged V6 3.0L engine	VIM(Vehicle immobilizer control module)	Read fault codes
F-Type	2016-	Supercharged V6 3.0L engine	VIM(Vehicle immobilizer control module)	Erase fault codes
F-Type	2016-	Supercharged V6 3.0L engine	VIM(Vehicle immobilizer control module)	Live Data
F-Type	2016-	Supercharged V6 3.0L engine	ATCM(All terrain control module)	ECU information
F-Type	2016-	Supercharged V6 3.0L engine	ATCM(All terrain control module)	Read fault codes
F-Type	2016-	Supercharged V6 3.0L engine	ATCM(All terrain control module)	Erase fault codes
F-Type	2016-	Supercharged V6 3.0L engine	ATCM(All terrain control module)	Live Data
F-Type	2016-	Supercharged V6 3.0L engine	CHCM(Chassis control module)	ECU information
F-Type	2016-	Supercharged V6 3.0L engine	CHCM(Chassis control module)	Read fault codes
F-Type	2016-	Supercharged V6 3.0L engine	CHCM(Chassis control module)	Erase fault codes
F-Type	2016-	Supercharged V6 3.0L engine	CHCM(Chassis control module)	Live Data
F-Type	2016-	Supercharged V6 3.0L engine	FTCM(Folding top control module)	ECU information
F-Type	2016-	Supercharged V6 3.0L engine	FTCM(Folding top control module)	Read fault codes
F-Type	2016-	Supercharged V6 3.0L engine	FTCM(Folding top control module)	Erase fault codes
F-Type	2016-	Supercharged V6 3.0L engine	FTCM(Folding top control module)	Live Data
F-Type	2016-	Supercharged V6 3.0L engine	FTCMB(Folding top control module B)	ECU information
F-Type	2016-	Supercharged V6 3.0L engine	FTCMB(Folding top control module B)	Read fault codes
F-Type	2016-	Supercharged V6 3.0L engine	FTCMB(Folding top control module B)	Erase fault codes
F-Type	2016-	Supercharged V6 3.0L engine	FTCMB(Folding top control module B)	Live Data
F-Type	2016-	Supercharged V6 3.0L engine	IPMA(Image processing control module A)	ECU information
F-Type	2016-	Supercharged V6 3.0L engine	IPMA(Image processing control module A)	Read fault codes
F-Type	2016-	Supercharged V6 3.0L engine	IPMA(Image processing control module A)	Erase fault codes
F-Type	2016-	Supercharged V6 3.0L engine	IPMA(Image processing control module A)	Live Data
F-Type	2016-	Supercharged V6 3.0L engine	OCS(Restraints occupant classification system module)	ECU information
F-Type	2016-	Supercharged V6 3.0L engine	OCS(Restraints occupant classification system module)	Read fault codes
F-Type	2016-	Supercharged V6 3.0L engine	OCS(Restraints occupant classification system module)	Erase fault codes
F-Type	2016-	Supercharged V6 3.0L engine	OCS(Restraints occupant classification system module)	Live Data
F-Type	2016-	Supercharged V6 3.0L engine	PAM(Parking assist control module)	ECU information
F-Type	2016-	Supercharged V6 3.0L engine	PAM(Parking assist control module)	Read fault codes
F-Type	2016-	Supercharged V6 3.0L engine	PAM(Parking assist control module)	Erase fault codes
F-Type	2016-	Supercharged V6 3.0L engine	PAM(Parking assist control module)	Live Data
F-Type	2016-	Supercharged V6 3.0L engine	PBM(Parking brake control module)	ECU information
F-Type	2016-	Supercharged V6 3.0L engine	PBM(Parking brake control module)	Read fault codes
F-Type	2016-	Supercharged V6 3.0L engine	PBM(Parking brake control module)	Erase fault codes
F-Type	2016-	Supercharged V6 3.0L engine	PBM(Parking brake control module)	Live Data
F-Type	2016-	Supercharged V6 3.0L engine	PSCM(Power steering control module)	ECU information
F-Type	2016-	Supercharged V6 3.0L engine	PSCM(Power steering control module)	Read fault codes
F-Type	2016-	Supercharged V6 3.0L engine	PSCM(Power steering control module)	Erase fault codes
F-Type	2016-	Supercharged V6 3.0L engine	PSCM(Power steering control module)	Live Data
F-Type	2016-	Supercharged V6 3.0L engine	SASM(Steering angle sensor module)	ECU information

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
F-Type	2016-	Supercharged V6 3.0L engine	SASM(Steering angle sensor module)	Read fault codes
F-Type	2016-	Supercharged V6 3.0L engine	SASM(Steering angle sensor module)	Erase fault codes
F-Type	2016-	Supercharged V6 3.0L engine	SASM(Steering angle sensor module)	Live Data
F-Type	2016-	Supercharged V6 3.0L engine	DDM(Driver's door module)	ECU information
F-Type	2016-	Supercharged V6 3.0L engine	DDM(Driver's door module)	Read fault codes
F-Type	2016-	Supercharged V6 3.0L engine	DDM(Driver's door module)	Erase fault codes
F-Type	2016-	Supercharged V6 3.0L engine	DDM(Driver's door module)	Live Data
F-Type	2016-	Supercharged V6 3.0L engine	DSM(Driver's seat module)	ECU information
F-Type	2016-	Supercharged V6 3.0L engine	DSM(Driver's seat module)	Read fault codes
F-Type	2016-	Supercharged V6 3.0L engine	DSM(Driver's seat module)	Erase fault codes
F-Type	2016-	Supercharged V6 3.0L engine	DSM(Driver's seat module)	Live Data
F-Type	2016-	Supercharged V6 3.0L engine	PDM(Passenger's door module)	ECU information
F-Type	2016-	Supercharged V6 3.0L engine	PDM(Passenger's door module)	Read fault codes
F-Type	2016-	Supercharged V6 3.0L engine	PDM(Passenger's door module)	Erase fault codes
F-Type	2016-	Supercharged V6 3.0L engine	PDM(Passenger's door module)	Live Data
F-Type	2016-	Supercharged V6 3.0L engine	PSM(Passenger's seat module)	ECU information
F-Type	2016-	Supercharged V6 3.0L engine	PSM(Passenger's seat module)	Read fault codes
F-Type	2016-	Supercharged V6 3.0L engine	PSM(Passenger's seat module)	Erase fault codes
F-Type	2016-	Supercharged V6 3.0L engine	PSM(Passenger's seat module)	Live Data
F-Type	2016-	Supercharged V6 3.0L engine	RFA(Keyless vehicle module)	ECU information
F-Type	2016-	Supercharged V6 3.0L engine	RFA(Keyless vehicle module)	Read fault codes
F-Type	2016-	Supercharged V6 3.0L engine	RFA(Keyless vehicle module)	Erase fault codes
F-Type	2016-	Supercharged V6 3.0L engine	RFA(Keyless vehicle module)	Live Data
F-Type	2016-	Supercharged V6 3.0L engine	RGTM(Rear gate / trunk module)	ECU information
F-Type	2016-	Supercharged V6 3.0L engine	RGTM(Rear gate / trunk module)	Read fault codes
F-Type	2016-	Supercharged V6 3.0L engine	RGTM(Rear gate / trunk module)	Erase fault codes
F-Type	2016-	Supercharged V6 3.0L engine	RGTM(Rear gate / trunk module)	Live Data
F-Type	2016-	Supercharged V6 3.0L engine	AHU(InControl Touch audio head unit)	ECU information
F-Type	2016-	Supercharged V6 3.0L engine	AHU(InControl Touch audio head unit)	Read fault codes
F-Type	2016-	Supercharged V6 3.0L engine	AHU(InControl Touch audio head unit)	Erase fault codes
F-Type	2016-	Supercharged V6 3.0L engine	CAV(Connect and view module)	ECU information
F-Type	2016-	Supercharged V6 3.0L engine	CAV(Connect and view module)	Read fault codes
F-Type	2016-	Supercharged V6 3.0L engine	CAV(Connect and view module)	Erase fault codes
F-Type	2016-	Supercharged V6 3.0L engine	CAV(Connect and view module)	Live Data
F-Type	2016-	Supercharged V6 3.0L engine	FCDIM(Front control/display interface module (high level display front))	ECU information
F-Type	2016-	Supercharged V6 3.0L engine	FCDIM(Front control/display interface module (high level display front))	Read fault codes
F-Type	2016-	Supercharged V6 3.0L engine	FCDIM(Front control/display interface module (high level display front))	Erase fault codes
F-Type	2016-	Supercharged V6 3.0L engine	FCDIM(Front control/display interface module (high level display front))	Live Data
F-Type	2016-	Supercharged V6 3.0L engine	FCIM(Integrated control panel)	ECU information
F-Type	2016-	Supercharged V6 3.0L engine	FCIM(Integrated control panel)	Read fault codes
F-Type	2016-	Supercharged V6 3.0L engine	FCIM(Integrated control panel)	Erase fault codes
F-Type	2016-	Supercharged V6 3.0L engine	FCIM(Integrated control panel)	Live Data
F-Type	2016-	Supercharged V6 3.0L engine	HVAC(Heating ventilation and air conditioning control module)	ECU information
F-Type	2016-	Supercharged V6 3.0L engine	HVAC(Heating ventilation and air conditioning control module)	Read fault codes
F-Type	2016-	Supercharged V6 3.0L engine	HVAC(Heating ventilation and air conditioning control module)	Erase fault codes
F-Type	2016-	Supercharged V6 3.0L engine	HVAC(Heating ventilation and air conditioning control module)	Live Data
F-Type	2016-	Supercharged V6 3.0L engine	IPMB(Image processing module B)	ECU information
F-Type	2016-	Supercharged V6 3.0L engine	IPMB(Image processing module B)	Read fault codes
F-Type	2016-	Supercharged V6 3.0L engine	IPMB(Image processing module B)	Erase fault codes
F-Type	2016-	Supercharged V6 3.0L engine	NAV(Navigation control module)	ECU information
F-Type	2016-	Supercharged V6 3.0L engine	NAV(Navigation control module)	Read fault codes
F-Type	2016-	Supercharged V6 3.0L engine	NAV(Navigation control module)	Erase fault codes
F-Type	2016-	Supercharged V6 3.0L engine	SODL(Side object detection control module - Left)	ECU information
F-Type	2016-	Supercharged V6 3.0L engine	SODL(Side object detection control module - Left)	Read fault codes
F-Type	2016-	Supercharged V6 3.0L engine	SODL(Side object detection control module - Left)	Erase fault codes
F-Type	2016-	Supercharged V6 3.0L engine	SODL(Side object detection control module - Left)	Live Data
F-Type	2016-	Supercharged V6 3.0L engine	SODR(Side object detection control module - Right)	ECU information
F-Type	2016-	Supercharged V6 3.0L engine	SODR(Side object detection control module - Right)	Read fault codes
F-Type	2016-	Supercharged V6 3.0L engine	SODR(Side object detection control module - Right)	Erase fault codes
F-Type	2016-	Supercharged V6 3.0L engine	SODR(Side object detection control module - Right)	Live Data
F-Type	2016-	Supercharged V6 3.0L engine	AAM(Audio amplifier module)	ECU information
F-Type	2016-	Supercharged V6 3.0L engine	AAM(Audio amplifier module)	Read fault codes
F-Type	2016-	Supercharged V6 3.0L engine	AAM(Audio amplifier module)	Erase fault codes
F-Type	2016-	Supercharged V6 3.0L engine	AAM(Audio amplifier module)	Live Data
F-Type	2016-	Supercharged V6 3.0L engine	ACM(Audio front control module)	ECU information
F-Type	2016-	Supercharged V6 3.0L engine	ACM(Audio front control module)	Read fault codes
F-Type	2016-	Supercharged V6 3.0L engine	ACM(Audio front control module)	Erase fault codes
F-Type	2016-	Supercharged V6 3.0L engine	ACM(Audio front control module)	Live Data
F-Type	2016-	Supercharged V6 3.0L engine	DABM(Digital audio broadcast module)	ECU information
F-Type	2016-	Supercharged V6 3.0L engine	DABM(Digital audio broadcast module)	Read fault codes
F-Type	2016-	Supercharged V6 3.0L engine	DABM(Digital audio broadcast module)	Erase fault codes
F-Type	2016-	Supercharged V6 3.0L engine	DABM(Digital audio broadcast module)	Live Data
F-Type	2016-	Supercharged V6 3.0L engine	NCM(Navigation control module)	ECU information
F-Type	2016-	Supercharged V6 3.0L engine	NCM(Navigation control module)	Read fault codes
F-Type	2016-	Supercharged V6 3.0L engine	NCM(Navigation control module)	Erase fault codes
F-Type	2016-	Supercharged V6 3.0L engine	NCM(Navigation control module)	Live Data

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
F-Type	2016-	Supercharged V6 3.0L engine	SRM(Satellite audio unit module)	ECU information
F-Type	2016-	Supercharged V6 3.0L engine	SRM(Satellite audio unit module)	Read fault codes
F-Type	2016-	Supercharged V6 3.0L engine	SRM(Satellite audio unit module)	Erase fault codes
F-Type	2016-	Supercharged V6 3.0L engine	SRM(Satellite audio unit module)	Live Data
F-Type	2016-	Supercharged V6 3.0L engine	TVM(Television module)	ECU information
F-Type	2016-	Supercharged V6 3.0L engine	TVM(Television module)	Read fault codes
F-Type	2016-	Supercharged V6 3.0L engine	TVM(Television module)	Erase fault codes
F-Type	2016-	Supercharged V6 3.0L engine	TVM(Television module)	Live Data
F-Type	2016-	Supercharged V6 3.0L engine	Special Function	Manual oil reset
F-Type	2016-	Supercharged V6 3.0L engine	Special Function	Oil change reset
F-Type	2016-	Supercharged V6 3.0L engine	Special Function	Oil service counter reset
F-Type	2016-	Supercharged V6 3.0L engine	Special Function	Service interval reset
F-Type	2016-	Supercharged V6 3.0L engine	Special Function	Idle speed test
F-Type	2016-	Supercharged V6 3.0L engine	Special Function	Injector valve test
F-Type	2016-	Supercharged V6 3.0L engine	Special Function	Throttle valve actuator replacement
F-Type	2016-	Supercharged V6 3.0L engine	Special Function	Parking brake activation
F-Type	2016-	Supercharged V6 3.0L engine	Special Function	Parking brake pad replacement - Exit maintenance mode application
F-Type	2016-	Supercharged V6 3.0L engine	Special Function	Parking brake pad replacement - Release to service position
F-Type	2016-	Supercharged V6 3.0L engine	Special Function	Lock steering tune to vehicle
F-Type	2016-	Supercharged V6 3.0L engine	Special Function	Power steering soft-lock end stops reset routine
F-Type	2016-	Supercharged V6 3.0L engine	Special Function	Steering column calibration
F-Type	2016-	Supercharged V6 3.0L engine	Special Function	Tire pressure monitor sensor identification display
F-Type	2016-	Supercharged V6 3.0L engine	Special Function	Tire pressure sensor replacement
F-Type	2016-	Supercharged V6 3.0L engine	Special Function	Headlamp control module system calibration
F-Type	2016-	Supercharged V6 3.0L engine	Special Function	Battery replacement
F-Type	2016-	Supercharged V6 3.0L engine	Special Function	Telematics control module battery replacement reset
F-Type	2016-	Supercharged V6 3.0L engine	Special Function	Seat cushion replacement
F-Type	2016-	Supercharged V6 3.0L engine	Special Function	Driver's seat calibration
F-Type	2016-	Supercharged V6 3.0L engine	Special Function	Passenger's seat calibration
F-Type	2016-	Supercharged V6 3.0L engine	Special Function	Driver's side - Door glass window calibration
F-Type	2016-	Supercharged V6 3.0L engine	Special Function	Passenger's side - Door glass window calibration
F-Type	2016-	Supercharged V6 3.0L engine	Special Function	Tailgate/trunk calibration
F-Type	2014-2015	Supercharged V8 5.0L engine	PCM(Powertrain control module)	ECU information
F-Type	2014-2015	Supercharged V8 5.0L engine	PCM(Powertrain control module)	Read fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	PCM(Powertrain control module)	Erase fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	PCM(Powertrain control module)	Live Data
F-Type	2014-2015	Supercharged V8 5.0L engine	TCM(Transmission control module)	ECU information
F-Type	2014-2015	Supercharged V8 5.0L engine	TCM(Transmission control module)	Read fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	TCM(Transmission control module)	Erase fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	TCM(Transmission control module)	Live Data
F-Type	2014-2015	Supercharged V8 5.0L engine	ABS (ABS control module)	ECU information
F-Type	2014-2015	Supercharged V8 5.0L engine	ABS (ABS control module)	Read fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	ABS (ABS control module)	Erase fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	ABS (ABS control module)	Live Data
F-Type	2014-2015	Supercharged V8 5.0L engine	RCM(Restraints control module)	ECU information
F-Type	2014-2015	Supercharged V8 5.0L engine	RCM(Restraints control module)	Read fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	RCM(Restraints control module)	Erase fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	RCM(Restraints control module)	Live Data
F-Type	2014-2015	Supercharged V8 5.0L engine	IPC(Instrument cluster control module)	ECU information
F-Type	2014-2015	Supercharged V8 5.0L engine	IPC(Instrument cluster control module)	Read fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	IPC(Instrument cluster control module)	Erase fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	IPC(Instrument cluster control module)	Live Data
F-Type	2014-2015	Supercharged V8 5.0L engine	ATCM(All terrain control module)	ECU information
F-Type	2014-2015	Supercharged V8 5.0L engine	ATCM(All terrain control module)	Read fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	ATCM(All terrain control module)	Erase fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	ATCM(All terrain control module)	Live Data
F-Type	2014-2015	Supercharged V8 5.0L engine	BCM(Body control module)	ECU information
F-Type	2014-2015	Supercharged V8 5.0L engine	BCM(Body control module)	Read fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	BCM(Body control module)	Erase fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	BCM(Body control module)	Live Data
F-Type	2014-2015	Supercharged V8 5.0L engine	CHCM(Chassis control module)	ECU information
F-Type	2014-2015	Supercharged V8 5.0L engine	CHCM(Chassis control module)	Read fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	CHCM(Chassis control module)	Erase fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	CHCM(Chassis control module)	Live Data
F-Type	2014-2015	Supercharged V8 5.0L engine	FTCM(Folding top control module)	ECU information
F-Type	2014-2015	Supercharged V8 5.0L engine	FTCM(Folding top control module)	Read fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	FTCM(Folding top control module)	Erase fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	FTCM(Folding top control module)	Live Data
F-Type	2014-2015	Supercharged V8 5.0L engine	FTCMB(Folding top control module B)	ECU information
F-Type	2014-2015	Supercharged V8 5.0L engine	FTCMB(Folding top control module B)	Read fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	FTCMB(Folding top control module B)	Erase fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	FTCMB(Folding top control module B)	Live Data
F-Type	2014-2015	Supercharged V8 5.0L engine	GSM(Gear shift module)	ECU information
F-Type	2014-2015	Supercharged V8 5.0L engine	GSM(Gear shift module)	Read fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	GSM(Gear shift module)	Erase fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	GSM(Gear shift module)	Live Data
F-Type	2014-2015	Supercharged V8 5.0L engine	GWM(Gateway module)	ECU information
F-Type	2014-2015	Supercharged V8 5.0L engine	GWM(Gateway module)	Read fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	GWM(Gateway module)	Erase fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	GWM(Gateway module)	Live Data
F-Type	2014-2015	Supercharged V8 5.0L engine	HCM(Headlamp control module)	ECU information
F-Type	2014-2015	Supercharged V8 5.0L engine	HCM(Headlamp control module)	Read fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	HCM(Headlamp control module)	Erase fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	HCM(Headlamp control module)	Live Data

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
F-Type	2014-2015	Supercharged V8 5.0L engine	OCS(Restraints occupant classification system module)	ECU information
F-Type	2014-2015	Supercharged V8 5.0L engine	OCS(Restraints occupant classification system module)	Read fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	OCS(Restraints occupant classification system module)	Erase fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	OCS(Restraints occupant classification system module)	Live Data
F-Type	2014-2015	Supercharged V8 5.0L engine	PAM(Parking assist control module)	ECU information
F-Type	2014-2015	Supercharged V8 5.0L engine	PAM(Parking assist control module)	Read fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	PAM(Parking assist control module)	Erase fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	PAM(Parking assist control module)	Live Data
F-Type	2014-2015	Supercharged V8 5.0L engine	PBM(Parking brake control module)	ECU information
F-Type	2014-2015	Supercharged V8 5.0L engine	PBM(Parking brake control module)	Read fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	PBM(Parking brake control module)	Erase fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	PBM(Parking brake control module)	Live Data
F-Type	2014-2015	Supercharged V8 5.0L engine	RDCM(Rear differential control module)	ECU information
F-Type	2014-2015	Supercharged V8 5.0L engine	RDCM(Rear differential control module)	Read fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	RDCM(Rear differential control module)	Erase fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	RDCM(Rear differential control module)	Live Data
F-Type	2014-2015	Supercharged V8 5.0L engine	VIM(Vehicle immobilizer control module)	ECU information
F-Type	2014-2015	Supercharged V8 5.0L engine	VIM(Vehicle immobilizer control module)	Read fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	VIM(Vehicle immobilizer control module)	Erase fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	VIM(Vehicle immobilizer control module)	Live Data
F-Type	2014-2015	Supercharged V8 5.0L engine	CAV(Connect and view module)	ECU information
F-Type	2014-2015	Supercharged V8 5.0L engine	CAV(Connect and view module)	Read fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	CAV(Connect and view module)	Erase fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	CAV(Connect and view module)	Live Data
F-Type	2014-2015	Supercharged V8 5.0L engine	DDM(Driver's door module)	ECU information
F-Type	2014-2015	Supercharged V8 5.0L engine	DDM(Driver's door module)	Read fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	DDM(Driver's door module)	Erase fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	DDM(Driver's door module)	Live Data
F-Type	2014-2015	Supercharged V8 5.0L engine	DSM(Driver's seat module)	ECU information
F-Type	2014-2015	Supercharged V8 5.0L engine	DSM(Driver's seat module)	Read fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	DSM(Driver's seat module)	Erase fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	DSM(Driver's seat module)	Live Data
F-Type	2014-2015	Supercharged V8 5.0L engine	FCDIM(Front control/display interface module (high level display front))	ECU information
F-Type	2014-2015	Supercharged V8 5.0L engine	FCDIM(Front control/display interface module (high level display front))	Read fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	FCDIM(Front control/display interface module (high level display front))	Erase fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	FCDIM(Front control/display interface module (high level display front))	Live Data
F-Type	2014-2015	Supercharged V8 5.0L engine	FCIM(Integrated control panel)	ECU information
F-Type	2014-2015	Supercharged V8 5.0L engine	FCIM(Integrated control panel)	Read fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	FCIM(Integrated control panel)	Erase fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	FCIM(Integrated control panel)	Live Data
F-Type	2014-2015	Supercharged V8 5.0L engine	HCMB(Headlamp control module B)	ECU information
F-Type	2014-2015	Supercharged V8 5.0L engine	HCMB(Headlamp control module B)	Read fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	HCMB(Headlamp control module B)	Erase fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	HCMB(Headlamp control module B)	Live Data
F-Type	2014-2015	Supercharged V8 5.0L engine	HVAC(Heating ventilation and air conditioning control module)	ECU information
F-Type	2014-2015	Supercharged V8 5.0L engine	HVAC(Heating ventilation and air conditioning control module)	Read fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	HVAC(Heating ventilation and air conditioning control module)	Erase fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	HVAC(Heating ventilation and air conditioning control module)	Live Data
F-Type	2014-2015	Supercharged V8 5.0L engine	IPMB(Image processing module B)	ECU information
F-Type	2014-2015	Supercharged V8 5.0L engine	IPMB(Image processing module B)	Read fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	IPMB(Image processing module B)	Erase fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	IPMB(Image processing module B)	Live Data
F-Type	2014-2015	Supercharged V8 5.0L engine	PDM(Passenger's door module)	ECU information
F-Type	2014-2015	Supercharged V8 5.0L engine	PDM(Passenger's door module)	Read fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	PDM(Passenger's door module)	Erase fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	PDM(Passenger's door module)	Live Data
F-Type	2014-2015	Supercharged V8 5.0L engine	PSM(Passenger's seat module)	ECU information
F-Type	2014-2015	Supercharged V8 5.0L engine	PSM(Passenger's seat module)	Read fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	PSM(Passenger's seat module)	Erase fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	PSM(Passenger's seat module)	Live Data
F-Type	2014-2015	Supercharged V8 5.0L engine	RFA(Keyless vehicle module)	ECU information
F-Type	2014-2015	Supercharged V8 5.0L engine	RFA(Keyless vehicle module)	Read fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	RFA(Keyless vehicle module)	Erase fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	RFA(Keyless vehicle module)	Live Data
F-Type	2014-2015	Supercharged V8 5.0L engine	RGTM(Rear gate / trunk module)	ECU information
F-Type	2014-2015	Supercharged V8 5.0L engine	RGTM(Rear gate / trunk module)	Read fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	RGTM(Rear gate / trunk module)	Erase fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	RGTM(Rear gate / trunk module)	Live Data
F-Type	2014-2015	Supercharged V8 5.0L engine	SODL(Side object detection control module - Left)	ECU information
F-Type	2014-2015	Supercharged V8 5.0L engine	SODL(Side object detection control module - Left)	Read fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	SODL(Side object detection control module - Left)	Erase fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	SODL(Side object detection control module - Left)	Live Data
F-Type	2014-2015	Supercharged V8 5.0L engine	SODR(Side object detection control module - Right)	ECU information
F-Type	2014-2015	Supercharged V8 5.0L engine	SODR(Side object detection control module - Right)	Read fault codes

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
F-Type	2014-2015	Supercharged V8 5.0L engine	SODR(Side object detection control module - Right)	Erase fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	SODR(Side object detection control module - Right)	Live Data
F-Type	2014-2015	Supercharged V8 5.0L engine	AAM(Audio amplifier module)	ECU information
F-Type	2014-2015	Supercharged V8 5.0L engine	AAM(Audio amplifier module)	Read fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	AAM(Audio amplifier module)	Erase fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	AAM(Audio amplifier module)	Live Data
F-Type	2014-2015	Supercharged V8 5.0L engine	ACM(Audio front control module)	ECU information
F-Type	2014-2015	Supercharged V8 5.0L engine	ACM(Audio front control module)	Read fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	ACM(Audio front control module)	Erase fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	ACM(Audio front control module)	Live Data
F-Type	2014-2015	Supercharged V8 5.0L engine	DABM(Digital audio broadcast module)	ECU information
F-Type	2014-2015	Supercharged V8 5.0L engine	DABM(Digital audio broadcast module)	Read fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	DABM(Digital audio broadcast module)	Erase fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	DABM(Digital audio broadcast module)	Live Data
F-Type	2014-2015	Supercharged V8 5.0L engine	NCM(Navigation control module)	ECU information
F-Type	2014-2015	Supercharged V8 5.0L engine	NCM(Navigation control module)	Read fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	NCM(Navigation control module)	Erase fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	NCM(Navigation control module)	Live Data
F-Type	2014-2015	Supercharged V8 5.0L engine	SRM(Satellite audio unit module)	ECU information
F-Type	2014-2015	Supercharged V8 5.0L engine	SRM(Satellite audio unit module)	Read fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	SRM(Satellite audio unit module)	Erase fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	SRM(Satellite audio unit module)	Live Data
F-Type	2014-2015	Supercharged V8 5.0L engine	TVM(Television module)	ECU information
F-Type	2014-2015	Supercharged V8 5.0L engine	TVM(Television module)	Read fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	TVM(Television module)	Erase fault codes
F-Type	2014-2015	Supercharged V8 5.0L engine	TVM(Television module)	Live Data
F-Type	2014-2015	Supercharged V8 5.0L engine	Special Function	Manual oil reset
F-Type	2014-2015	Supercharged V8 5.0L engine	Special Function	Oil service counter reset
F-Type	2014-2015	Supercharged V8 5.0L engine	Special Function	Service interval reset
F-Type	2014-2015	Supercharged V8 5.0L engine	Special Function	Petrol powertrain idle speed control test
F-Type	2014-2015	Supercharged V8 5.0L engine	Special Function	Parking brake activation
F-Type	2014-2015	Supercharged V8 5.0L engine	Special Function	Parking brake pad replacement - Exit maintenance mode application
F-Type	2014-2015	Supercharged V8 5.0L engine	Special Function	Parking brake pad replacement - Release to service position
F-Type	2014-2015	Supercharged V8 5.0L engine	Special Function	Brake bleed
F-Type	2014-2015	Supercharged V8 5.0L engine	Special Function	Steering angle sensor calibration
F-Type	2014-2015	Supercharged V8 5.0L engine	Special Function	Steering column calibration
F-Type	2014-2015	Supercharged V8 5.0L engine	Special Function	Tire pressure monitor sensor identification display
F-Type	2014-2015	Supercharged V8 5.0L engine	Special Function	Tire pressure sensor replacement
F-Type	2014-2015	Supercharged V8 5.0L engine	Special Function	Height calibration
F-Type	2014-2015	Supercharged V8 5.0L engine	Special Function	Headlamp control module system calibration
F-Type	2014-2015	Supercharged V8 5.0L engine	Special Function	Battery replacement
F-Type	2014-2015	Supercharged V8 5.0L engine	Special Function	Odometer calibration
F-Type	2014-2015	Supercharged V8 5.0L engine	Special Function	Seat cushion replacement
F-Type	2014-2015	Supercharged V8 5.0L engine	Special Function	Driver's seat calibration
F-Type	2014-2015	Supercharged V8 5.0L engine	Special Function	Passenger's seat calibration
F-Type	2014-2015	Supercharged V8 5.0L engine	Special Function	Drivers side window calibration
F-Type	2014-2015	Supercharged V8 5.0L engine	Special Function	Passenger side window calibration
F-Type	2014-2015	Supercharged V8 5.0L engine	Special Function	Tailgate/trunk calibration
F-Type	2014-2015	Supercharged V6 3.0L engine	PCM(Powertrain control module)	ECU information
F-Type	2014-2015	Supercharged V6 3.0L engine	PCM(Powertrain control module)	Read fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	PCM(Powertrain control module)	Erase fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	PCM(Powertrain control module)	Live Data
F-Type	2014-2015	Supercharged V6 3.0L engine	TCM(Transmission control module)	ECU information
F-Type	2014-2015	Supercharged V6 3.0L engine	TCM(Transmission control module)	Read fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	TCM(Transmission control module)	Erase fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	TCM(Transmission control module)	Live Data
F-Type	2014-2015	Supercharged V6 3.0L engine	ABS(ABS control module)	ECU information
F-Type	2014-2015	Supercharged V6 3.0L engine	ABS(ABS control module)	Read fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	ABS(ABS control module)	Erase fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	ABS(ABS control module)	Live Data
F-Type	2014-2015	Supercharged V6 3.0L engine	RCM(Restraints control module)	ECU information
F-Type	2014-2015	Supercharged V6 3.0L engine	RCM(Restraints control module)	Read fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	RCM(Restraints control module)	Erase fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	RCM(Restraints control module)	Live Data
F-Type	2014-2015	Supercharged V6 3.0L engine	IPC(Instrument cluster control module)	ECU information
F-Type	2014-2015	Supercharged V6 3.0L engine	IPC(Instrument cluster control module)	Read fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	IPC(Instrument cluster control module)	Erase fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	IPC(Instrument cluster control module)	Live Data
F-Type	2014-2015	Supercharged V6 3.0L engine	ATCM(All terrain control module)	ECU information
F-Type	2014-2015	Supercharged V6 3.0L engine	ATCM(All terrain control module)	Read fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	ATCM(All terrain control module)	Erase fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	ATCM(All terrain control module)	Live Data
F-Type	2014-2015	Supercharged V6 3.0L engine	BCM(Body control module)	ECU information
F-Type	2014-2015	Supercharged V6 3.0L engine	BCM(Body control module)	Read fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	BCM(Body control module)	Erase fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	BCM(Body control module)	Live Data
F-Type	2014-2015	Supercharged V6 3.0L engine	CHCM(Chassis control module)	ECU information
F-Type	2014-2015	Supercharged V6 3.0L engine	CHCM(Chassis control module)	Read fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	CHCM(Chassis control module)	Erase fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	CHCM(Chassis control module)	Live Data
F-Type	2014-2015	Supercharged V6 3.0L engine	FTCM(Folding top control module)	ECU information
F-Type	2014-2015	Supercharged V6 3.0L engine	FTCM(Folding top control module)	Read fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	FTCM(Folding top control module)	Erase fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	FTCM(Folding top control module)	Live Data
F-Type	2014-2015	Supercharged V6 3.0L engine	FTCMB(Folding top control module B)	ECU information
F-Type	2014-2015	Supercharged V6 3.0L engine	FTCMB(Folding top control module B)	Read fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	FTCMB(Folding top control module B)	Erase fault codes

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
F-Type	2014-2015	Supercharged V6 3.0L engine	FTCMB(Folding top control module B)	Live Data
F-Type	2014-2015	Supercharged V6 3.0L engine	GSM(Gear shift module)	ECU information
F-Type	2014-2015	Supercharged V6 3.0L engine	GSM(Gear shift module)	Read fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	GSM(Gear shift module)	Erase fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	GSM(Gear shift module)	Live Data
F-Type	2014-2015	Supercharged V6 3.0L engine	GWM(Gateway module)	ECU information
F-Type	2014-2015	Supercharged V6 3.0L engine	GWM(Gateway module)	Read fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	GWM(Gateway module)	Erase fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	GWM(Gateway module)	Live Data
F-Type	2014-2015	Supercharged V6 3.0L engine	HCM(Headlamp control module)	ECU information
F-Type	2014-2015	Supercharged V6 3.0L engine	HCM(Headlamp control module)	Read fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	HCM(Headlamp control module)	Erase fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	HCM(Headlamp control module)	Live Data
F-Type	2014-2015	Supercharged V6 3.0L engine	OCS(Restraints occupant classification system module)	ECU information
F-Type	2014-2015	Supercharged V6 3.0L engine	OCS(Restraints occupant classification system module)	Read fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	OCS(Restraints occupant classification system module)	Erase fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	OCS(Restraints occupant classification system module)	Live Data
F-Type	2014-2015	Supercharged V6 3.0L engine	PAM(Parking assist control module)	ECU information
F-Type	2014-2015	Supercharged V6 3.0L engine	PAM(Parking assist control module)	Read fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	PAM(Parking assist control module)	Erase fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	PAM(Parking assist control module)	Live Data
F-Type	2014-2015	Supercharged V6 3.0L engine	PBM(Parking brake control module)	ECU information
F-Type	2014-2015	Supercharged V6 3.0L engine	PBM(Parking brake control module)	Read fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	PBM(Parking brake control module)	Erase fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	PBM(Parking brake control module)	Live Data
F-Type	2014-2015	Supercharged V6 3.0L engine	RDCM(Rear differential control module)	ECU information
F-Type	2014-2015	Supercharged V6 3.0L engine	RDCM(Rear differential control module)	Read fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	RDCM(Rear differential control module)	Erase fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	RDCM(Rear differential control module)	Live Data
F-Type	2014-2015	Supercharged V6 3.0L engine	VIM(Vehicle immobilizer control module)	ECU information
F-Type	2014-2015	Supercharged V6 3.0L engine	VIM(Vehicle immobilizer control module)	Read fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	VIM(Vehicle immobilizer control module)	Erase fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	VIM(Vehicle immobilizer control module)	Live Data
F-Type	2014-2015	Supercharged V6 3.0L engine	CAV(Connect and view module)	ECU information
F-Type	2014-2015	Supercharged V6 3.0L engine	CAV(Connect and view module)	Read fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	CAV(Connect and view module)	Erase fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	CAV(Connect and view module)	Live Data
F-Type	2014-2015	Supercharged V6 3.0L engine	DDM(Driver's door module)	ECU information
F-Type	2014-2015	Supercharged V6 3.0L engine	DDM(Driver's door module)	Read fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	DDM(Driver's door module)	Erase fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	DDM(Driver's door module)	Live Data
F-Type	2014-2015	Supercharged V6 3.0L engine	DSM(Driver's seat module)	ECU information
F-Type	2014-2015	Supercharged V6 3.0L engine	DSM(Driver's seat module)	Read fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	DSM(Driver's seat module)	Erase fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	DSM(Driver's seat module)	Live Data
F-Type	2014-2015	Supercharged V6 3.0L engine	FCDIM(Front control/display interface module (high level display front))	ECU information
F-Type	2014-2015	Supercharged V6 3.0L engine	FCDIM(Front control/display interface module (high level display front))	Read fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	FCDIM(Front control/display interface module (high level display front))	Erase fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	FCDIM(Front control/display interface module (high level display front))	Live Data
F-Type	2014-2015	Supercharged V6 3.0L engine	FCIM(Integrated control panel)	ECU information
F-Type	2014-2015	Supercharged V6 3.0L engine	FCIM(Integrated control panel)	Read fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	FCIM(Integrated control panel)	Erase fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	FCIM(Integrated control panel)	Live Data
F-Type	2014-2015	Supercharged V6 3.0L engine	HCMB(Headlamp control module B)	ECU information
F-Type	2014-2015	Supercharged V6 3.0L engine	HCMB(Headlamp control module B)	Read fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	HCMB(Headlamp control module B)	Erase fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	HCMB(Headlamp control module B)	Live Data
F-Type	2014-2015	Supercharged V6 3.0L engine	HVAC(Heating ventilation and air conditioning control module)	ECU information
F-Type	2014-2015	Supercharged V6 3.0L engine	HVAC(Heating ventilation and air conditioning control module)	Read fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	HVAC(Heating ventilation and air conditioning control module)	Erase fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	HVAC(Heating ventilation and air conditioning control module)	Live Data
F-Type	2014-2015	Supercharged V6 3.0L engine	IPMB(Image processing module B)	ECU information
F-Type	2014-2015	Supercharged V6 3.0L engine	IPMB(Image processing module B)	Read fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	IPMB(Image processing module B)	Erase fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	IPMB(Image processing module B)	Live Data
F-Type	2014-2015	Supercharged V6 3.0L engine	PDM(Passenger's door module)	ECU information
F-Type	2014-2015	Supercharged V6 3.0L engine	PDM(Passenger's door module)	Read fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	PDM(Passenger's door module)	Erase fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	PDM(Passenger's door module)	Live Data
F-Type	2014-2015	Supercharged V6 3.0L engine	PSM(Passenger's seat module)	ECU information
F-Type	2014-2015	Supercharged V6 3.0L engine	PSM(Passenger's seat module)	Read fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	PSM(Passenger's seat module)	Erase fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	PSM(Passenger's seat module)	Live Data
F-Type	2014-2015	Supercharged V6 3.0L engine	RFA(Keyless vehicle module)	ECU information
F-Type	2014-2015	Supercharged V6 3.0L engine	RFA(Keyless vehicle module)	Read fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	RFA(Keyless vehicle module)	Erase fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	RFA(Keyless vehicle module)	Live Data
F-Type	2014-2015	Supercharged V6 3.0L engine	RGTM(Rear gate / trunk module)	ECU information
F-Type	2014-2015	Supercharged V6 3.0L engine	RGTM(Rear gate / trunk module)	Read fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	RGTM(Rear gate / trunk module)	Erase fault codes

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
F-Type	2014-2015	Supercharged V6 3.0L engine	RGTM(Rear gate / trunk module)	Live Data
F-Type	2014-2015	Supercharged V6 3.0L engine	SODL(Side object detection control module - Left)	ECU information
F-Type	2014-2015	Supercharged V6 3.0L engine	SODL(Side object detection control module - Left)	Read fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	SODL(Side object detection control module - Left)	Erase fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	SODL(Side object detection control module - Left)	Live Data
F-Type	2014-2015	Supercharged V6 3.0L engine	SODR(Side object detection control module - Right)	ECU information
F-Type	2014-2015	Supercharged V6 3.0L engine	SODR(Side object detection control module - Right)	Read fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	SODR(Side object detection control module - Right)	Erase fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	SODR(Side object detection control module - Right)	Live Data
F-Type	2014-2015	Supercharged V6 3.0L engine	AAM(Audio amplifier module)	ECU information
F-Type	2014-2015	Supercharged V6 3.0L engine	AAM(Audio amplifier module)	Read fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	AAM(Audio amplifier module)	Erase fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	AAM(Audio amplifier module)	Live Data
F-Type	2014-2015	Supercharged V6 3.0L engine	ACM(Audio front control module)	ECU information
F-Type	2014-2015	Supercharged V6 3.0L engine	ACM(Audio front control module)	Read fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	ACM(Audio front control module)	Erase fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	ACM(Audio front control module)	Live Data
F-Type	2014-2015	Supercharged V6 3.0L engine	DABM(Digital audio broadcast module)	ECU information
F-Type	2014-2015	Supercharged V6 3.0L engine	DABM(Digital audio broadcast module)	Read fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	DABM(Digital audio broadcast module)	Erase fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	DABM(Digital audio broadcast module)	Live Data
F-Type	2014-2015	Supercharged V6 3.0L engine	NCM(Navigation control module)	ECU information
F-Type	2014-2015	Supercharged V6 3.0L engine	NCM(Navigation control module)	Read fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	NCM(Navigation control module)	Erase fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	NCM(Navigation control module)	Live Data
F-Type	2014-2015	Supercharged V6 3.0L engine	SRM(Satellite audio unit module)	ECU information
F-Type	2014-2015	Supercharged V6 3.0L engine	SRM(Satellite audio unit module)	Read fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	SRM(Satellite audio unit module)	Erase fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	SRM(Satellite audio unit module)	Live Data
F-Type	2014-2015	Supercharged V6 3.0L engine	TYM(Television module)	ECU information
F-Type	2014-2015	Supercharged V6 3.0L engine	TYM(Television module)	Read fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	TYM(Television module)	Erase fault codes
F-Type	2014-2015	Supercharged V6 3.0L engine	TYM(Television module)	Live Data
F-Type	2014-2015	Supercharged V6 3.0L engine	Special Function	Manual oil reset
F-Type	2014-2015	Supercharged V6 3.0L engine	Special Function	Oil service counter reset
F-Type	2014-2015	Supercharged V6 3.0L engine	Special Function	Service interval reset
F-Type	2014-2015	Supercharged V6 3.0L engine	Special Function	Injector valve test
F-Type	2014-2015	Supercharged V6 3.0L engine	Special Function	Petrol powertrain idle speed control test
F-Type	2014-2015	Supercharged V6 3.0L engine	Special Function	Parking brake activation
F-Type	2014-2015	Supercharged V6 3.0L engine	Special Function	Parking brake pad replacement - Exit maintenance mode application
F-Type	2014-2015	Supercharged V6 3.0L engine	Special Function	Parking brake pad replacement - Release to service position
F-Type	2014-2015	Supercharged V6 3.0L engine	Special Function	Brake bleed
F-Type	2014-2015	Supercharged V6 3.0L engine	Special Function	Steering angle sensor calibration
F-Type	2014-2015	Supercharged V6 3.0L engine	Special Function	Steering column calibration
F-Type	2014-2015	Supercharged V6 3.0L engine	Special Function	Tire pressure monitor sensor identification display
F-Type	2014-2015	Supercharged V6 3.0L engine	Special Function	Tire pressure sensor replacement
F-Type	2014-2015	Supercharged V6 3.0L engine	Special Function	Height calibration
F-Type	2014-2015	Supercharged V6 3.0L engine	Special Function	Headlamp control module system calibration
F-Type	2014-2015	Supercharged V6 3.0L engine	Special Function	Battery replacement
F-Type	2014-2015	Supercharged V6 3.0L engine	Special Function	Odometer calibration
F-Type	2014-2015	Supercharged V6 3.0L engine	Special Function	Seat cushion replacement
F-Type	2014-2015	Supercharged V6 3.0L engine	Special Function	Driver's seat calibration
F-Type	2014-2015	Supercharged V6 3.0L engine	Special Function	Passenger's seat calibration
F-Type	2014-2015	Supercharged V6 3.0L engine	Special Function	Drivers side window calibration
F-Type	2014-2015	Supercharged V6 3.0L engine	Special Function	Passenger side window calibration
F-Type	2014-2015	Supercharged V6 3.0L engine	Special Function	Tailgate/trunk calibration
S-Type	2006-2008	Normally Aspirated V8	PCM(Powertrain control module)	ECU information
S-Type	2006-2008	Normally Aspirated V8	PCM(Powertrain control module)	Read fault codes
S-Type	2006-2008	Normally Aspirated V8	PCM(Powertrain control module)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V8	PCM(Powertrain control module)	Live Data
S-Type	2006-2008	Normally Aspirated V8	TCM(Transmission control module)	Read fault codes
S-Type	2006-2008	Normally Aspirated V8	TCM(Transmission control module)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V8	TCM(Transmission control module)	Live Data
S-Type	2006-2008	Normally Aspirated V8	ABS(Anti-lock braking system)	ECU information
S-Type	2006-2008	Normally Aspirated V8	ABS(Anti-lock braking system)	Read fault codes
S-Type	2006-2008	Normally Aspirated V8	ABS(Anti-lock braking system)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V8	ABS(Anti-lock braking system)	Live Data
S-Type	2006-2008	Normally Aspirated V8	PBM(Parking brake control module)	ECU information
S-Type	2006-2008	Normally Aspirated V8	PBM(Parking brake control module)	Read fault codes
S-Type	2006-2008	Normally Aspirated V8	PBM(Parking brake control module)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V8	PBM(Parking brake control module)	Live Data
S-Type	2006-2008	Normally Aspirated V8	TPM(Tire pressure monitor module)	ECU information
S-Type	2006-2008	Normally Aspirated V8	TPM(Tire pressure monitor module)	Read fault codes
S-Type	2006-2008	Normally Aspirated V8	TPM(Tire pressure monitor module)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V8	TPM(Tire pressure monitor module)	Live Data
S-Type	2006-2008	Normally Aspirated V8	ACC(Adaptive speed control control module)	Read fault codes
S-Type	2006-2008	Normally Aspirated V8	ACC(Adaptive speed control control module)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V8	ACC(Adaptive speed control control module)	Live Data
S-Type	2006-2008	Normally Aspirated V8	ATC(Climate control module)	Read fault codes
S-Type	2006-2008	Normally Aspirated V8	ATC(Climate control module)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V8	ATC(Climate control module)	Live Data

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
S-Type	2006-2008	Normally Aspirated V8	IP(Instrument pack)	Read fault codes
S-Type	2006-2008	Normally Aspirated V8	IP(Instrument pack)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V8	IP(Instrument pack)	Live Data
S-Type	2006-2008	Normally Aspirated V8	ADRC(Adaptive damping ride control)	Read fault codes
S-Type	2006-2008	Normally Aspirated V8	ADRC(Adaptive damping ride control)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V8	ADRC(Adaptive damping ride control)	Live Data
S-Type	2006-2008	Normally Aspirated V8	DDM(Driver's door module)	Read fault codes
S-Type	2006-2008	Normally Aspirated V8	DDM(Driver's door module)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V8	DDM(Driver's door module)	Live Data
S-Type	2006-2008	Normally Aspirated V8	DSM(Driver's seat module)	Read fault codes
S-Type	2006-2008	Normally Aspirated V8	DSM(Driver's seat module)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V8	DSM(Driver's seat module)	Live Data
S-Type	2006-2008	Normally Aspirated V8	FETM(Audio unit)	Read fault codes
S-Type	2006-2008	Normally Aspirated V8	FETM(Audio unit)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V8	FETM(Audio unit)	Live Data
S-Type	2006-2008	Normally Aspirated V8	GEM(General electronics control module)	Read fault codes
S-Type	2006-2008	Normally Aspirated V8	GEM(General electronics control module)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V8	GEM(General electronics control module)	Live Data
S-Type	2006-2008	Normally Aspirated V8	NAV(Navigation control module)	Read fault codes
S-Type	2006-2008	Normally Aspirated V8	NAV(Navigation control module)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V8	NAV(Navigation control module)	Live Data
S-Type	2006-2008	Normally Aspirated V8	REM(Rear electronic control module)	Read fault codes
S-Type	2006-2008	Normally Aspirated V8	REM(Rear electronic control module)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V8	REM(Rear electronic control module)	Live Data
S-Type	2006-2008	Normally Aspirated V8	SCLM(Steering column lock module)	Read fault codes
S-Type	2006-2008	Normally Aspirated V8	SCLM(Steering column lock module)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V8	SCLM(Steering column lock module)	Live Data
S-Type	2006-2008	Normally Aspirated V8	ADHLS(Headlamp levelling system)	Read fault codes
S-Type	2006-2008	Normally Aspirated V8	ADHLS(Headlamp levelling system)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V8	ADHLS(Headlamp levelling system)	Live Data
S-Type	2006-2008	Normally Aspirated V8	ARM(Restraints control module)	Read fault codes
S-Type	2006-2008	Normally Aspirated V8	ARM(Restraints control module)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V8	ARM(Restraints control module)	Live Data
S-Type	2006-2008	Normally Aspirated V8	ISM(Intrusion sensor module)	Read fault codes
S-Type	2006-2008	Normally Aspirated V8	ISM(Intrusion sensor module)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V8	ISM(Intrusion sensor module)	Live Data
S-Type	2006-2008	Normally Aspirated V8	PAM(Parking aid control module)	Read fault codes
S-Type	2006-2008	Normally Aspirated V8	PAM(Parking aid control module)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V8	PAM(Parking aid control module)	Live Data
S-Type	2006-2008	Normally Aspirated V8	AMP(Amplifier)	Read fault codes
S-Type	2006-2008	Normally Aspirated V8	AMP(Amplifier)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V8	AMP(Amplifier)	Live Data
S-Type	2006-2008	Normally Aspirated V8	CPM(Cellular telephone control module)	Read fault codes
S-Type	2006-2008	Normally Aspirated V8	CPM(Cellular telephone control module)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V8	CPM(Cellular telephone control module)	Live Data
S-Type	2006-2008	Normally Aspirated V8	VACM(Voice activation control module)	Read fault codes
S-Type	2006-2008	Normally Aspirated V8	VACM(Voice activation control module)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V8	VACM(Voice activation control module)	Live Data
S-Type	2006-2008	Normally Aspirated V8	Special Function	Manual oil reset
S-Type	2006-2008	Normally Aspirated V8	Special Function	Parking brake release to service position
S-Type	2006-2008	Normally Aspirated V8	Special Function	Lateral accelerometer calibration
S-Type	2006-2008	Normally Aspirated V8	Special Function	Powertrain configuration reset
S-Type	2006-2008	Normally Aspirated V8	Special Function	Pressure sensor calibration
S-Type	2006-2008	Normally Aspirated V8	Special Function	Yaw rate sensor calibration
S-Type	2006-2008	V6 Diesel	PCM(Powertrain control module)	ECU information
S-Type	2006-2008	V6 Diesel	PCM(Powertrain control module)	Read fault codes
S-Type	2006-2008	V6 Diesel	PCM(Powertrain control module)	Erase fault codes
S-Type	2006-2008	V6 Diesel	PCM(Powertrain control module)	Live Data
S-Type	2006-2008	V6 Diesel	TCM(Transmission control module)	Read fault codes
S-Type	2006-2008	V6 Diesel	TCM(Transmission control module)	Erase fault codes
S-Type	2006-2008	V6 Diesel	TCM(Transmission control module)	Live Data
S-Type	2006-2008	V6 Diesel	ABS(Anti-lock braking system)	ECU information
S-Type	2006-2008	V6 Diesel	ABS(Anti-lock braking system)	Read fault codes
S-Type	2006-2008	V6 Diesel	ABS(Anti-lock braking system)	Erase fault codes
S-Type	2006-2008	V6 Diesel	ABS(Anti-lock braking system)	Live Data
S-Type	2006-2008	V6 Diesel	AHCM(Auxiliary heater control module)	ECU information
S-Type	2006-2008	V6 Diesel	AHCM(Auxiliary heater control module)	Read fault codes
S-Type	2006-2008	V6 Diesel	AHCM(Auxiliary heater control module)	Erase fault codes
S-Type	2006-2008	V6 Diesel	AHCM(Auxiliary heater control module)	Live Data
S-Type	2006-2008	V6 Diesel	PBM(Parking brake control module)	ECU information
S-Type	2006-2008	V6 Diesel	PBM(Parking brake control module)	Read fault codes
S-Type	2006-2008	V6 Diesel	PBM(Parking brake control module)	Erase fault codes
S-Type	2006-2008	V6 Diesel	PBM(Parking brake control module)	Live Data
S-Type	2006-2008	V6 Diesel	TPM(Tire pressure monitor module)	ECU information
S-Type	2006-2008	V6 Diesel	TPM(Tire pressure monitor module)	Read fault codes
S-Type	2006-2008	V6 Diesel	TPM(Tire pressure monitor module)	Erase fault codes
S-Type	2006-2008	V6 Diesel	TPM(Tire pressure monitor module)	Live Data
S-Type	2006-2008	V6 Diesel	ACC(Adaptive speed control control module)	Read fault codes
S-Type	2006-2008	V6 Diesel	ACC(Adaptive speed control control module)	Erase fault codes
S-Type	2006-2008	V6 Diesel	ACC(Adaptive speed control control module)	Live Data
S-Type	2006-2008	V6 Diesel	ATC(Climate control module)	Read fault codes
S-Type	2006-2008	V6 Diesel	ATC(Climate control module)	Erase fault codes
S-Type	2006-2008	V6 Diesel	ATC(Climate control module)	Live Data
S-Type	2006-2008	V6 Diesel	IP(Instrument pack)	Read fault codes
S-Type	2006-2008	V6 Diesel	IP(Instrument pack)	Erase fault codes
S-Type	2006-2008	V6 Diesel	IP(Instrument pack)	Live Data
S-Type	2006-2008	V6 Diesel	ADRC(Adaptive damping ride control)	Read fault codes
S-Type	2006-2008	V6 Diesel	ADRC(Adaptive damping ride control)	Erase fault codes
S-Type	2006-2008	V6 Diesel	ADRC(Adaptive damping ride control)	Live Data
S-Type	2006-2008	V6 Diesel	DDM(Driver's door module)	Read fault codes
S-Type	2006-2008	V6 Diesel	DDM(Driver's door module)	Erase fault codes
S-Type	2006-2008	V6 Diesel	DDM(Driver's door module)	Live Data



## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
S-Type	2006-2008	V6 Diesel	DSM(Driver's seat module)	Read fault codes
S-Type	2006-2008	V6 Diesel	DSM(Driver's seat module)	Erase fault codes
S-Type	2006-2008	V6 Diesel	DSM(Driver's seat module)	Live Data
S-Type	2006-2008	V6 Diesel	FETM(Audio unit)	Read fault codes
S-Type	2006-2008	V6 Diesel	FETM(Audio unit)	Erase fault codes
S-Type	2006-2008	V6 Diesel	FETM(Audio unit)	Live Data
S-Type	2006-2008	V6 Diesel	GEM(General electronics control module)	Read fault codes
S-Type	2006-2008	V6 Diesel	GEM(General electronics control module)	Erase fault codes
S-Type	2006-2008	V6 Diesel	GEM(General electronics control module)	Live Data
S-Type	2006-2008	V6 Diesel	NAV(Navigation control module)	Read fault codes
S-Type	2006-2008	V6 Diesel	NAV(Navigation control module)	Erase fault codes
S-Type	2006-2008	V6 Diesel	NAV(Navigation control module)	Live Data
S-Type	2006-2008	V6 Diesel	REM(Rear electronic control module)	Read fault codes
S-Type	2006-2008	V6 Diesel	REM(Rear electronic control module)	Erase fault codes
S-Type	2006-2008	V6 Diesel	REM(Rear electronic control module)	Live Data
S-Type	2006-2008	V6 Diesel	SCLM(Steering column lock module)	Read fault codes
S-Type	2006-2008	V6 Diesel	SCLM(Steering column lock module)	Erase fault codes
S-Type	2006-2008	V6 Diesel	SCLM(Steering column lock module)	Live Data
S-Type	2006-2008	V6 Diesel	ADHLS(Headlamp levelling system)	Read fault codes
S-Type	2006-2008	V6 Diesel	ADHLS(Headlamp levelling system)	Erase fault codes
S-Type	2006-2008	V6 Diesel	ADHLS(Headlamp levelling system)	Live Data
S-Type	2006-2008	V6 Diesel	ARM(Restraints control module)	Read fault codes
S-Type	2006-2008	V6 Diesel	ARM(Restraints control module)	Erase fault codes
S-Type	2006-2008	V6 Diesel	ARM(Restraints control module)	Live Data
S-Type	2006-2008	V6 Diesel	ISM(Intrusion sensor module)	Read fault codes
S-Type	2006-2008	V6 Diesel	ISM(Intrusion sensor module)	Erase fault codes
S-Type	2006-2008	V6 Diesel	ISM(Intrusion sensor module)	Live Data
S-Type	2006-2008	V6 Diesel	PAM(Parking aid control module)	Read fault codes
S-Type	2006-2008	V6 Diesel	PAM(Parking aid control module)	Erase fault codes
S-Type	2006-2008	V6 Diesel	PAM(Parking aid control module)	Live Data
S-Type	2006-2008	V6 Diesel	AMP(Amplifier)	Read fault codes
S-Type	2006-2008	V6 Diesel	AMP(Amplifier)	Erase fault codes
S-Type	2006-2008	V6 Diesel	AMP(Amplifier)	Live Data
S-Type	2006-2008	V6 Diesel	CPM(Cellular telephone control module)	Read fault codes
S-Type	2006-2008	V6 Diesel	CPM(Cellular telephone control module)	Erase fault codes
S-Type	2006-2008	V6 Diesel	CPM(Cellular telephone control module)	Live Data
S-Type	2006-2008	V6 Diesel	VACM(Voice activation control module)	Read fault codes
S-Type	2006-2008	V6 Diesel	VACM(Voice activation control module)	Erase fault codes
S-Type	2006-2008	V6 Diesel	VACM(Voice activation control module)	Live Data
S-Type	2006-2008	V6 Diesel	Special Function	Manual oil reset
S-Type	2006-2008	V6 Diesel	Special Function	Oil service counter reset
S-Type	2006-2008	V6 Diesel	Special Function	Parking brake release to service position
S-Type	2006-2008	V6 Diesel	Special Function	Lateral accelerometer calibration
S-Type	2006-2008	V6 Diesel	Special Function	Powertrain configuration reset
S-Type	2006-2008	V6 Diesel	Special Function	Pressure sensor calibration
S-Type	2006-2008	V6 Diesel	Special Function	Yaw rate sensor calibration
S-Type	2006-2008	V6 Diesel	Special Function	Particle filter regeneration
S-Type	2006-2008	V6 Diesel	Special Function	Reset the diesel particulate filter stored values
S-Type	2006-2008	Supercharged V8	PCM(Powertrain control module)	ECU information
S-Type	2006-2008	Supercharged V8	PCM(Powertrain control module)	Read fault codes
S-Type	2006-2008	Supercharged V8	PCM(Powertrain control module)	Erase fault codes
S-Type	2006-2008	Supercharged V8	PCM(Powertrain control module)	Live Data
S-Type	2006-2008	Supercharged V8	TCM(Transmission control module)	Read fault codes
S-Type	2006-2008	Supercharged V8	TCM(Transmission control module)	Erase fault codes
S-Type	2006-2008	Supercharged V8	TCM(Transmission control module)	Live Data
S-Type	2006-2008	Supercharged V8	ABS(Anti-lock braking system)	ECU information
S-Type	2006-2008	Supercharged V8	ABS(Anti-lock braking system)	Read fault codes
S-Type	2006-2008	Supercharged V8	ABS(Anti-lock braking system)	Erase fault codes
S-Type	2006-2008	Supercharged V8	ABS(Anti-lock braking system)	Live Data
S-Type	2006-2008	Supercharged V8	PBM(Parking brake control module)	ECU information
S-Type	2006-2008	Supercharged V8	PBM(Parking brake control module)	Read fault codes
S-Type	2006-2008	Supercharged V8	PBM(Parking brake control module)	Erase fault codes
S-Type	2006-2008	Supercharged V8	PBM(Parking brake control module)	Live Data
S-Type	2006-2008	Supercharged V8	TPM(Tire pressure monitor module)	ECU information
S-Type	2006-2008	Supercharged V8	TPM(Tire pressure monitor module)	Read fault codes
S-Type	2006-2008	Supercharged V8	TPM(Tire pressure monitor module)	Erase fault codes
S-Type	2006-2008	Supercharged V8	TPM(Tire pressure monitor module)	Live Data
S-Type	2006-2008	Supercharged V8	ACC(Adaptive speed control control module)	Read fault codes
S-Type	2006-2008	Supercharged V8	ACC(Adaptive speed control control module)	Erase fault codes
S-Type	2006-2008	Supercharged V8	ACC(Adaptive speed control control module)	Live Data
S-Type	2006-2008	Supercharged V8	ATC(Climate control module)	Read fault codes
S-Type	2006-2008	Supercharged V8	ATC(Climate control module)	Erase fault codes
S-Type	2006-2008	Supercharged V8	ATC(Climate control module)	Live Data
S-Type	2006-2008	Supercharged V8	IP(Instrument pack)	Read fault codes
S-Type	2006-2008	Supercharged V8	IP(Instrument pack)	Erase fault codes
S-Type	2006-2008	Supercharged V8	IP(Instrument pack)	Live Data
S-Type	2006-2008	Supercharged V8	ADRC(Adaptive damping ride control)	Read fault codes
S-Type	2006-2008	Supercharged V8	ADRC(Adaptive damping ride control)	Erase fault codes
S-Type	2006-2008	Supercharged V8	ADRC(Adaptive damping ride control)	Live Data
S-Type	2006-2008	Supercharged V8	DDM(Driver's door module)	Read fault codes
S-Type	2006-2008	Supercharged V8	DDM(Driver's door module)	Erase fault codes
S-Type	2006-2008	Supercharged V8	DDM(Driver's door module)	Live Data
S-Type	2006-2008	Supercharged V8	DSM(Driver's seat module)	Read fault codes
S-Type	2006-2008	Supercharged V8	DSM(Driver's seat module)	Erase fault codes
S-Type	2006-2008	Supercharged V8	DSM(Driver's seat module)	Live Data
S-Type	2006-2008	Supercharged V8	FETM(Audio unit)	Read fault codes
S-Type	2006-2008	Supercharged V8	FETM(Audio unit)	Erase fault codes
S-Type	2006-2008	Supercharged V8	FETM(Audio unit)	Live Data
S-Type	2006-2008	Supercharged V8	GEM(General electronics control module)	Read fault codes
S-Type	2006-2008	Supercharged V8	GEM(General electronics control module)	Erase fault codes
S-Type	2006-2008	Supercharged V8	GEM(General electronics control module)	Live Data

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
S-Type	2006-2008	Supercharged V8	NAV(Navigation control module)	Read fault codes
S-Type	2006-2008	Supercharged V8	NAV(Navigation control module)	Erase fault codes
S-Type	2006-2008	Supercharged V8	NAV(Navigation control module)	Live Data
S-Type	2006-2008	Supercharged V8	REM(Rear electronic control module)	Read fault codes
S-Type	2006-2008	Supercharged V8	REM(Rear electronic control module)	Erase fault codes
S-Type	2006-2008	Supercharged V8	REM(Rear electronic control module)	Live Data
S-Type	2006-2008	Supercharged V8	SCLM(Steering column lock module)	Read fault codes
S-Type	2006-2008	Supercharged V8	SCLM(Steering column lock module)	Erase fault codes
S-Type	2006-2008	Supercharged V8	SCLM(Steering column lock module)	Live Data
S-Type	2006-2008	Supercharged V8	ADHLS(Headlamp levelling system)	Read fault codes
S-Type	2006-2008	Supercharged V8	ADHLS(Headlamp levelling system)	Erase fault codes
S-Type	2006-2008	Supercharged V8	ADHLS(Headlamp levelling system)	Live Data
S-Type	2006-2008	Supercharged V8	ARM(Restraints control module)	Read fault codes
S-Type	2006-2008	Supercharged V8	ARM(Restraints control module)	Erase fault codes
S-Type	2006-2008	Supercharged V8	ARM(Restraints control module)	Live Data
S-Type	2006-2008	Supercharged V8	ISM(Intrusion sensor module)	Read fault codes
S-Type	2006-2008	Supercharged V8	ISM(Intrusion sensor module)	Erase fault codes
S-Type	2006-2008	Supercharged V8	ISM(Intrusion sensor module)	Live Data
S-Type	2006-2008	Supercharged V8	PAM(Parking aid control module)	Read fault codes
S-Type	2006-2008	Supercharged V8	PAM(Parking aid control module)	Erase fault codes
S-Type	2006-2008	Supercharged V8	PAM(Parking aid control module)	Live Data
S-Type	2006-2008	Supercharged V8	AMP(Amplifier)	Read fault codes
S-Type	2006-2008	Supercharged V8	AMP(Amplifier)	Erase fault codes
S-Type	2006-2008	Supercharged V8	AMP(Amplifier)	Live Data
S-Type	2006-2008	Supercharged V8	CPM(Cellular telephone control module)	Read fault codes
S-Type	2006-2008	Supercharged V8	CPM(Cellular telephone control module)	Erase fault codes
S-Type	2006-2008	Supercharged V8	CPM(Cellular telephone control module)	Live Data
S-Type	2006-2008	Supercharged V8	VACM(Voice activation control module)	Read fault codes
S-Type	2006-2008	Supercharged V8	VACM(Voice activation control module)	Erase fault codes
S-Type	2006-2008	Supercharged V8	VACM(Voice activation control module)	Live Data
S-Type	2006-2008	Supercharged V8	Special Function	Manual oil reset
S-Type	2006-2008	Supercharged V8	Special Function	Parking brake release to service position
S-Type	2006-2008	Supercharged V8	Special Function	Lateral accelerometer calibration
S-Type	2006-2008	Supercharged V8	Special Function	Powertrain configuration reset
S-Type	2006-2008	Supercharged V8	Special Function	Pressure sensor calibration
S-Type	2006-2008	Supercharged V8	Special Function	Yaw rate sensor calibration
S-Type	2006-2008	Normally Aspirated V6 3.0L	PCM(Powertrain control module)	ECU information
S-Type	2006-2008	Normally Aspirated V6 3.0L	PCM(Powertrain control module)	Read fault codes
S-Type	2006-2008	Normally Aspirated V6 3.0L	PCM(Powertrain control module)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V6 3.0L	PCM(Powertrain control module)	Live Data
S-Type	2006-2008	Normally Aspirated V6 3.0L	TCM(Transmission control module)	Read fault codes
S-Type	2006-2008	Normally Aspirated V6 3.0L	TCM(Transmission control module)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V6 3.0L	TCM(Transmission control module)	Live Data
S-Type	2006-2008	Normally Aspirated V6 3.0L	ABS(Anti-lock braking system)	ECU information
S-Type	2006-2008	Normally Aspirated V6 3.0L	ABS(Anti-lock braking system)	Read fault codes
S-Type	2006-2008	Normally Aspirated V6 3.0L	ABS(Anti-lock braking system)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V6 3.0L	ABS(Anti-lock braking system)	Live Data
S-Type	2006-2008	Normally Aspirated V6 3.0L	PBM(Parking brake control module)	ECU information
S-Type	2006-2008	Normally Aspirated V6 3.0L	PBM(Parking brake control module)	Read fault codes
S-Type	2006-2008	Normally Aspirated V6 3.0L	PBM(Parking brake control module)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V6 3.0L	PBM(Parking brake control module)	Live Data
S-Type	2006-2008	Normally Aspirated V6 3.0L	TPM(Tire pressure monitor module)	ECU information
S-Type	2006-2008	Normally Aspirated V6 3.0L	TPM(Tire pressure monitor module)	Read fault codes
S-Type	2006-2008	Normally Aspirated V6 3.0L	TPM(Tire pressure monitor module)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V6 3.0L	TPM(Tire pressure monitor module)	Live Data
S-Type	2006-2008	Normally Aspirated V6 3.0L	ACC(Adaptive speed control control module)	Read fault codes
S-Type	2006-2008	Normally Aspirated V6 3.0L	ACC(Adaptive speed control control module)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V6 3.0L	ACC(Adaptive speed control control module)	Live Data
S-Type	2006-2008	Normally Aspirated V6 3.0L	ATC(Climate control module)	Read fault codes
S-Type	2006-2008	Normally Aspirated V6 3.0L	ATC(Climate control module)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V6 3.0L	ATC(Climate control module)	Live Data
S-Type	2006-2008	Normally Aspirated V6 3.0L	IP(Instrument pack)	Read fault codes
S-Type	2006-2008	Normally Aspirated V6 3.0L	IP(Instrument pack)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V6 3.0L	IP(Instrument pack)	Live Data
S-Type	2006-2008	Normally Aspirated V6 3.0L	ADRC(Adaptive damping ride control)	Read fault codes
S-Type	2006-2008	Normally Aspirated V6 3.0L	ADRC(Adaptive damping ride control)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V6 3.0L	ADRC(Adaptive damping ride control)	Live Data
S-Type	2006-2008	Normally Aspirated V6 3.0L	DDM(Driver's door module)	Read fault codes
S-Type	2006-2008	Normally Aspirated V6 3.0L	DDM(Driver's door module)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V6 3.0L	DDM(Driver's door module)	Live Data
S-Type	2006-2008	Normally Aspirated V6 3.0L	DSM(Driver's seat module)	Read fault codes
S-Type	2006-2008	Normally Aspirated V6 3.0L	DSM(Driver's seat module)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V6 3.0L	DSM(Driver's seat module)	Live Data
S-Type	2006-2008	Normally Aspirated V6 3.0L	FETM(Audio unit)	Read fault codes
S-Type	2006-2008	Normally Aspirated V6 3.0L	FETM(Audio unit)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V6 3.0L	FETM(Audio unit)	Live Data
S-Type	2006-2008	Normally Aspirated V6 3.0L	GEM(General electronics control module)	Read fault codes
S-Type	2006-2008	Normally Aspirated V6 3.0L	GEM(General electronics control module)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V6 3.0L	GEM(General electronics control module)	Live Data
S-Type	2006-2008	Normally Aspirated V6 3.0L	NAV(Navigation control module)	Read fault codes
S-Type	2006-2008	Normally Aspirated V6 3.0L	NAV(Navigation control module)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V6 3.0L	NAV(Navigation control module)	Live Data
S-Type	2006-2008	Normally Aspirated V6 3.0L	REM(Rear electronic control module)	Read fault codes
S-Type	2006-2008	Normally Aspirated V6 3.0L	REM(Rear electronic control module)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V6 3.0L	REM(Rear electronic control module)	Live Data
S-Type	2006-2008	Normally Aspirated V6 3.0L	SCLM(Steering column lock module)	Read fault codes
S-Type	2006-2008	Normally Aspirated V6 3.0L	SCLM(Steering column lock module)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V6 3.0L	SCLM(Steering column lock module)	Live Data
S-Type	2006-2008	Normally Aspirated V6 3.0L	ADHLS(Headlamp levelling system)	Read fault codes
S-Type	2006-2008	Normally Aspirated V6 3.0L	ADHLS(Headlamp levelling system)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V6 3.0L	ADHLS(Headlamp levelling system)	Live Data
S-Type	2006-2008	Normally Aspirated V6 3.0L	ARM(Restraints control module)	Read fault codes

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
S-Type	2006-2008	Normally Aspirated V6 3.0L	ARM(Restrains control module)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V6 3.0L	ARM(Restrains control module)	Live Data
S-Type	2006-2008	Normally Aspirated V6 3.0L	ISM(Intrusion sensor module)	Read fault codes
S-Type	2006-2008	Normally Aspirated V6 3.0L	ISM(Intrusion sensor module)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V6 3.0L	ISM(Intrusion sensor module)	Live Data
S-Type	2006-2008	Normally Aspirated V6 3.0L	PAM(Parking aid control module)	Read fault codes
S-Type	2006-2008	Normally Aspirated V6 3.0L	PAM(Parking aid control module)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V6 3.0L	PAM(Parking aid control module)	Live Data
S-Type	2006-2008	Normally Aspirated V6 3.0L	AMP(Amplifier)	Read fault codes
S-Type	2006-2008	Normally Aspirated V6 3.0L	AMP(Amplifier)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V6 3.0L	AMP(Amplifier)	Live Data
S-Type	2006-2008	Normally Aspirated V6 3.0L	CPM(Cellular telephone control module)	Read fault codes
S-Type	2006-2008	Normally Aspirated V6 3.0L	CPM(Cellular telephone control module)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V6 3.0L	CPM(Cellular telephone control module)	Live Data
S-Type	2006-2008	Normally Aspirated V6 3.0L	VACM(Voice activation control module)	Read fault codes
S-Type	2006-2008	Normally Aspirated V6 3.0L	VACM(Voice activation control module)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V6 3.0L	VACM(Voice activation control module)	Live Data
S-Type	2006-2008	Normally Aspirated V6 3.0L	Special Function	Manual oil reset
S-Type	2006-2008	Normally Aspirated V6 3.0L	Special Function	Parking brake release to service position
S-Type	2006-2008	Normally Aspirated V6 3.0L	Special Function	Lateral accelerometer calibration
S-Type	2006-2008	Normally Aspirated V6 3.0L	Special Function	Powertrain configuration reset
S-Type	2006-2008	Normally Aspirated V6 3.0L	Special Function	Pressure sensor calibration
S-Type	2006-2008	Normally Aspirated V6 3.0L	Special Function	Yaw rate sensor calibration
S-Type	2006-2008	Normally Aspirated V6 2.5L	PCM(Powertrain control module)	ECU information
S-Type	2006-2008	Normally Aspirated V6 2.5L	PCM(Powertrain control module)	Read fault codes
S-Type	2006-2008	Normally Aspirated V6 2.5L	PCM(Powertrain control module)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V6 2.5L	PCM(Powertrain control module)	Live Data
S-Type	2006-2008	Normally Aspirated V6 2.5L	TCM(Transmission control module)	Read fault codes
S-Type	2006-2008	Normally Aspirated V6 2.5L	TCM(Transmission control module)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V6 2.5L	TCM(Transmission control module)	Live Data
S-Type	2006-2008	Normally Aspirated V6 2.5L	ABS(Anti-lock braking system)	ECU information
S-Type	2006-2008	Normally Aspirated V6 2.5L	ABS(Anti-lock braking system)	Read fault codes
S-Type	2006-2008	Normally Aspirated V6 2.5L	ABS(Anti-lock braking system)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V6 2.5L	ABS(Anti-lock braking system)	Live Data
S-Type	2006-2008	Normally Aspirated V6 2.5L	PBM(Parking brake control module)	ECU information
S-Type	2006-2008	Normally Aspirated V6 2.5L	PBM(Parking brake control module)	Read fault codes
S-Type	2006-2008	Normally Aspirated V6 2.5L	PBM(Parking brake control module)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V6 2.5L	PBM(Parking brake control module)	Live Data
S-Type	2006-2008	Normally Aspirated V6 2.5L	TPM(Tire pressure monitor module)	ECU information
S-Type	2006-2008	Normally Aspirated V6 2.5L	TPM(Tire pressure monitor module)	Read fault codes
S-Type	2006-2008	Normally Aspirated V6 2.5L	TPM(Tire pressure monitor module)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V6 2.5L	TPM(Tire pressure monitor module)	Live Data
S-Type	2006-2008	Normally Aspirated V6 2.5L	ACC(Adaptive speed control control module)	Read fault codes
S-Type	2006-2008	Normally Aspirated V6 2.5L	ACC(Adaptive speed control control module)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V6 2.5L	ACC(Adaptive speed control control module)	Live Data
S-Type	2006-2008	Normally Aspirated V6 2.5L	ATC(Climate control module)	Read fault codes
S-Type	2006-2008	Normally Aspirated V6 2.5L	ATC(Climate control module)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V6 2.5L	ATC(Climate control module)	Live Data
S-Type	2006-2008	Normally Aspirated V6 2.5L	IP(Instrument pack)	Read fault codes
S-Type	2006-2008	Normally Aspirated V6 2.5L	IP(Instrument pack)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V6 2.5L	IP(Instrument pack)	Live Data
S-Type	2006-2008	Normally Aspirated V6 2.5L	ADRC(Adaptive damping ride control)	Read fault codes
S-Type	2006-2008	Normally Aspirated V6 2.5L	ADRC(Adaptive damping ride control)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V6 2.5L	ADRC(Adaptive damping ride control)	Live Data
S-Type	2006-2008	Normally Aspirated V6 2.5L	DDM(Driver's door module)	Read fault codes
S-Type	2006-2008	Normally Aspirated V6 2.5L	DDM(Driver's door module)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V6 2.5L	DDM(Driver's door module)	Live Data
S-Type	2006-2008	Normally Aspirated V6 2.5L	DSM(Driver's seat module)	Read fault codes
S-Type	2006-2008	Normally Aspirated V6 2.5L	DSM(Driver's seat module)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V6 2.5L	DSM(Driver's seat module)	Live Data
S-Type	2006-2008	Normally Aspirated V6 2.5L	FETM(Audio unit)	Read fault codes
S-Type	2006-2008	Normally Aspirated V6 2.5L	FETM(Audio unit)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V6 2.5L	FETM(Audio unit)	Live Data
S-Type	2006-2008	Normally Aspirated V6 2.5L	GEM(General electronics control module)	Read fault codes
S-Type	2006-2008	Normally Aspirated V6 2.5L	GEM(General electronics control module)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V6 2.5L	GEM(General electronics control module)	Live Data
S-Type	2006-2008	Normally Aspirated V6 2.5L	NAV(Navigation control module)	Read fault codes
S-Type	2006-2008	Normally Aspirated V6 2.5L	NAV(Navigation control module)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V6 2.5L	NAV(Navigation control module)	Live Data
S-Type	2006-2008	Normally Aspirated V6 2.5L	REM(Rear electronic control module)	Read fault codes
S-Type	2006-2008	Normally Aspirated V6 2.5L	REM(Rear electronic control module)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V6 2.5L	REM(Rear electronic control module)	Live Data
S-Type	2006-2008	Normally Aspirated V6 2.5L	SCLM(Steering column lock module)	Read fault codes
S-Type	2006-2008	Normally Aspirated V6 2.5L	SCLM(Steering column lock module)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V6 2.5L	SCLM(Steering column lock module)	Live Data
S-Type	2006-2008	Normally Aspirated V6 2.5L	ADHLS(Headlamp levelling system)	Read fault codes
S-Type	2006-2008	Normally Aspirated V6 2.5L	ADHLS(Headlamp levelling system)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V6 2.5L	ADHLS(Headlamp levelling system)	Live Data
S-Type	2006-2008	Normally Aspirated V6 2.5L	ARM(Restrains control module)	Read fault codes
S-Type	2006-2008	Normally Aspirated V6 2.5L	ARM(Restrains control module)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V6 2.5L	ARM(Restrains control module)	Live Data
S-Type	2006-2008	Normally Aspirated V6 2.5L	ISM(Intrusion sensor module)	Read fault codes
S-Type	2006-2008	Normally Aspirated V6 2.5L	ISM(Intrusion sensor module)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V6 2.5L	ISM(Intrusion sensor module)	Live Data
S-Type	2006-2008	Normally Aspirated V6 2.5L	PAM(Parking aid control module)	Read fault codes
S-Type	2006-2008	Normally Aspirated V6 2.5L	PAM(Parking aid control module)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V6 2.5L	PAM(Parking aid control module)	Live Data
S-Type	2006-2008	Normally Aspirated V6 2.5L	AMP(Amplifier)	Read fault codes
S-Type	2006-2008	Normally Aspirated V6 2.5L	AMP(Amplifier)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V6 2.5L	AMP(Amplifier)	Live Data
S-Type	2006-2008	Normally Aspirated V6 2.5L	CPM(Cellular telephone control module)	Read fault codes
S-Type	2006-2008	Normally Aspirated V6 2.5L	CPM(Cellular telephone control module)	Erase fault codes

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
S-Type	2006-2008	Normally Aspirated V6 2.5L	CPM(Cellular telephone control module)	Live Data
S-Type	2006-2008	Normally Aspirated V6 2.5L	VACM(Voice activation control module)	Read fault codes
S-Type	2006-2008	Normally Aspirated V6 2.5L	VACM(Voice activation control module)	Erase fault codes
S-Type	2006-2008	Normally Aspirated V6 2.5L	VACM(Voice activation control module)	Live Data
S-Type	2006-2008	Normally Aspirated V6 2.5L	Special Function	Manual oil reset
S-Type	2006-2008	Normally Aspirated V6 2.5L	Special Function	Parking brake release to service position
S-Type	2006-2008	Normally Aspirated V6 2.5L	Special Function	Lateral accelerometer calibration
S-Type	2006-2008	Normally Aspirated V6 2.5L	Special Function	Powertrain configuration reset
S-Type	2006-2008	Normally Aspirated V6 2.5L	Special Function	Pressure sensor calibration
S-Type	2006-2008	Normally Aspirated V6 2.5L	Special Function	Yaw rate sensor calibration
S-Type	2004-2005	V6 Diesel	PCM(Powertrain control module)	ECU information
S-Type	2004-2005	V6 Diesel	PCM(Powertrain control module)	Read fault codes
S-Type	2004-2005	V6 Diesel	PCM(Powertrain control module)	Erase fault codes
S-Type	2004-2005	V6 Diesel	PCM(Powertrain control module)	Live Data
S-Type	2004-2005	V6 Diesel	TCM(Transmission control module)	Read fault codes
S-Type	2004-2005	V6 Diesel	TCM(Transmission control module)	Erase fault codes
S-Type	2004-2005	V6 Diesel	TCM(Transmission control module)	Live Data
S-Type	2004-2005	V6 Diesel	ABS(Anti-lock braking system)	Read fault codes
S-Type	2004-2005	V6 Diesel	ABS(Anti-lock braking system)	Erase fault codes
S-Type	2004-2005	V6 Diesel	ABS(Anti-lock braking system)	Live Data
S-Type	2004-2005	V6 Diesel	IP(Instrument pack)	Read fault codes
S-Type	2004-2005	V6 Diesel	IP(Instrument pack)	Erase fault codes
S-Type	2004-2005	V6 Diesel	IP(Instrument pack)	Live Data
S-Type	2004-2005	V6 Diesel	PBM(Parking brake control module)	ECU information
S-Type	2004-2005	V6 Diesel	PBM(Parking brake control module)	Read fault codes
S-Type	2004-2005	V6 Diesel	PBM(Parking brake control module)	Erase fault codes
S-Type	2004-2005	V6 Diesel	PBM(Parking brake control module)	Live Data
S-Type	2004-2005	V6 Diesel	AHCM(Auxiliary heater control module)	ECU information
S-Type	2004-2005	V6 Diesel	AHCM(Auxiliary heater control module)	Read fault codes
S-Type	2004-2005	V6 Diesel	AHCM(Auxiliary heater control module)	Erase fault codes
S-Type	2004-2005	V6 Diesel	AHCM(Auxiliary heater control module)	Live Data
S-Type	2004-2005	V6 Diesel	ACC(Adaptive speed control control module)	Read fault codes
S-Type	2004-2005	V6 Diesel	ACC(Adaptive speed control control module)	Erase fault codes
S-Type	2004-2005	V6 Diesel	ACC(Adaptive speed control control module)	Live Data
S-Type	2004-2005	V6 Diesel	ATC(Climate control module)	Read fault codes
S-Type	2004-2005	V6 Diesel	ATC(Climate control module)	Erase fault codes
S-Type	2004-2005	V6 Diesel	ATC(Climate control module)	Live Data
S-Type	2004-2005	V6 Diesel	ADRC(Adaptive damping ride control)	Read fault codes
S-Type	2004-2005	V6 Diesel	ADRC(Adaptive damping ride control)	Erase fault codes
S-Type	2004-2005	V6 Diesel	ADRC(Adaptive damping ride control)	Live Data
S-Type	2004-2005	V6 Diesel	DDM(Driver's door module)	Read fault codes
S-Type	2004-2005	V6 Diesel	DDM(Driver's door module)	Erase fault codes
S-Type	2004-2005	V6 Diesel	DDM(Driver's door module)	Live Data
S-Type	2004-2005	V6 Diesel	DSM(Driver's seat module)	Read fault codes
S-Type	2004-2005	V6 Diesel	DSM(Driver's seat module)	Erase fault codes
S-Type	2004-2005	V6 Diesel	DSM(Driver's seat module)	Live Data
S-Type	2004-2005	V6 Diesel	FETM(Audio unit)	Read fault codes
S-Type	2004-2005	V6 Diesel	FETM(Audio unit)	Erase fault codes
S-Type	2004-2005	V6 Diesel	FETM(Audio unit)	Live Data
S-Type	2004-2005	V6 Diesel	GEM(General electronics control module)	Read fault codes
S-Type	2004-2005	V6 Diesel	GEM(General electronics control module)	Erase fault codes
S-Type	2004-2005	V6 Diesel	GEM(General electronics control module)	Live Data
S-Type	2004-2005	V6 Diesel	NAV(Navigation control module)	Read fault codes
S-Type	2004-2005	V6 Diesel	NAV(Navigation control module)	Erase fault codes
S-Type	2004-2005	V6 Diesel	NAV(Navigation control module)	Live Data
S-Type	2004-2005	V6 Diesel	REM(Rear electronic control module)	Read fault codes
S-Type	2004-2005	V6 Diesel	REM(Rear electronic control module)	Erase fault codes
S-Type	2004-2005	V6 Diesel	REM(Rear electronic control module)	Live Data
S-Type	2004-2005	V6 Diesel	SCLM(Steering column lock module)	Read fault codes
S-Type	2004-2005	V6 Diesel	SCLM(Steering column lock module)	Erase fault codes
S-Type	2004-2005	V6 Diesel	SCLM(Steering column lock module)	Live Data
S-Type	2004-2005	V6 Diesel	ADHLS(Headlamp levelling system)	Read fault codes
S-Type	2004-2005	V6 Diesel	ADHLS(Headlamp levelling system)	Erase fault codes
S-Type	2004-2005	V6 Diesel	ADHLS(Headlamp levelling system)	Live Data
S-Type	2004-2005	V6 Diesel	ARM(Restraints control module)	Read fault codes
S-Type	2004-2005	V6 Diesel	ARM(Restraints control module)	Erase fault codes
S-Type	2004-2005	V6 Diesel	ARM(Restraints control module)	Live Data
S-Type	2004-2005	V6 Diesel	ISM(Intrusion sensor module)	Read fault codes
S-Type	2004-2005	V6 Diesel	ISM(Intrusion sensor module)	Erase fault codes
S-Type	2004-2005	V6 Diesel	ISM(Intrusion sensor module)	Live Data
S-Type	2004-2005	V6 Diesel	PAM(Parking aid control module)	Read fault codes
S-Type	2004-2005	V6 Diesel	PAM(Parking aid control module)	Erase fault codes
S-Type	2004-2005	V6 Diesel	PAM(Parking aid control module)	Live Data
S-Type	2004-2005	V6 Diesel	AMP(Amplifier)	Read fault codes
S-Type	2004-2005	V6 Diesel	AMP(Amplifier)	Erase fault codes
S-Type	2004-2005	V6 Diesel	AMP(Amplifier)	Live Data
S-Type	2004-2005	V6 Diesel	CPM(Cellular telephone control module)	Read fault codes
S-Type	2004-2005	V6 Diesel	CPM(Cellular telephone control module)	Erase fault codes
S-Type	2004-2005	V6 Diesel	CPM(Cellular telephone control module)	Live Data
S-Type	2004-2005	V6 Diesel	VACM(Voice activation control module)	Read fault codes
S-Type	2004-2005	V6 Diesel	VACM(Voice activation control module)	Erase fault codes
S-Type	2004-2005	V6 Diesel	VACM(Voice activation control module)	Live Data
S-Type	2004-2005	V6 Diesel	Special Function	Manual oil reset
S-Type	2004-2005	V6 Diesel	Special Function	Oil dilution reset
S-Type	2004-2005	V6 Diesel	Special Function	Parking brake release to service position
S-Type	2004-2005	AJ161 2.5L	ECM(Engine control module)	Read fault codes
S-Type	2004-2005	AJ161 2.5L	ECM(Engine control module)	Erase fault codes
S-Type	2004-2005	AJ161 2.5L	ECM(Engine control module)	Live Data
S-Type	2004-2005	AJ161 2.5L	PBM(Parking brake control module)	ECU information
S-Type	2004-2005	AJ161 2.5L	PBM(Parking brake control module)	Read fault codes
S-Type	2004-2005	AJ161 2.5L	PBM(Parking brake control module)	Erase fault codes
S-Type	2004-2005	AJ161 2.5L	PBM(Parking brake control module)	Live Data

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
S-Type	2004-2005	AJ61 2.5L	ABS(Anti-lock braking system)	Read fault codes
S-Type	2004-2005	AJ61 2.5L	ABS(Anti-lock braking system)	Erase fault codes
S-Type	2004-2005	AJ61 2.5L	ABS(Anti-lock braking system)	Live Data
S-Type	2004-2005	AJ61 2.5L	IP(Instrument pack)	Read fault codes
S-Type	2004-2005	AJ61 2.5L	IP(Instrument pack)	Erase fault codes
S-Type	2004-2005	AJ61 2.5L	IP(Instrument pack)	Live Data
S-Type	2004-2005	AJ61 2.5L	ACC(Adaptive speed control control module)	Read fault codes
S-Type	2004-2005	AJ61 2.5L	ACC(Adaptive speed control control module)	Erase fault codes
S-Type	2004-2005	AJ61 2.5L	ACC(Adaptive speed control control module)	Live Data
S-Type	2004-2005	AJ61 2.5L	ATC(Climate control module)	Read fault codes
S-Type	2004-2005	AJ61 2.5L	ATC(Climate control module)	Erase fault codes
S-Type	2004-2005	AJ61 2.5L	ATC(Climate control module)	Live Data
S-Type	2004-2005	AJ61 2.5L	TCM(Transmission control module)	Read fault codes
S-Type	2004-2005	AJ61 2.5L	TCM(Transmission control module)	Erase fault codes
S-Type	2004-2005	AJ61 2.5L	TCM(Transmission control module)	Live Data
S-Type	2004-2005	AJ61 2.5L	ADRC(Adaptive damping ride control)	Read fault codes
S-Type	2004-2005	AJ61 2.5L	ADRC(Adaptive damping ride control)	Erase fault codes
S-Type	2004-2005	AJ61 2.5L	ADRC(Adaptive damping ride control)	Live Data
S-Type	2004-2005	AJ61 2.5L	DDM(Driver's door module)	Read fault codes
S-Type	2004-2005	AJ61 2.5L	DDM(Driver's door module)	Erase fault codes
S-Type	2004-2005	AJ61 2.5L	DDM(Driver's door module)	Live Data
S-Type	2004-2005	AJ61 2.5L	DSM(Driver's seat module)	Read fault codes
S-Type	2004-2005	AJ61 2.5L	DSM(Driver's seat module)	Erase fault codes
S-Type	2004-2005	AJ61 2.5L	DSM(Driver's seat module)	Live Data
S-Type	2004-2005	AJ61 2.5L	FETM(Audio unit)	Read fault codes
S-Type	2004-2005	AJ61 2.5L	FETM(Audio unit)	Erase fault codes
S-Type	2004-2005	AJ61 2.5L	FETM(Audio unit)	Live Data
S-Type	2004-2005	AJ61 2.5L	GEM(General electronics control module)	Read fault codes
S-Type	2004-2005	AJ61 2.5L	GEM(General electronics control module)	Erase fault codes
S-Type	2004-2005	AJ61 2.5L	GEM(General electronics control module)	Live Data
S-Type	2004-2005	AJ61 2.5L	NAV(Navigation control module)	Read fault codes
S-Type	2004-2005	AJ61 2.5L	NAV(Navigation control module)	Erase fault codes
S-Type	2004-2005	AJ61 2.5L	NAV(Navigation control module)	Live Data
S-Type	2004-2005	AJ61 2.5L	REM(Rear electronic control module)	Read fault codes
S-Type	2004-2005	AJ61 2.5L	REM(Rear electronic control module)	Erase fault codes
S-Type	2004-2005	AJ61 2.5L	REM(Rear electronic control module)	Live Data
S-Type	2004-2005	AJ61 2.5L	SCLM(Steering column lock module)	Read fault codes
S-Type	2004-2005	AJ61 2.5L	SCLM(Steering column lock module)	Erase fault codes
S-Type	2004-2005	AJ61 2.5L	SCLM(Steering column lock module)	Live Data
S-Type	2004-2005	AJ61 2.5L	ADHLS(Headlamp levelling system)	Read fault codes
S-Type	2004-2005	AJ61 2.5L	ADHLS(Headlamp levelling system)	Erase fault codes
S-Type	2004-2005	AJ61 2.5L	ADHLS(Headlamp levelling system)	Live Data
S-Type	2004-2005	AJ61 2.5L	ARM(Restraints control module)	Read fault codes
S-Type	2004-2005	AJ61 2.5L	ARM(Restraints control module)	Erase fault codes
S-Type	2004-2005	AJ61 2.5L	ARM(Restraints control module)	Live Data
S-Type	2004-2005	AJ61 2.5L	ISM(Intrusion sensor module)	Read fault codes
S-Type	2004-2005	AJ61 2.5L	ISM(Intrusion sensor module)	Erase fault codes
S-Type	2004-2005	AJ61 2.5L	ISM(Intrusion sensor module)	Live Data
S-Type	2004-2005	AJ61 2.5L	PAM(Parking aid control module)	Read fault codes
S-Type	2004-2005	AJ61 2.5L	PAM(Parking aid control module)	Erase fault codes
S-Type	2004-2005	AJ61 2.5L	PAM(Parking aid control module)	Live Data
S-Type	2004-2005	AJ61 2.5L	AMP(Amplifier)	Read fault codes
S-Type	2004-2005	AJ61 2.5L	AMP(Amplifier)	Erase fault codes
S-Type	2004-2005	AJ61 2.5L	AMP(Amplifier)	Live Data
S-Type	2004-2005	AJ61 2.5L	CPM(Cellular telephone control module)	Read fault codes
S-Type	2004-2005	AJ61 2.5L	CPM(Cellular telephone control module)	Erase fault codes
S-Type	2004-2005	AJ61 2.5L	CPM(Cellular telephone control module)	Live Data
S-Type	2004-2005	AJ61 2.5L	VACM(Voice activation control module)	Read fault codes
S-Type	2004-2005	AJ61 2.5L	VACM(Voice activation control module)	Erase fault codes
S-Type	2004-2005	AJ61 2.5L	VACM(Voice activation control module)	Live Data
S-Type	2004-2005	AJ61 2.5L	Special Function	Manual oil reset
S-Type	2004-2005	AJ61 2.5L	Special Function	Oil dilution reset
S-Type	2004-2005	AJ61 2.5L	Special Function	Parking brake release to service position
S-Type	2004-2005	AJ61 3.0L	ECM(Engine control module)	Read fault codes
S-Type	2004-2005	AJ61 3.0L	ECM(Engine control module)	Erase fault codes
S-Type	2004-2005	AJ61 3.0L	ECM(Engine control module)	Live Data
S-Type	2004-2005	AJ61 3.0L	TCM(Transmission control module)	Read fault codes
S-Type	2004-2005	AJ61 3.0L	TCM(Transmission control module)	Erase fault codes
S-Type	2004-2005	AJ61 3.0L	TCM(Transmission control module)	Live Data
S-Type	2004-2005	AJ61 3.0L	IP(Instrument pack)	Read fault codes
S-Type	2004-2005	AJ61 3.0L	IP(Instrument pack)	Erase fault codes
S-Type	2004-2005	AJ61 3.0L	IP(Instrument pack)	Live Data
S-Type	2004-2005	AJ61 3.0L	PBM(Parking brake control module)	ECU information
S-Type	2004-2005	AJ61 3.0L	PBM(Parking brake control module)	Read fault codes
S-Type	2004-2005	AJ61 3.0L	PBM(Parking brake control module)	Erase fault codes
S-Type	2004-2005	AJ61 3.0L	PBM(Parking brake control module)	Live Data
S-Type	2004-2005	AJ61 3.0L	ABS(Anti-lock braking system)	Read fault codes
S-Type	2004-2005	AJ61 3.0L	ABS(Anti-lock braking system)	Erase fault codes
S-Type	2004-2005	AJ61 3.0L	ABS(Anti-lock braking system)	Live Data
S-Type	2004-2005	AJ61 3.0L	ACC(Adaptive speed control control module)	Read fault codes
S-Type	2004-2005	AJ61 3.0L	ACC(Adaptive speed control control module)	Erase fault codes
S-Type	2004-2005	AJ61 3.0L	ACC(Adaptive speed control control module)	Live Data
S-Type	2004-2005	AJ61 3.0L	ATC(Climate control module)	Read fault codes
S-Type	2004-2005	AJ61 3.0L	ATC(Climate control module)	Erase fault codes
S-Type	2004-2005	AJ61 3.0L	ATC(Climate control module)	Live Data
S-Type	2004-2005	AJ61 3.0L	ADRC(Adaptive damping ride control)	Read fault codes
S-Type	2004-2005	AJ61 3.0L	ADRC(Adaptive damping ride control)	Erase fault codes
S-Type	2004-2005	AJ61 3.0L	ADRC(Adaptive damping ride control)	Live Data
S-Type	2004-2005	AJ61 3.0L	DDM(Driver's door module)	Read fault codes
S-Type	2004-2005	AJ61 3.0L	DDM(Driver's door module)	Erase fault codes
S-Type	2004-2005	AJ61 3.0L	DDM(Driver's door module)	Live Data
S-Type	2004-2005	AJ61 3.0L	DSM(Driver's seat module)	Read fault codes

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
S-Type	2004-2005	AJ61 3.0L	DSM(Driver's seat module)	Erase fault codes
S-Type	2004-2005	AJ61 3.0L	DSM(Driver's seat module)	Live Data
S-Type	2004-2005	AJ61 3.0L	FETM(Audio unit)	Read fault codes
S-Type	2004-2005	AJ61 3.0L	FETM(Audio unit)	Erase fault codes
S-Type	2004-2005	AJ61 3.0L	FETM(Audio unit)	Live Data
S-Type	2004-2005	AJ61 3.0L	GEM(General electronics control module)	Read fault codes
S-Type	2004-2005	AJ61 3.0L	GEM(General electronics control module)	Erase fault codes
S-Type	2004-2005	AJ61 3.0L	GEM(General electronics control module)	Live Data
S-Type	2004-2005	AJ61 3.0L	NAV(Navigation control module)	Read fault codes
S-Type	2004-2005	AJ61 3.0L	NAV(Navigation control module)	Erase fault codes
S-Type	2004-2005	AJ61 3.0L	NAV(Navigation control module)	Live Data
S-Type	2004-2005	AJ61 3.0L	REM(Rear electronic control module)	Read fault codes
S-Type	2004-2005	AJ61 3.0L	REM(Rear electronic control module)	Erase fault codes
S-Type	2004-2005	AJ61 3.0L	REM(Rear electronic control module)	Live Data
S-Type	2004-2005	AJ61 3.0L	SCLM(Steering column lock module)	Read fault codes
S-Type	2004-2005	AJ61 3.0L	SCLM(Steering column lock module)	Erase fault codes
S-Type	2004-2005	AJ61 3.0L	SCLM(Steering column lock module)	Live Data
S-Type	2004-2005	AJ61 3.0L	ADHLS(Headlamp levelling system)	Read fault codes
S-Type	2004-2005	AJ61 3.0L	ADHLS(Headlamp levelling system)	Erase fault codes
S-Type	2004-2005	AJ61 3.0L	ADHLS(Headlamp levelling system)	Live Data
S-Type	2004-2005	AJ61 3.0L	ARM(Restraints control module)	Read fault codes
S-Type	2004-2005	AJ61 3.0L	ARM(Restraints control module)	Erase fault codes
S-Type	2004-2005	AJ61 3.0L	ARM(Restraints control module)	Live Data
S-Type	2004-2005	AJ61 3.0L	ISM(Intrusion sensor module)	Read fault codes
S-Type	2004-2005	AJ61 3.0L	ISM(Intrusion sensor module)	Erase fault codes
S-Type	2004-2005	AJ61 3.0L	ISM(Intrusion sensor module)	Live Data
S-Type	2004-2005	AJ61 3.0L	PAM(Parking aid control module)	Read fault codes
S-Type	2004-2005	AJ61 3.0L	PAM(Parking aid control module)	Erase fault codes
S-Type	2004-2005	AJ61 3.0L	PAM(Parking aid control module)	Live Data
S-Type	2004-2005	AJ61 3.0L	AMP(Amplifier)	Read fault codes
S-Type	2004-2005	AJ61 3.0L	AMP(Amplifier)	Erase fault codes
S-Type	2004-2005	AJ61 3.0L	AMP(Amplifier)	Live Data
S-Type	2004-2005	AJ61 3.0L	CPM(Cellular telephone control module)	Read fault codes
S-Type	2004-2005	AJ61 3.0L	CPM(Cellular telephone control module)	Erase fault codes
S-Type	2004-2005	AJ61 3.0L	CPM(Cellular telephone control module)	Live Data
S-Type	2004-2005	AJ61 3.0L	VACM(Voice activation control module)	Read fault codes
S-Type	2004-2005	AJ61 3.0L	VACM(Voice activation control module)	Erase fault codes
S-Type	2004-2005	AJ61 3.0L	VACM(Voice activation control module)	Live Data
S-Type	2004-2005	AJ61 3.0L	Special Function	Manual oil reset
S-Type	2004-2005	AJ61 3.0L	Special Function	Oil dilution reset
S-Type	2004-2005	AJ61 3.0L	Special Function	Parking brake release to service position
S-Type	2004-2005	AJ61 4.2L	ECM(Engine control module)	Read fault codes
S-Type	2004-2005	AJ61 4.2L	ECM(Engine control module)	Erase fault codes
S-Type	2004-2005	AJ61 4.2L	ECM(Engine control module)	Live Data
S-Type	2004-2005	AJ61 4.2L	TCM(Transmission control module)	Read fault codes
S-Type	2004-2005	AJ61 4.2L	TCM(Transmission control module)	Erase fault codes
S-Type	2004-2005	AJ61 4.2L	TCM(Transmission control module)	Live Data
S-Type	2004-2005	AJ61 4.2L	IP(Instrument pack)	Read fault codes
S-Type	2004-2005	AJ61 4.2L	IP(Instrument pack)	Erase fault codes
S-Type	2004-2005	AJ61 4.2L	IP(Instrument pack)	Live Data
S-Type	2004-2005	AJ61 4.2L	PBM(Parking brake control module)	ECU information
S-Type	2004-2005	AJ61 4.2L	PBM(Parking brake control module)	Read fault codes
S-Type	2004-2005	AJ61 4.2L	PBM(Parking brake control module)	Erase fault codes
S-Type	2004-2005	AJ61 4.2L	PBM(Parking brake control module)	Live Data
S-Type	2004-2005	AJ61 4.2L	ABS(Anti-lock braking system)	Read fault codes
S-Type	2004-2005	AJ61 4.2L	ABS(Anti-lock braking system)	Erase fault codes
S-Type	2004-2005	AJ61 4.2L	ABS(Anti-lock braking system)	Live Data
S-Type	2004-2005	AJ61 4.2L	ACC(Adaptive speed control control module)	Read fault codes
S-Type	2004-2005	AJ61 4.2L	ACC(Adaptive speed control control module)	Erase fault codes
S-Type	2004-2005	AJ61 4.2L	ACC(Adaptive speed control control module)	Live Data
S-Type	2004-2005	AJ61 4.2L	ATC(Climate control module)	Read fault codes
S-Type	2004-2005	AJ61 4.2L	ATC(Climate control module)	Erase fault codes
S-Type	2004-2005	AJ61 4.2L	ATC(Climate control module)	Live Data
S-Type	2004-2005	AJ61 4.2L	ADRC(Adaptive damping ride control)	Read fault codes
S-Type	2004-2005	AJ61 4.2L	ADRC(Adaptive damping ride control)	Erase fault codes
S-Type	2004-2005	AJ61 4.2L	ADRC(Adaptive damping ride control)	Live Data
S-Type	2004-2005	AJ61 4.2L	DDM(Driver's door module)	Read fault codes
S-Type	2004-2005	AJ61 4.2L	DDM(Driver's door module)	Erase fault codes
S-Type	2004-2005	AJ61 4.2L	DDM(Driver's door module)	Live Data
S-Type	2004-2005	AJ61 4.2L	DSM(Driver's seat module)	Read fault codes
S-Type	2004-2005	AJ61 4.2L	DSM(Driver's seat module)	Erase fault codes
S-Type	2004-2005	AJ61 4.2L	DSM(Driver's seat module)	Live Data
S-Type	2004-2005	AJ61 4.2L	FETM(Audio unit)	Read fault codes
S-Type	2004-2005	AJ61 4.2L	FETM(Audio unit)	Erase fault codes
S-Type	2004-2005	AJ61 4.2L	FETM(Audio unit)	Live Data
S-Type	2004-2005	AJ61 4.2L	GEM(General electronics control module)	Read fault codes
S-Type	2004-2005	AJ61 4.2L	GEM(General electronics control module)	Erase fault codes
S-Type	2004-2005	AJ61 4.2L	GEM(General electronics control module)	Live Data
S-Type	2004-2005	AJ61 4.2L	NAV(Navigation control module)	Read fault codes
S-Type	2004-2005	AJ61 4.2L	NAV(Navigation control module)	Erase fault codes
S-Type	2004-2005	AJ61 4.2L	NAV(Navigation control module)	Live Data
S-Type	2004-2005	AJ61 4.2L	REM(Rear electronic control module)	Read fault codes
S-Type	2004-2005	AJ61 4.2L	REM(Rear electronic control module)	Erase fault codes
S-Type	2004-2005	AJ61 4.2L	REM(Rear electronic control module)	Live Data
S-Type	2004-2005	AJ61 4.2L	SCLM(Steering column lock module)	Read fault codes
S-Type	2004-2005	AJ61 4.2L	SCLM(Steering column lock module)	Erase fault codes
S-Type	2004-2005	AJ61 4.2L	SCLM(Steering column lock module)	Live Data
S-Type	2004-2005	AJ61 4.2L	ADHLS(Headlamp levelling system)	Read fault codes
S-Type	2004-2005	AJ61 4.2L	ADHLS(Headlamp levelling system)	Erase fault codes
S-Type	2004-2005	AJ61 4.2L	ADHLS(Headlamp levelling system)	Live Data
S-Type	2004-2005	AJ61 4.2L	ARM(Restraints control module)	Read fault codes
S-Type	2004-2005	AJ61 4.2L	ARM(Restraints control module)	Erase fault codes







## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
X-Type	2004-	AJ61 3.0L	ECM(Engine control module)	Erase fault codes
X-Type	2004-	AJ61 3.0L	ECM(Engine control module)	Live Data
X-Type	2004-	AJ61 3.0L	TCM(Transmission control module)	Read fault codes
X-Type	2004-	AJ61 3.0L	TCM(Transmission control module)	Erase fault codes
X-Type	2004-	AJ61 3.0L	TCM(Transmission control module)	Live Data
X-Type	2004-	AJ61 3.0L	TCM(Transmission control module)	Read fault codes
X-Type	2004-	AJ61 3.0L	TCM(Transmission control module)	Erase fault codes
X-Type	2004-	AJ61 3.0L	TCM(Transmission control module)	Live Data
X-Type	2004-	AJ61 3.0L	TCM(Transmission control module)	Read fault codes
X-Type	2004-	AJ61 3.0L	TCM(Transmission control module)	Erase fault codes
X-Type	2004-	AJ61 3.0L	TCM(Transmission control module)	Live Data
X-Type	2004-	AJ61 3.0L	TCM(Transmission control module)	Read fault codes
X-Type	2004-	AJ61 3.0L	TCM(Transmission control module)	Erase fault codes
X-Type	2004-	AJ61 3.0L	TCM(Transmission control module)	Read fault codes
X-Type	2004-	AJ61 3.0L	TCM(Transmission control module)	Erase fault codes
X-Type	2004-	AJ61 3.0L	TCM(Transmission control module)	Live Data
X-Type	2004-	AJ61 3.0L	ABS(Anti-lock braking system)	Read fault codes
X-Type	2004-	AJ61 3.0L	ABS(Anti-lock braking system)	Erase fault codes
X-Type	2004-	AJ61 3.0L	ABS(Anti-lock braking system)	Live Data
X-Type	2004-	AJ61 3.0L	ABS(Anti-lock braking system)	ECU information
X-Type	2004-	AJ61 3.0L	ABS(Anti-lock braking system)	Read fault codes
X-Type	2004-	AJ61 3.0L	ABS(Anti-lock braking system)	Erase fault codes
X-Type	2004-	AJ61 3.0L	ABS(Anti-lock braking system)	Live Data
X-Type	2004-	AJ61 3.0L	IP(Instrument pack)	Read fault codes
X-Type	2004-	AJ61 3.0L	IP(Instrument pack)	Erase fault codes
X-Type	2004-	AJ61 3.0L	IP(Instrument pack)	Live Data
X-Type	2004-	AJ61 3.0L	ATC(Climate control module)	Read fault codes
X-Type	2004-	AJ61 3.0L	ATC(Climate control module)	Erase fault codes
X-Type	2004-	AJ61 3.0L	ATC(Climate control module)	Live Data
X-Type	2004-	AJ61 3.0L	FETM(Audio unit)	Read fault codes
X-Type	2004-	AJ61 3.0L	FETM(Audio unit)	Erase fault codes
X-Type	2004-	AJ61 3.0L	FETM(Audio unit)	Live Data
X-Type	2004-	AJ61 3.0L	GEM(General electronics control module)	Read fault codes
X-Type	2004-	AJ61 3.0L	GEM(General electronics control module)	Erase fault codes
X-Type	2004-	AJ61 3.0L	GEM(General electronics control module)	Live Data
X-Type	2004-	AJ61 3.0L	NAV(Navigation control module)	Read fault codes
X-Type	2004-	AJ61 3.0L	NAV(Navigation control module)	Erase fault codes
X-Type	2004-	AJ61 3.0L	NAV(Navigation control module)	Live Data
X-Type	2004-	AJ61 3.0L	ADHLS(Headlamp levelling system)	Read fault codes
X-Type	2004-	AJ61 3.0L	ADHLS(Headlamp levelling system)	Erase fault codes
X-Type	2004-	AJ61 3.0L	ADHLS(Headlamp levelling system)	Live Data
X-Type	2004-	AJ61 3.0L	ARM(Restraints control module)	Read fault codes
X-Type	2004-	AJ61 3.0L	ARM(Restraints control module)	Erase fault codes
X-Type	2004-	AJ61 3.0L	ARM(Restraints control module)	Live Data
X-Type	2004-	AJ61 3.0L	ARM(Restraints control module)	Read fault codes
X-Type	2004-	AJ61 3.0L	ARM(Restraints control module)	Erase fault codes
X-Type	2004-	AJ61 3.0L	ARM(Restraints control module)	Live Data
X-Type	2004-	AJ61 3.0L	FFH(Fuel fired heater module)	Read fault codes
X-Type	2004-	AJ61 3.0L	FFH(Fuel fired heater module)	Erase fault codes
X-Type	2004-	AJ61 3.0L	ISM(Intrusion sensor module)	Read fault codes
X-Type	2004-	AJ61 3.0L	ISM(Intrusion sensor module)	Erase fault codes
X-Type	2004-	AJ61 3.0L	ISM(Intrusion sensor module)	Live Data
X-Type	2004-	AJ61 3.0L	PAM(Parking aid control module)	Read fault codes
X-Type	2004-	AJ61 3.0L	PAM(Parking aid control module)	Erase fault codes
X-Type	2004-	AJ61 3.0L	PAM(Parking aid control module)	Live Data
X-Type	2004-	AJ61 3.0L	AMP(Amplifier)	Read fault codes
X-Type	2004-	AJ61 3.0L	AMP(Amplifier)	Erase fault codes
X-Type	2004-	AJ61 3.0L	AMP(Amplifier)	Live Data
X-Type	2004-	AJ61 3.0L	CPM(Cellular telephone control module)	Read fault codes
X-Type	2004-	AJ61 3.0L	CPM(Cellular telephone control module)	Erase fault codes
X-Type	2004-	AJ61 3.0L	CPM(Cellular telephone control module)	Live Data
X-Type	2004-	AJ61 3.0L	VACM(Voice activation control module)	Read fault codes
X-Type	2004-	AJ61 3.0L	VACM(Voice activation control module)	Erase fault codes
X-Type	2004-	AJ61 3.0L	VACM(Voice activation control module)	Live Data
X-Type	2004-	AJ61 3.0L	Special Function	Manual oil reset
X-Type	2004-	TDCi 2.0L	ECM(Engine control module)	Read fault codes
X-Type	2004-	TDCi 2.0L	ECM(Engine control module)	Erase fault codes
X-Type	2004-	TDCi 2.0L	ECM(Engine control module)	Live Data
X-Type	2004-	TDCi 2.0L	ABS(Anti-lock braking system)	Read fault codes
X-Type	2004-	TDCi 2.0L	ABS(Anti-lock braking system)	Erase fault codes
X-Type	2004-	TDCi 2.0L	ABS(Anti-lock braking system)	Live Data
X-Type	2004-	TDCi 2.0L	ABS(Anti-lock braking system)	ECU information
X-Type	2004-	TDCi 2.0L	ABS(Anti-lock braking system)	Read fault codes
X-Type	2004-	TDCi 2.0L	ABS(Anti-lock braking system)	Erase fault codes
X-Type	2004-	TDCi 2.0L	ABS(Anti-lock braking system)	Live Data
X-Type	2004-	TDCi 2.0L	IP(Instrument pack)	Read fault codes
X-Type	2004-	TDCi 2.0L	IP(Instrument pack)	Erase fault codes
X-Type	2004-	TDCi 2.0L	IP(Instrument pack)	Live Data
X-Type	2004-	TDCi 2.0L	DSM(Driver's seat module)	ECU information
X-Type	2004-	TDCi 2.0L	DSM(Driver's seat module)	Read fault codes
X-Type	2004-	TDCi 2.0L	DSM(Driver's seat module)	Erase fault codes
X-Type	2004-	TDCi 2.0L	DSM(Driver's seat module)	Live Data
X-Type	2004-	TDCi 2.0L	TPM(Tire pressure monitor)	ECU information
X-Type	2004-	TDCi 2.0L	ATC(Climate control module)	Read fault codes
X-Type	2004-	TDCi 2.0L	ATC(Climate control module)	Erase fault codes
X-Type	2004-	TDCi 2.0L	ATC(Climate control module)	Live Data
X-Type	2004-	TDCi 2.0L	FETM(Audio unit)	Read fault codes
X-Type	2004-	TDCi 2.0L	FETM(Audio unit)	Erase fault codes
X-Type	2004-	TDCi 2.0L	FETM(Audio unit)	Live Data
X-Type	2004-	TDCi 2.0L	GEM(General electronics control module)	Read fault codes
X-Type	2004-	TDCi 2.0L	GEM(General electronics control module)	Erase fault codes
X-Type	2004-	TDCi 2.0L	GEM(General electronics control module)	Live Data
X-Type	2004-	TDCi 2.0L	NAV(Navigation control module)	Read fault codes
X-Type	2004-	TDCi 2.0L	NAV(Navigation control module)	Erase fault codes
X-Type	2004-	TDCi 2.0L	NAV(Navigation control module)	Live Data

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
X-Type	2004-	TDCi 2.0L	ADHLS(Headlamp levelling system)	Read fault codes
X-Type	2004-	TDCi 2.0L	ADHLS(Headlamp levelling system)	Erase fault codes
X-Type	2004-	TDCi 2.0L	ADHLS(Headlamp levelling system)	Live Data
X-Type	2004-	TDCi 2.0L	ARM(Restraints control module)	Read fault codes
X-Type	2004-	TDCi 2.0L	ARM(Restraints control module)	Erase fault codes
X-Type	2004-	TDCi 2.0L	ARM(Restraints control module)	Live Data
X-Type	2004-	TDCi 2.0L	FFH(Fuel fired heater module)	Read fault codes
X-Type	2004-	TDCi 2.0L	FFH(Fuel fired heater module)	Erase fault codes
X-Type	2004-	TDCi 2.0L	FFH(Fuel fired heater module)	Live Data
X-Type	2004-	TDCi 2.0L	ISM(Intrusion sensor module)	Read fault codes
X-Type	2004-	TDCi 2.0L	ISM(Intrusion sensor module)	Erase fault codes
X-Type	2004-	TDCi 2.0L	ISM(Intrusion sensor module)	Live Data
X-Type	2004-	TDCi 2.0L	PAM(Parking aid control module)	Read fault codes
X-Type	2004-	TDCi 2.0L	PAM(Parking aid control module)	Erase fault codes
X-Type	2004-	TDCi 2.0L	PAM(Parking aid control module)	Live Data
X-Type	2004-	TDCi 2.0L	AMP(Amplifier)	Read fault codes
X-Type	2004-	TDCi 2.0L	AMP(Amplifier)	Erase fault codes
X-Type	2004-	TDCi 2.0L	AMP(Amplifier)	Live Data
X-Type	2004-	TDCi 2.0L	CPM(Cellular telephone control module)	Read fault codes
X-Type	2004-	TDCi 2.0L	CPM(Cellular telephone control module)	Erase fault codes
X-Type	2004-	TDCi 2.0L	CPM(Cellular telephone control module)	Live Data
X-Type	2004-	TDCi 2.0L	VACM(Voice activation control module)	Read fault codes
X-Type	2004-	TDCi 2.0L	VACM(Voice activation control module)	Erase fault codes
X-Type	2004-	TDCi 2.0L	VACM(Voice activation control module)	Live Data
X-Type	2004-	TDCi 2.0L	Special Function	Manual oil reset
X-Type	2004-	TDCi 2.0L	Special Function	Oil dilution reset
X-Type	2004-	TDCi 2.0L	Special Function	Display injector correction factors
X-Type	2004-	TDCi 2.2L	ECM(Engine control module)	Read fault codes
X-Type	2004-	TDCi 2.2L	ECM(Engine control module)	Erase fault codes
X-Type	2004-	TDCi 2.2L	ECM(Engine control module)	Live Data
X-Type	2004-	TDCi 2.2L	TCM(Transmission control module)	ECU information
X-Type	2004-	TDCi 2.2L	TCM(Transmission control module)	Read fault codes
X-Type	2004-	TDCi 2.2L	TCM(Transmission control module)	Erase fault codes
X-Type	2004-	TDCi 2.2L	TCM(Transmission control module)	Live Data
X-Type	2004-	TDCi 2.2L	ABS(Anti-lock braking system)	Read fault codes
X-Type	2004-	TDCi 2.2L	ABS(Anti-lock braking system)	Erase fault codes
X-Type	2004-	TDCi 2.2L	ABS(Anti-lock braking system)	Live Data
X-Type	2004-	TDCi 2.2L	ABS(Anti-lock braking system)	ECU information
X-Type	2004-	TDCi 2.2L	ABS(Anti-lock braking system)	Read fault codes
X-Type	2004-	TDCi 2.2L	ABS(Anti-lock braking system)	Erase fault codes
X-Type	2004-	TDCi 2.2L	ABS(Anti-lock braking system)	Live Data
X-Type	2004-	TDCi 2.2L	IP(Instrument pack)	Read fault codes
X-Type	2004-	TDCi 2.2L	IP(Instrument pack)	Erase fault codes
X-Type	2004-	TDCi 2.2L	IP(Instrument pack)	Live Data
X-Type	2004-	TDCi 2.2L	DSM(Driver's seat module)	ECU information
X-Type	2004-	TDCi 2.2L	DSM(Driver's seat module)	Read fault codes
X-Type	2004-	TDCi 2.2L	DSM(Driver's seat module)	Erase fault codes
X-Type	2004-	TDCi 2.2L	DSM(Driver's seat module)	Live Data
X-Type	2004-	TDCi 2.2L	TPM(Tire pressure monitor)	ECU information
X-Type	2004-	TDCi 2.2L	ATC(Climate control module)	Read fault codes
X-Type	2004-	TDCi 2.2L	ATC(Climate control module)	Erase fault codes
X-Type	2004-	TDCi 2.2L	ATC(Climate control module)	Live Data
X-Type	2004-	TDCi 2.2L	FETM(Audio unit)	Read fault codes
X-Type	2004-	TDCi 2.2L	FETM(Audio unit)	Erase fault codes
X-Type	2004-	TDCi 2.2L	FETM(Audio unit)	Live Data
X-Type	2004-	TDCi 2.2L	GEM(General electronics control module)	Read fault codes
X-Type	2004-	TDCi 2.2L	GEM(General electronics control module)	Erase fault codes
X-Type	2004-	TDCi 2.2L	GEM(General electronics control module)	Live Data
X-Type	2004-	TDCi 2.2L	NAV(Navigation control module)	Read fault codes
X-Type	2004-	TDCi 2.2L	NAV(Navigation control module)	Erase fault codes
X-Type	2004-	TDCi 2.2L	NAV(Navigation control module)	Live Data
X-Type	2004-	TDCi 2.2L	ADHLS(Headlamp levelling system)	Read fault codes
X-Type	2004-	TDCi 2.2L	ADHLS(Headlamp levelling system)	Erase fault codes
X-Type	2004-	TDCi 2.2L	ADHLS(Headlamp levelling system)	Live Data
X-Type	2004-	TDCi 2.2L	ARM(Restraints control module)	Read fault codes
X-Type	2004-	TDCi 2.2L	ARM(Restraints control module)	Erase fault codes
X-Type	2004-	TDCi 2.2L	ARM(Restraints control module)	Live Data
X-Type	2004-	TDCi 2.2L	FFH(Fuel fired heater module)	Read fault codes
X-Type	2004-	TDCi 2.2L	FFH(Fuel fired heater module)	Erase fault codes
X-Type	2004-	TDCi 2.2L	FFH(Fuel fired heater module)	Live Data
X-Type	2004-	TDCi 2.2L	ISM(Intrusion sensor module)	Read fault codes
X-Type	2004-	TDCi 2.2L	ISM(Intrusion sensor module)	Erase fault codes
X-Type	2004-	TDCi 2.2L	ISM(Intrusion sensor module)	Live Data
X-Type	2004-	TDCi 2.2L	PAM(Parking aid control module)	Read fault codes
X-Type	2004-	TDCi 2.2L	PAM(Parking aid control module)	Erase fault codes
X-Type	2004-	TDCi 2.2L	PAM(Parking aid control module)	Live Data
X-Type	2004-	TDCi 2.2L	AMP(Amplifier)	Read fault codes
X-Type	2004-	TDCi 2.2L	AMP(Amplifier)	Erase fault codes
X-Type	2004-	TDCi 2.2L	AMP(Amplifier)	Live Data
X-Type	2004-	TDCi 2.2L	CPM(Cellular telephone control module)	Read fault codes
X-Type	2004-	TDCi 2.2L	CPM(Cellular telephone control module)	Erase fault codes
X-Type	2004-	TDCi 2.2L	CPM(Cellular telephone control module)	Live Data
X-Type	2004-	TDCi 2.2L	VACM(Voice activation control module)	Read fault codes
X-Type	2004-	TDCi 2.2L	VACM(Voice activation control module)	Erase fault codes
X-Type	2004-	TDCi 2.2L	VACM(Voice activation control module)	Live Data
X-Type	2004-	TDCi 2.2L	Special Function	Manual oil reset
X-Type	2004-	TDCi 2.2L	Special Function	Oil dilution reset
X-Type	2001-2003	AJ161 2.0L engine	ABS(Anti-lock braking system)	Read fault codes
X-Type	2001-2003	AJ161 2.0L engine	ABS(Anti-lock braking system)	Erase fault codes
X-Type	2001-2003	AJ161 2.0L engine	ABS(Anti-lock braking system)	Live Data
X-Type	2001-2003	AJ161 2.0L engine	ECM(Engine control module)	Read fault codes
X-Type	2001-2003	AJ161 2.0L engine	ECM(Engine control module)	Erase fault codes



## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
X-Type	2001-2003	AJ61 3.0L engine	ATC(Climate control module)	Erase fault codes
X-Type	2001-2003	AJ61 3.0L engine	ATC(Climate control module)	Live Data
X-Type	2001-2003	AJ61 3.0L engine	FETM(Audio unit)	Read fault codes
X-Type	2001-2003	AJ61 3.0L engine	FETM(Audio unit)	Erase fault codes
X-Type	2001-2003	AJ61 3.0L engine	FETM(Audio unit)	Live Data
X-Type	2001-2003	AJ61 3.0L engine	GEM(General electronics control module)	Read fault codes
X-Type	2001-2003	AJ61 3.0L engine	GEM(General electronics control module)	Erase fault codes
X-Type	2001-2003	AJ61 3.0L engine	GEM(General electronics control module)	Live Data
X-Type	2001-2003	AJ61 3.0L engine	NAV(Navigation control module)	Read fault codes
X-Type	2001-2003	AJ61 3.0L engine	NAV(Navigation control module)	Erase fault codes
X-Type	2001-2003	AJ61 3.0L engine	NAV(Navigation control module)	Live Data
X-Type	2001-2003	AJ61 3.0L engine	PAM(Parking aid control module)	Read fault codes
X-Type	2001-2003	AJ61 3.0L engine	PAM(Parking aid control module)	Erase fault codes
X-Type	2001-2003	AJ61 3.0L engine	PAM(Parking aid control module)	Live Data
X-Type	2001-2003	AJ61 3.0L engine	ISM(Intrusion sensor module)	Read fault codes
X-Type	2001-2003	AJ61 3.0L engine	ISM(Intrusion sensor module)	Erase fault codes
X-Type	2001-2003	AJ61 3.0L engine	ARM(Restraints control module)	Read fault codes
X-Type	2001-2003	AJ61 3.0L engine	ARM(Restraints control module)	Erase fault codes
X-Type	2001-2003	AJ61 3.0L engine	ARM(Restraints control module)	Live Data
X-Type	2001-2003	AJ61 3.0L engine	ADHLS(Headlamp levelling system)	Read fault codes
X-Type	2001-2003	AJ61 3.0L engine	ADHLS(Headlamp levelling system)	Erase fault codes
X-Type	2001-2003	AJ61 3.0L engine	ADHLS(Headlamp levelling system)	Live Data
X-Type	2001-2003	AJ61 3.0L engine	CPM(Cellular telephone control module)	Read fault codes
X-Type	2001-2003	AJ61 3.0L engine	CPM(Cellular telephone control module)	Erase fault codes
X-Type	2001-2003	AJ61 3.0L engine	CPM(Cellular telephone control module)	Live Data
X-Type	2001-2003	AJ61 3.0L engine	VACM(Voice activation control module)	Read fault codes
X-Type	2001-2003	AJ61 3.0L engine	VACM(Voice activation control module)	Erase fault codes
X-Type	2001-2003	AJ61 3.0L engine	VACM(Voice activation control module)	Live Data
X-Type	2001-2003	AJ61 3.0L engine	Special Function	Manual oil reset
XE	2016-	GTDI 2.0L engine	PCM(Powertrain control module)	ECU information
XE	2016-	GTDI 2.0L engine	PCM(Powertrain control module)	Read fault codes
XE	2016-	GTDI 2.0L engine	PCM(Powertrain control module)	Erase fault codes
XE	2016-	GTDI 2.0L engine	PCM(Powertrain control module)	Live Data
XE	2016-	GTDI 2.0L engine	TCM(Transmission control module)	ECU information
XE	2016-	GTDI 2.0L engine	TCM(Transmission control module)	Read fault codes
XE	2016-	GTDI 2.0L engine	TCM(Transmission control module)	Erase fault codes
XE	2016-	GTDI 2.0L engine	TCM(Transmission control module)	Live Data
XE	2016-	GTDI 2.0L engine	ABS(ABS control module)	ECU information
XE	2016-	GTDI 2.0L engine	ABS(ABS control module)	Read fault codes
XE	2016-	GTDI 2.0L engine	ABS(ABS control module)	Erase fault codes
XE	2016-	GTDI 2.0L engine	ABS(ABS control module)	Live Data
XE	2016-	GTDI 2.0L engine	RCM(Restraints control module)	ECU information
XE	2016-	GTDI 2.0L engine	RCM(Restraints control module)	Read fault codes
XE	2016-	GTDI 2.0L engine	RCM(Restraints control module)	Erase fault codes
XE	2016-	GTDI 2.0L engine	RCM(Restraints control module)	Live Data
XE	2016-	GTDI 2.0L engine	IPC(Instrument cluster control module)	ECU information
XE	2016-	GTDI 2.0L engine	IPC(Instrument cluster control module)	Read fault codes
XE	2016-	GTDI 2.0L engine	IPC(Instrument cluster control module)	Erase fault codes
XE	2016-	GTDI 2.0L engine	IPC(Instrument cluster control module)	Live Data
XE	2016-	GTDI 2.0L engine	BCM(Body control module)	ECU information
XE	2016-	GTDI 2.0L engine	BCM(Body control module)	Read fault codes
XE	2016-	GTDI 2.0L engine	BCM(Body control module)	Erase fault codes
XE	2016-	GTDI 2.0L engine	BCM(Body control module)	Live Data
XE	2016-	GTDI 2.0L engine	CCM(Speed control module)	ECU information
XE	2016-	GTDI 2.0L engine	CCM(Speed control module)	Read fault codes
XE	2016-	GTDI 2.0L engine	CCM(Speed control module)	Erase fault codes
XE	2016-	GTDI 2.0L engine	CCM(Speed control module)	Live Data
XE	2016-	GTDI 2.0L engine	GSM(Gear shift module)	ECU information
XE	2016-	GTDI 2.0L engine	GSM(Gear shift module)	Read fault codes
XE	2016-	GTDI 2.0L engine	GSM(Gear shift module)	Erase fault codes
XE	2016-	GTDI 2.0L engine	GSM(Gear shift module)	Live Data
XE	2016-	GTDI 2.0L engine	GWM(Gateway module)	ECU information
XE	2016-	GTDI 2.0L engine	GWM(Gateway module)	Read fault codes
XE	2016-	GTDI 2.0L engine	GWM(Gateway module)	Erase fault codes
XE	2016-	GTDI 2.0L engine	GWM(Gateway module)	Live Data
XE	2016-	GTDI 2.0L engine	OCS(Restraints occupant classification system module)	ECU information
XE	2016-	GTDI 2.0L engine	OCS(Restraints occupant classification system module)	Read fault codes
XE	2016-	GTDI 2.0L engine	OCS(Restraints occupant classification system module)	Erase fault codes
XE	2016-	GTDI 2.0L engine	OCS(Restraints occupant classification system module)	Live Data
XE	2016-	GTDI 2.0L engine	TCU(Telematic control unit module)	ECU information
XE	2016-	GTDI 2.0L engine	TCU(Telematic control unit module)	Read fault codes
XE	2016-	GTDI 2.0L engine	TCU(Telematic control unit module)	Erase fault codes
XE	2016-	GTDI 2.0L engine	TCU(Telematic control unit module)	Live Data
XE	2016-	GTDI 2.0L engine	TPM(Tire pressure monitor module)	ECU information
XE	2016-	GTDI 2.0L engine	TPM(Tire pressure monitor module)	Read fault codes
XE	2016-	GTDI 2.0L engine	TPM(Tire pressure monitor module)	Erase fault codes
XE	2016-	GTDI 2.0L engine	TPM(Tire pressure monitor module)	Live Data
XE	2016-	GTDI 2.0L engine	VIM(Vehicle immobilizer control module)	ECU information
XE	2016-	GTDI 2.0L engine	VIM(Vehicle immobilizer control module)	Read fault codes
XE	2016-	GTDI 2.0L engine	VIM(Vehicle immobilizer control module)	Erase fault codes
XE	2016-	GTDI 2.0L engine	VIM(Vehicle immobilizer control module)	Live Data
XE	2016-	GTDI 2.0L engine	ATCM(All terrain control module)	ECU information
XE	2016-	GTDI 2.0L engine	ATCM(All terrain control module)	Read fault codes
XE	2016-	GTDI 2.0L engine	ATCM(All terrain control module)	Erase fault codes
XE	2016-	GTDI 2.0L engine	ATCM(All terrain control module)	Live Data
XE	2016-	GTDI 2.0L engine	CHCM(Chassis control module)	ECU information
XE	2016-	GTDI 2.0L engine	CHCM(Chassis control module)	Read fault codes
XE	2016-	GTDI 2.0L engine	CHCM(Chassis control module)	Erase fault codes

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XE	2016-	GTDI 2.0L engine	CHCM(Chassis control module)	Live Data
XE	2016-	GTDI 2.0L engine	IPMA(Image processing control module A)	ECU information
XE	2016-	GTDI 2.0L engine	IPMA(Image processing control module A)	Read fault codes
XE	2016-	GTDI 2.0L engine	IPMA(Image processing control module A)	Erase fault codes
XE	2016-	GTDI 2.0L engine	IPMA(Image processing control module A)	Live Data
XE	2016-	GTDI 2.0L engine	PAM(Parking assist control module)	ECU information
XE	2016-	GTDI 2.0L engine	PAM(Parking assist control module)	Read fault codes
XE	2016-	GTDI 2.0L engine	PAM(Parking assist control module)	Erase fault codes
XE	2016-	GTDI 2.0L engine	PAM(Parking assist control module)	Live Data
XE	2016-	GTDI 2.0L engine	PSCM(Power steering control module)	ECU information
XE	2016-	GTDI 2.0L engine	PSCM(Power steering control module)	Read fault codes
XE	2016-	GTDI 2.0L engine	PSCM(Power steering control module)	Erase fault codes
XE	2016-	GTDI 2.0L engine	PSCM(Power steering control module)	Live Data
XE	2016-	GTDI 2.0L engine	SASM(Steering angle sensor module)	ECU information
XE	2016-	GTDI 2.0L engine	SASM(Steering angle sensor module)	Read fault codes
XE	2016-	GTDI 2.0L engine	SASM(Steering angle sensor module)	Erase fault codes
XE	2016-	GTDI 2.0L engine	SASM(Steering angle sensor module)	Live Data
XE	2016-	GTDI 2.0L engine	DDM(Driver's door module)	ECU information
XE	2016-	GTDI 2.0L engine	DDM(Driver's door module)	Read fault codes
XE	2016-	GTDI 2.0L engine	DDM(Driver's door module)	Erase fault codes
XE	2016-	GTDI 2.0L engine	DDM(Driver's door module)	Live Data
XE	2016-	GTDI 2.0L engine	DRDM(Driver's (side) rear door module)	ECU information
XE	2016-	GTDI 2.0L engine	DRDM(Driver's (side) rear door module)	Read fault codes
XE	2016-	GTDI 2.0L engine	DRDM(Driver's (side) rear door module)	Erase fault codes
XE	2016-	GTDI 2.0L engine	DRDM(Driver's (side) rear door module)	Live Data
XE	2016-	GTDI 2.0L engine	DSM(Driver's seat module)	ECU information
XE	2016-	GTDI 2.0L engine	DSM(Driver's seat module)	Read fault codes
XE	2016-	GTDI 2.0L engine	DSM(Driver's seat module)	Erase fault codes
XE	2016-	GTDI 2.0L engine	DSM(Driver's seat module)	Live Data
XE	2016-	GTDI 2.0L engine	PDM(Passenger's door module)	ECU information
XE	2016-	GTDI 2.0L engine	PDM(Passenger's door module)	Read fault codes
XE	2016-	GTDI 2.0L engine	PDM(Passenger's door module)	Erase fault codes
XE	2016-	GTDI 2.0L engine	PDM(Passenger's door module)	Live Data
XE	2016-	GTDI 2.0L engine	PRDM(Passenger's (side) rear door module)	ECU information
XE	2016-	GTDI 2.0L engine	PRDM(Passenger's (side) rear door module)	Read fault codes
XE	2016-	GTDI 2.0L engine	PRDM(Passenger's (side) rear door module)	Erase fault codes
XE	2016-	GTDI 2.0L engine	PRDM(Passenger's (side) rear door module)	Live Data
XE	2016-	GTDI 2.0L engine	RFA(Keyless vehicle module)	ECU information
XE	2016-	GTDI 2.0L engine	RFA(Keyless vehicle module)	Read fault codes
XE	2016-	GTDI 2.0L engine	RFA(Keyless vehicle module)	Erase fault codes
XE	2016-	GTDI 2.0L engine	RFA(Keyless vehicle module)	Live Data
XE	2016-	GTDI 2.0L engine	RGTM(Rear gate / trunk module)	ECU information
XE	2016-	GTDI 2.0L engine	RGTM(Rear gate / trunk module)	Read fault codes
XE	2016-	GTDI 2.0L engine	RGTM(Rear gate / trunk module)	Erase fault codes
XE	2016-	GTDI 2.0L engine	RGTM(Rear gate / trunk module)	Live Data
XE	2016-	GTDI 2.0L engine	TBM(Deployable towbar control module)	ECU information
XE	2016-	GTDI 2.0L engine	TBM(Deployable towbar control module)	Read fault codes
XE	2016-	GTDI 2.0L engine	TBM(Deployable towbar control module)	Erase fault codes
XE	2016-	GTDI 2.0L engine	TBM(Deployable towbar control module)	Live Data
XE	2016-	GTDI 2.0L engine	AHU(InControl Touch audio head unit)	ECU information
XE	2016-	GTDI 2.0L engine	AHU(InControl Touch audio head unit)	Read fault codes
XE	2016-	GTDI 2.0L engine	AHU(InControl Touch audio head unit)	Erase fault codes
XE	2016-	GTDI 2.0L engine	AUCM(Head-up display cooling fan module)	ECU information
XE	2016-	GTDI 2.0L engine	AUCM(Head-up display cooling fan module)	Read fault codes
XE	2016-	GTDI 2.0L engine	AUCM(Head-up display cooling fan module)	Erase fault codes
XE	2016-	GTDI 2.0L engine	AUCM(Head-up display cooling fan module)	Live Data
XE	2016-	GTDI 2.0L engine	CAV(Connect and view module)	ECU information
XE	2016-	GTDI 2.0L engine	CAV(Connect and view module)	Read fault codes
XE	2016-	GTDI 2.0L engine	CAV(Connect and view module)	Erase fault codes
XE	2016-	GTDI 2.0L engine	CAV(Connect and view module)	Live Data
XE	2016-	GTDI 2.0L engine	FCDIM(Front control/display interface module (high level display front))	ECU information
XE	2016-	GTDI 2.0L engine	FCDIM(Front control/display interface module (high level display front))	Read fault codes
XE	2016-	GTDI 2.0L engine	FCDIM(Front control/display interface module (high level display front))	Erase fault codes
XE	2016-	GTDI 2.0L engine	FCDIM(Front control/display interface module (high level display front))	Live Data
XE	2016-	GTDI 2.0L engine	FCIM(Integrated control panel)	ECU information
XE	2016-	GTDI 2.0L engine	FCIM(Integrated control panel)	Read fault codes
XE	2016-	GTDI 2.0L engine	FCIM(Integrated control panel)	Erase fault codes
XE	2016-	GTDI 2.0L engine	FCIM(Integrated control panel)	Live Data
XE	2016-	GTDI 2.0L engine	HUD(Head up display)	ECU information
XE	2016-	GTDI 2.0L engine	HUD(Head up display)	Read fault codes
XE	2016-	GTDI 2.0L engine	HUD(Head up display)	Erase fault codes
XE	2016-	GTDI 2.0L engine	HVAC(Heating ventilation and air conditioning control module)	ECU information
XE	2016-	GTDI 2.0L engine	HVAC(Heating ventilation and air conditioning control module)	Read fault codes
XE	2016-	GTDI 2.0L engine	HVAC(Heating ventilation and air conditioning control module)	Erase fault codes
XE	2016-	GTDI 2.0L engine	HVAC(Heating ventilation and air conditioning control module)	Live Data
XE	2016-	GTDI 2.0L engine	IPMB(Image processing module B)	ECU information
XE	2016-	GTDI 2.0L engine	IPMB(Image processing module B)	Read fault codes
XE	2016-	GTDI 2.0L engine	IPMB(Image processing module B)	Erase fault codes
XE	2016-	GTDI 2.0L engine	IPMB(Image processing module B)	Live Data
XE	2016-	GTDI 2.0L engine	NAV(Navigation control module)	ECU information
XE	2016-	GTDI 2.0L engine	NAV(Navigation control module)	Read fault codes
XE	2016-	GTDI 2.0L engine	NAV(Navigation control module)	Erase fault codes
XE	2016-	GTDI 2.0L engine	SODL(Side object detection control module - Left)	ECU information

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XE	2016-	GTDI 2.0L engine	SODL(Side object detection control module - Left)	Read fault codes
XE	2016-	GTDI 2.0L engine	SODL(Side object detection control module - Left)	Erase fault codes
XE	2016-	GTDI 2.0L engine	SODL(Side object detection control module - Left)	Live Data
XE	2016-	GTDI 2.0L engine	SODR(Side object detection control module - Right)	ECU information
XE	2016-	GTDI 2.0L engine	SODR(Side object detection control module - Right)	Read fault codes
XE	2016-	GTDI 2.0L engine	SODR(Side object detection control module - Right)	Erase fault codes
XE	2016-	GTDI 2.0L engine	SODR(Side object detection control module - Right)	Live Data
XE	2016-	GTDI 2.0L engine	AAM(Audio amplifier module)	ECU information
XE	2016-	GTDI 2.0L engine	AAM(Audio amplifier module)	Read fault codes
XE	2016-	GTDI 2.0L engine	AAM(Audio amplifier module)	Erase fault codes
XE	2016-	GTDI 2.0L engine	AAM(Audio amplifier module)	Live Data
XE	2016-	GTDI 2.0L engine	ACM(Audio front control module)	ECU information
XE	2016-	GTDI 2.0L engine	ACM(Audio front control module)	Read fault codes
XE	2016-	GTDI 2.0L engine	ACM(Audio front control module)	Erase fault codes
XE	2016-	GTDI 2.0L engine	ACM(Audio front control module)	Live Data
XE	2016-	GTDI 2.0L engine	DABM(Digital audio broadcast module)	ECU information
XE	2016-	GTDI 2.0L engine	DABM(Digital audio broadcast module)	Read fault codes
XE	2016-	GTDI 2.0L engine	DABM(Digital audio broadcast module)	Erase fault codes
XE	2016-	GTDI 2.0L engine	DABM(Digital audio broadcast module)	Live Data
XE	2016-	GTDI 2.0L engine	NCM(Navigation control module)	ECU information
XE	2016-	GTDI 2.0L engine	NCM(Navigation control module)	Read fault codes
XE	2016-	GTDI 2.0L engine	NCM(Navigation control module)	Erase fault codes
XE	2016-	GTDI 2.0L engine	NCM(Navigation control module)	Live Data
XE	2016-	GTDI 2.0L engine	SRM(Satellite audio unit module)	ECU information
XE	2016-	GTDI 2.0L engine	SRM(Satellite audio unit module)	Read fault codes
XE	2016-	GTDI 2.0L engine	SRM(Satellite audio unit module)	Erase fault codes
XE	2016-	GTDI 2.0L engine	SRM(Satellite audio unit module)	Live Data
XE	2016-	GTDI 2.0L engine	TVM(Television module)	ECU information
XE	2016-	GTDI 2.0L engine	TVM(Television module)	Read fault codes
XE	2016-	GTDI 2.0L engine	TVM(Television module)	Erase fault codes
XE	2016-	GTDI 2.0L engine	TVM(Television module)	Live Data
XE	2016-	GTDI 2.0L engine	Special Function	Service interval reset
XE	2016-	GTDI 2.0L engine	Special Function	Injector valve test
XE	2016-	GTDI 2.0L engine	Special Function	Throttle valve actuator
XE	2016-	GTDI 2.0L engine	Special Function	Throttle valve actuator replacement
XE	2016-	GTDI 2.0L engine	Special Function	Parking brake activation
XE	2016-	GTDI 2.0L engine	Special Function	Parking brake pad replacement - Exit maintenance mode application
XE	2016-	GTDI 2.0L engine	Special Function	Parking brake pad replacement - Release to service position
XE	2016-	GTDI 2.0L engine	Special Function	Apply and release electric park brake
XE	2016-	GTDI 2.0L engine	Special Function	Power steering soft-lock end stops reset routine
XE	2016-	GTDI 2.0L engine	Special Function	Lock steering tune to vehicle
XE	2016-	GTDI 2.0L engine	Special Function	Steering column calibration
XE	2016-	GTDI 2.0L engine	Special Function	Tire pressure monitor sensor identification display
XE	2016-	GTDI 2.0L engine	Special Function	Tire pressure sensor replacement
XE	2016-	GTDI 2.0L engine	Special Function	Diesel particulate filter differential pressure sensor replacement
XE	2016-	GTDI 2.0L engine	Special Function	Battery replacement
XE	2016-	GTDI 2.0L engine	Special Function	Telematics control module battery replacement reset
XE	2016-	GTDI 2.0L engine	Special Function	Seat cushion replacement
XE	2016-	GTDI 2.0L engine	Special Function	Driver's seat calibration
XE	2016-	GTDI 2.0L engine	Special Function	Door window calibration
XE	2016-	GTDI 2.0L engine	Special Function	Roof Blind calibration
XE	2016-	GTDI 2.0L engine	Special Function	Sunroof calibration
XE	2016-	GTDI 2.0L engine	Special Function	Tailgate/trunk calibration
XE	2016-	I4 Diesel 2.0L engine	PCM(Powertrain control module)	ECU information
XE	2016-	I4 Diesel 2.0L engine	PCM(Powertrain control module)	Read fault codes
XE	2016-	I4 Diesel 2.0L engine	PCM(Powertrain control module)	Erase fault codes
XE	2016-	I4 Diesel 2.0L engine	PCM(Powertrain control module)	Live Data
XE	2016-	I4 Diesel 2.0L engine	TCM(Transmission control module)	ECU information
XE	2016-	I4 Diesel 2.0L engine	TCM(Transmission control module)	Read fault codes
XE	2016-	I4 Diesel 2.0L engine	TCM(Transmission control module)	Erase fault codes
XE	2016-	I4 Diesel 2.0L engine	TCM(Transmission control module)	Live Data
XE	2016-	I4 Diesel 2.0L engine	ABS(ABS control module)	ECU information
XE	2016-	I4 Diesel 2.0L engine	ABS(ABS control module)	Read fault codes
XE	2016-	I4 Diesel 2.0L engine	ABS(ABS control module)	Erase fault codes
XE	2016-	I4 Diesel 2.0L engine	ABS(ABS control module)	Live Data
XE	2016-	I4 Diesel 2.0L engine	RCM(Restraints control module)	ECU information
XE	2016-	I4 Diesel 2.0L engine	RCM(Restraints control module)	Read fault codes
XE	2016-	I4 Diesel 2.0L engine	RCM(Restraints control module)	Erase fault codes
XE	2016-	I4 Diesel 2.0L engine	RCM(Restraints control module)	Live Data
XE	2016-	I4 Diesel 2.0L engine	IPC(Instrument cluster control module)	ECU information
XE	2016-	I4 Diesel 2.0L engine	IPC(Instrument cluster control module)	Read fault codes
XE	2016-	I4 Diesel 2.0L engine	IPC(Instrument cluster control module)	Erase fault codes
XE	2016-	I4 Diesel 2.0L engine	IPC(Instrument cluster control module)	Live Data
XE	2016-	I4 Diesel 2.0L engine	BCM(Body control module)	ECU information
XE	2016-	I4 Diesel 2.0L engine	BCM(Body control module)	Read fault codes
XE	2016-	I4 Diesel 2.0L engine	BCM(Body control module)	Erase fault codes
XE	2016-	I4 Diesel 2.0L engine	BCM(Body control module)	Live Data
XE	2016-	I4 Diesel 2.0L engine	CCM(Speed control module)	ECU information
XE	2016-	I4 Diesel 2.0L engine	CCM(Speed control module)	Read fault codes

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XE	2016-	I4 Diesel 2.0L engine	CCM(Speed control module)	Erase fault codes
XE	2016-	I4 Diesel 2.0L engine	CCM(Speed control module)	Live Data
XE	2016-	I4 Diesel 2.0L engine	GSM(Gear shift module)	ECU information
XE	2016-	I4 Diesel 2.0L engine	GSM(Gear shift module)	Read fault codes
XE	2016-	I4 Diesel 2.0L engine	GSM(Gear shift module)	Erase fault codes
XE	2016-	I4 Diesel 2.0L engine	GSM(Gear shift module)	Live Data
XE	2016-	I4 Diesel 2.0L engine	GWM(Gateway module)	ECU information
XE	2016-	I4 Diesel 2.0L engine	GWM(Gateway module)	Read fault codes
XE	2016-	I4 Diesel 2.0L engine	GWM(Gateway module)	Erase fault codes
XE	2016-	I4 Diesel 2.0L engine	GWM(Gateway module)	Live Data
XE	2016-	I4 Diesel 2.0L engine	OCS(Restraints occupant classification system module)	ECU information
XE	2016-	I4 Diesel 2.0L engine	OCS(Restraints occupant classification system module)	Read fault codes
XE	2016-	I4 Diesel 2.0L engine	OCS(Restraints occupant classification system module)	Erase fault codes
XE	2016-	I4 Diesel 2.0L engine	OCS(Restraints occupant classification system module)	Live Data
XE	2016-	I4 Diesel 2.0L engine	TCU(Telematic control unit module)	ECU information
XE	2016-	I4 Diesel 2.0L engine	TCU(Telematic control unit module)	Read fault codes
XE	2016-	I4 Diesel 2.0L engine	TCU(Telematic control unit module)	Erase fault codes
XE	2016-	I4 Diesel 2.0L engine	TCU(Telematic control unit module)	Live Data
XE	2016-	I4 Diesel 2.0L engine	TPM(Tire pressure monitor module)	ECU information
XE	2016-	I4 Diesel 2.0L engine	TPM(Tire pressure monitor module)	Read fault codes
XE	2016-	I4 Diesel 2.0L engine	TPM(Tire pressure monitor module)	Erase fault codes
XE	2016-	I4 Diesel 2.0L engine	TPM(Tire pressure monitor module)	Live Data
XE	2016-	I4 Diesel 2.0L engine	VIM(Vehicle immobilizer control module)	ECU information
XE	2016-	I4 Diesel 2.0L engine	VIM(Vehicle immobilizer control module)	Read fault codes
XE	2016-	I4 Diesel 2.0L engine	VIM(Vehicle immobilizer control module)	Erase fault codes
XE	2016-	I4 Diesel 2.0L engine	VIM(Vehicle immobilizer control module)	Live Data
XE	2016-	I4 Diesel 2.0L engine	ATCM(All terrain control module)	ECU information
XE	2016-	I4 Diesel 2.0L engine	ATCM(All terrain control module)	Read fault codes
XE	2016-	I4 Diesel 2.0L engine	ATCM(All terrain control module)	Erase fault codes
XE	2016-	I4 Diesel 2.0L engine	ATCM(All terrain control module)	Live Data
XE	2016-	I4 Diesel 2.0L engine	CHCM(Chassis control module)	ECU information
XE	2016-	I4 Diesel 2.0L engine	CHCM(Chassis control module)	Read fault codes
XE	2016-	I4 Diesel 2.0L engine	CHCM(Chassis control module)	Erase fault codes
XE	2016-	I4 Diesel 2.0L engine	CHCM(Chassis control module)	Live Data
XE	2016-	I4 Diesel 2.0L engine	IPMA(Image processing control module A)	ECU information
XE	2016-	I4 Diesel 2.0L engine	IPMA(Image processing control module A)	Read fault codes
XE	2016-	I4 Diesel 2.0L engine	IPMA(Image processing control module A)	Erase fault codes
XE	2016-	I4 Diesel 2.0L engine	IPMA(Image processing control module A)	Live Data
XE	2016-	I4 Diesel 2.0L engine	PAM(Parking assist control module)	ECU information
XE	2016-	I4 Diesel 2.0L engine	PAM(Parking assist control module)	Read fault codes
XE	2016-	I4 Diesel 2.0L engine	PAM(Parking assist control module)	Erase fault codes
XE	2016-	I4 Diesel 2.0L engine	PAM(Parking assist control module)	Live Data
XE	2016-	I4 Diesel 2.0L engine	PSCM(Power steering control module)	ECU information
XE	2016-	I4 Diesel 2.0L engine	PSCM(Power steering control module)	Read fault codes
XE	2016-	I4 Diesel 2.0L engine	PSCM(Power steering control module)	Erase fault codes
XE	2016-	I4 Diesel 2.0L engine	PSCM(Power steering control module)	Live Data
XE	2016-	I4 Diesel 2.0L engine	SASM(Steering angle sensor module)	ECU information
XE	2016-	I4 Diesel 2.0L engine	SASM(Steering angle sensor module)	Read fault codes
XE	2016-	I4 Diesel 2.0L engine	SASM(Steering angle sensor module)	Erase fault codes
XE	2016-	I4 Diesel 2.0L engine	SASM(Steering angle sensor module)	Live Data
XE	2016-	I4 Diesel 2.0L engine	DDM(Driver's door module)	ECU information
XE	2016-	I4 Diesel 2.0L engine	DDM(Driver's door module)	Read fault codes
XE	2016-	I4 Diesel 2.0L engine	DDM(Driver's door module)	Erase fault codes
XE	2016-	I4 Diesel 2.0L engine	DDM(Driver's door module)	Live Data
XE	2016-	I4 Diesel 2.0L engine	DRDM(Driver's (side) rear door module)	ECU information
XE	2016-	I4 Diesel 2.0L engine	DRDM(Driver's (side) rear door module)	Read fault codes
XE	2016-	I4 Diesel 2.0L engine	DRDM(Driver's (side) rear door module)	Erase fault codes
XE	2016-	I4 Diesel 2.0L engine	DRDM(Driver's (side) rear door module)	Live Data
XE	2016-	I4 Diesel 2.0L engine	DSM(Driver's seat module)	ECU information
XE	2016-	I4 Diesel 2.0L engine	DSM(Driver's seat module)	Read fault codes
XE	2016-	I4 Diesel 2.0L engine	DSM(Driver's seat module)	Erase fault codes
XE	2016-	I4 Diesel 2.0L engine	DSM(Driver's seat module)	Live Data
XE	2016-	I4 Diesel 2.0L engine	PDM(Passenger's door module)	ECU information
XE	2016-	I4 Diesel 2.0L engine	PDM(Passenger's door module)	Read fault codes
XE	2016-	I4 Diesel 2.0L engine	PDM(Passenger's door module)	Erase fault codes
XE	2016-	I4 Diesel 2.0L engine	PDM(Passenger's door module)	Live Data
XE	2016-	I4 Diesel 2.0L engine	PRDM(Passenger's (side) rear door module)	ECU information
XE	2016-	I4 Diesel 2.0L engine	PRDM(Passenger's (side) rear door module)	Read fault codes
XE	2016-	I4 Diesel 2.0L engine	PRDM(Passenger's (side) rear door module)	Erase fault codes
XE	2016-	I4 Diesel 2.0L engine	PRDM(Passenger's (side) rear door module)	Live Data
XE	2016-	I4 Diesel 2.0L engine	RFA(Keyless vehicle module)	ECU information
XE	2016-	I4 Diesel 2.0L engine	RFA(Keyless vehicle module)	Read fault codes
XE	2016-	I4 Diesel 2.0L engine	RFA(Keyless vehicle module)	Erase fault codes
XE	2016-	I4 Diesel 2.0L engine	RFA(Keyless vehicle module)	Live Data
XE	2016-	I4 Diesel 2.0L engine	RGTM(Rear gate / trunk module)	ECU information
XE	2016-	I4 Diesel 2.0L engine	RGTM(Rear gate / trunk module)	Read fault codes
XE	2016-	I4 Diesel 2.0L engine	RGTM(Rear gate / trunk module)	Erase fault codes
XE	2016-	I4 Diesel 2.0L engine	RGTM(Rear gate / trunk module)	Live Data
XE	2016-	I4 Diesel 2.0L engine	TBM(Deployable towbar control module)	ECU information
XE	2016-	I4 Diesel 2.0L engine	TBM(Deployable towbar control module)	Read fault codes
XE	2016-	I4 Diesel 2.0L engine	TBM(Deployable towbar control module)	Erase fault codes
XE	2016-	I4 Diesel 2.0L engine	TBM(Deployable towbar control module)	Live Data
XE	2016-	I4 Diesel 2.0L engine	AHU(InControl Touch audio head unit)	ECU information
XE	2016-	I4 Diesel 2.0L engine	AHU(InControl Touch audio head unit)	Read fault codes
XE	2016-	I4 Diesel 2.0L engine	AHU(InControl Touch audio head unit)	Erase fault codes
XE	2016-	I4 Diesel 2.0L engine	AUCM(Head-up display cooling fan module)	ECU information
XE	2016-	I4 Diesel 2.0L engine	AUCM(Head-up display cooling fan module)	Read fault codes
XE	2016-	I4 Diesel 2.0L engine	AUCM(Head-up display cooling fan module)	Erase fault codes

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XE	2016-	I4 Diesel 2.0L engine	AUCM(Head-up display cooling fan module)	Live Data
XE	2016-	I4 Diesel 2.0L engine	CAV(Connect and view module)	ECU information
XE	2016-	I4 Diesel 2.0L engine	CAV(Connect and view module)	Read fault codes
XE	2016-	I4 Diesel 2.0L engine	CAV(Connect and view module)	Erase fault codes
XE	2016-	I4 Diesel 2.0L engine	CAV(Connect and view module)	Live Data
XE	2016-	I4 Diesel 2.0L engine	FCDIM(Front control/display interface module (high level display front))	ECU information
XE	2016-	I4 Diesel 2.0L engine	FCDIM(Front control/display interface module (high level display front))	Read fault codes
XE	2016-	I4 Diesel 2.0L engine	FCDIM(Front control/display interface module (high level display front))	Erase fault codes
XE	2016-	I4 Diesel 2.0L engine	FCDIM(Front control/display interface module (high level display front))	Live Data
XE	2016-	I4 Diesel 2.0L engine	FCIM(Integrated control panel)	ECU information
XE	2016-	I4 Diesel 2.0L engine	FCIM(Integrated control panel)	Read fault codes
XE	2016-	I4 Diesel 2.0L engine	FCIM(Integrated control panel)	Erase fault codes
XE	2016-	I4 Diesel 2.0L engine	FCIM(Integrated control panel)	Live Data
XE	2016-	I4 Diesel 2.0L engine	HUD(Head up display)	ECU information
XE	2016-	I4 Diesel 2.0L engine	HUD(Head up display)	Read fault codes
XE	2016-	I4 Diesel 2.0L engine	HUD(Head up display)	Erase fault codes
XE	2016-	I4 Diesel 2.0L engine	HVAC(Heating ventilation and air conditioning control module)	ECU information
XE	2016-	I4 Diesel 2.0L engine	HVAC(Heating ventilation and air conditioning control module)	Read fault codes
XE	2016-	I4 Diesel 2.0L engine	HVAC(Heating ventilation and air conditioning control module)	Erase fault codes
XE	2016-	I4 Diesel 2.0L engine	HVAC(Heating ventilation and air conditioning control module)	Live Data
XE	2016-	I4 Diesel 2.0L engine	IPMB(Image processing module B)	ECU information
XE	2016-	I4 Diesel 2.0L engine	IPMB(Image processing module B)	Read fault codes
XE	2016-	I4 Diesel 2.0L engine	IPMB(Image processing module B)	Erase fault codes
XE	2016-	I4 Diesel 2.0L engine	IPMB(Image processing module B)	Live Data
XE	2016-	I4 Diesel 2.0L engine	NAV(Navigation control module)	ECU information
XE	2016-	I4 Diesel 2.0L engine	NAV(Navigation control module)	Read fault codes
XE	2016-	I4 Diesel 2.0L engine	NAV(Navigation control module)	Erase fault codes
XE	2016-	I4 Diesel 2.0L engine	SODL(Side object detection control module - Left)	ECU information
XE	2016-	I4 Diesel 2.0L engine	SODL(Side object detection control module - Left)	Read fault codes
XE	2016-	I4 Diesel 2.0L engine	SODL(Side object detection control module - Left)	Erase fault codes
XE	2016-	I4 Diesel 2.0L engine	SODL(Side object detection control module - Left)	Live Data
XE	2016-	I4 Diesel 2.0L engine	SODR(Side object detection control module - Right)	ECU information
XE	2016-	I4 Diesel 2.0L engine	SODR(Side object detection control module - Right)	Read fault codes
XE	2016-	I4 Diesel 2.0L engine	SODR(Side object detection control module - Right)	Erase fault codes
XE	2016-	I4 Diesel 2.0L engine	SODR(Side object detection control module - Right)	Live Data
XE	2016-	I4 Diesel 2.0L engine	AAM(Audio amplifier module)	ECU information
XE	2016-	I4 Diesel 2.0L engine	AAM(Audio amplifier module)	Read fault codes
XE	2016-	I4 Diesel 2.0L engine	AAM(Audio amplifier module)	Erase fault codes
XE	2016-	I4 Diesel 2.0L engine	AAM(Audio amplifier module)	Live Data
XE	2016-	I4 Diesel 2.0L engine	ACM(Audio front control module)	ECU information
XE	2016-	I4 Diesel 2.0L engine	ACM(Audio front control module)	Read fault codes
XE	2016-	I4 Diesel 2.0L engine	ACM(Audio front control module)	Erase fault codes
XE	2016-	I4 Diesel 2.0L engine	ACM(Audio front control module)	Live Data
XE	2016-	I4 Diesel 2.0L engine	DABM(Digital audio broadcast module)	ECU information
XE	2016-	I4 Diesel 2.0L engine	DABM(Digital audio broadcast module)	Read fault codes
XE	2016-	I4 Diesel 2.0L engine	DABM(Digital audio broadcast module)	Erase fault codes
XE	2016-	I4 Diesel 2.0L engine	DABM(Digital audio broadcast module)	Live Data
XE	2016-	I4 Diesel 2.0L engine	NCM(Navigation control module)	ECU information
XE	2016-	I4 Diesel 2.0L engine	NCM(Navigation control module)	Read fault codes
XE	2016-	I4 Diesel 2.0L engine	NCM(Navigation control module)	Erase fault codes
XE	2016-	I4 Diesel 2.0L engine	NCM(Navigation control module)	Live Data
XE	2016-	I4 Diesel 2.0L engine	SRM(Satellite audio unit module)	ECU information
XE	2016-	I4 Diesel 2.0L engine	SRM(Satellite audio unit module)	Read fault codes
XE	2016-	I4 Diesel 2.0L engine	SRM(Satellite audio unit module)	Erase fault codes
XE	2016-	I4 Diesel 2.0L engine	SRM(Satellite audio unit module)	Live Data
XE	2016-	I4 Diesel 2.0L engine	TVM(Television module)	ECU information
XE	2016-	I4 Diesel 2.0L engine	TVM(Television module)	Read fault codes
XE	2016-	I4 Diesel 2.0L engine	TVM(Television module)	Erase fault codes
XE	2016-	I4 Diesel 2.0L engine	TVM(Television module)	Live Data
XE	2016-	I4 Diesel 2.0L engine	Special Function	Service interval reset
XE	2016-	I4 Diesel 2.0L engine	Special Function	Oil change reset
XE	2016-	I4 Diesel 2.0L engine	Special Function	Parking brake activation
XE	2016-	I4 Diesel 2.0L engine	Special Function	Parking brake pad replacement - Exit maintenance mode application
XE	2016-	I4 Diesel 2.0L engine	Special Function	Parking brake pad replacement - Release to service position
XE	2016-	I4 Diesel 2.0L engine	Special Function	Apply and release electric park brake
XE	2016-	I4 Diesel 2.0L engine	Special Function	Power steering soft-lock end stops reset routine
XE	2016-	I4 Diesel 2.0L engine	Special Function	Lock steering tune to vehicle
XE	2016-	I4 Diesel 2.0L engine	Special Function	Steering column calibration
XE	2016-	I4 Diesel 2.0L engine	Special Function	Tire pressure monitor sensor identification display
XE	2016-	I4 Diesel 2.0L engine	Special Function	Tire pressure sensor replacement
XE	2016-	I4 Diesel 2.0L engine	Special Function	Diesel particulate filter differential pressure sensor replacement



## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XE	2016-	I4 Diesel 2.0L engine	Special Function	Diesel particulate filter dynamic regeneration
XE	2016-	I4 Diesel 2.0L engine	Special Function	Diesel particulate filter replacement
XE	2016-	I4 Diesel 2.0L engine	Special Function	Battery replacement
XE	2016-	I4 Diesel 2.0L engine	Special Function	Telematics control module battery replacement reset
XE	2016-	I4 Diesel 2.0L engine	Special Function	Seat cushion replacement
XE	2016-	I4 Diesel 2.0L engine	Special Function	Driver's seat calibration
XE	2016-	I4 Diesel 2.0L engine	Special Function	Door window calibration
XE	2016-	I4 Diesel 2.0L engine	Special Function	Roof Blind calibration
XE	2016-	I4 Diesel 2.0L engine	Special Function	Sunroof calibration
XE	2016-	I4 Diesel 2.0L engine	Special Function	Tailgate/trunk calibration
XE	2016-	Supercharged V6 3.0L engine	PCM(Powertrain control module)	ECU information
XE	2016-	Supercharged V6 3.0L engine	PCM(Powertrain control module)	Read fault codes
XE	2016-	Supercharged V6 3.0L engine	PCM(Powertrain control module)	Erase fault codes
XE	2016-	Supercharged V6 3.0L engine	PCM(Powertrain control module)	Live Data
XE	2016-	Supercharged V6 3.0L engine	TCM(Transmission control module)	ECU information
XE	2016-	Supercharged V6 3.0L engine	TCM(Transmission control module)	Read fault codes
XE	2016-	Supercharged V6 3.0L engine	TCM(Transmission control module)	Erase fault codes
XE	2016-	Supercharged V6 3.0L engine	TCM(Transmission control module)	Live Data
XE	2016-	Supercharged V6 3.0L engine	ABS(ABS control module)	ECU information
XE	2016-	Supercharged V6 3.0L engine	ABS(ABS control module)	Read fault codes
XE	2016-	Supercharged V6 3.0L engine	ABS(ABS control module)	Erase fault codes
XE	2016-	Supercharged V6 3.0L engine	ABS(ABS control module)	Live Data
XE	2016-	Supercharged V6 3.0L engine	RCM(Restraints control module)	ECU information
XE	2016-	Supercharged V6 3.0L engine	RCM(Restraints control module)	Read fault codes
XE	2016-	Supercharged V6 3.0L engine	RCM(Restraints control module)	Erase fault codes
XE	2016-	Supercharged V6 3.0L engine	RCM(Restraints control module)	Live Data
XE	2016-	Supercharged V6 3.0L engine	IPC(Instrument cluster control module)	ECU information
XE	2016-	Supercharged V6 3.0L engine	IPC(Instrument cluster control module)	Read fault codes
XE	2016-	Supercharged V6 3.0L engine	IPC(Instrument cluster control module)	Erase fault codes
XE	2016-	Supercharged V6 3.0L engine	IPC(Instrument cluster control module)	Live Data
XE	2016-	Supercharged V6 3.0L engine	BCM(Body control module)	ECU information
XE	2016-	Supercharged V6 3.0L engine	BCM(Body control module)	Read fault codes
XE	2016-	Supercharged V6 3.0L engine	BCM(Body control module)	Erase fault codes
XE	2016-	Supercharged V6 3.0L engine	BCM(Body control module)	Live Data
XE	2016-	Supercharged V6 3.0L engine	CCM(Speed control module)	ECU information
XE	2016-	Supercharged V6 3.0L engine	CCM(Speed control module)	Read fault codes
XE	2016-	Supercharged V6 3.0L engine	CCM(Speed control module)	Erase fault codes
XE	2016-	Supercharged V6 3.0L engine	CCM(Speed control module)	Live Data
XE	2016-	Supercharged V6 3.0L engine	GSM(Gear shift module)	ECU information
XE	2016-	Supercharged V6 3.0L engine	GSM(Gear shift module)	Read fault codes
XE	2016-	Supercharged V6 3.0L engine	GSM(Gear shift module)	Erase fault codes
XE	2016-	Supercharged V6 3.0L engine	GSM(Gear shift module)	Live Data
XE	2016-	Supercharged V6 3.0L engine	GWM(Gateway module)	ECU information
XE	2016-	Supercharged V6 3.0L engine	GWM(Gateway module)	Read fault codes
XE	2016-	Supercharged V6 3.0L engine	GWM(Gateway module)	Erase fault codes
XE	2016-	Supercharged V6 3.0L engine	GWM(Gateway module)	Live Data
XE	2016-	Supercharged V6 3.0L engine	OCS(Restraints occupant classification system module)	ECU information
XE	2016-	Supercharged V6 3.0L engine	OCS(Restraints occupant classification system module)	Read fault codes
XE	2016-	Supercharged V6 3.0L engine	OCS(Restraints occupant classification system module)	Erase fault codes
XE	2016-	Supercharged V6 3.0L engine	OCS(Restraints occupant classification system module)	Live Data
XE	2016-	Supercharged V6 3.0L engine	TCU(Telematic control unit module)	ECU information
XE	2016-	Supercharged V6 3.0L engine	TCU(Telematic control unit module)	Read fault codes
XE	2016-	Supercharged V6 3.0L engine	TCU(Telematic control unit module)	Erase fault codes
XE	2016-	Supercharged V6 3.0L engine	TCU(Telematic control unit module)	Live Data
XE	2016-	Supercharged V6 3.0L engine	TPM(Tire pressure monitor module)	ECU information
XE	2016-	Supercharged V6 3.0L engine	TPM(Tire pressure monitor module)	Read fault codes
XE	2016-	Supercharged V6 3.0L engine	TPM(Tire pressure monitor module)	Erase fault codes
XE	2016-	Supercharged V6 3.0L engine	TPM(Tire pressure monitor module)	Live Data
XE	2016-	Supercharged V6 3.0L engine	VIM(Vehicle immobilizer control module)	ECU information
XE	2016-	Supercharged V6 3.0L engine	VIM(Vehicle immobilizer control module)	Read fault codes
XE	2016-	Supercharged V6 3.0L engine	VIM(Vehicle immobilizer control module)	Erase fault codes
XE	2016-	Supercharged V6 3.0L engine	VIM(Vehicle immobilizer control module)	Live Data
XE	2016-	Supercharged V6 3.0L engine	ATCM(All terrain control module)	ECU information
XE	2016-	Supercharged V6 3.0L engine	ATCM(All terrain control module)	Read fault codes
XE	2016-	Supercharged V6 3.0L engine	ATCM(All terrain control module)	Erase fault codes
XE	2016-	Supercharged V6 3.0L engine	ATCM(All terrain control module)	Live Data
XE	2016-	Supercharged V6 3.0L engine	CHCM(Chassis control module)	ECU information
XE	2016-	Supercharged V6 3.0L engine	CHCM(Chassis control module)	Read fault codes
XE	2016-	Supercharged V6 3.0L engine	CHCM(Chassis control module)	Erase fault codes
XE	2016-	Supercharged V6 3.0L engine	CHCM(Chassis control module)	Live Data
XE	2016-	Supercharged V6 3.0L engine	IPMA(Image processing control module A)	ECU information
XE	2016-	Supercharged V6 3.0L engine	IPMA(Image processing control module A)	Read fault codes
XE	2016-	Supercharged V6 3.0L engine	IPMA(Image processing control module A)	Erase fault codes
XE	2016-	Supercharged V6 3.0L engine	IPMA(Image processing control module A)	Live Data
XE	2016-	Supercharged V6 3.0L engine	PAM(Parking assist control module)	ECU information
XE	2016-	Supercharged V6 3.0L engine	PAM(Parking assist control module)	Read fault codes
XE	2016-	Supercharged V6 3.0L engine	PAM(Parking assist control module)	Erase fault codes
XE	2016-	Supercharged V6 3.0L engine	PAM(Parking assist control module)	Live Data
XE	2016-	Supercharged V6 3.0L engine	PSCM(Power steering control module)	ECU information
XE	2016-	Supercharged V6 3.0L engine	PSCM(Power steering control module)	Read fault codes
XE	2016-	Supercharged V6 3.0L engine	PSCM(Power steering control module)	Erase fault codes
XE	2016-	Supercharged V6 3.0L engine	PSCM(Power steering control module)	Live Data
XE	2016-	Supercharged V6 3.0L engine	SASM(Steering angle sensor module)	ECU information
XE	2016-	Supercharged V6 3.0L engine	SASM(Steering angle sensor module)	Read fault codes
XE	2016-	Supercharged V6 3.0L engine	SASM(Steering angle sensor module)	Erase fault codes
XE	2016-	Supercharged V6 3.0L engine	SASM(Steering angle sensor module)	Live Data

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XE	2016-	Supercharged V6 3.0L engine	DDM(Driver's door module)	ECU information
XE	2016-	Supercharged V6 3.0L engine	DDM(Driver's door module)	Read fault codes
XE	2016-	Supercharged V6 3.0L engine	DDM(Driver's door module)	Erase fault codes
XE	2016-	Supercharged V6 3.0L engine	DDM(Driver's door module)	Live Data
XE	2016-	Supercharged V6 3.0L engine	DRDM(Driver's (side) rear door module)	ECU information
XE	2016-	Supercharged V6 3.0L engine	DRDM(Driver's (side) rear door module)	Read fault codes
XE	2016-	Supercharged V6 3.0L engine	DRDM(Driver's (side) rear door module)	Erase fault codes
XE	2016-	Supercharged V6 3.0L engine	DRDM(Driver's (side) rear door module)	Live Data
XE	2016-	Supercharged V6 3.0L engine	DSM(Driver's seat module)	ECU information
XE	2016-	Supercharged V6 3.0L engine	DSM(Driver's seat module)	Read fault codes
XE	2016-	Supercharged V6 3.0L engine	DSM(Driver's seat module)	Erase fault codes
XE	2016-	Supercharged V6 3.0L engine	DSM(Driver's seat module)	Live Data
XE	2016-	Supercharged V6 3.0L engine	PDM(Passenger's door module)	ECU information
XE	2016-	Supercharged V6 3.0L engine	PDM(Passenger's door module)	Read fault codes
XE	2016-	Supercharged V6 3.0L engine	PDM(Passenger's door module)	Erase fault codes
XE	2016-	Supercharged V6 3.0L engine	PDM(Passenger's door module)	Live Data
XE	2016-	Supercharged V6 3.0L engine	PRDM(Passenger's (side) rear door module)	ECU information
XE	2016-	Supercharged V6 3.0L engine	PRDM(Passenger's (side) rear door module)	Read fault codes
XE	2016-	Supercharged V6 3.0L engine	PRDM(Passenger's (side) rear door module)	Erase fault codes
XE	2016-	Supercharged V6 3.0L engine	PRDM(Passenger's (side) rear door module)	Live Data
XE	2016-	Supercharged V6 3.0L engine	RFA(Keyless vehicle module)	ECU information
XE	2016-	Supercharged V6 3.0L engine	RFA(Keyless vehicle module)	Read fault codes
XE	2016-	Supercharged V6 3.0L engine	RFA(Keyless vehicle module)	Erase fault codes
XE	2016-	Supercharged V6 3.0L engine	RFA(Keyless vehicle module)	Live Data
XE	2016-	Supercharged V6 3.0L engine	RGTM(Rear gate / trunk module)	ECU information
XE	2016-	Supercharged V6 3.0L engine	RGTM(Rear gate / trunk module)	Read fault codes
XE	2016-	Supercharged V6 3.0L engine	RGTM(Rear gate / trunk module)	Erase fault codes
XE	2016-	Supercharged V6 3.0L engine	RGTM(Rear gate / trunk module)	Live Data
XE	2016-	Supercharged V6 3.0L engine	TBM(Deployable towbar control module)	ECU information
XE	2016-	Supercharged V6 3.0L engine	TBM(Deployable towbar control module)	Read fault codes
XE	2016-	Supercharged V6 3.0L engine	TBM(Deployable towbar control module)	Erase fault codes
XE	2016-	Supercharged V6 3.0L engine	TBM(Deployable towbar control module)	Live Data
XE	2016-	Supercharged V6 3.0L engine	AHU(InControl Touch audio head unit)	ECU information
XE	2016-	Supercharged V6 3.0L engine	AHU(InControl Touch audio head unit)	Read fault codes
XE	2016-	Supercharged V6 3.0L engine	AHU(InControl Touch audio head unit)	Erase fault codes
XE	2016-	Supercharged V6 3.0L engine	AUCM(Head-up display cooling fan module)	ECU information
XE	2016-	Supercharged V6 3.0L engine	AUCM(Head-up display cooling fan module)	Read fault codes
XE	2016-	Supercharged V6 3.0L engine	AUCM(Head-up display cooling fan module)	Erase fault codes
XE	2016-	Supercharged V6 3.0L engine	AUCM(Head-up display cooling fan module)	Live Data
XE	2016-	Supercharged V6 3.0L engine	CAV(Connect and view module)	ECU information
XE	2016-	Supercharged V6 3.0L engine	CAV(Connect and view module)	Read fault codes
XE	2016-	Supercharged V6 3.0L engine	CAV(Connect and view module)	Erase fault codes
XE	2016-	Supercharged V6 3.0L engine	CAV(Connect and view module)	Live Data
XE	2016-	Supercharged V6 3.0L engine	FCDIM(Front control/display interface module (high level display front))	ECU information
XE	2016-	Supercharged V6 3.0L engine	FCDIM(Front control/display interface module (high level display front))	Read fault codes
XE	2016-	Supercharged V6 3.0L engine	FCDIM(Front control/display interface module (high level display front))	Erase fault codes
XE	2016-	Supercharged V6 3.0L engine	FCDIM(Front control/display interface module (high level display front))	Live Data
XE	2016-	Supercharged V6 3.0L engine	FCIM(Integrated control panel)	ECU information
XE	2016-	Supercharged V6 3.0L engine	FCIM(Integrated control panel)	Read fault codes
XE	2016-	Supercharged V6 3.0L engine	FCIM(Integrated control panel)	Erase fault codes
XE	2016-	Supercharged V6 3.0L engine	FCIM(Integrated control panel)	Live Data
XE	2016-	Supercharged V6 3.0L engine	HUD(Head up display)	ECU information
XE	2016-	Supercharged V6 3.0L engine	HUD(Head up display)	Read fault codes
XE	2016-	Supercharged V6 3.0L engine	HUD(Head up display)	Erase fault codes
XE	2016-	Supercharged V6 3.0L engine	HVAC(Heating ventilation and air conditioning control module)	ECU information
XE	2016-	Supercharged V6 3.0L engine	HVAC(Heating ventilation and air conditioning control module)	Read fault codes
XE	2016-	Supercharged V6 3.0L engine	HVAC(Heating ventilation and air conditioning control module)	Erase fault codes
XE	2016-	Supercharged V6 3.0L engine	HVAC(Heating ventilation and air conditioning control module)	Live Data
XE	2016-	Supercharged V6 3.0L engine	IPMB(Image processing module B)	ECU information
XE	2016-	Supercharged V6 3.0L engine	IPMB(Image processing module B)	Read fault codes
XE	2016-	Supercharged V6 3.0L engine	IPMB(Image processing module B)	Erase fault codes
XE	2016-	Supercharged V6 3.0L engine	IPMB(Image processing module B)	Live Data
XE	2016-	Supercharged V6 3.0L engine	NAV(Navigation control module)	ECU information
XE	2016-	Supercharged V6 3.0L engine	NAV(Navigation control module)	Read fault codes
XE	2016-	Supercharged V6 3.0L engine	NAV(Navigation control module)	Erase fault codes
XE	2016-	Supercharged V6 3.0L engine	SODL(Side object detection control module - Left)	ECU information
XE	2016-	Supercharged V6 3.0L engine	SODL(Side object detection control module - Left)	Read fault codes
XE	2016-	Supercharged V6 3.0L engine	SODL(Side object detection control module - Left)	Erase fault codes
XE	2016-	Supercharged V6 3.0L engine	SODL(Side object detection control module - Left)	Live Data
XE	2016-	Supercharged V6 3.0L engine	SODR(Side object detection control module - Right)	ECU information
XE	2016-	Supercharged V6 3.0L engine	SODR(Side object detection control module - Right)	Read fault codes
XE	2016-	Supercharged V6 3.0L engine	SODR(Side object detection control module - Right)	Erase fault codes
XE	2016-	Supercharged V6 3.0L engine	SODR(Side object detection control module - Right)	Live Data
XE	2016-	Supercharged V6 3.0L engine	AAM(Audio amplifier module)	ECU information
XE	2016-	Supercharged V6 3.0L engine	AAM(Audio amplifier module)	Read fault codes
XE	2016-	Supercharged V6 3.0L engine	AAM(Audio amplifier module)	Erase fault codes

## Diagnostic List Jaguar v5.72

Vehicle	Year	Engine	System	Function menu
XE	2016-	Supercharged V6 3.0L engine	AAM(Audio amplifier module)	Live Data
XE	2016-	Supercharged V6 3.0L engine	ACM(Audio front control module)	ECU information
XE	2016-	Supercharged V6 3.0L engine	ACM(Audio front control module)	Read fault codes
XE	2016-	Supercharged V6 3.0L engine	ACM(Audio front control module)	Erase fault codes
XE	2016-	Supercharged V6 3.0L engine	ACM(Audio front control module)	Live Data
XE	2016-	Supercharged V6 3.0L engine	DABM(Digital audio broadcast module)	ECU information
XE	2016-	Supercharged V6 3.0L engine	DABM(Digital audio broadcast module)	Read fault codes
XE	2016-	Supercharged V6 3.0L engine	DABM(Digital audio broadcast module)	Erase fault codes
XE	2016-	Supercharged V6 3.0L engine	DABM(Digital audio broadcast module)	Live Data
XE	2016-	Supercharged V6 3.0L engine	NCM(Navigation control module)	ECU information
XE	2016-	Supercharged V6 3.0L engine	NCM(Navigation control module)	Read fault codes
XE	2016-	Supercharged V6 3.0L engine	NCM(Navigation control module)	Erase fault codes
XE	2016-	Supercharged V6 3.0L engine	NCM(Navigation control module)	Live Data
XE	2016-	Supercharged V6 3.0L engine	SRM(Satellite audio unit module)	ECU information
XE	2016-	Supercharged V6 3.0L engine	SRM(Satellite audio unit module)	Read fault codes
XE	2016-	Supercharged V6 3.0L engine	SRM(Satellite audio unit module)	Erase fault codes
XE	2016-	Supercharged V6 3.0L engine	SRM(Satellite audio unit module)	Live Data
XE	2016-	Supercharged V6 3.0L engine	TVM(Television module)	ECU information
XE	2016-	Supercharged V6 3.0L engine	TVM(Television module)	Read fault codes
XE	2016-	Supercharged V6 3.0L engine	TVM(Television module)	Erase fault codes
XE	2016-	Supercharged V6 3.0L engine	TVM(Television module)	Live Data
XE	2016-	Supercharged V6 3.0L engine	Special Function	Oil service counter reset
XE	2016-	Supercharged V6 3.0L engine	Special Function	Service interval reset
XE	2016-	Supercharged V6 3.0L engine	Special Function	Throttle valve actuator
XE	2016-	Supercharged V6 3.0L engine	Special Function	Throttle valve actuator replacement
XE	2016-	Supercharged V6 3.0L engine	Special Function	Idle speed test
XE	2016-	Supercharged V6 3.0L engine	Special Function	Injector valve test
XE	2016-	Supercharged V6 3.0L engine	Special Function	Parking brake activation
XE	2016-	Supercharged V6 3.0L engine	Special Function	Parking brake pad replacement - Exit maintenance mode application
XE	2016-	Supercharged V6 3.0L engine	Special Function	Parking brake pad replacement - Release to service position
XE	2016-	Supercharged V6 3.0L engine	Special Function	Apply and release electric park brake
XE	2016-	Supercharged V6 3.0L engine	Special Function	Power steering soft-lock end stops reset routine
XE	2016-	Supercharged V6 3.0L engine	Special Function	Lock steering tune to vehicle
XE	2016-	Supercharged V6 3.0L engine	Special Function	Steering column calibration
XE	2016-	Supercharged V6 3.0L engine	Special Function	Tire pressure monitor sensor identification display
XE	2016-	Supercharged V6 3.0L engine	Special Function	Tire pressure sensor replacement
XE	2016-	Supercharged V6 3.0L engine	Special Function	Diesel particulate filter differential pressure sensor replacement
XE	2016-	Supercharged V6 3.0L engine	Special Function	Seat cushion replacement
XE	2016-	Supercharged V6 3.0L engine	Special Function	Driver's seat calibration
XE	2016-	Supercharged V6 3.0L engine	Special Function	Door window calibration
XE	2016-	Supercharged V6 3.0L engine	Special Function	Roof Blind calibration
XE	2016-	Supercharged V6 3.0L engine	Special Function	Sunroof calibration
XE	2016-	Supercharged V6 3.0L engine	Special Function	Tailgate/trunk calibration
XE	2016-	Supercharged V6 3.0L engine	Special Function	Battery replacement
XE	2016-	Supercharged V6 3.0L engine	Special Function	Telematics control module battery replacement reset