Diagnostic List Perkins_v5.04

Remark:

- 1. $\sqrt{}$: means that the system has this function
- 2. -: means that the system does not have this function
- 3. compared with the last version, the new added function is marked in red color.

	Model	System	Function					
			Read ECU Information	Read fault codes	Erase fault codes	Live data	Actuation Test	Remarks (Other functions)
]	Perkins	Engine	√	√	\checkmark	√	I	=